









ASSEMBLY INSTRUCTION

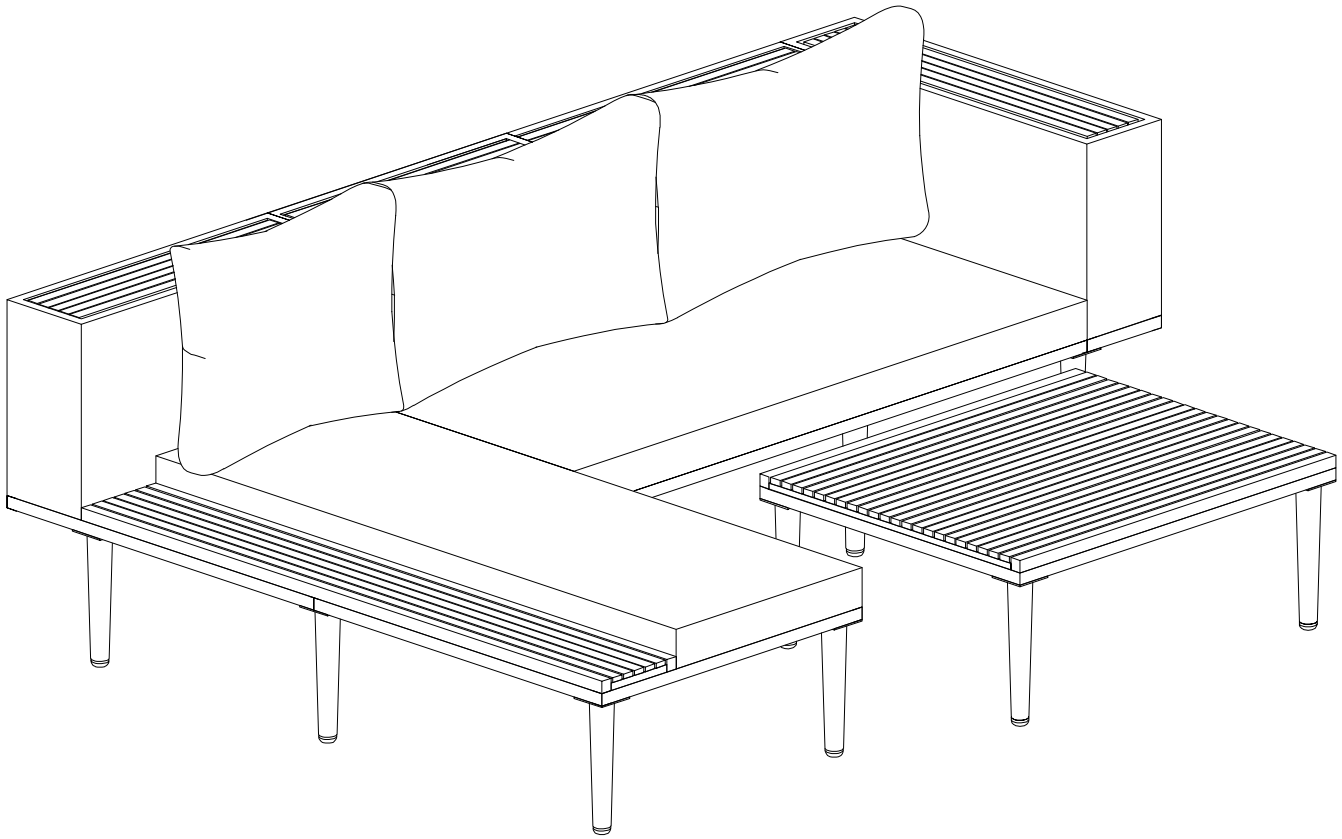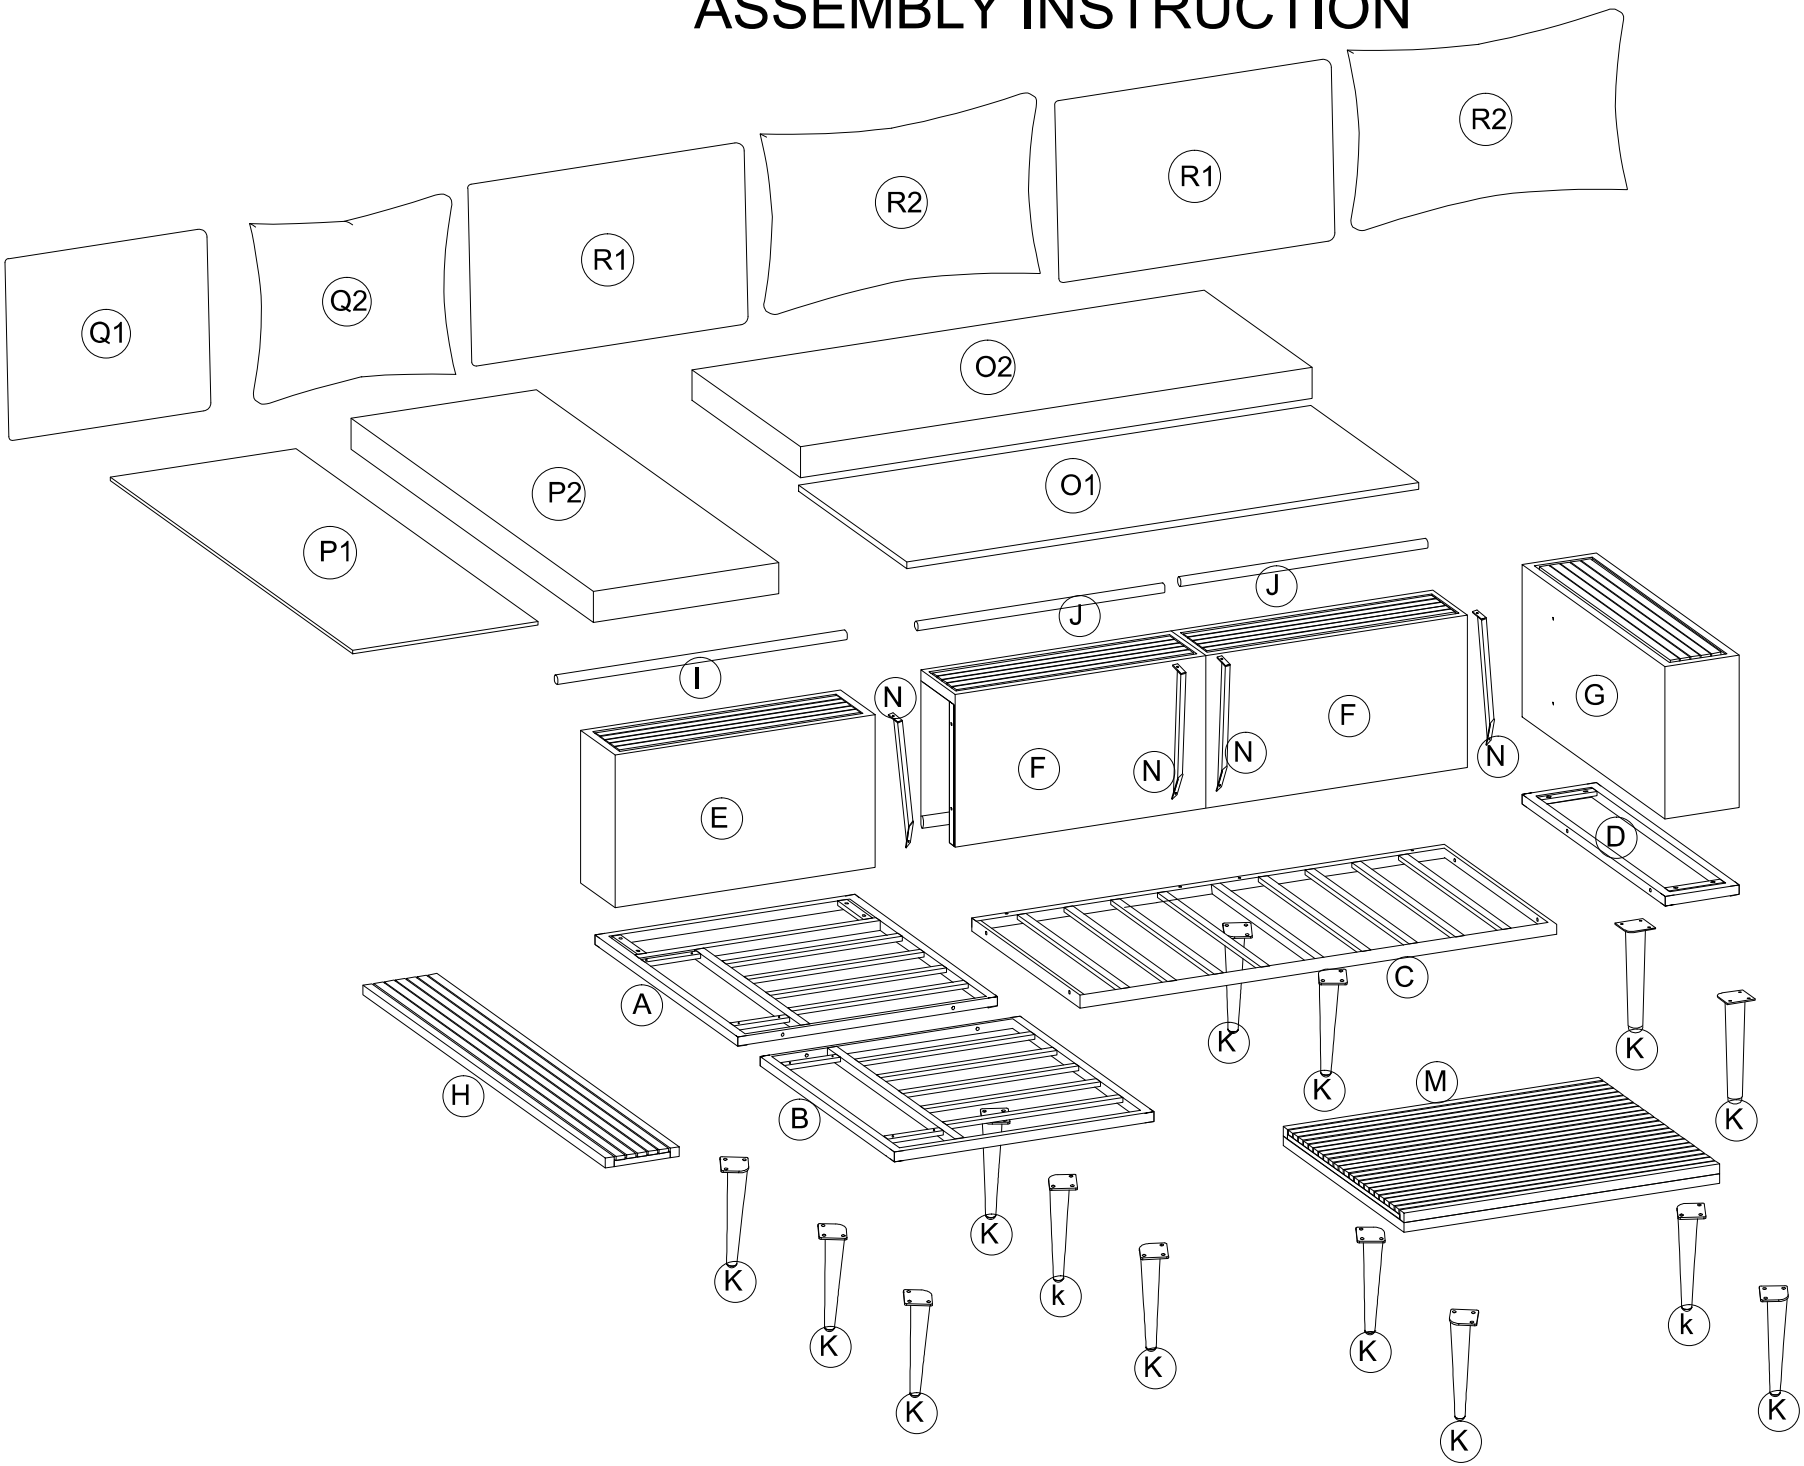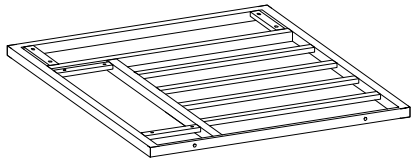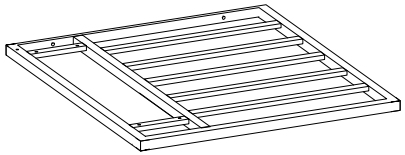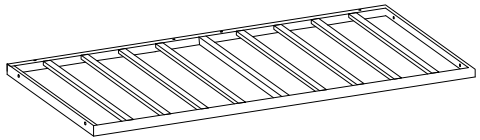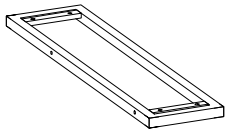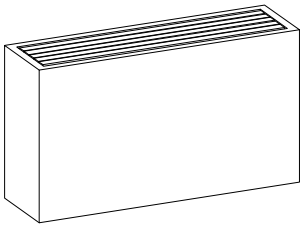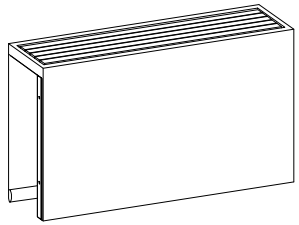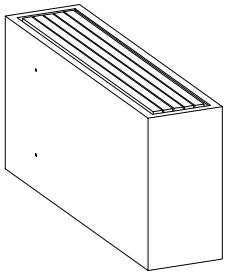










ASSEMBLY INSTRUCTION

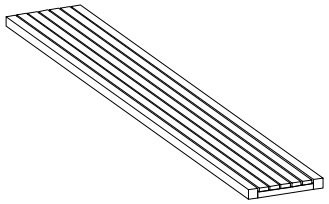







Part List & Hardware

A  Chair frame - 1 pc	B  Chair frame - 1 pc	C  Bench frame - 1 pc
D  Armrest frame - 1 pc	E  Short backrest - 1 pc	F  Backrest of the sofa - 2pcs
G  Armrest of the couch - 1 pc	H  Bench table top - 1 pc	I  Short fabric tension bar - 1 pc


Part List & Hardware

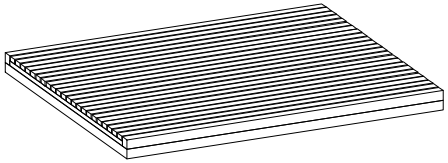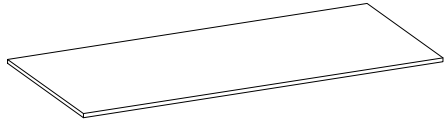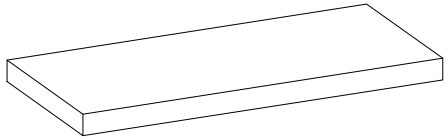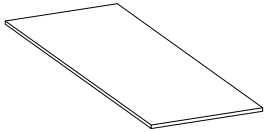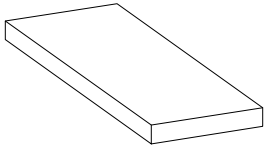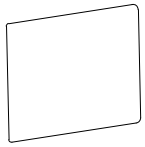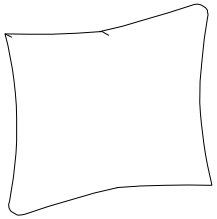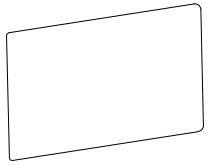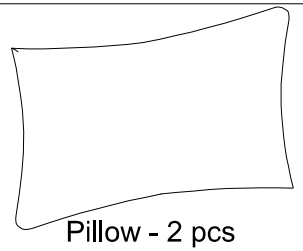J  Long backrest fabric tension bar - 2pcs	N  Back support - 4 pcs	K  legs - 14 pcs
M  Table top - 1 pc	O1  the left cushion cover of the bench。 - 1 pc	O2  the left cushion of the bench。 - 1 pc
P1  Outer cloth cover for the right cushion of the bench - 1 pc	P2  the right cushion of the bench。 - 1 pc	Q1  Pillow Outer Cloth Cover - 1 pc
Q2  pillow- 1 pc	R1  Pillow Outer Cloth Cover - 2 pcs	R2  Pillow - 2 pcs


Part List & Hardware

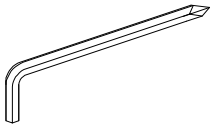①  M6 x 15 Hex-Head bolts 50+2 pcs	②  M6 x 25 Hex-Head bolts 8+1 pcs	③  M6 x 35 Hex-Head bolts 14+1 pcs
④  M6 x 40 Hex-Head bolts 2+1 pcs	⑤  Ø14*6.5 ironwasher34+2PCS	⑥  Nut 2+1 pcs
⑦  open wrench 1 PC	⑧  Allen key 1 pc	⑨  6 x 35 screw 8+1 pcs


1:CARTON CONTENT

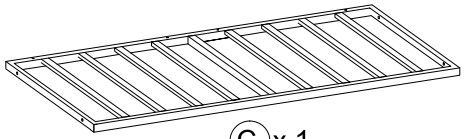


C x 1

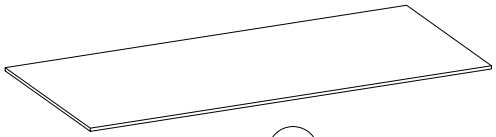

O1 x 1

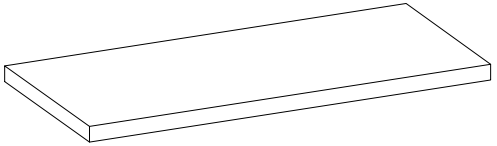

O2 x 1



K x 4




N x 4




J x 2




I x 1

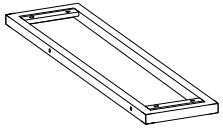


D x 1

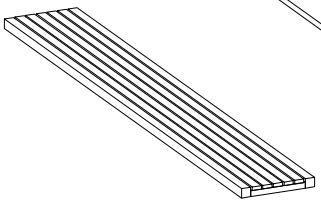

H x 1

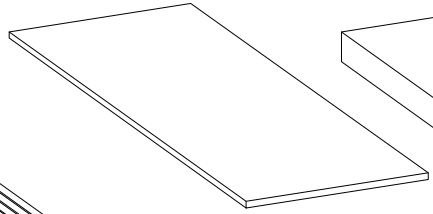


P1 x 1

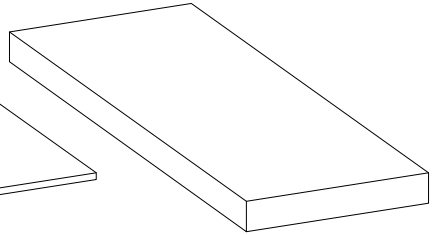


P2 x 1


2:CARTON CONTENT

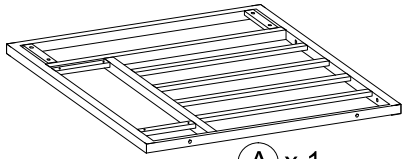

A x 1

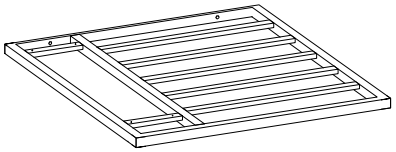


B x 1

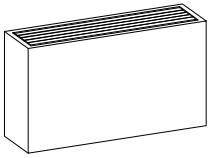


E x 1




K x 10

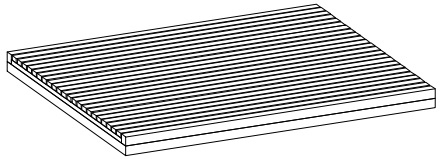


M x 1

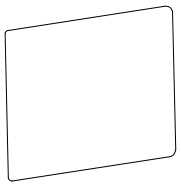


Q1 x 1

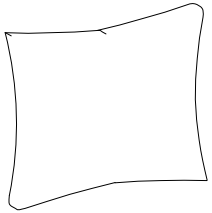


Q2 x 1

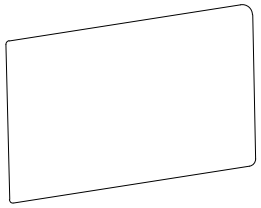


R1 x 2

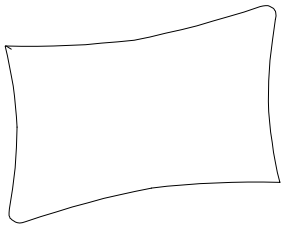

R2 x 2

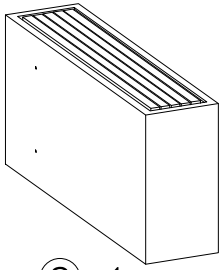


G x 1

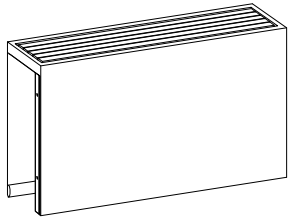


F x 2

06 / 18


Step: 1 Following below illustration

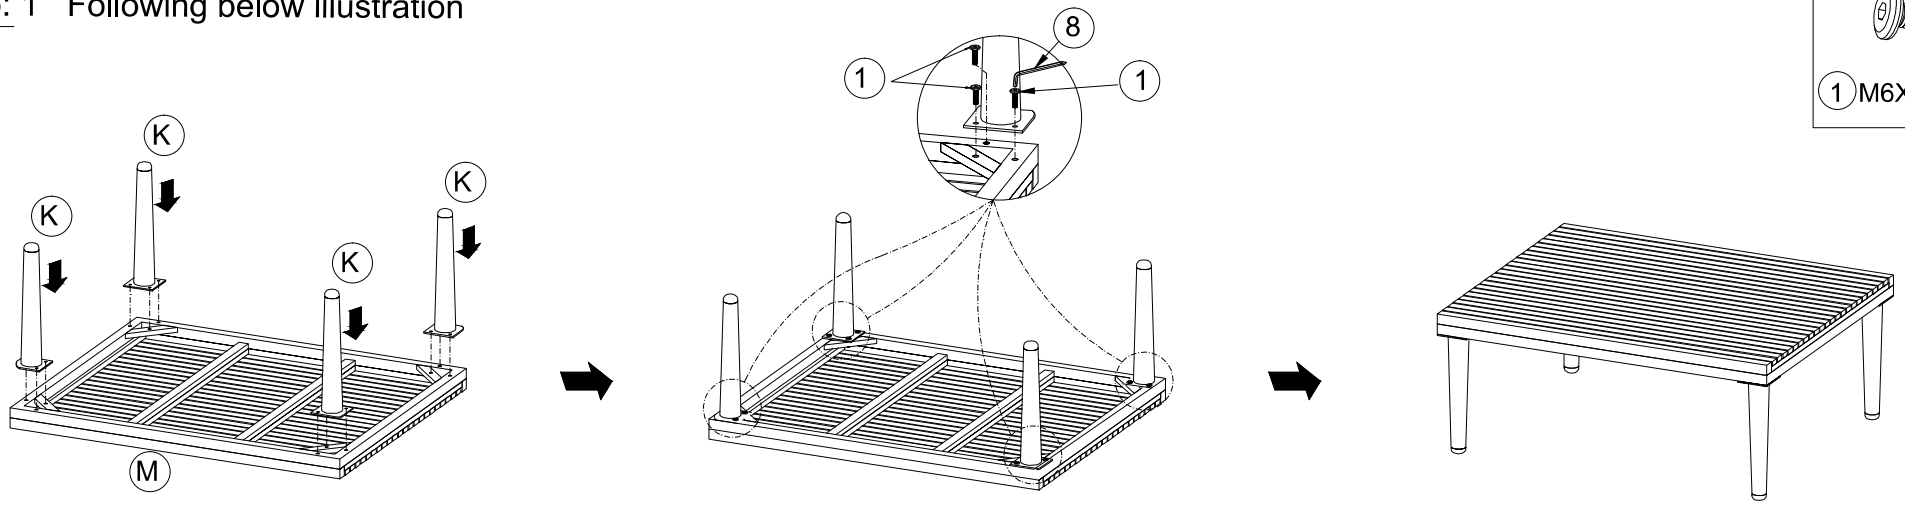



1 M6X15X12PCS

Step: 2 Following below illustration

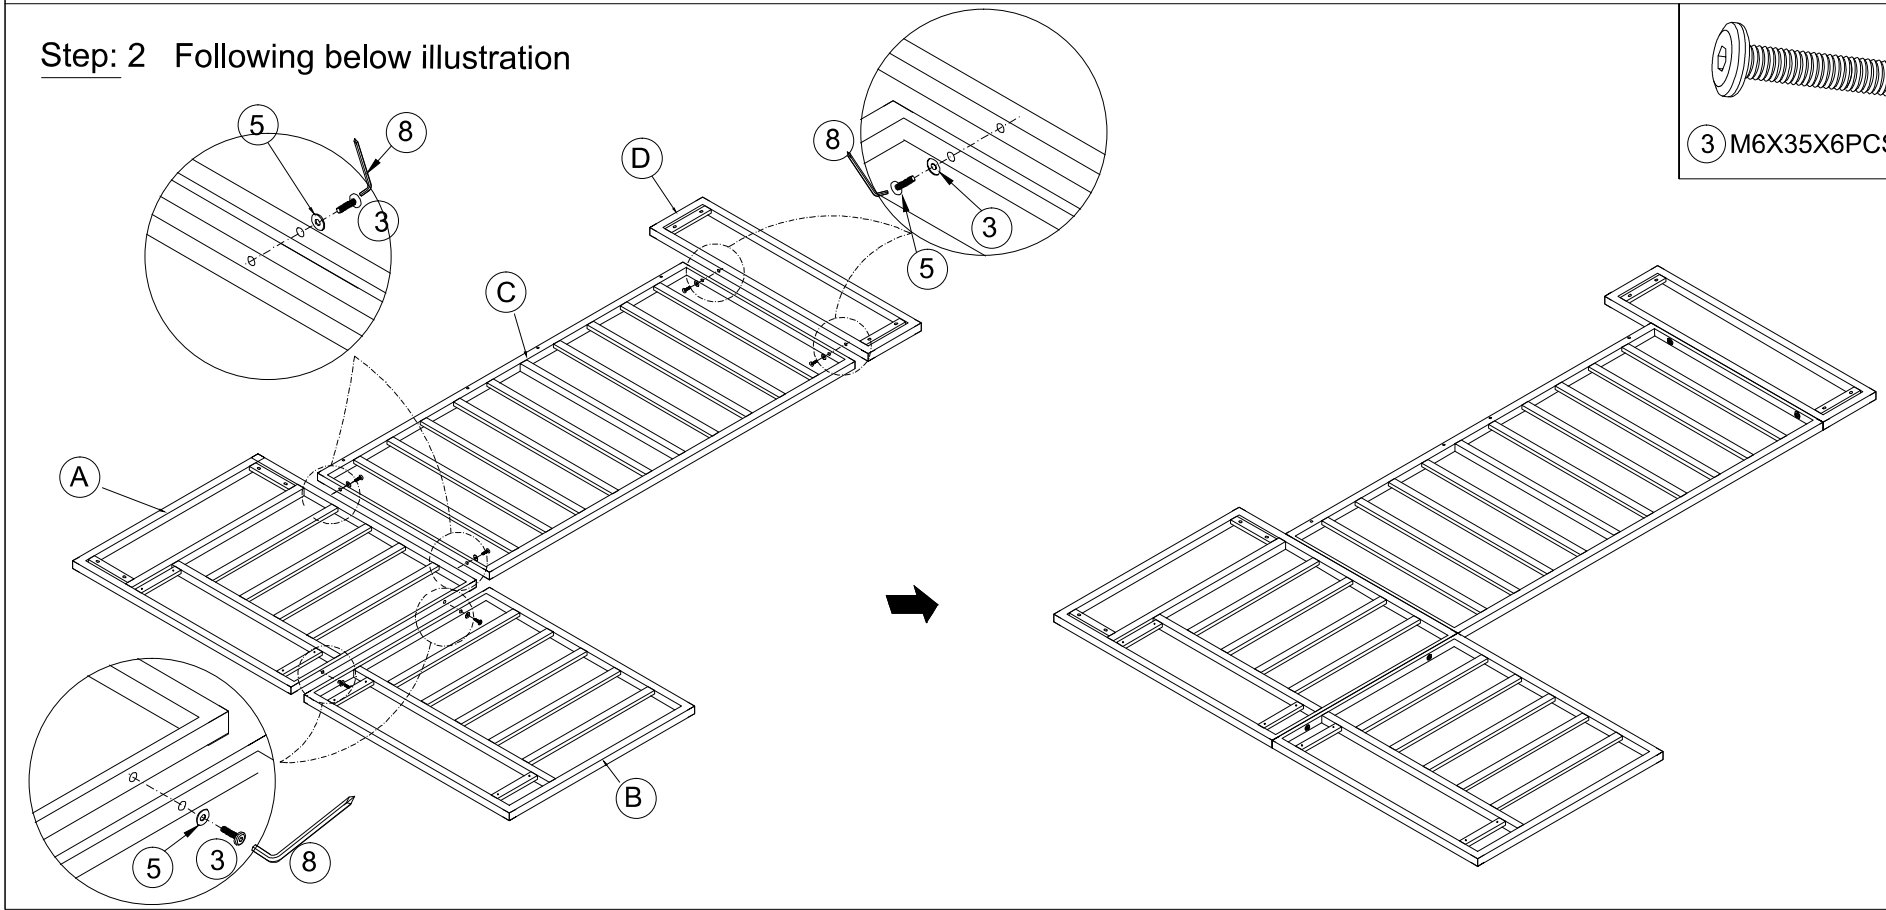

3 M6X35X6PCS




5 x 6 pcs


07 / 18

Step: 3 Following below illustration




(1) M6 X 15 X 30 PCS

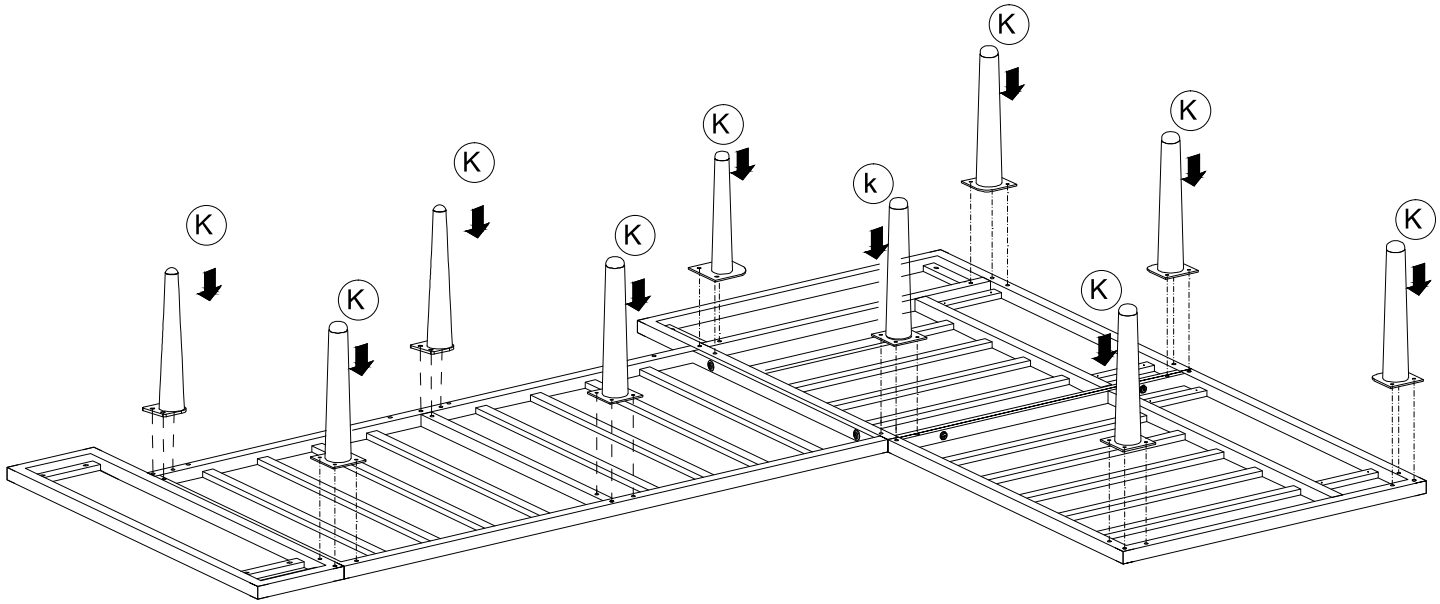

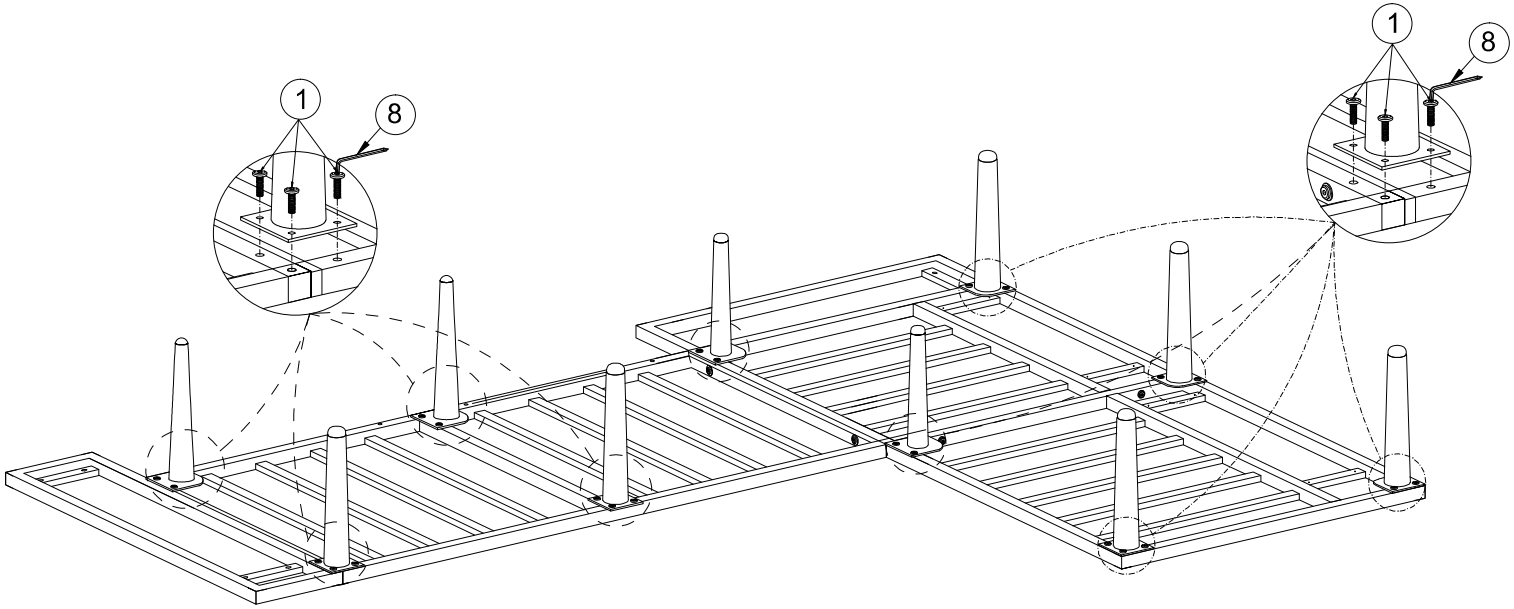


Step: 4 Following below illustration

① M6X15X8PCS	④ M6X40X2PCS	⑤ x 12 pcs	⑥ x 2 pcs

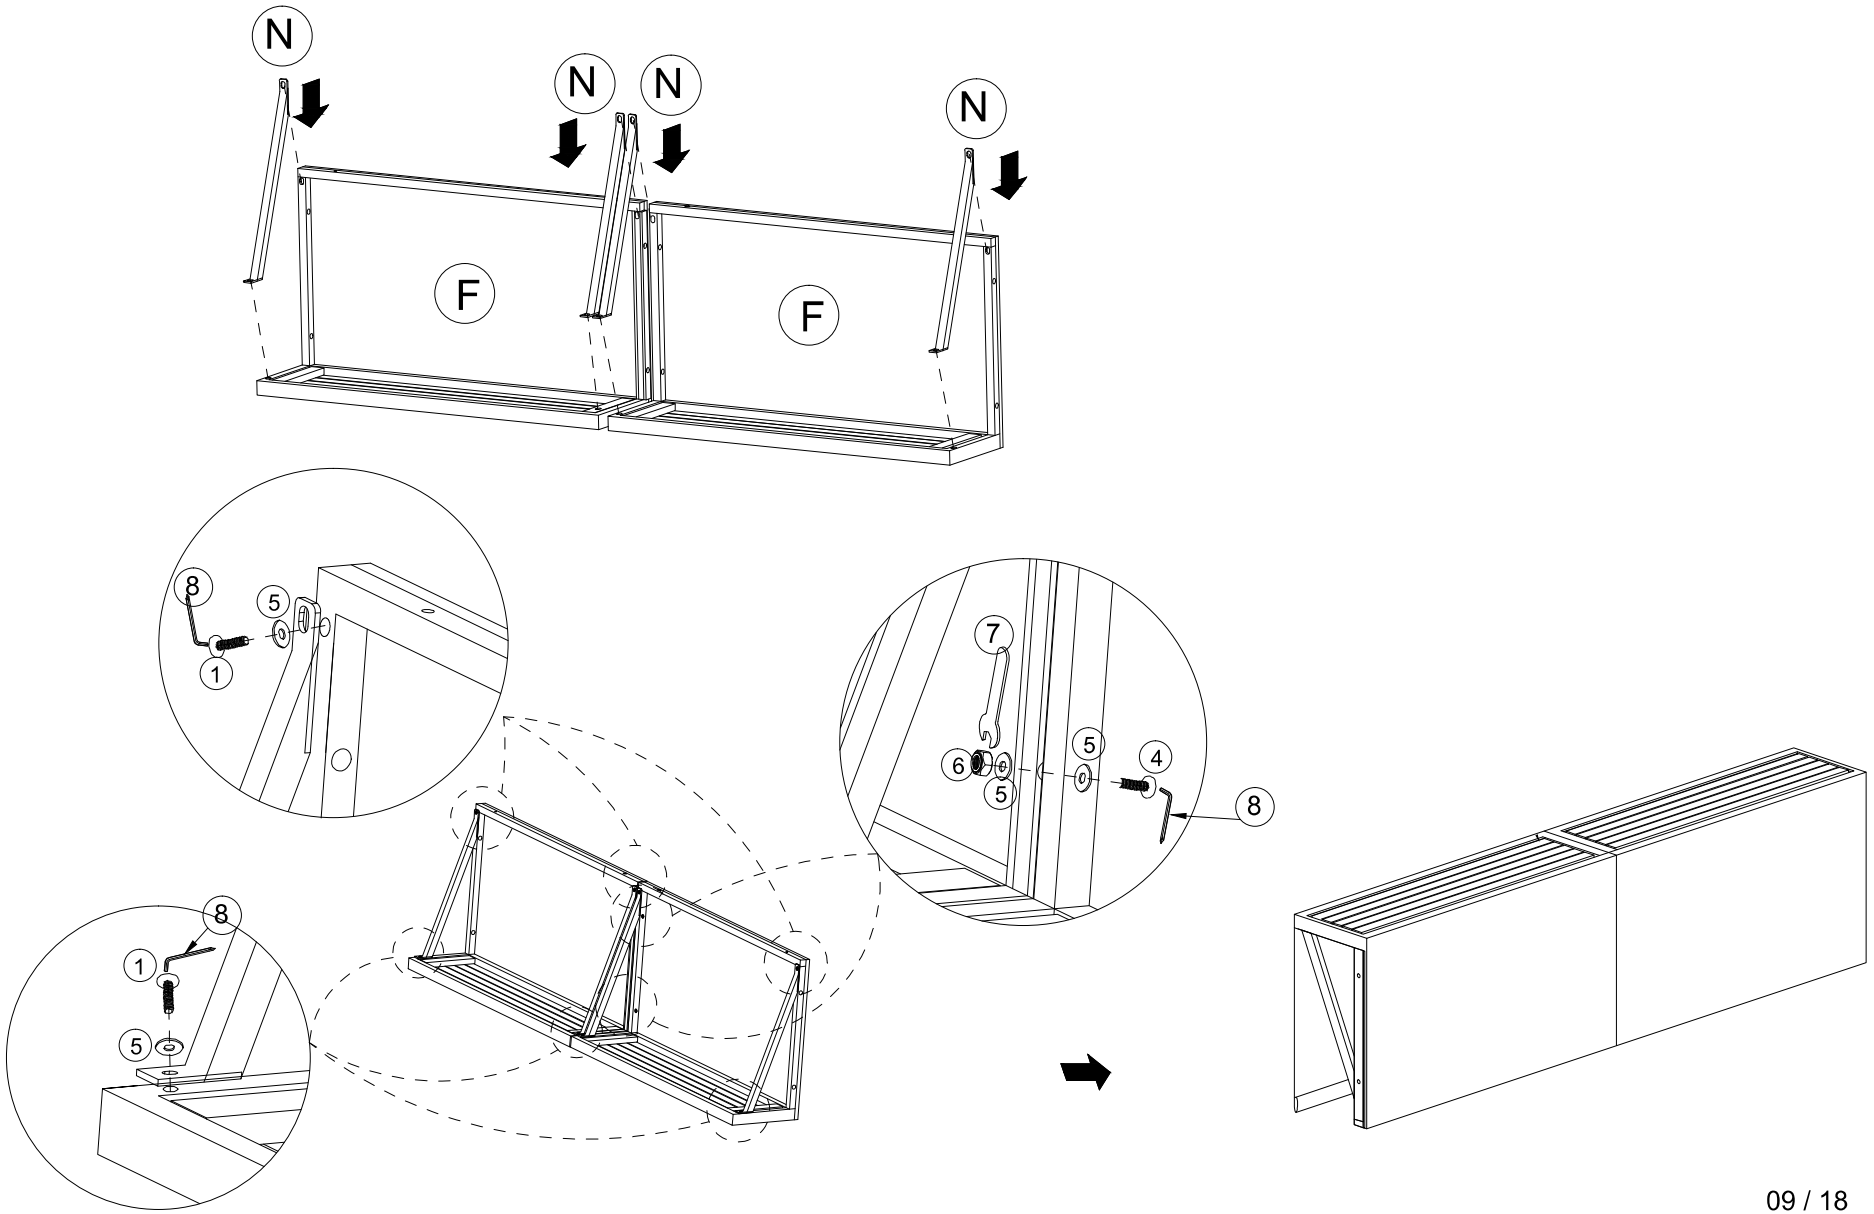


Step: 5 Following below illustration

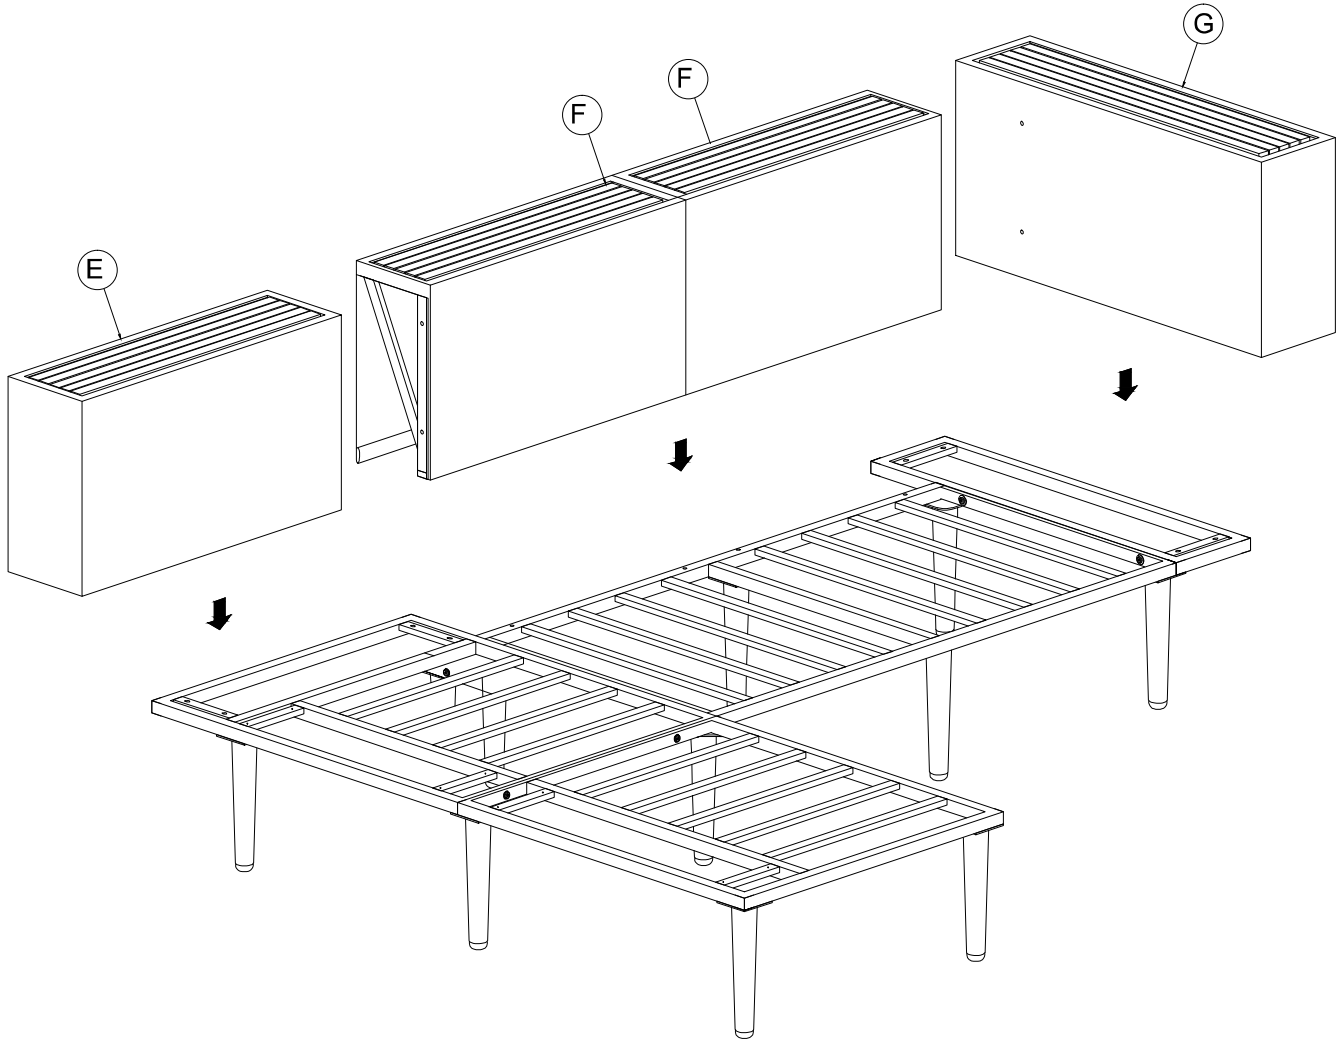

Step: 6 Following below illustration

		
② M6X25X8PCS	③ M6X35X4PCS	⑤ x 12 pcs

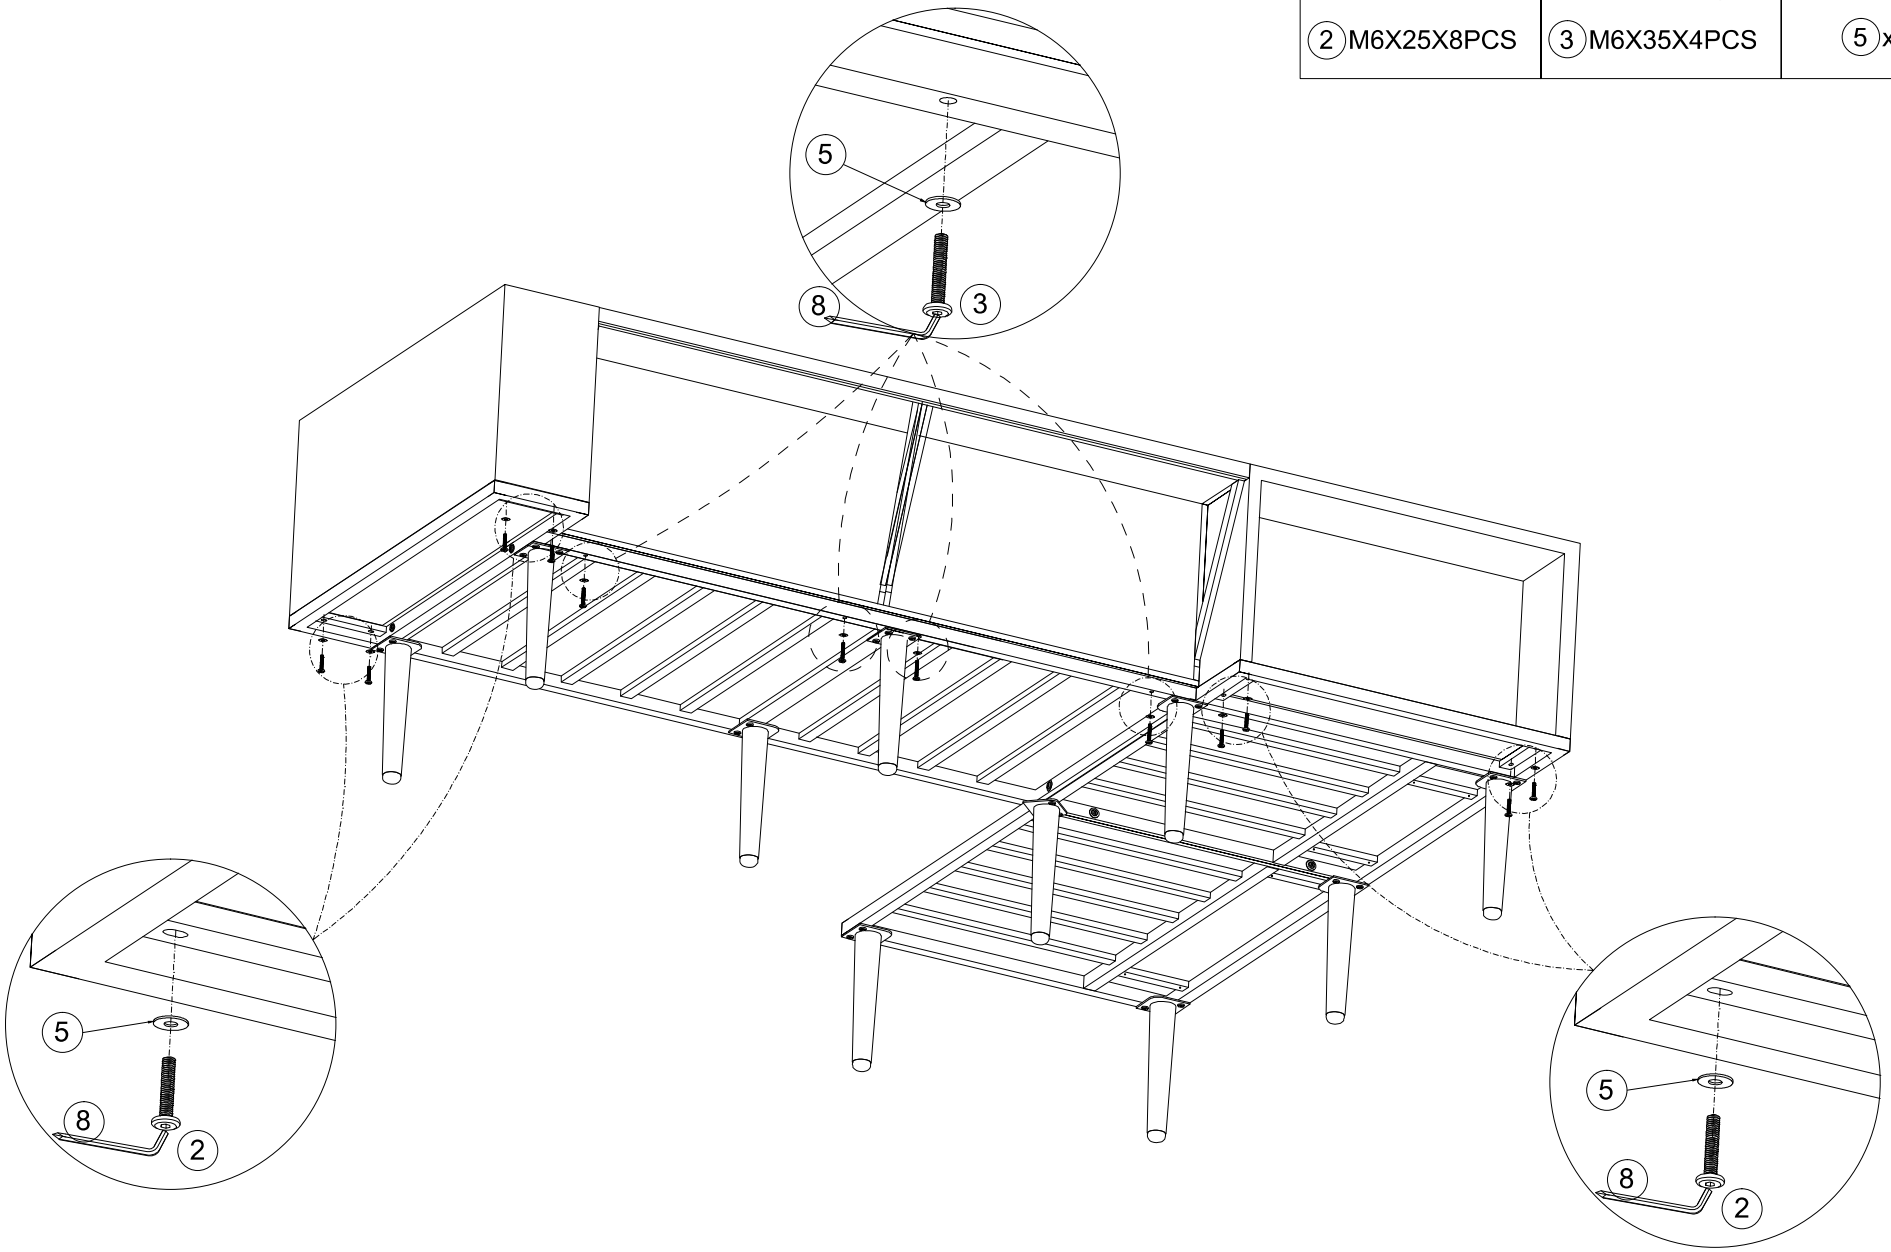


Step: 6 Following below illustration



③ M6X35X4PCS




⑤ x 4 pcs

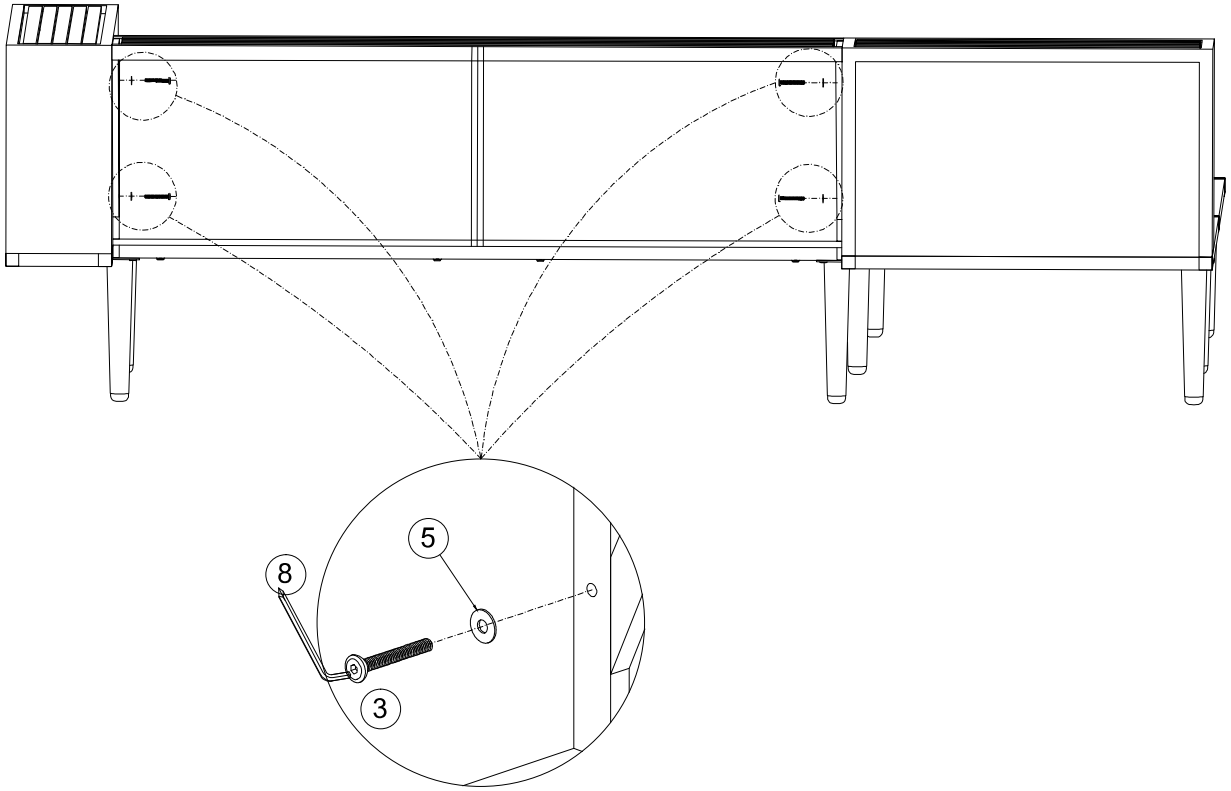


Step: 7 Following below illustration




9 x 8 pcs

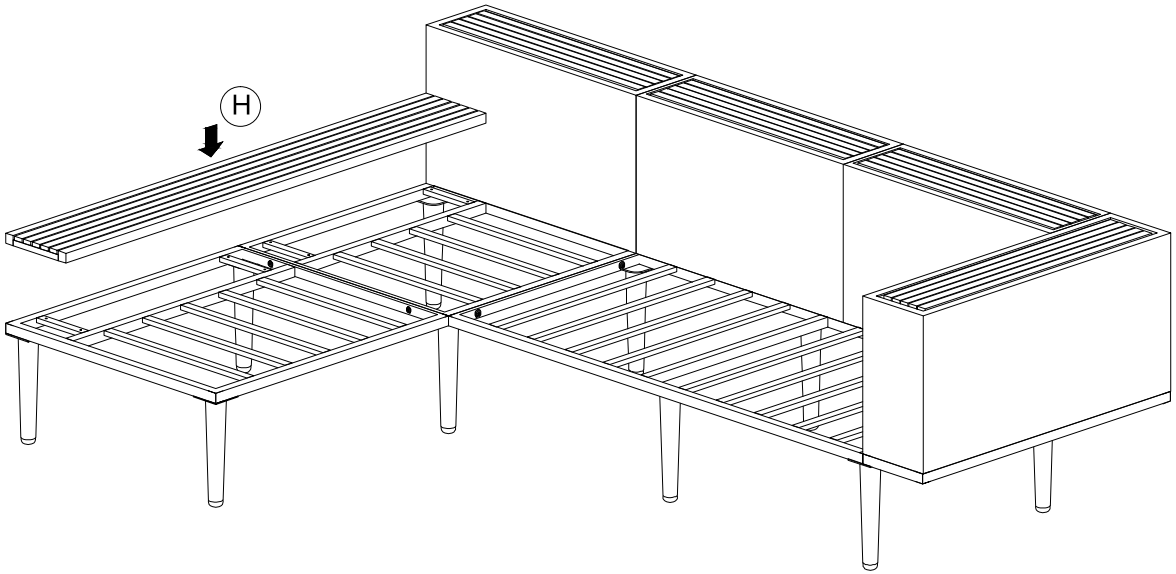


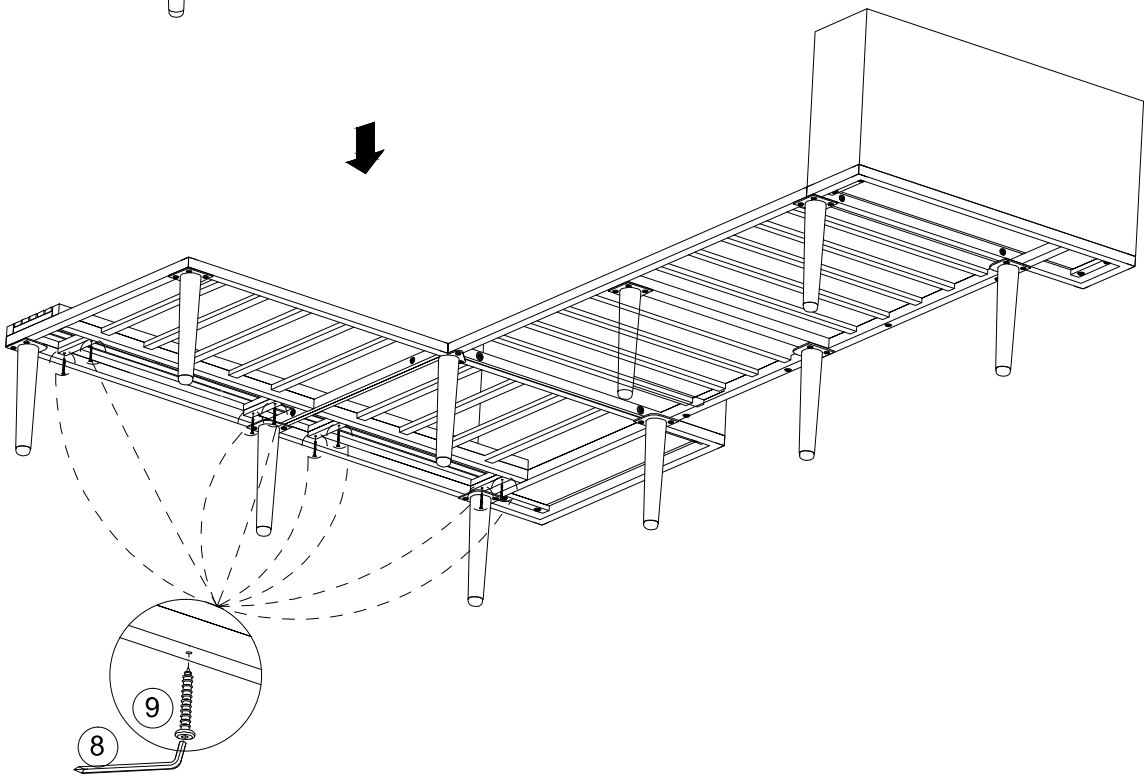


Step: 8 Following below illustration

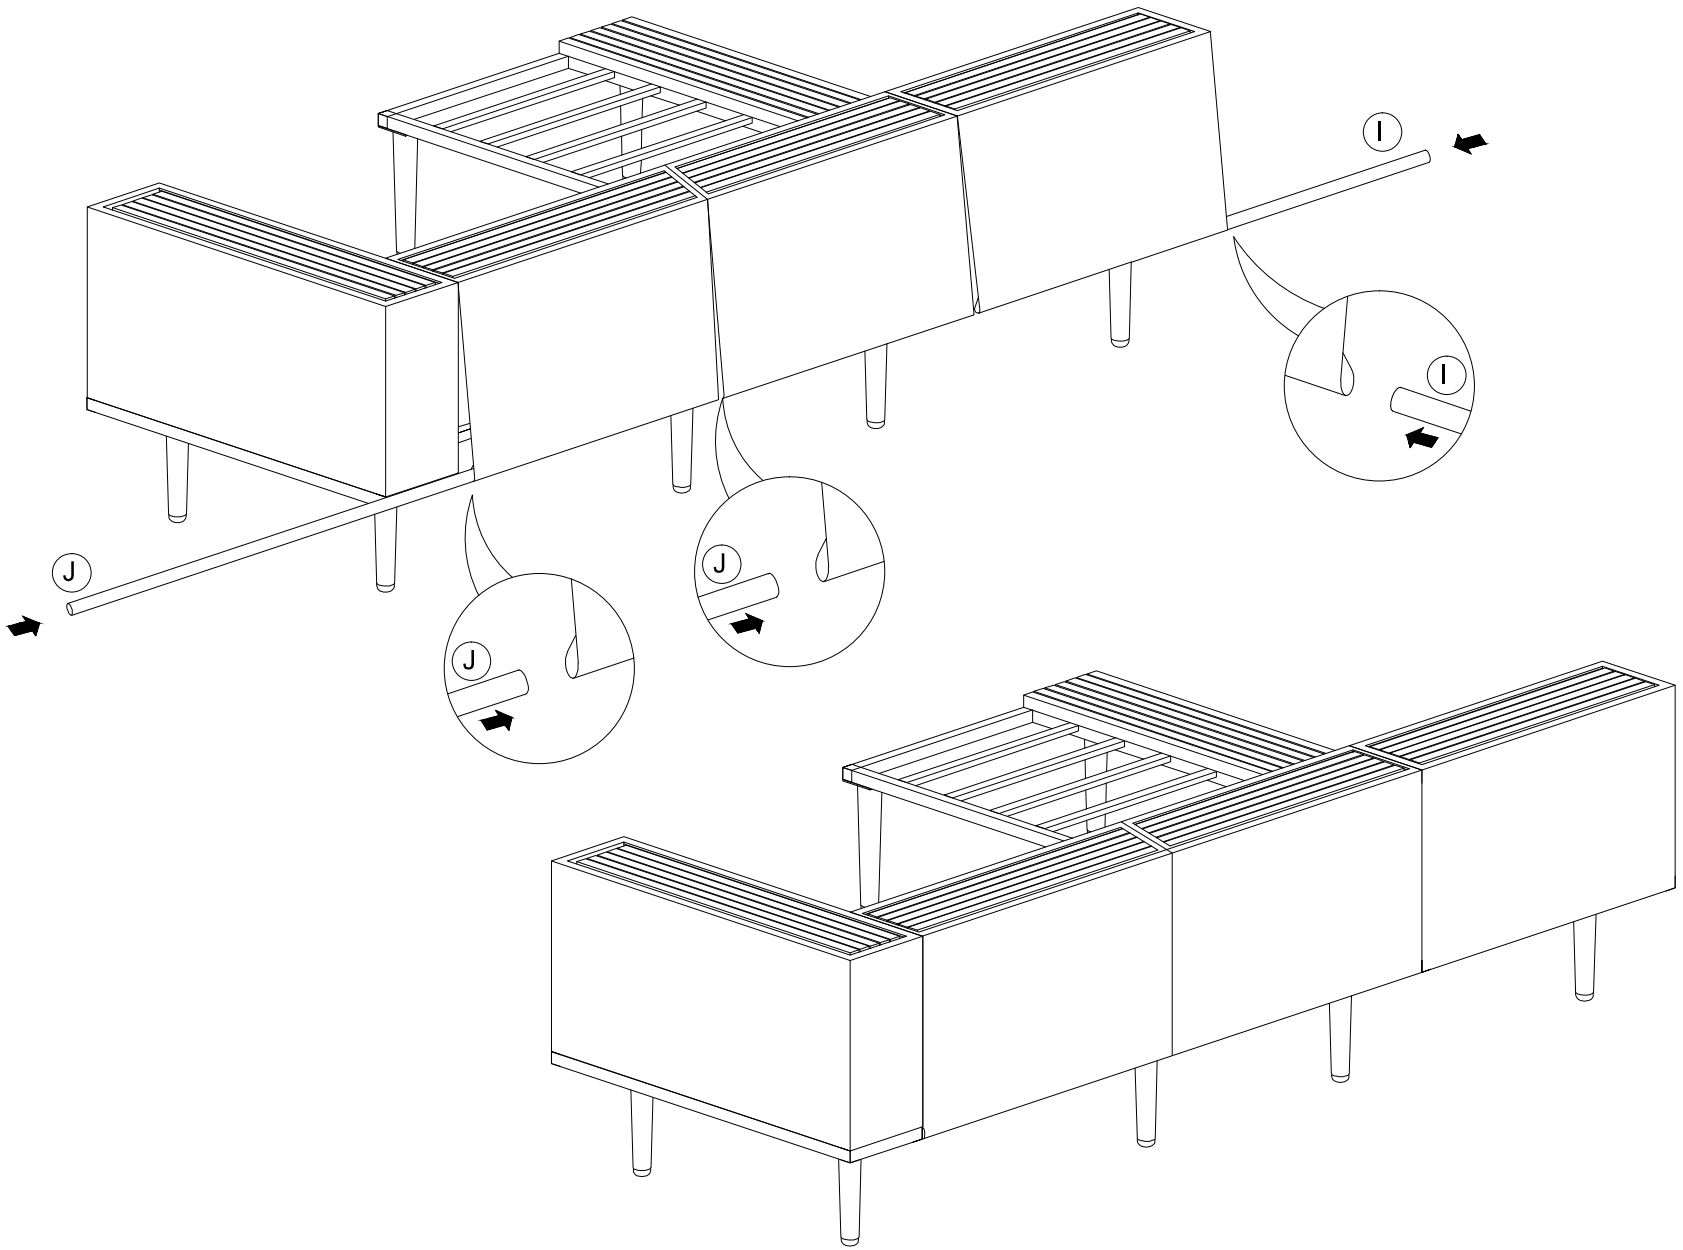


Step: 9 Following below illustration

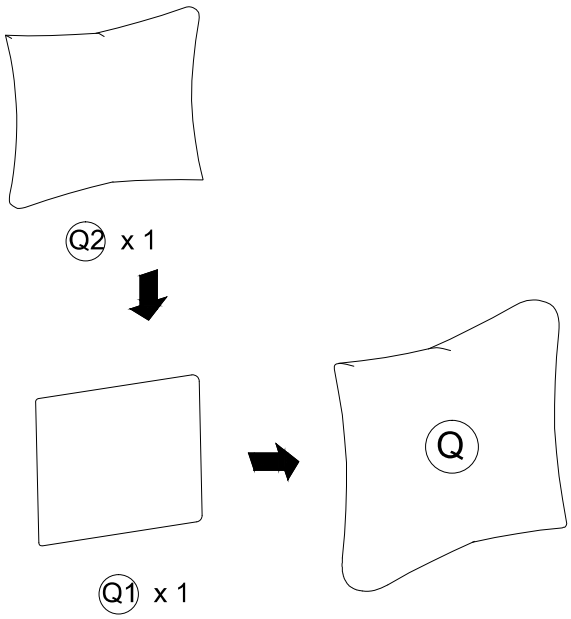


Step: 10 Following below illustration

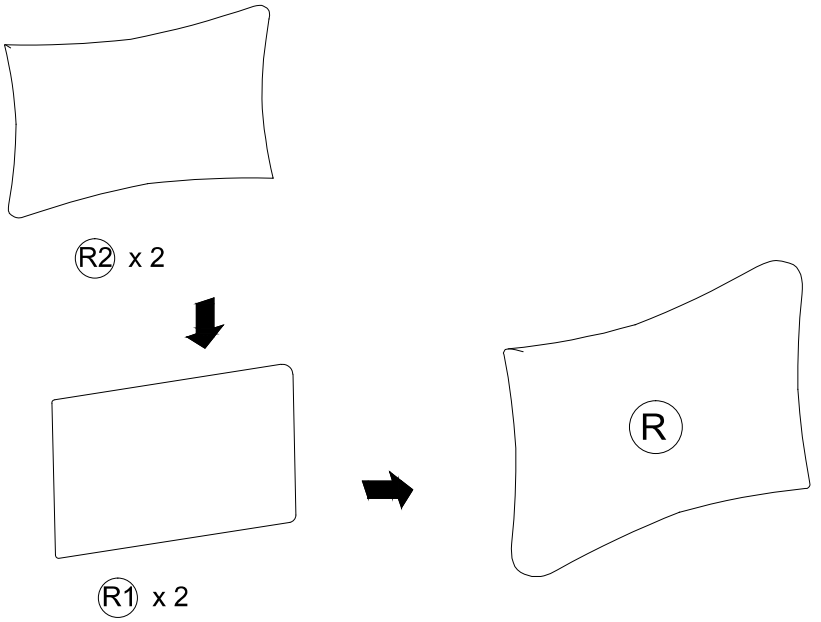


Step: 11 Following below illustration

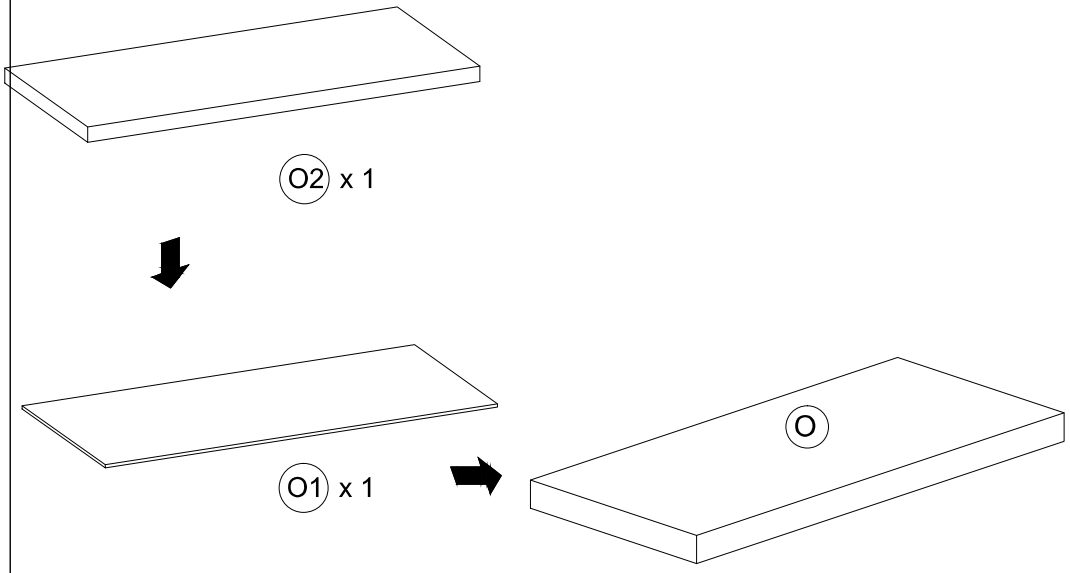


Step: 12 Following below illustration

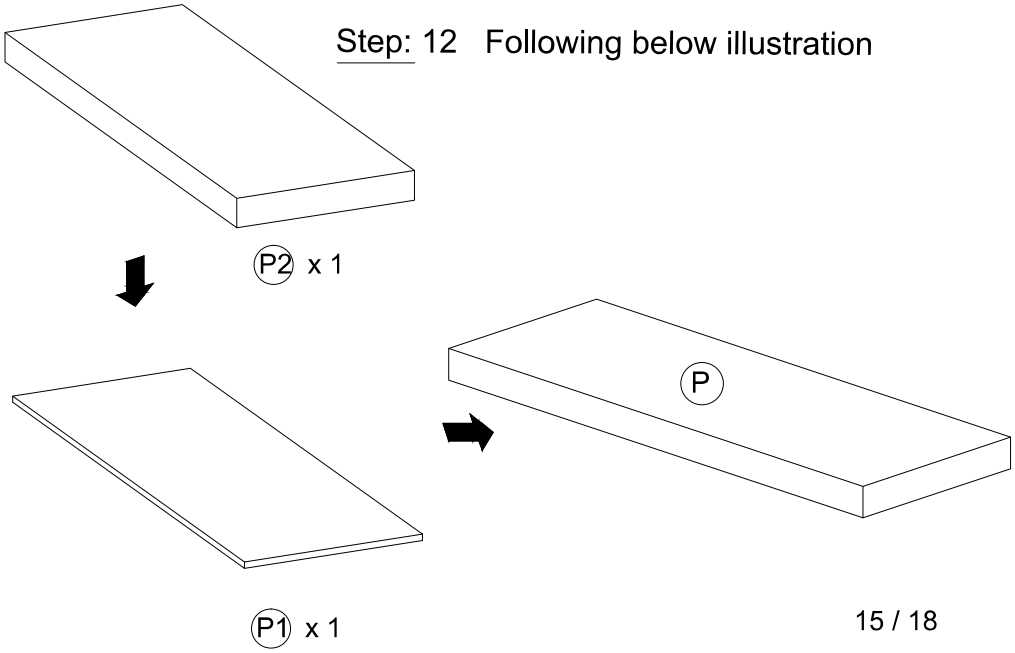

Step: 13 Following below illustration

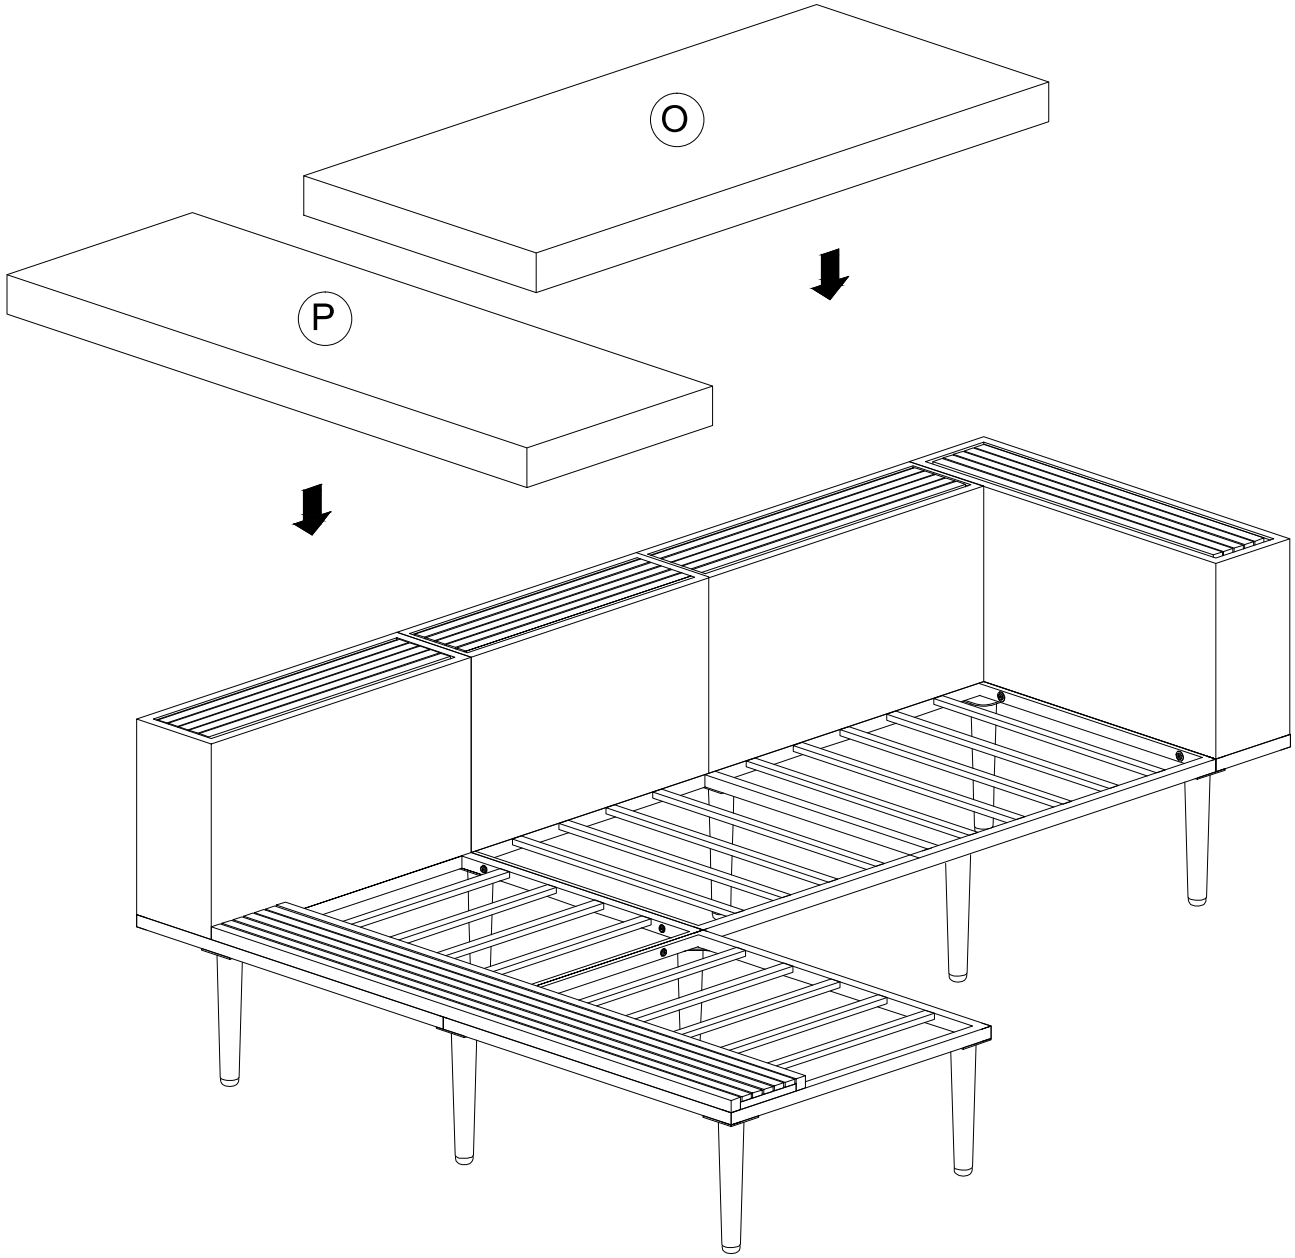

Step: 14 Following below illustration

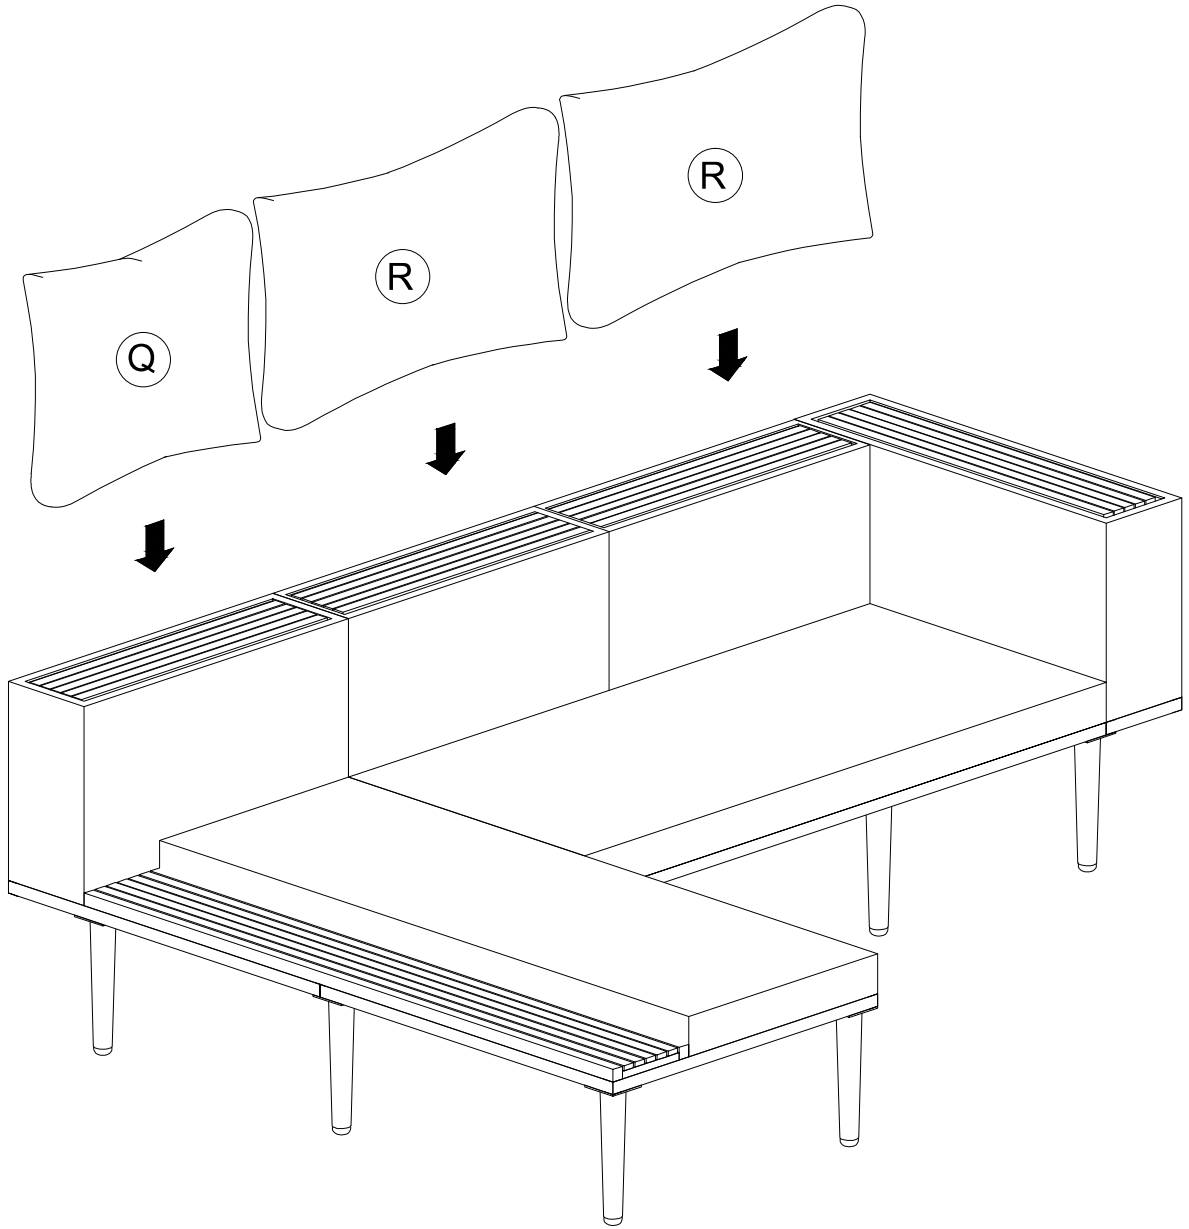

Step: 15 Following below illustration

FINISH

Please allow 48 hours for the seat to reach optimal comfort

