


STANDARD BED

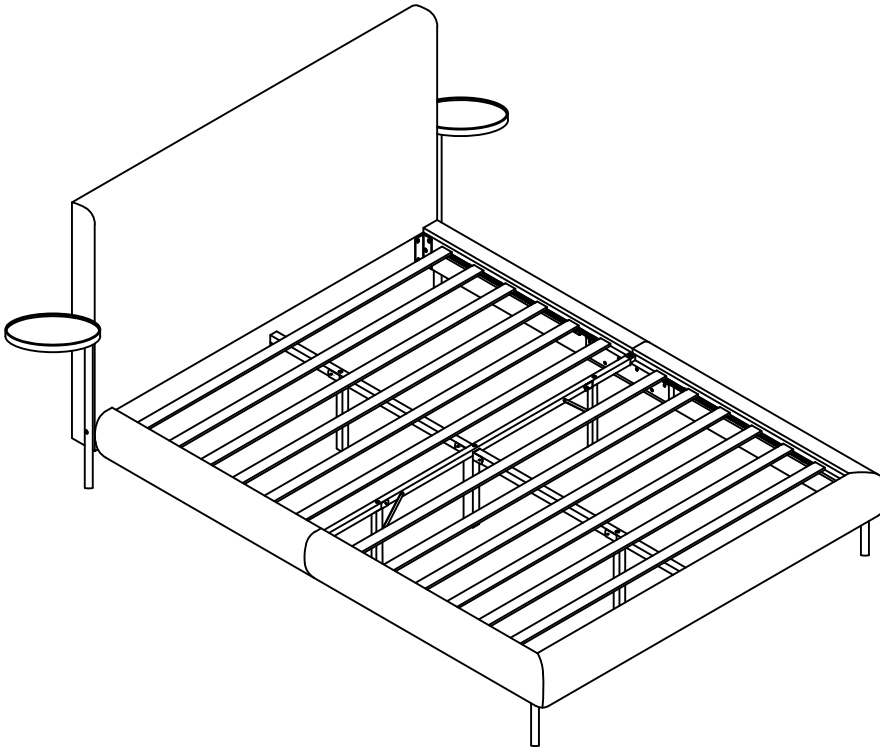


Please TEAR OFF this shrink film from side!
DO NOT USE CUTTER!


ITEM NUMBER:173

IMPORTANT NOTE


1. FOR THE PROTECTION OF YOUR FURNITURE, PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE TO PREVENT ANY DAMAGE.
2. DO NOT USE POWER TOOLS TO ASSEMBLE THE BED.
3. PLEASE PERIODICALLY CHECK ALL FITTINGS AND RE-TIGHTEN AS NECESSARY.
4. DO NOT USE THE BED UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED.
5. NEED PARTS OR ASSISTANCE? EMAIL US AT kjbed@outlook.com
6. YOU CAN ASSEMBLE IT WITH OUR PACKAGING TOOLS OR WITH A.

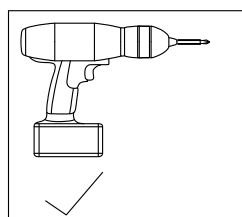


PART LIST

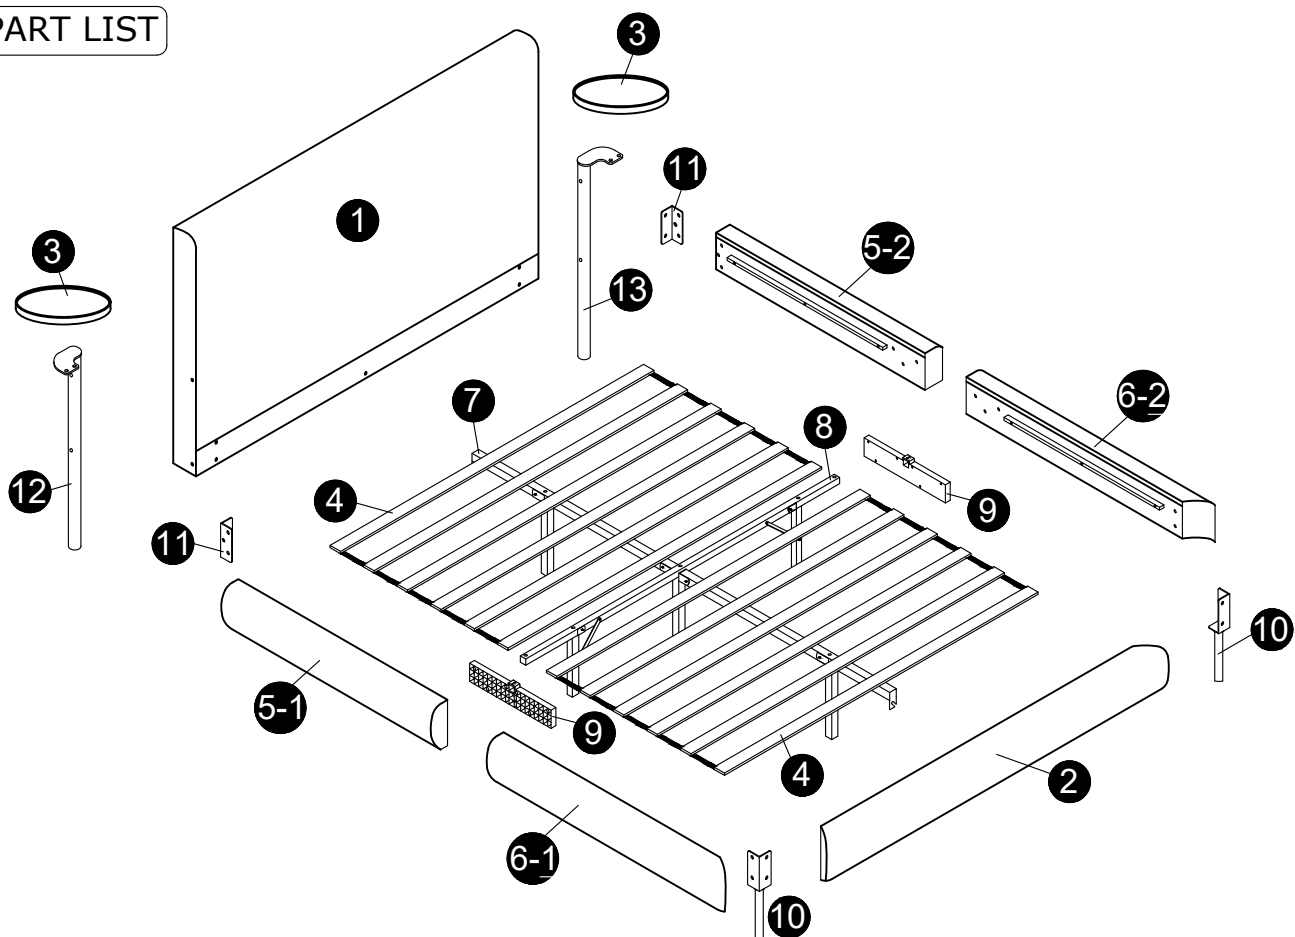

① x 1pc

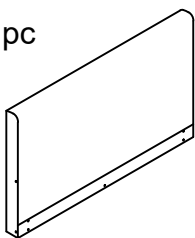


② x 1pc

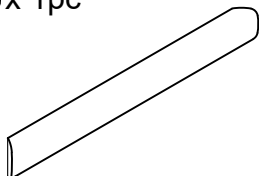


③ x 2pcs




④ x 2pcs

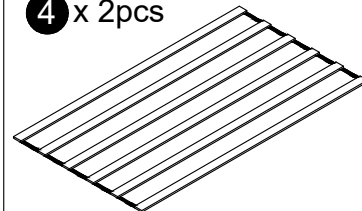


⑤-1 x 1pc

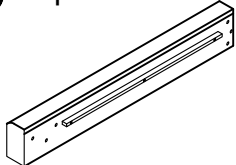


⑤-2 x 1pc

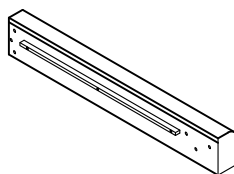


⑥-1 x 1pc

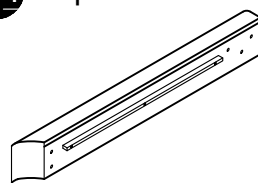


⑥-2 x 1pc

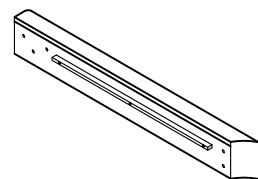


⑦ x 1pc

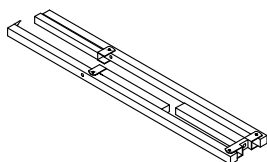

⑧ x 1pc

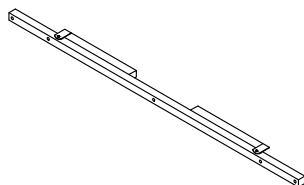

⑨ x 2pcs

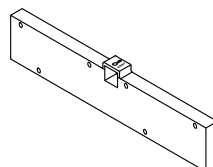

⑩ x 2pcs



⑪ x 2pcs



⑫ x 1pc



⑬ x 1pc



HARDWARE LIST



H1 M5 x 1pc



H2 M8x25mm x 18pcs



H3 M8x50mm x 2pcs



H4 M8x40mm x 16pcs



H5 M8 x 31pcs




H6 M8 x17mm x 43pcs



H7 M8x20mm x 6pcs




H8 M8x60mm x 1pc





H9 M8x60mm
+ Spring Washer M8
+ Curved flat washer
x 4pcs

1

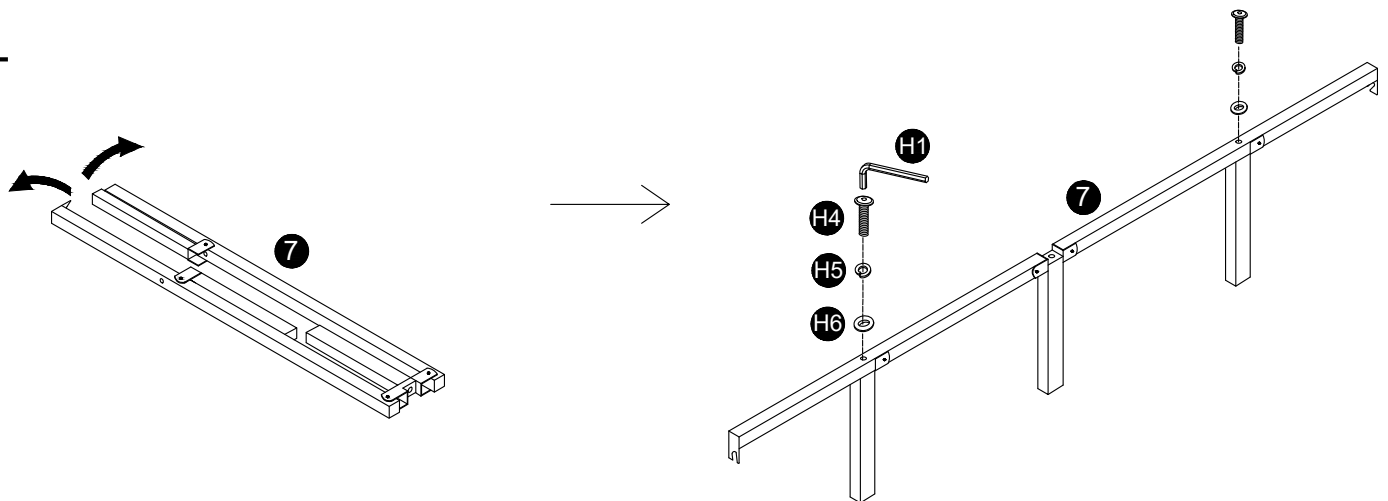


2

BEWARE OF CLAMP HAND

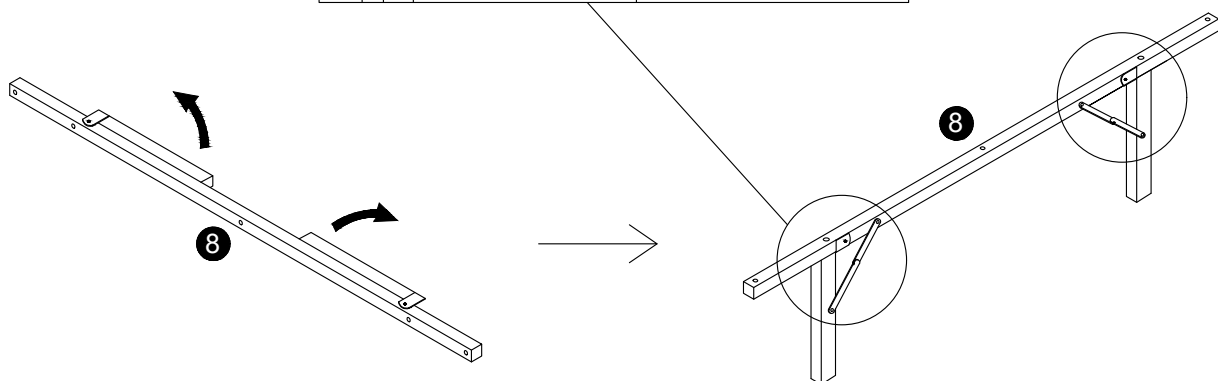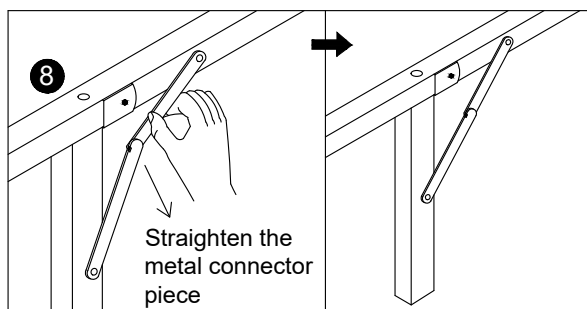


3

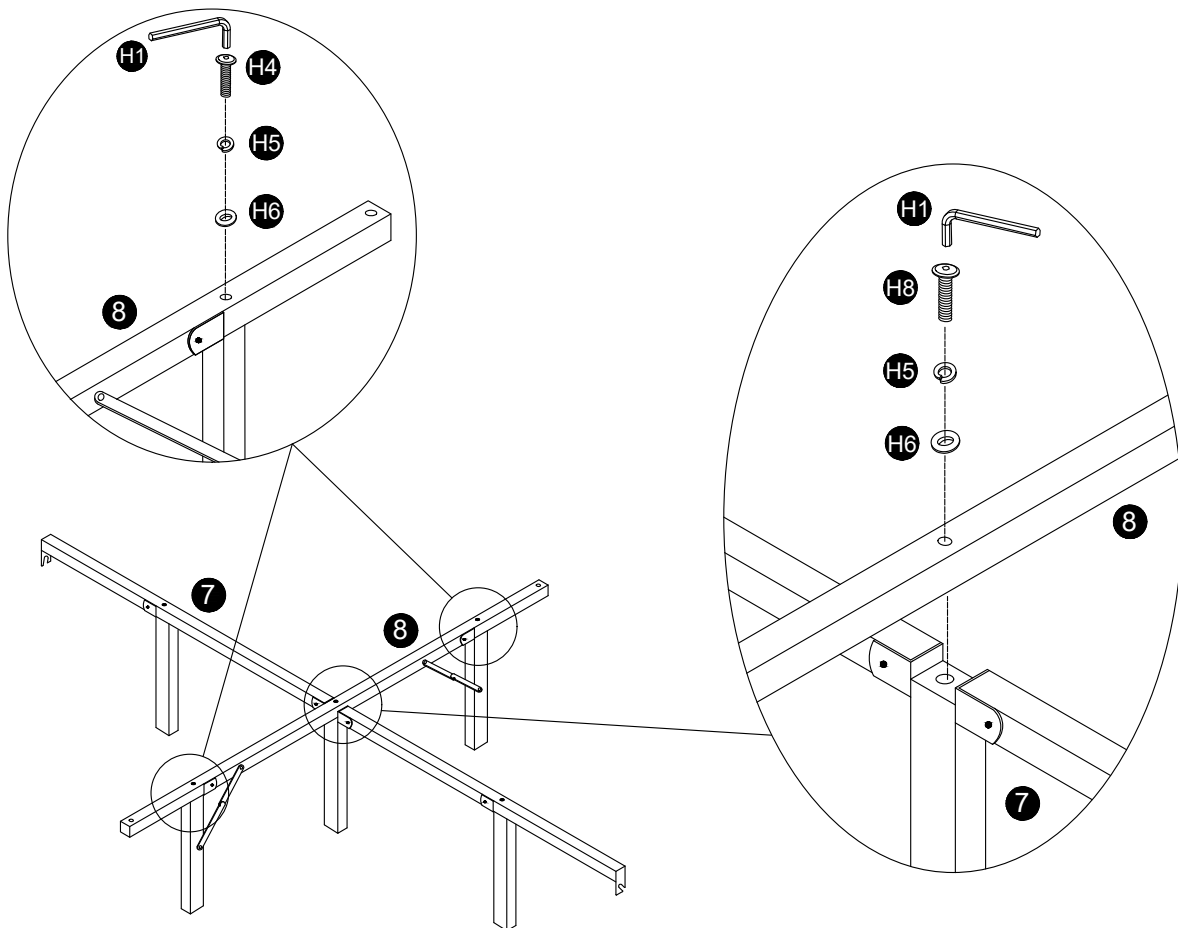


4


Important: part 9 , following the "INNER"

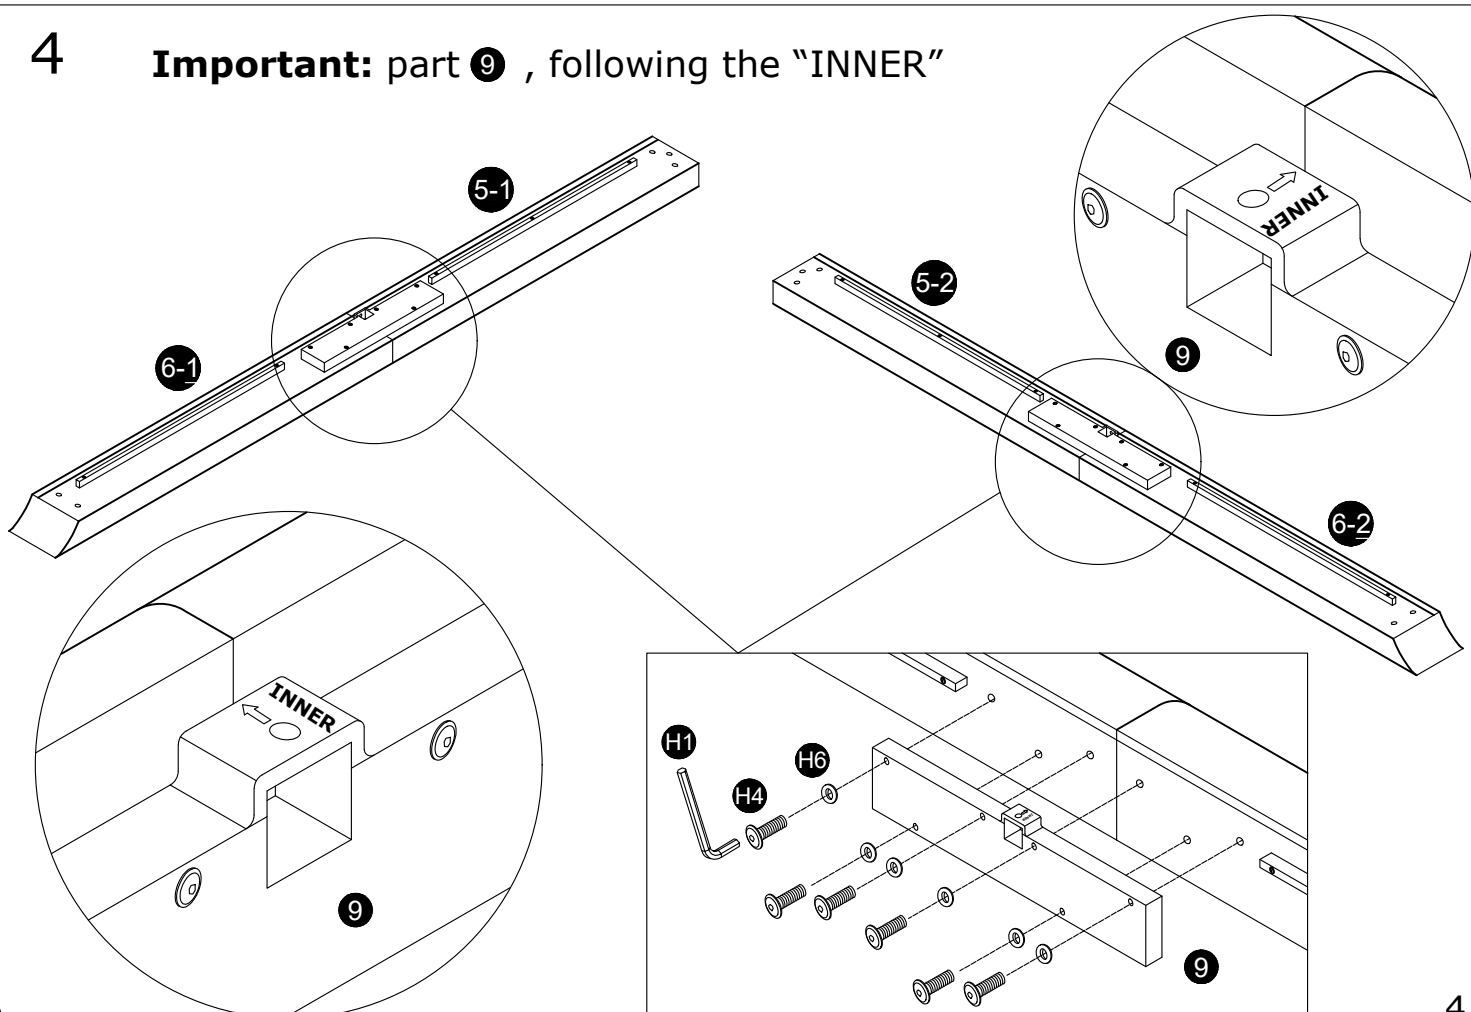


5 If can't assembly, checking STEP 4 if wrong

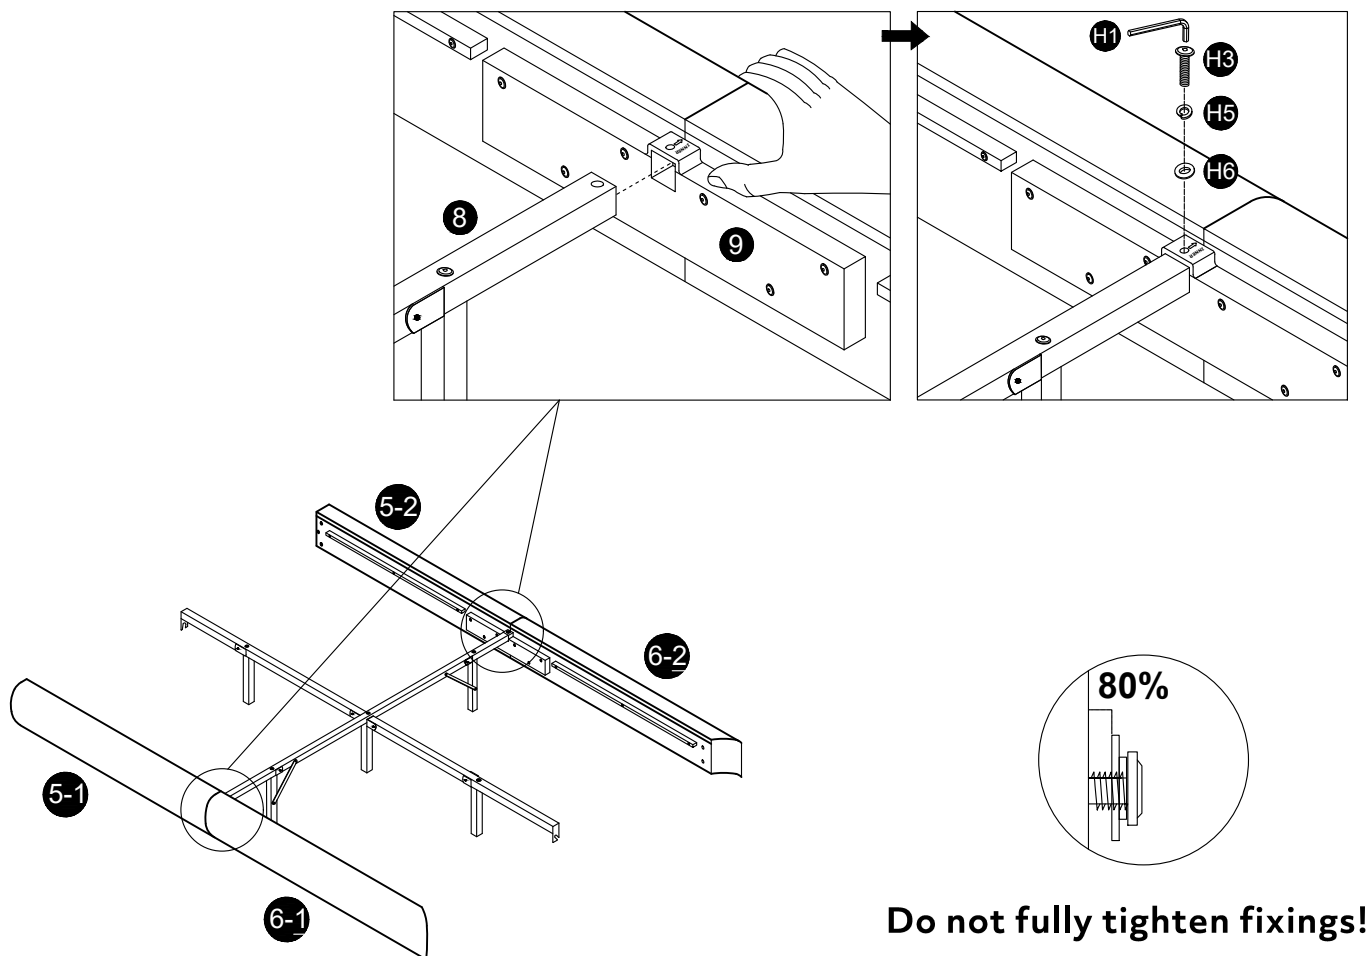

6

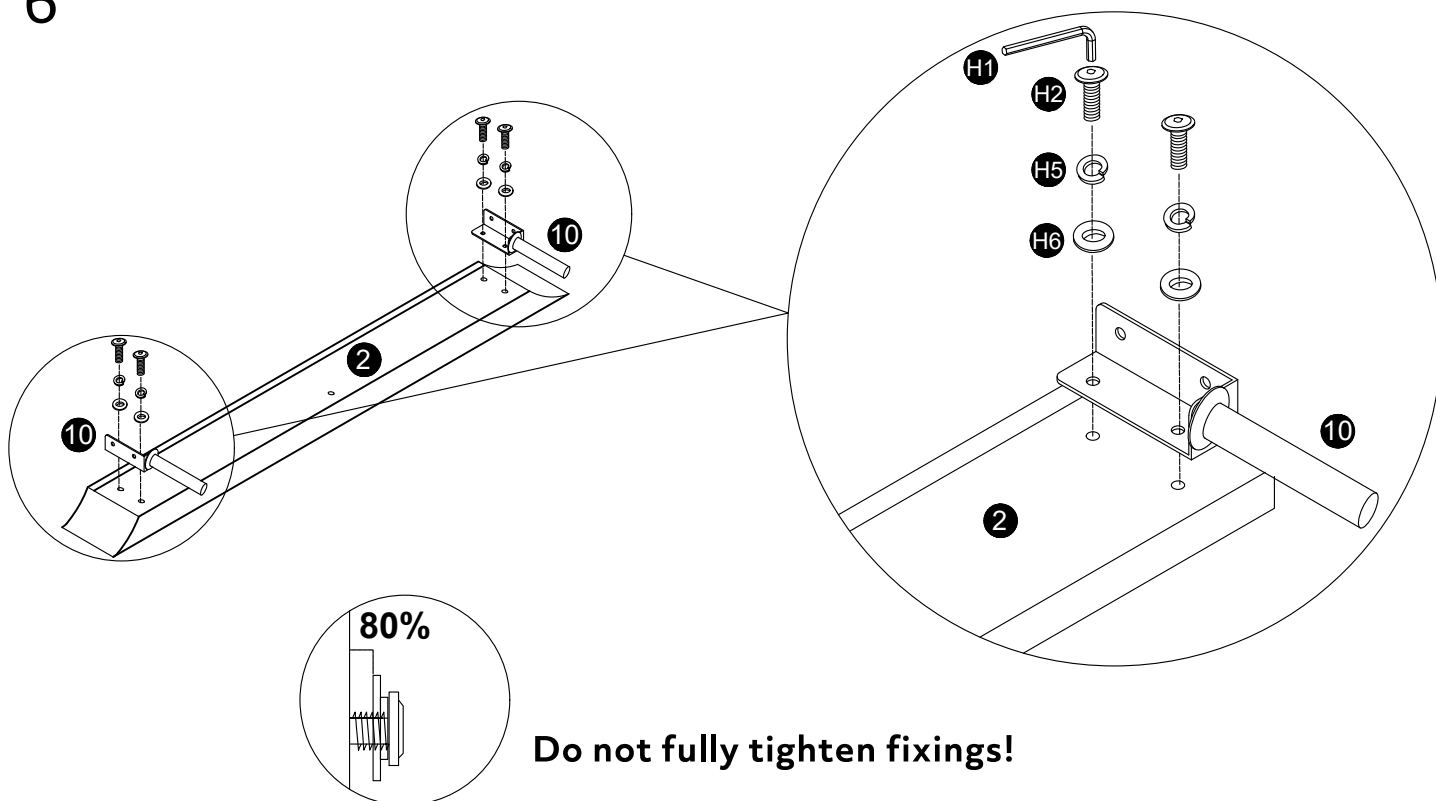


7

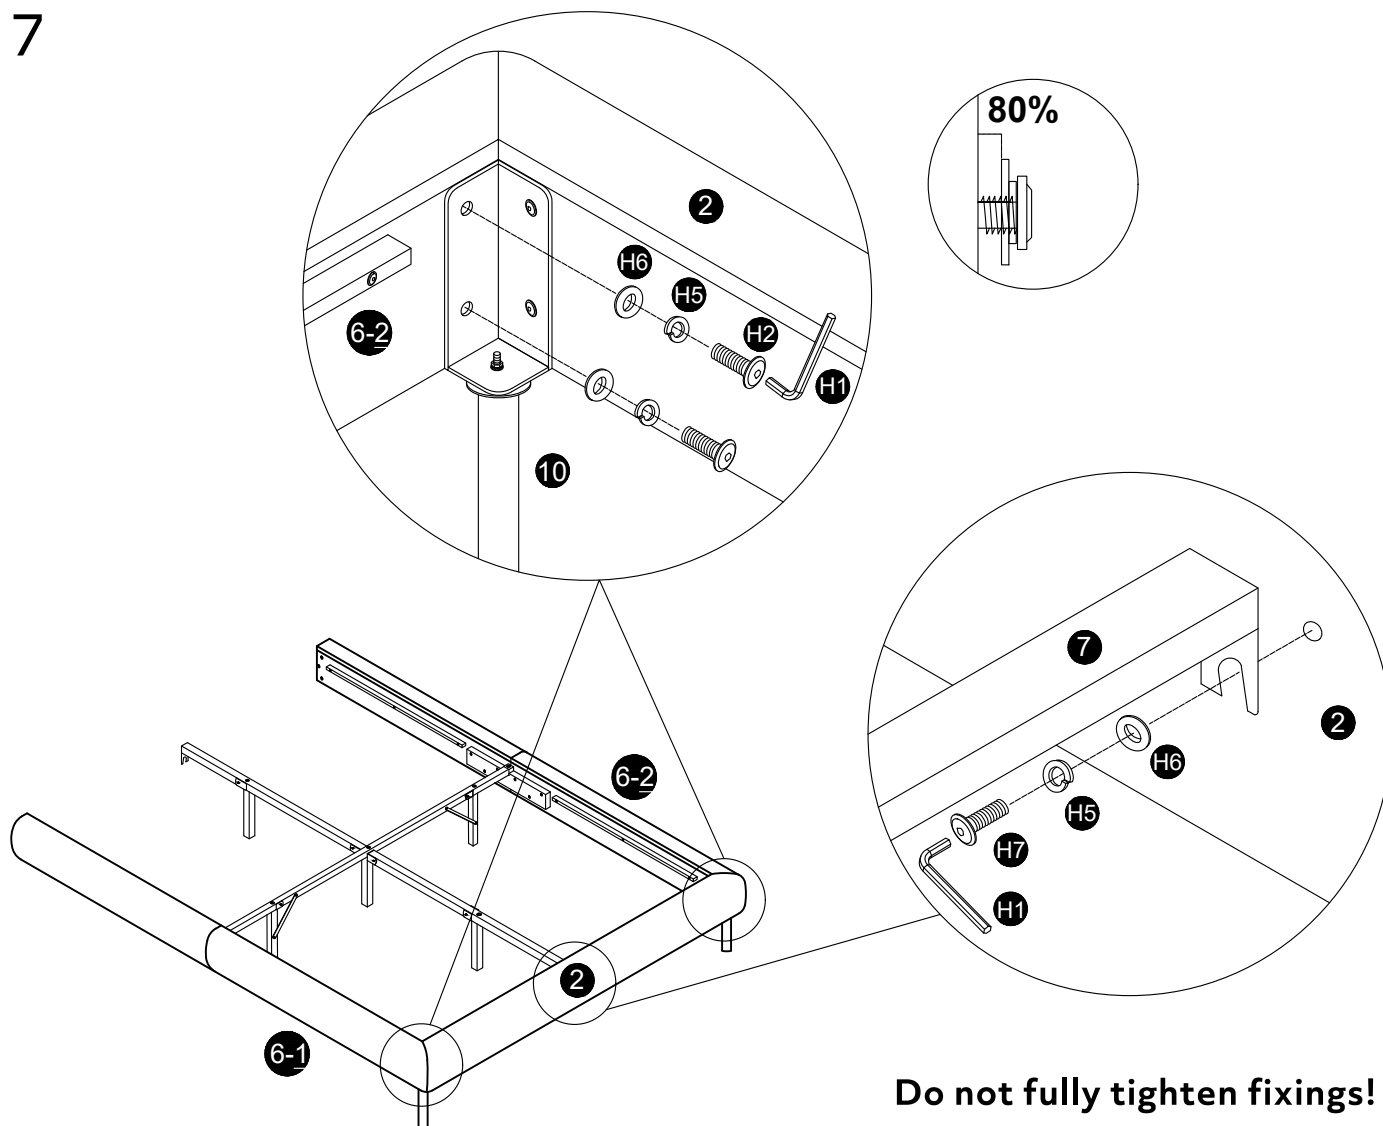


Do not fully tighten fixings!

8

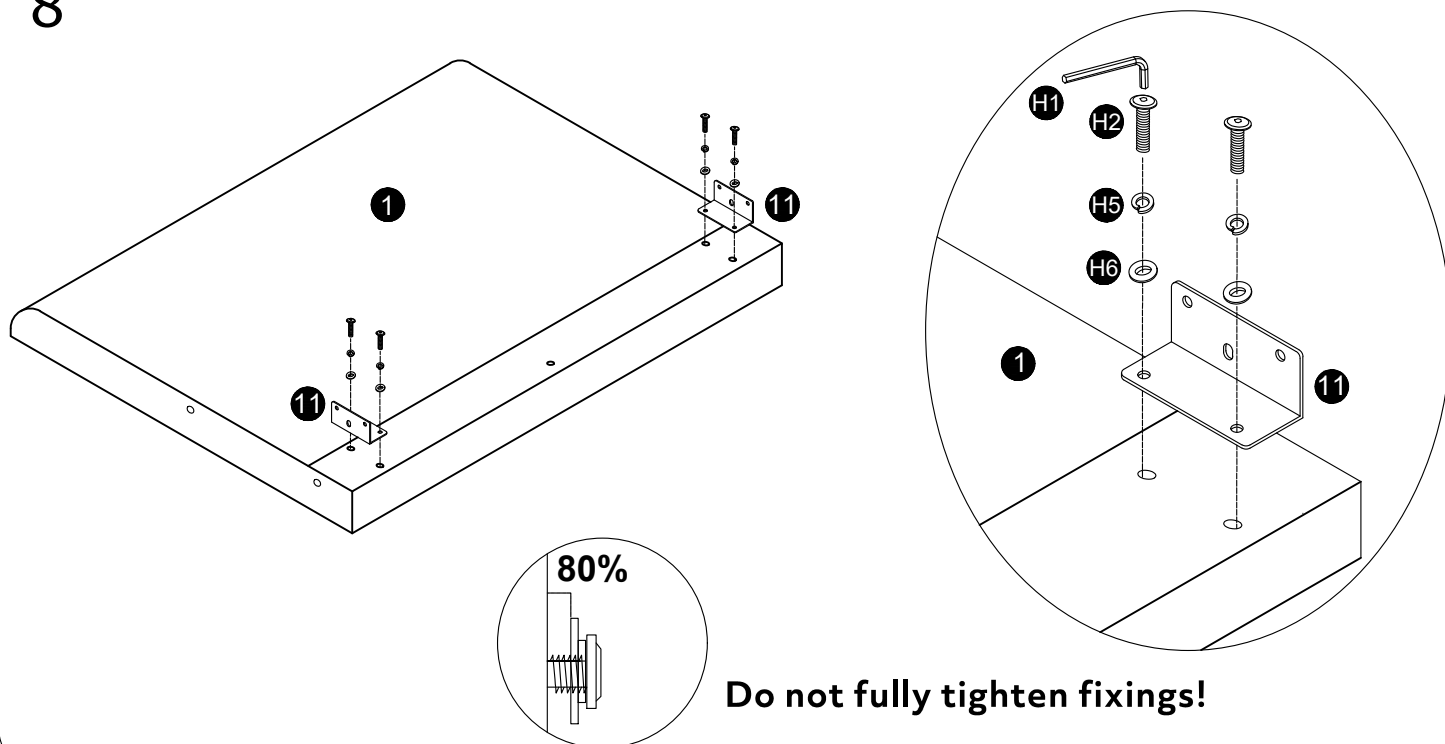


Do not fully tighten fixings!

9

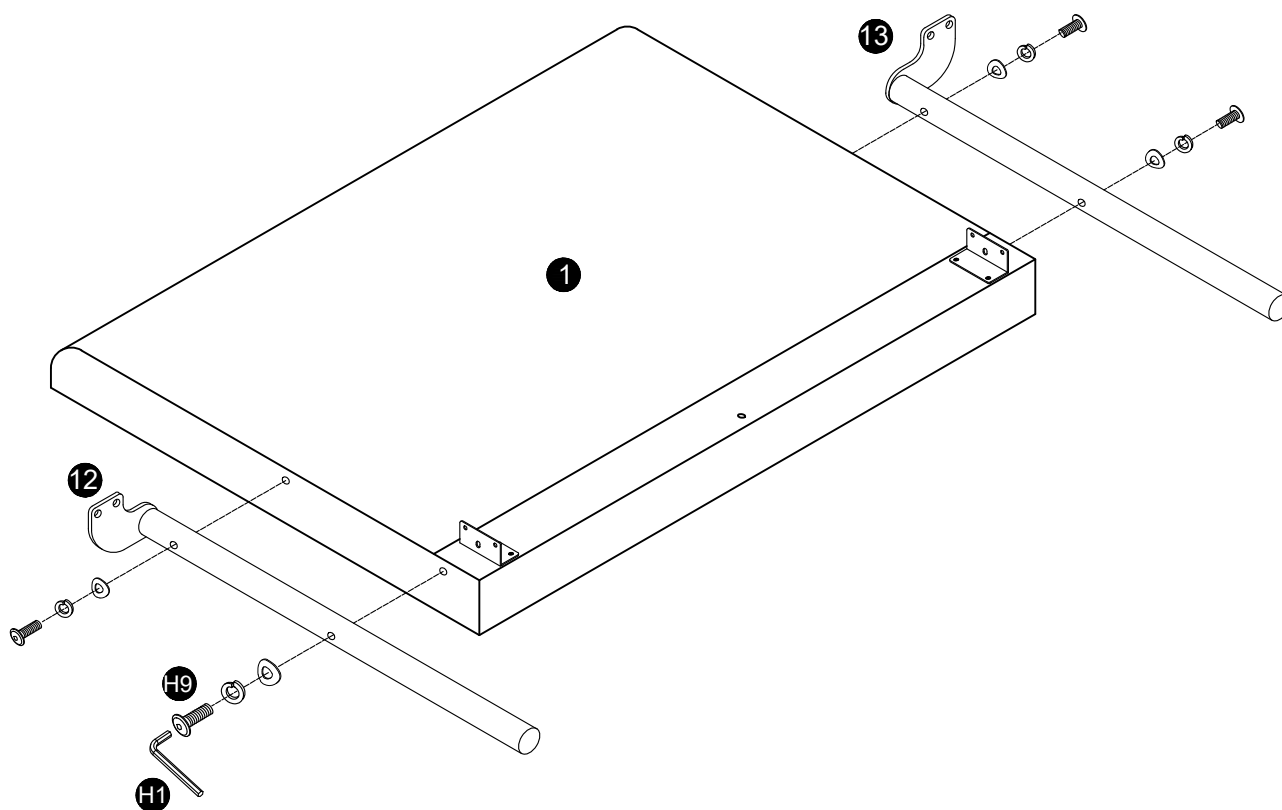


10

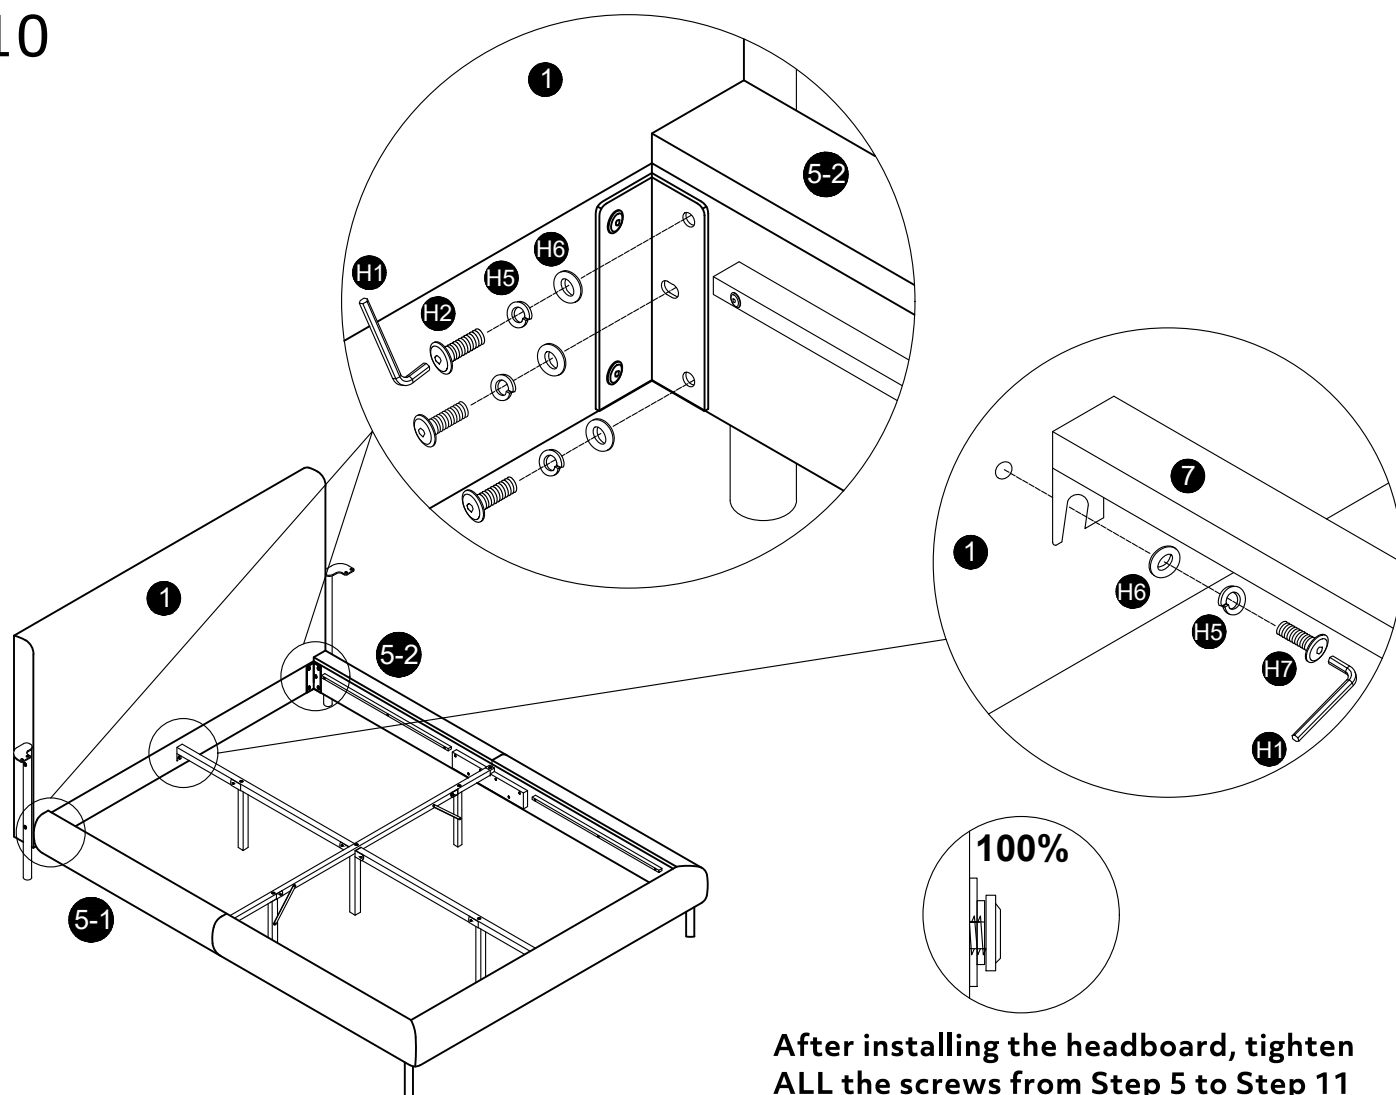


After installing the headboard, tighten ALL the screws from Step 5 to Step 11 to ensure the bed frame is stable.

11

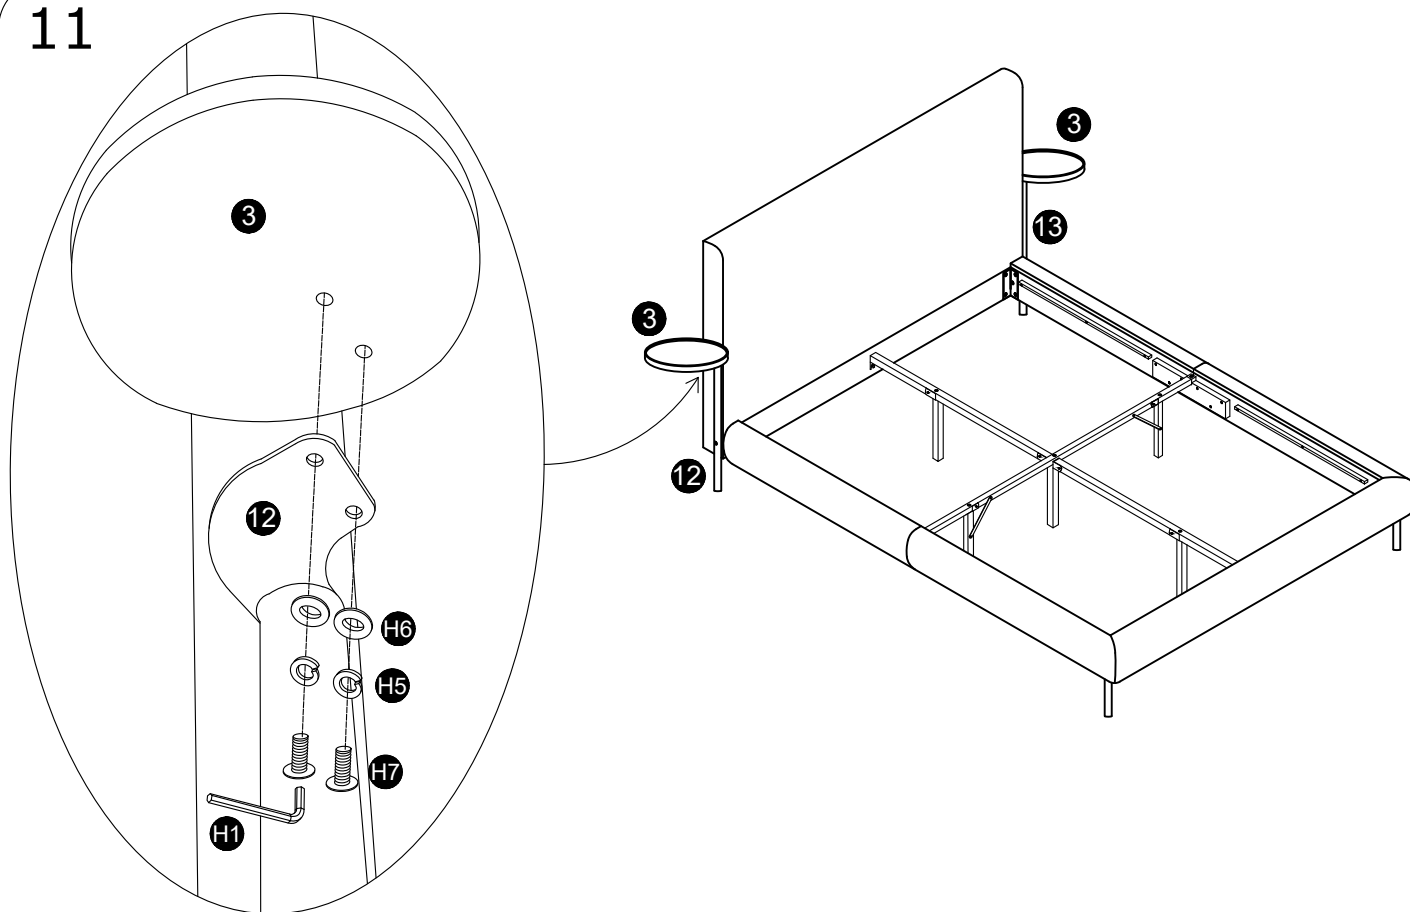

12

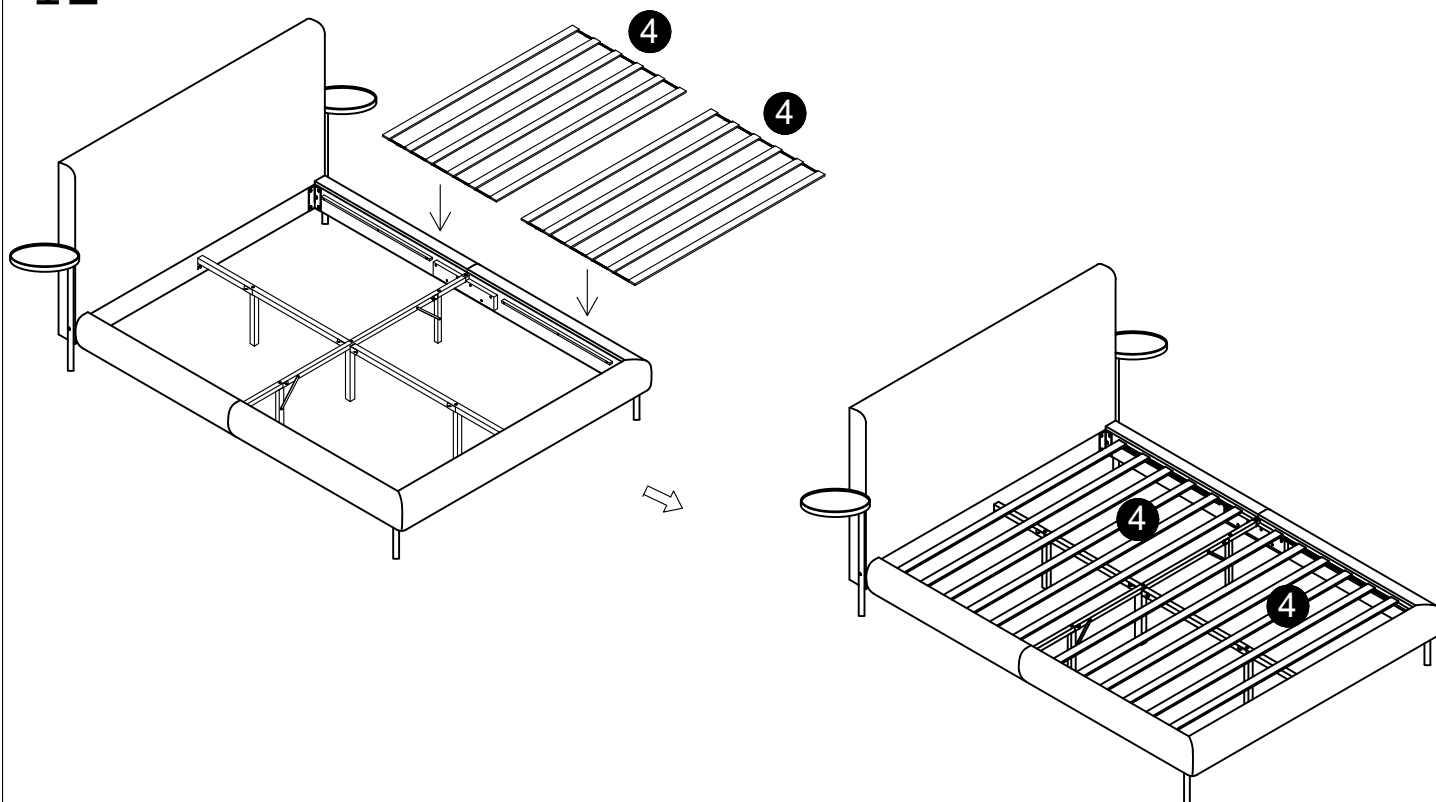

Job Complete !

In the interest of our environment please dispose of all packaging thoughtfully.