




Medicine Cabinet Instructions

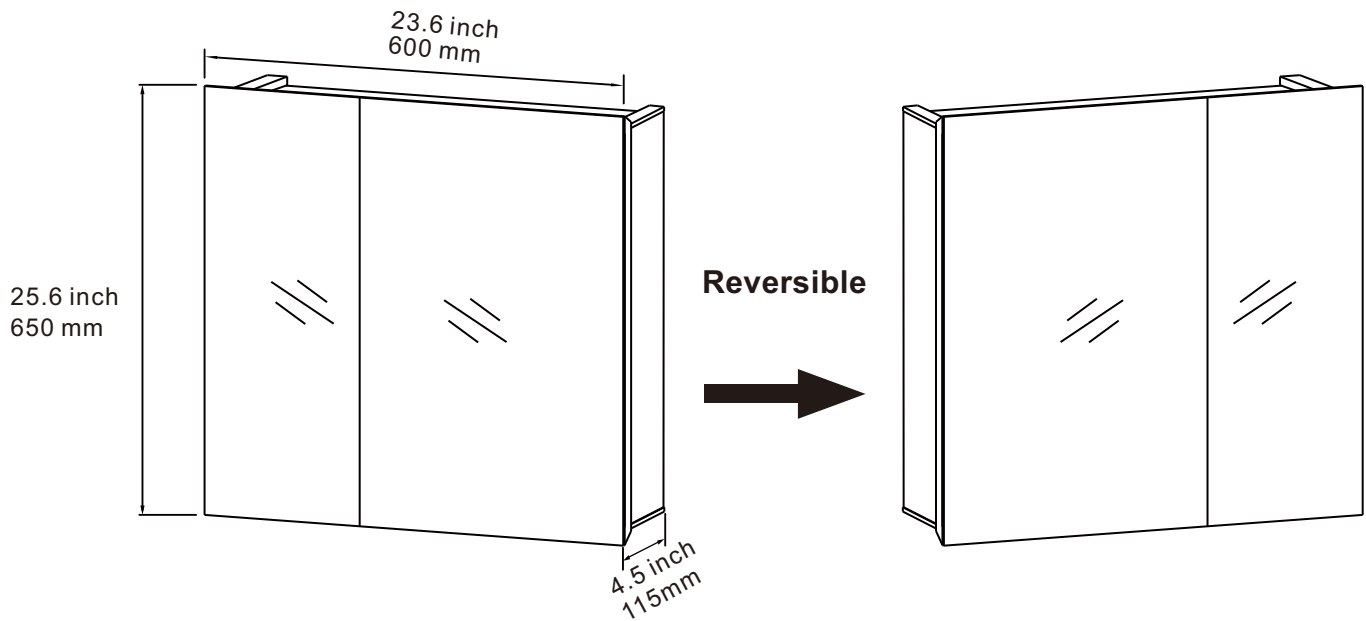


PART LIST

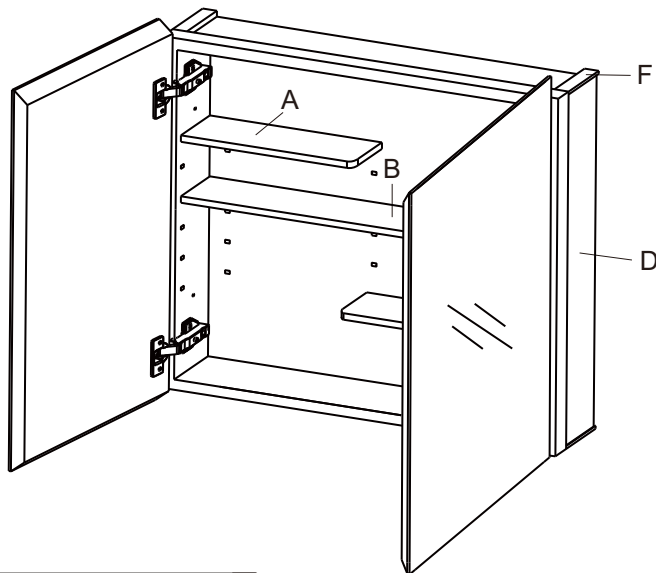


SUPPLIED HARDWARE LIST

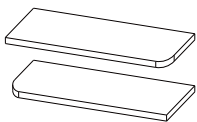

A 2x



B 1x




C 4x



D 2x



E 4x



F 4x



G 8x



H 4x

TOOLS REQUIRED (not supplied)



Pencil




Screwdriver



Level



Rubber mallet

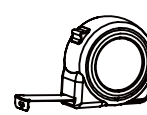

Measuring Tape




Drill

SURFACE MOUNT INSTALLATION

STEP 1

Fix the side panel brackets(F) on the 4 corners with screws (G). Attach the side panel support brackets(E).Then insert the side panel (D).

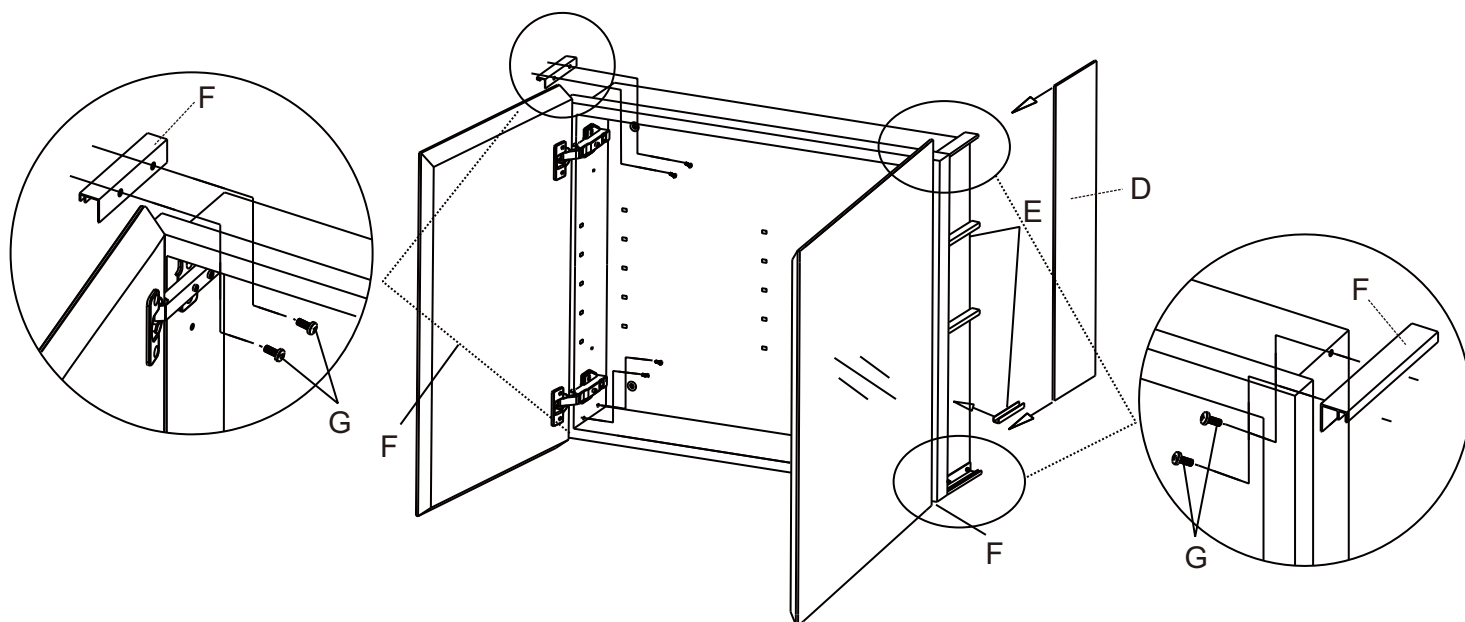

STEP 2

Fix the cabinet on the wall.

1) Mark the position of the mounting holes:


Hold the cabinet against the wall in its desired location. Check that the cabinet is straight and level using a spirit level. Open the doors and mark the wall through the holes in the back of the cabinet with a pencil.

2) Drill the mounting holes:

Using a 6.5mm masonry drill, drill the holes in the marked positions to a depth of 35mm and insert the wall plugs(C) into the holes in the wall.

3) Fix the cabinet on the wall:



Hold the cabinet against the wall and align the holes in the back of the cabinet with the wall plugs. Insert the mounting screws(H) through the holes in the back of the cabinet and screw into the wall plugs(D).

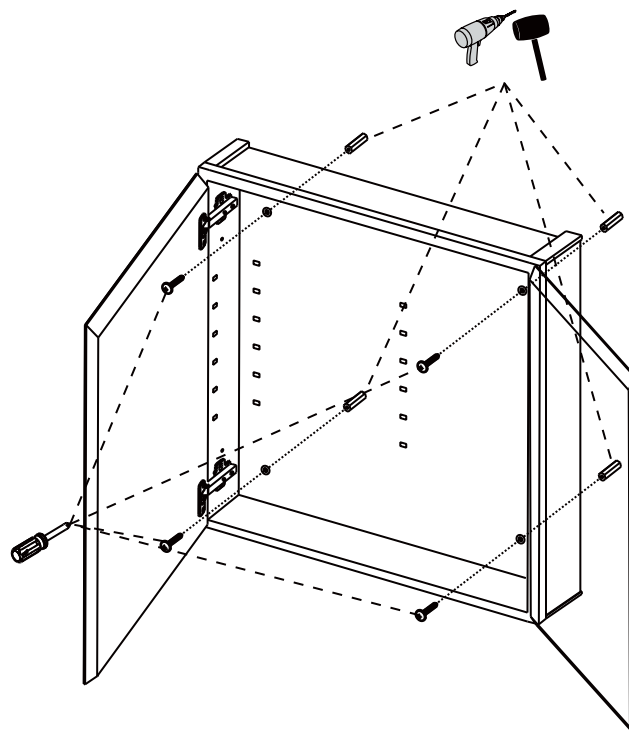

RECESSED MOUNT INSTALLATION


STEP 1

Draw the perimeter of the cabinet. Cut at the marked lines with the appropriate tool. Make sure that there is support on both sides of the opening to attach the cabinet box.

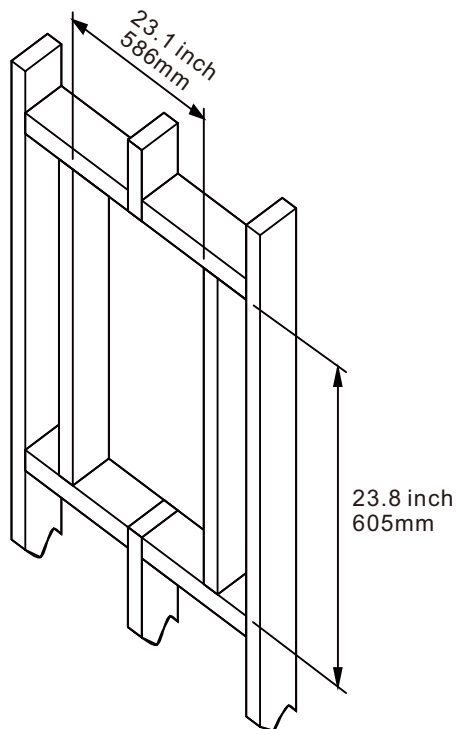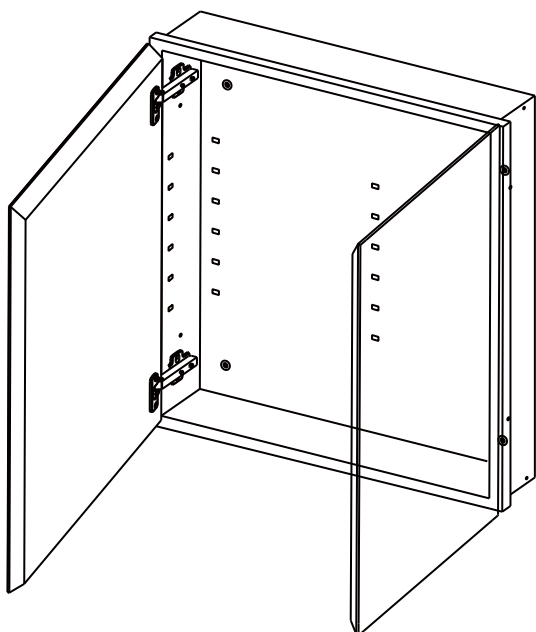


STEP 2

Frame the cutout opening. Place and hold the cabinet in the cutout.

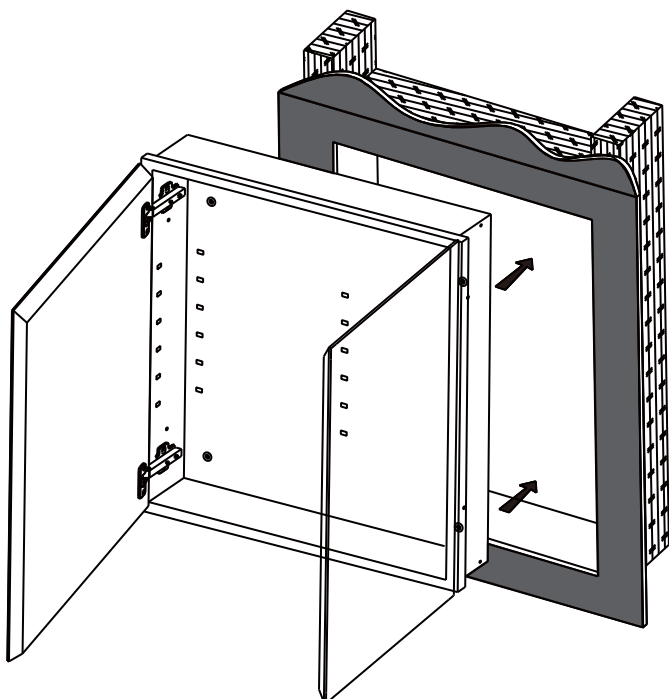


STEP 3

Level, then secure the cabinet with screws (H).

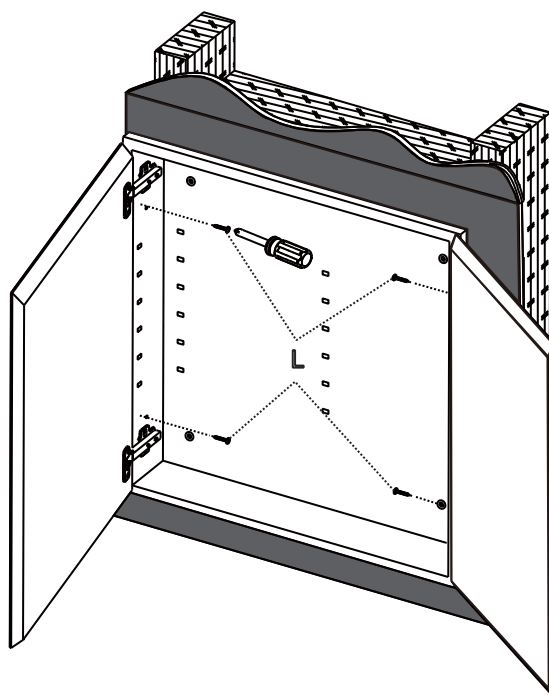

TO ASSEMBLE THE SHELVES

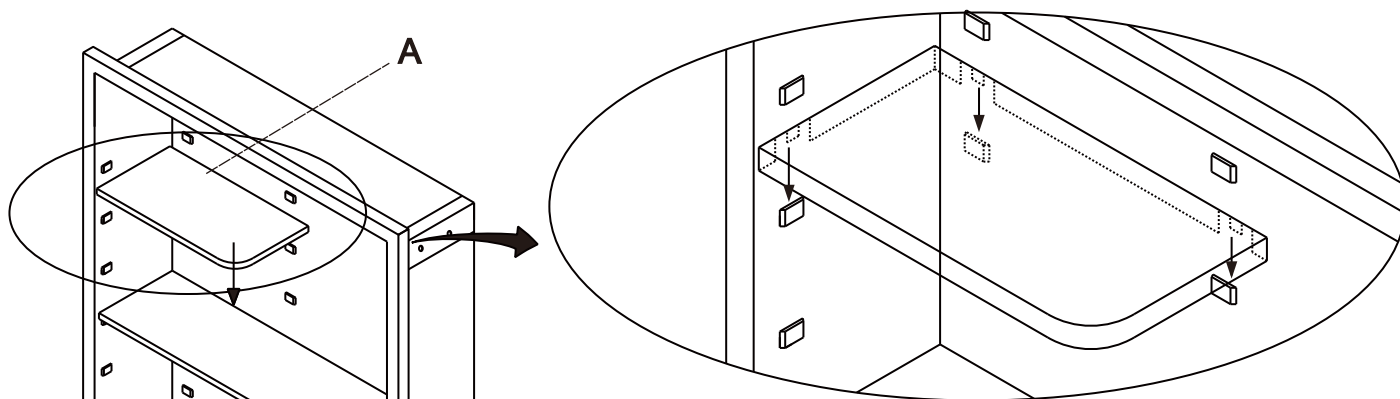

When assemble the shelves, make sure the back panel of the cabinet is straight. If the back panel is not straight due to uneven walls, and the shelf fastener could not fit into the slots of the back panel, please loosen the mounting screws a little, assemble the shelves and then tighten the mounting screws.

TO ADJUST THE HINGE

