



ASSEMBLY INSTRUCTION

60" Vanity


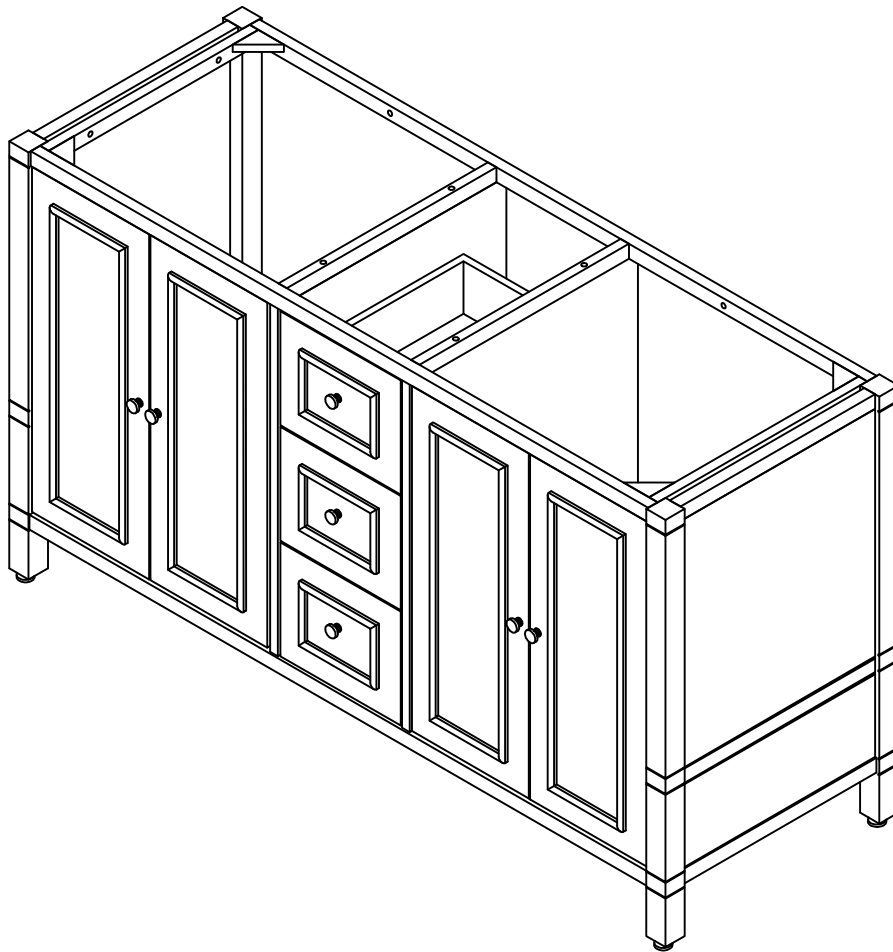


REPLACEMENT PARTS


Please do not contact the company purchased from as we can help you faster.
Order replacement parts and hardware at " www.boltonfurniture.com "

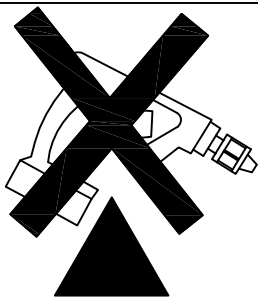


. Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe !!!
. Please assemble on a clean soft surface to avoid damage.

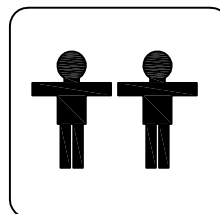


Tools Required

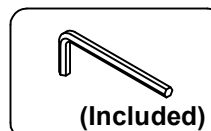

(Included)

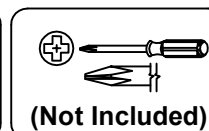


(Not Included)




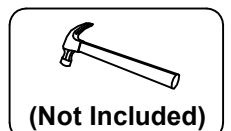


(Not Included)

Part list - 60" Vanity

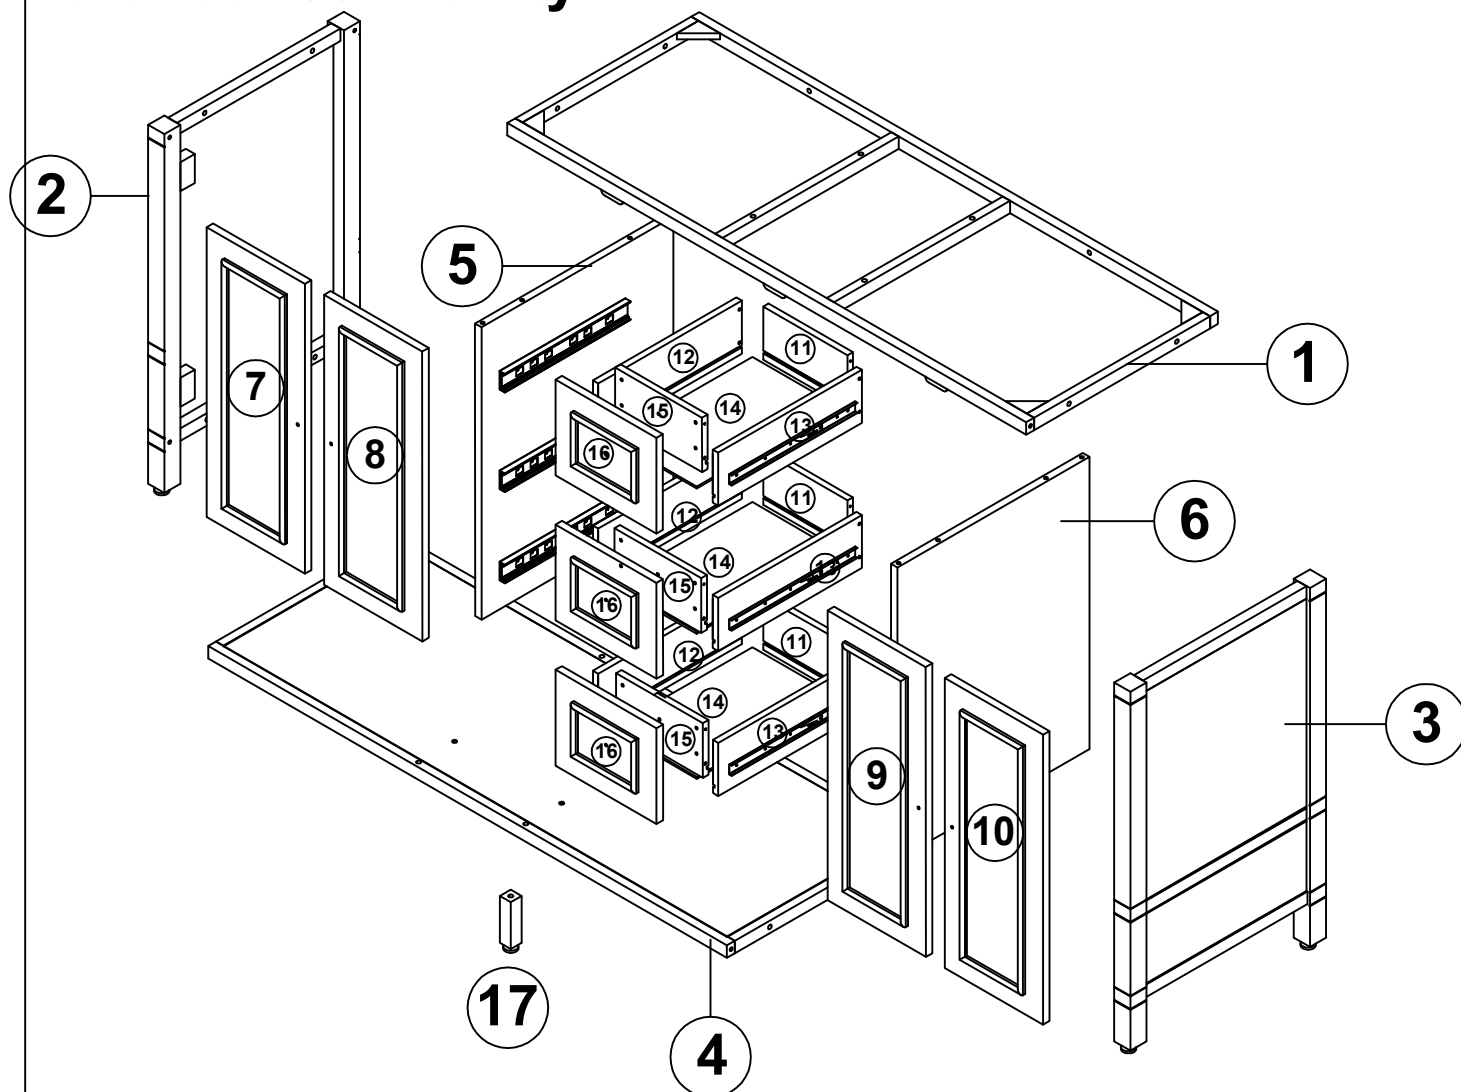


Identifying the hardware-Identify the hardware using the illustrations below

A  12 Ø8*30mm Wood Dowel	B  17 M6*45mm Bolt	C  17 Ø6*16mm Washer
D  02 Hinge-1	E  02 Hinge-2	F  48 3.5*15mm Screw
G  07	H  07 4*25mm Screw	I  05 Leveler
J  02 4*50mm Screw	K  01	L  06
M  48 3.5*12mm Screw	N  36 4*25mm Screw	O  24 Ø6*20mm Wood Dowel

Step 01

L  06

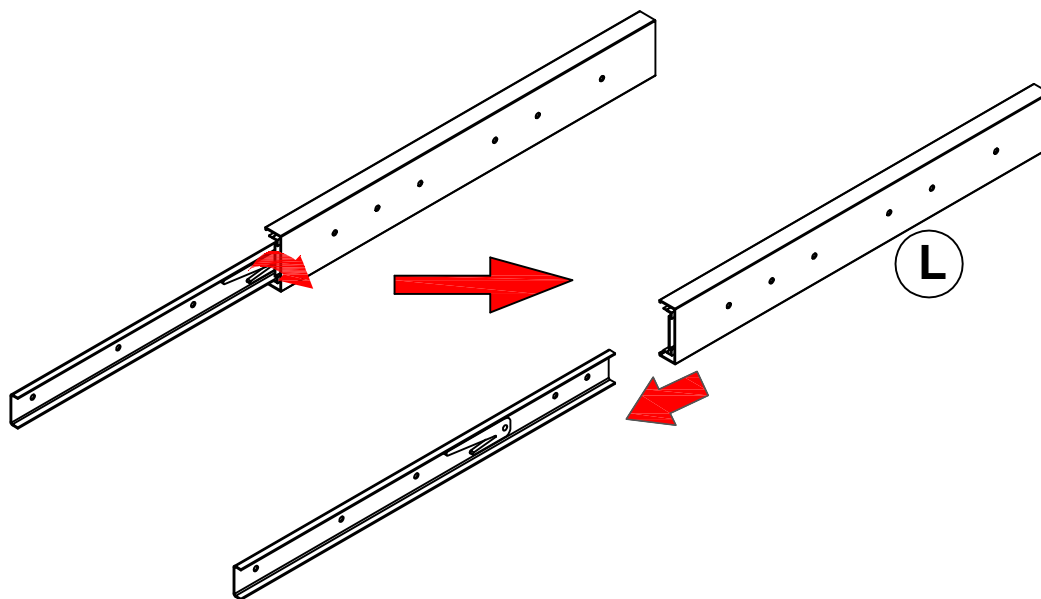


X6

Step 02

M  24
3.5*12mm Screw

 01

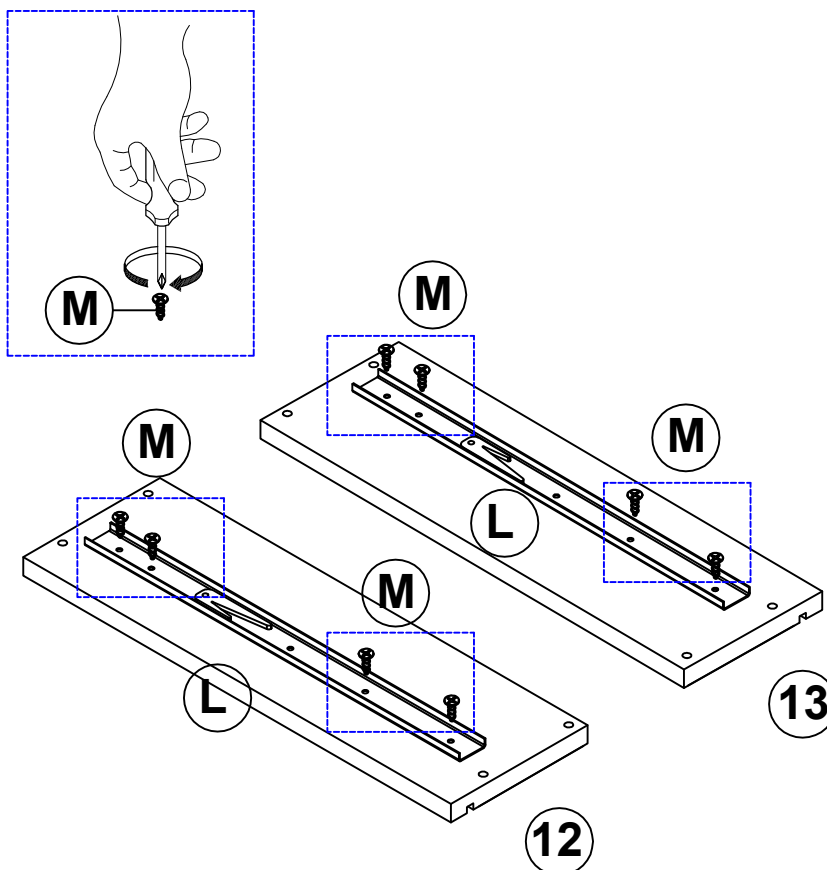


X3

Step 03

M  **24**
3.5*12mm Screw


 **01**

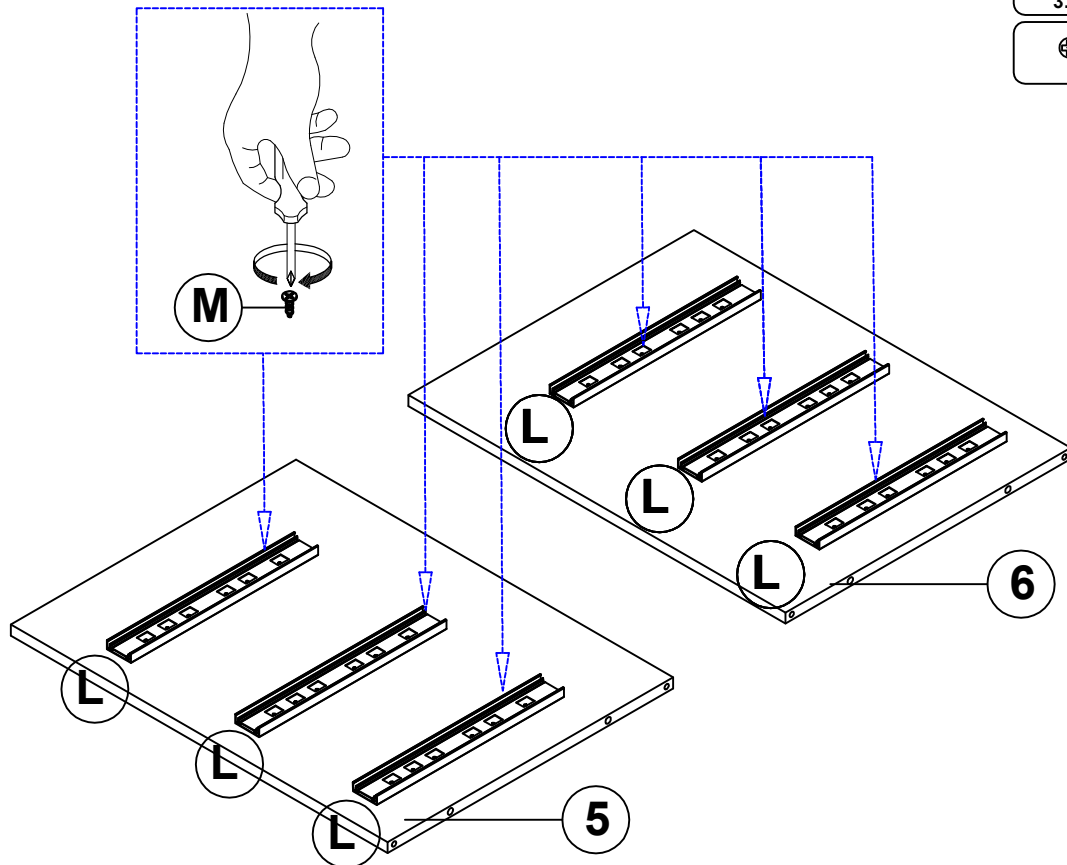


Step 04

A  **12**
Ø8*30mm Wood Dowel

 **01**
(Not Included)

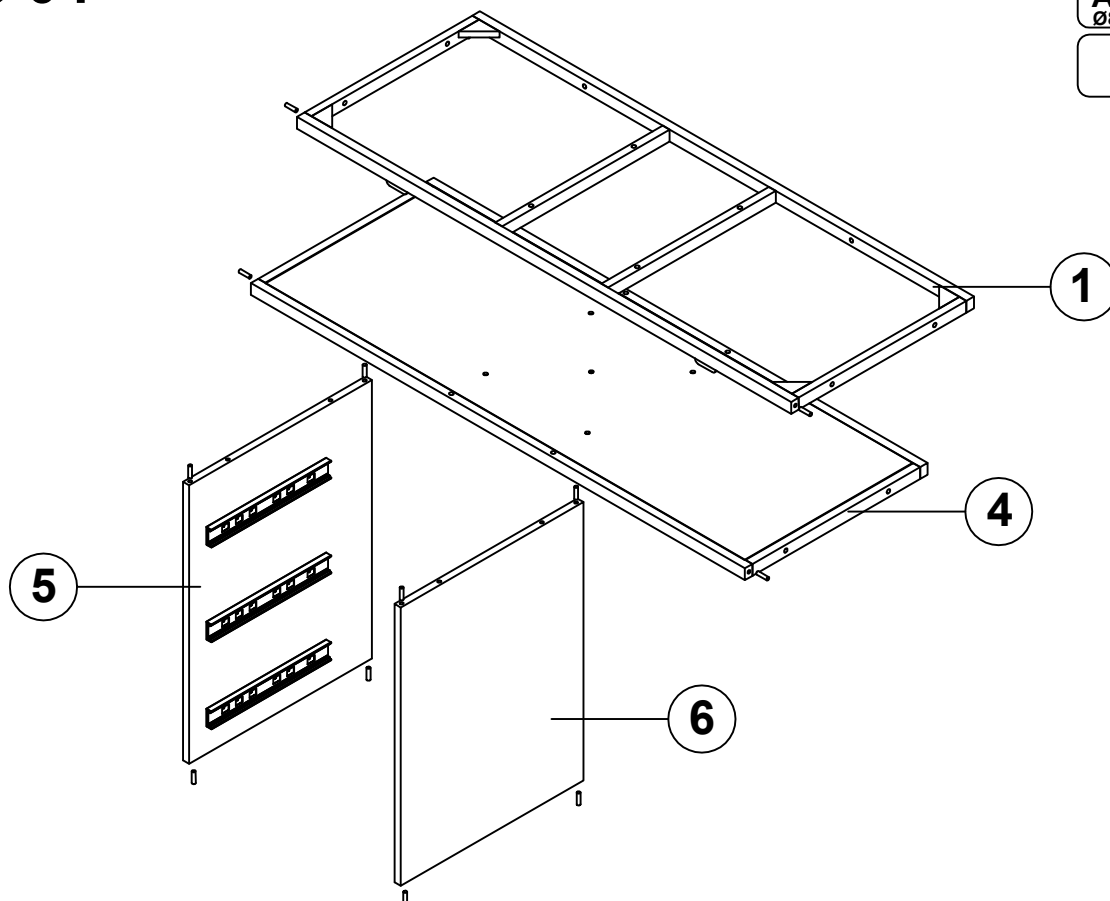


Step 05

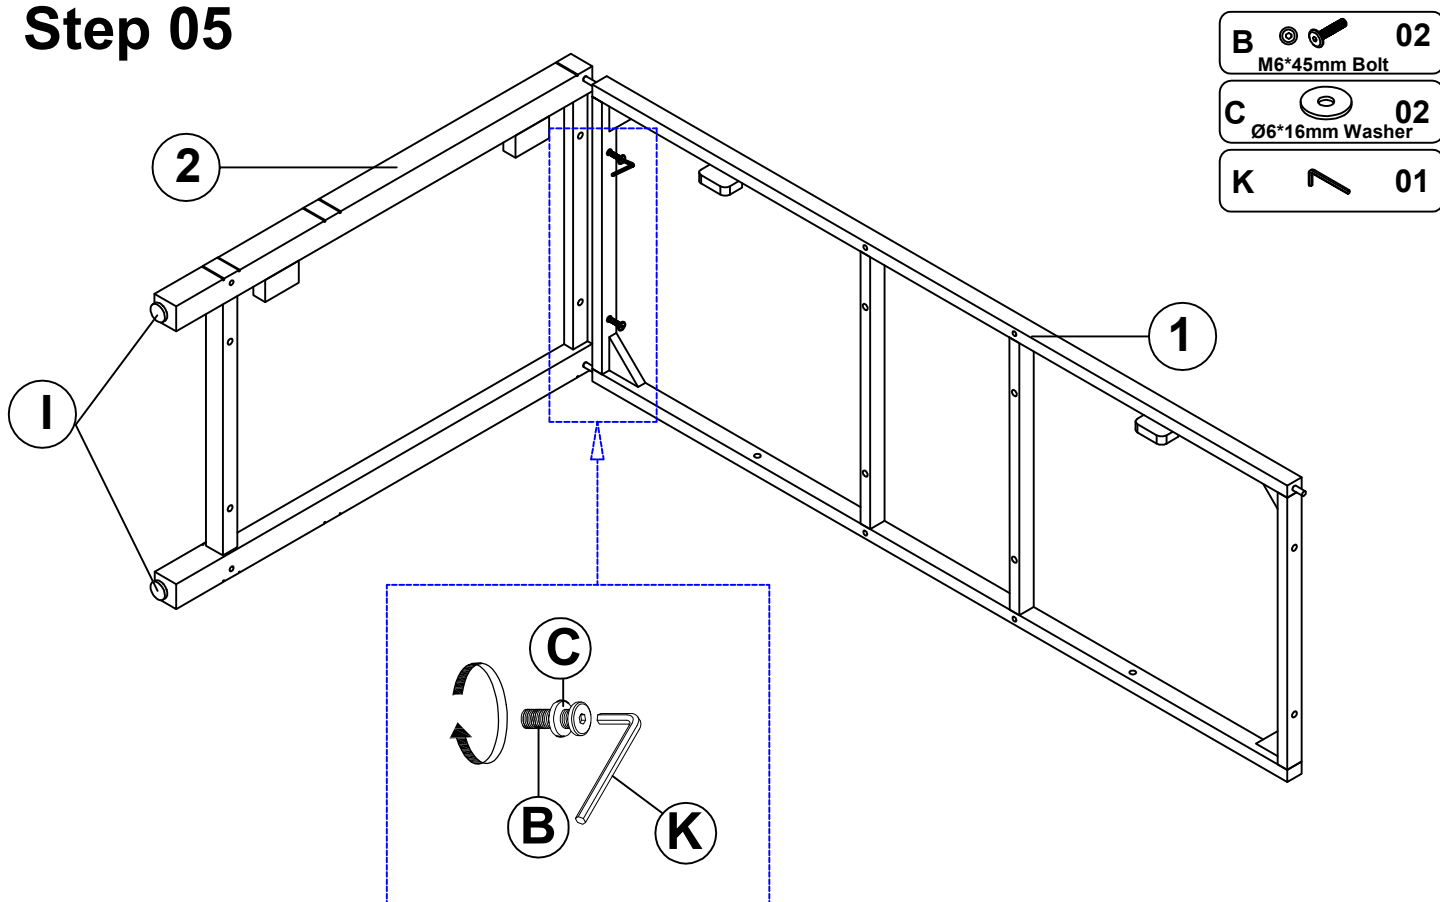


Note: Do not tighten bolts firmly at this time

Step 06

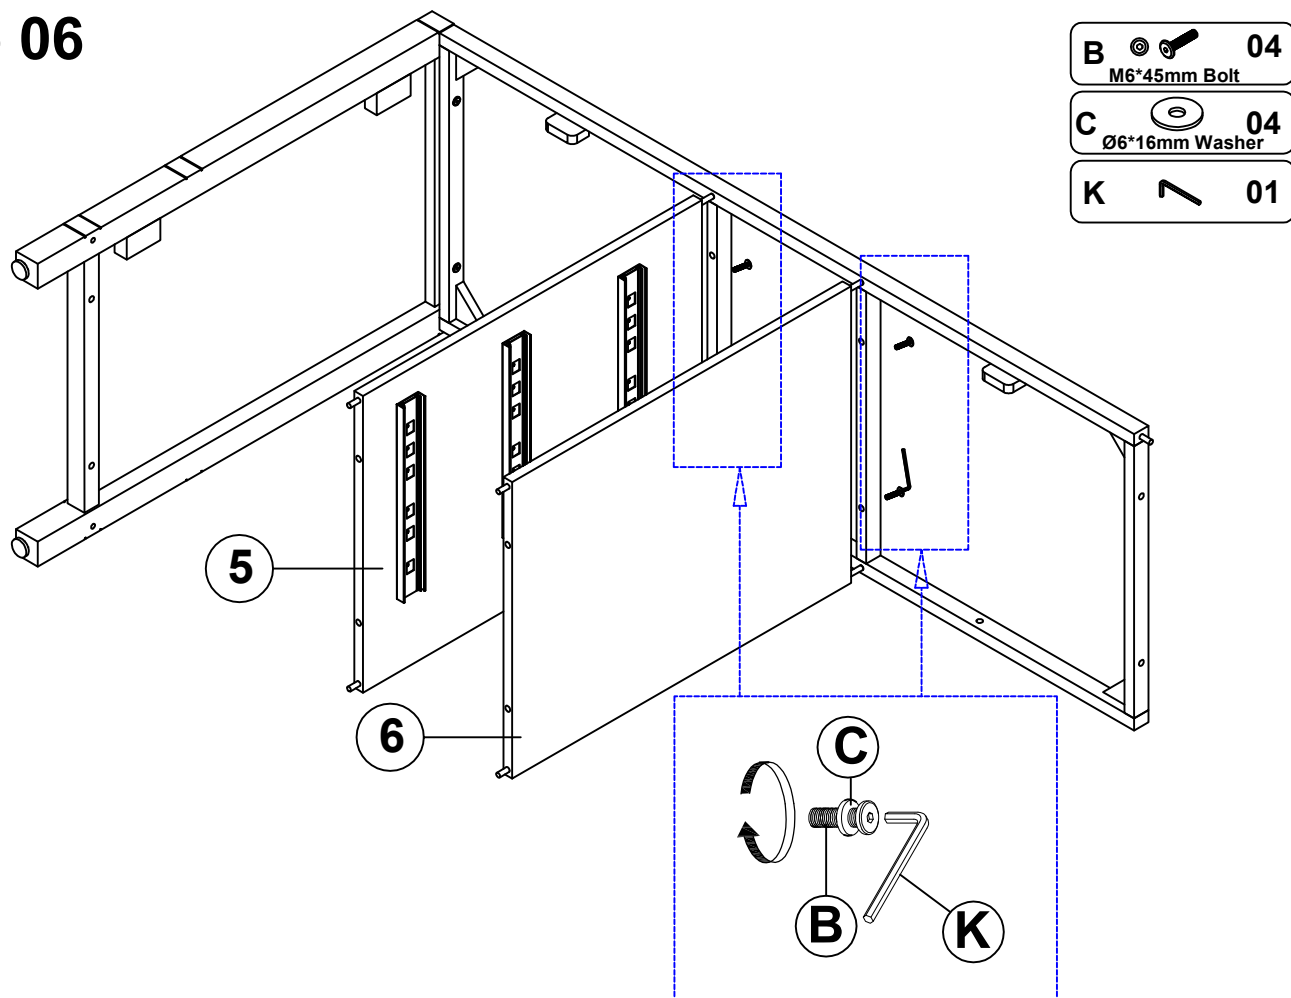


Step 07

B		07
M6*45mm Bolt		
C		06
Ø6*16mm Washer		
K		01

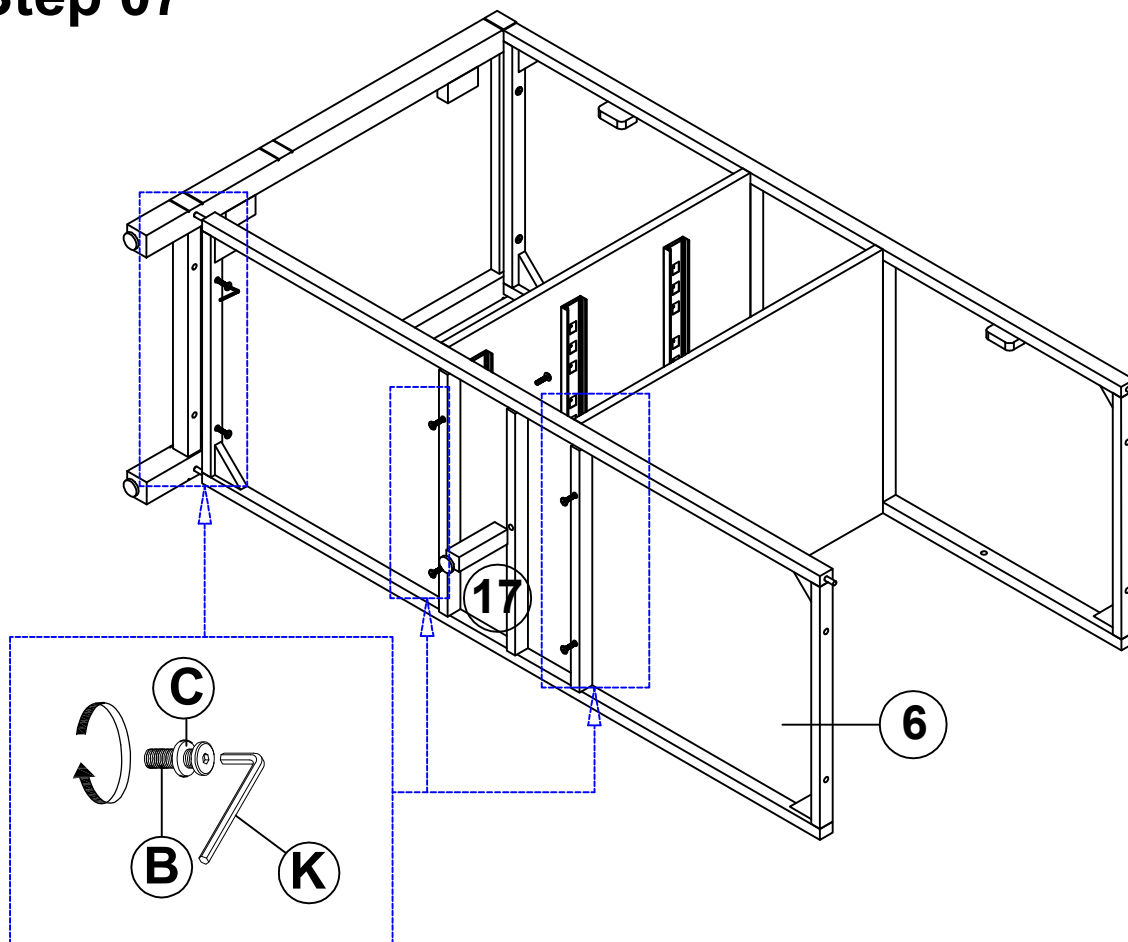

Step 08



B		04
M6*45mm Bolt		
C		04
Ø6*16mm Washer		
K		01

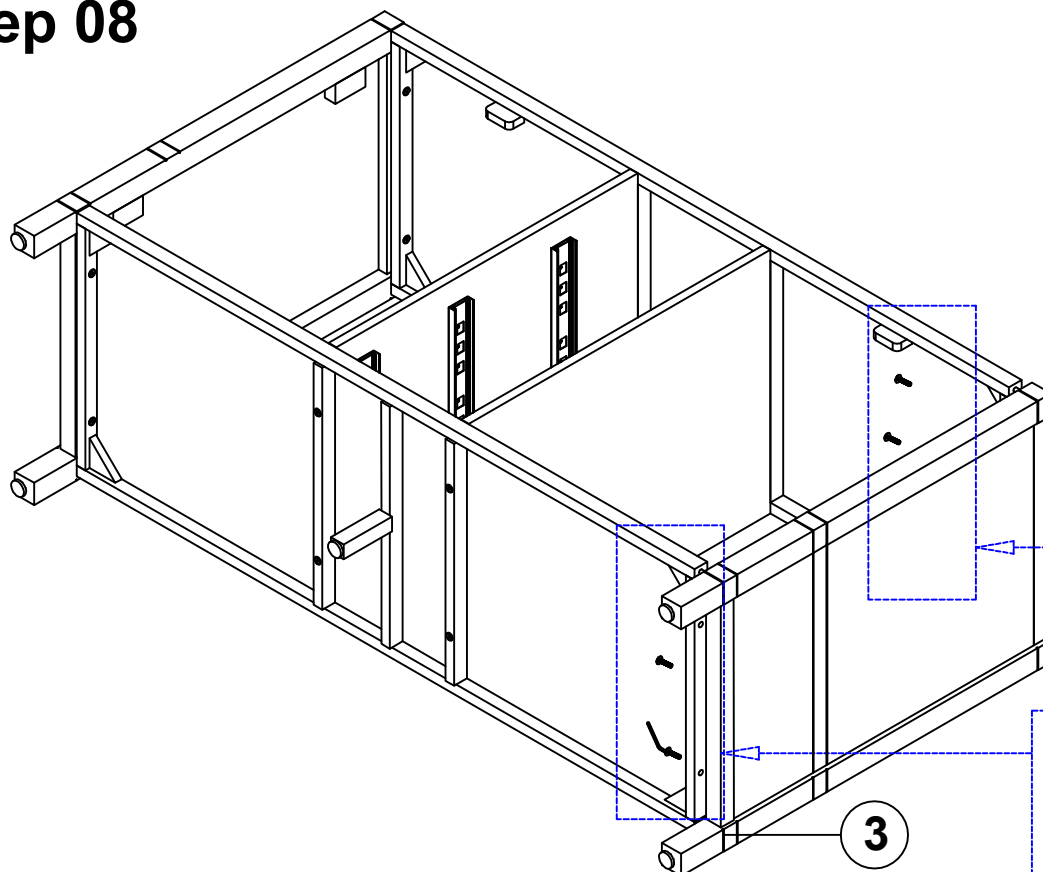

Note: Tighten all bolts at this time


Step 09

N		24
4*25mm Screw		
O		24
Ø6*20mm Wood Dowel		
		01

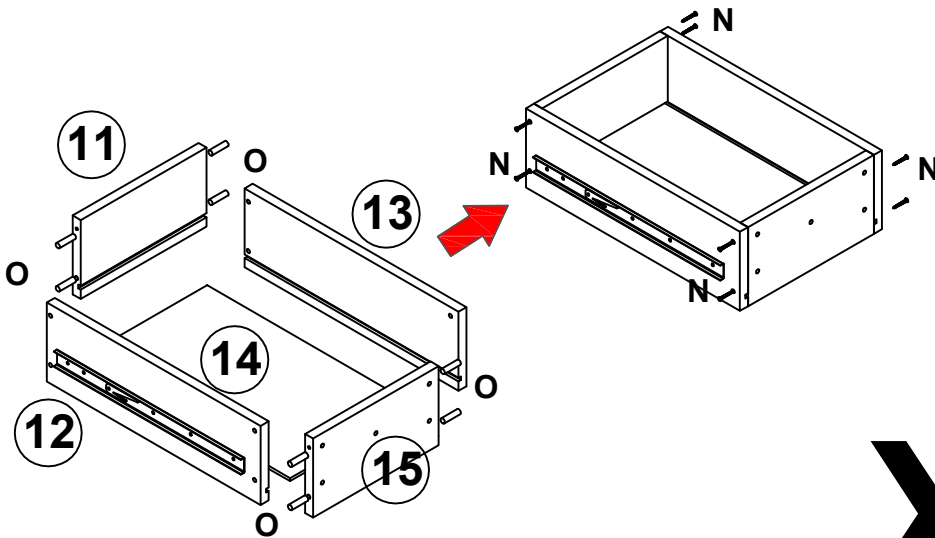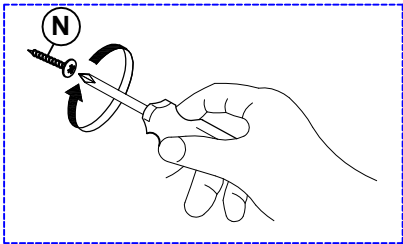


X3

Step 10


D		04
Hinge-1		
F		08
3.5*15mm Screw		
G		02
H		02
4*25mm Screw		
		01

Hinge1

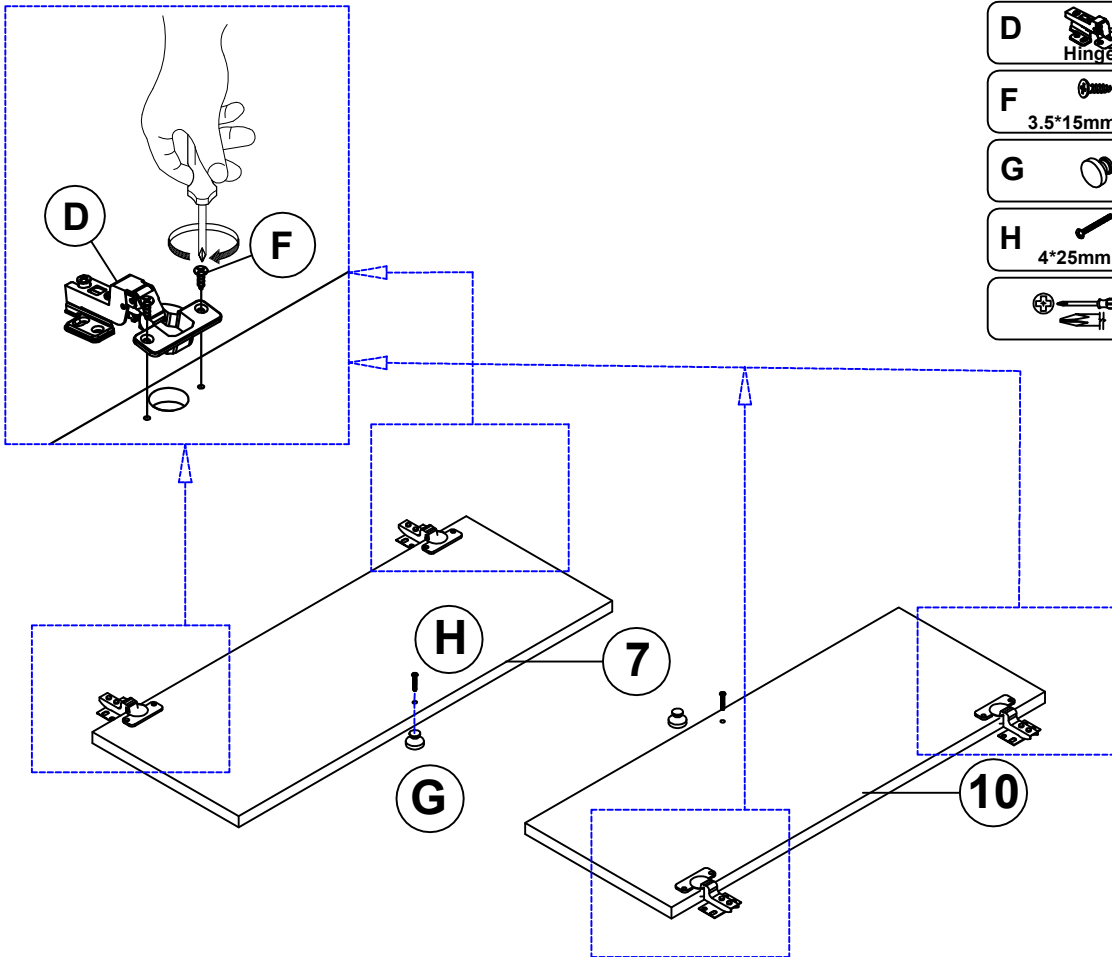


Step 11

Hinge2

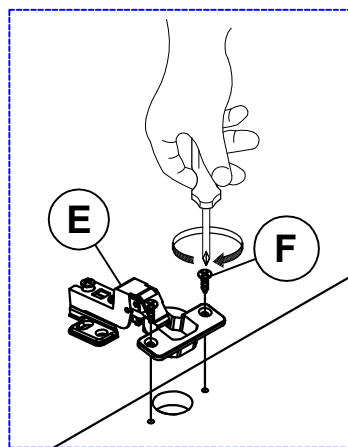

E		04
F		08
G		02
H		02
		01

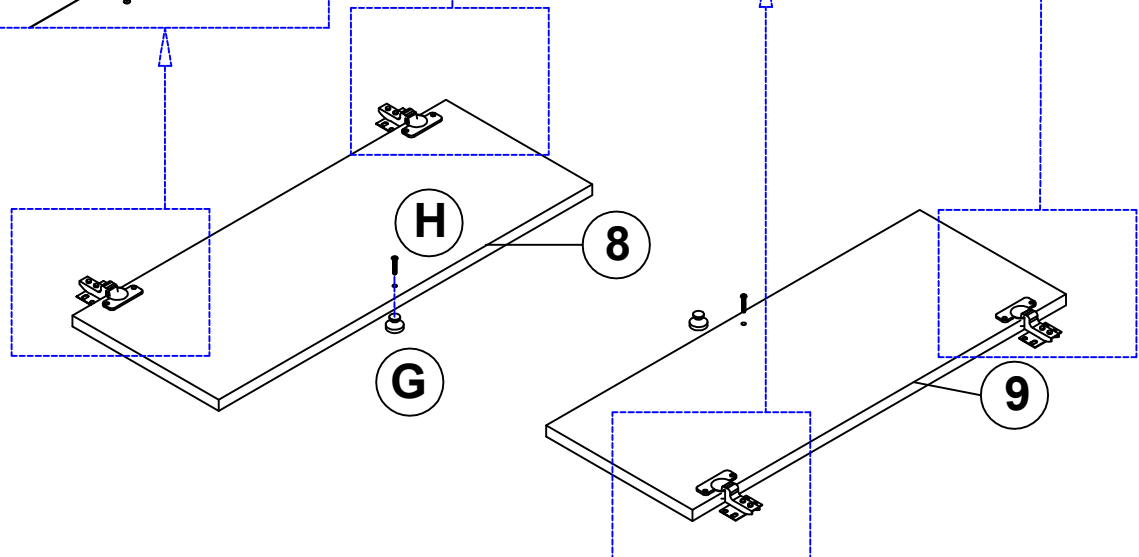

Step 12



Hinge1

Hinge2


Hinge2

Hinge1




F		48
		01

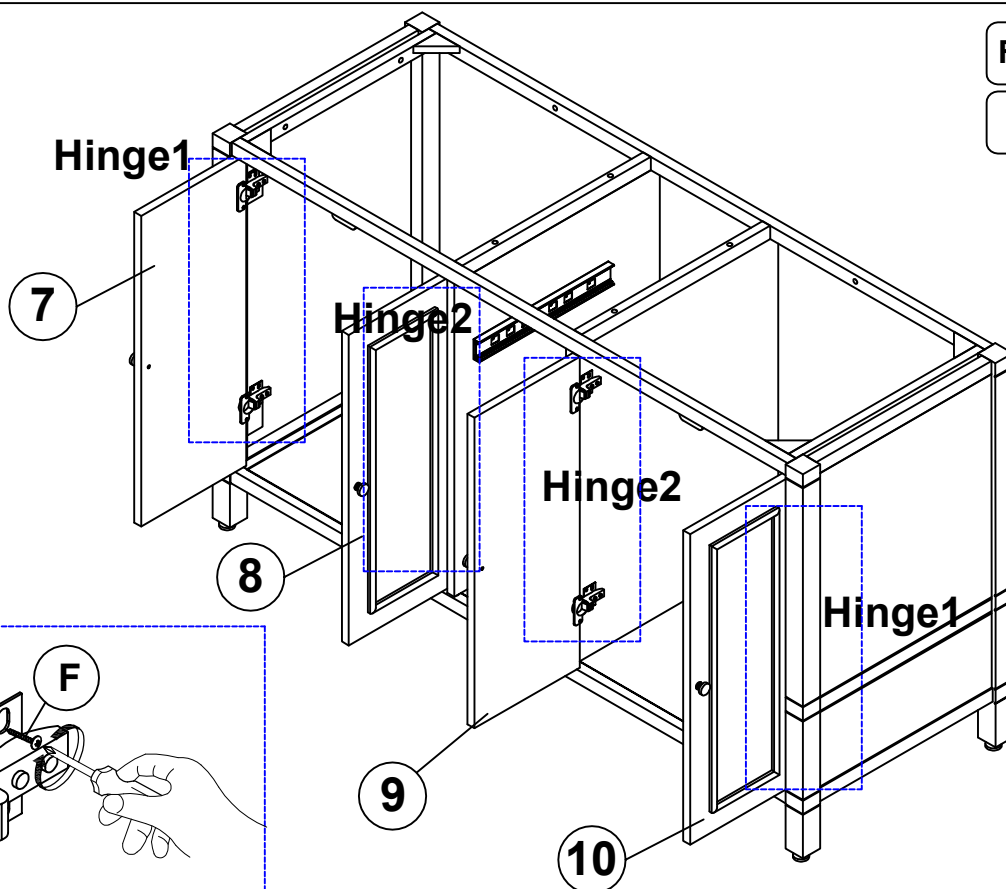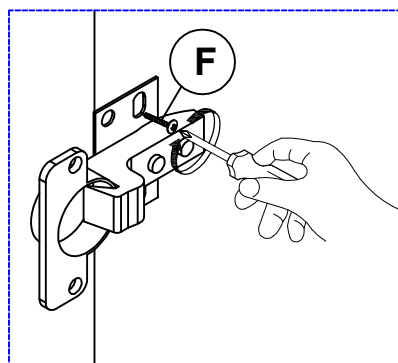

Step 13

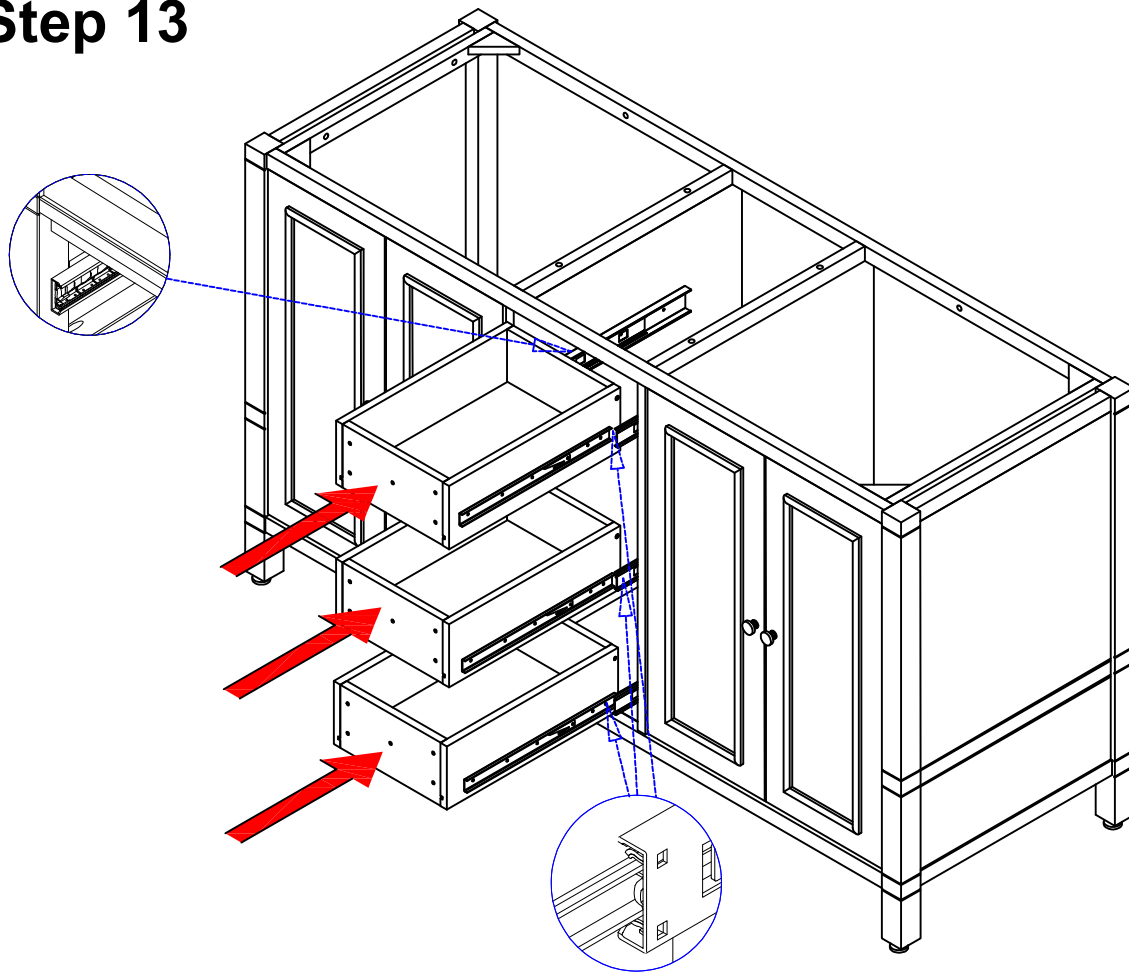

Step 14

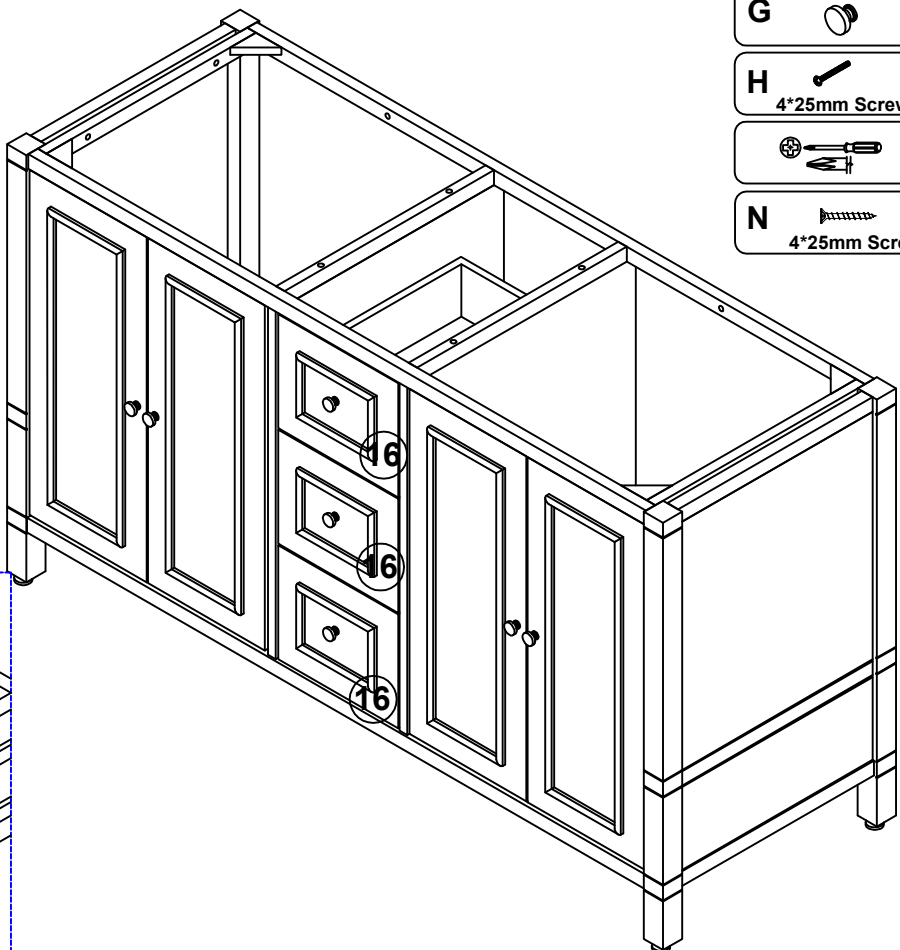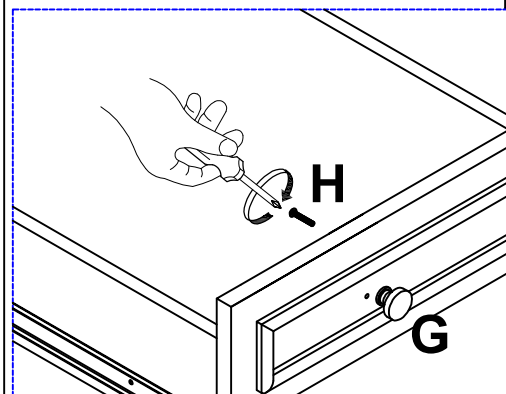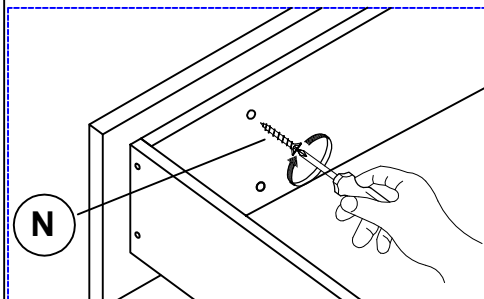

G		03
H		03
4*25mm Screw		
		01
N		12
4*25mm Screw		

Step 15

J 4*50mm Screw 02

01

- . Mark the location of the Studs in the wall on the stretcher rail.
- . Drill a 1/16" thru hole in the center of the Stretcher Rail at the location of the studs in the wall.
- . Secure the Vanity to the wall using screws (J)
Make sure the screws align with the wall.

