

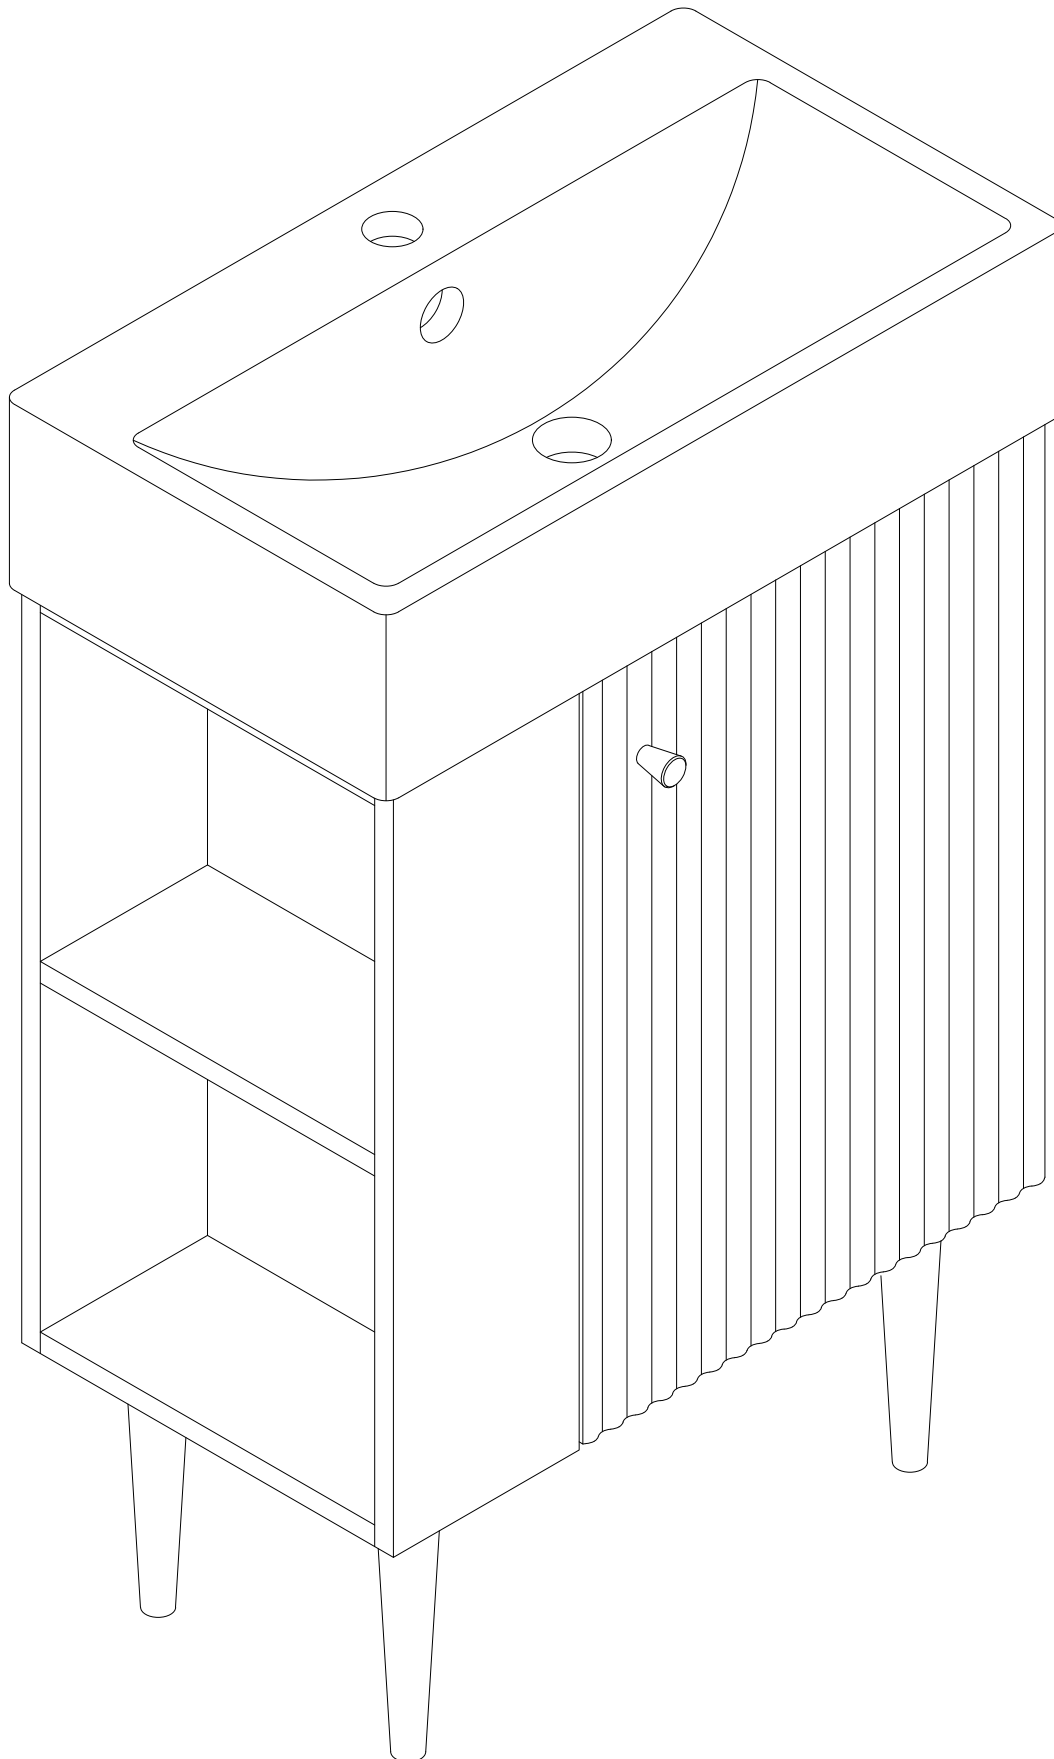
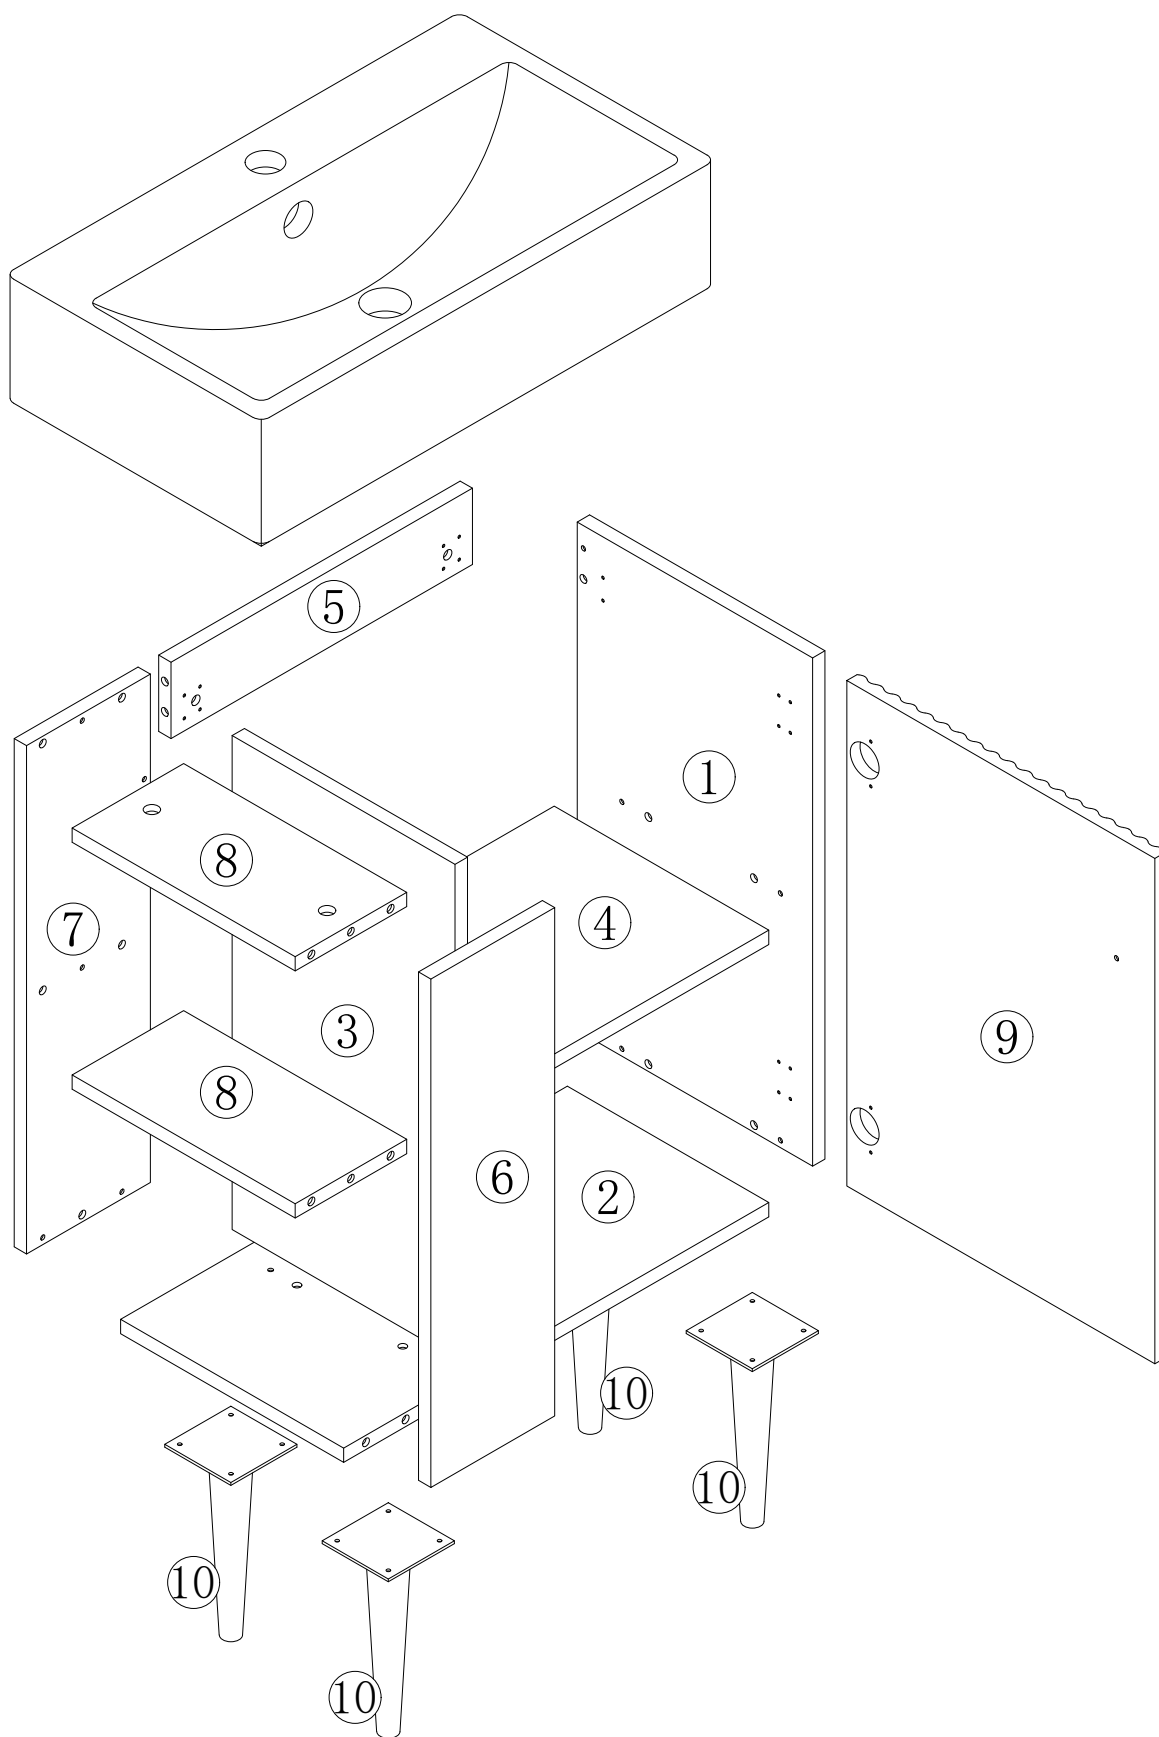
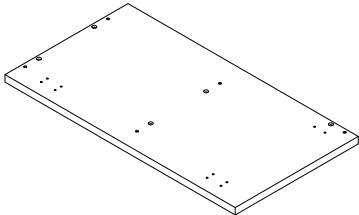
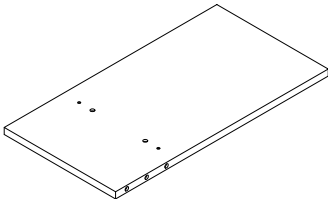
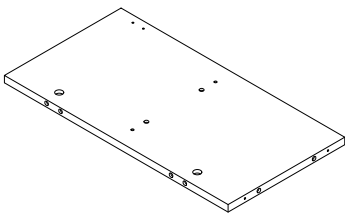
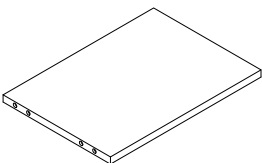
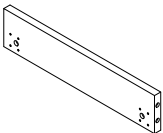
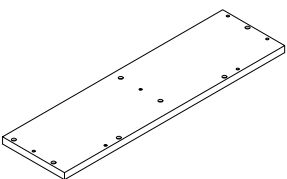
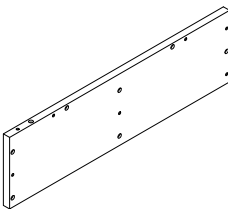

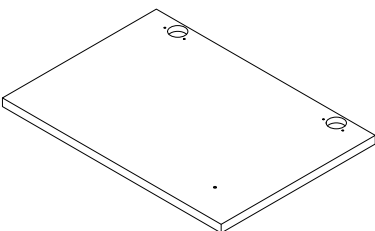


ASSEMBLY INSTRUCTION


N729P170381











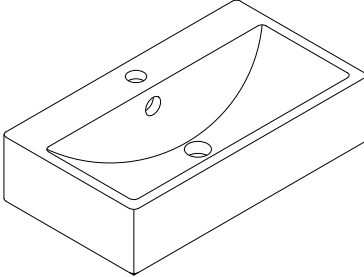


			
① x1	② x1	③ x1	④ x1
			
⑤ x1	⑥ x1	⑦ x1	⑧ x2
			
⑨ x1	⑩ x4		









TOOLS

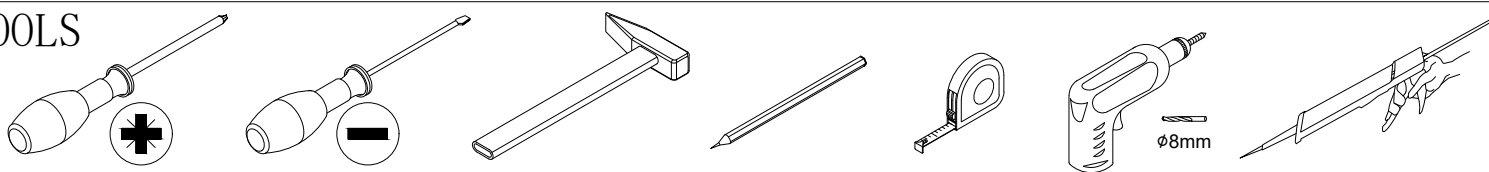

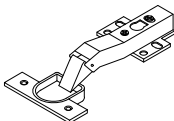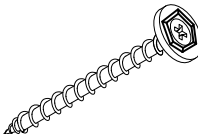
A * 16	B * 16	C * 24	D * 12	E * 28
				
M6 X 35mm	Ø15 x 12mm	Ø8 x 30mm	M4 x 14mm	M4 x 12mm
F * 6	G * 1	H * 1	I * 2	J * 2
				
M5 x 40mm	M4 x 20mm			Ø35
K * 2	L * 2	M * 2	N * 4	
				
Ø8 x 40mm	Ø20	M6 x 60mm		




Step 1

A * 16	E * 4	J * 2
		
M6 X 35mm	M4 x 12mm	Ø35

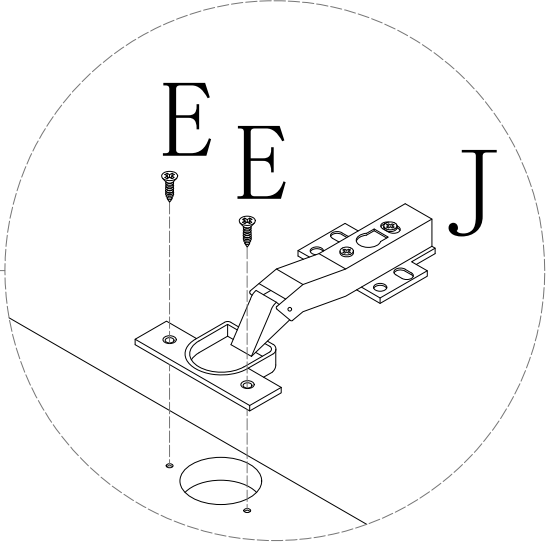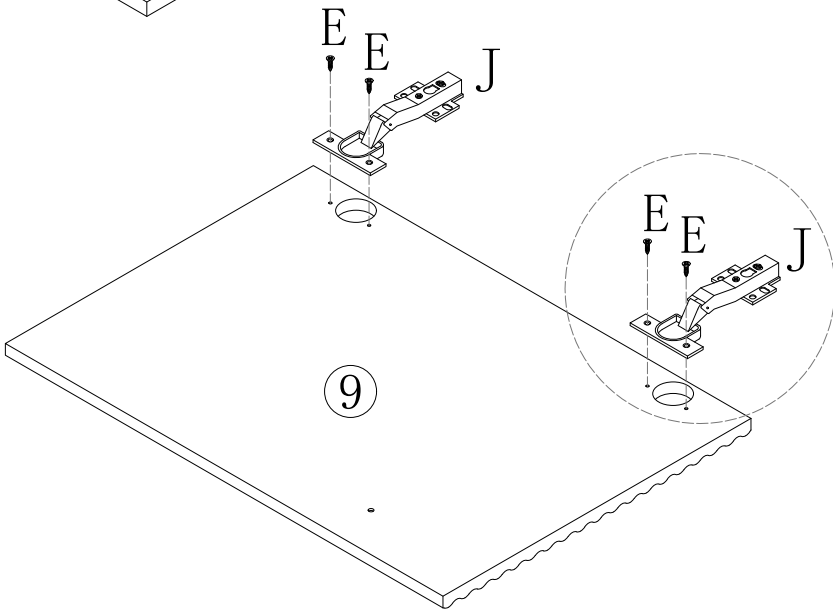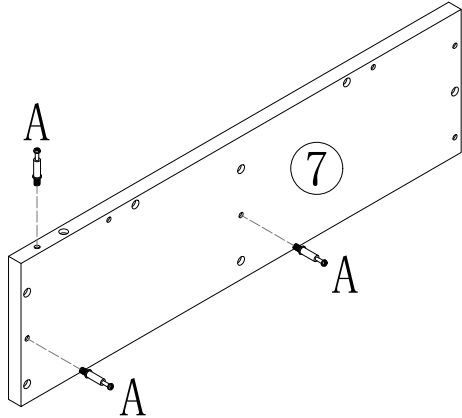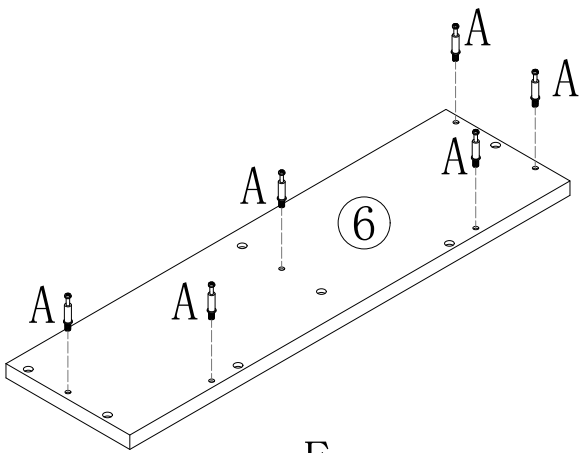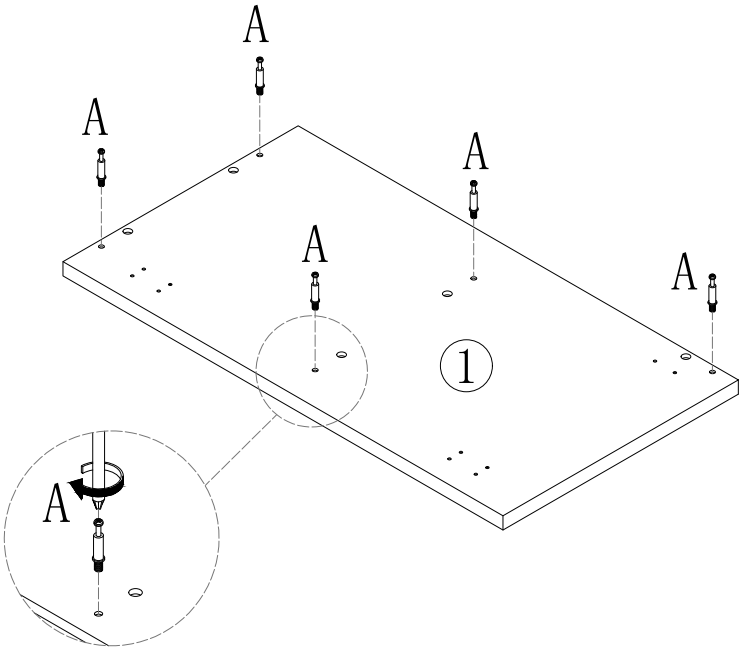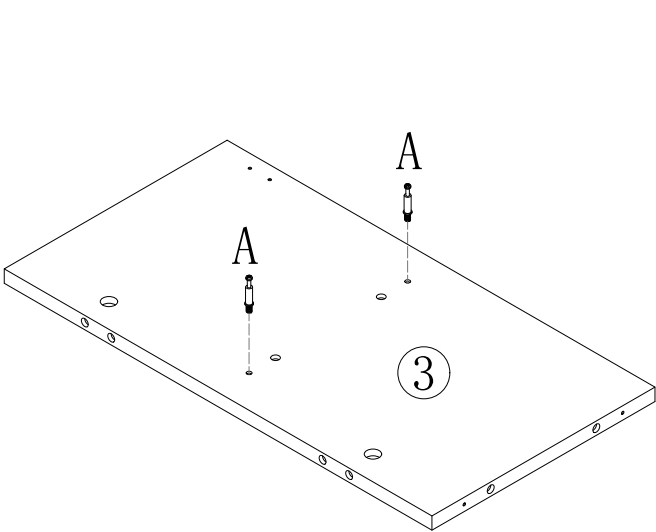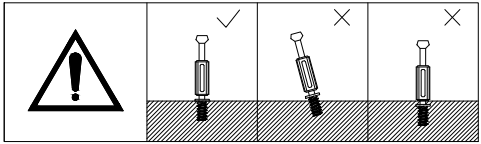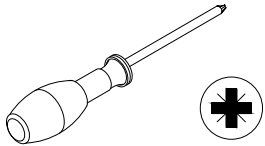







Step 2



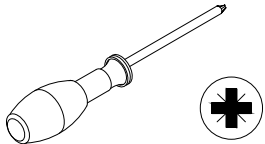
C * 5	F * 6	
 Ø8 X 30mm	 M5 X 40mm	

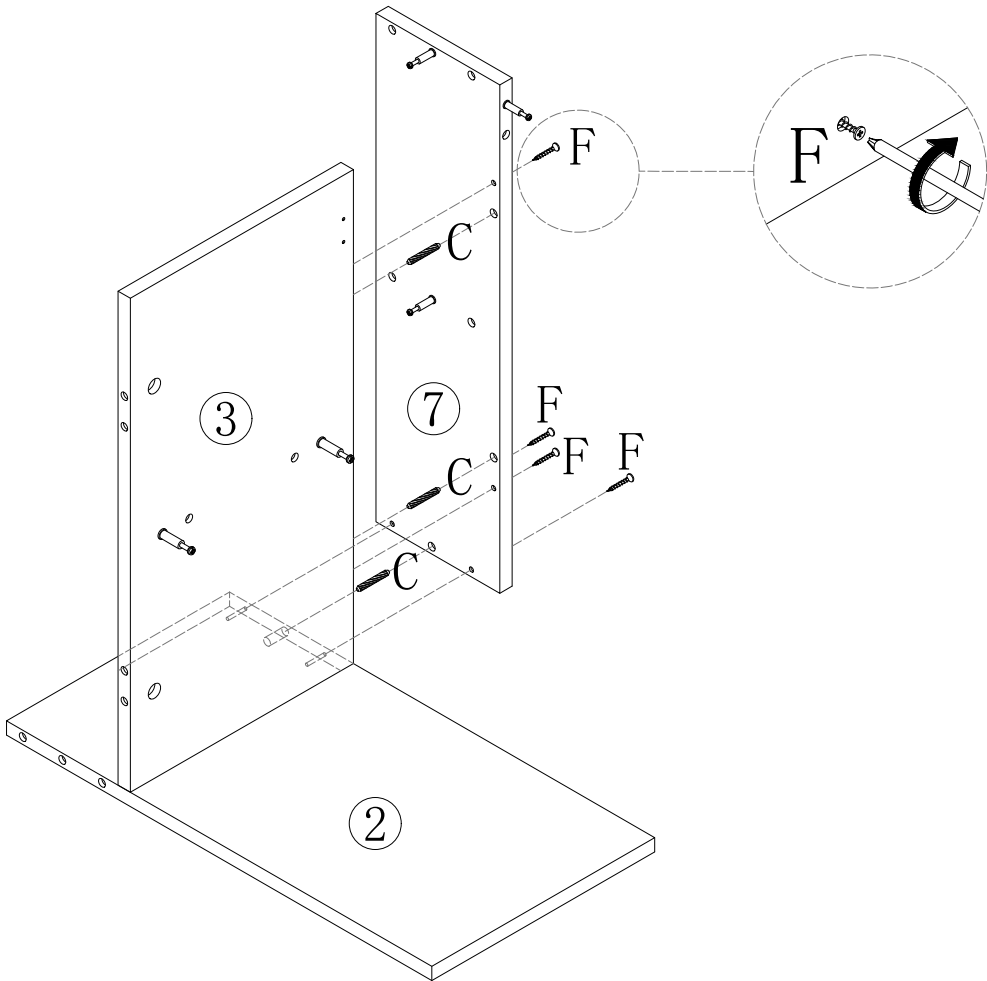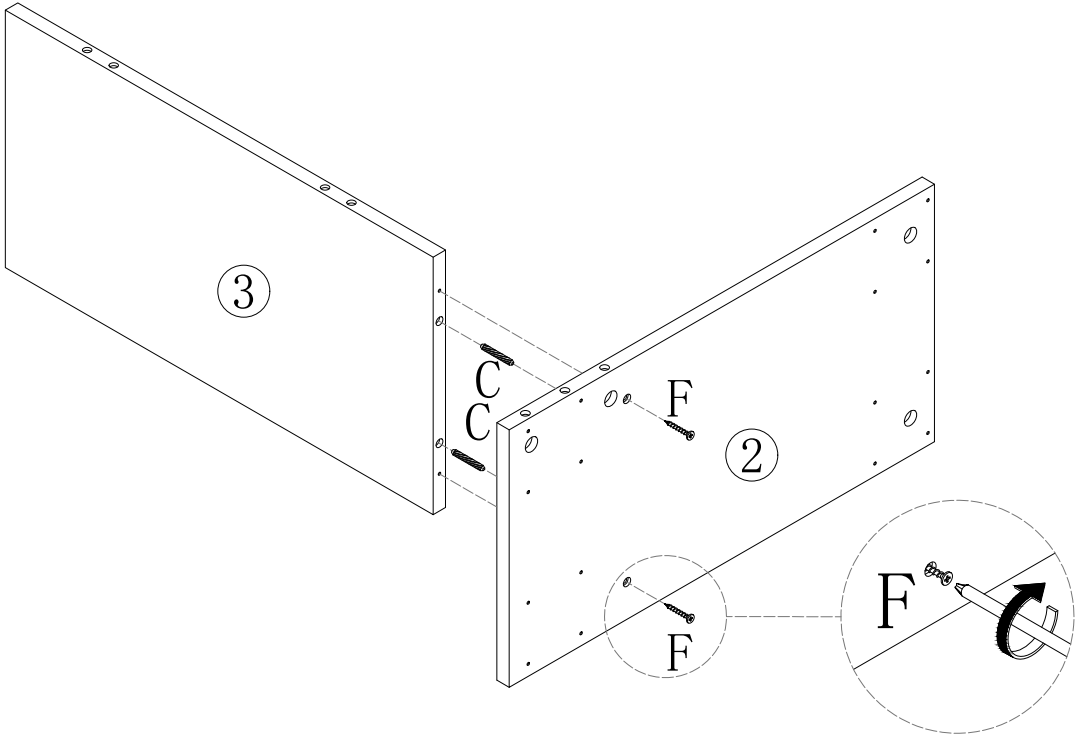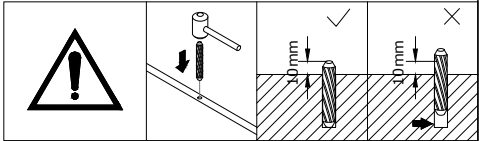


Step 3

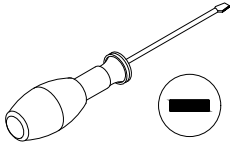B * 2	C * 4	
 Ø15 x 12mm	 Ø8 x 30mm	


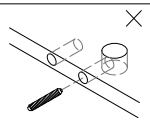
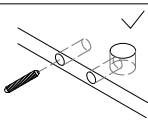




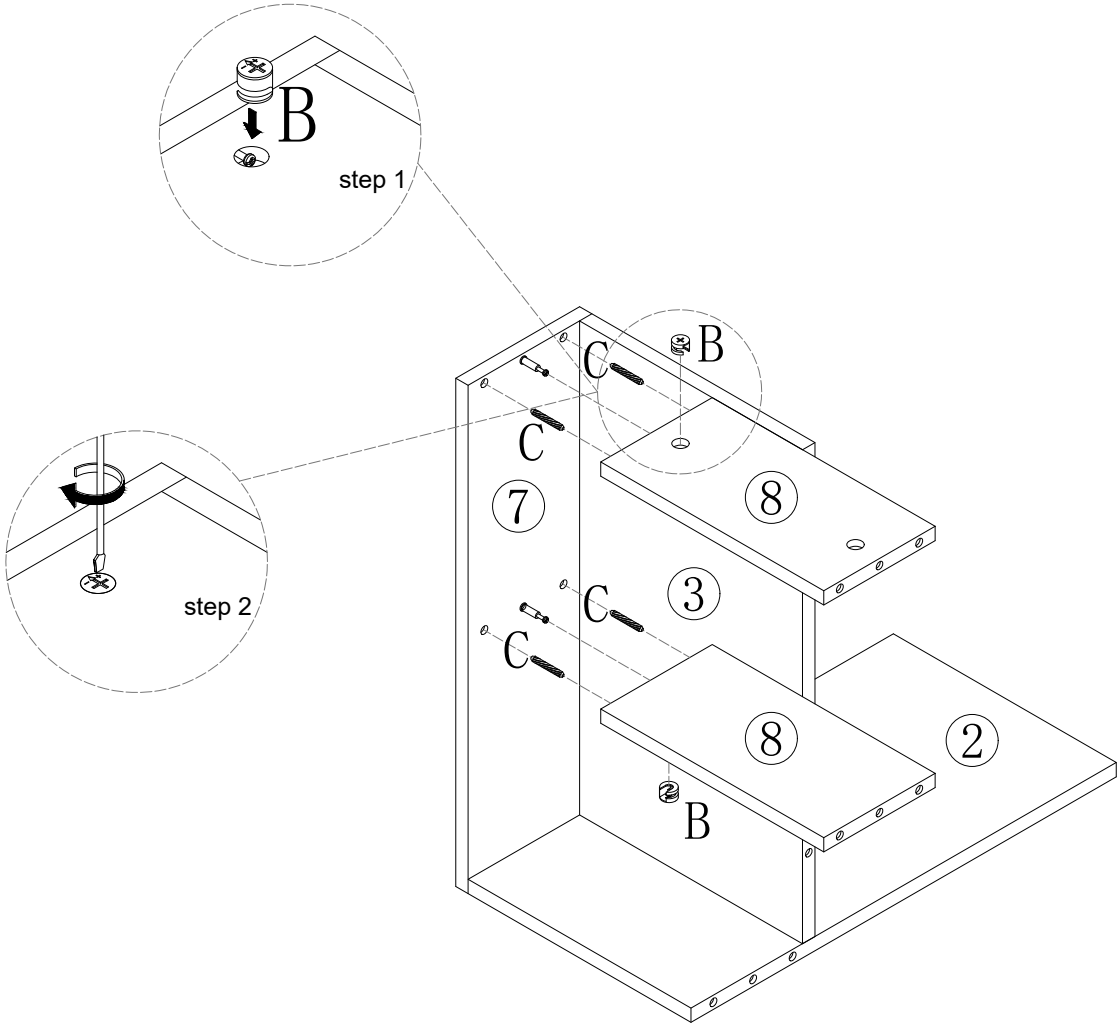








Step 4


B * 6	C * 7
 Ø15 x 12mm	 Ø8 x 30mm

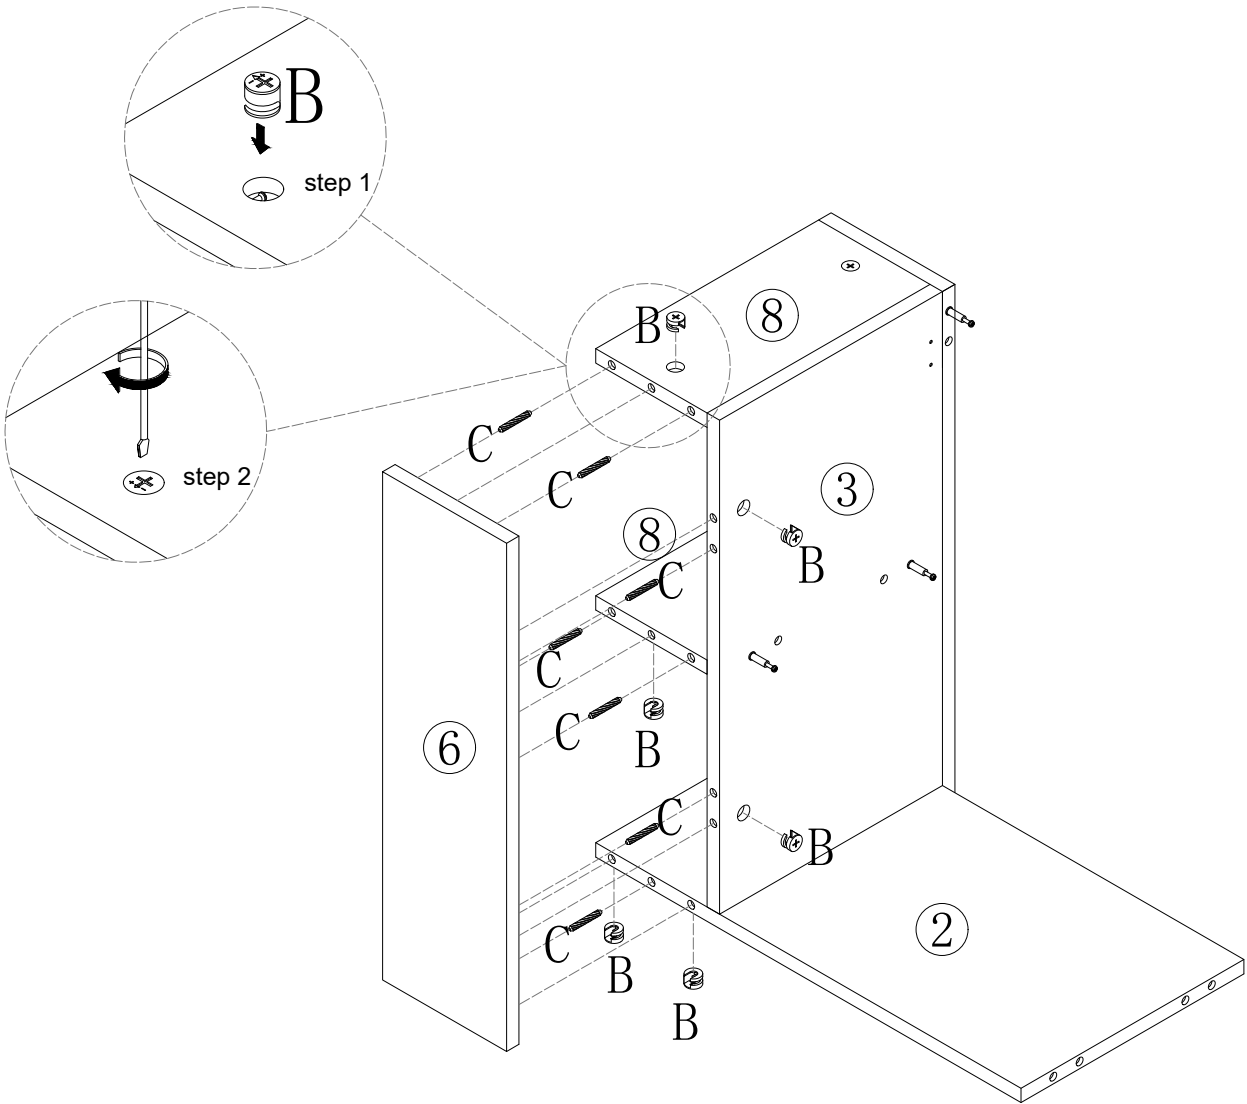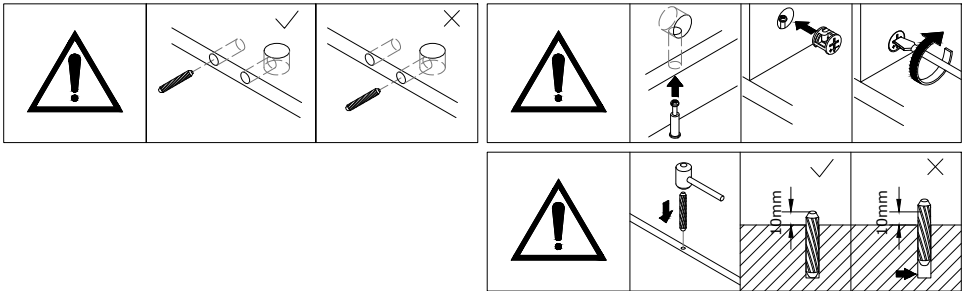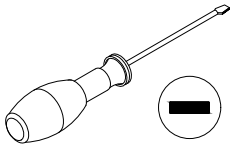


Step 5



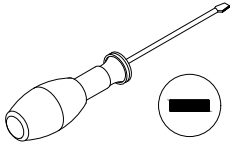
B * 3	C * 3	
 Ø15 x 12mm	 Ø8 x 30mm	

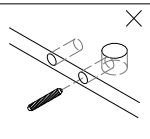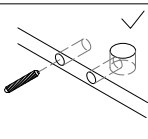


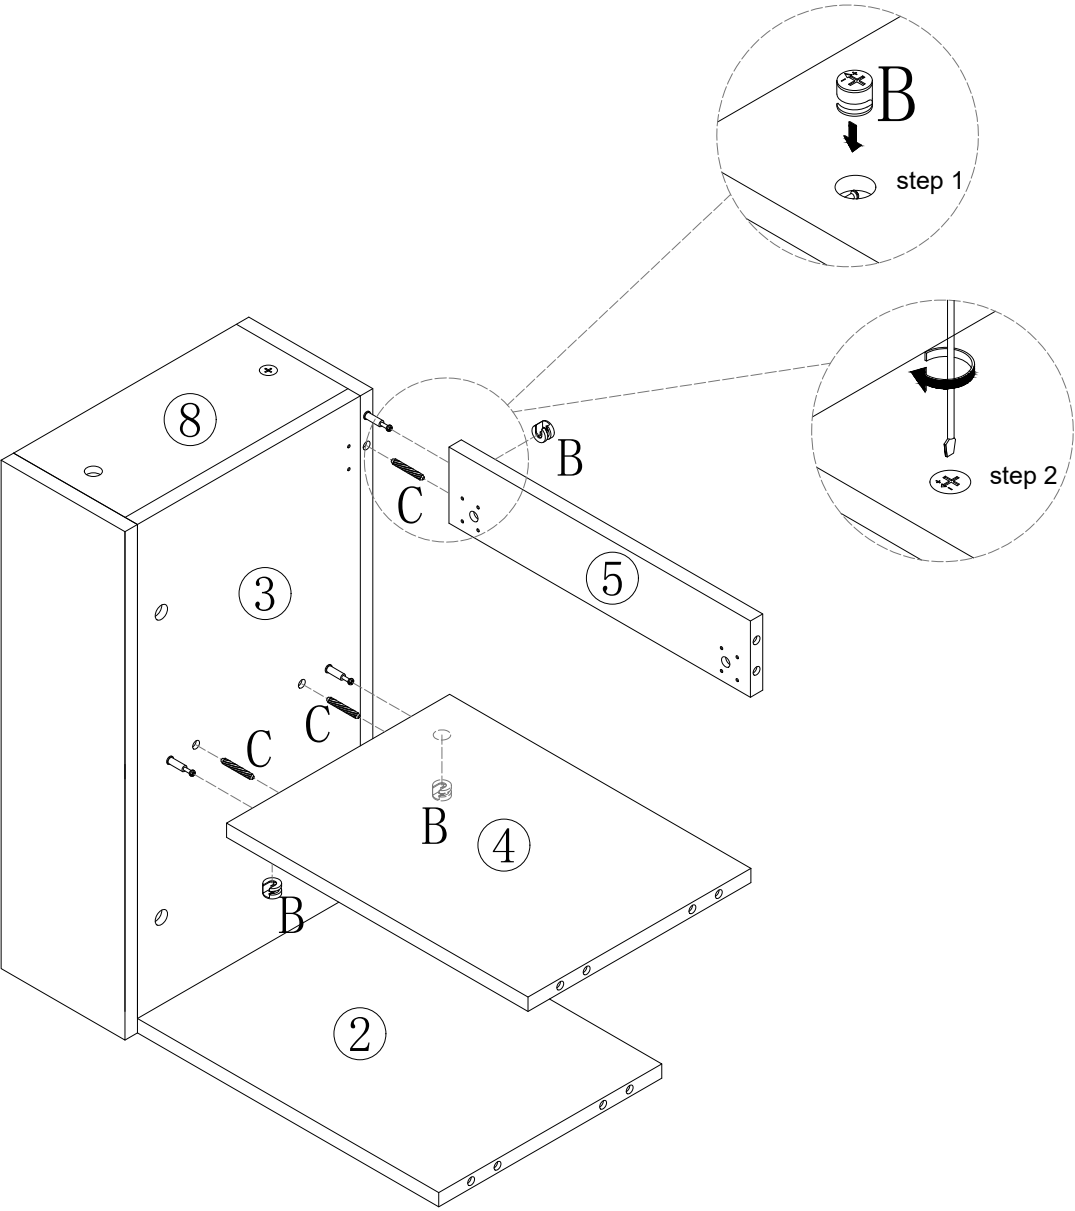


Step 6

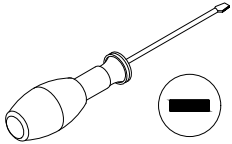
B * 5	C * 5	
 Ø15 x 12mm	 Ø8 x 30mm	

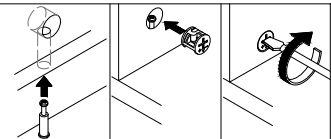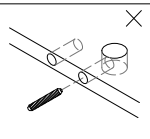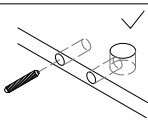


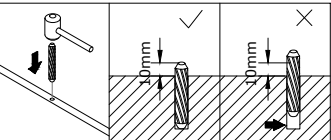

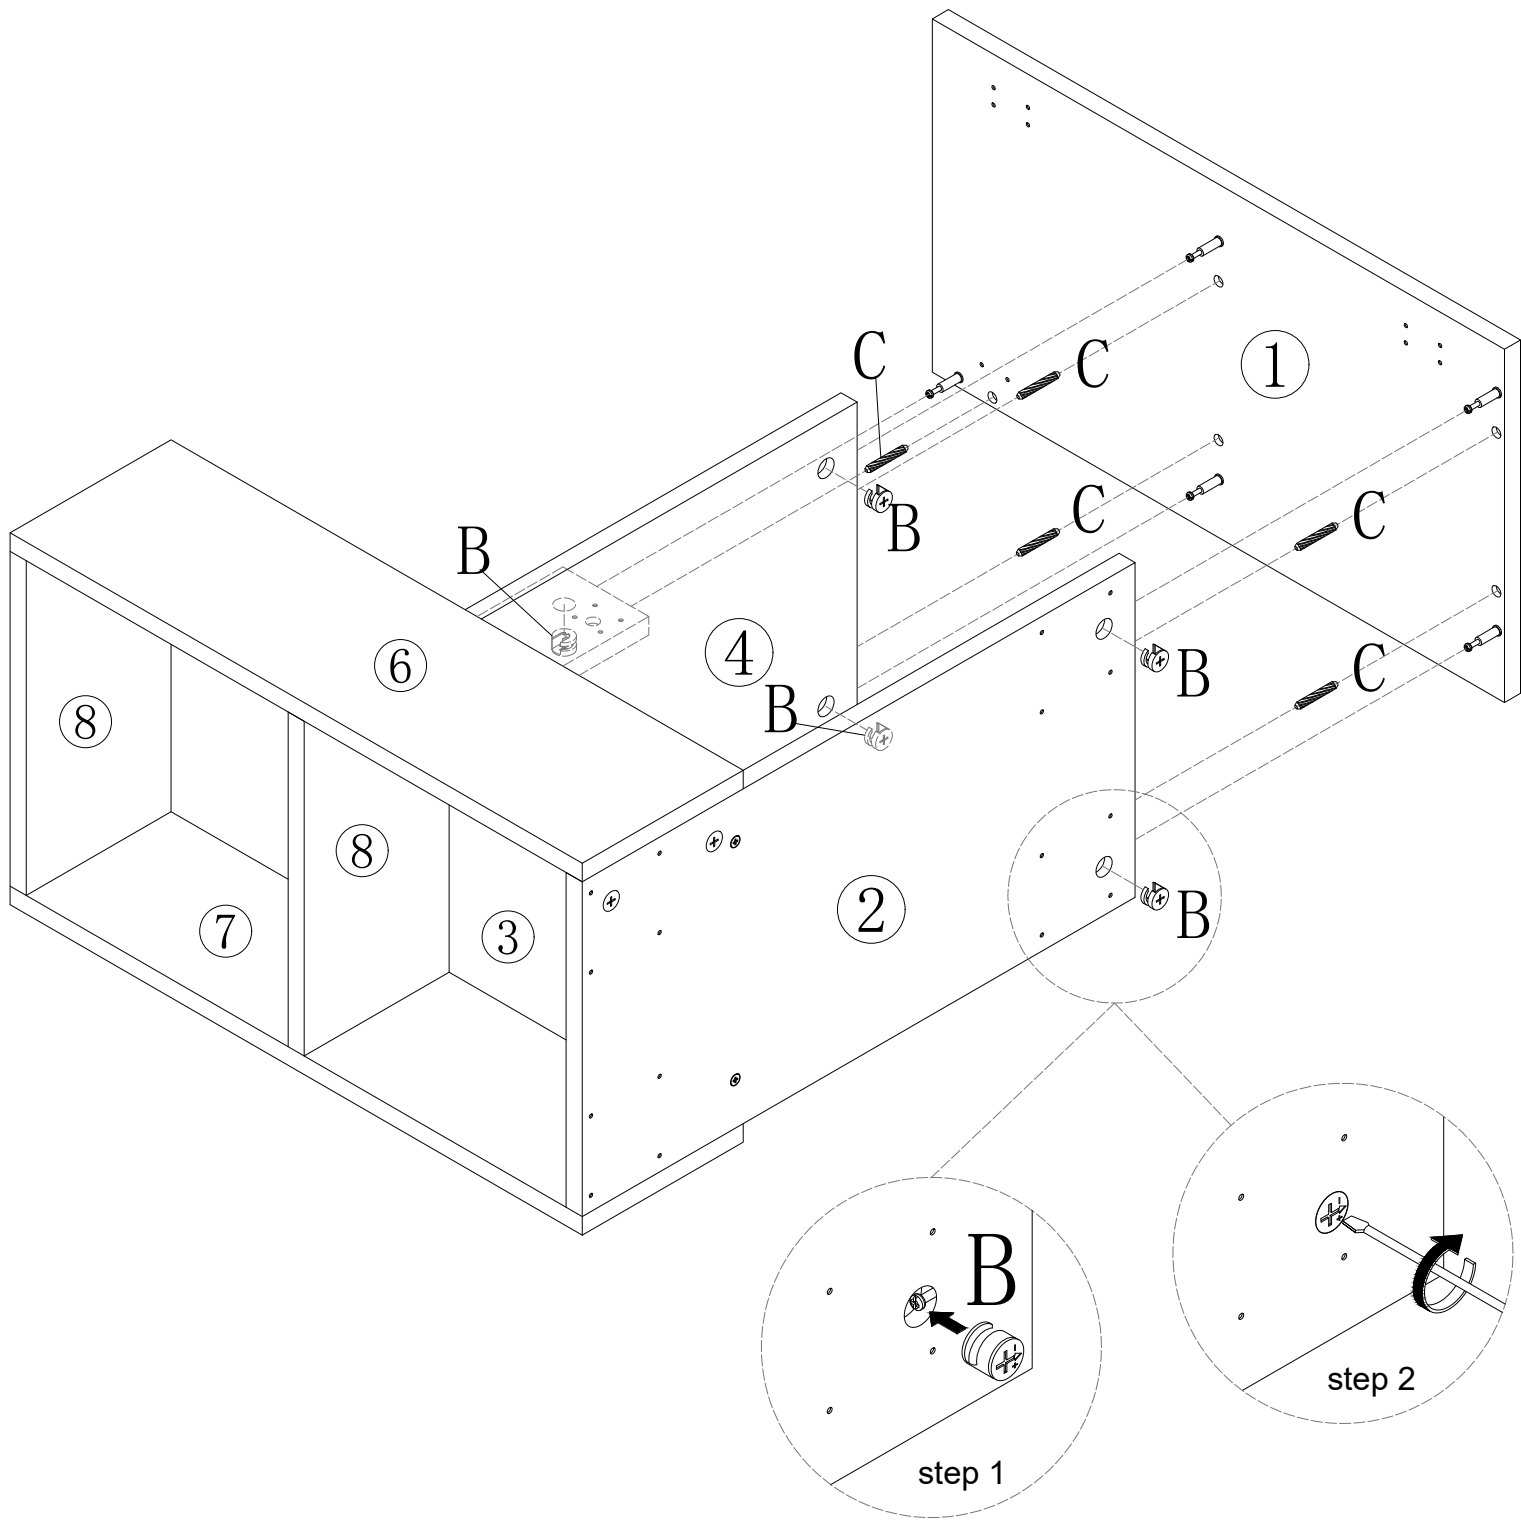



Step 7

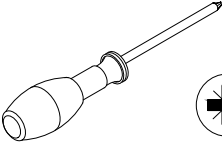E * 16	 
 M4 x 12mm	


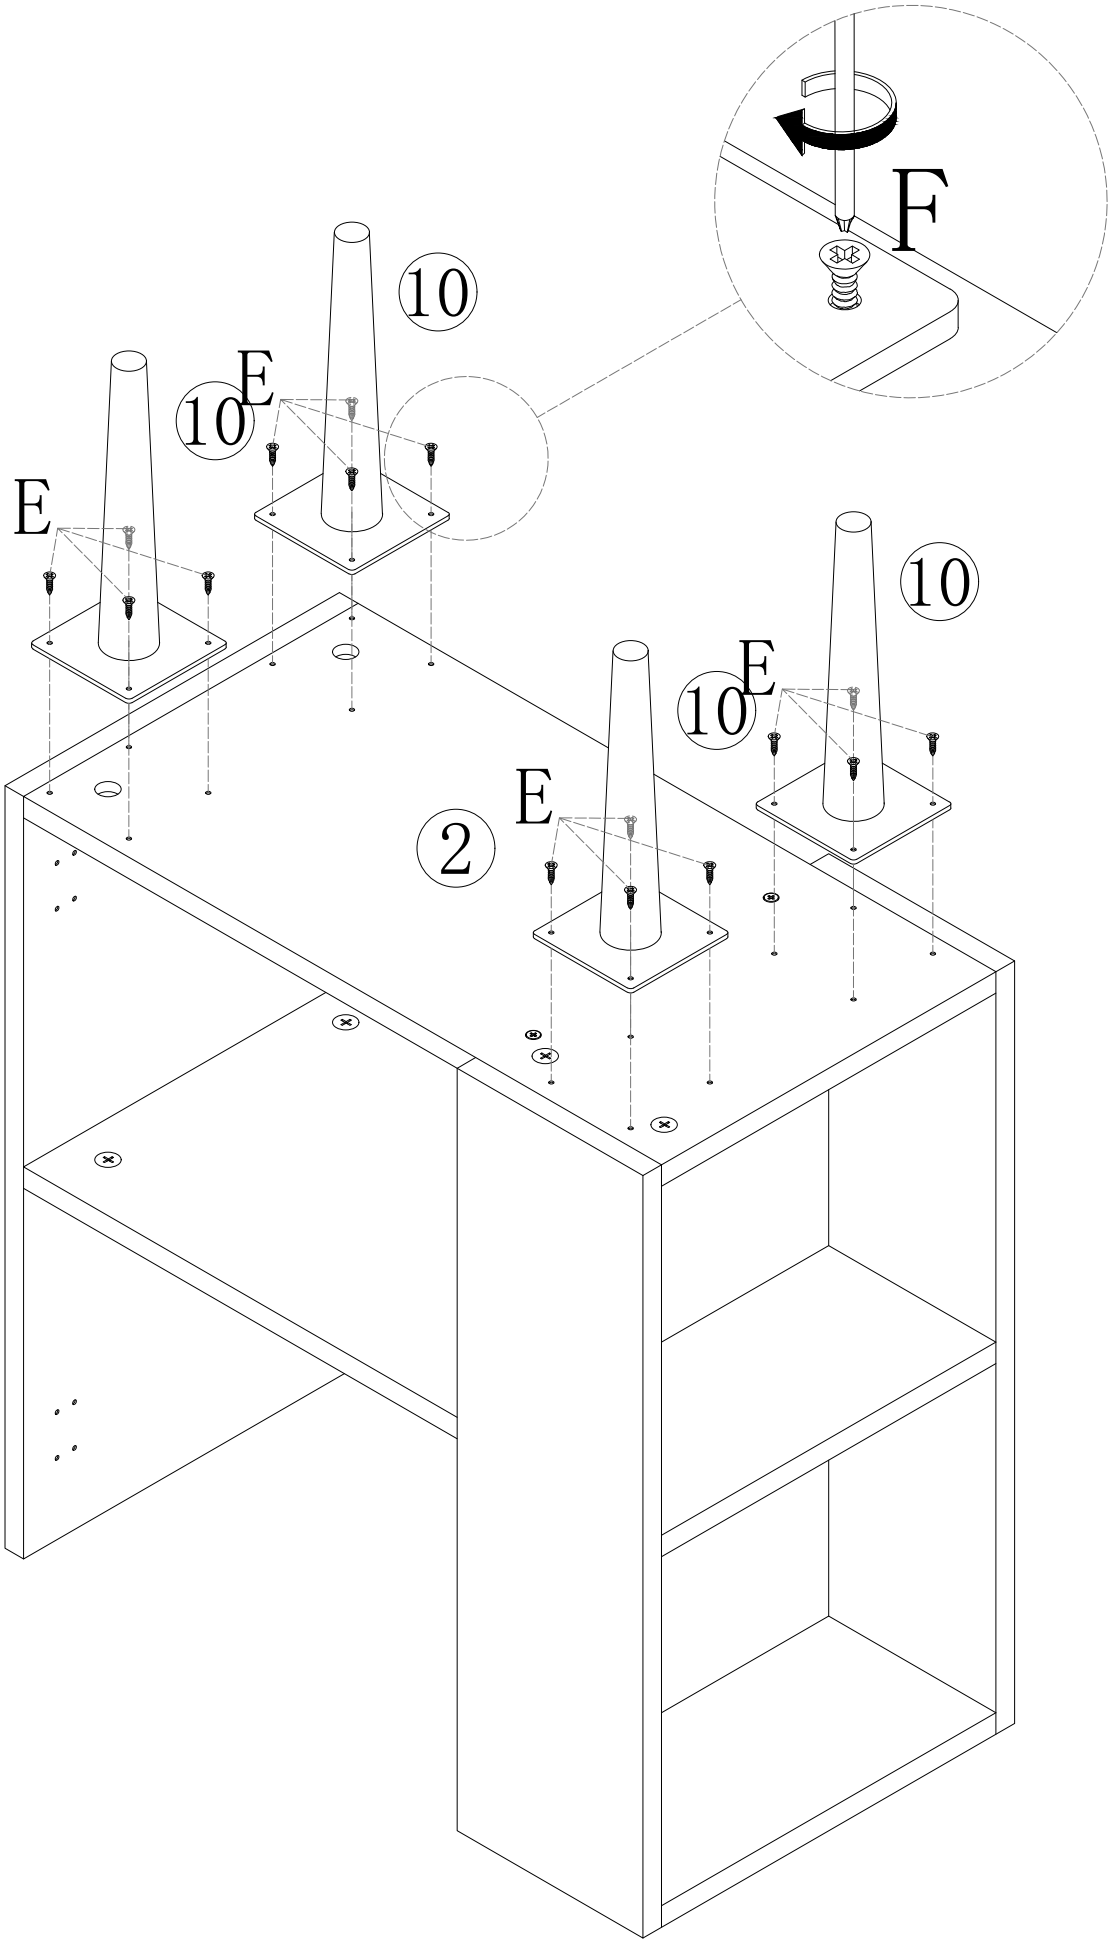


Step 8

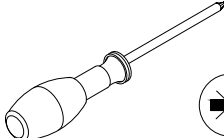
D * 12	I * 2	 
 M4 x 14mm		

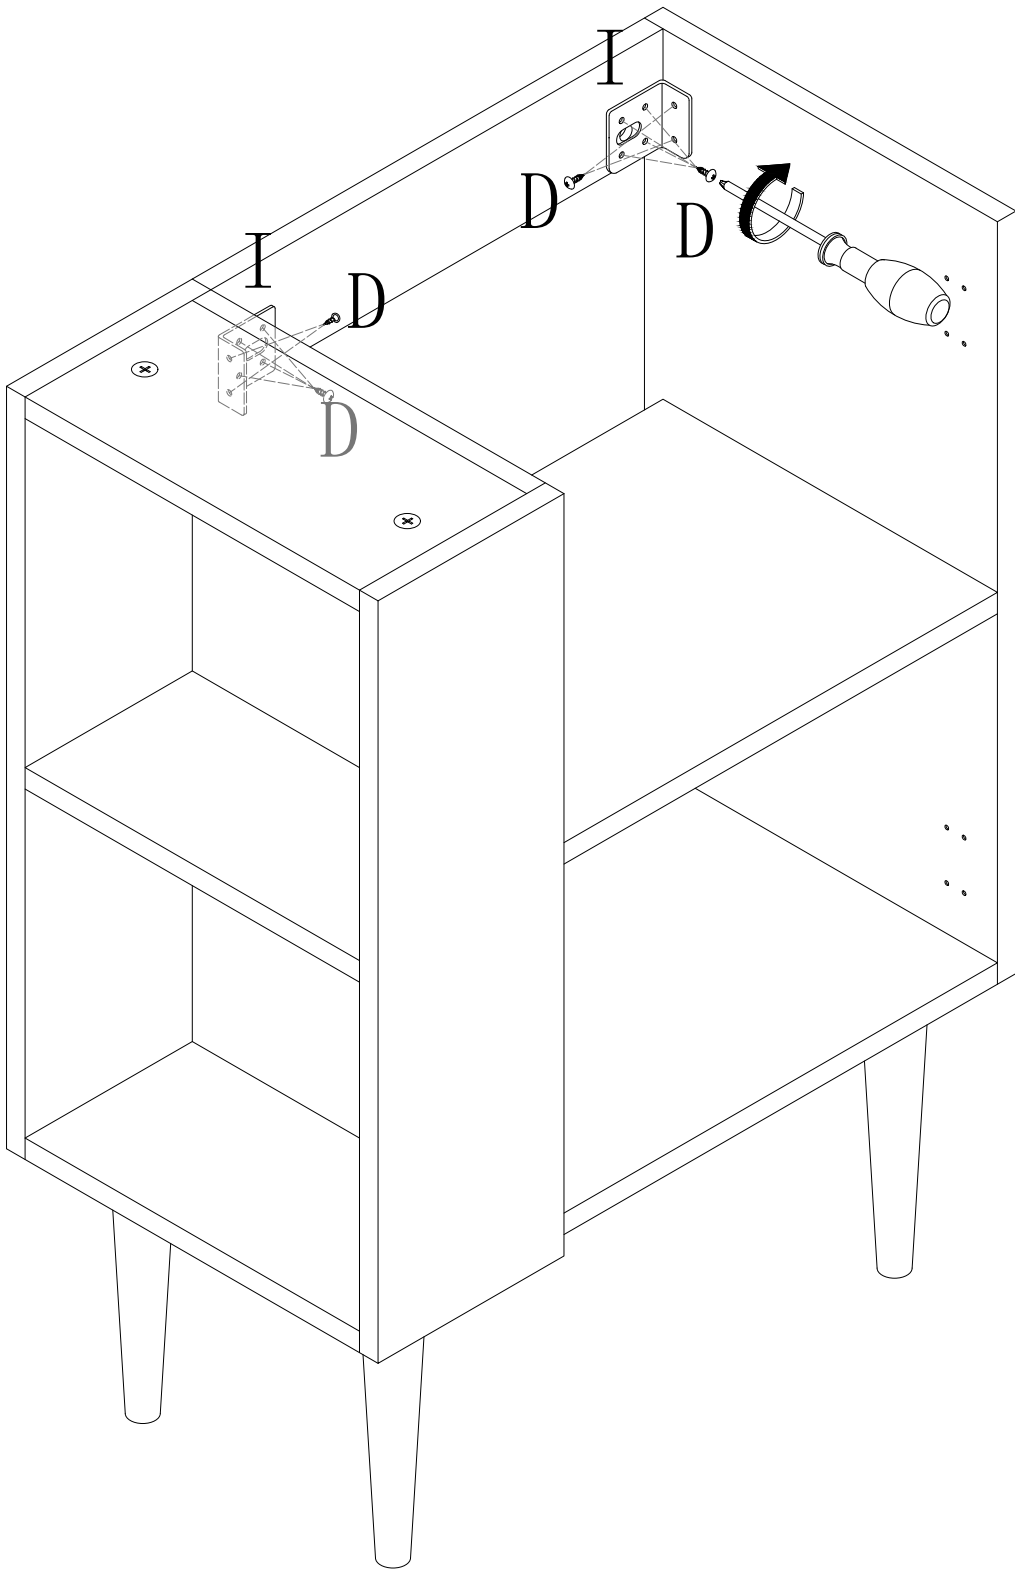

Step 9



Wall

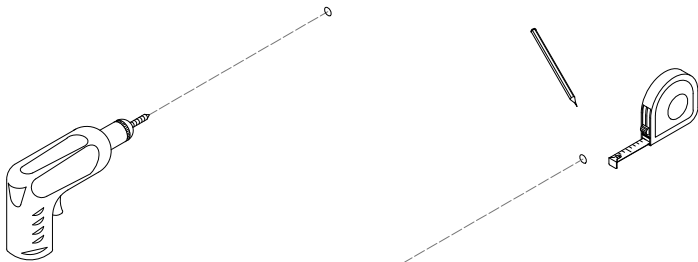


Please mark the location on the wall with a pencil, then punch the hole


Setp 10

K * 2


Ø8 x 40mm

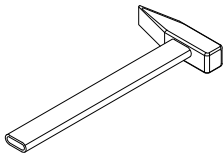



Wall

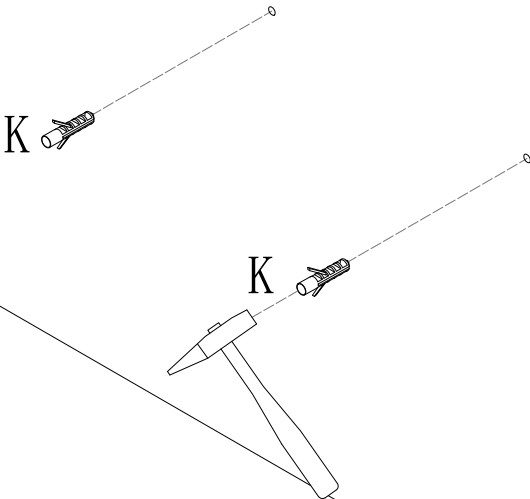


Step 11

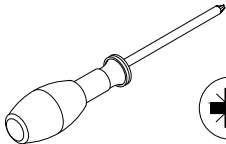L * 2	M * 2	 
 Ø20	 M6 x 60mm	


Wall

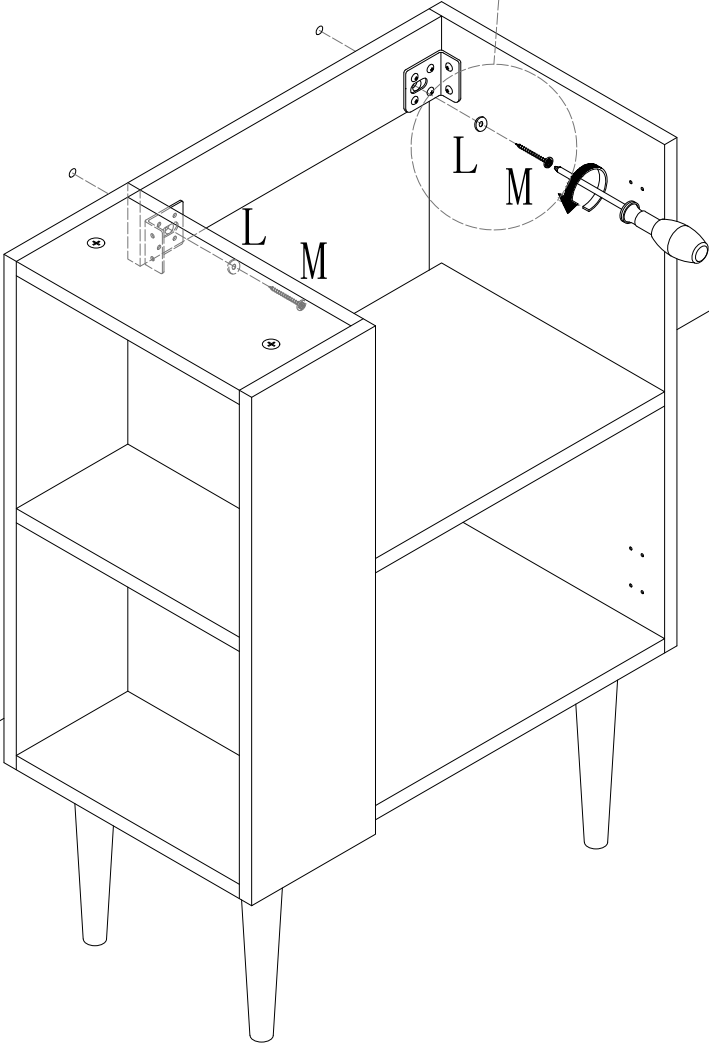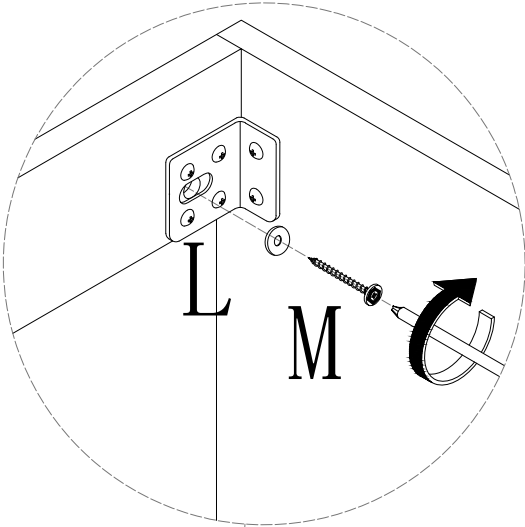



Step 12

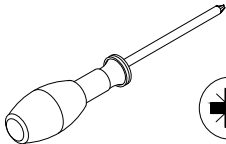E * 8	G * 1	H * 1	 
 M4 x 12mm	 M4 x 20mm		

Wall

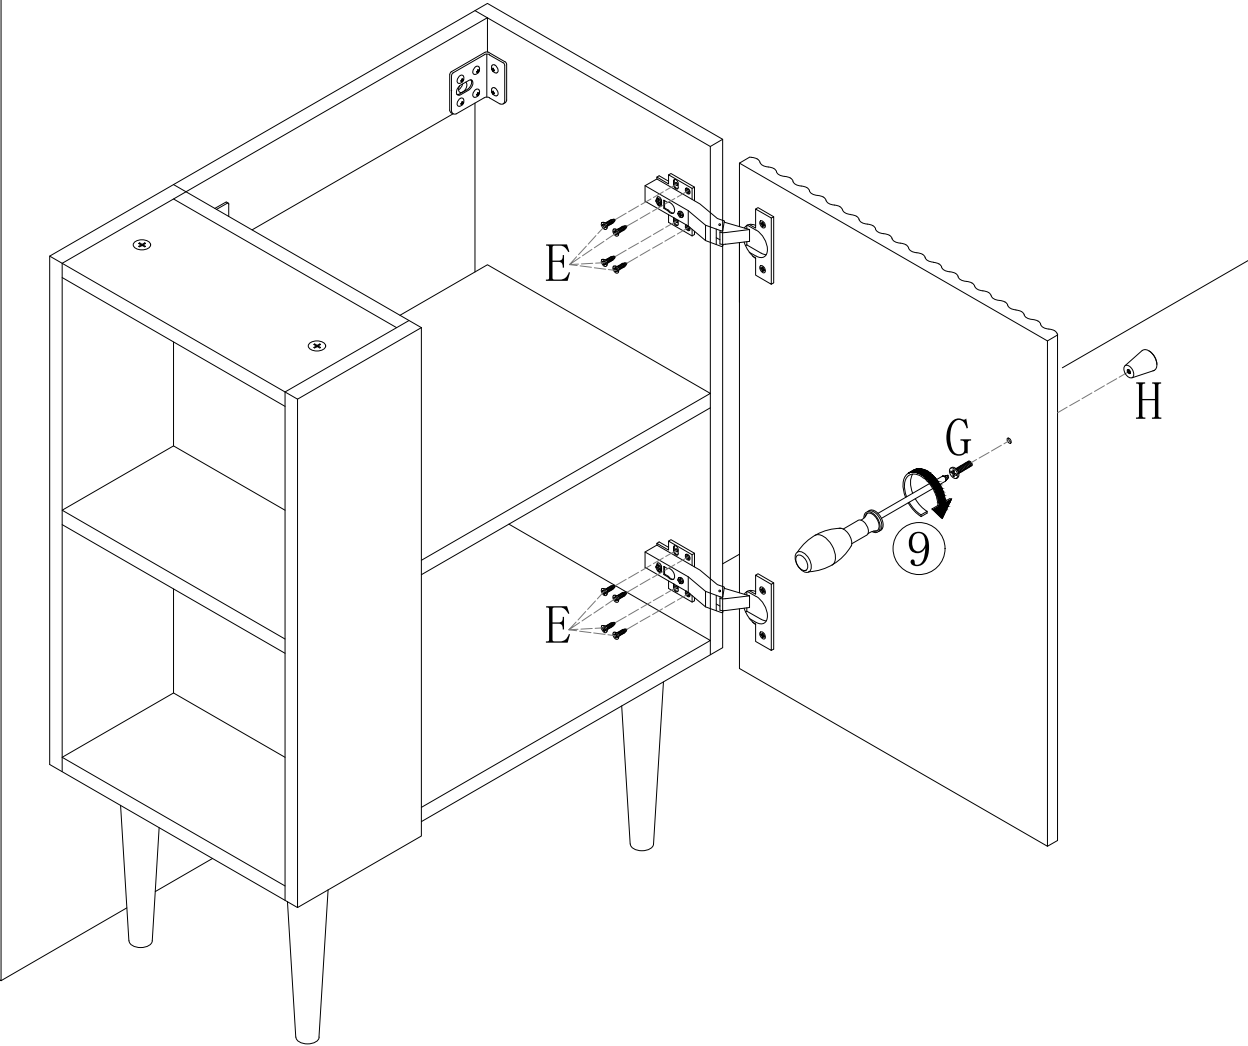


Step 13

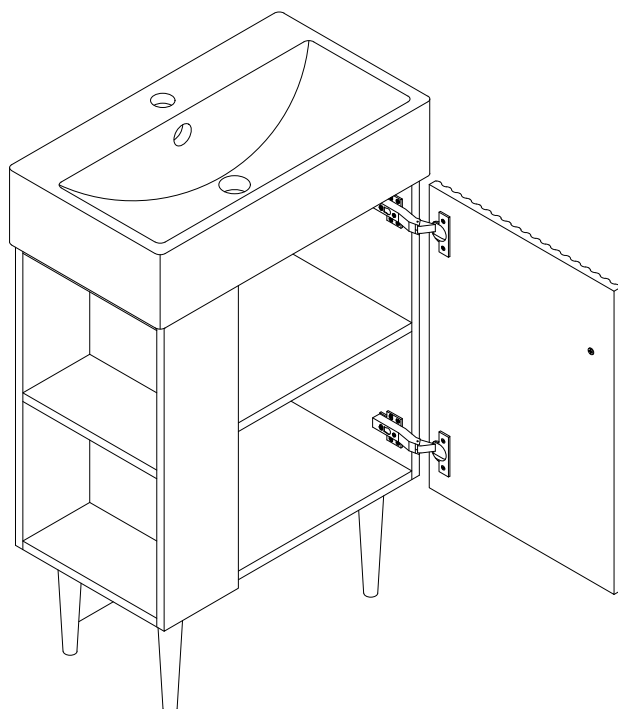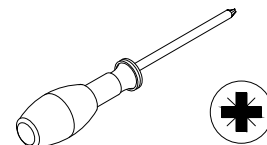


Adjust door following the direction.


Adjust the door up and down to match the cabinet.

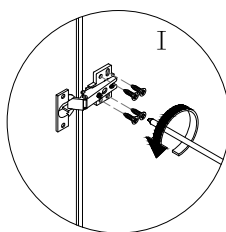

I:loosen the screw.

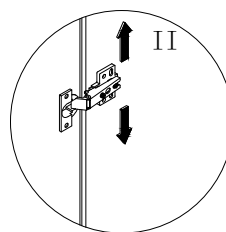

II:Adjust the upper and lower position.

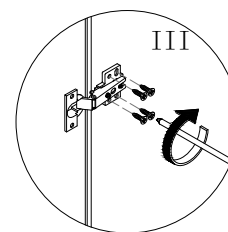


II:tighten the screw.




When the door position is not standard,please adjust the door according to the right picture.

Adjust the door left and right to match the cabinet for suitable crack of the door

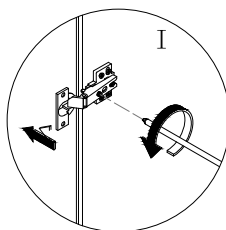

I:loosen the screw to keep hinge apply force toward the direction of arrow.

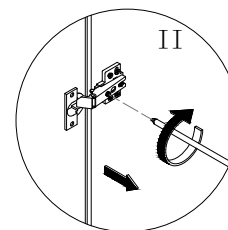


II:tighten the screw to keep hinge apply force toward the direction of arrow.




Please place the cabinet on the flat floor before adjustment.

Adjust the door backwards and forwards to match the cabinet.

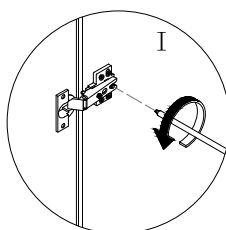


I:loosen the screw.

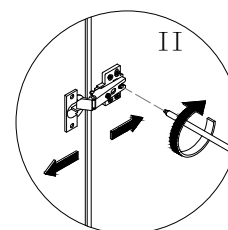


II:Adjust the distance between front and back.


Step 14

N * 4

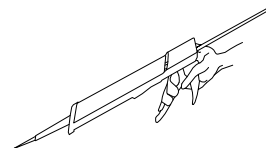


Wall

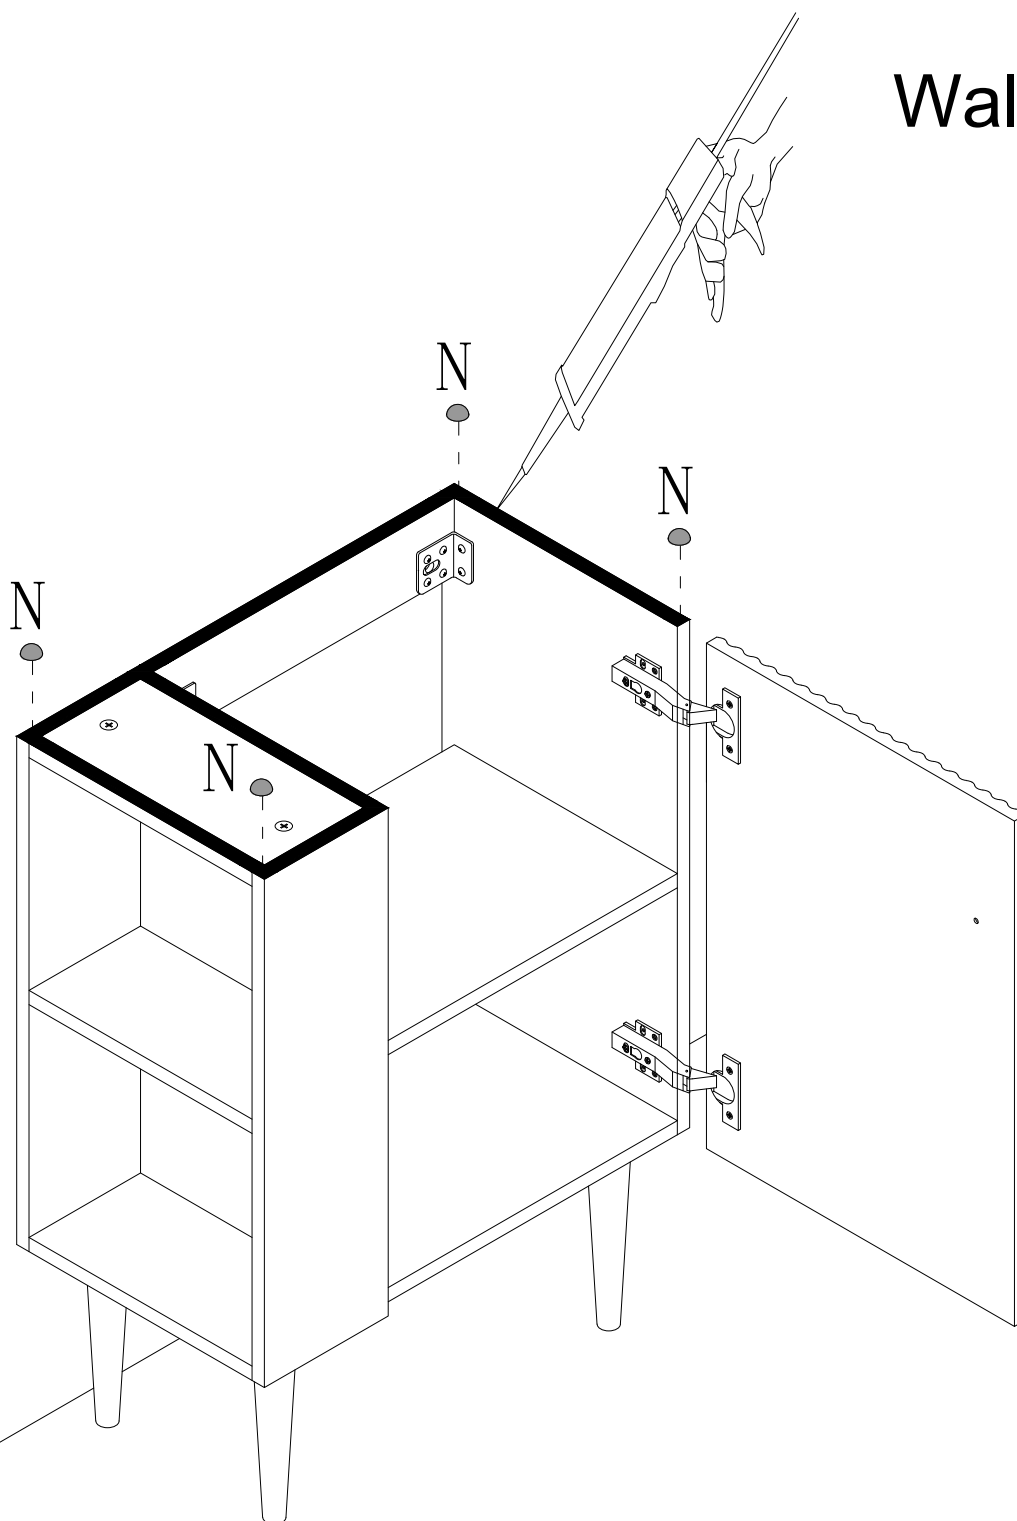

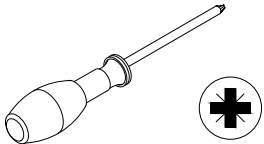

Wall

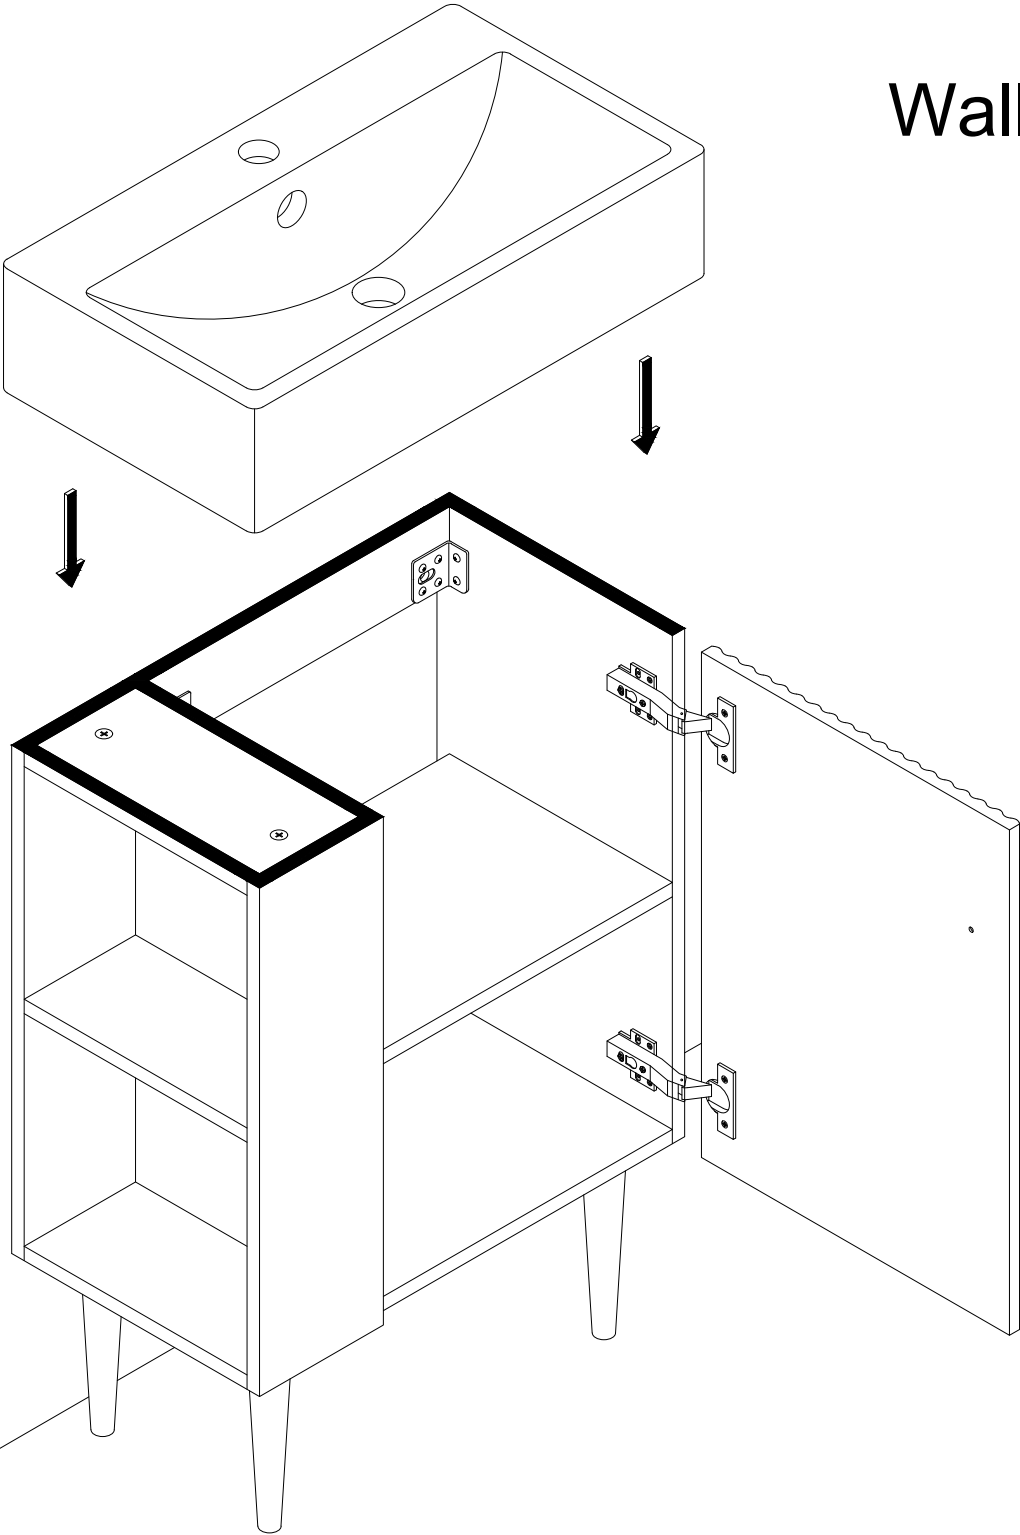

Step 16

