
ASSEMBLY INSTRUCTIONS


V-WD26-1410

PF035

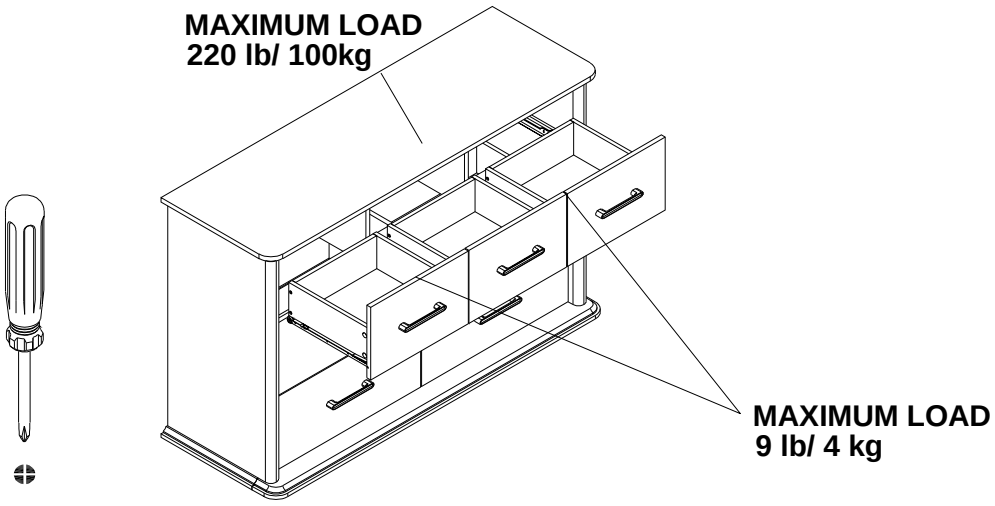


WARNING !



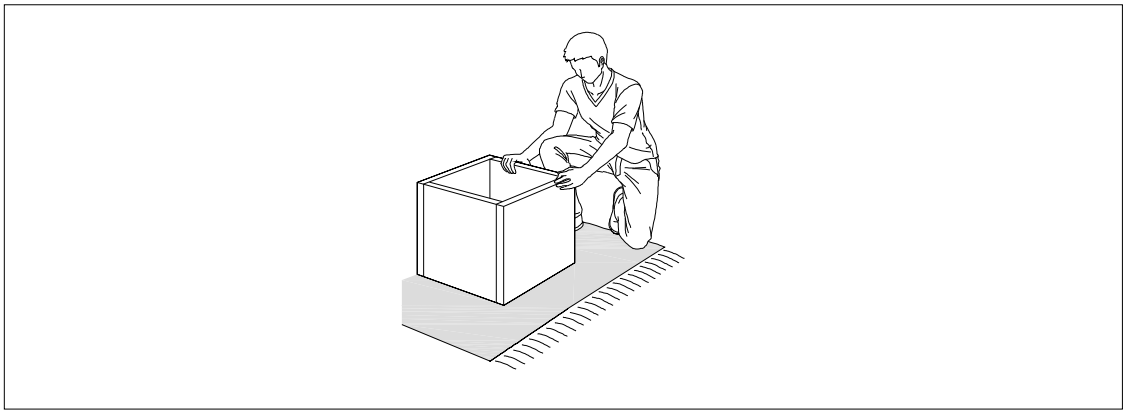

Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.

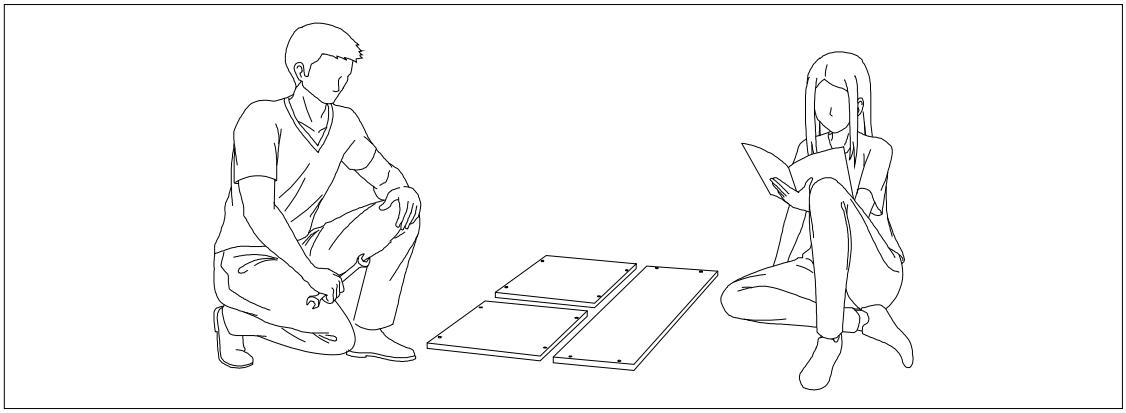


This furniture requires 2 people to assembly.

Make sure no parts are missing or damaged before assembly.

PACKAGE CONTENT


Board Identification

Not actual size

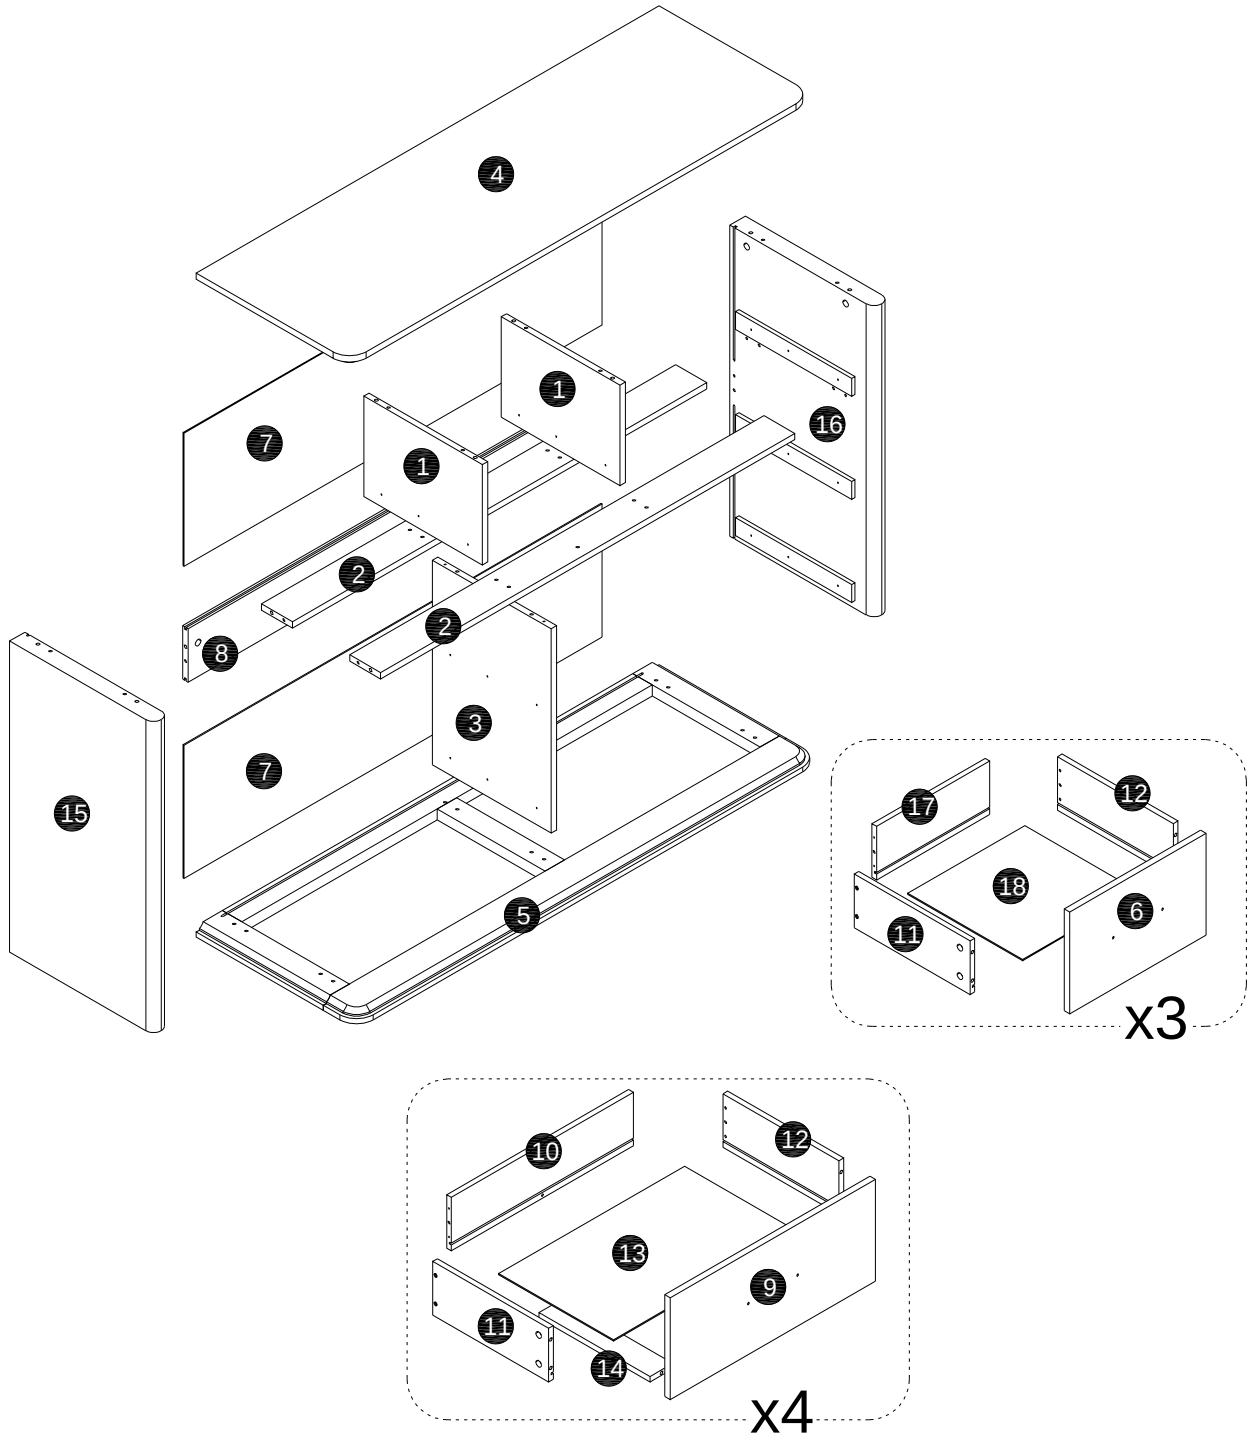


BOARD IDENTIFICATION


Not actual size




① x 2

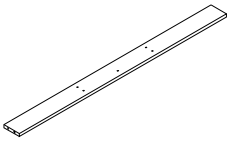


② x 2

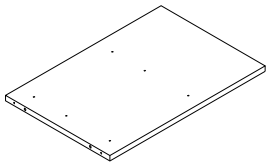


③ x 1

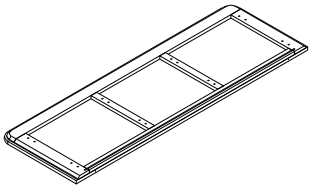


④ x 1

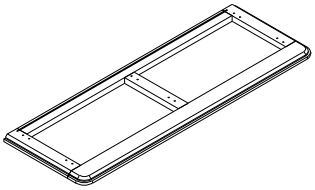


⑤ x 1

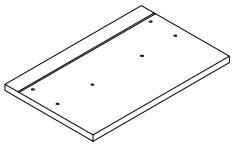


⑥ x 3

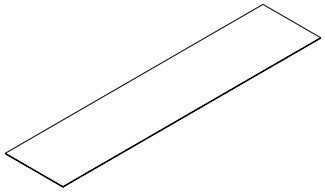


⑦ x 2

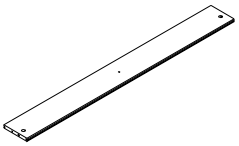


⑧ x 1

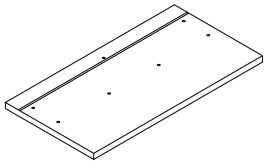


⑨ x 4

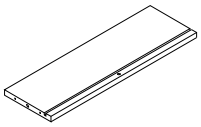


⑩ x 4




⑪ x 7




⑫ x 7

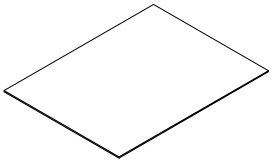


⑬ x 4




⑭ x 4

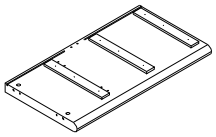


⑮ x 1

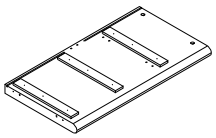

⑯ x 1




⑰ x 3

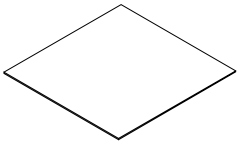

⑱ x 3

HARDWARE LIST




Ø6x33.5mm

A	x46+4




Ø15x9.5mm

B	x46+4



Ø6x30mm

C	x40+4



Ø5x50mm

D	x13+1



Ø3.5x12mm

E	x80+8




Ø3x15mm

F	x 8+1




Ø4x38mm

G	x32+3



H	x 7



M4x20mm

I	x 14

J1x2



140X19MM

J2x4



Ø16xØ6.5x1mm

J3x2



Ø4x16mm


J	x 1SET

K1x2




Ø6x30mm

K2x2




Ø4x35mm


K	1SET




L	x 1




M	x 6

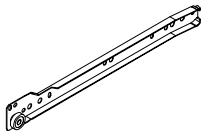


CL	x 7

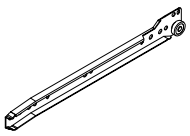

CR	x 7

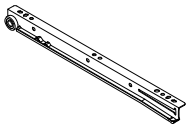

DR	x 7

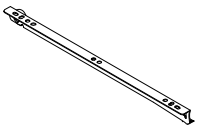


DL	x 7


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.


1

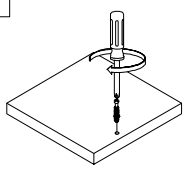

2

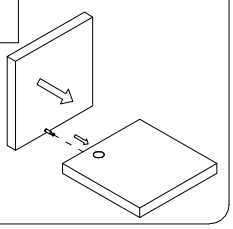


3

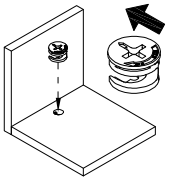


The opening must point toward the edge of the board


4

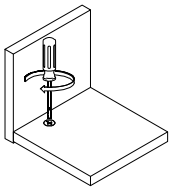


STEP 1


PF035

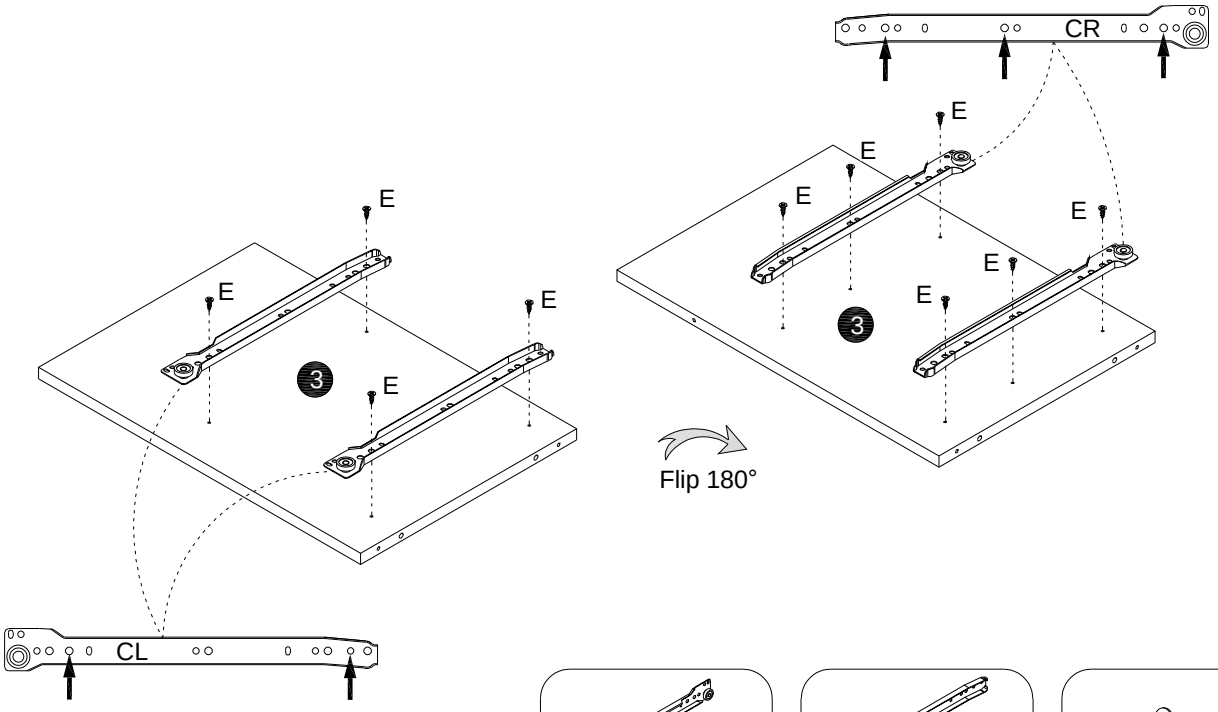

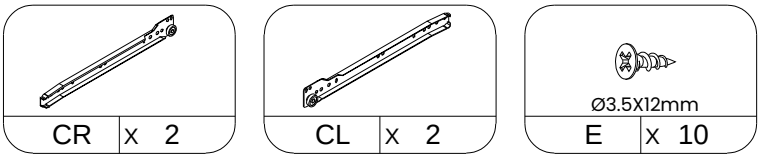


STEP 2

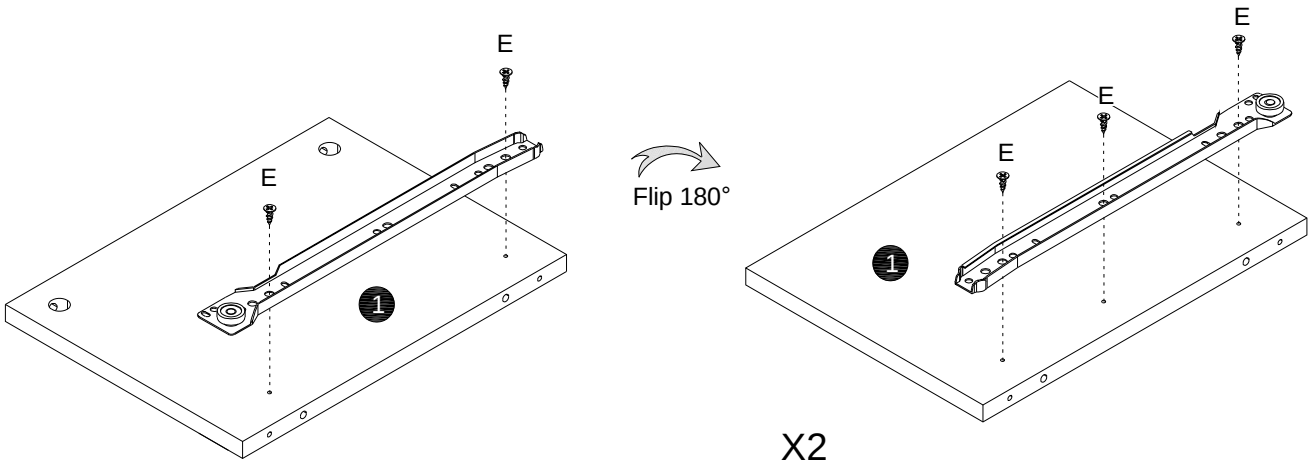

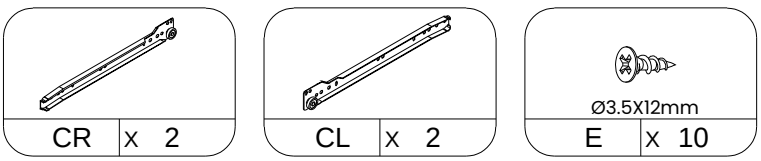

STEP 3

PF035

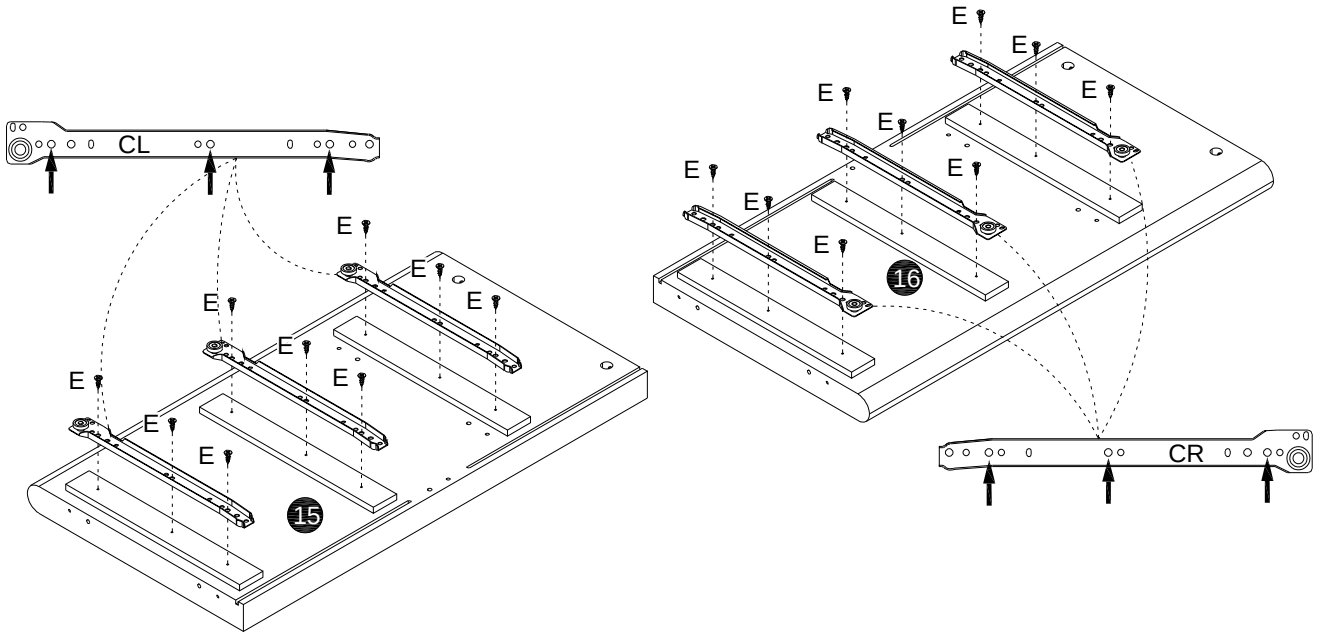


CR	x 3


CL	x 3

Ø3.5X12mm

E	x 18

STEP 4

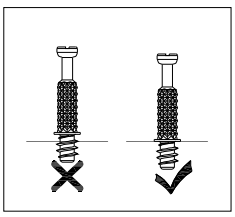

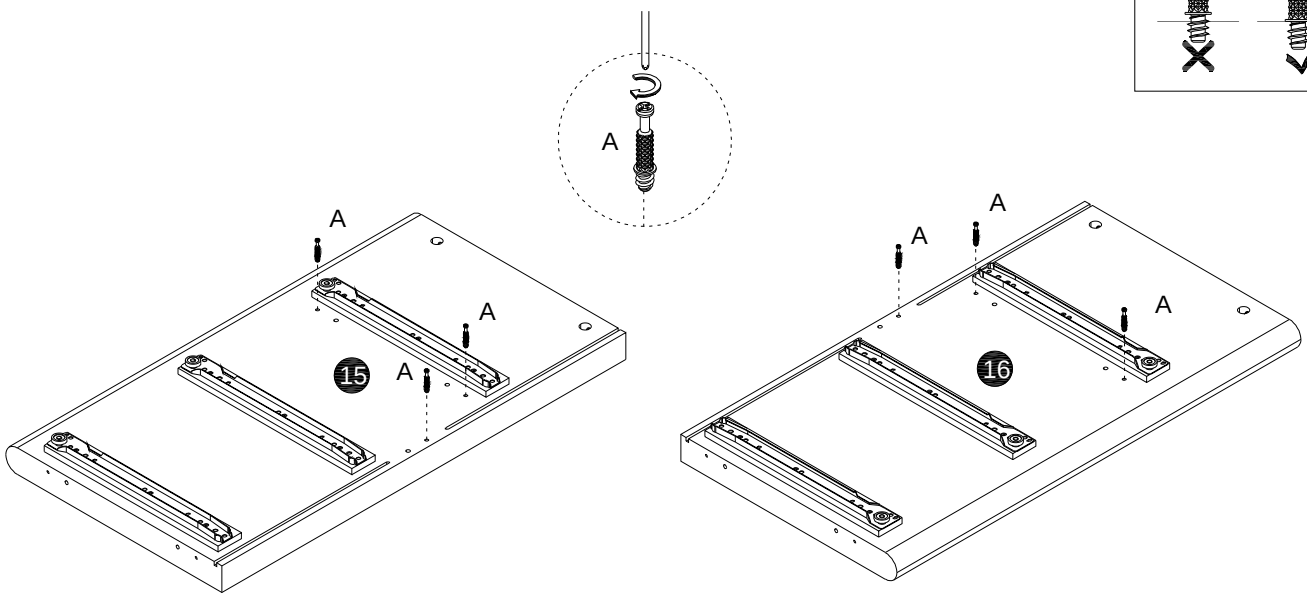



Ø6X33.5mm


A	x 6


STEP 5

PF035

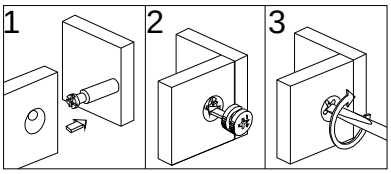


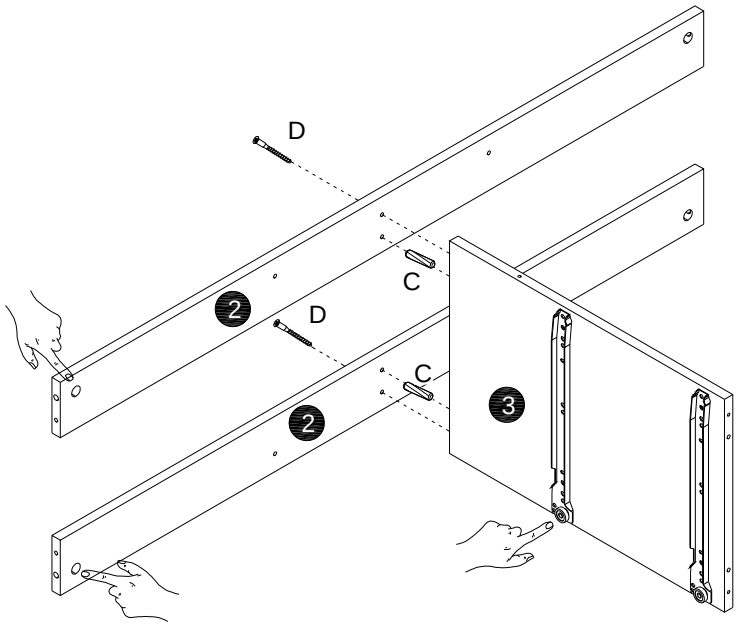

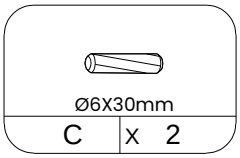


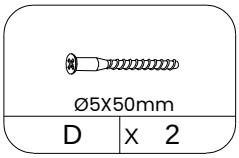

STEP 6

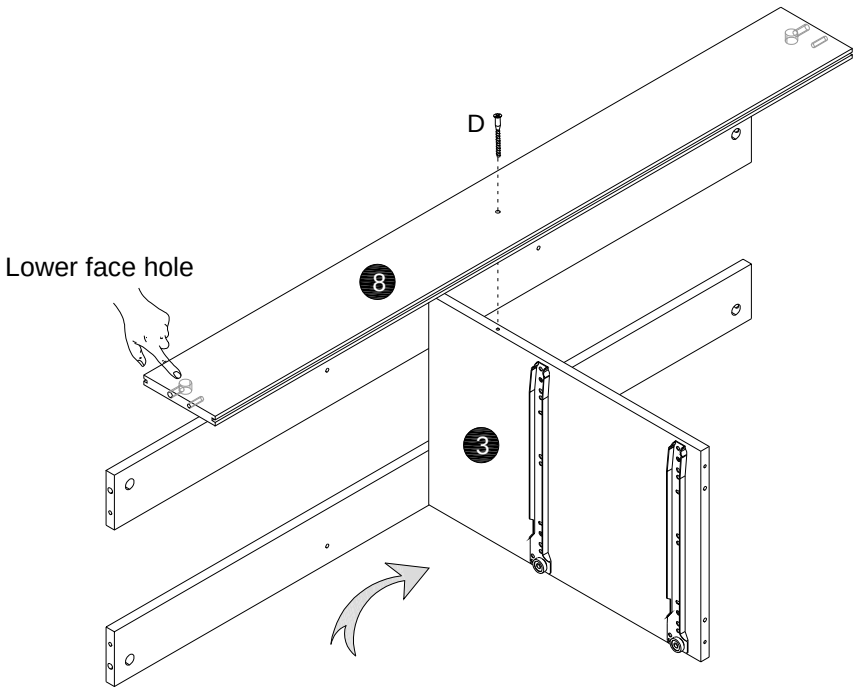


After this step is assembled,
flip it 180 degrees(to next step)

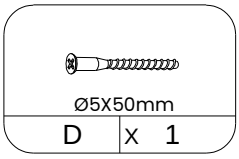


STEP 7

PF035

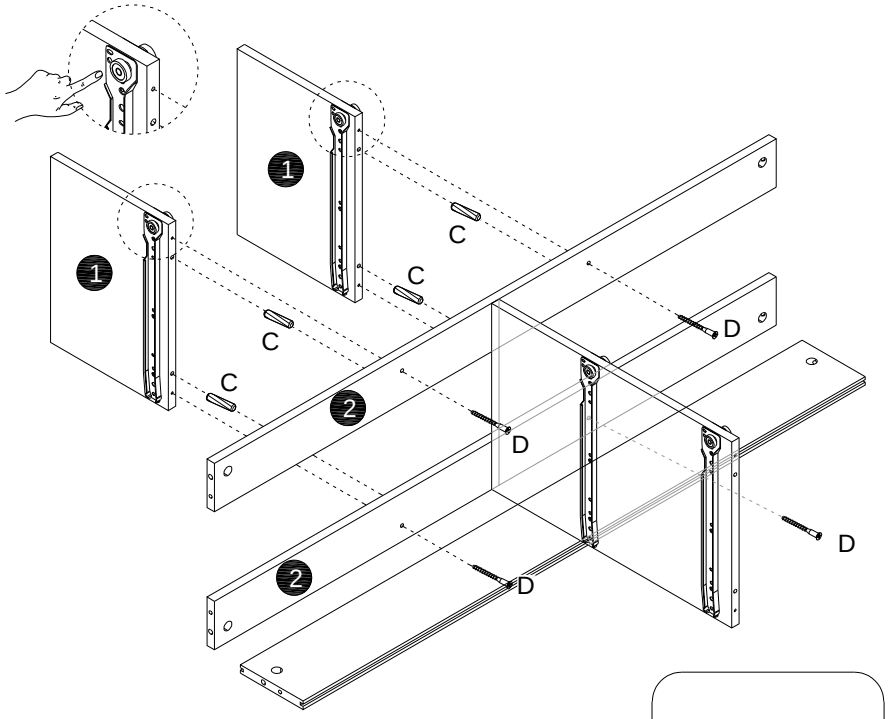



Ø6X30mm	
C	X 4



Ø5X50mm	
D	X 4

STEP 8

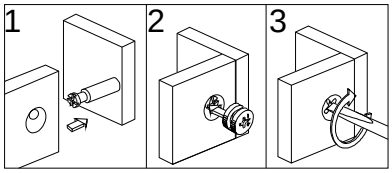

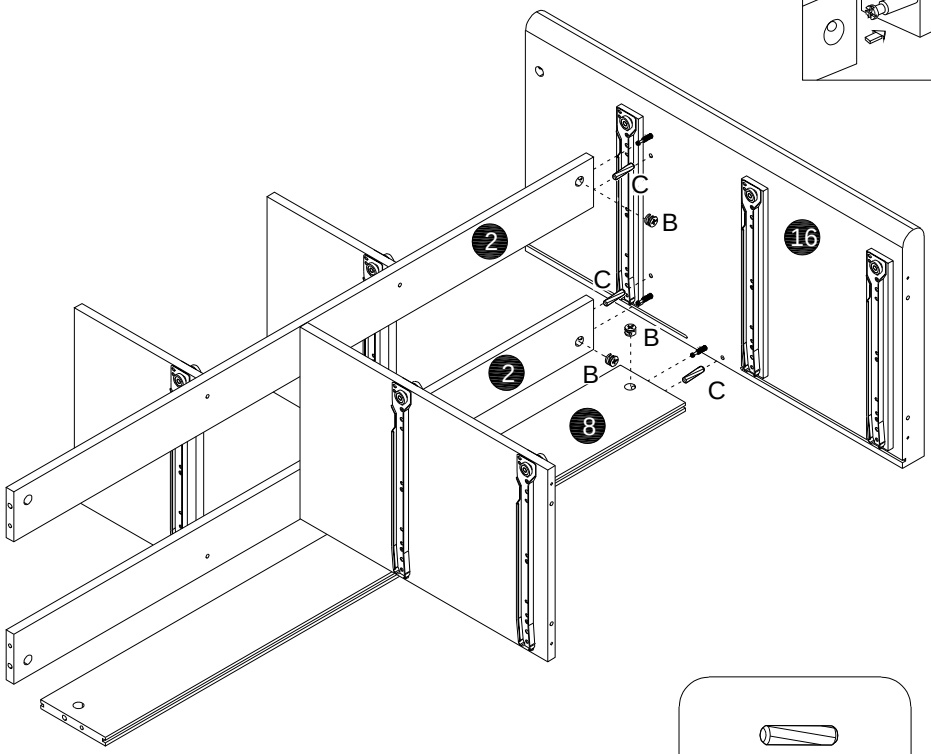


Ø6X30mm	
C	X 3




Ø15X9.5mm	
B	X 3

STEP 9


PF035

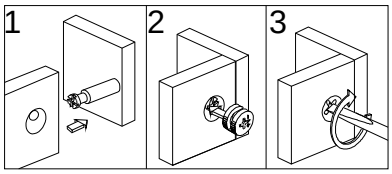


After this step is assembled,
flip it 90 degrees(to next step)

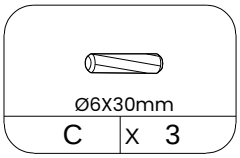


STEP 10

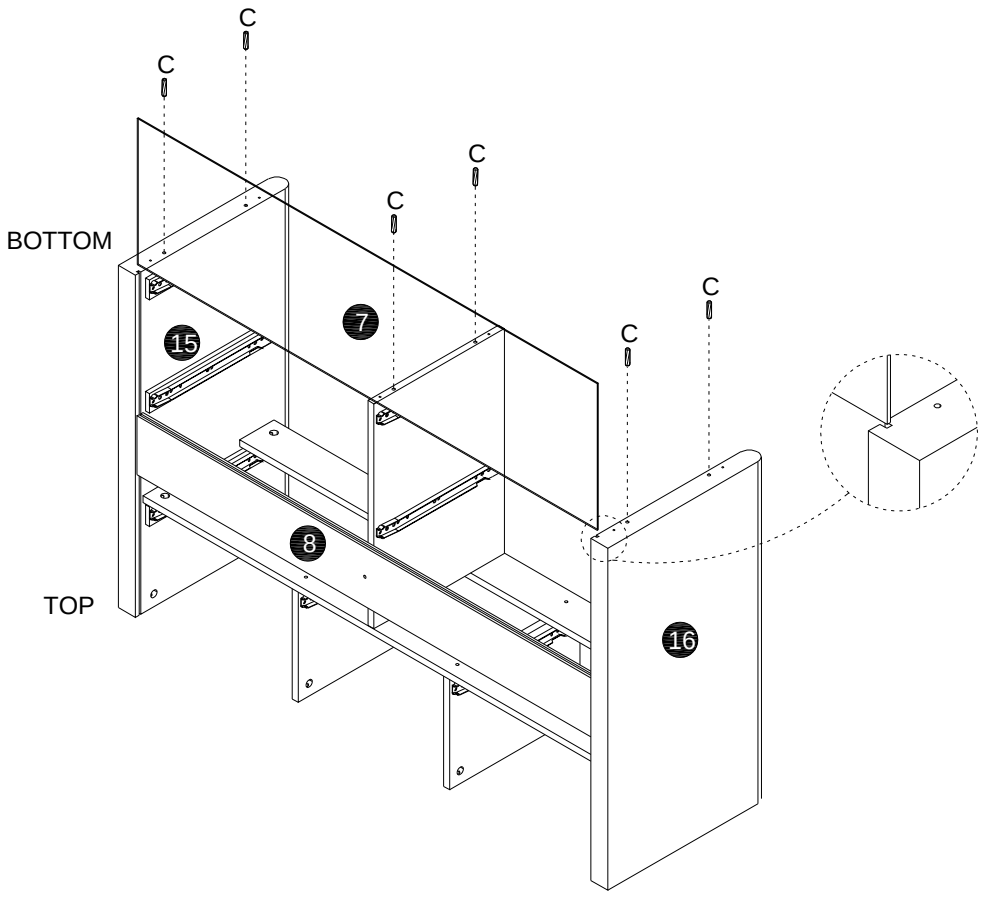

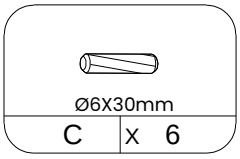


STEP 11


PF035

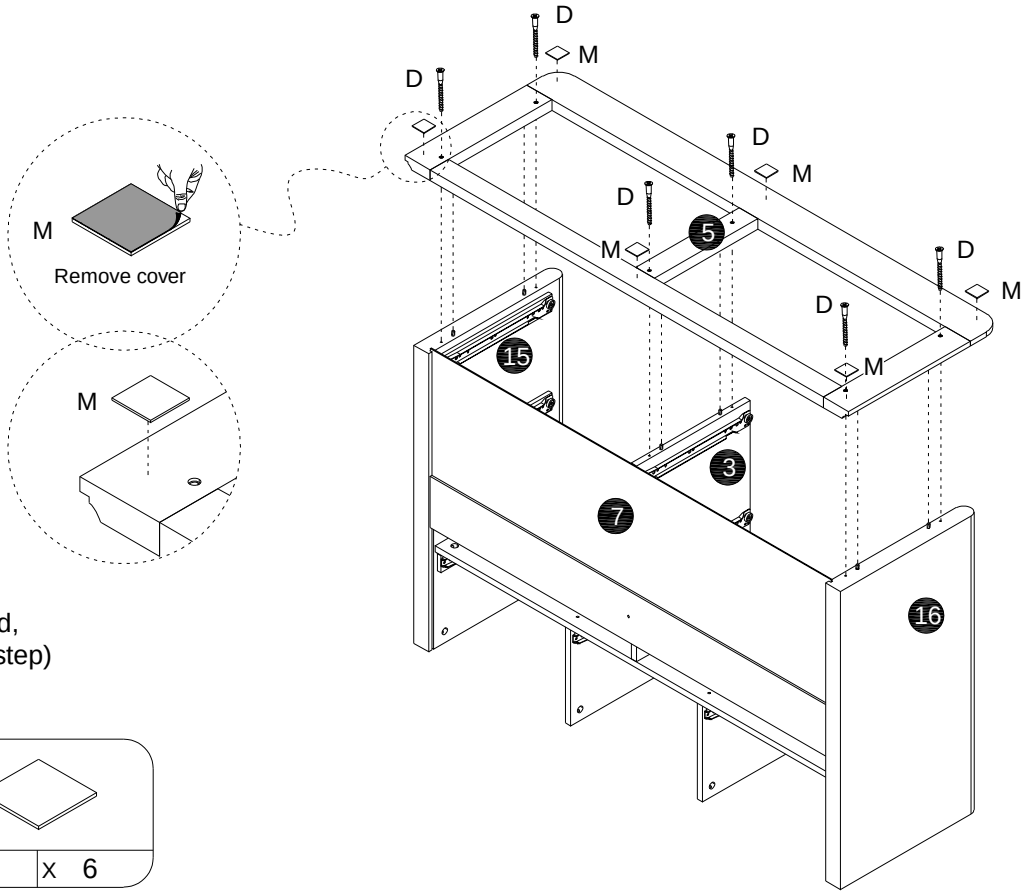


After this step is assembled,
flip it 180 degrees(to next step)

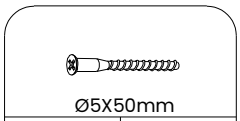


STEP 12

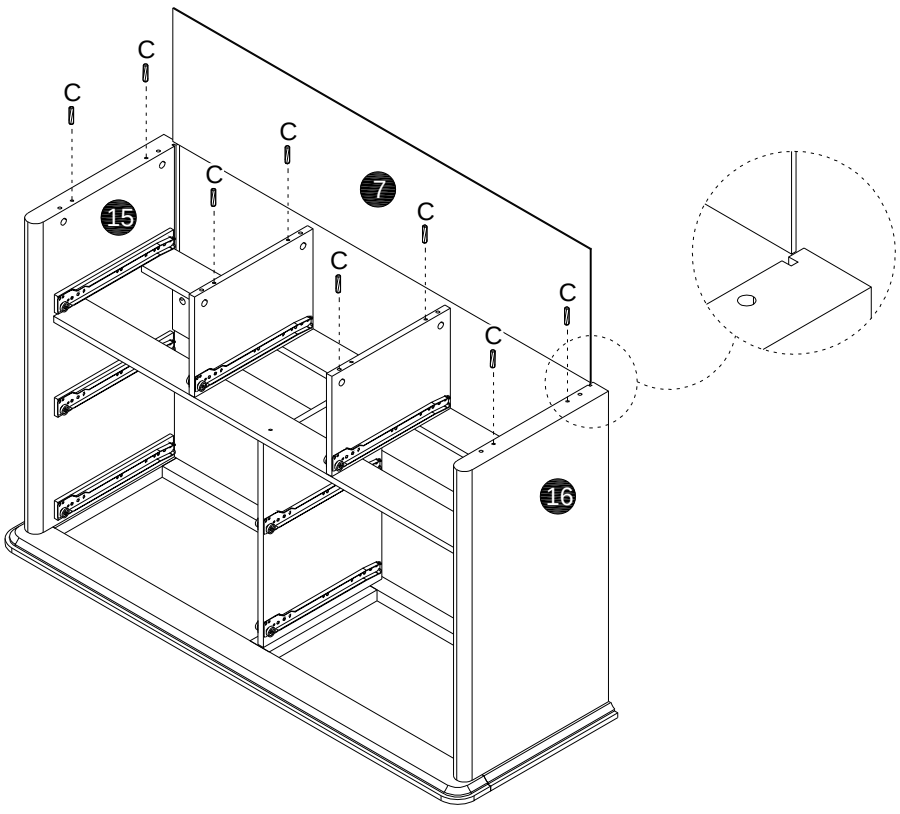


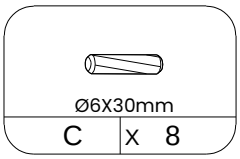


STEP 13


PF035

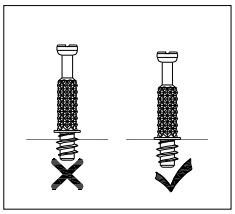


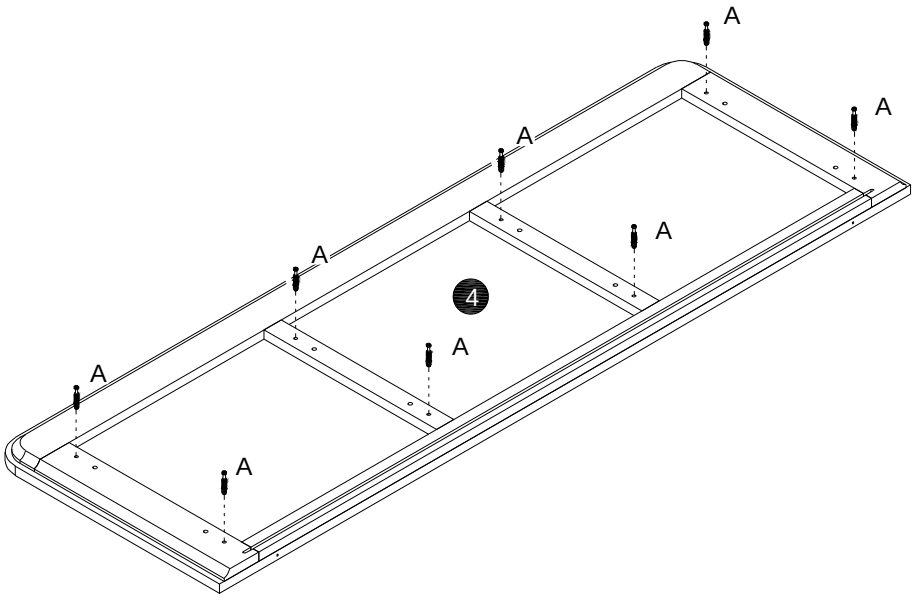


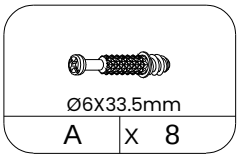

STEP 14

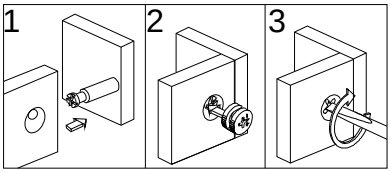


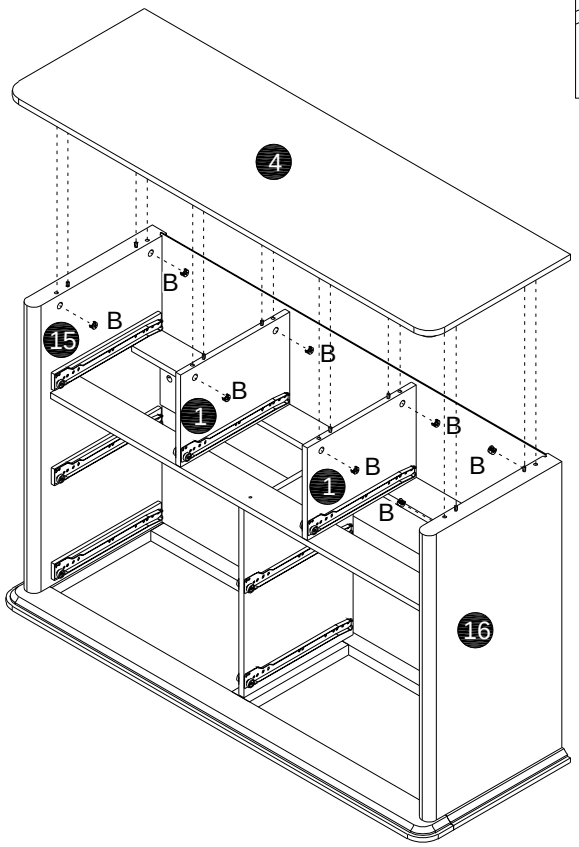


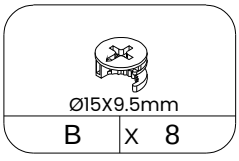


STEP 15


PF035

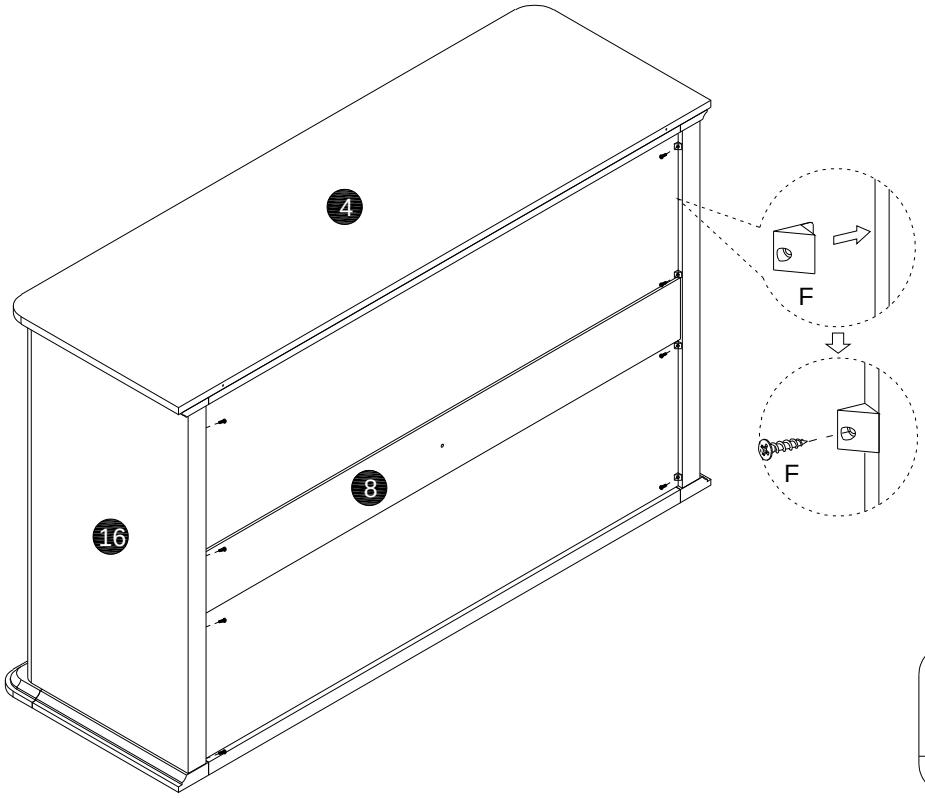

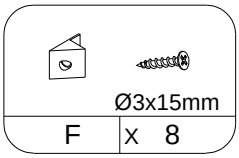


STEP 16

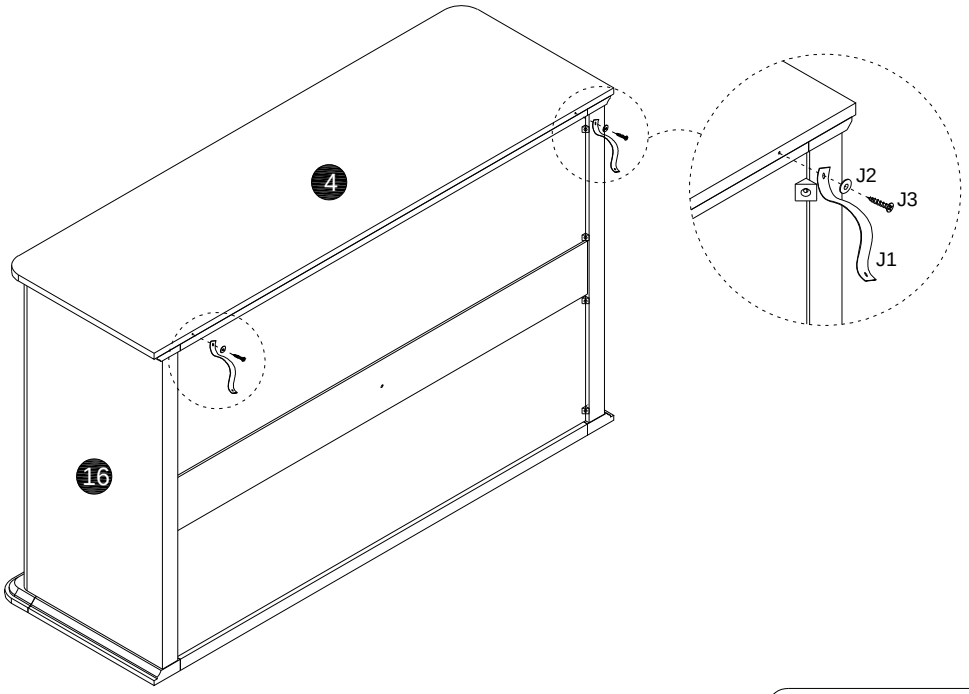


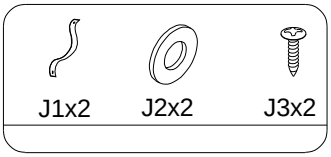



STEP 17

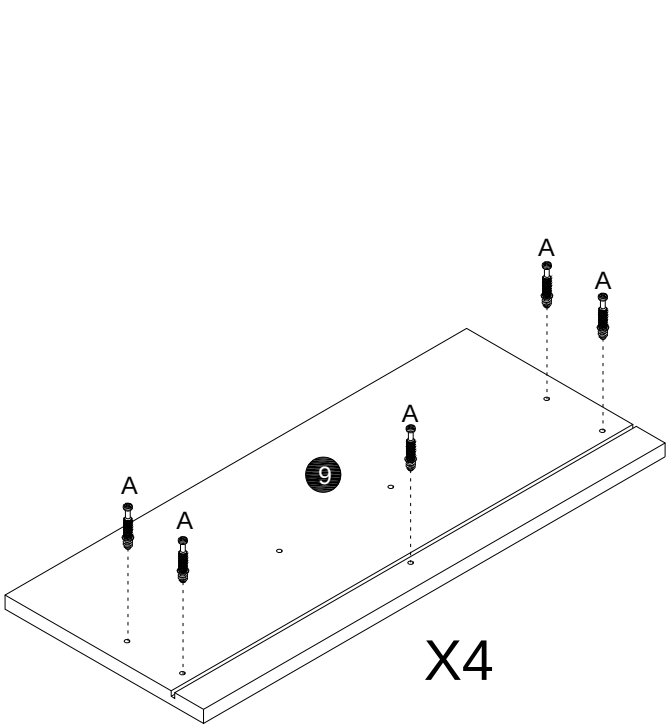


X4

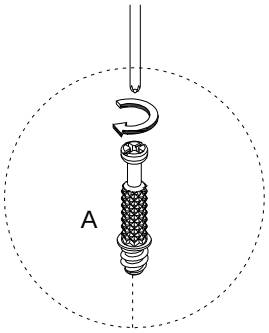

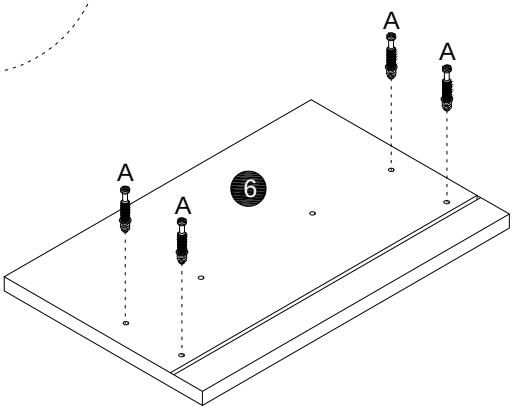


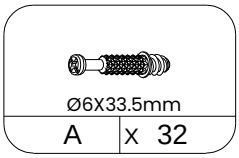


STEP 18

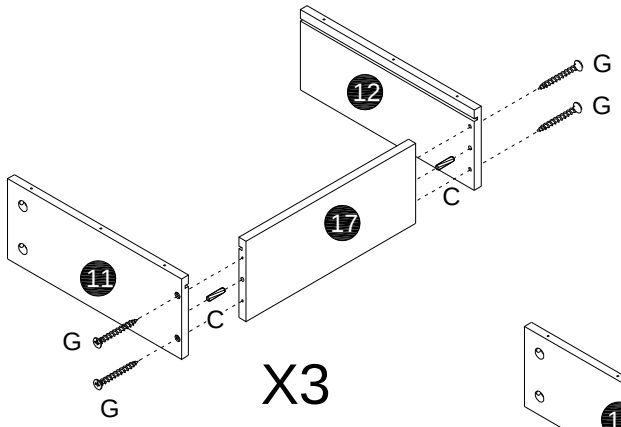


X3

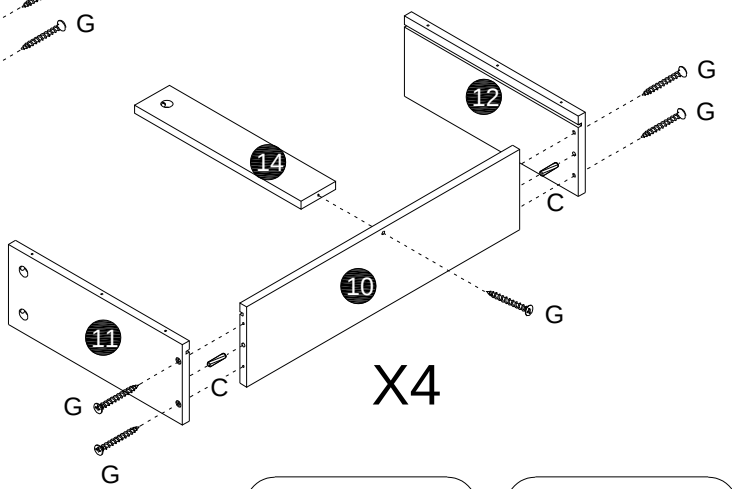


X4

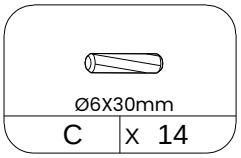

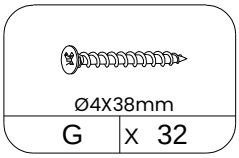


STEP 19

PF035

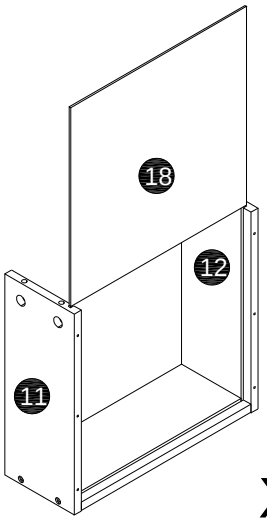



X3

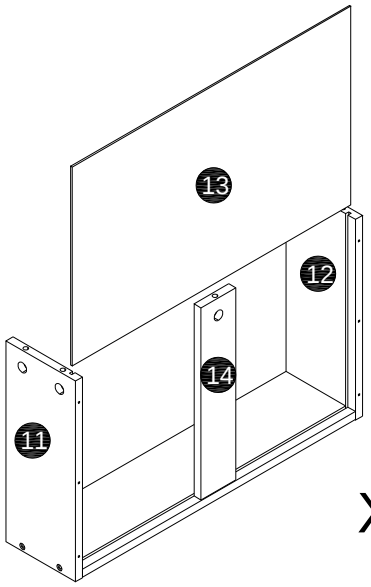


X4

STEP 20

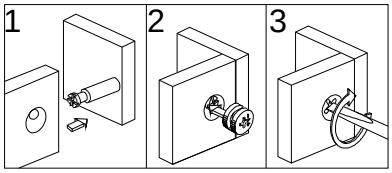


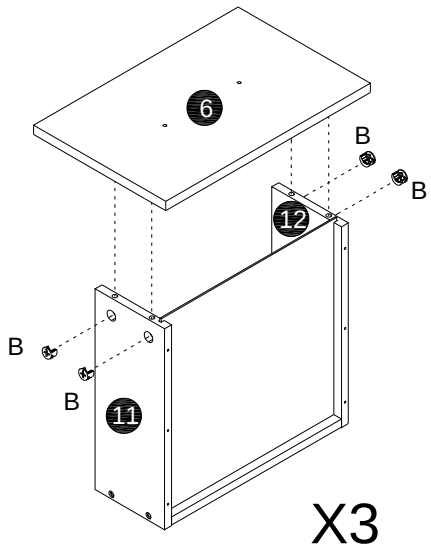


X3

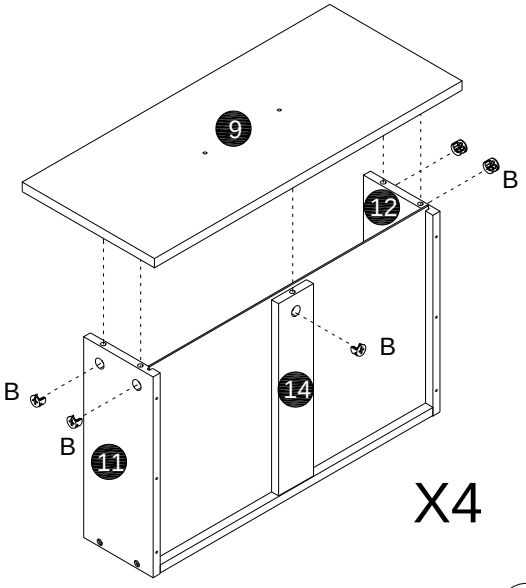


X4

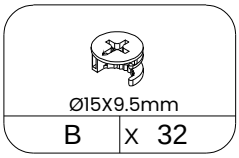


STEP 21

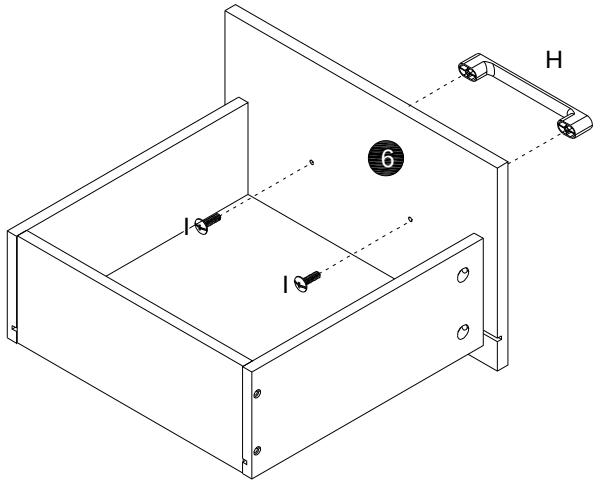

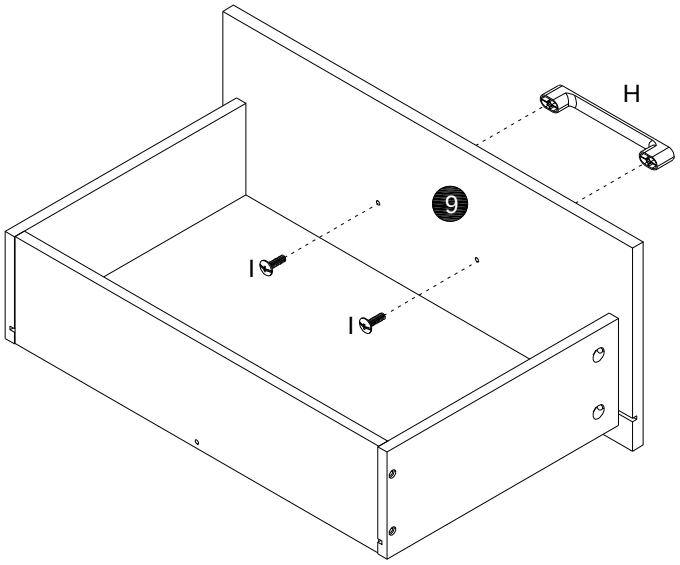




M4x20mm	
I	x 14



H	x 7

STEP 22

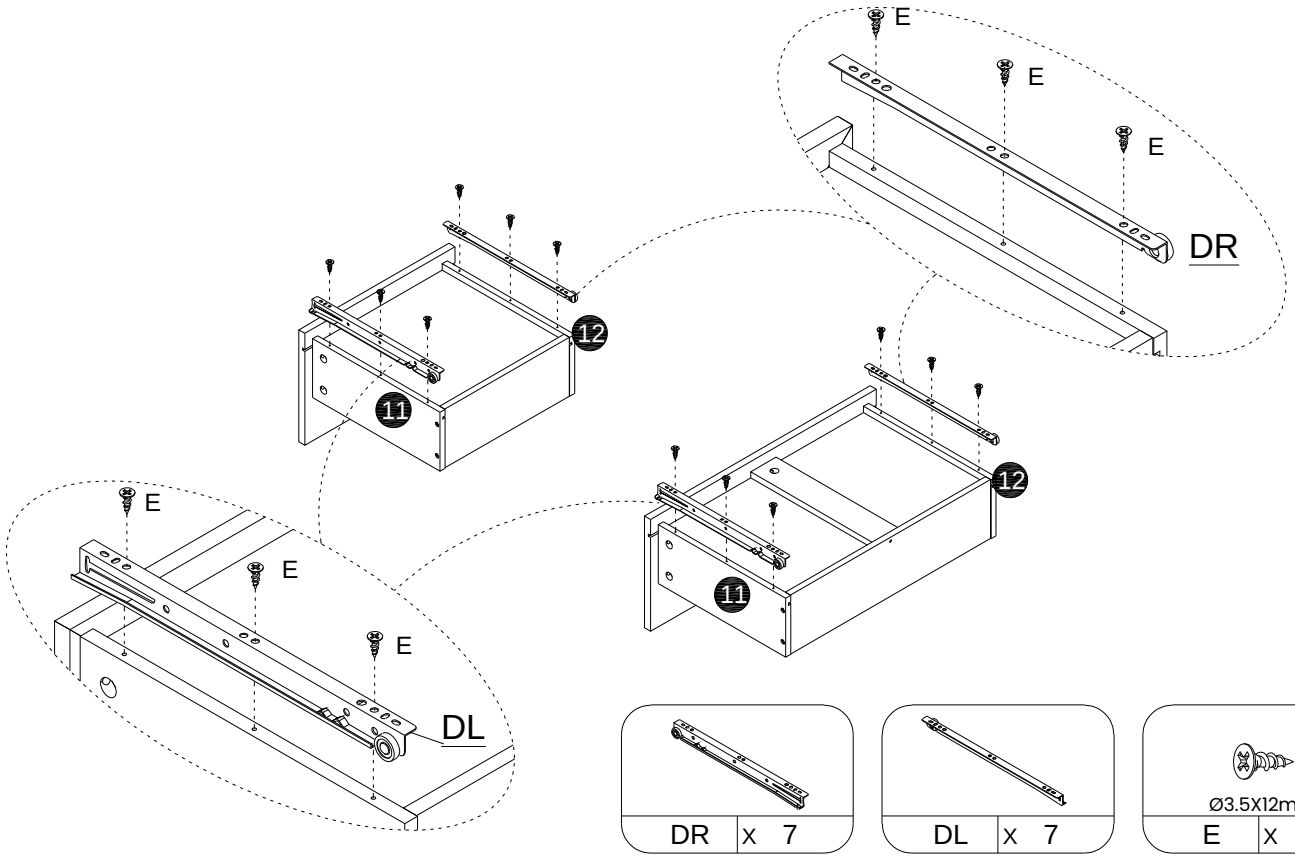


DR	x 7


DL	x 7

Ø3.5X12mm	
E	x 42

STEP 23


PF035

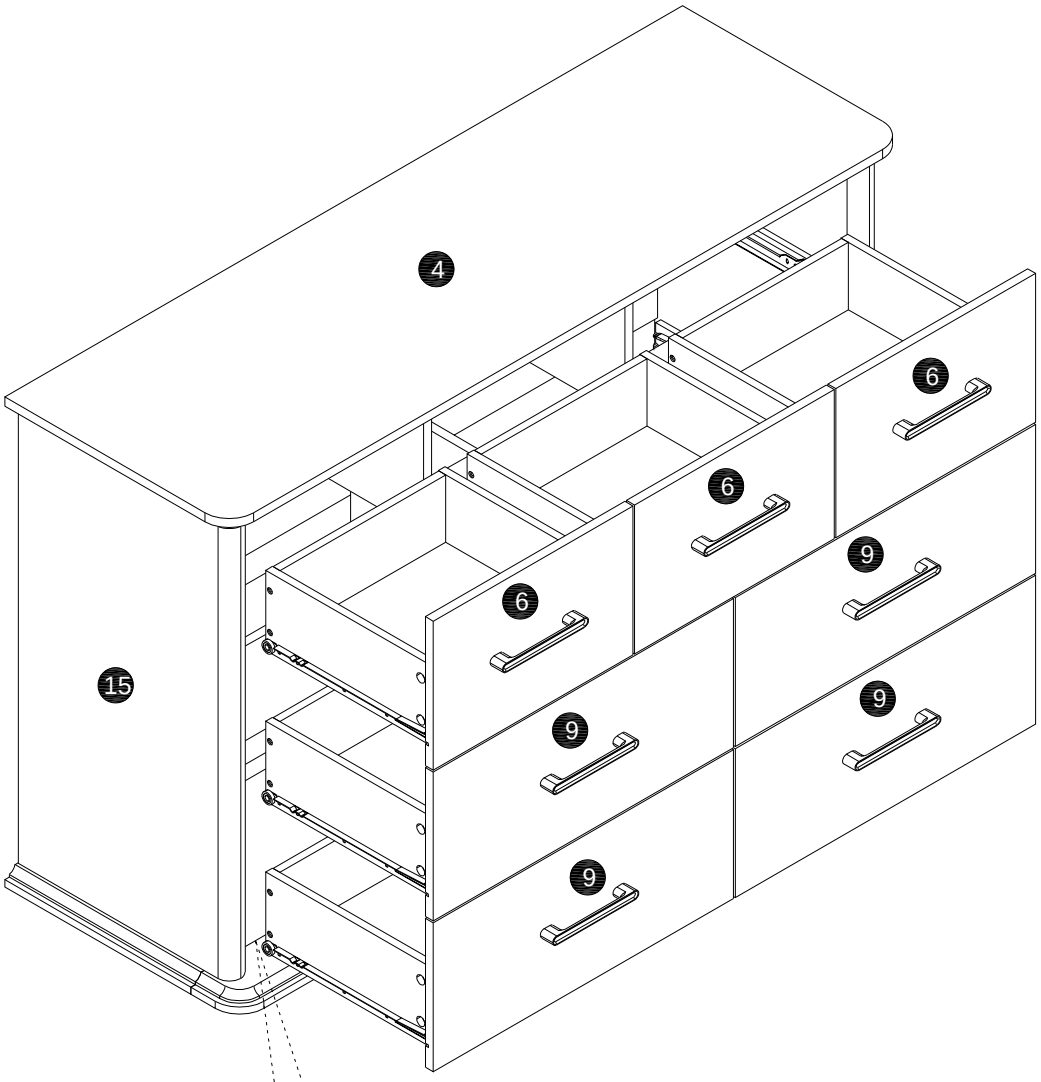


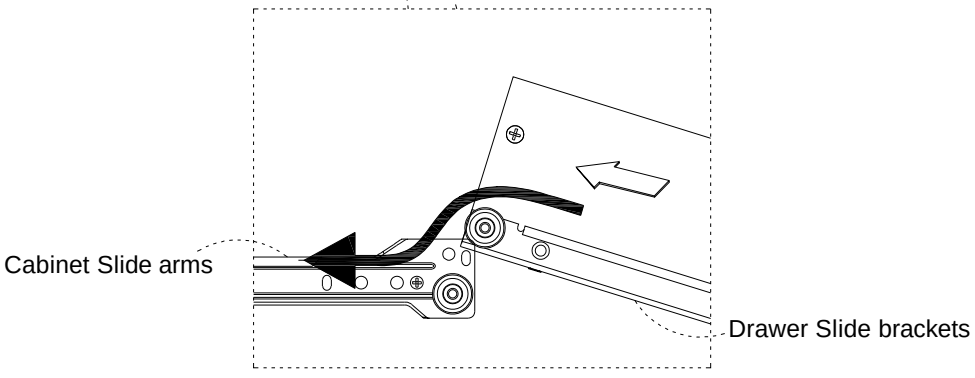

STEP 24


PF035

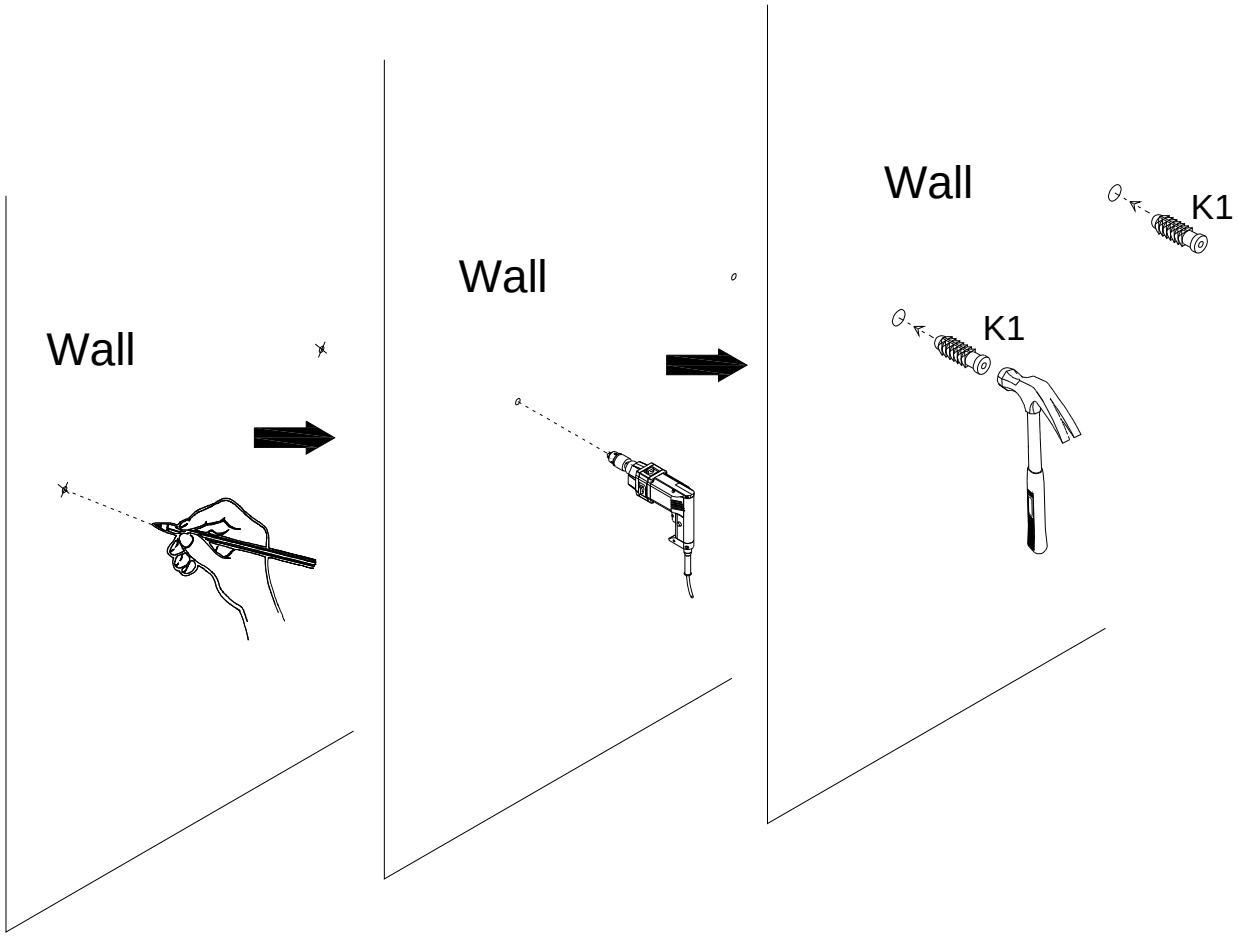


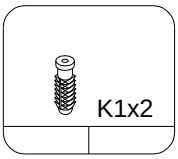

STEP 25

PF035

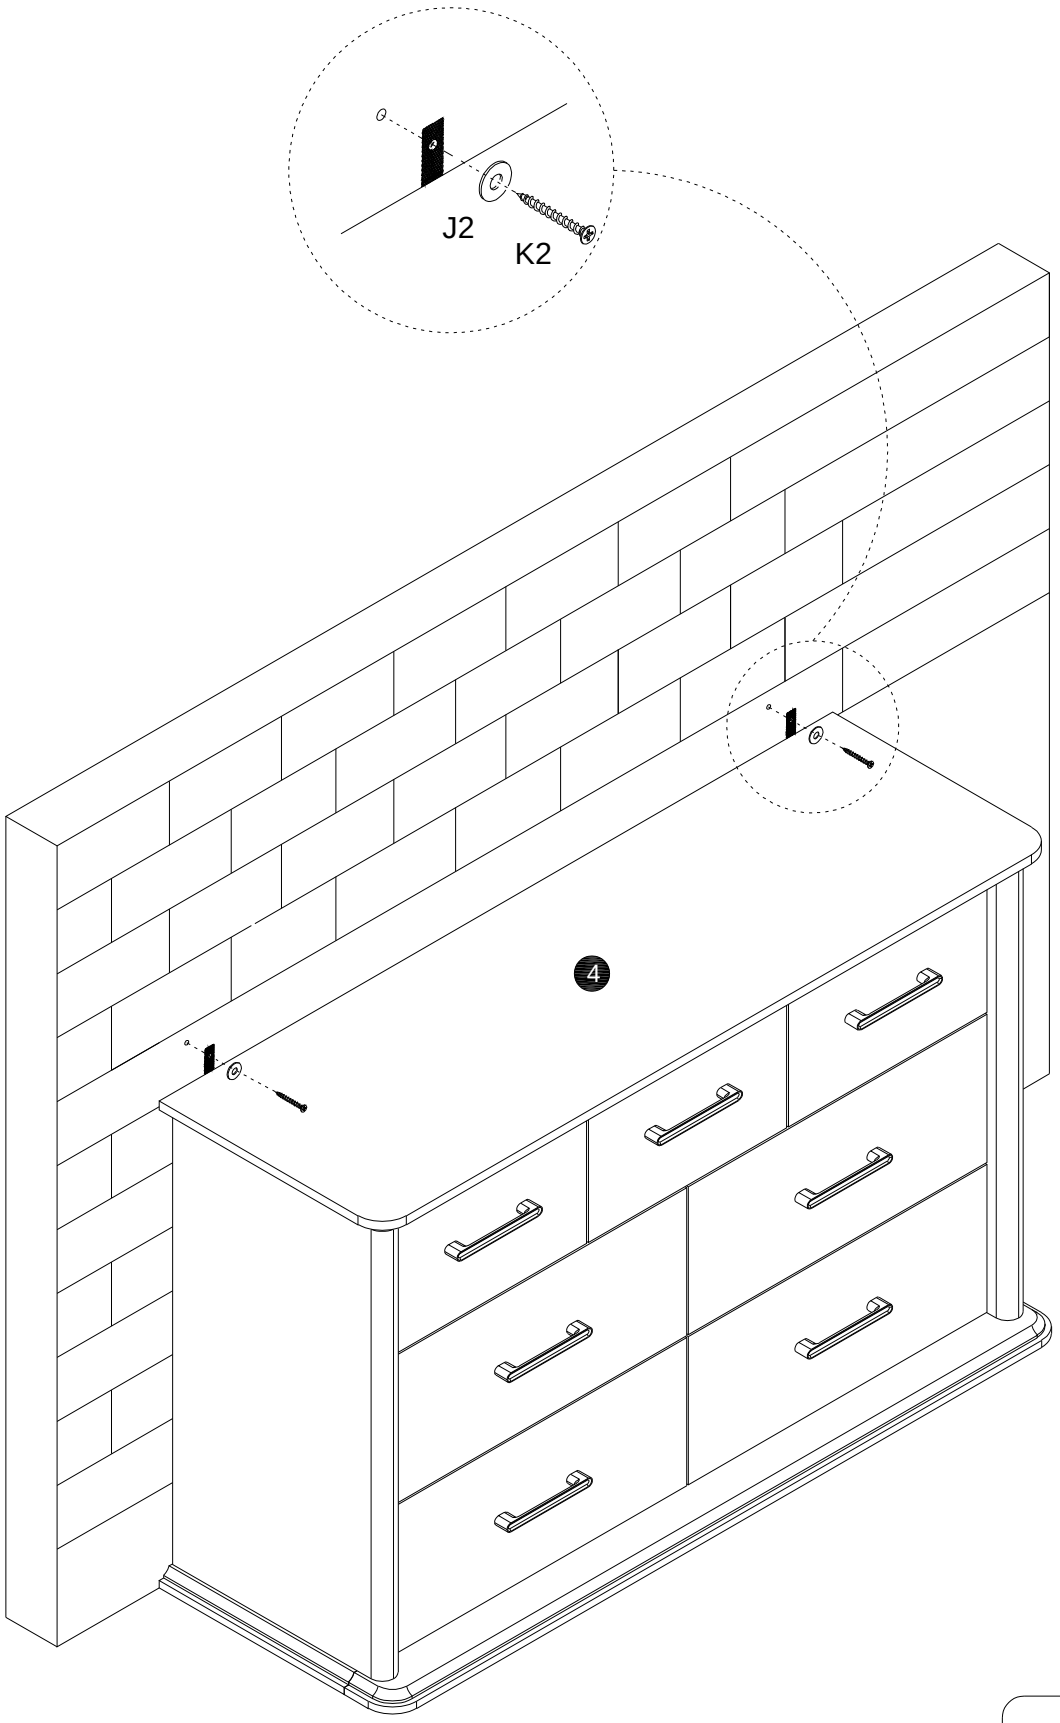

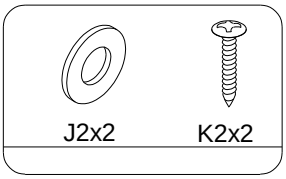

FURNITURE CARE AND MAINTENANCE

Medium - Density Fiberboard and Particle board

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



MAINTENANCE

· Tighten all bolts and screws again within the first 2 weeks of assembly
· Check the tightness of all bolts every 2 months, tighten them if necessary



CLEANING

· Clean the surface of the MDF (medium - density fiberboard) or PB (particle board) with a lightly dampened cloth.
· Small amount of mild soap can be used if necessary
- **Dry the surface immediately after cleaning.**

⚠ DO NOT use bleach or alcohol detergent to clean the surface.
⚠ DO NOT apply wood treatment on parts made with MDF and PB.
Medium - density fiberboard and Particle board will swell and distort when suffer from water damage.
Make sure to dry the furniture immediately after cleaning