Installation instructions

Hardware Fittings			
 M1	 M2	 M3	 M4





PS:
The desk features two front panels, one in black and one in brown, positioned at the front and rear.

Step 1: Install the Baffle






1.Insert the M4 parts into the side holes of Cabinet 1 and Cabinet 4.

2.Take out Panel 2 and M3 parts. Align the side holes of Panel 2 with the M4 parts and insert them. Repeat the same steps on both sides, then fasten securely with the M3 parts.

3.Repeat the above steps to install one side of the 2-1 part, then fix the other side with M4 screws.





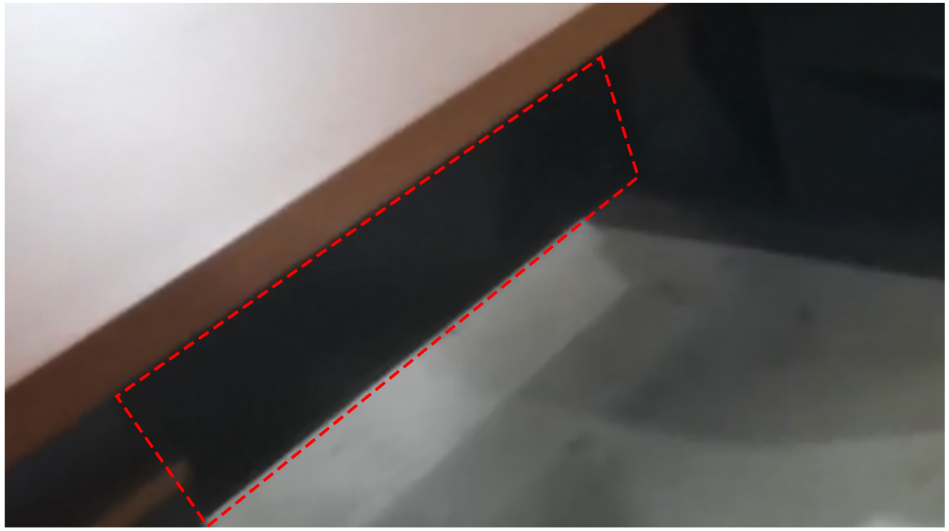

Panel 2 is installed inside the desk.



Panel 2-1 is installed on the outside of the desk.

Step 2: Install the Countertop Supports





1. Take out the M1 and M2 parts and the No.5 panel parts.

2. These two No.5 parts are countertop supports. Please note the left and right orientation. Place them on Cabinet 1 and Cabinet 4 respectively, then secure them with the M1 and M2 parts.





Step 3: Install the Tabletop





1. Prepare the M1 and M2 parts together with the No.3 tabletop.

2. Place the tabletop in position and secure it firmly with the M1 and M2 parts.

