



ASSEMBLY INSTRUCTION

SOFA SET

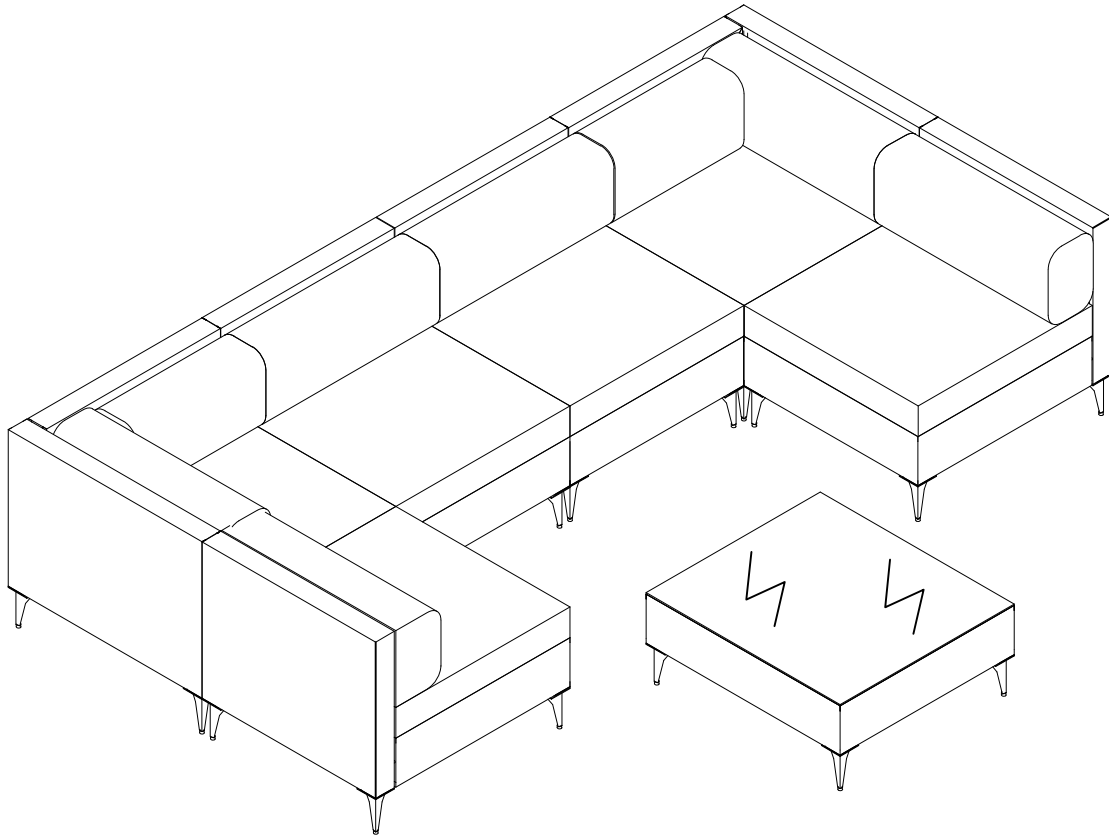


Notice:


1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
2. Place the item on a flat ground to adjust and make sure it remains stable.
3. Tighten up all screws with tools gradually.
4. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
6. Note : If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.

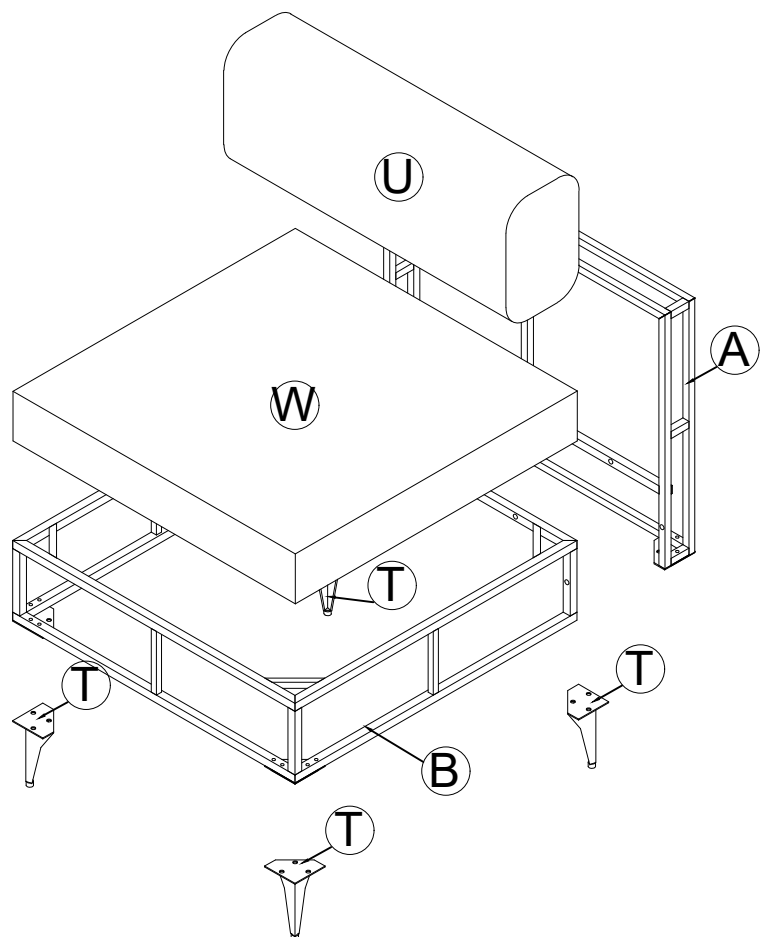


x4

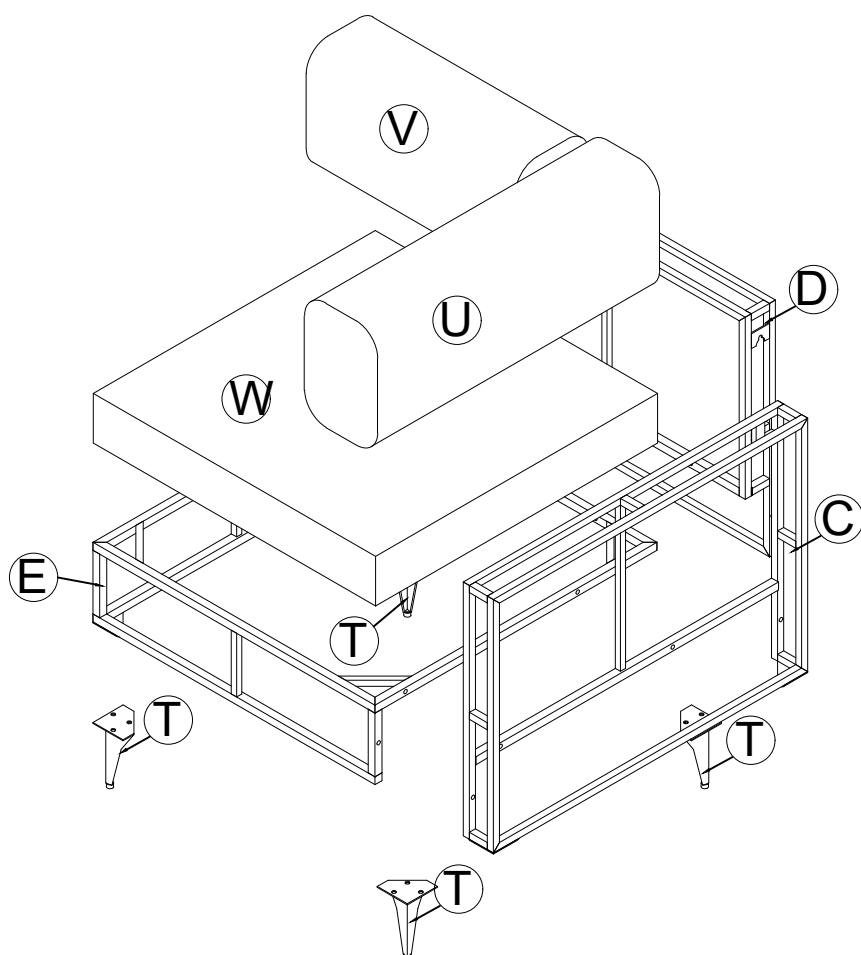

x1













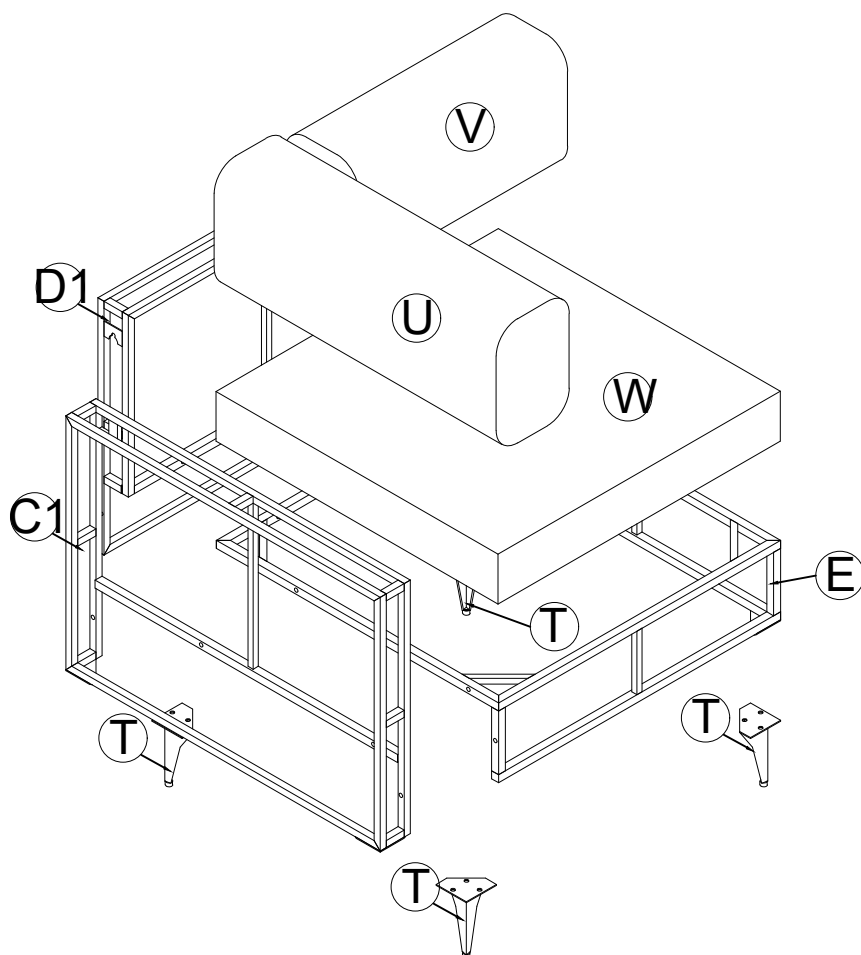


x1




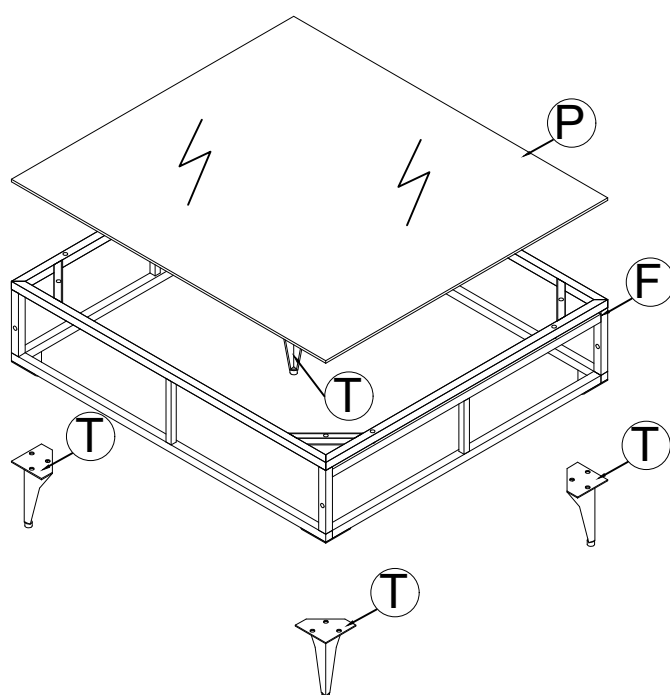


x1


Part List:

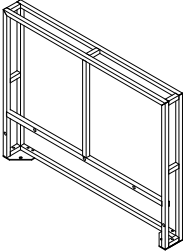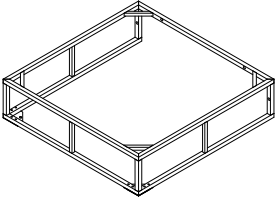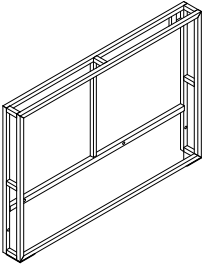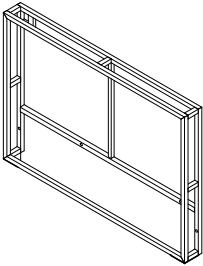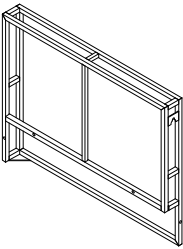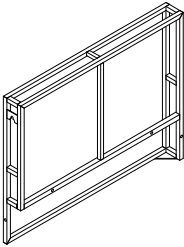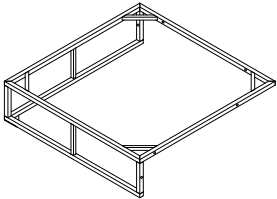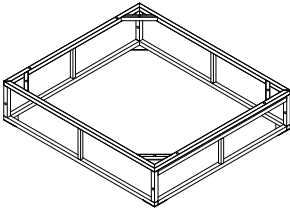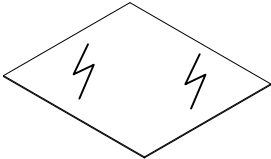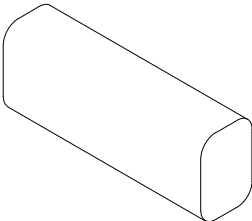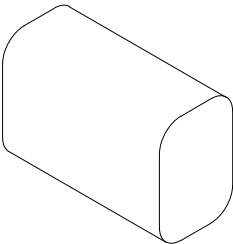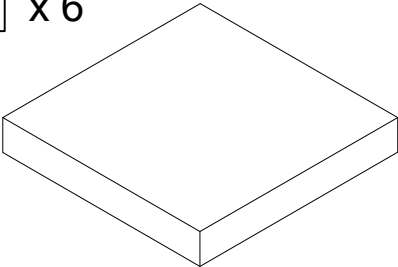A x 4  Back Chair (4 pcs)	B x 4  Seat Chair (4 pcs)	C x 1  Back Left Corner (1 pc)
C1 x 1  Back Right Corner (1 pc)	D x1  Hand Left Corner (1 pc)	D1 x1  Hand Right Corner (1 pc)
E x2  Seat Corner (2 pcs)	F x1  Top Table (1 pcs)	P x1  Glass (1 pc)
T x28  Leg (28 pcs)	U x 6  Back Chair Cushion (6 pcs)	V x 2  Hand Conner Cushion (2 pcs)
W x 6  Seat Cushion (6 pcs)		


Hardware List:

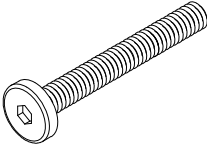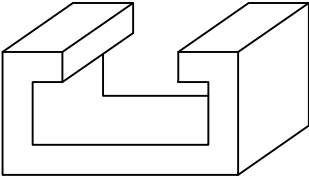2 x 84 pcs  BOLT M6 x 15MM	3 x 38 pcs  BOLT M6 x 40MM	4 x 122 pcs  FLAT WASHER M6
6 x 10 pcs  CONNECTOR 2	7 x 2 pcs  ALLEN KEY	


Ⓐ x 2

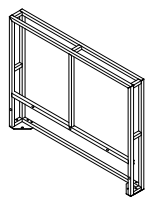


Ⓑ x 2

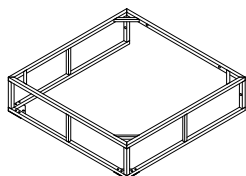


Ⓓ x 1

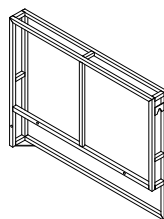


Ⓔ x 1

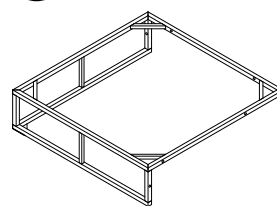


Ⓙ x 12




Ⓦ x 2

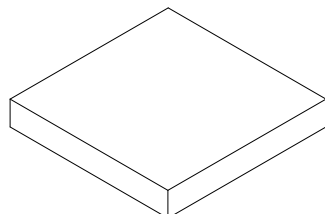


Ⓤ x 2

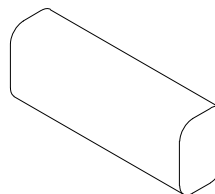


Ⓥ x 1

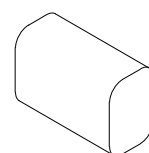


Ⓐ x 2

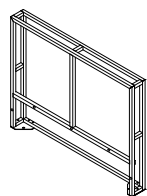


Ⓑ x 2

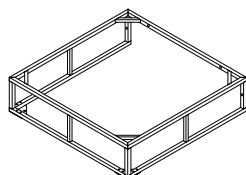


Ⓓ x 1

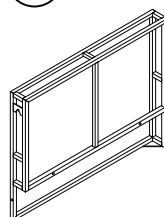


Ⓔ x 1

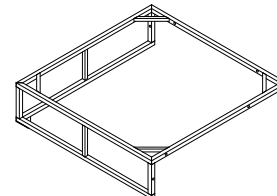


Ⓙ x 12




Ⓦ x 2

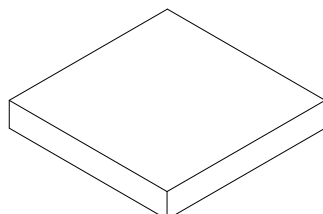


Ⓤ x 2

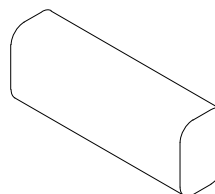


Ⓥ x 1

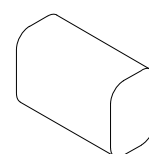


Ⓒ x 1

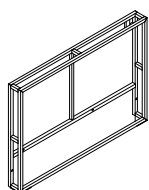


Ⓒ1 x 1

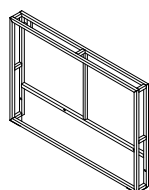


Ⓕ x 1

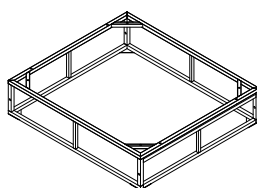


Ⓟ x 1

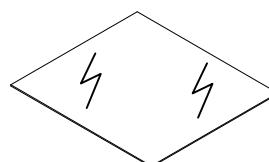


Ⓙ x 4



Ⓤ x 2

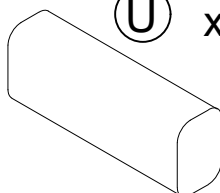

Ⓦ x 2

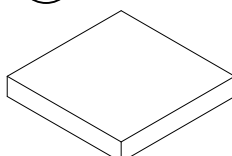


STEP 1

A	x4
----------	-----------

B	x4
----------	-----------

3	x20
----------	------------

4	x20
----------	------------

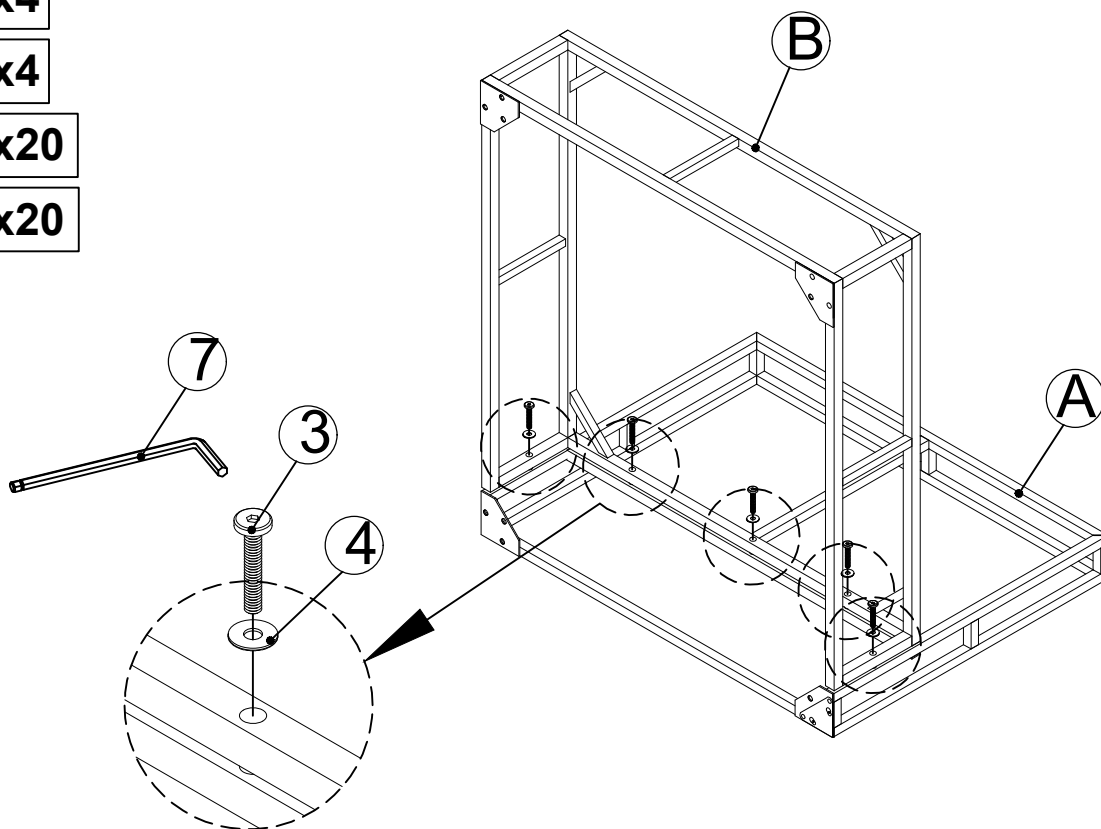

X4


Connect Seat Chair (B) & Back Chair (A), Tighten Bolt (3) & Flat Washer (4) with Allen Key (7).

STEP 2

T	x16
----------	------------

2	x48
----------	------------

4	x48
----------	------------

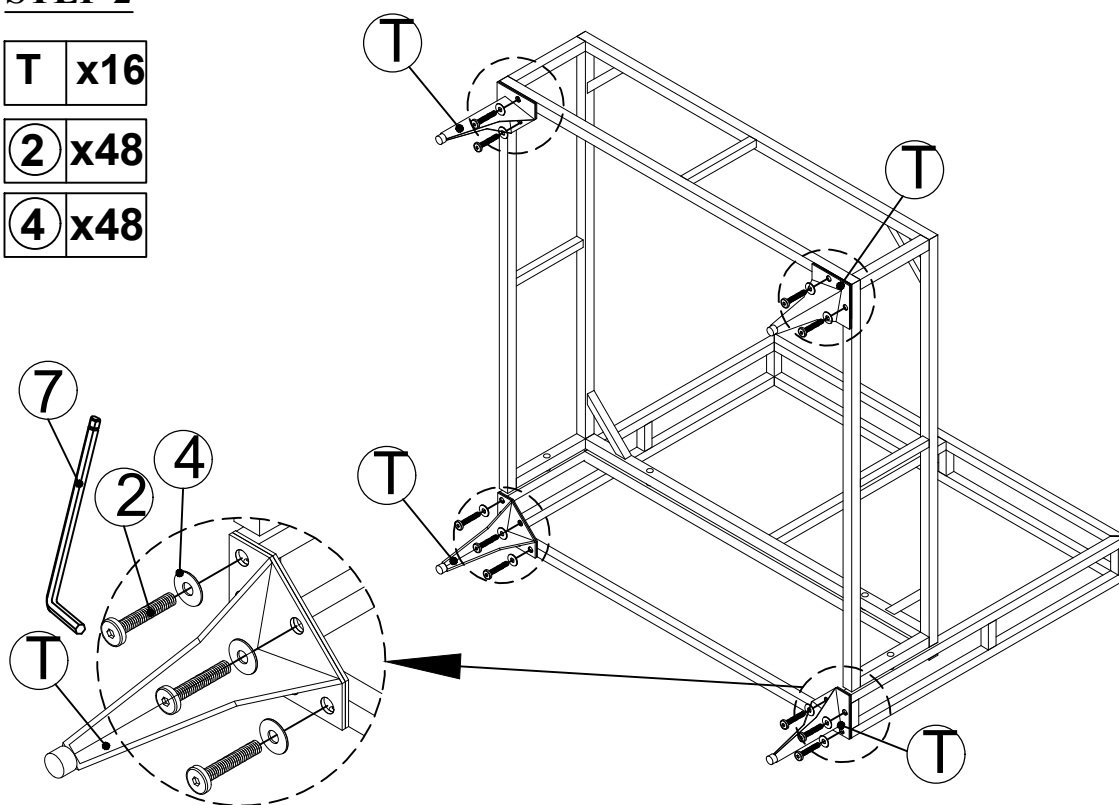


X4


Connect the part from step 1 with Leg (T), Tighten Bolt (2) & Flat Washer (4) with Allen Key (7).

STEP 3

U	x4
W	x4

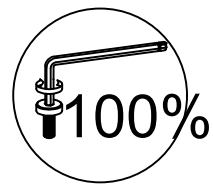



X4

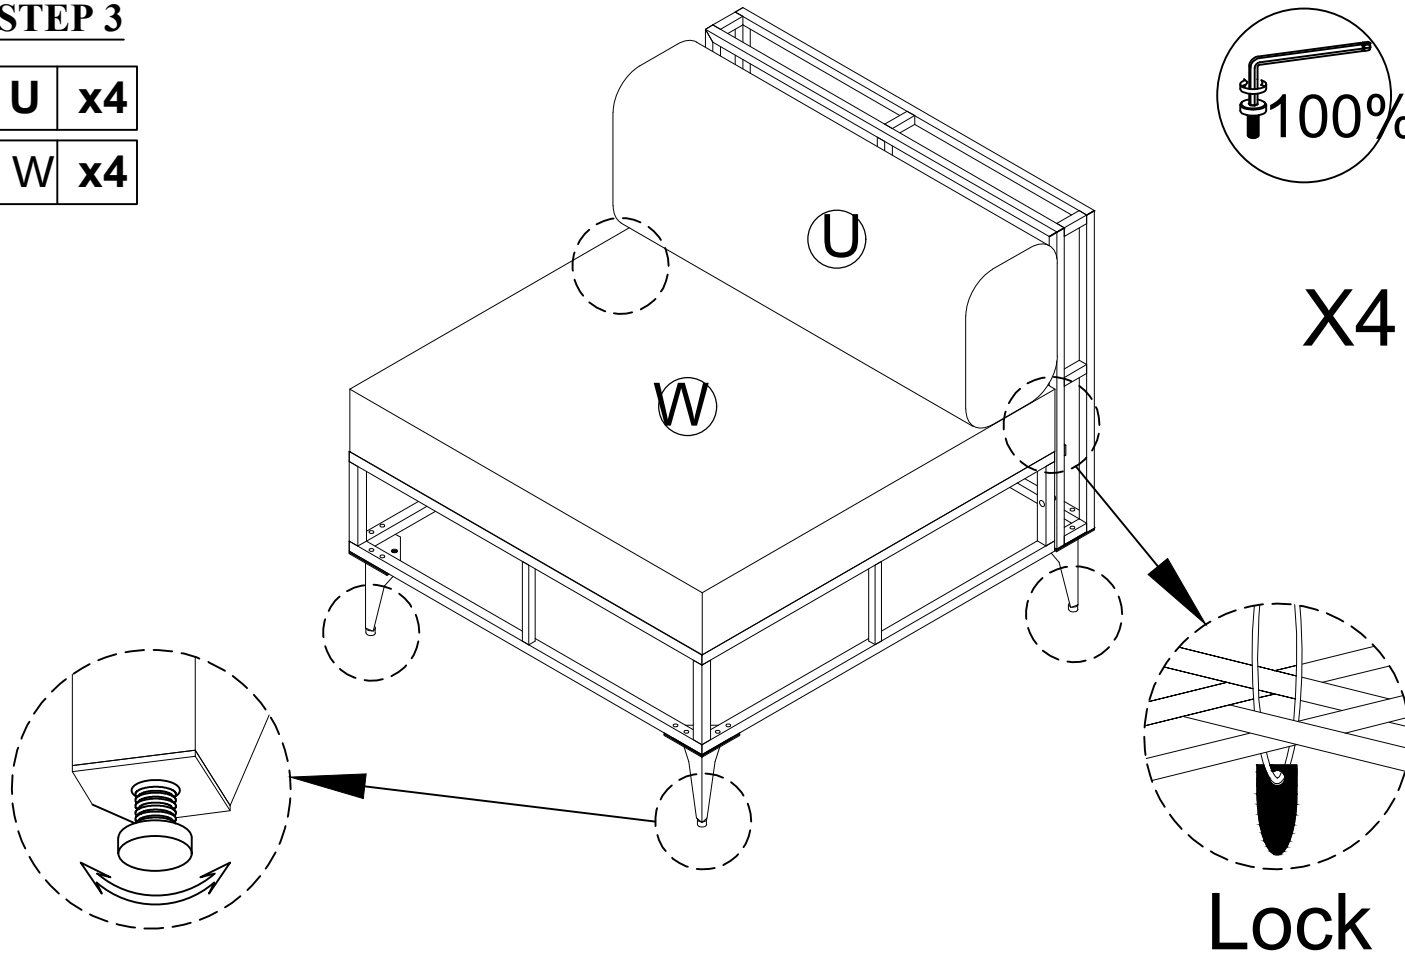

Put on Back Chair Cushion (U), Seat Cushion (W). Stick string to Conner. Finish Conner. to finish Chair.

STEP 4

C	x1
D	x1
3	x1
4	x1

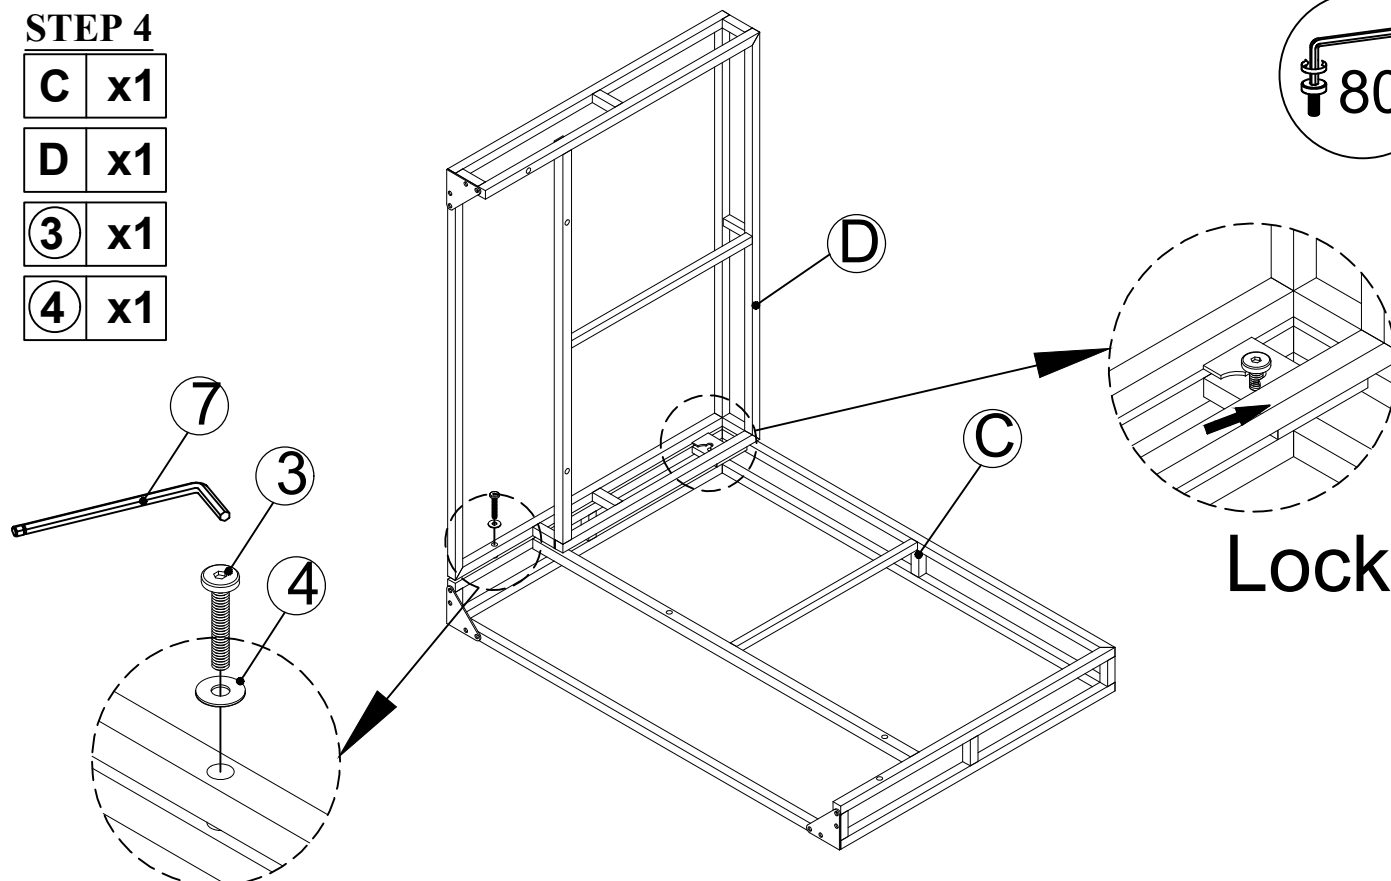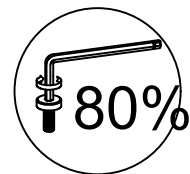


Connect Back Left Conner (C) & Hand Left Conner (D), Tighten Bolt (3) & Flat Washer (4) with Allen Key (7).

STEP 5

E	x1
---	----

3	x8
---	----

4	x8
---	----

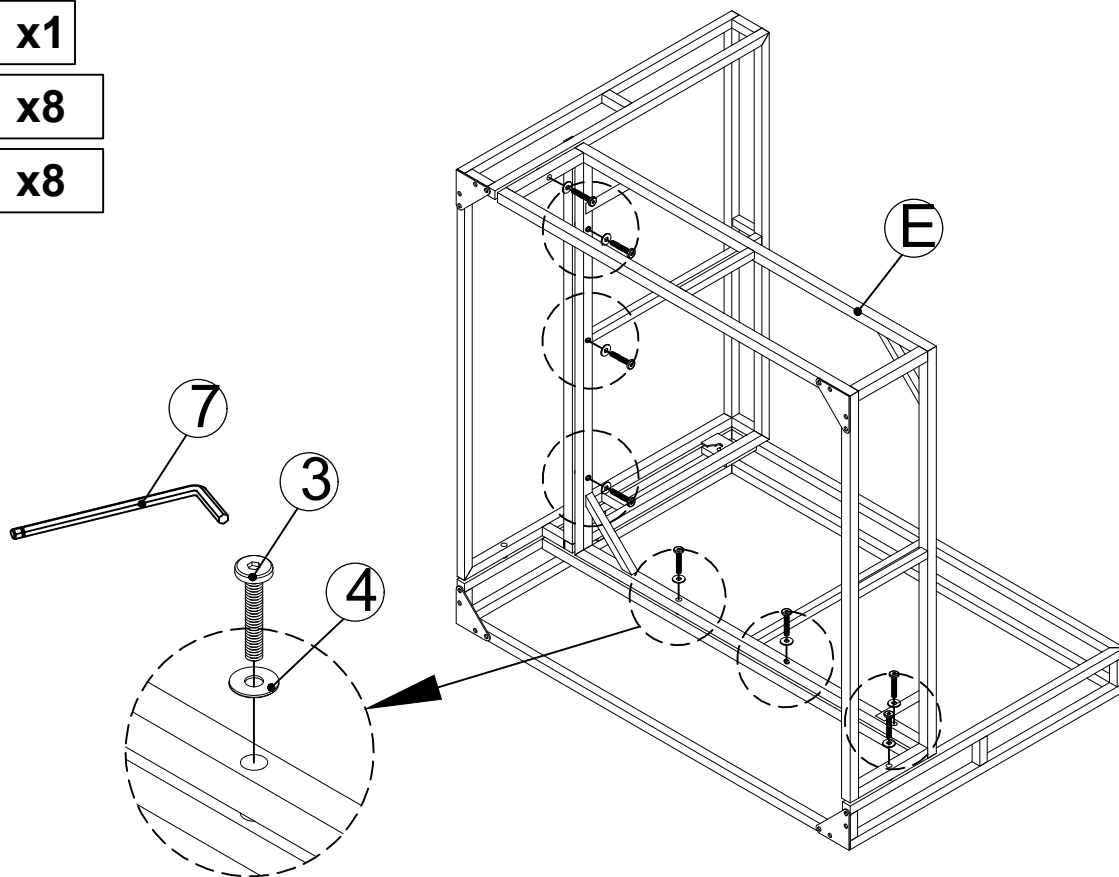



Connect Connect the part from step 4 with Seat Conner (E) , Tighten Bolt (3) & Flat Washer (4) with Allen Key (7).

STEP 6

T	x4
---	----

2	x12
---	-----

4	x12
---	-----

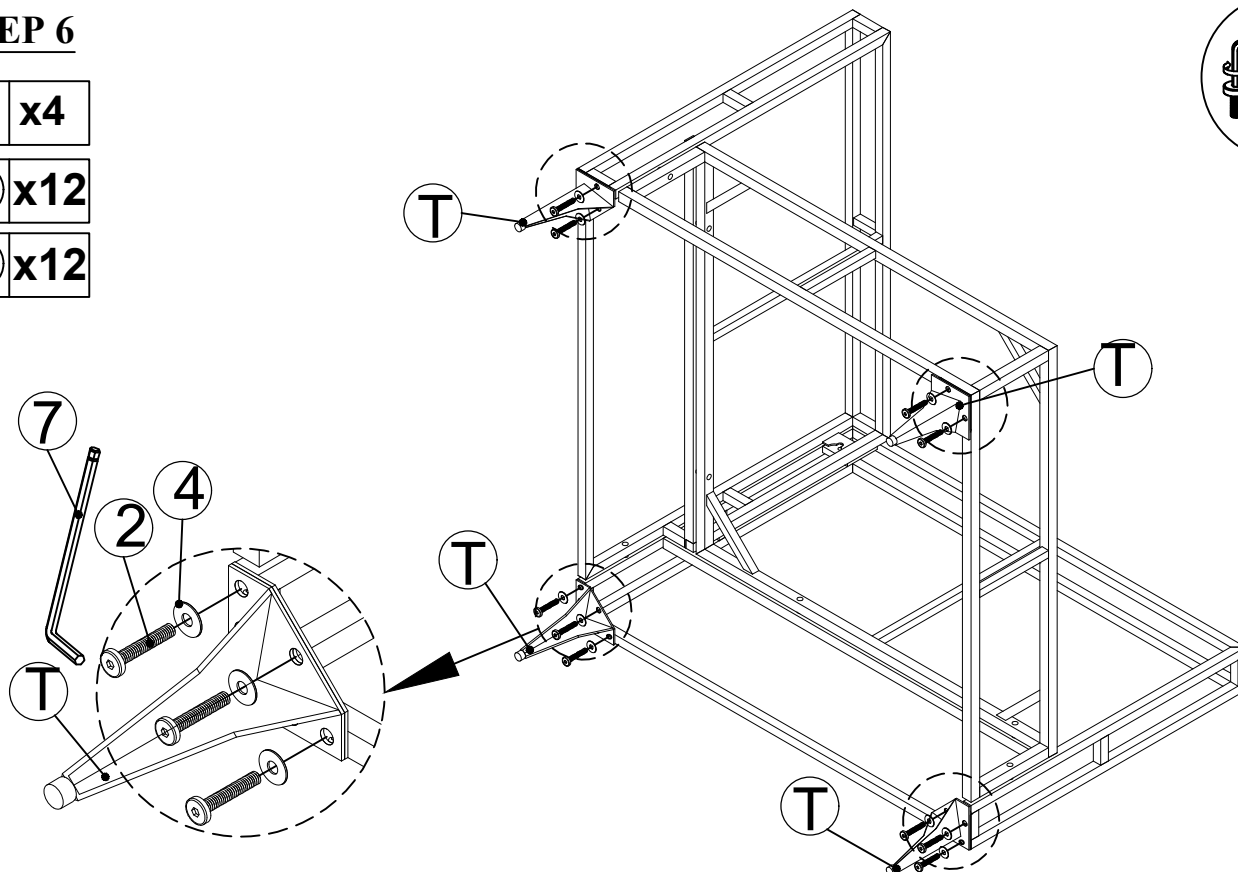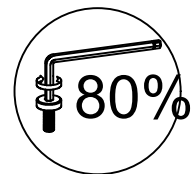


Connect Connect the part from step 5 with Leg (T) , Tighten Bolt (2) & Flat Washer (4) with Allen Key (7).

STEP 7

V	x1
---	----

U	x1
---	----

W	x1
---	----

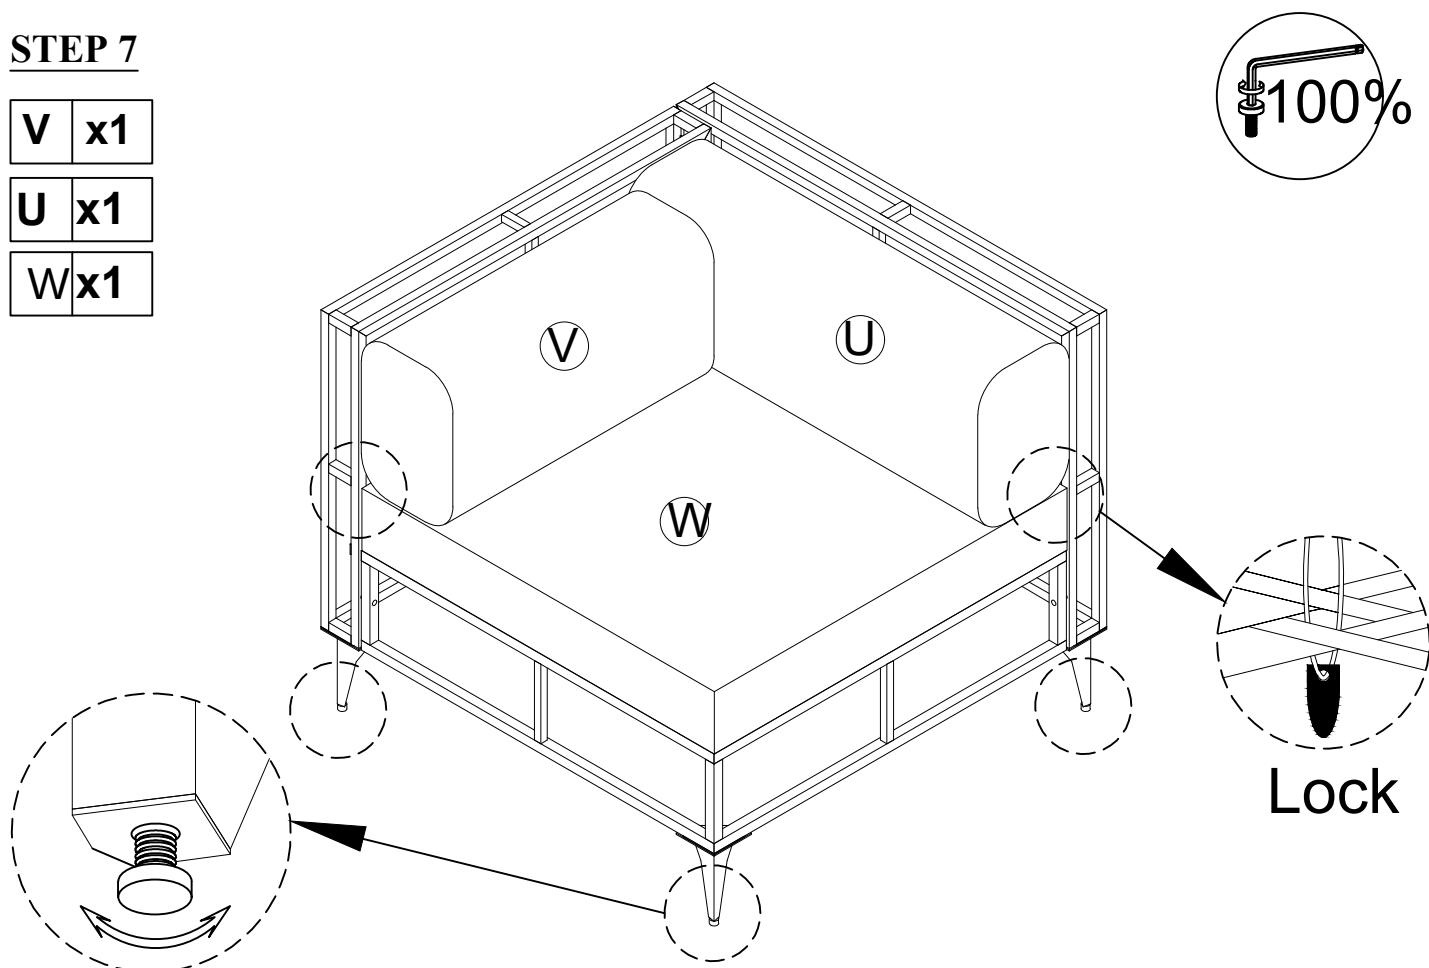

Put on Hand Conner Cushion (V), Back Chair Cushion (U), Seat Cushion (W). Stick string to Conner. Finish Conner.


STEP 8

C1	x1
----	----

D1	x1
----	----

3	x1
---	----

4	x1
---	----

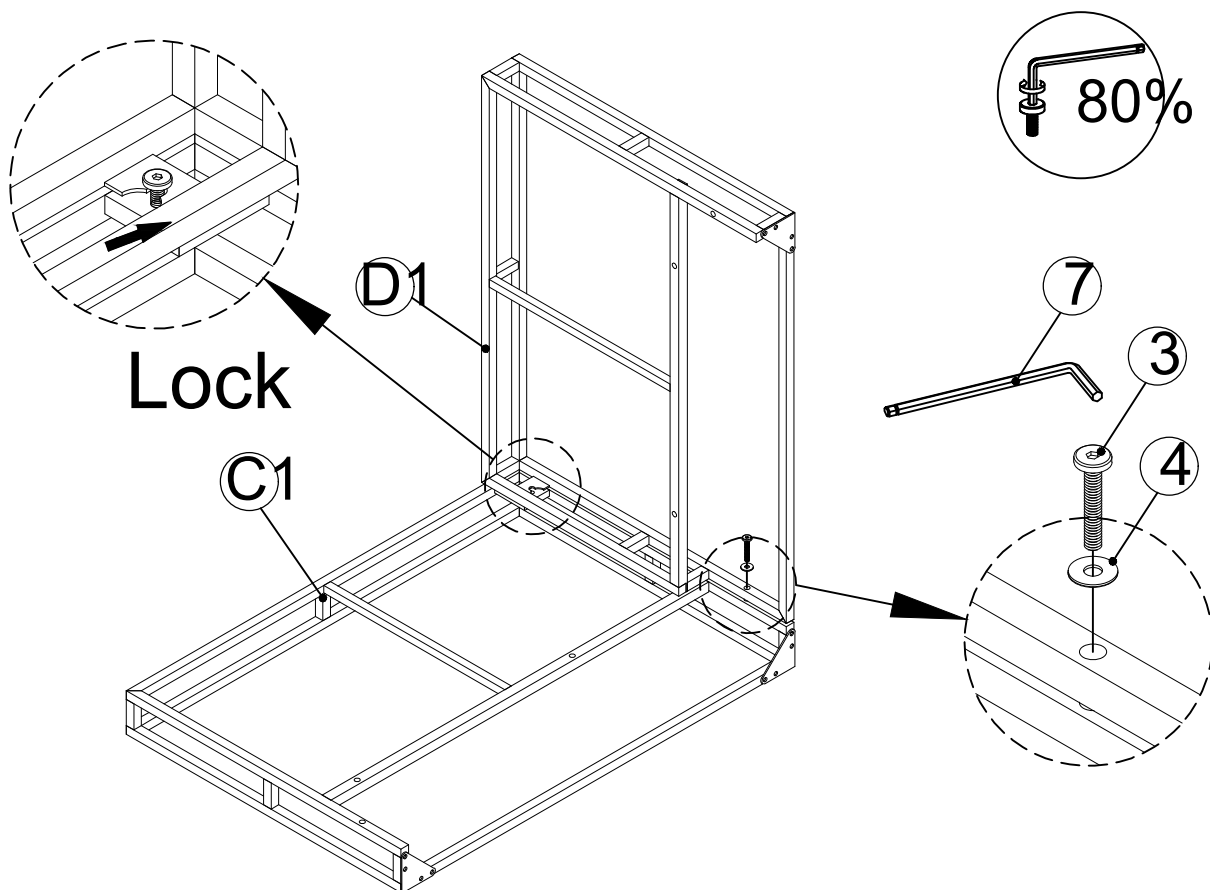


Connect Back Right Conner (C1) & Hand Right Conner (D1), Tighten Bolt (3) & Flat Washer (4) with Allen Key (7).

STEP 9

E x1

③ x8

④ x8

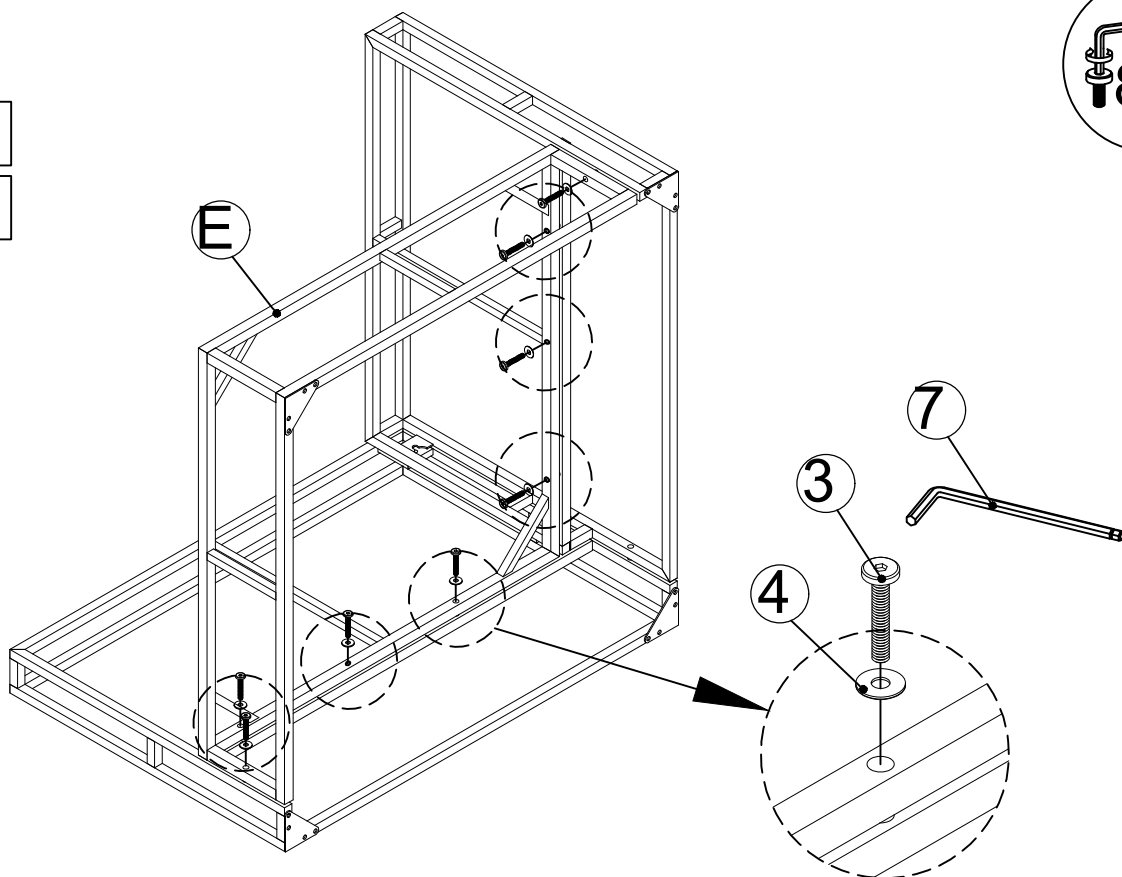


Connect Connect the part from step 8 with Seat Conner (E) , Tighten Bolt (3) & Flat Washer (4) with Allen Key (7).

STEP 10

T x4

② x12

④ x12

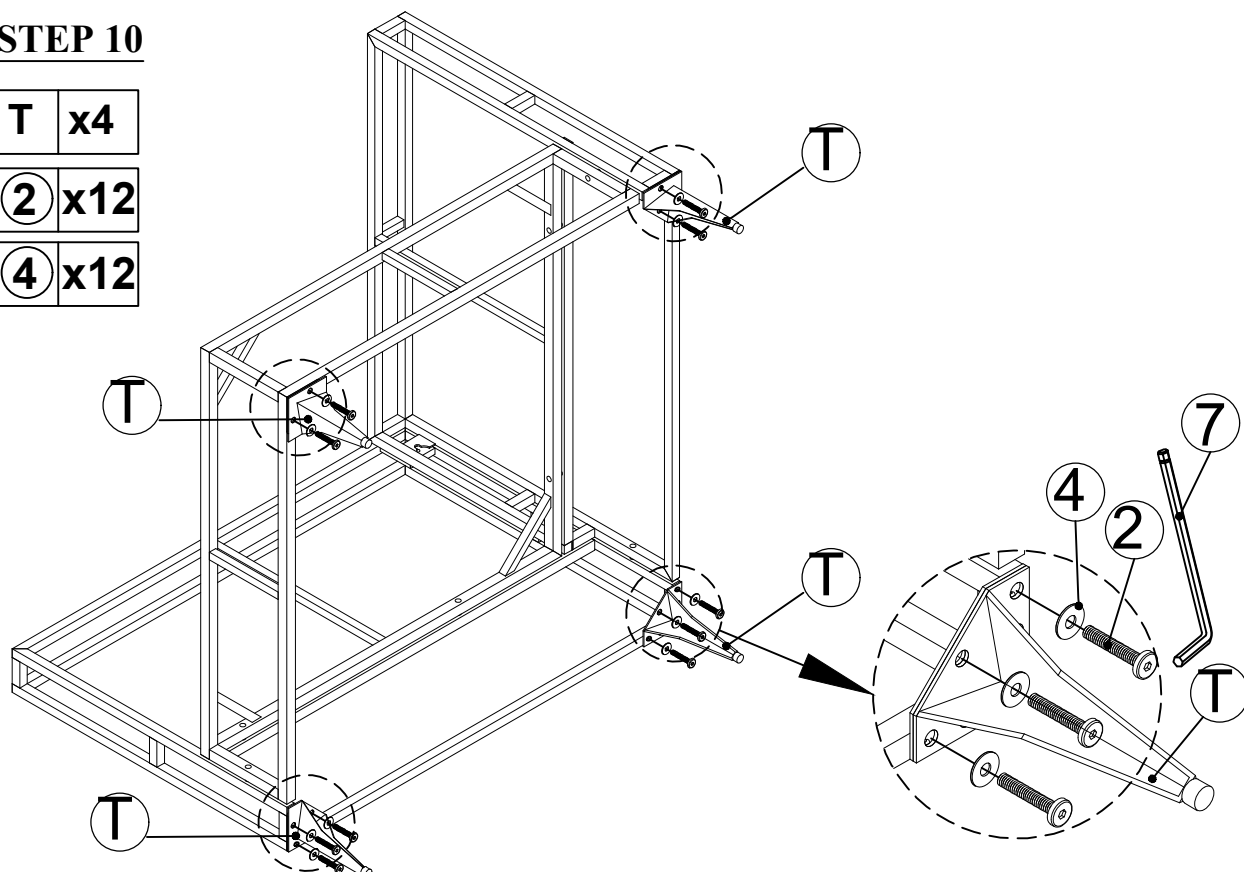


Connect Connect the part from step 9 with Leg (T) , Tighten Bolt (2) & Flat Washer (4) with Allen Key (7).

STEP 7

V x1

U x1

W x1

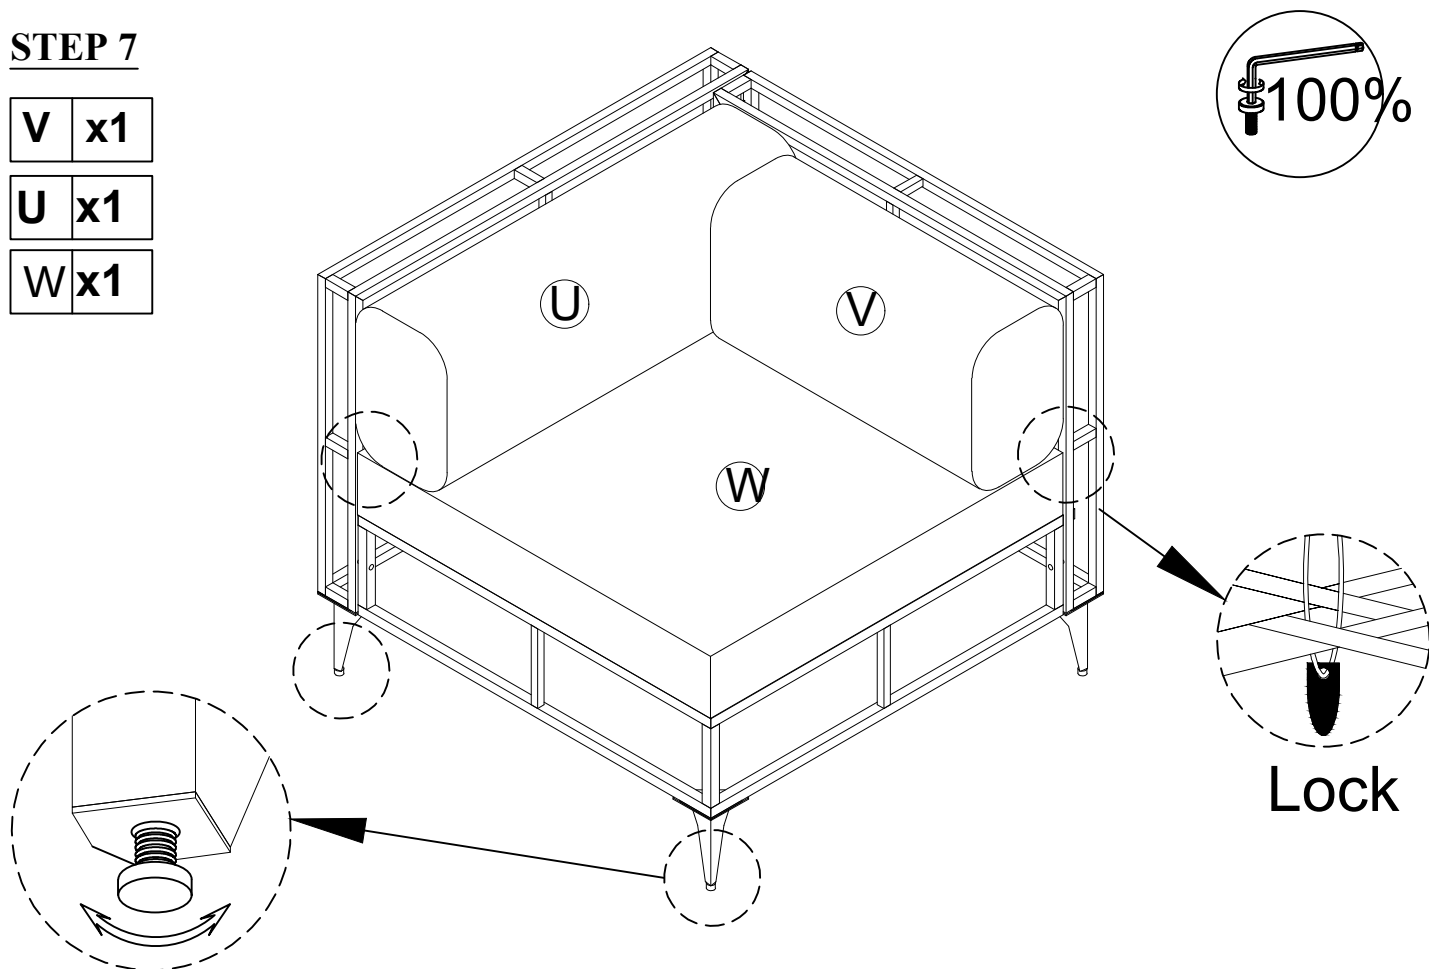

Put on Hand Conner Cushion (V), Back Chair Cushion (U), Seat Cushion (W). Stick string to Conner. Finish Conner.


STEP 8

F x1

T x4

2 x12


4 x12

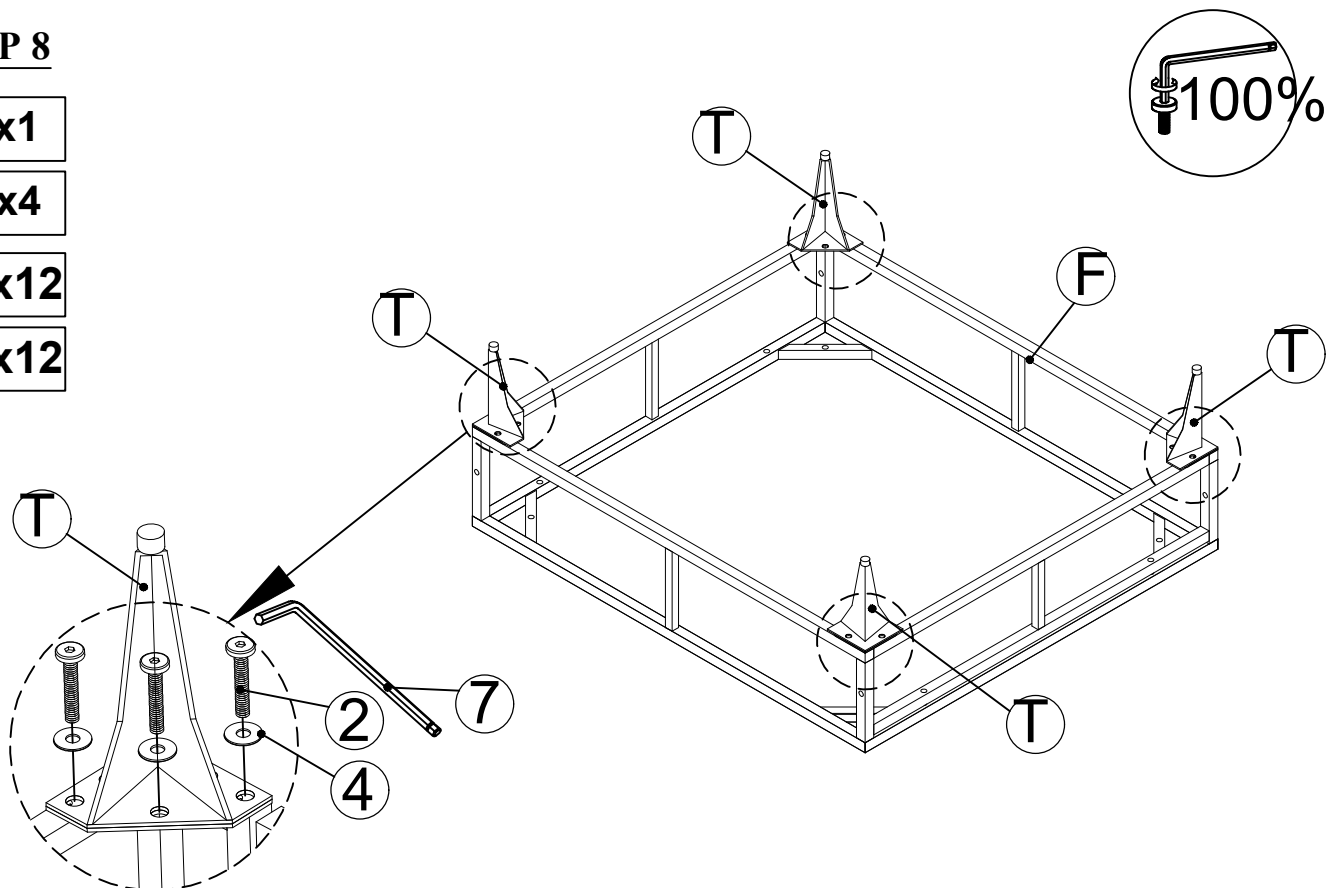

Connect Top Table (F) with Leg (T) , Tighten Bolt (2) & Flat Washer (4) with Allen Key (7).

STEP 9


P x1

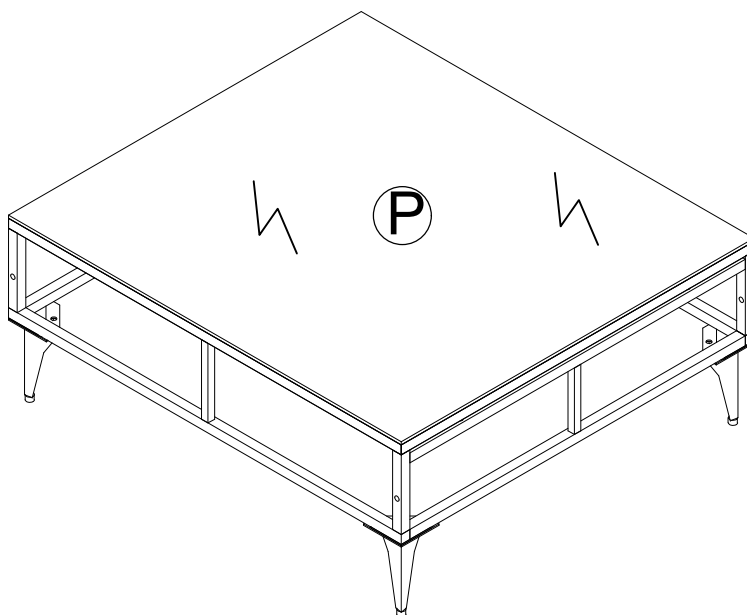


Put on Glass (P) to finish Table.

STEP 10

6 x10

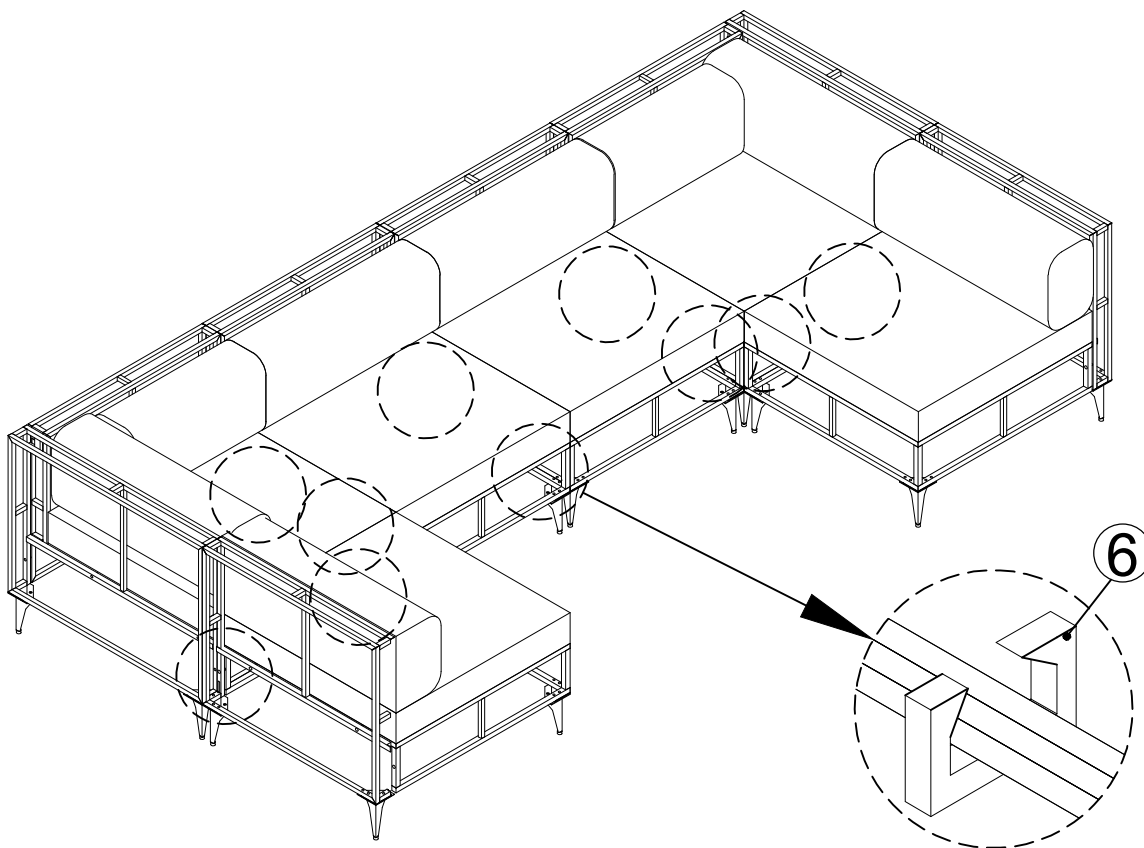

Connect all the part with Connector (6).

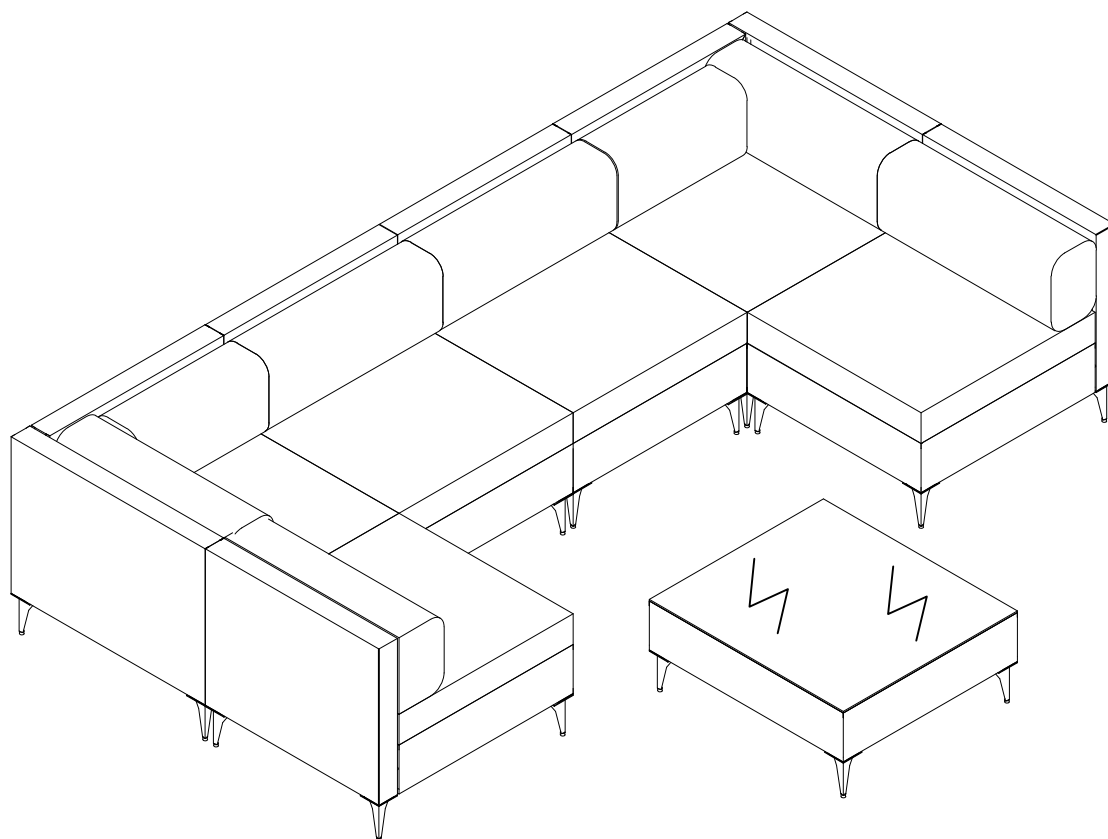

Finished