


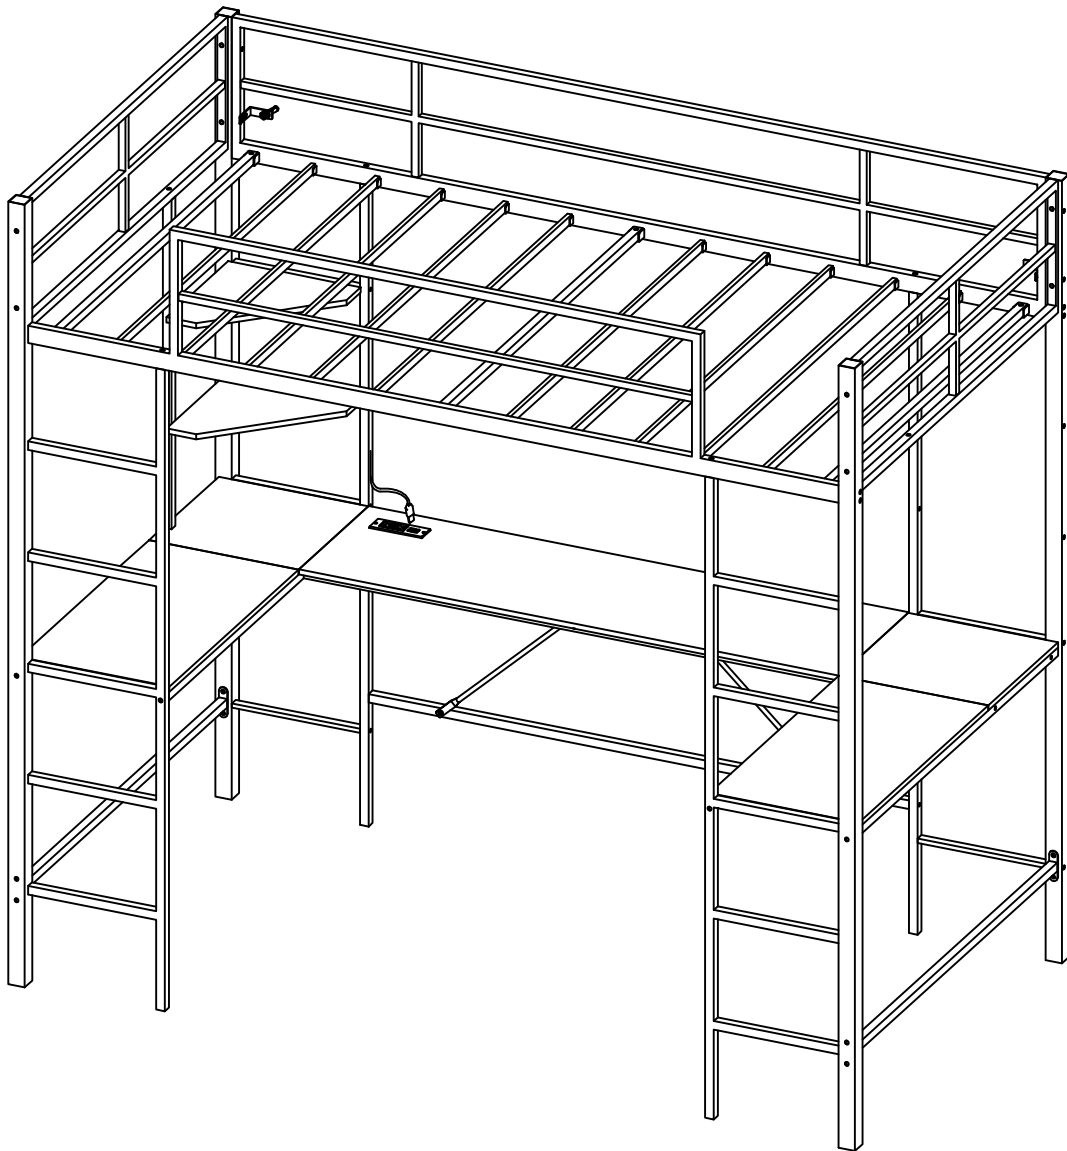


# Loft Bed

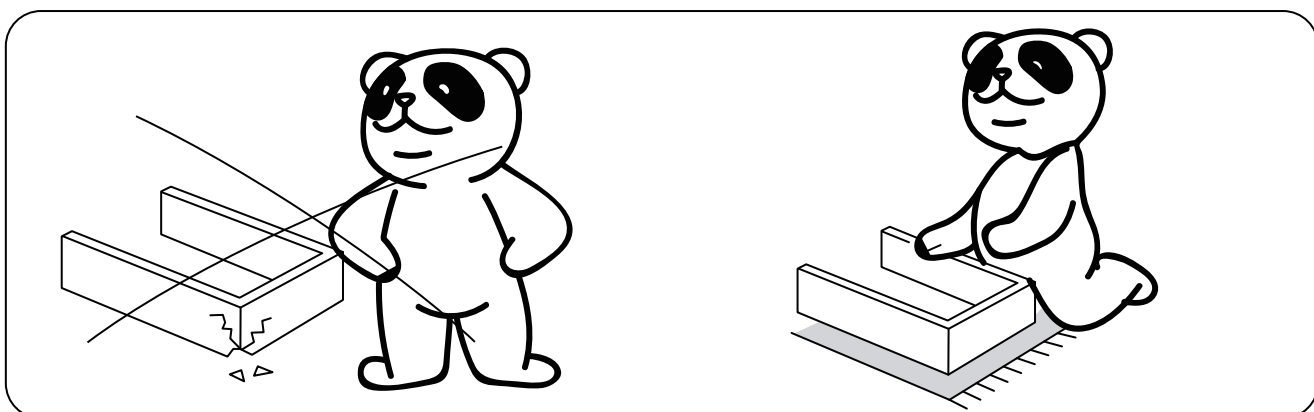


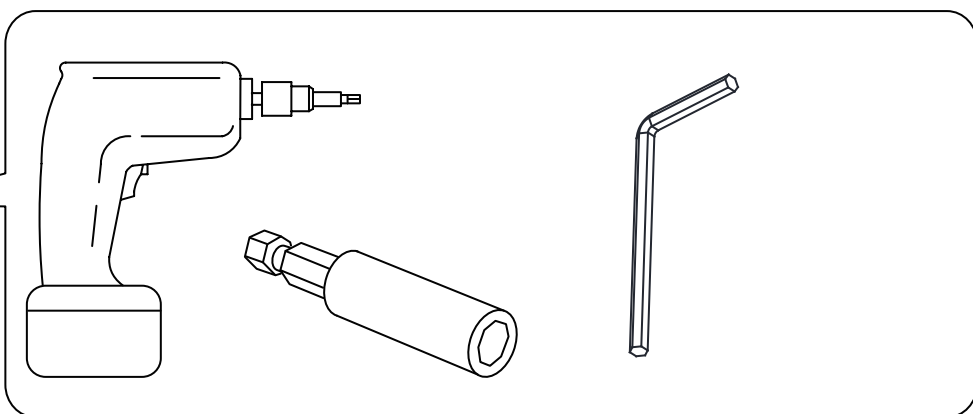

Violent installation is prohibited

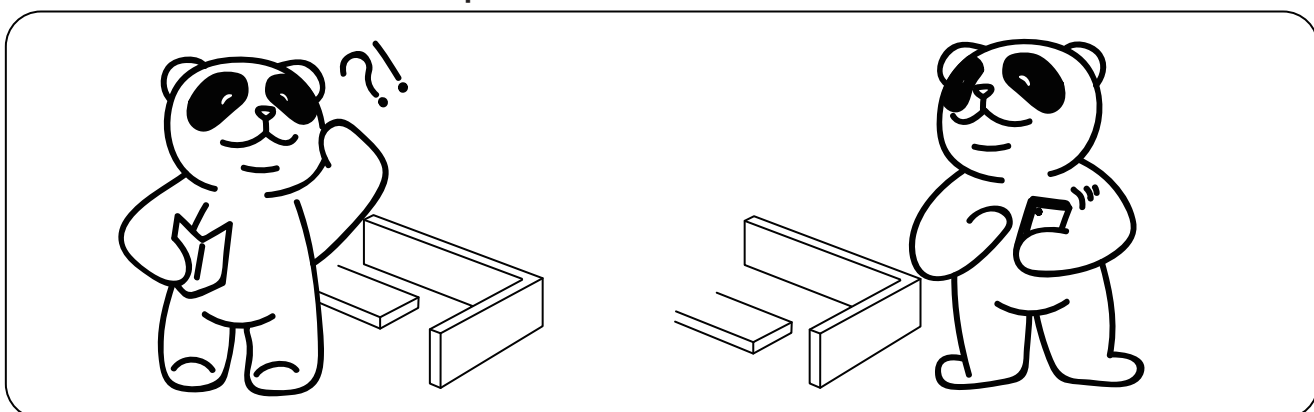


Please call if you need help

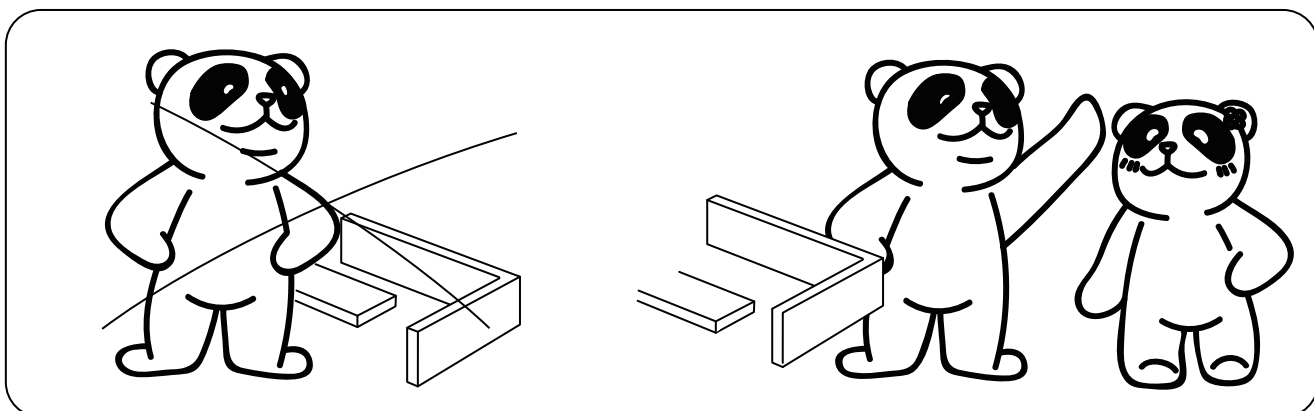


Multi-person cooperation is recommended

# Install parts


## PARTS LIST

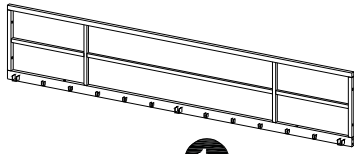

1  
x1

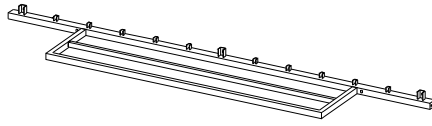

2  
x1

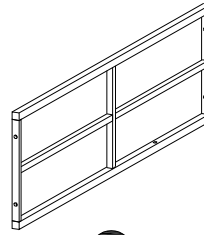

3  
x2



4  
x2




5  
x2




6  
x2



7  
x4

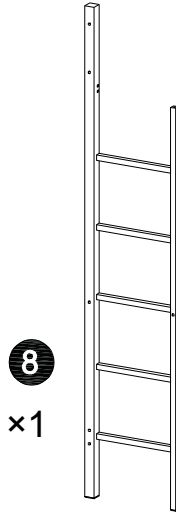


8  
x1

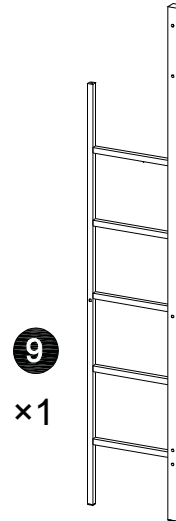


9  
x1




10  
x1

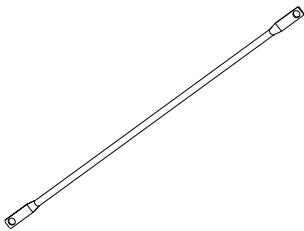


11  
x2

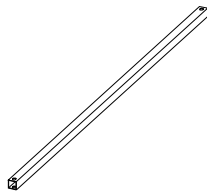

12  
x3

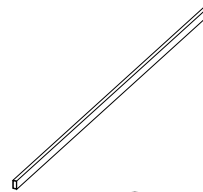

13  
x10




14  
x2




15  
x1




16  
x1

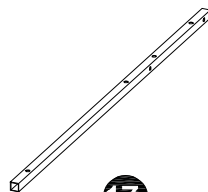


17  
x4

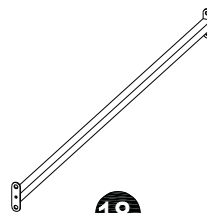


18  
x2




19  
x1

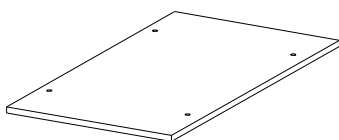


20  
x2



21  
x1



22  
x1



23  
x2

# HARDWARE LIST



**A**

M6\*10  
x8



**B**

M6\*25  
x6




**C**

M6\*28  
x23+2




**D**

M6\*32  
x8




**E**

M6\*40  
x27+2




**F**

M6\*50  
x4



**G**

M6\*60  
x15+1



**H**

M8\*60  
x8




**J**

M6\*17  
x20+2



**K**

3.5\*12  
x2



**L**

M8\*60  
x2




**M**

φ18\*8  
x38+3



**N**

x1




**O**

M4  
x2




**P**

x1




**Q**

x2



**R**

x1

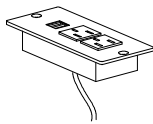

**S**

x1




**T**

x3

**Note:**


1. Should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.

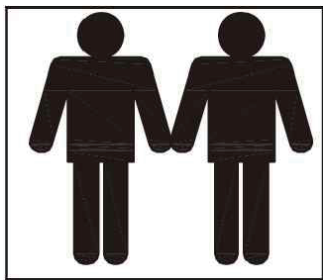

**It needs at least two people to install.**




**Before starting the assembly, you must read the whole manual and follow the instructions**


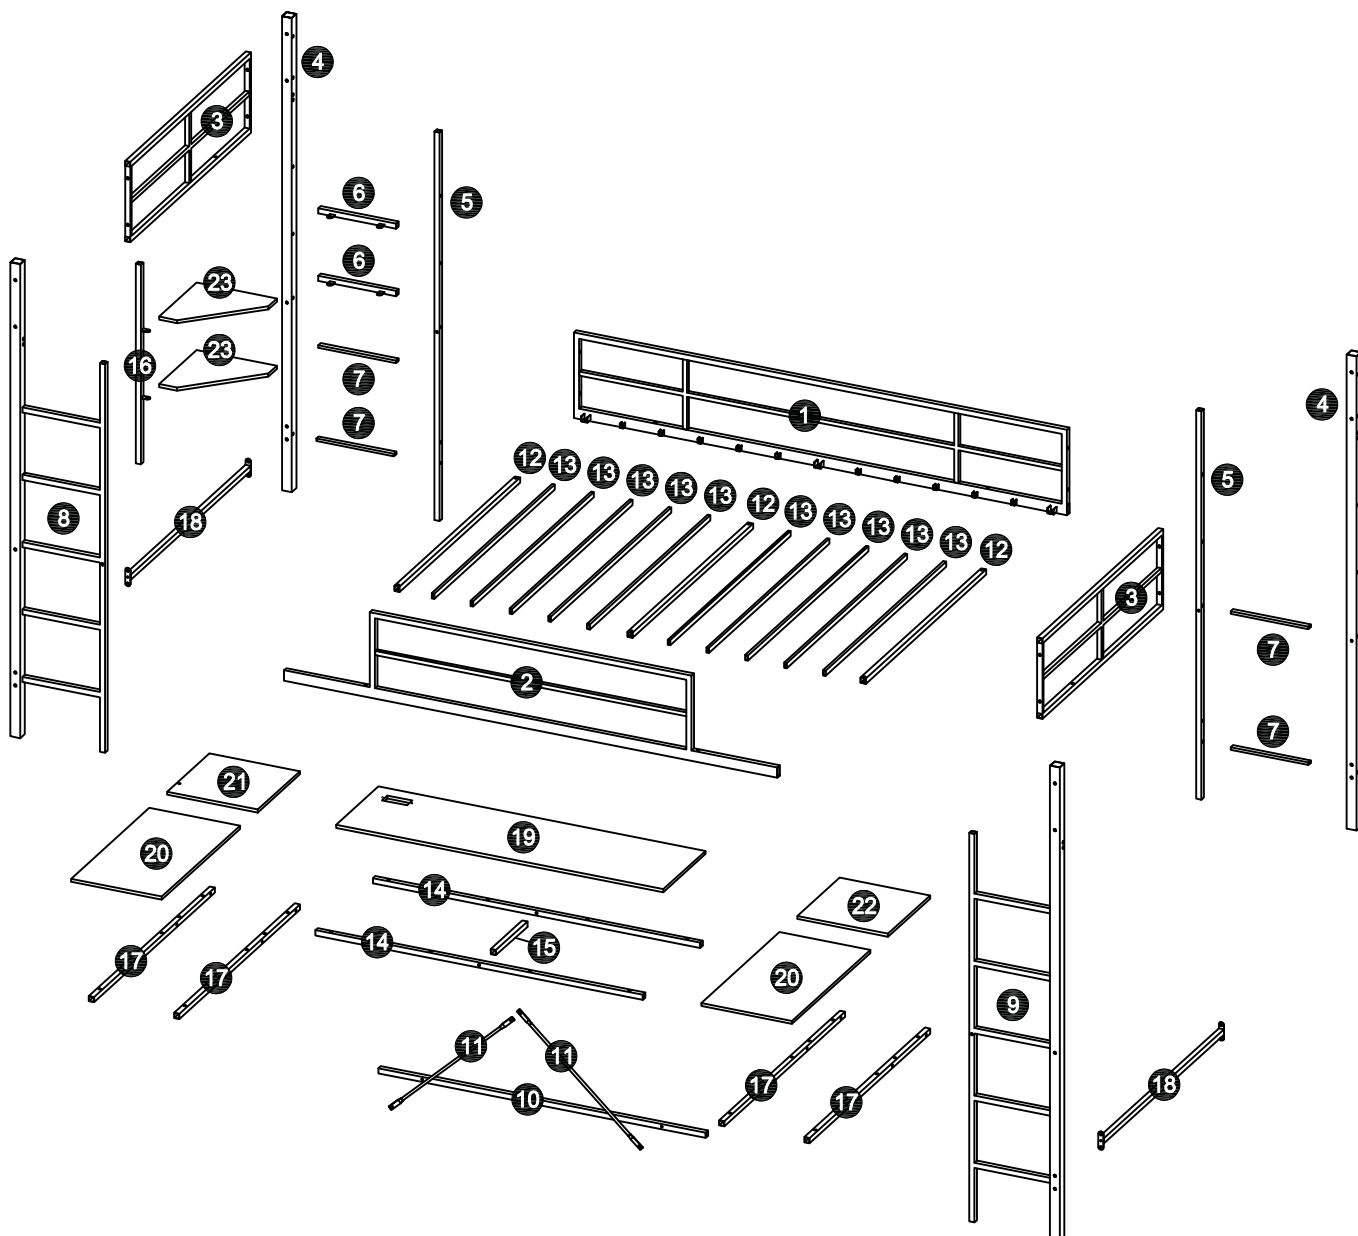



1

Please pay attention to the direction of the holes.

Notice that the holes are located a little above.

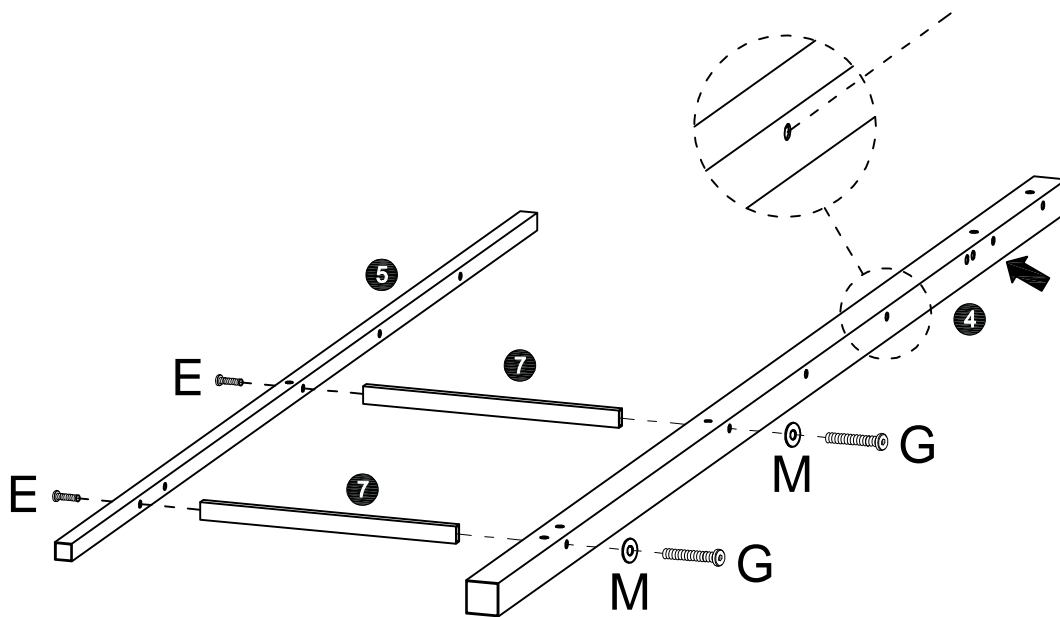


E	M6*40	G	M6*60	M	φ18*8
	x2		x2		x2







2

The hole is tilted toward the inner side.

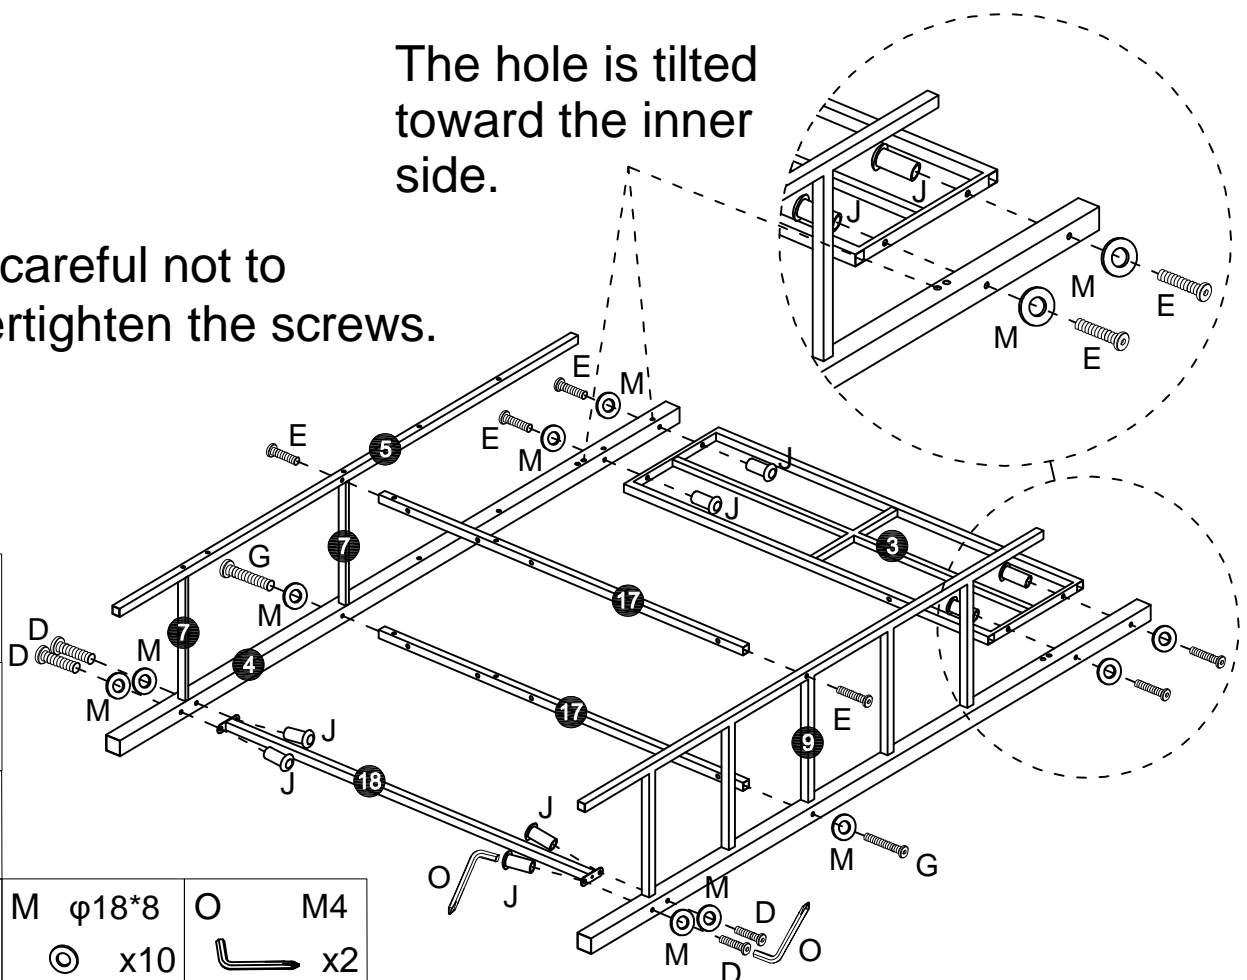

Be careful not to overtighten the screws.




D	M6*32				
	x4				
E	M6*40				
	x6				
G	M6*60				
	x2				
J	M6*17	M	φ18*8	O	M4
	x8		x10		x2

3

Notice that the holes are located a little above.



Please lock the separate iron frames together before locking the screws G.

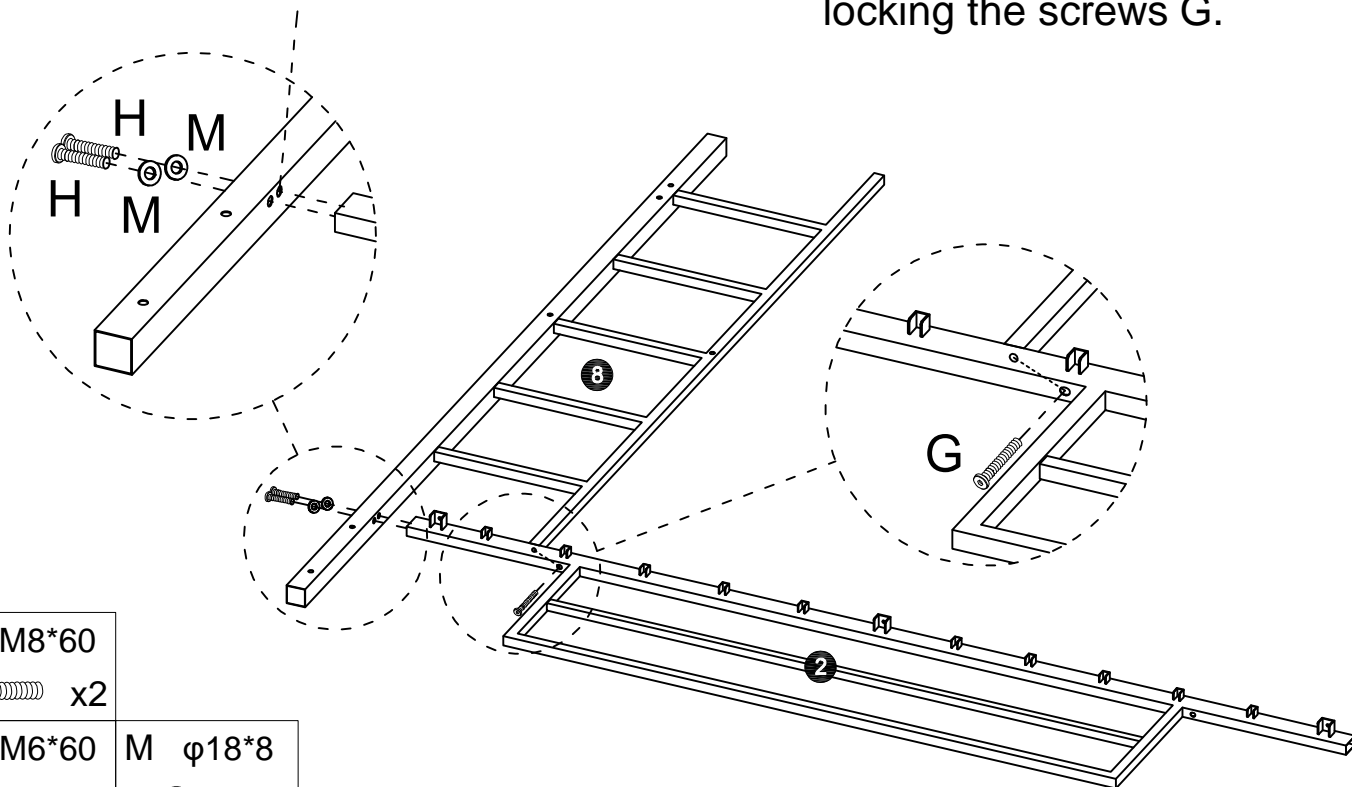

H M8\*60

 x2


G M6\*60

 x1

M φ18\*8

 x2

4

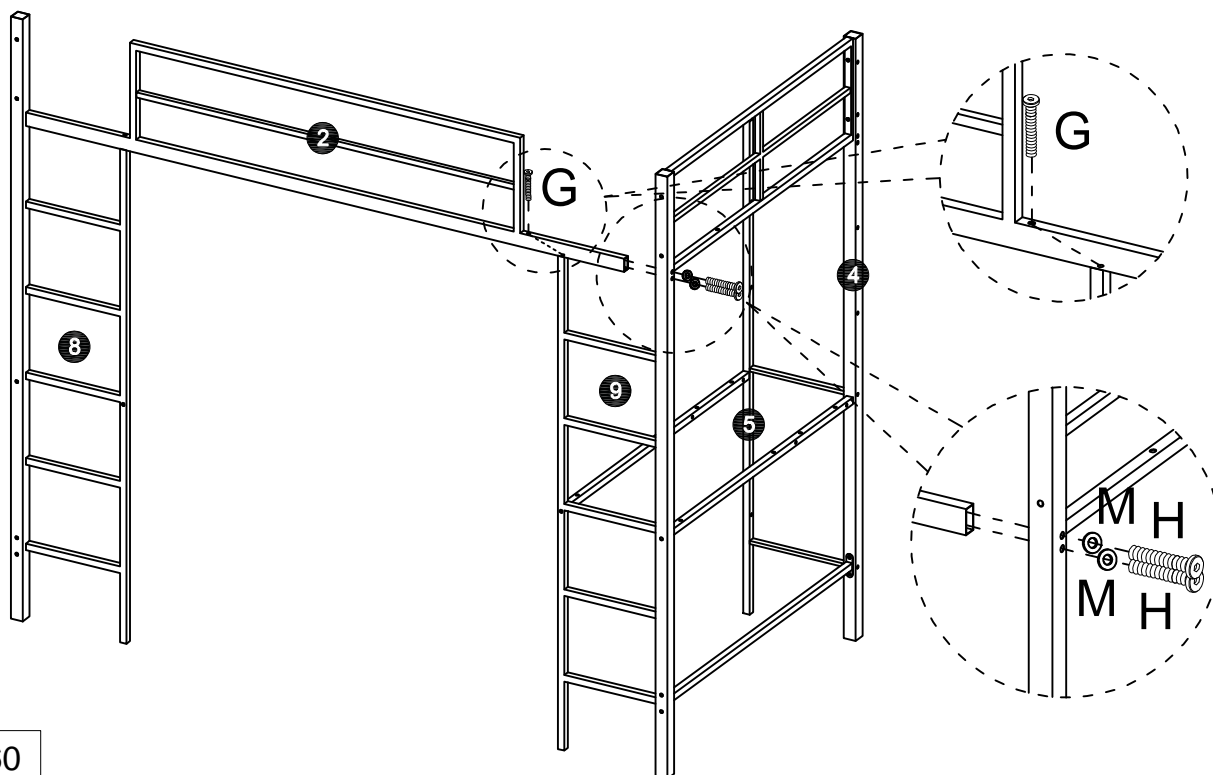

H M8\*60

 x2

G M6\*60

 x1

M φ18\*8

 x2




Please lock the separate iron frames together before locking the screws G.

5


Please pay attention to the direction of the holes.

Notice that the holes are located a little above.

The two iron plates are positioned on the lower side of the tube.

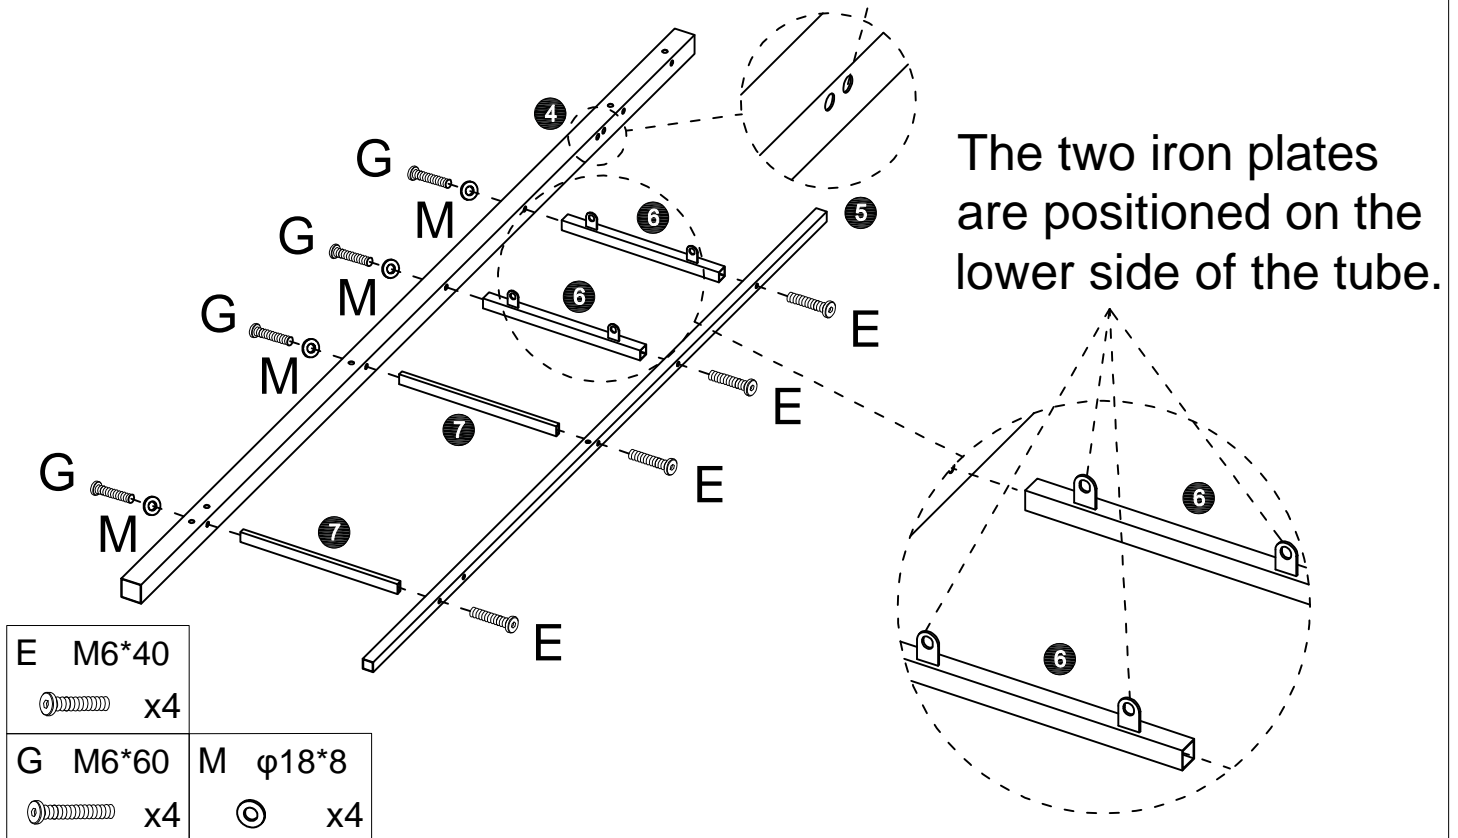


6

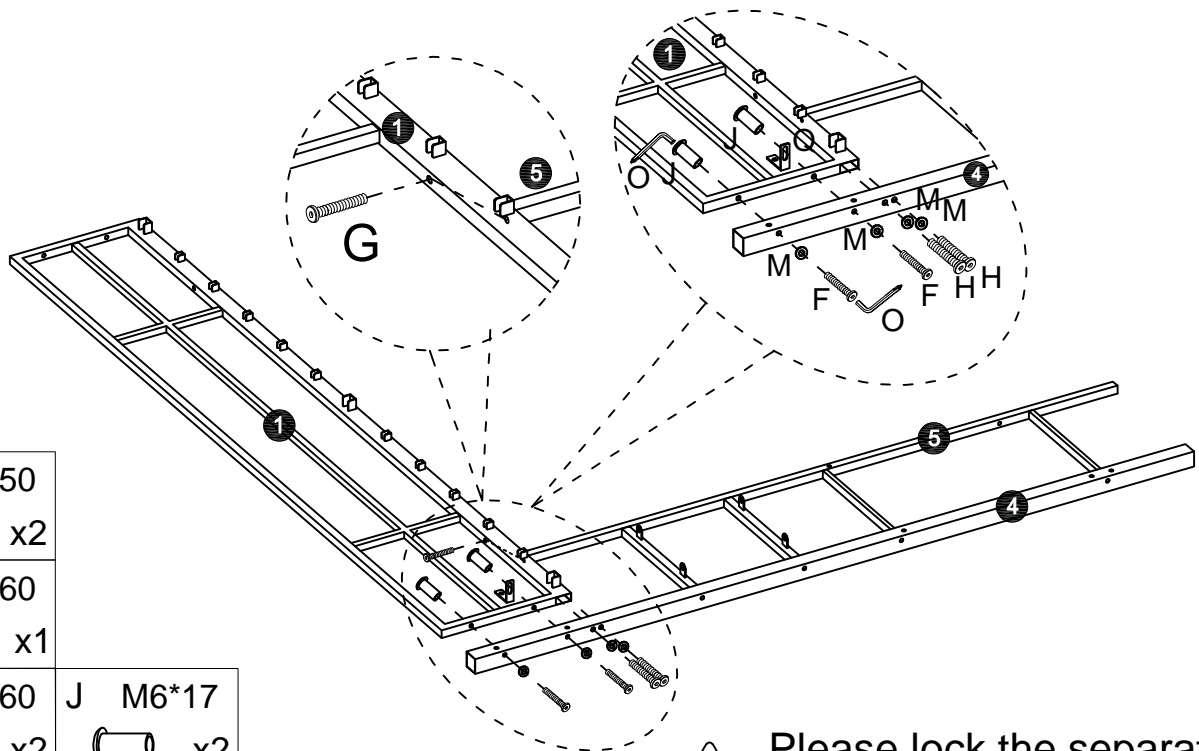

Please lock the separate iron frames together before locking the screws G.




7

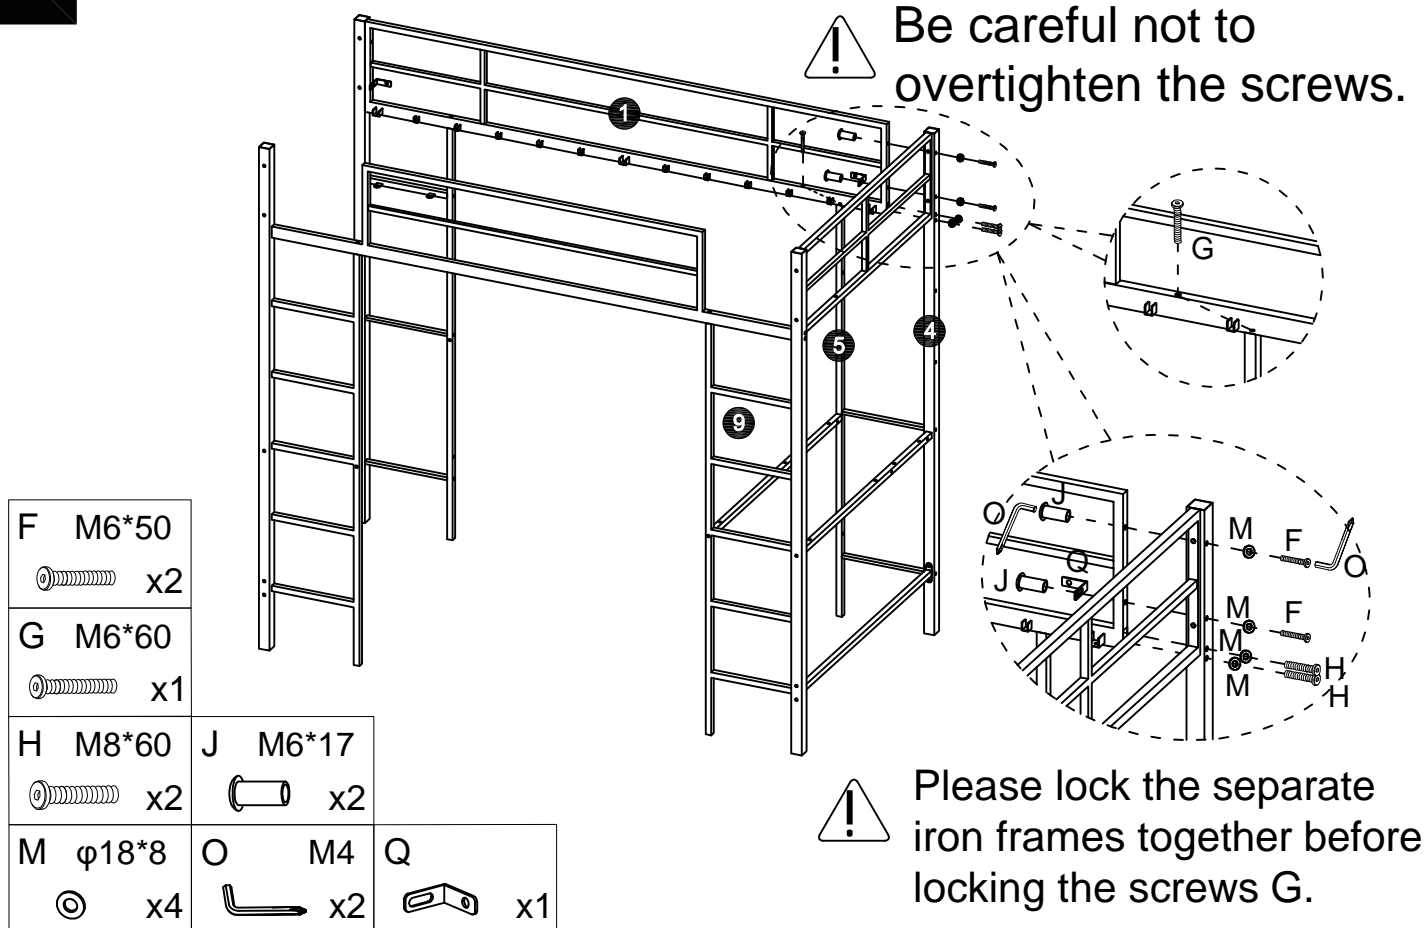



8

Please pay attention to the direction of the holes.

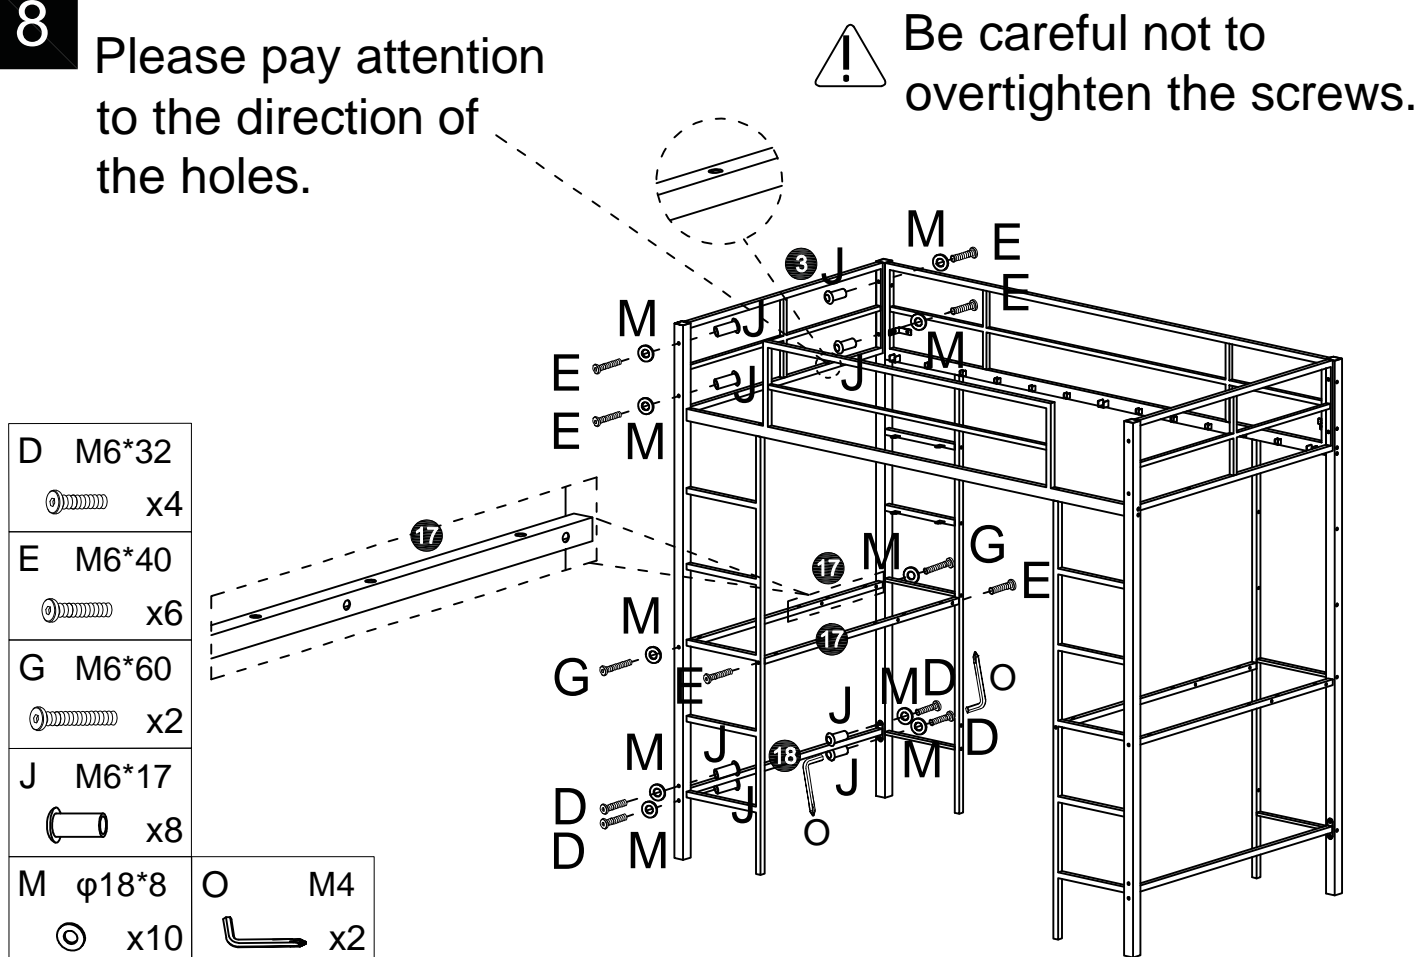

9



Please pay attention  
to the direction of  
the holes.

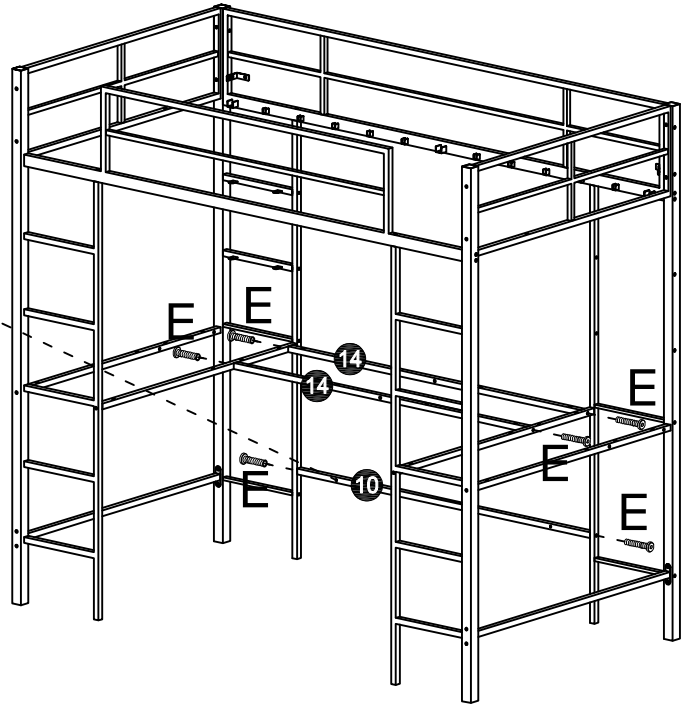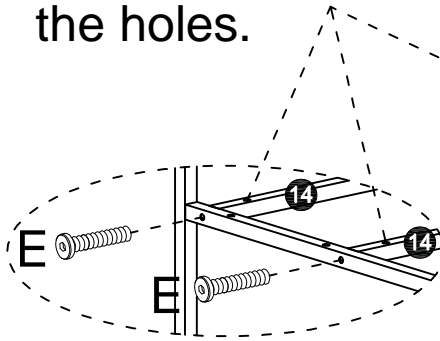

E M6\*40

 x6

10

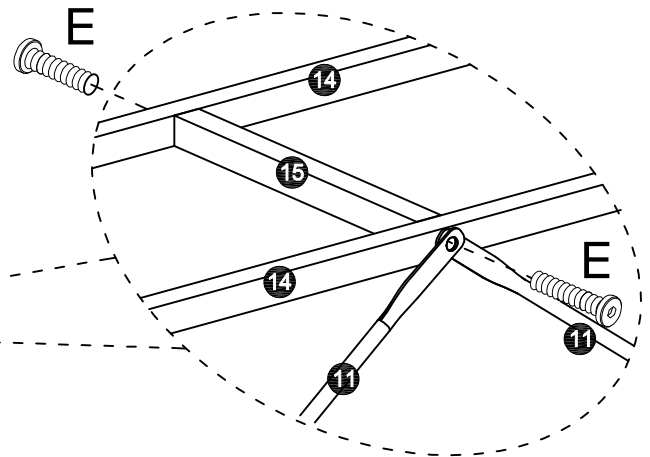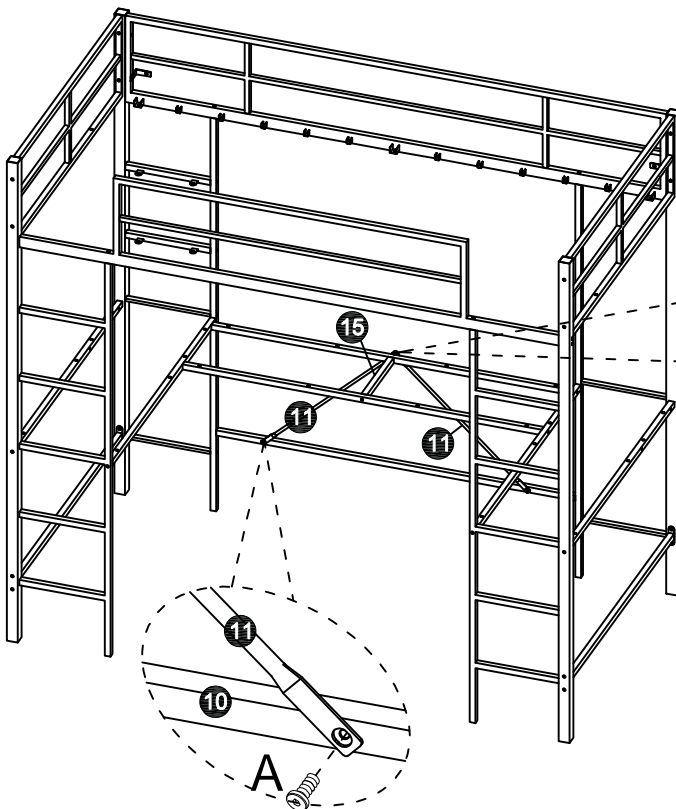


A M6\*10




 x2

E M6\*40


 x2

# 11

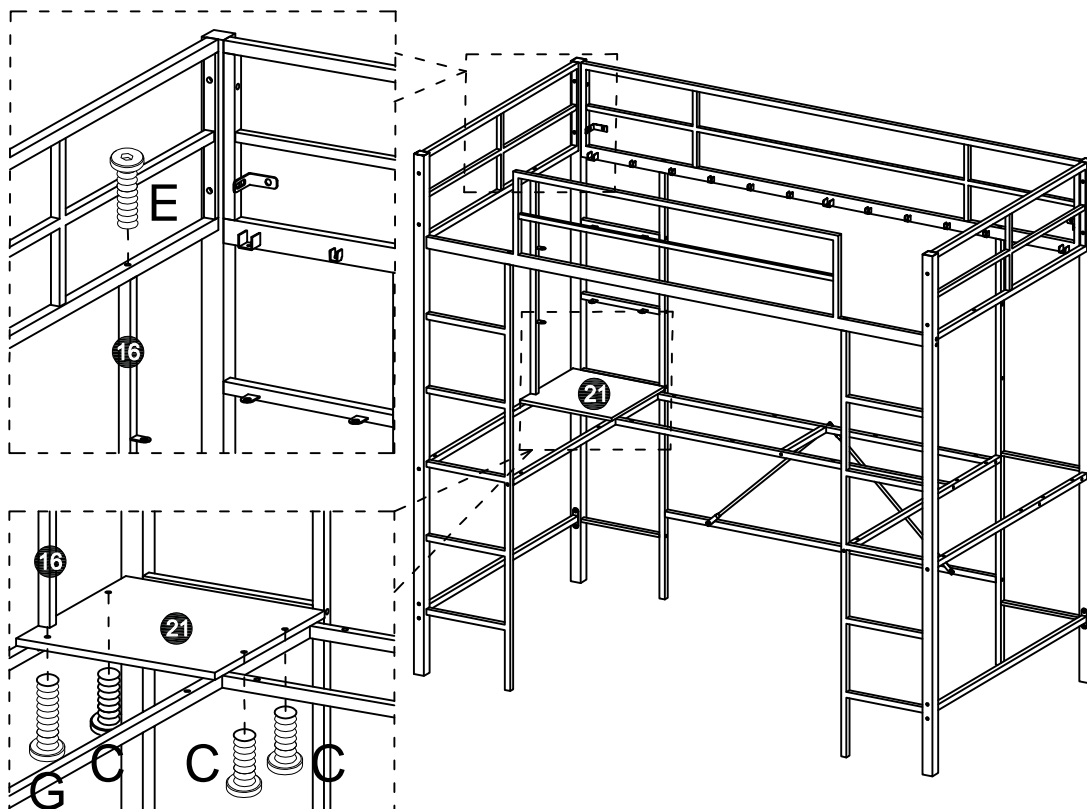



C	M6*28
	x3
E	M6*40
	x1
G	M6*60
	x1

# 12


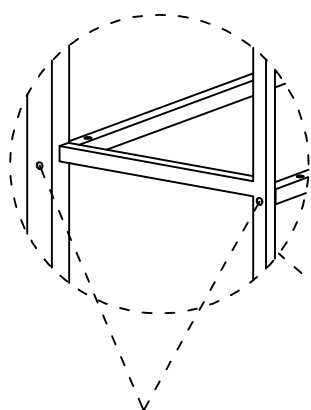



If the planks do not align during installation, loosen the screws first.

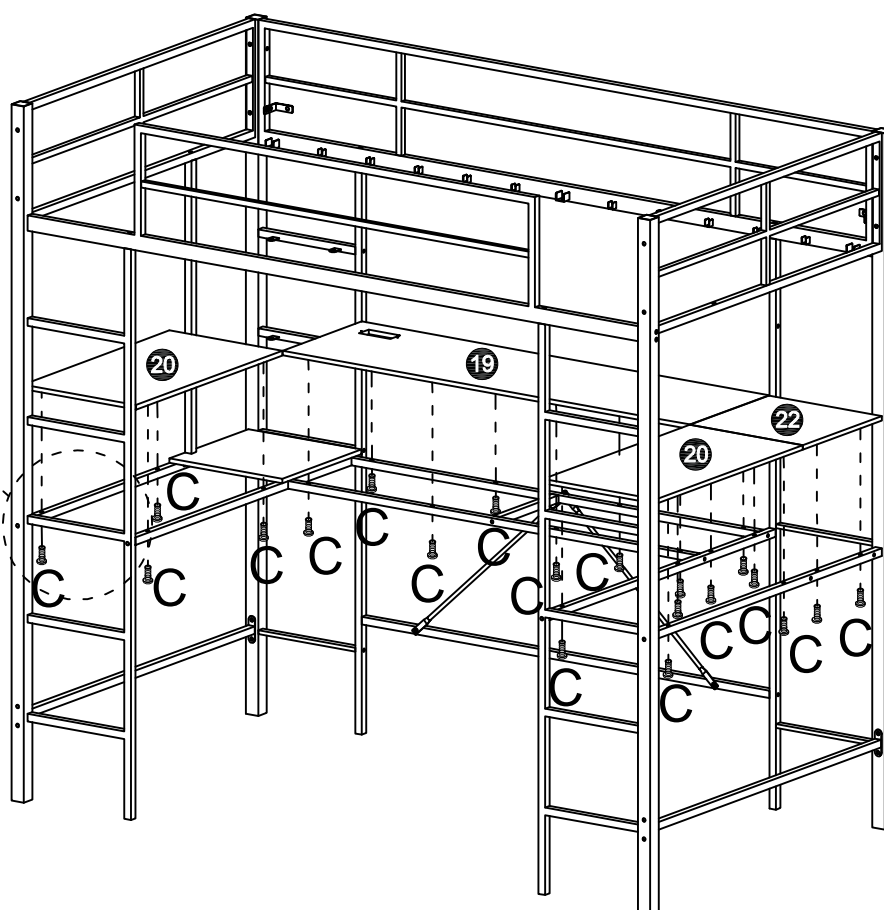


C	M6*28
	x20

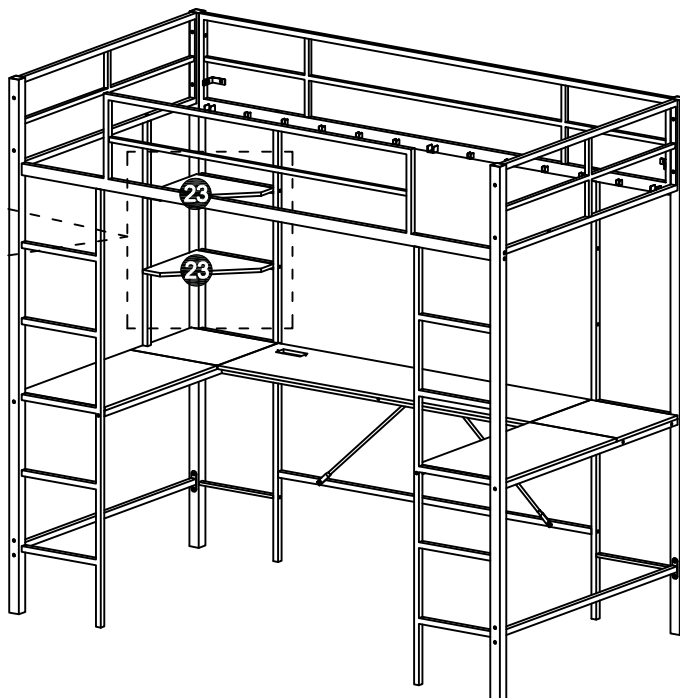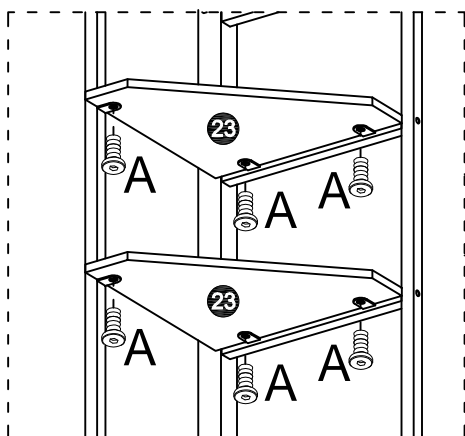

13




A M6\*10  
 x6

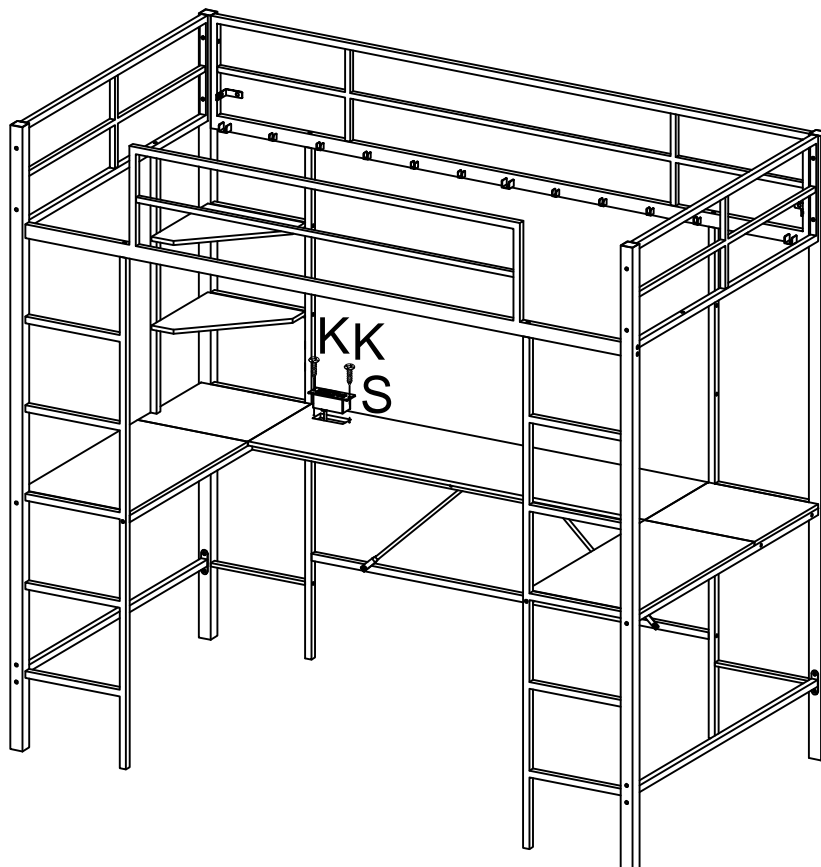
14




K 3.5\*12  
 x2  
 S  
 x1

15

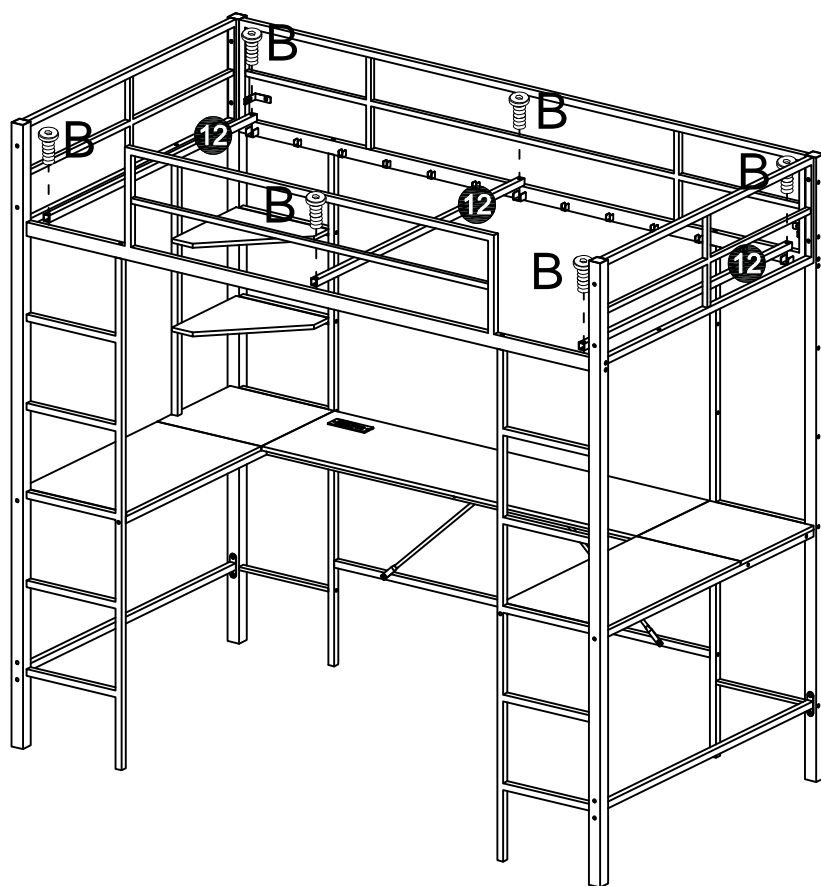

B M6\*25  
 x6

16

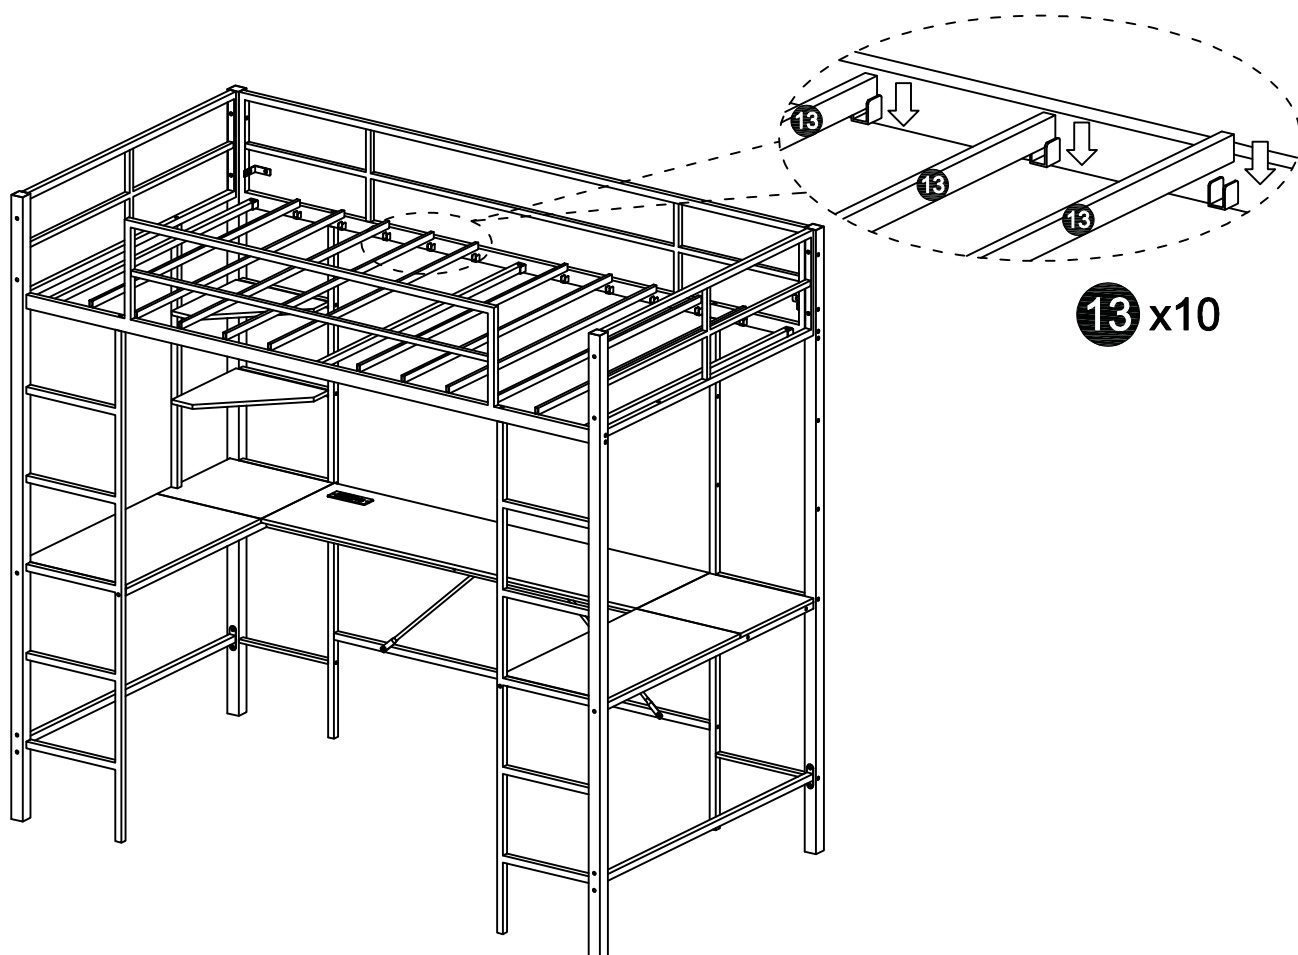


1: Please remove the adhesive tape numbered N first, and then stick it to the bottom of the bed side.


As shown in the figure




2: Unfold the light belt

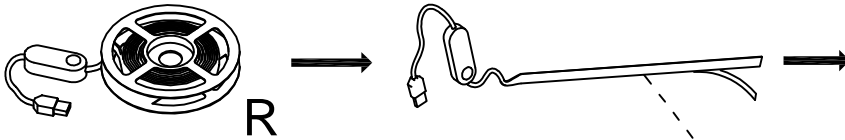

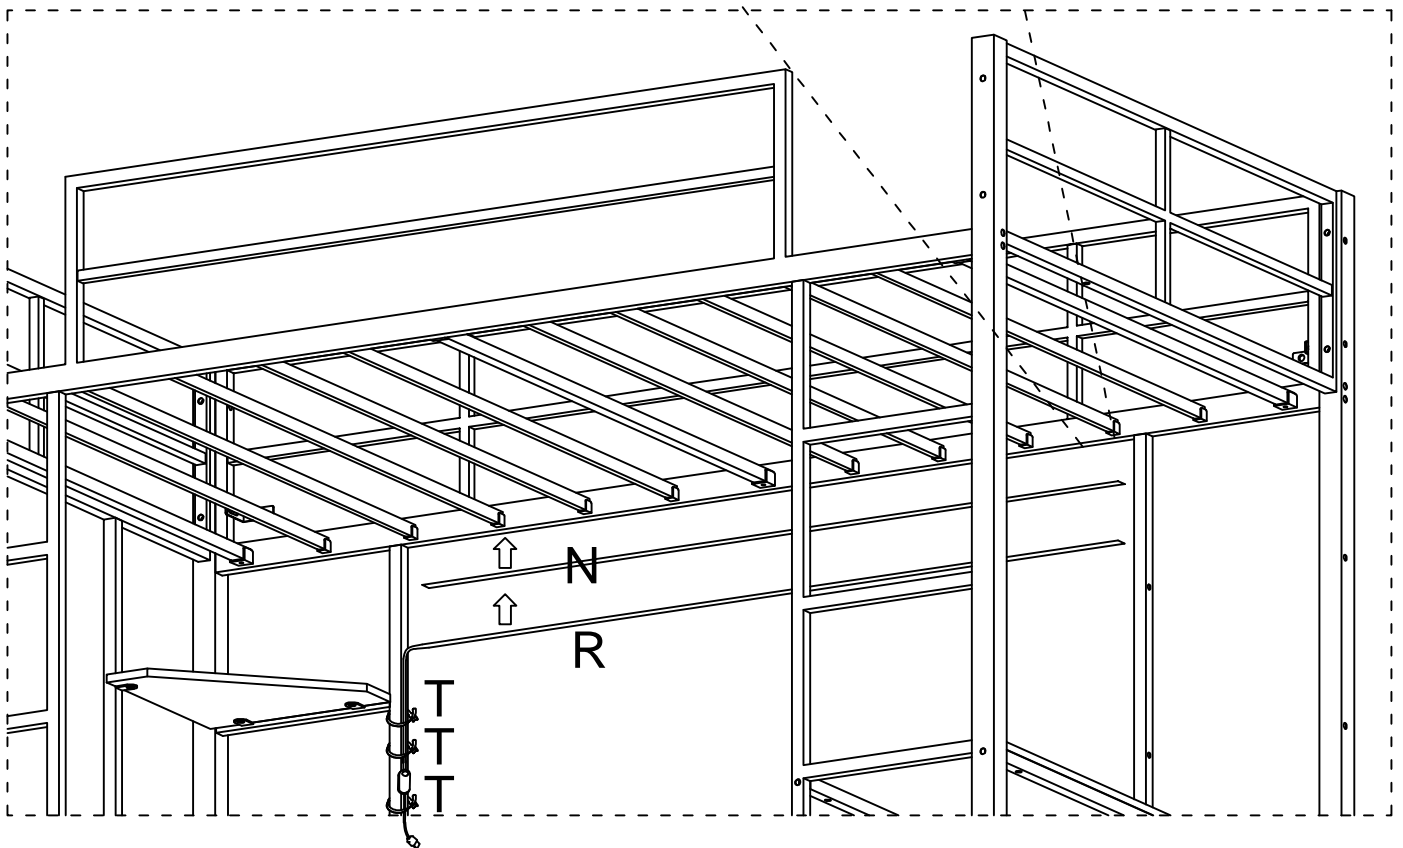


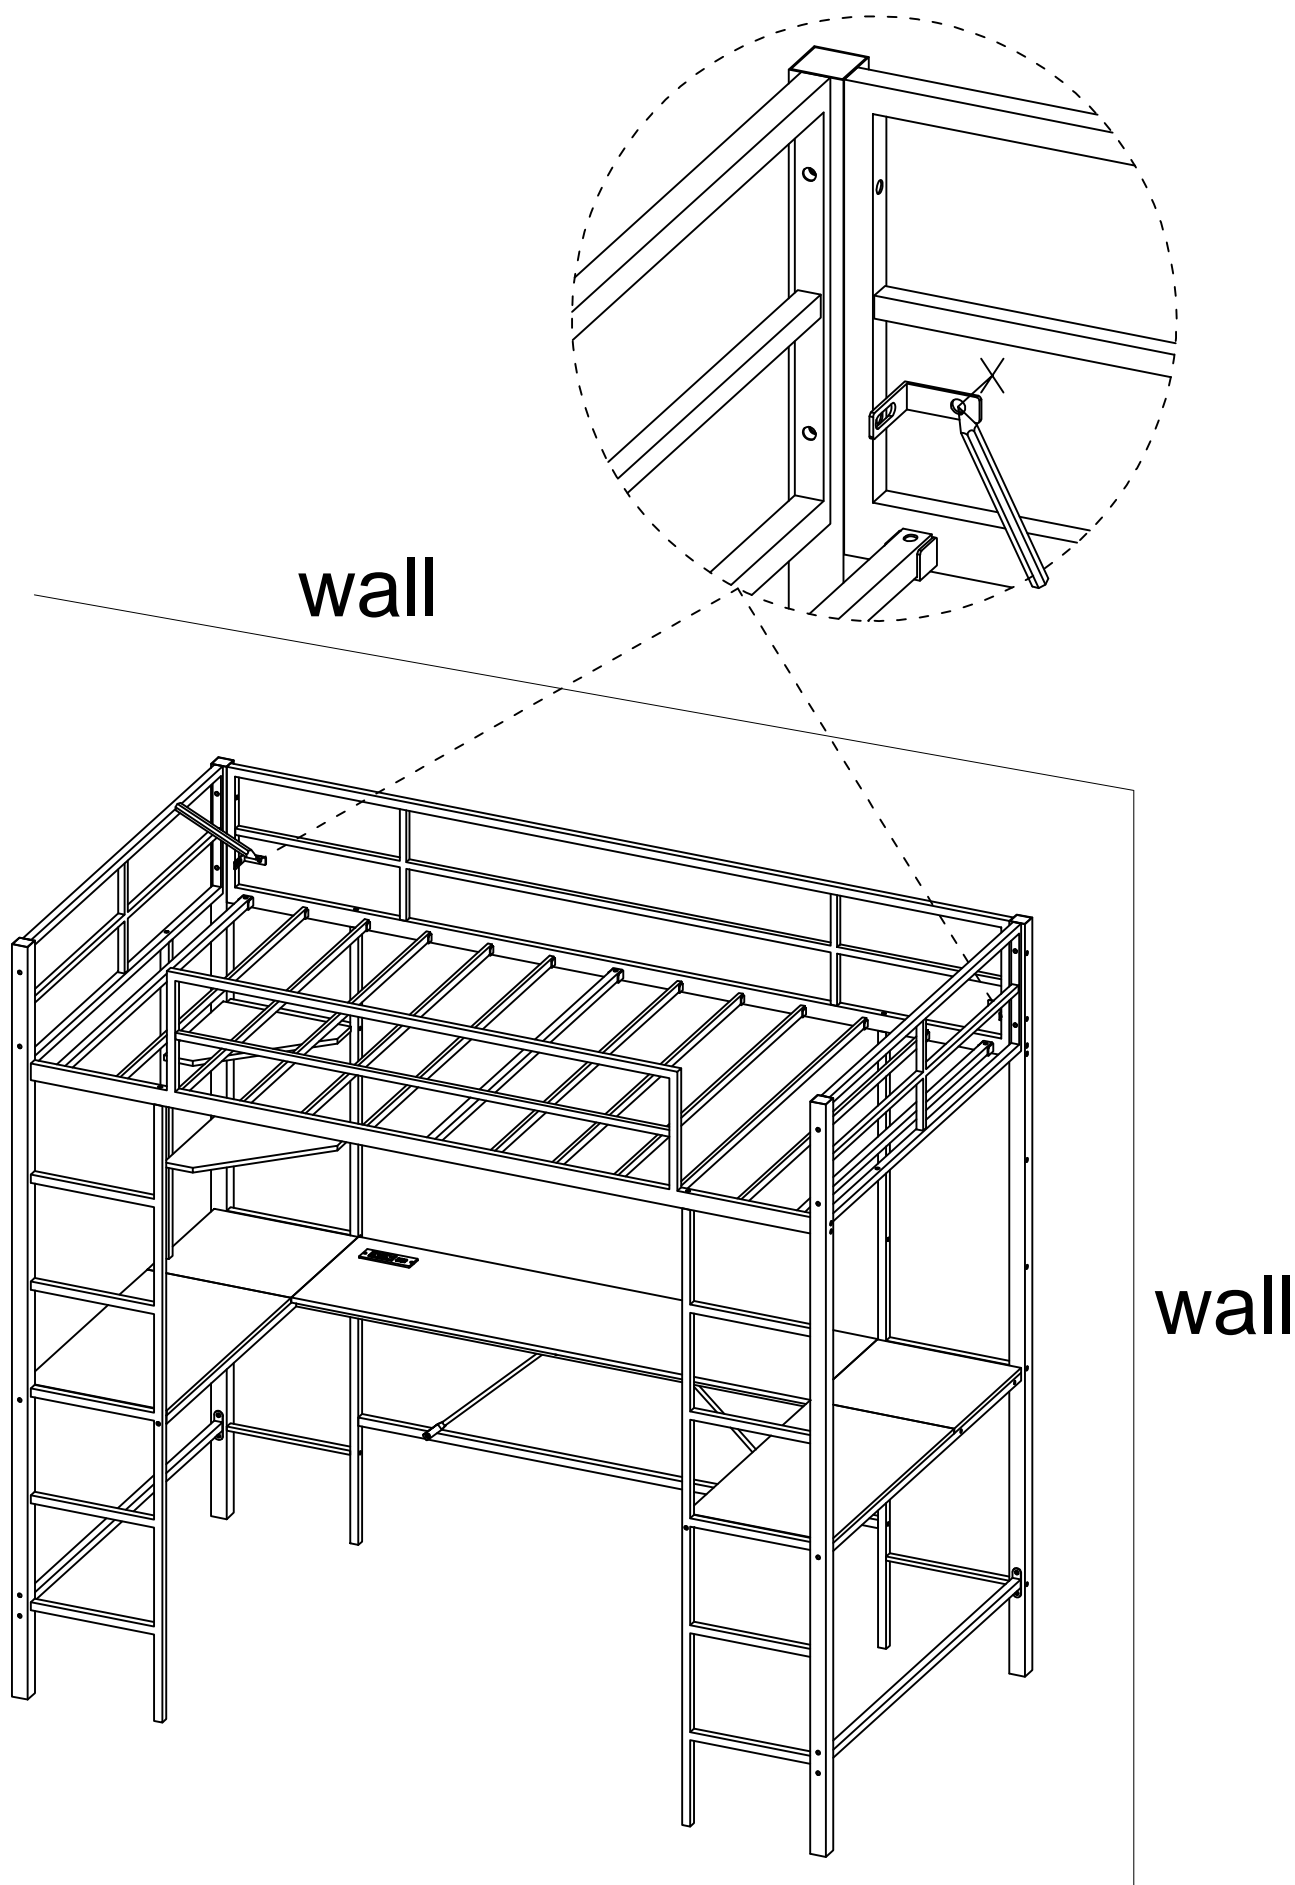
tear off the end of the tape and stick it to the bottom of the bed side tube.

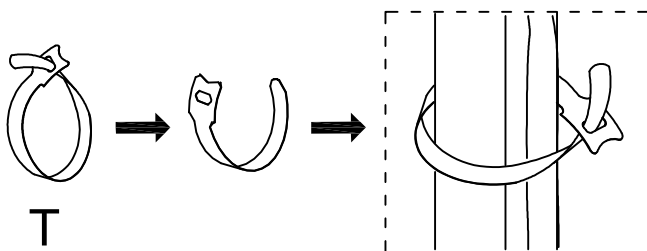


Please loosen the tie and tie it onto the iron pipe. As shown in the figure.




	N  x1
R  x1	T  x3



## 19 Drilling

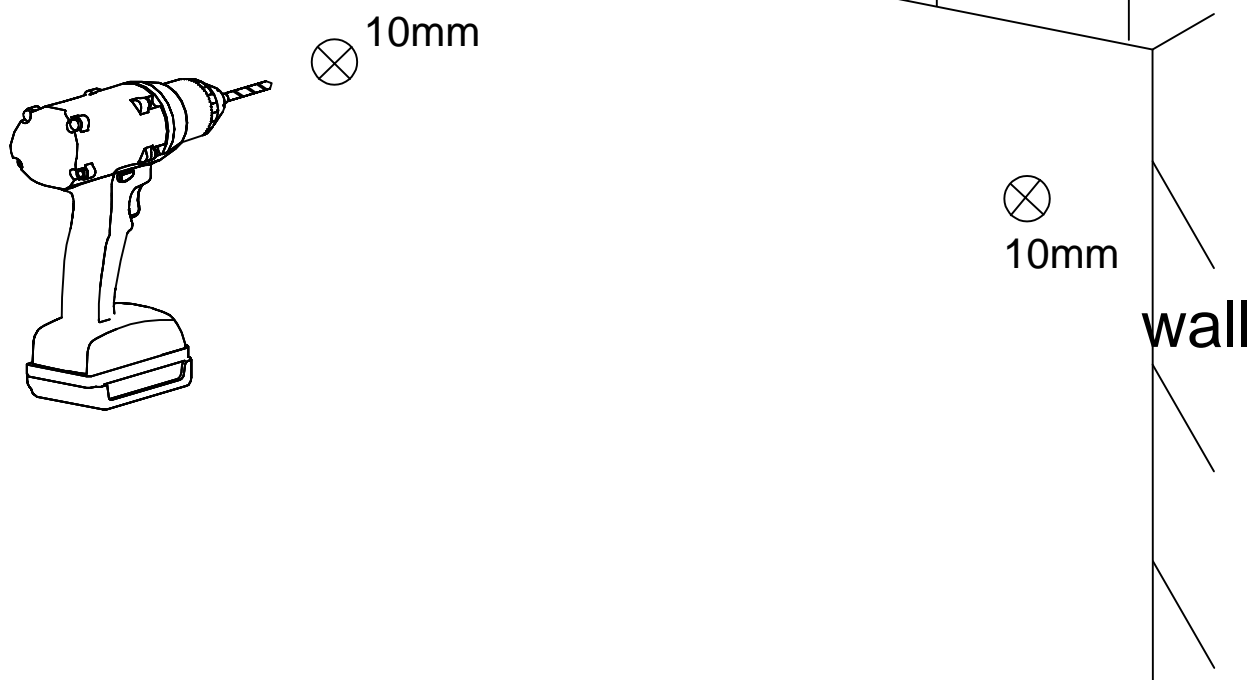


## 20

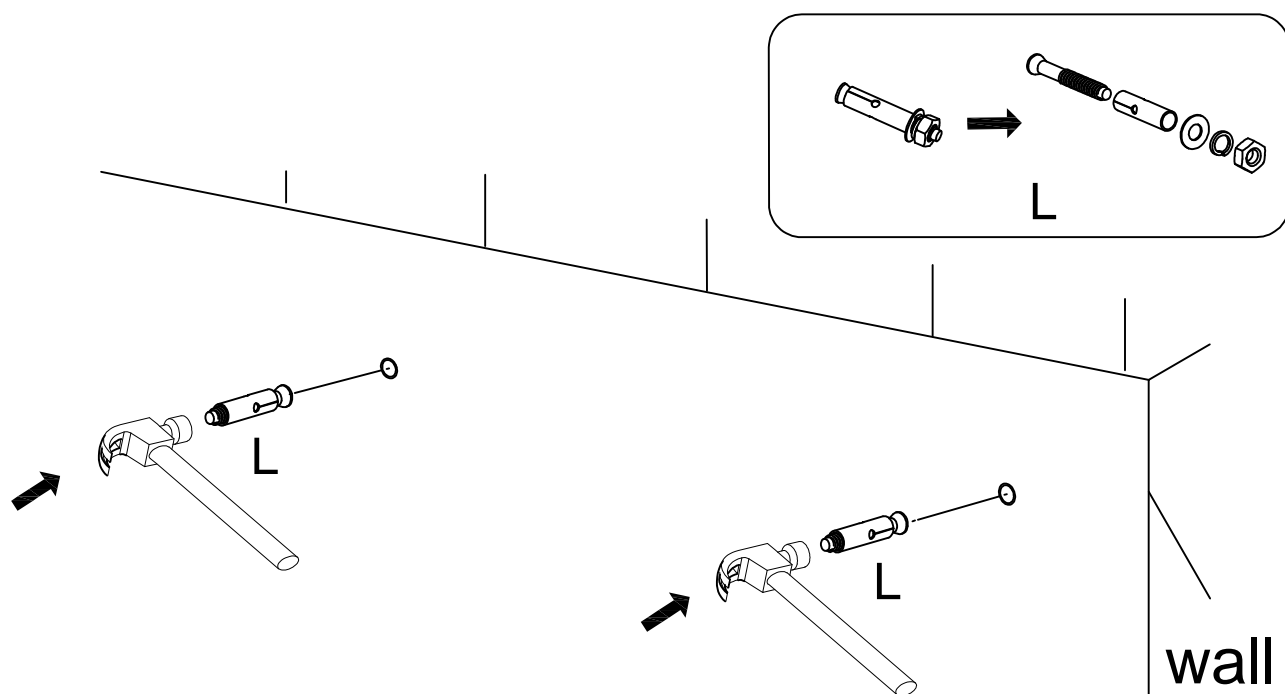


Please lock the expansion screw onto the wall.




21

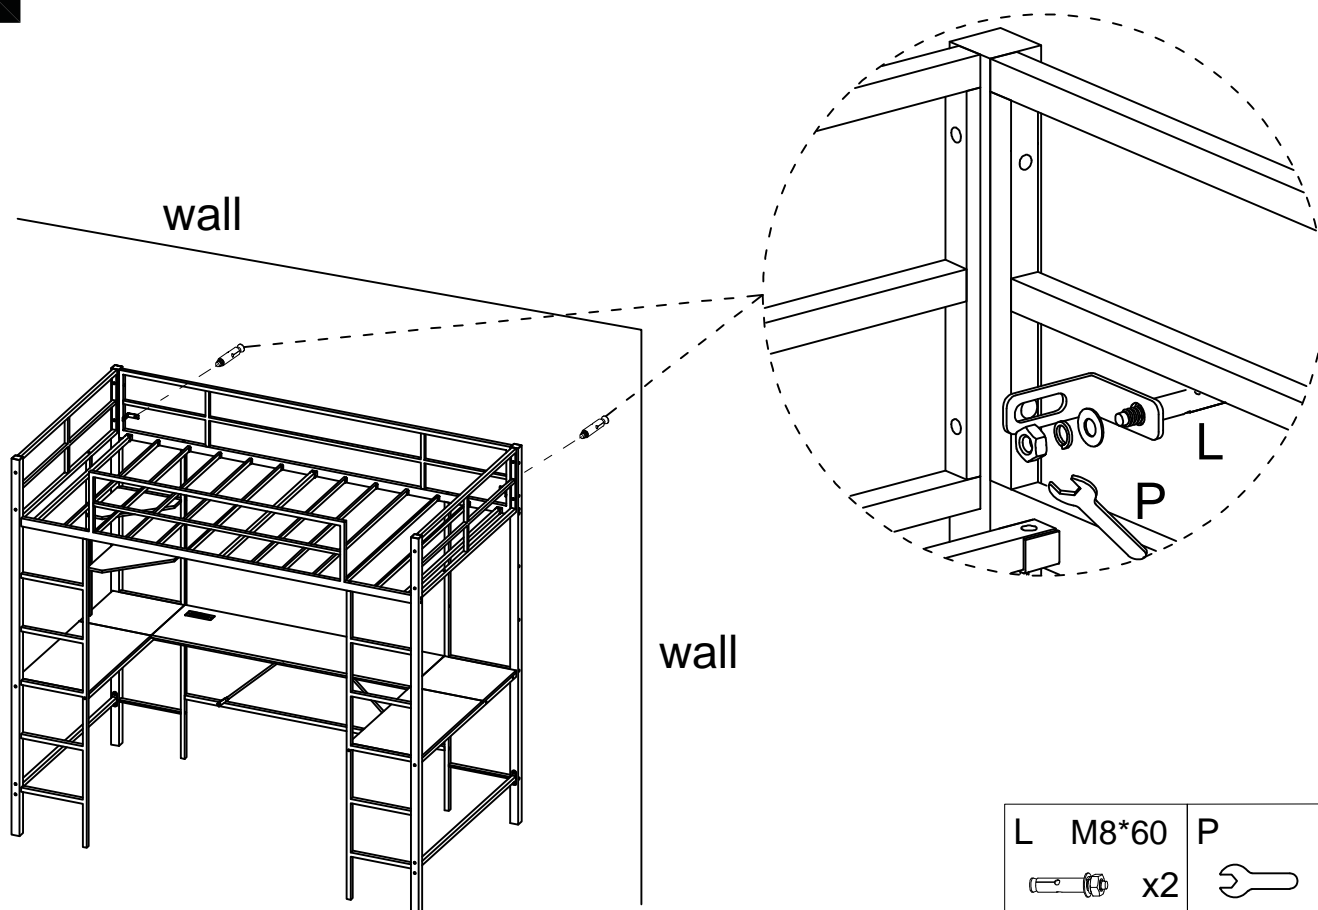

22

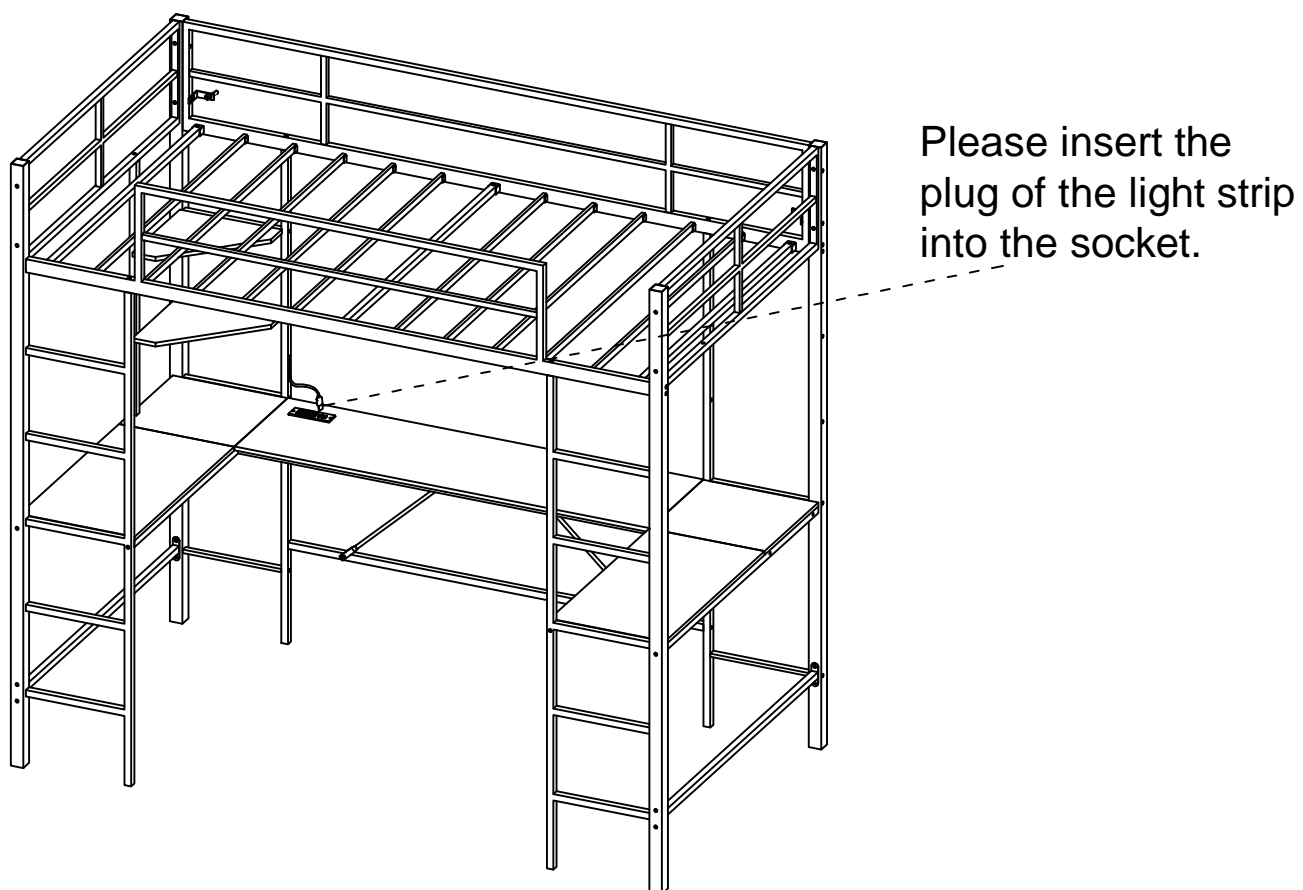

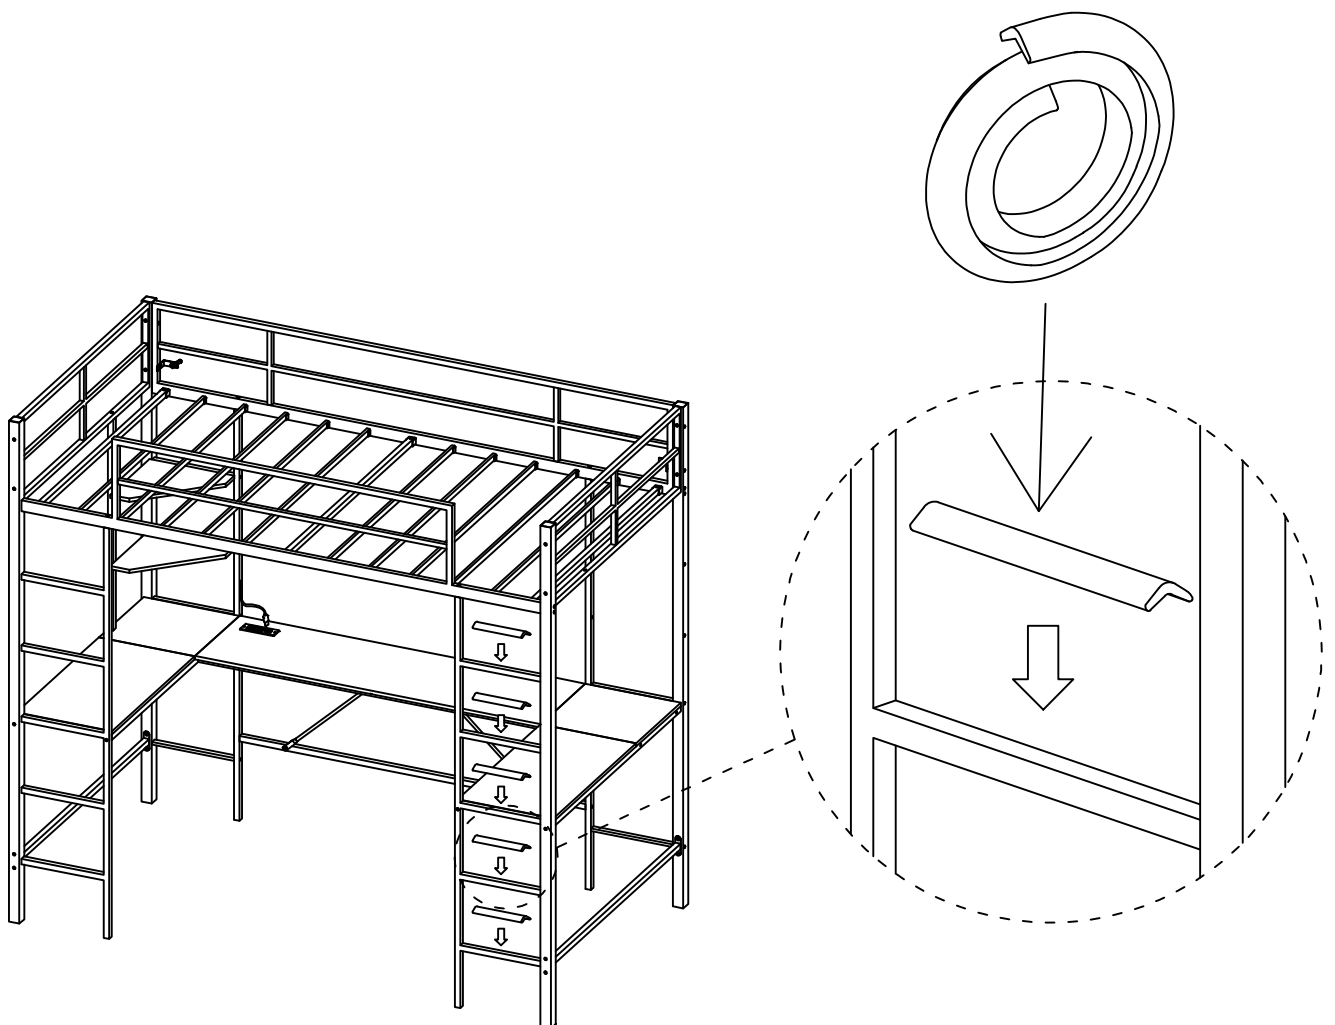

### Giveaway:

If you feel hurt when your feet step on the stairs, you can cut the protective cotton according to the size of the stairs and glue the protective cotton to the stairs.