
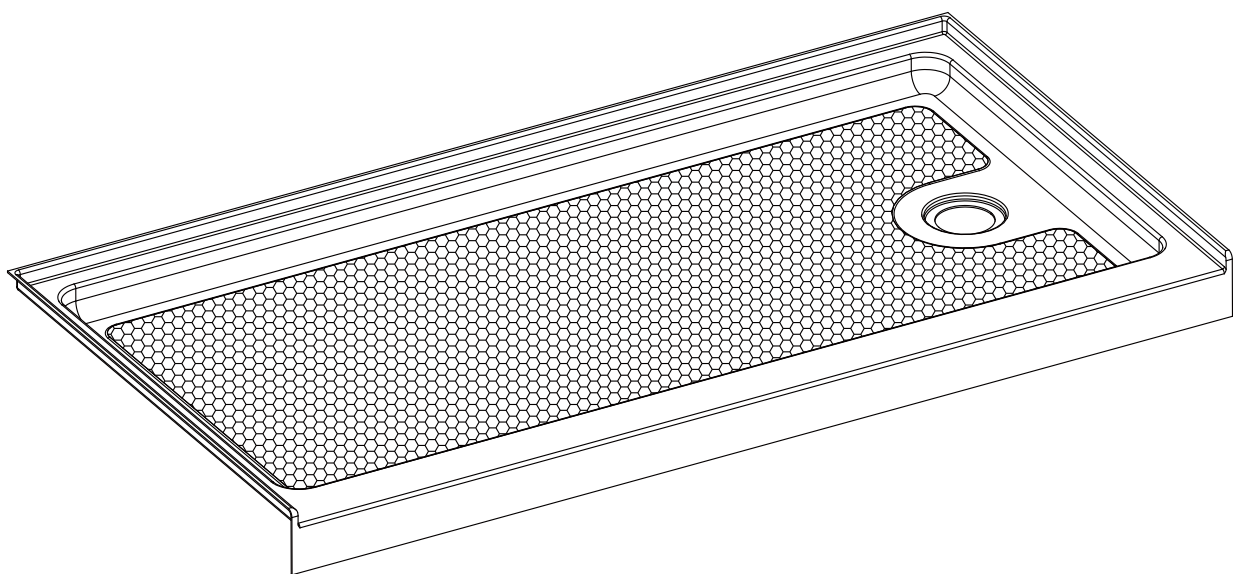


INSTALLATION MANUAL

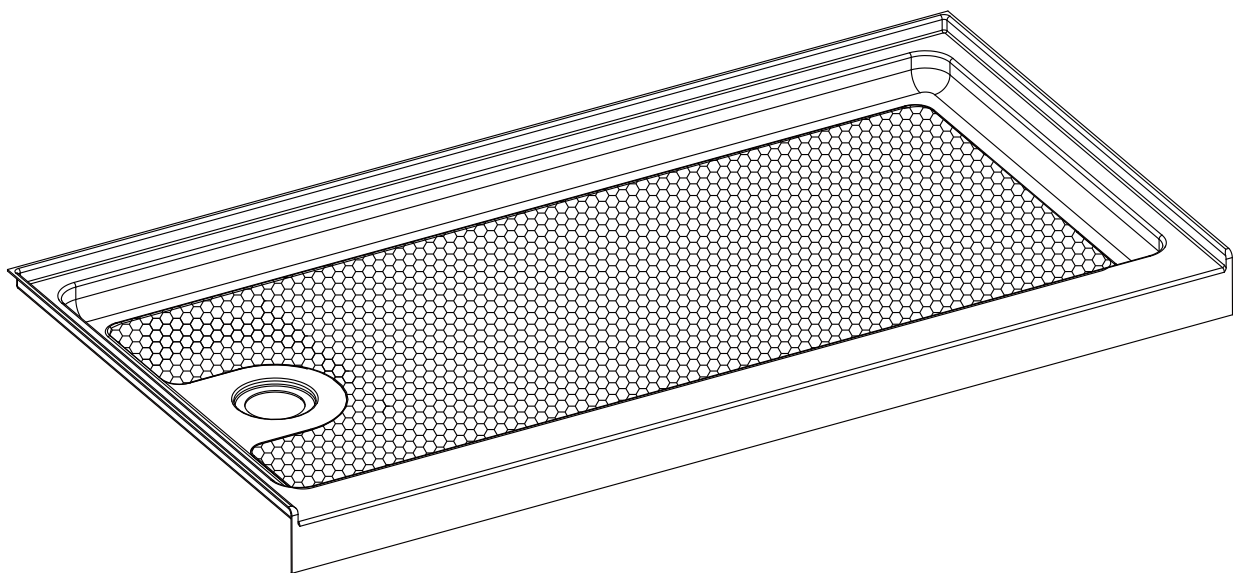

ACRYLIC SHOWER BASE

Model: SP-L-WH90-6032

SP-R-WH90-6032

Left Drain

Right Drain

ACRYLIC SHOWER BASE

• **TABLE OF CONTENTS**

IMPORTANT.....	2
CARE FOR YOUR ACRYLIC SHOWER BASE.....	2
SPECIFICATION.....	3
TOOLS AND MATERIALS REQUIRED.....	4
1. PREPARE DRAINING PIPE.....	4
2. INSTALL THE DRAIN.....	4
3. LEVELING THE BASE.....	5
4. TESTING THE DRAINAGE.....	5
5. FASTEN THE BASE.....	6
6. FINISHING.....	6

• **IMPORTANT**

- Read this manual carefully and completely before proceeding.
- It is recommended that you wear safety glasses at alltimes during the installation.
- Prior to installation of base, all framing and plumbing work must be completed in accordance with this instruction sheet.
- For renovation work, existing shower surfaces must be removed to accommodate framing requirements.
- Ensure that outer wall are properly insulated, and that a vapor barrier has been installed in accordance with established building codes.

• **CARE FOR YOUR ACRYLIC SHOWER BASE**

- In order to protect the acrylic surface of your base, never use scouring powder pads or other strong solvents. Only clean it with a mild detergent diluted in water or a dertergent formulated specifically for acrylic.



*Product specifications are subject to change without notice.
Use the installation instructions supplied with the product.*

ACRYLIC SHOWER BASE


SPECIFICATION.

Model	Dimensions*				
	A	B	C	D	E
SP-L-WH90-6032	60" [1524mm]	32" [813mm]	4" [102mm]	16" [407mm]	8" [203mm]
SP-R-WH90-6032	60" [1524mm]	32" [813mm]	4" [102mm]	16" [407mm]	8" [203mm]

*Tolerance on dimensions: $\pm 1/4"$ [6mm]

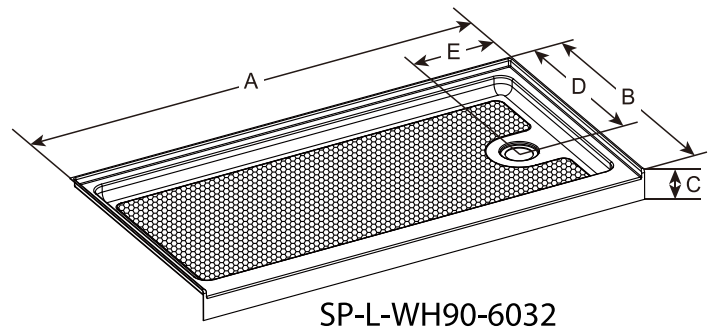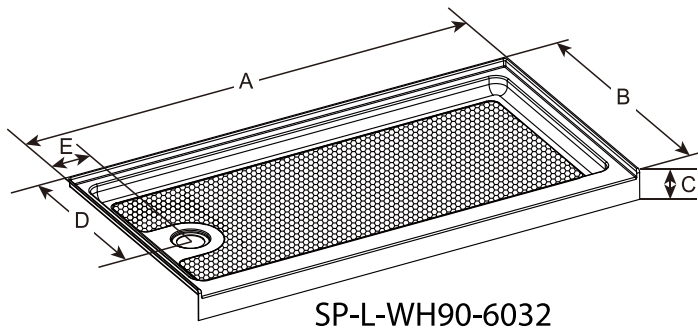


TOOLS AND MATERIALS REQUIRED.

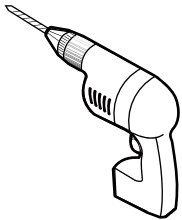

DRILL




DRILL BITS 3/16"

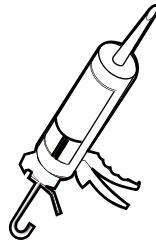


SILICONE




PENCIL

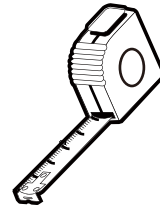


TAPE MEASURE

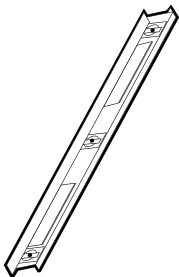


LEVEL



SCREW #8 1 1/4"
(Preferably stainless steel screws)

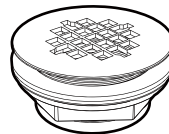

DRAIN

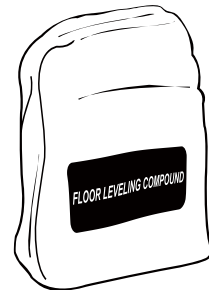


FLOOR LEVELING COMPOUND
or MORTAR


ACRYLIC SHOWER BASE

1 PREPARE DRAINING PIPE.

- 1A. Cut floor [Ø5"(12.7cm) to Ø6"(15.2cm)] to accommodate plumbing. The 2" (5.0cm) drain pipe should project 1/2"(1.27cm) above floor line.
Note: Dimensions D and E from wall to center of drain. (See chart on page 3)
Verify your base for final dimensions.

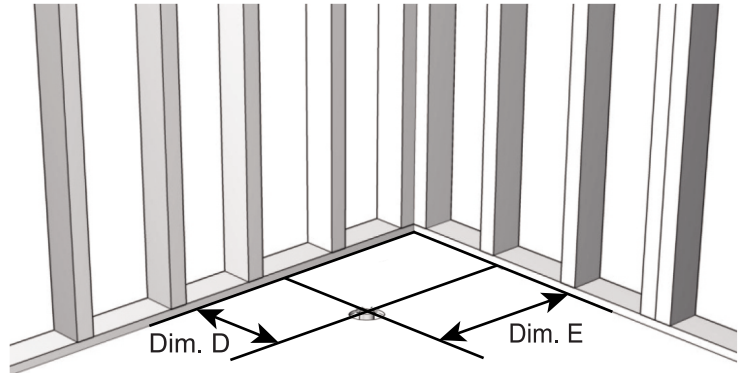


- 1B. Position base. Verify that the draining pipe location matches the actual location of the base drain.
Remove the base.

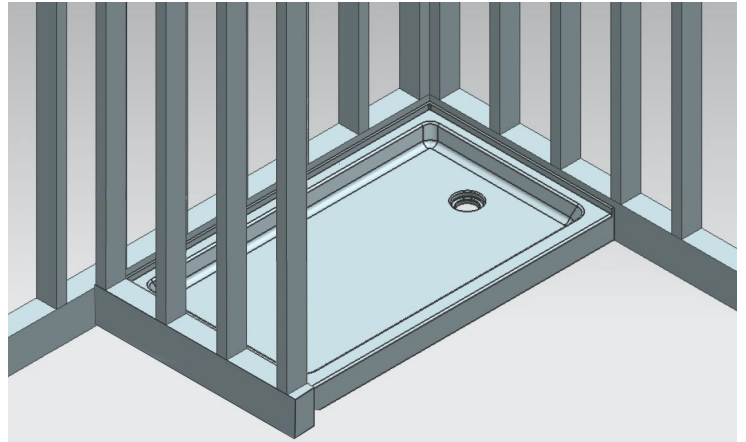

2 INSTALL THE DRAIN.

- 2A. Prior to install the drain on the base, run a bead of silicone between the drain body and shower base.

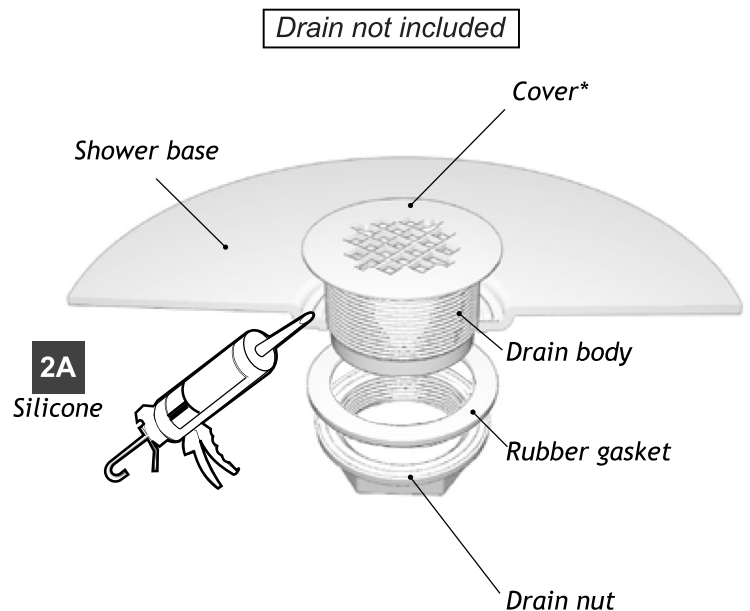

Components might vary according to the model of drain used.
Refer to manufacturer's instructions for the proper installation.


ACRYLIC SHOWER BASE

3 LEVELING THE BASE.




*If the floor is level.
Proceed to the next step.*

- 3A. Shim shower base and/or spread floor leveling compound or mortar evenly over the entire area where the base will be installed.

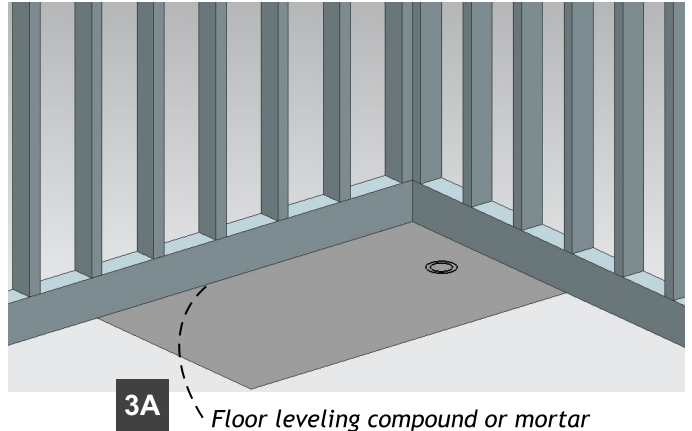


- 3B. Lower base over center of draining pipe and set into place. Apply pressure to ensure that the compound is in contact with the entire bottom surface of the base. Verify that the base is level.

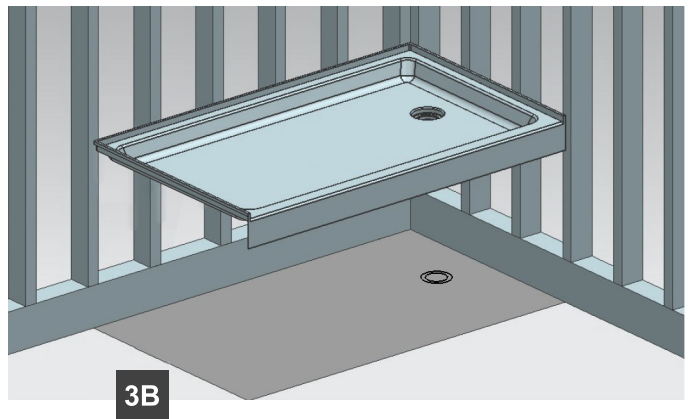

4 TESTING THE DRAINAGE.

- 4A. Once the drain is connected, plug the drain and fill the base with a small amount of water.
- 4B. Check for any leakage around the drain (some bubbles may appear) and below (if you have access to).
- 4C. Unplug the drain and assure that the drainage is efficient. There must be no puddle of water accumulation in the base.

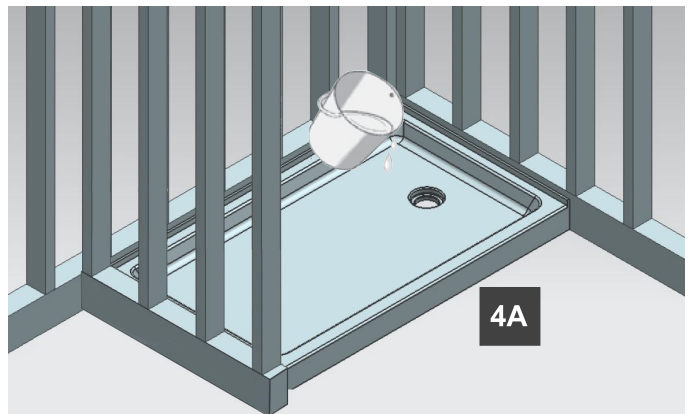

If water doesn't drain properly even though the base is leveled, do not continue this installation. Please remove the base and return it to your dealer for exchange.


ACRYLIC SHOWER BASE

5 FASTEN THE BASE.

5A. Locate and drill with a 3/16" drill bit, the screw location in the tile flange.

5B. Fasten base to studs using #8 x 1 1/4" screws (preferably stainless steel screws)

5C. Please remove part of protective film before installation. After installing all screws, tear off the remaining protective film to avoid scratching the product during installation.

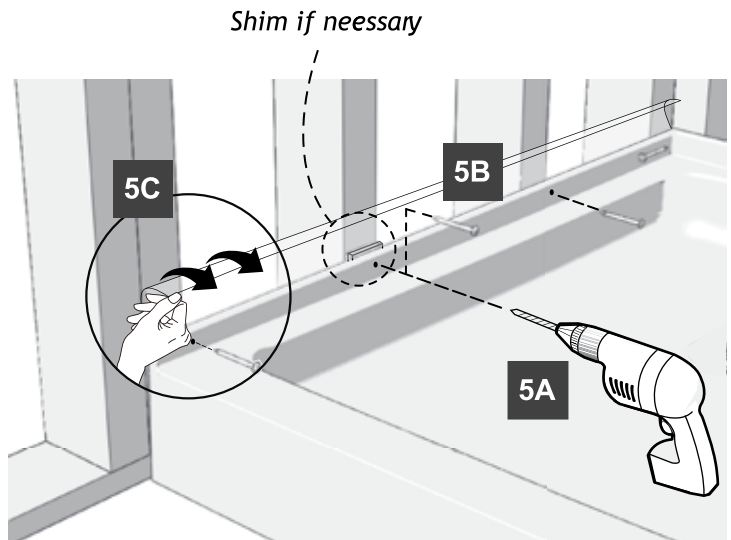

6 FINISHING.

Tips to achieve a professional looking and watertight finish.

