


Assembly Instruction


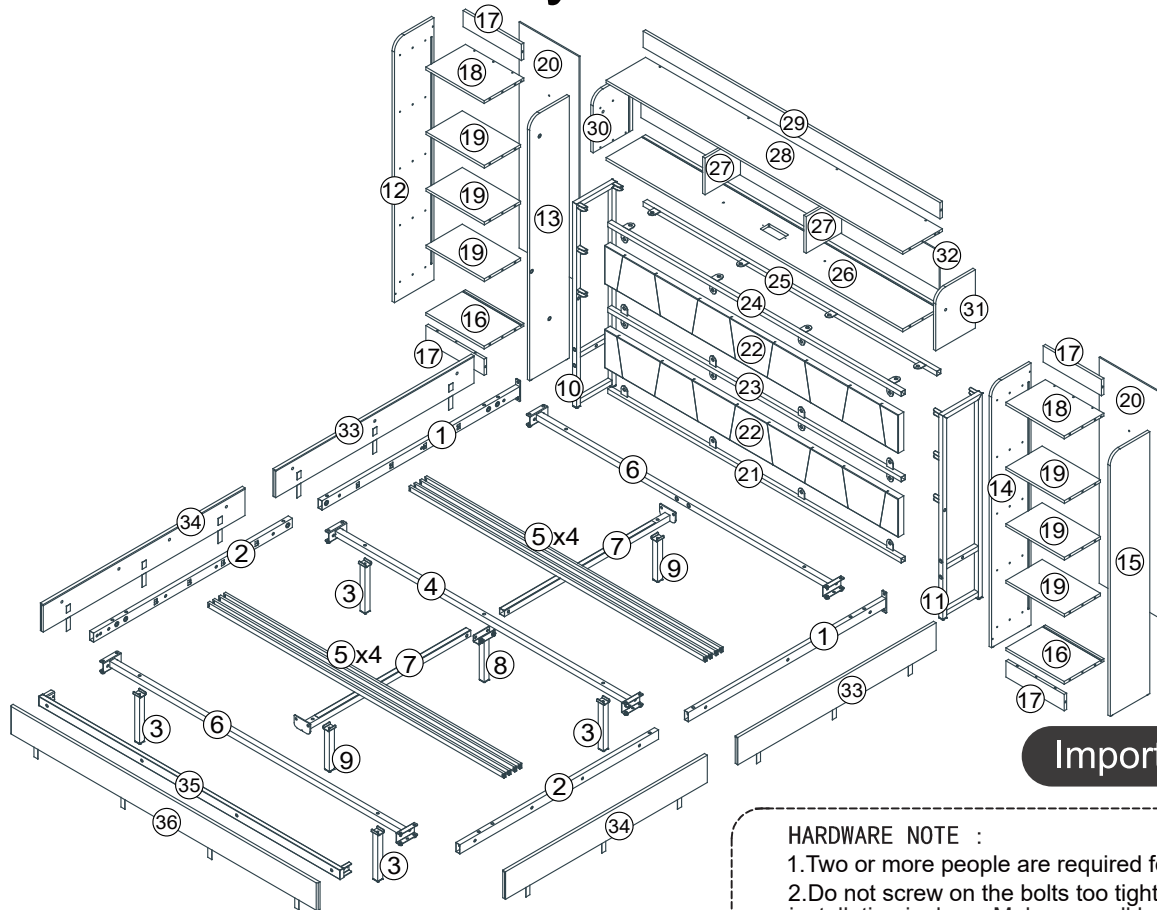






Important Note

HARDWARE NOTE :


1. Two or more people are required for assembly
2. Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.



Components

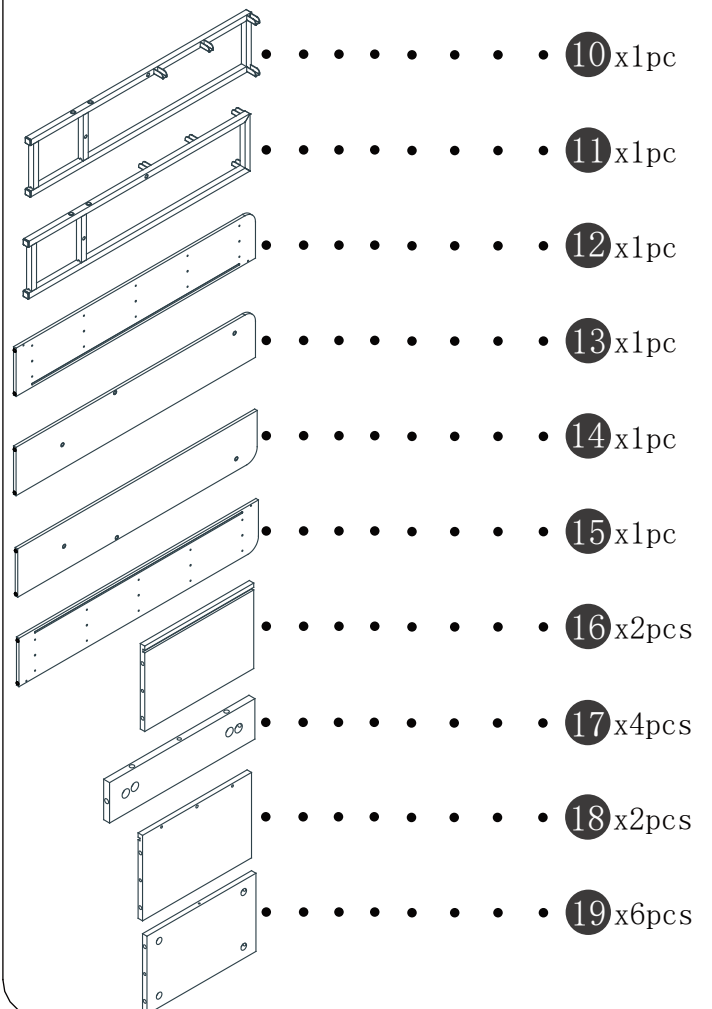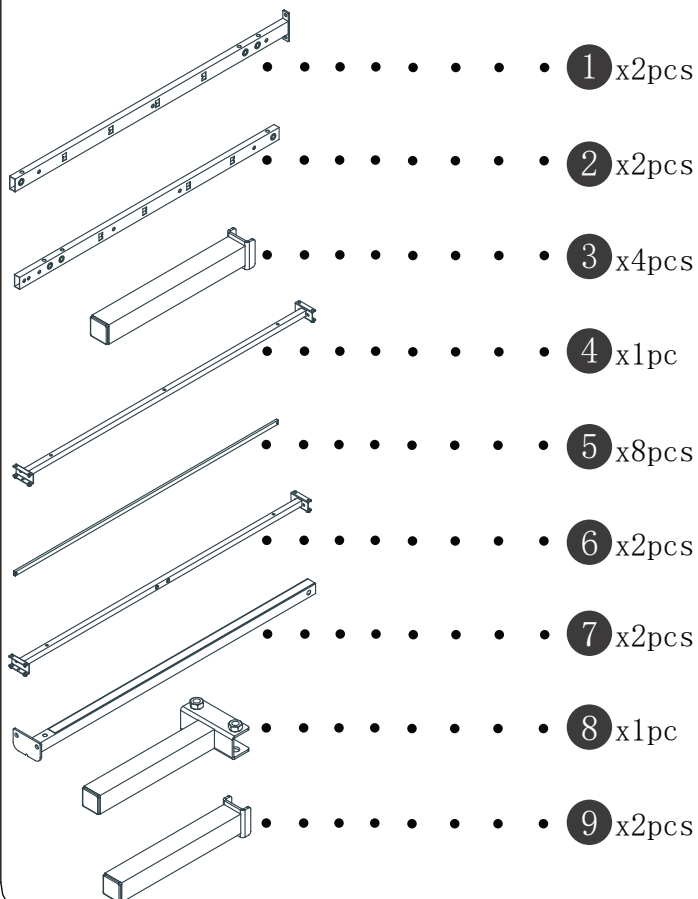

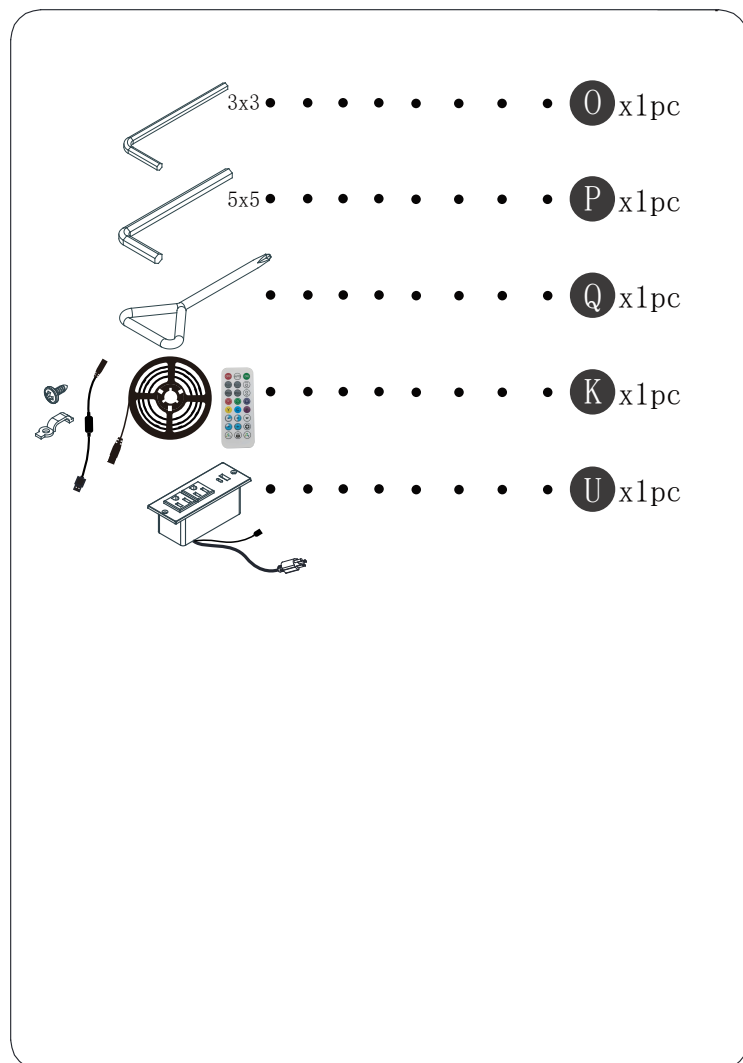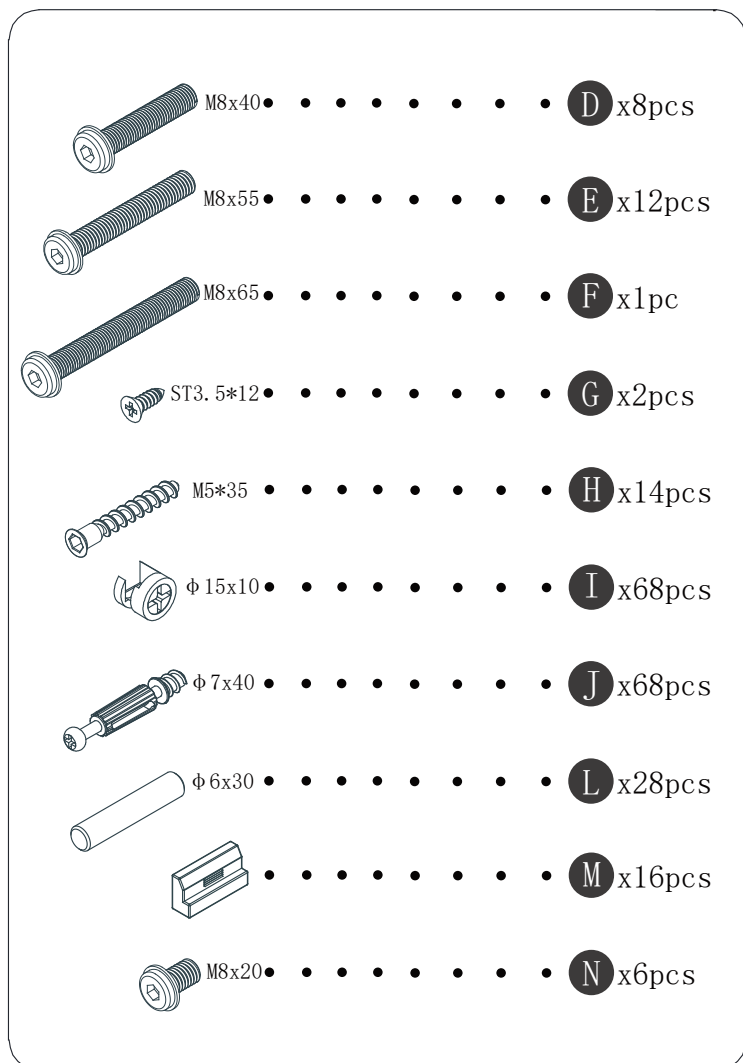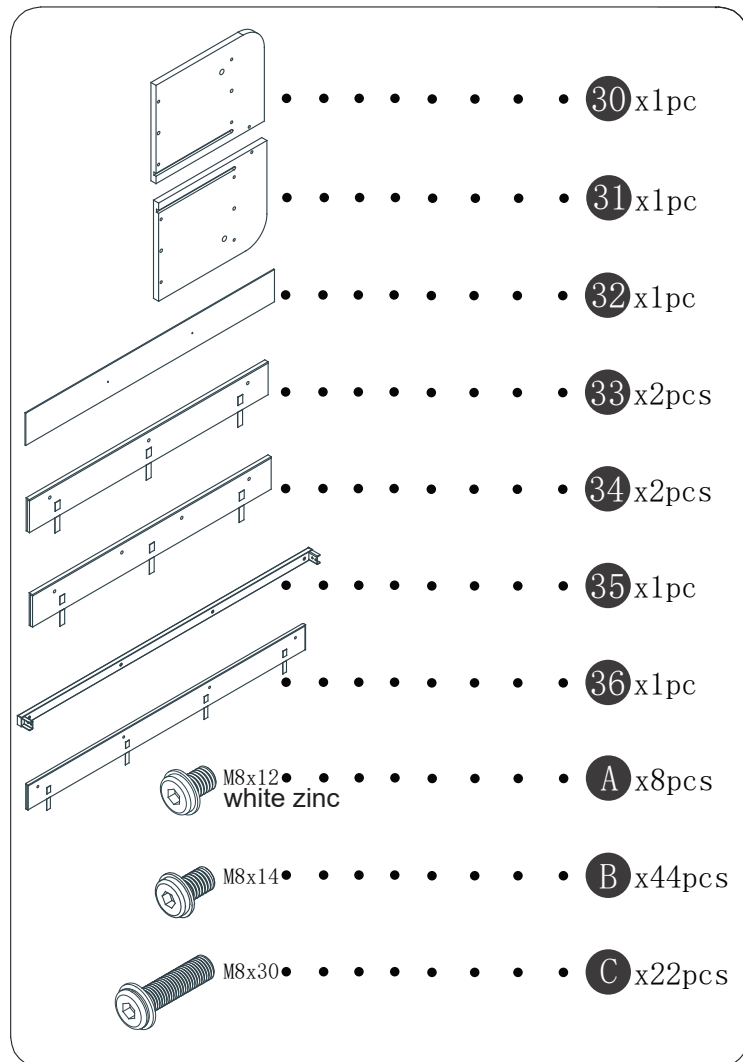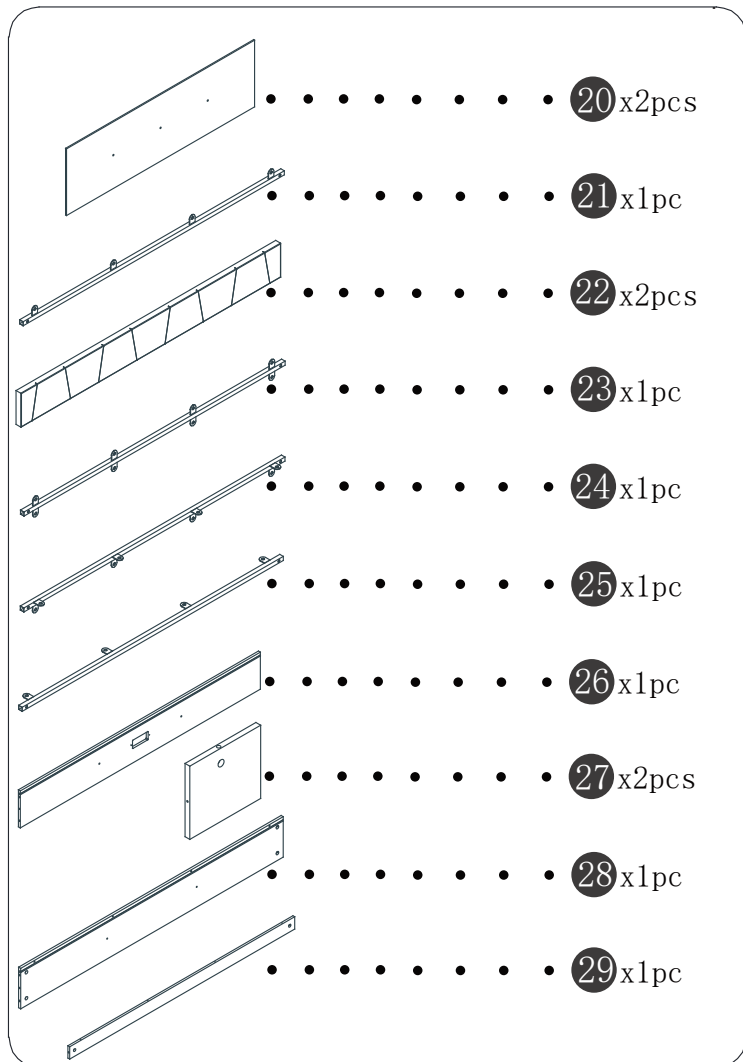


1
x2

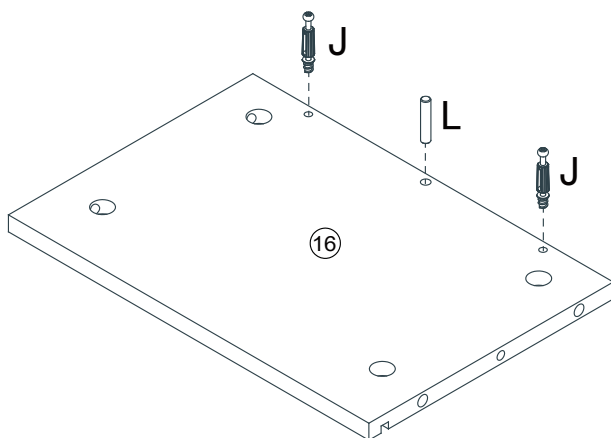


J		4pcs
L		2pcs



1 2 3
2
x2

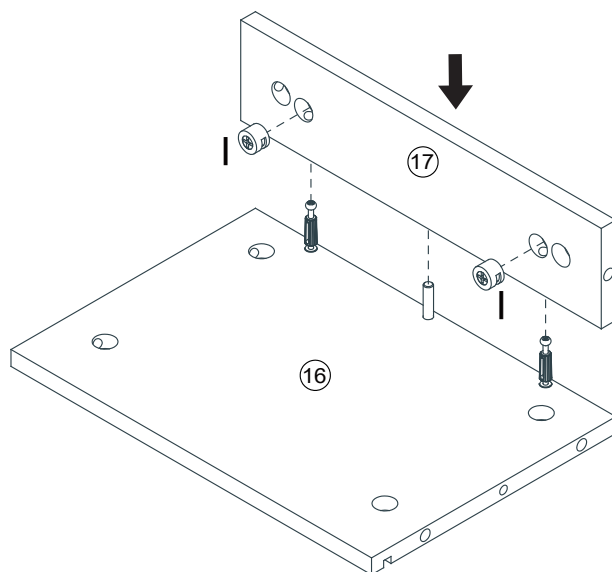


I		4pcs
---	--	------

3
x2

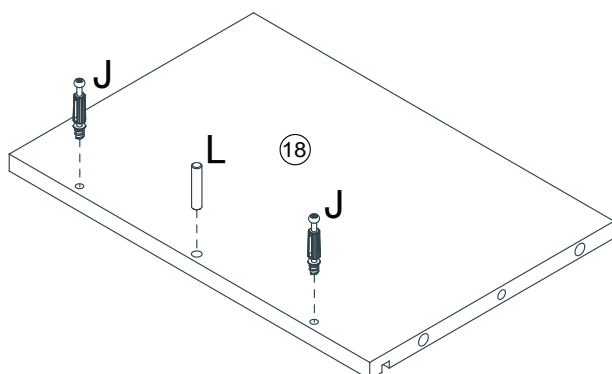


J		4pcs
L		2pcs

1 2 3
4
x2

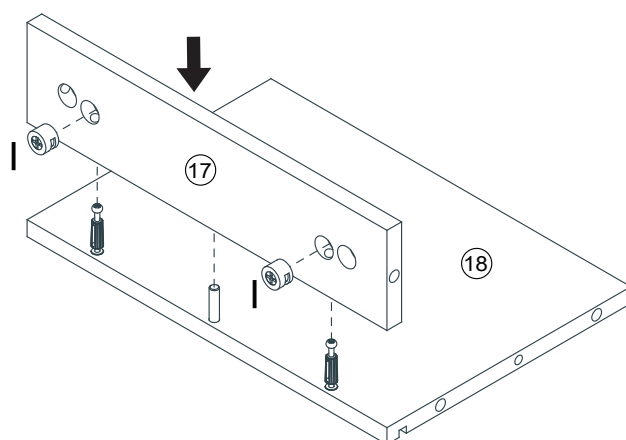


I		4pcs
---	--	------

5

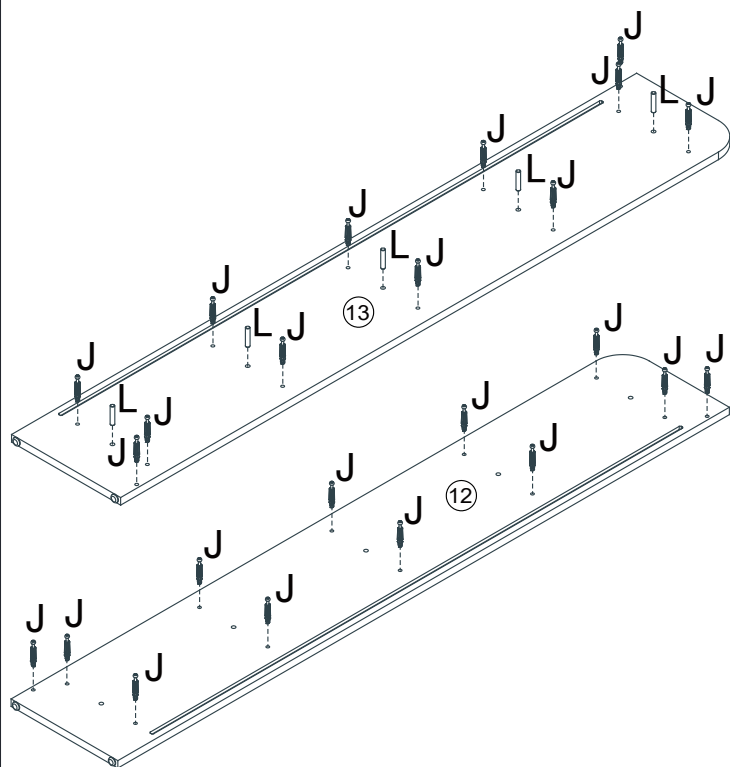


J		24pcs
L		5pcs

6

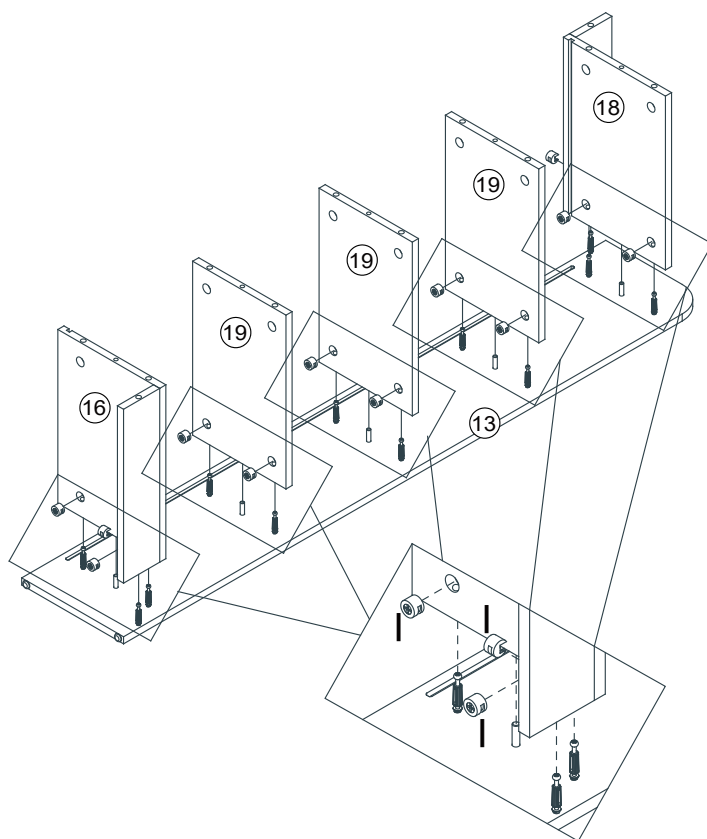


I		12pcs
---	---	-------

7

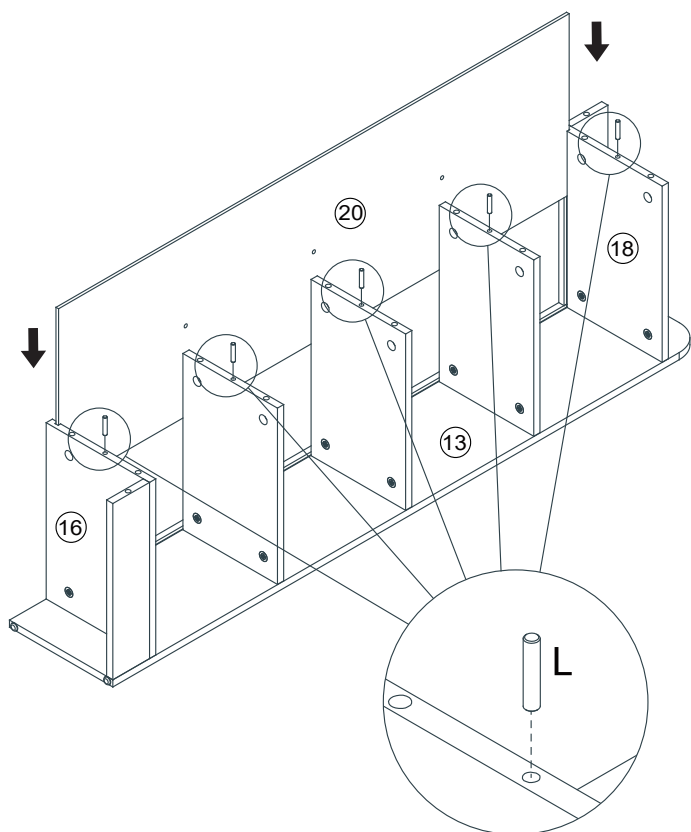


L		5pcs
---	---	------

8

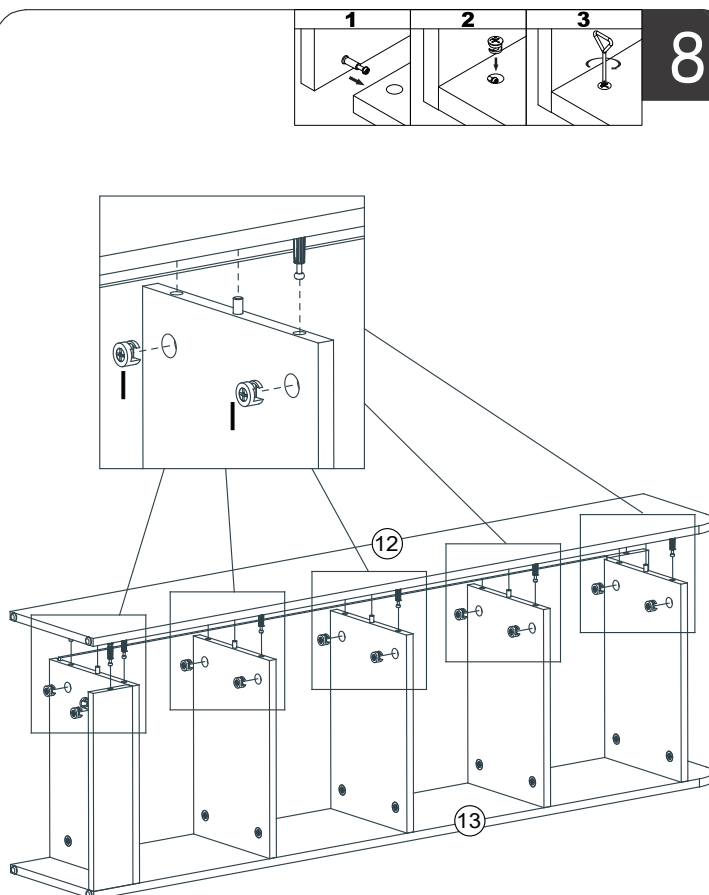


I		12pcs
---	---	-------

9

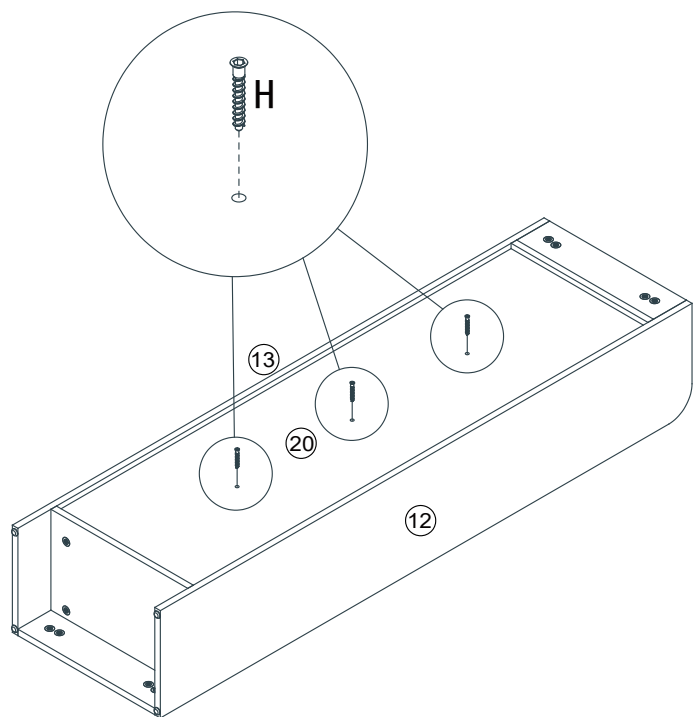



H		3pcs
M5x35		

10

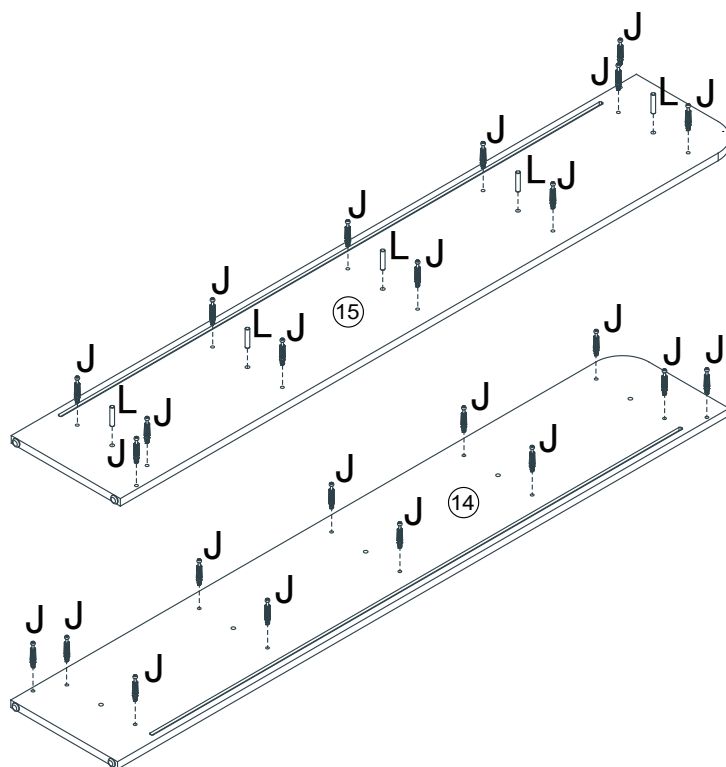


J		24pcs
$\phi 7 \times 40$		
L		5pcs
$\phi 6 \times 30$		

11

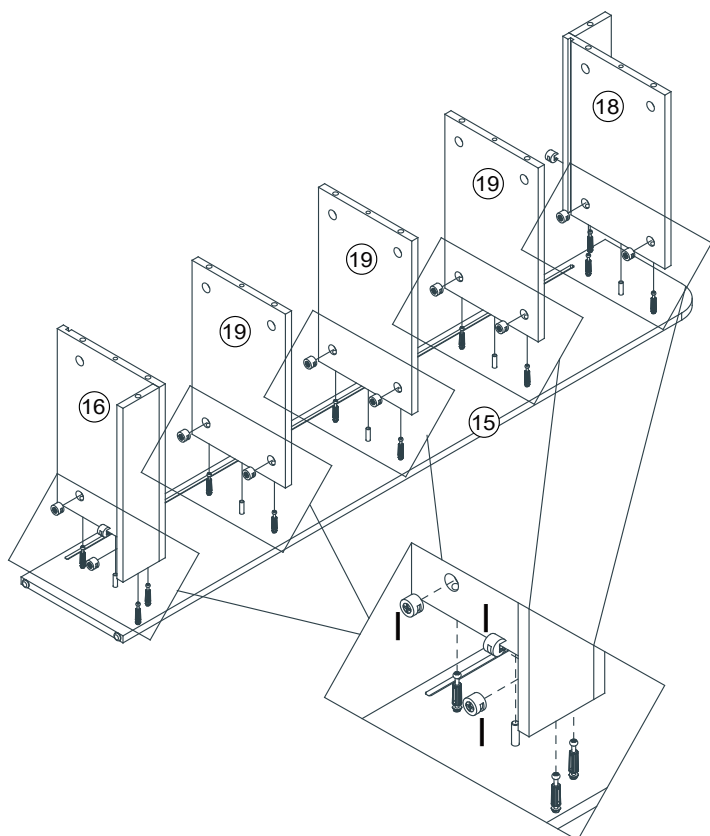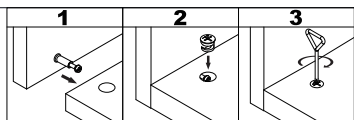


I		12pcs
$\phi 15 \times 10$		


12

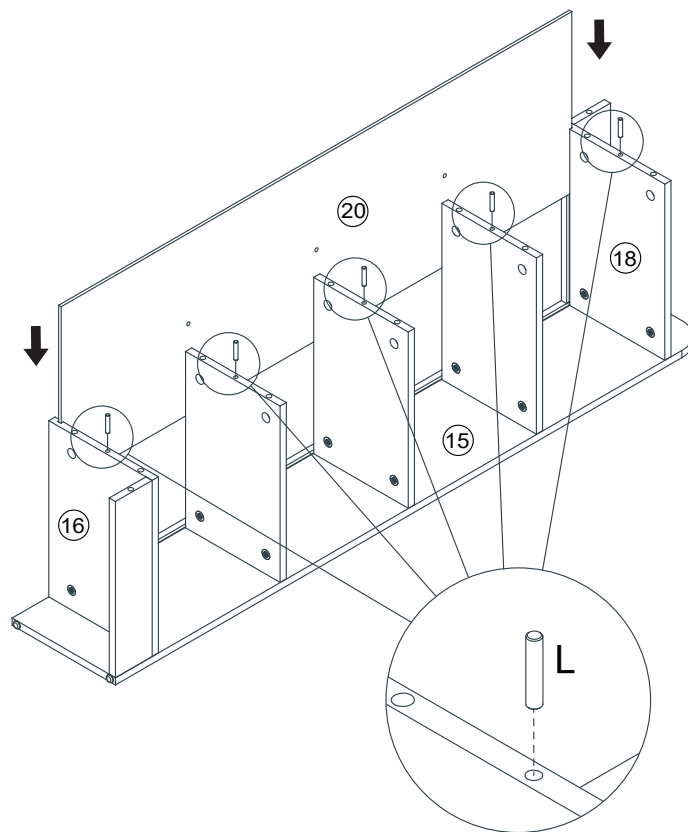

L		5pcs
$\phi 6 \times 30$		

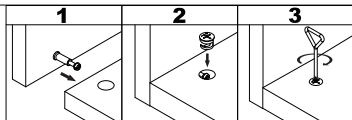


13

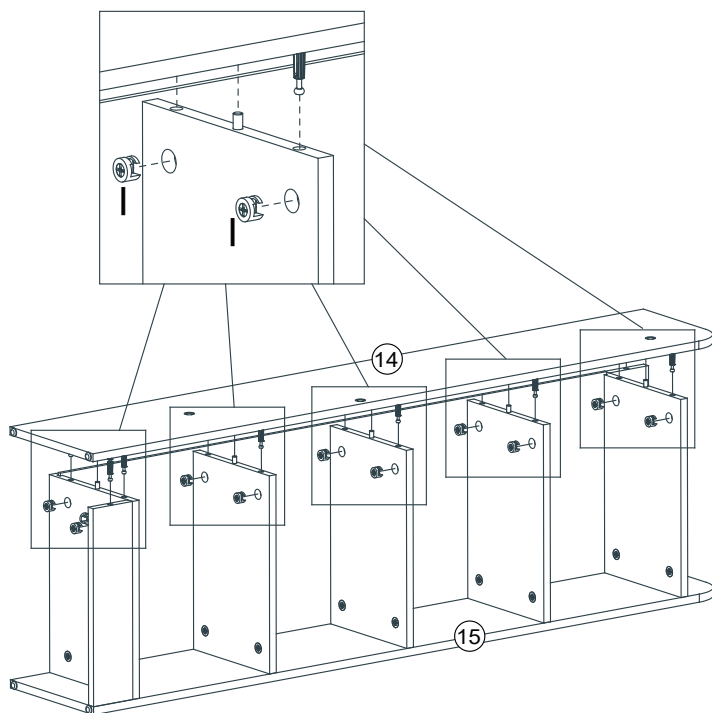

I		12pcs
---	---	-------

φ 15x10


14

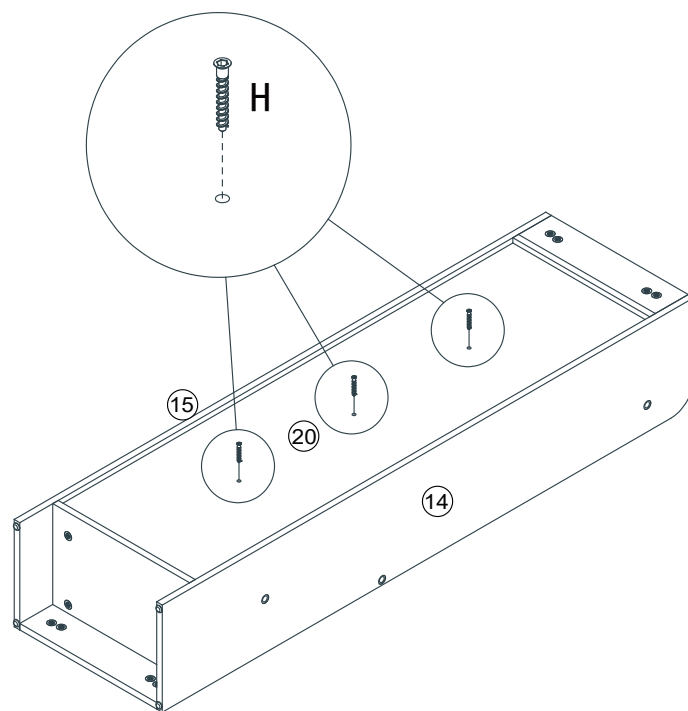

H		3pcs
---	--	------

M5x35


15

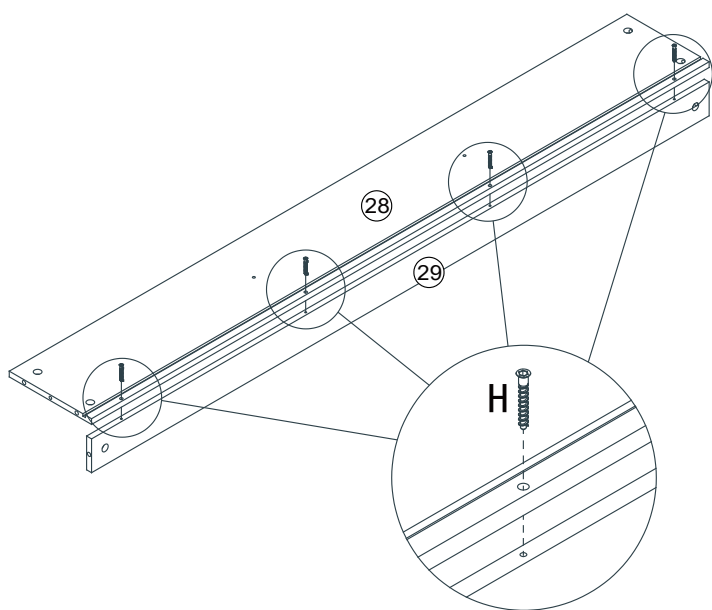

H		4pcs
---	---	------


M5x35

16

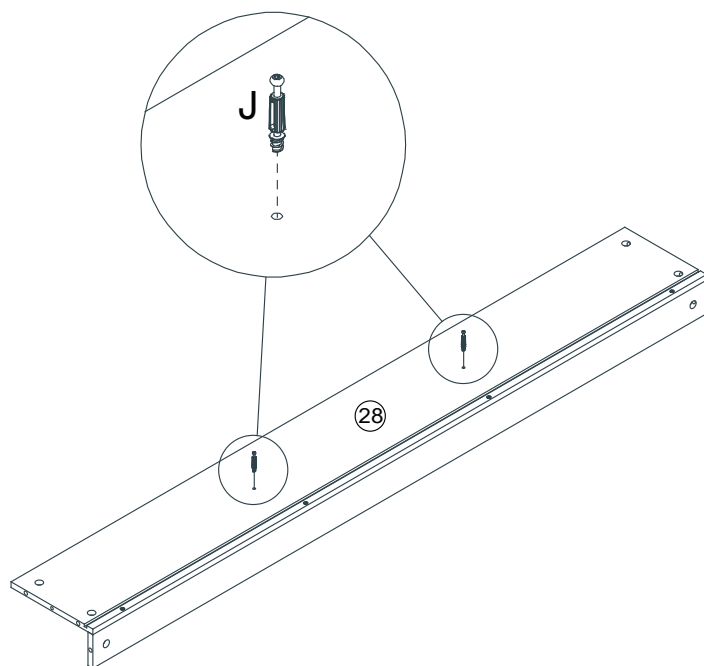


J		2pcs
---	--	------

φ 7x40

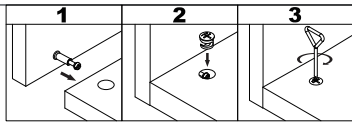


17

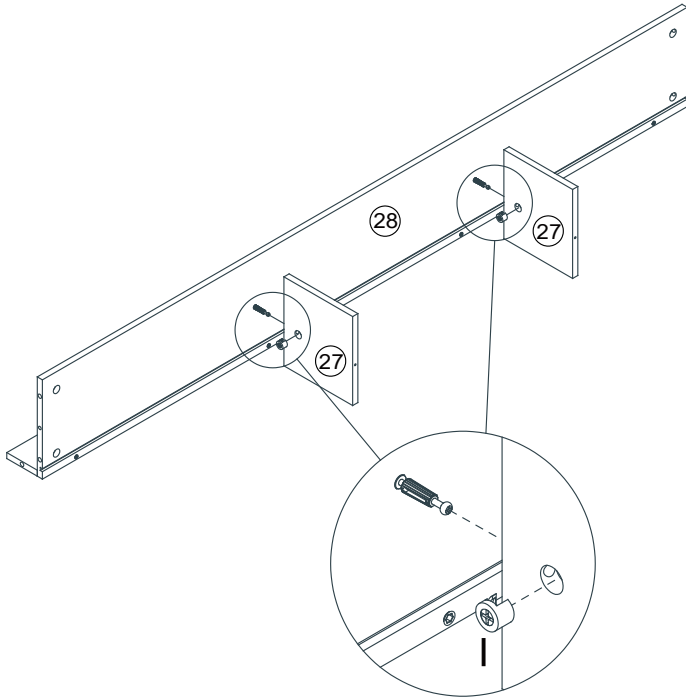

I		2pcs
---	---	------

Φ 15x10


18

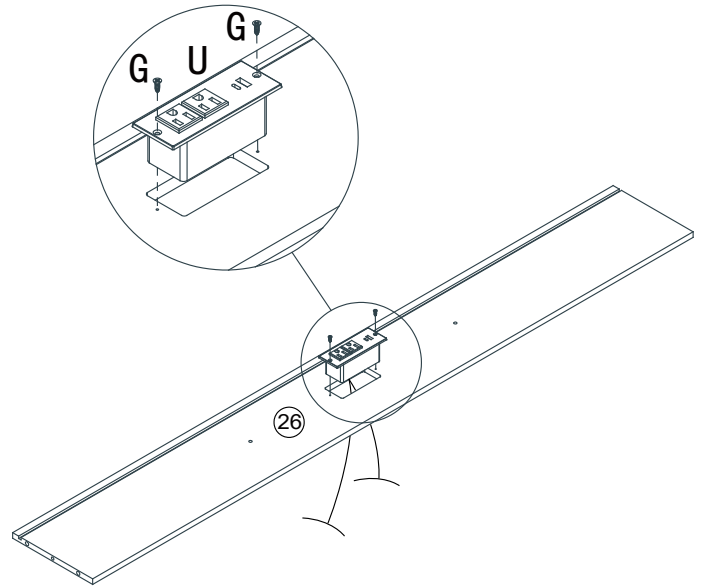

G		2pcs
---	---	------

ST3.5x12


19

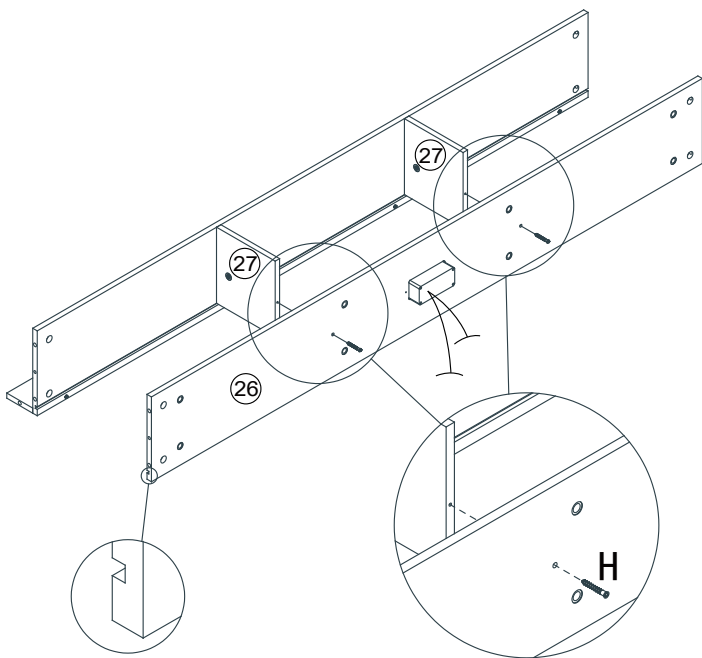


H		2pcs
---	---	------


M5x35

20

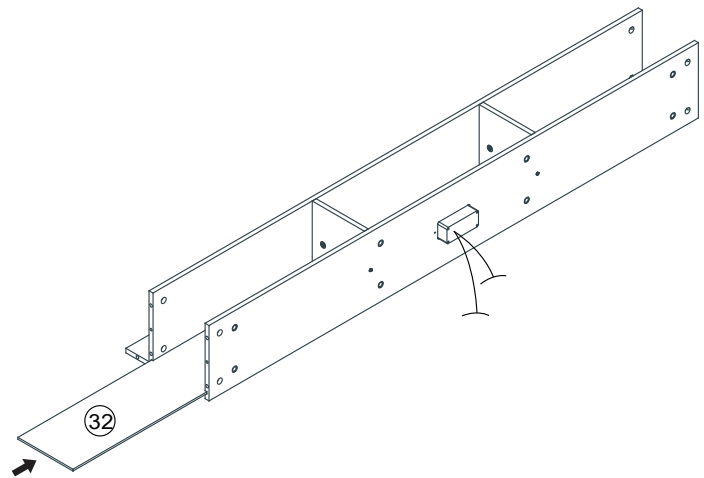


21

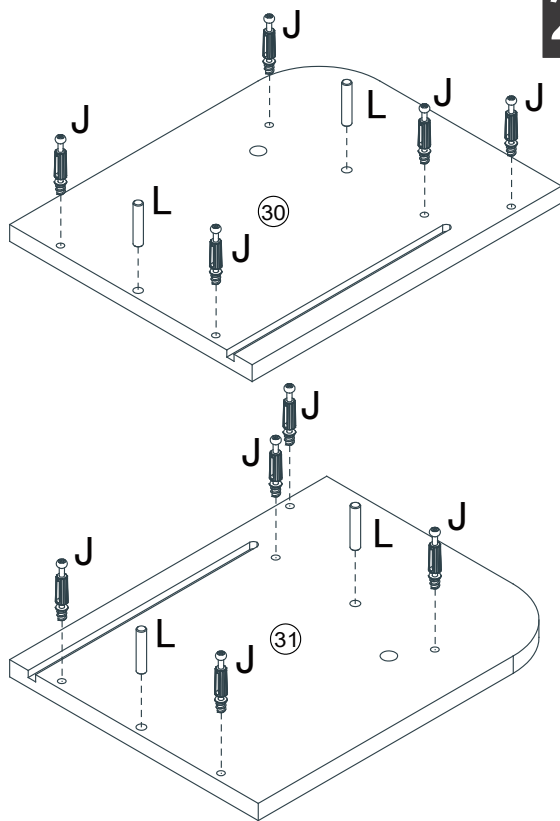


J		10pcs
L		4pcs

22

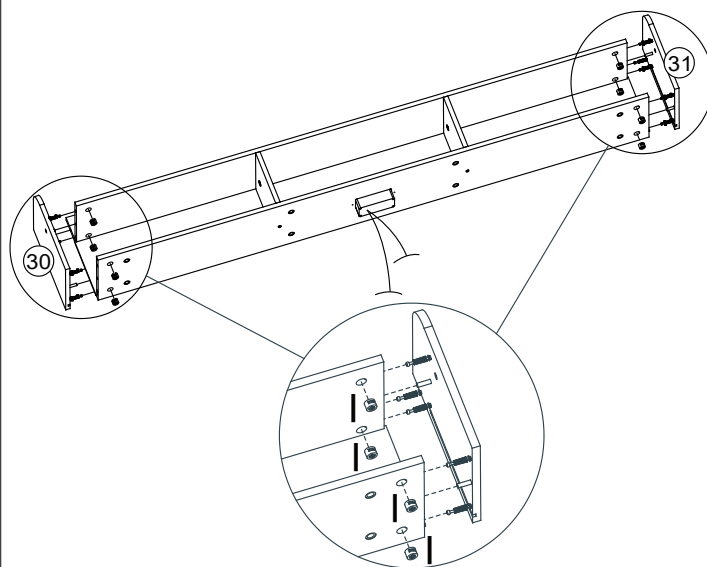


I		8pcs
---	--	------

23

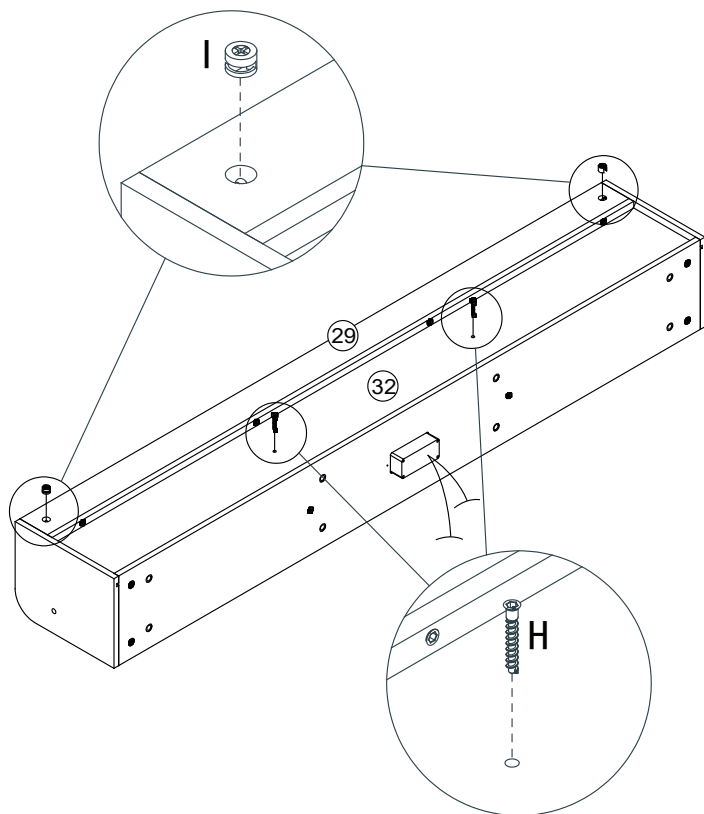


H		2pcs
I		2pcs

24

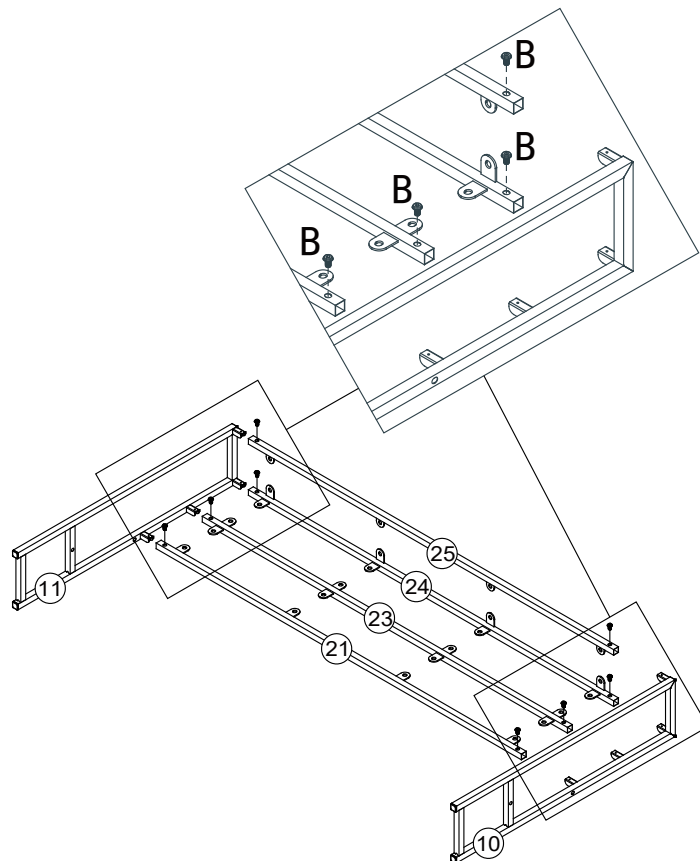


B		8pcs
---	--	------

25

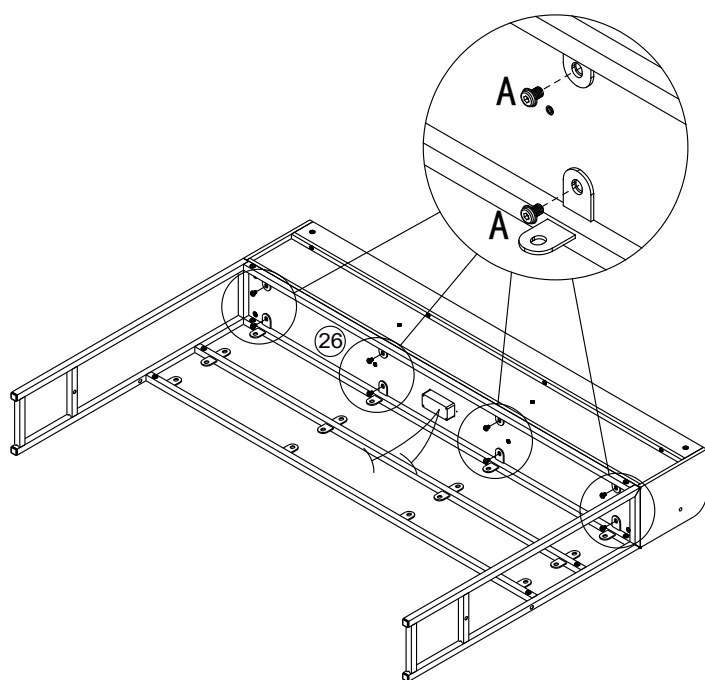


A		8pcs	white zinc
---	---	------	------------

26

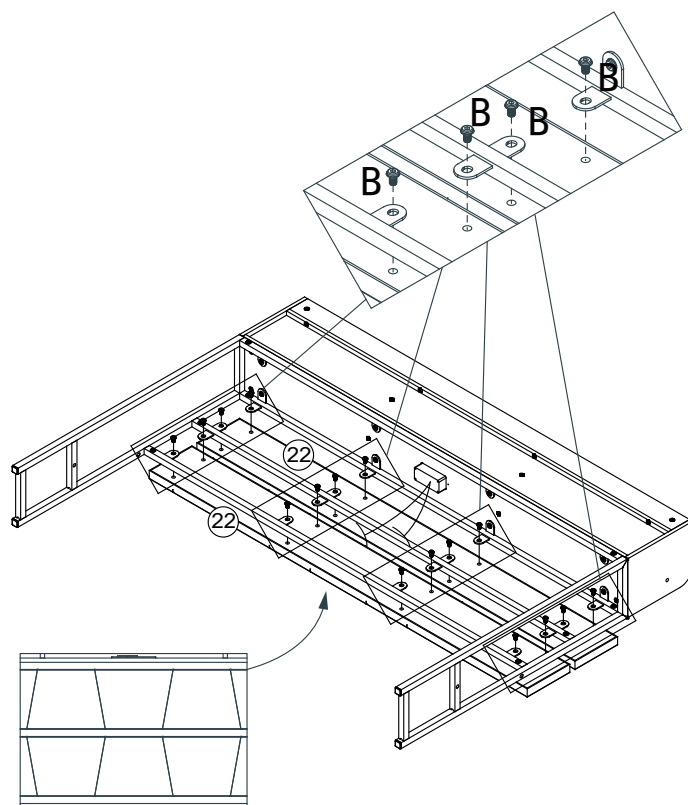


B		16pcs	
---	--	-------	--

27

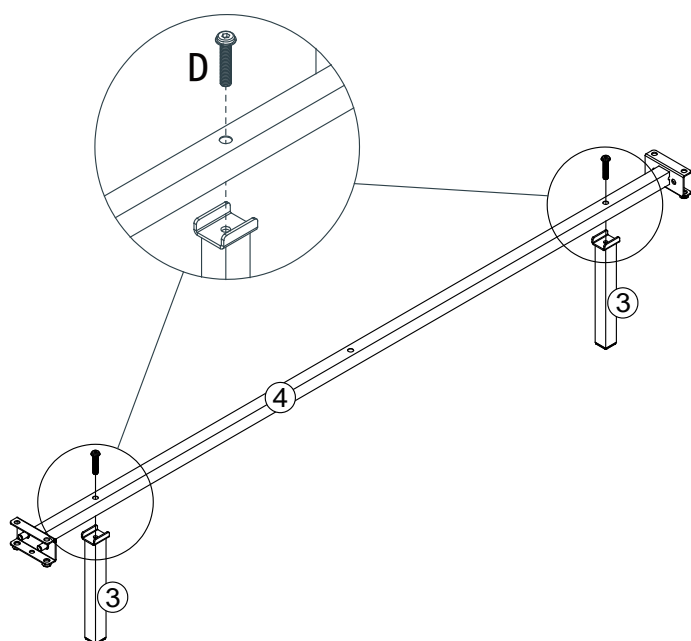

D		2pcs	
---	---	------	--


28

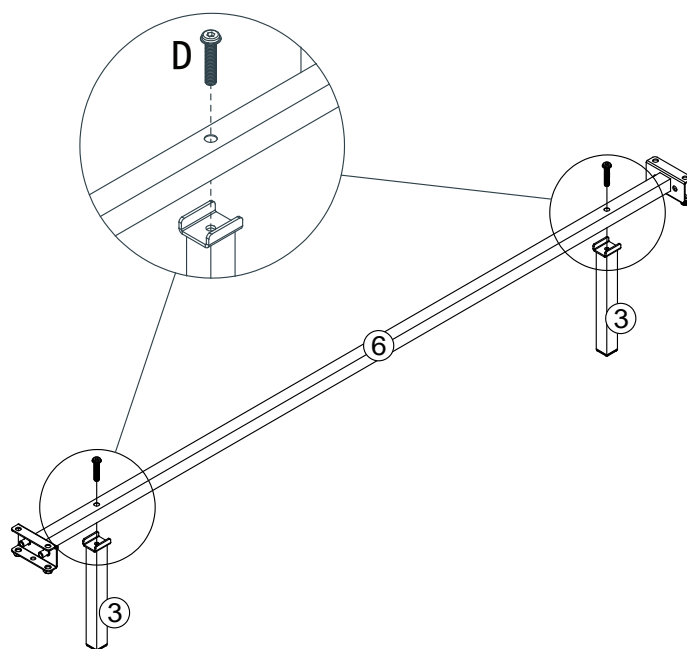

D		2pcs	
---	--	------	--


! Do not fully tighten the screws yet.

29

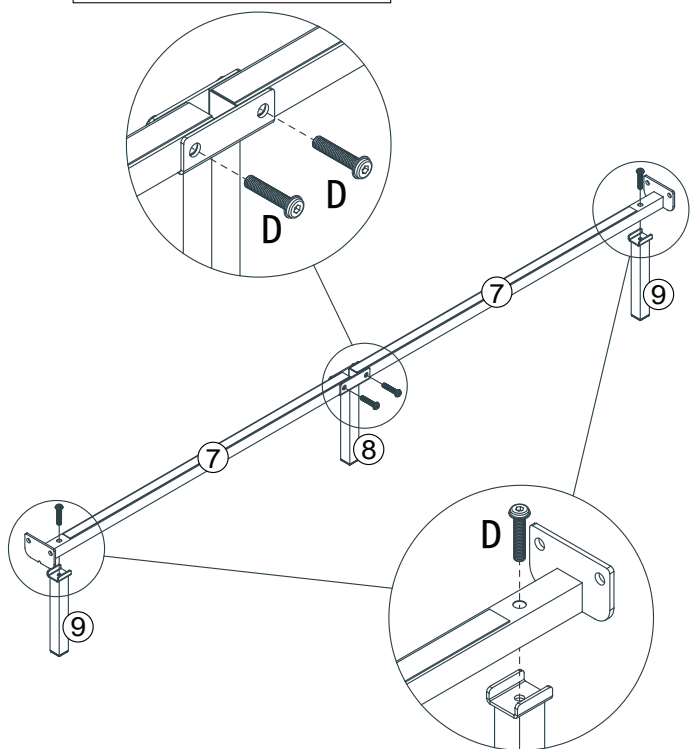


D		4pcs
---	---	------

30

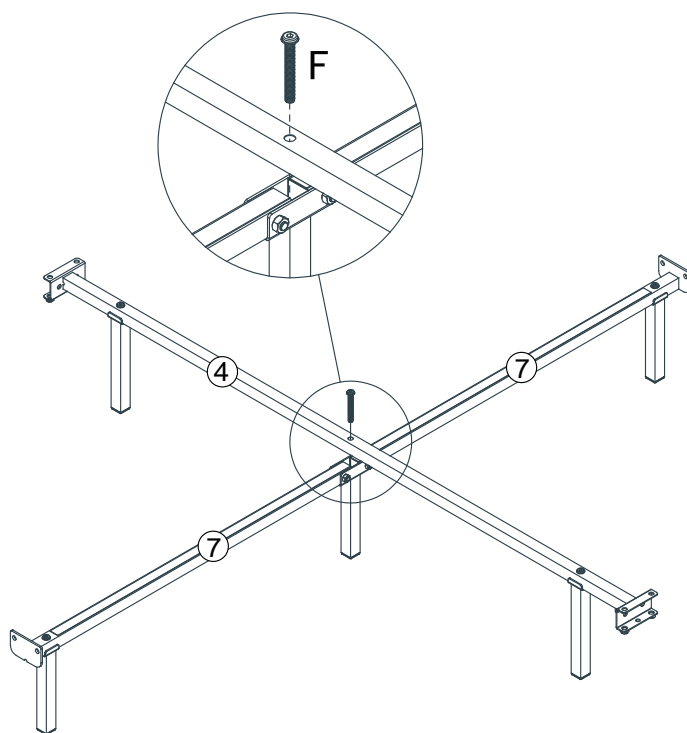


F		1pc
---	---	-----


31

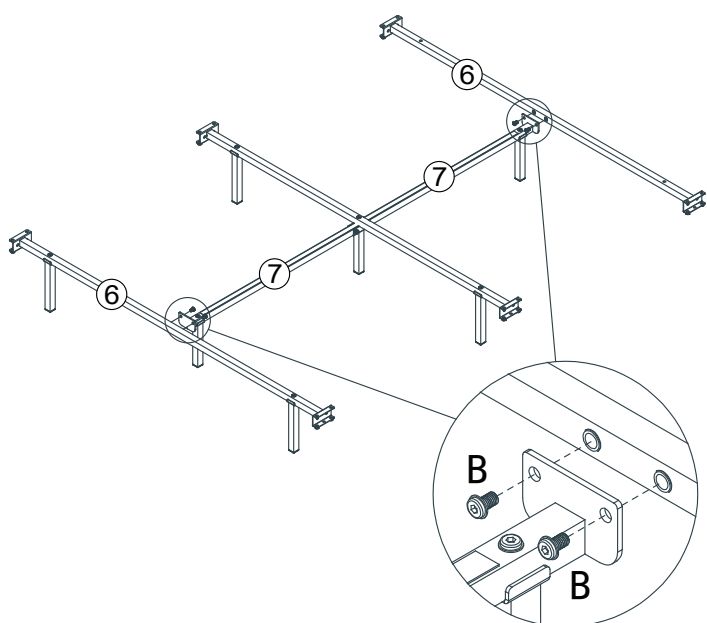

B		4pcs
---	---	------


32

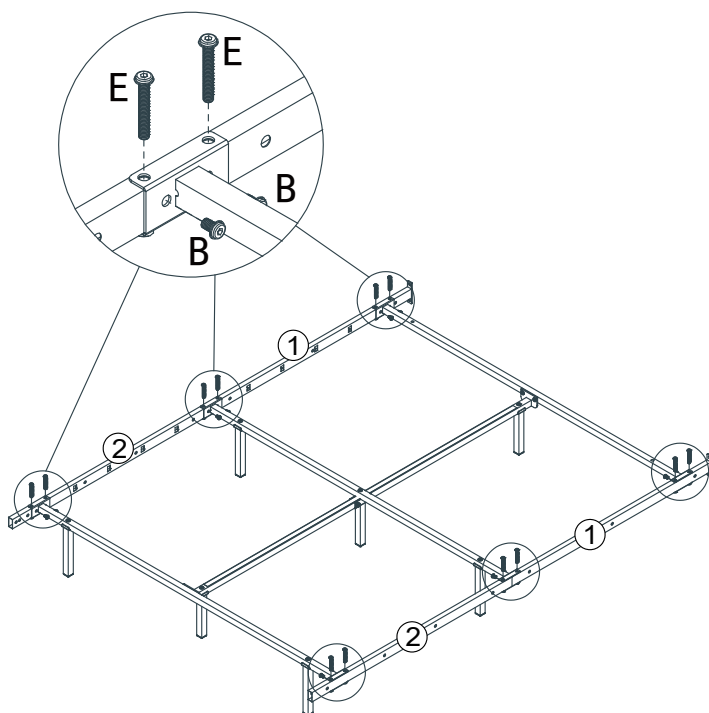

B		12pcs
E		12pcs

! Fully tighten all the screws.

37

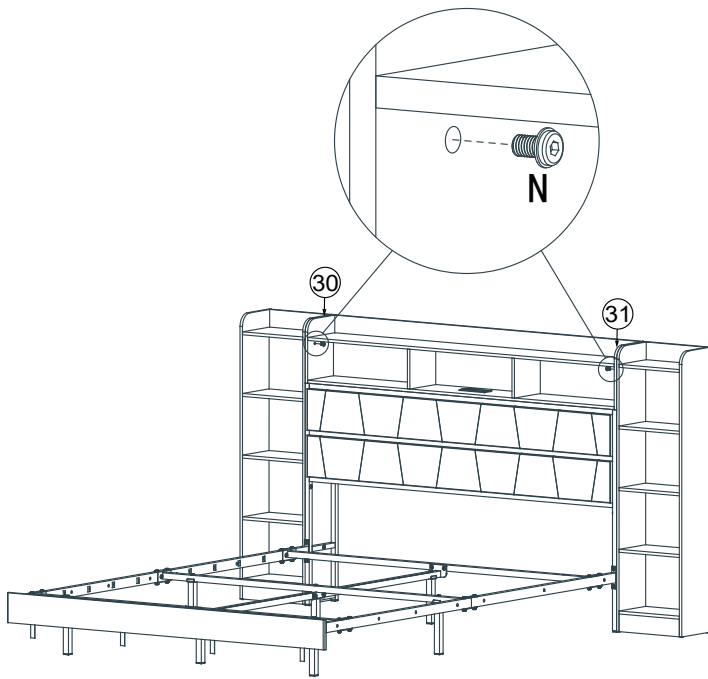


N		2pcs
---	---	------

M8x20

38

The screws in step 34 are not locked, and the holes in step 38 are aligned

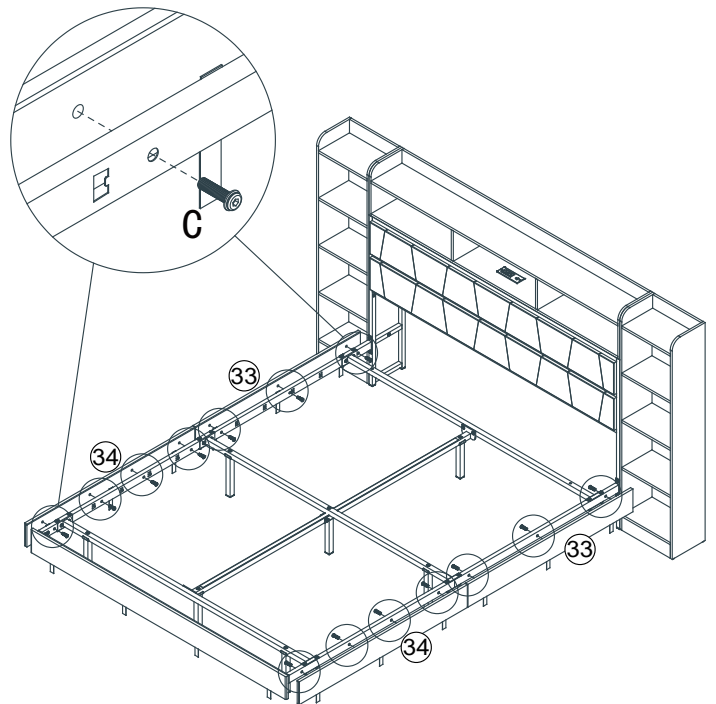


C		14pcs
---	--	-------

M8x30

 Fully tighten all the screws.


39

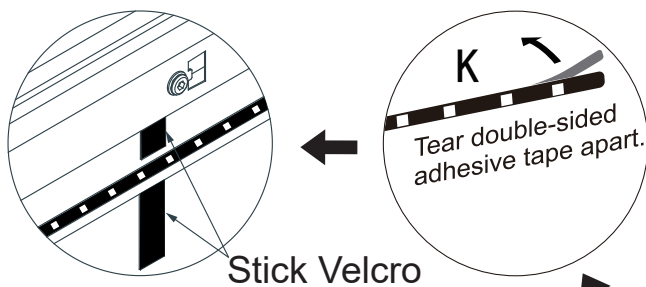

Stick Velcro

K
Tear double-sided
adhesive tape apart.


33

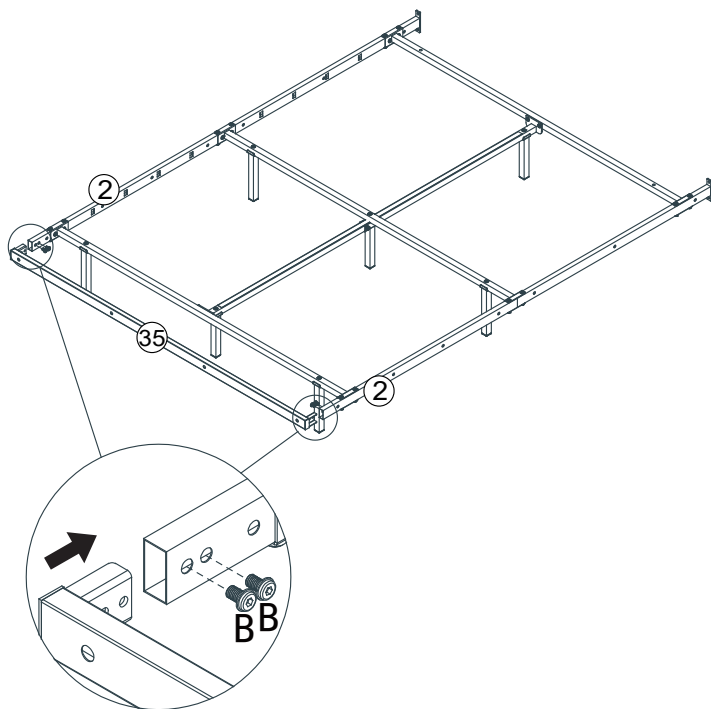

B		4pcs
	M8x14	

34


Screw locks in 50%, not tight.

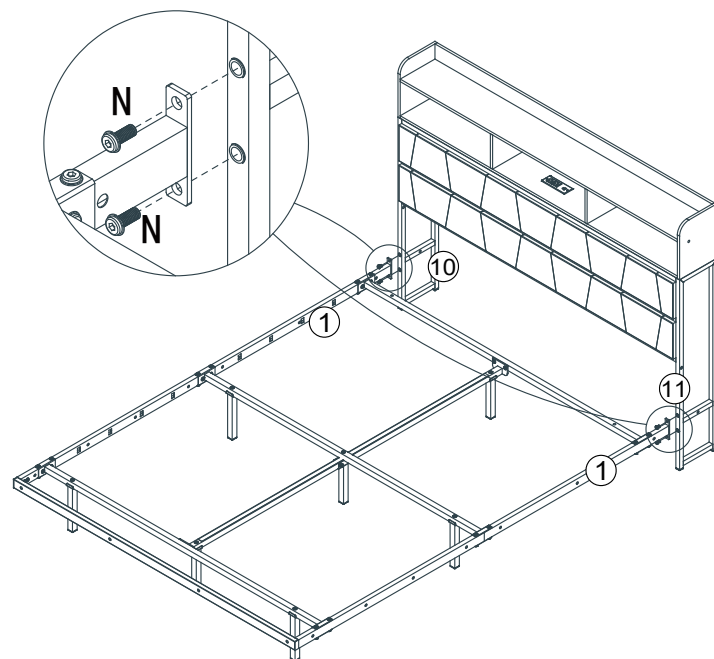

N		4pcs
	M8x20	


35

 Do not fully tighten the screws yet.

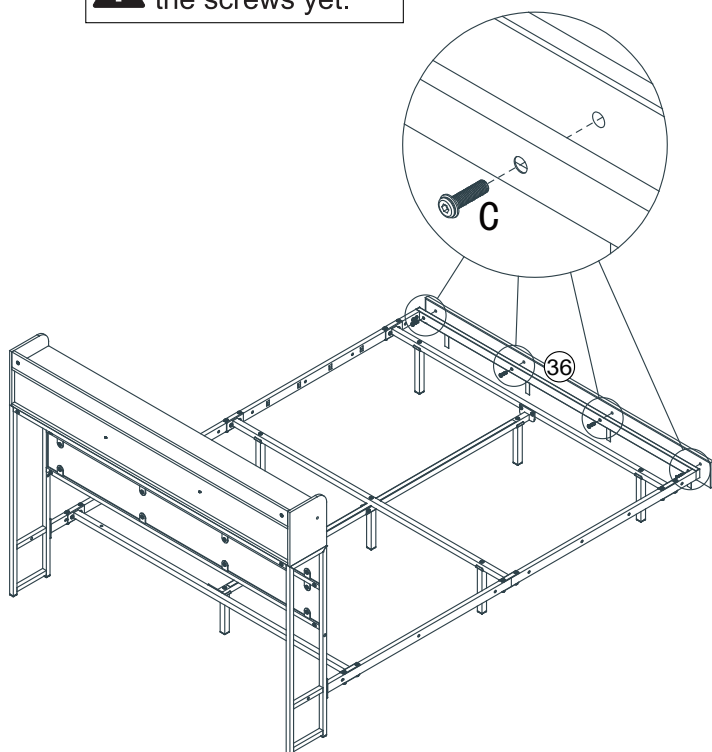


C		4pcs
	M8x30	


36

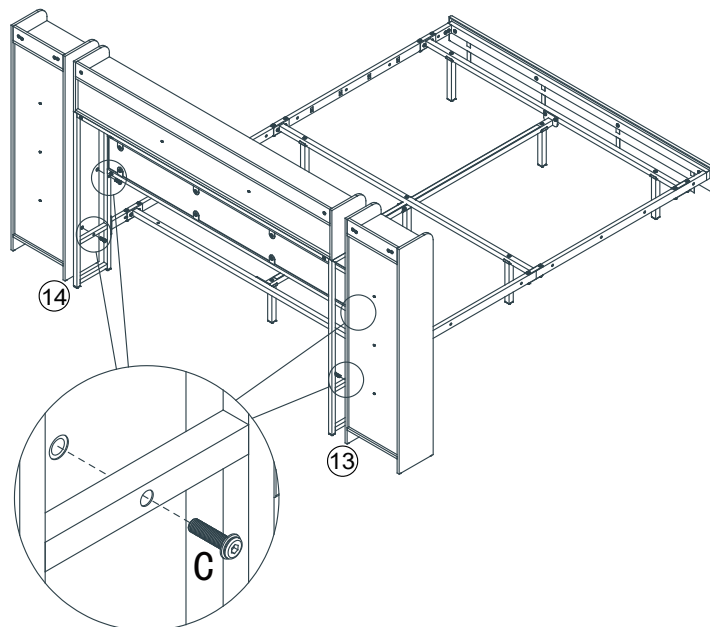


C		4pcs
	M8x30	

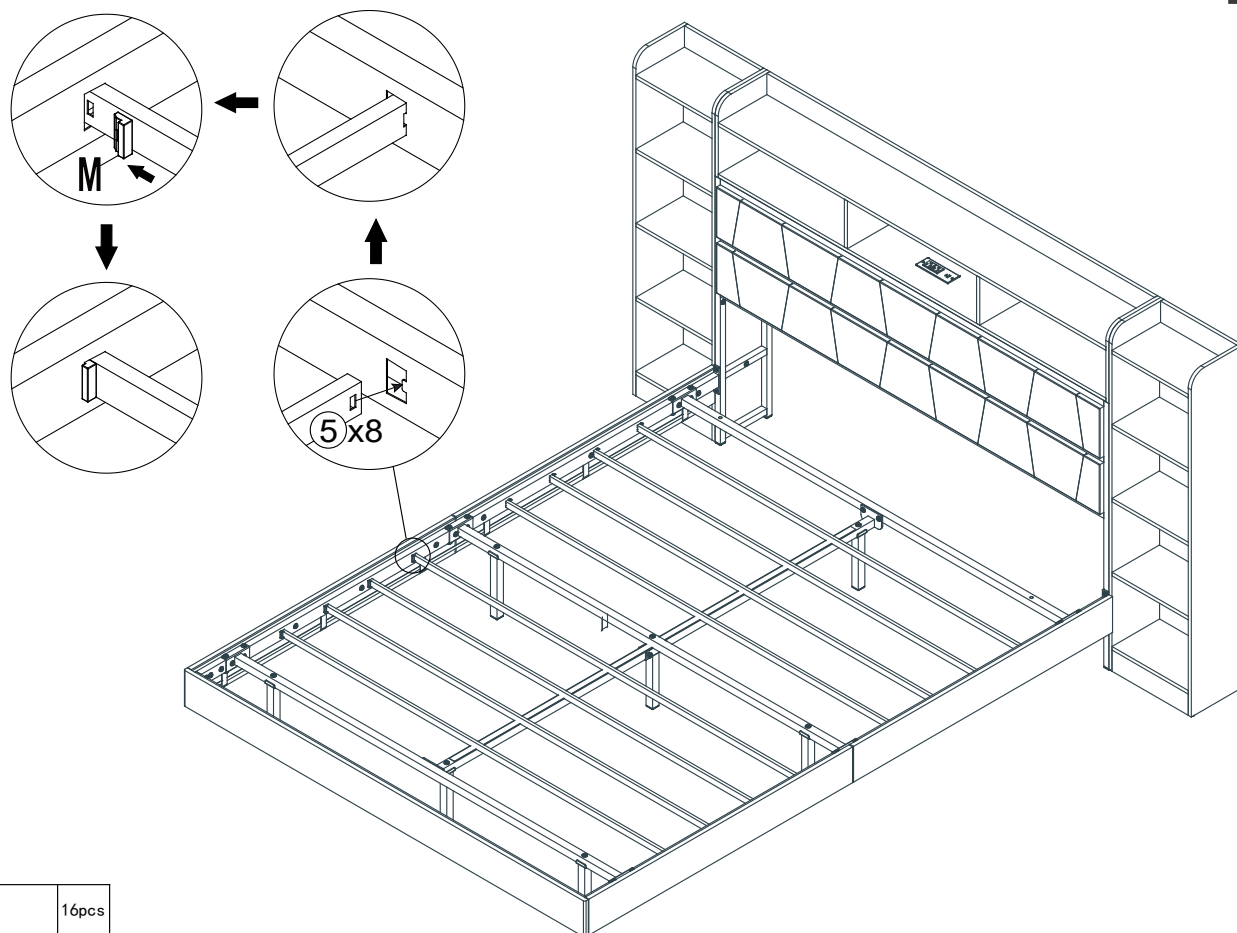

M		16pcs
---	---	-------

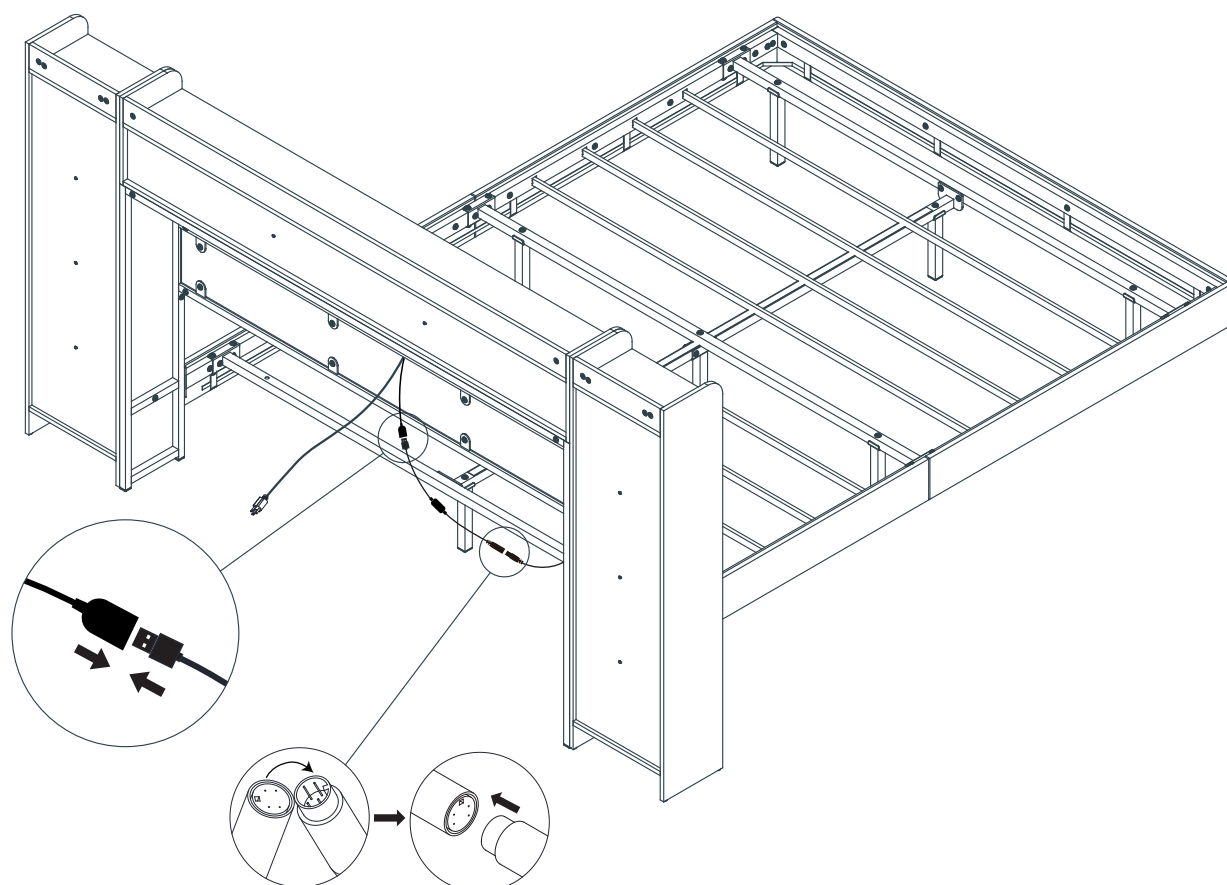

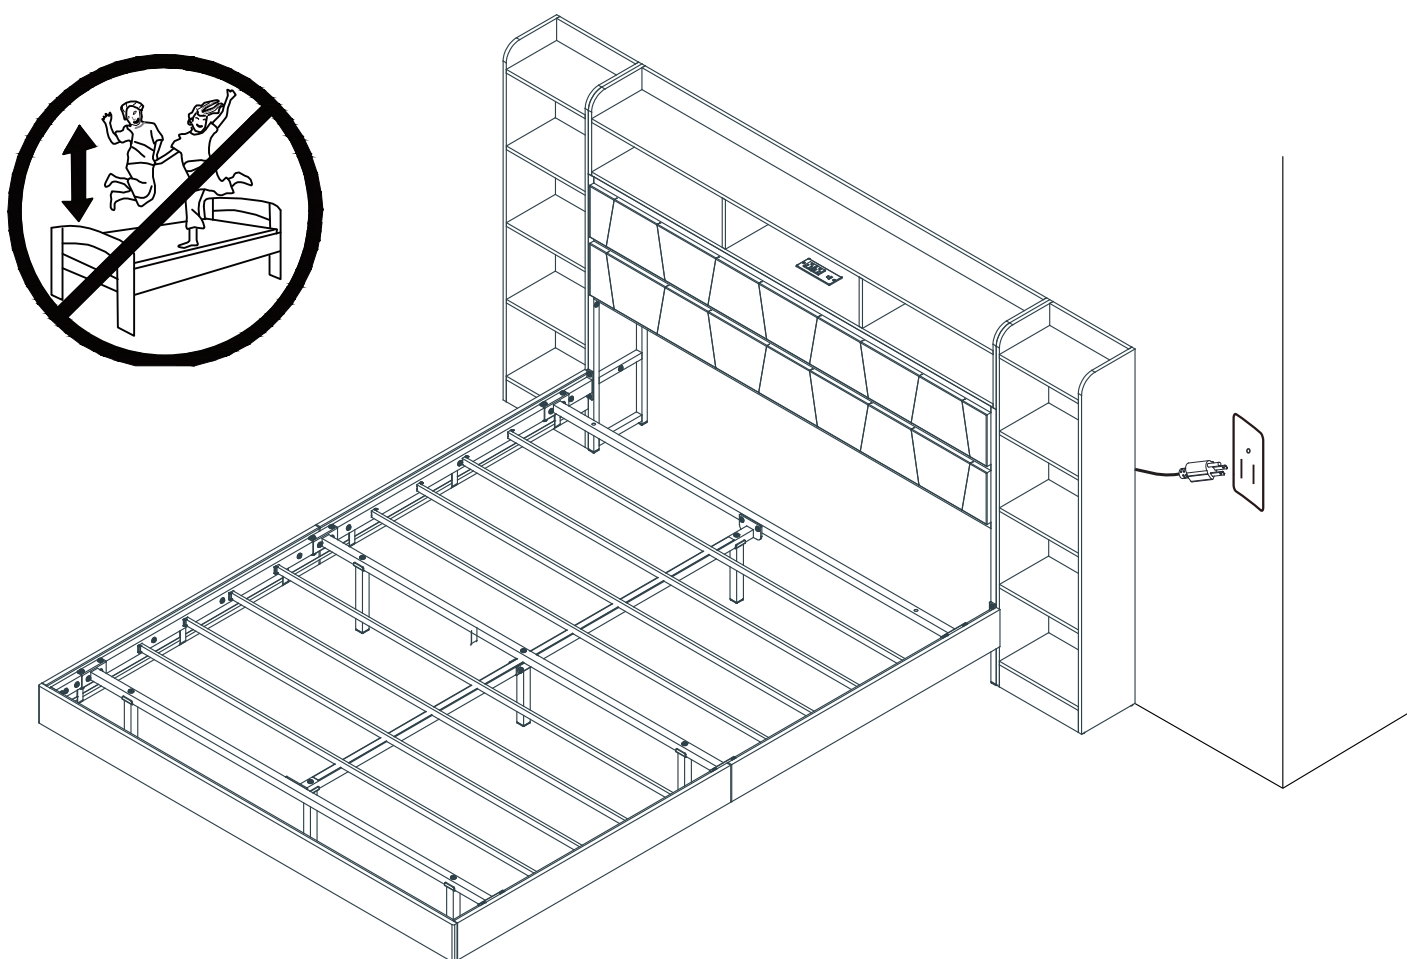

Finish