

WARNING!!

Children have died from furniture tipover. Tip restraints have been included with this product; you must install the tip restraints according to these instructions in order to minimize the risk of furniture tipping. If you have any questions about this product or the tip restraint, please send us an email at tip_restraint_help@Noblehousefurniture.com

NEVER allow children to climb or hang on furniture, including drawers or cabinet doors.

In addition to installing the restrains, to help prevent tip-over

1. **NEVER** put a TV or other heavy objects on top of this product".
2. Do not stand on the product


	Children have died from furniture tipover. To reduce the risk of furniture tipover: • ALWAYS install tipover restraint provided. • NEVER put a TV on this product. • NEVER allow children to stand, climb or hang on drawers, doors, or shelves. • NEVER open more than one drawer at a time. • Place heaviest items in the lowest drawers. • Do not defeat or remove the drawer interlock system. <i>This is a permanent label. Do not remove!</i>
	

Assembly Instructions











Caution : You must read this before you proceed

Please look in *** for hardware packs and legs.
Sets often ship in multiple boxes and may arrive a day or two apart.**




NIGHTSTAND

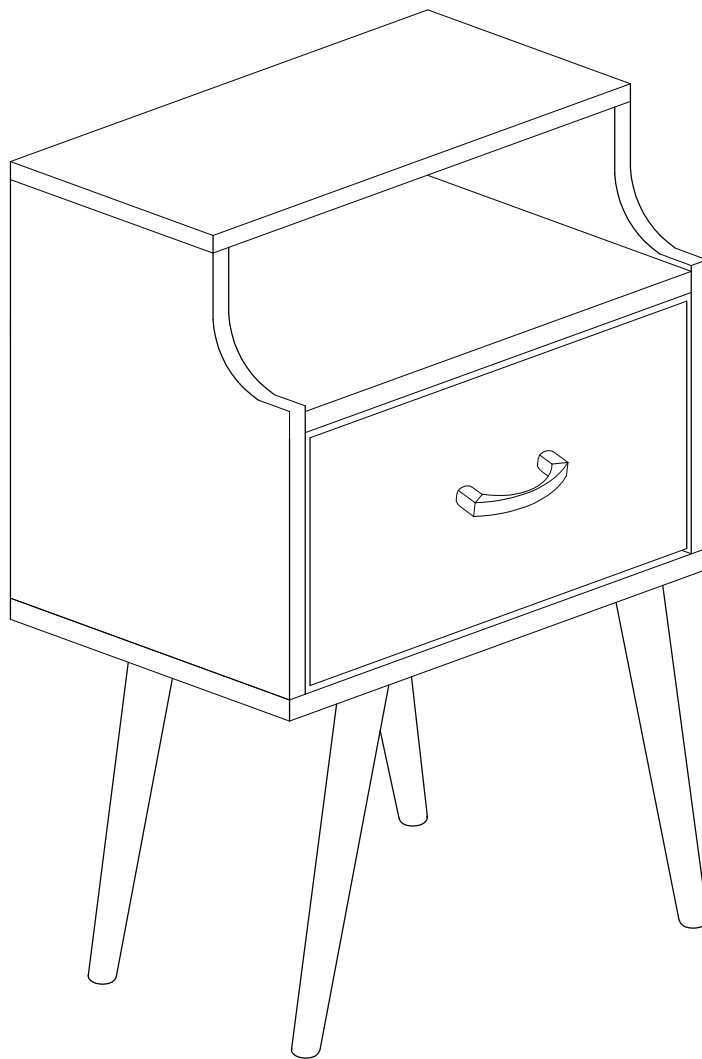



Parts List

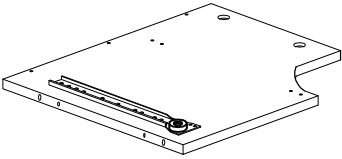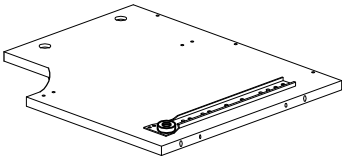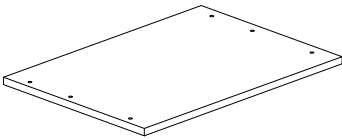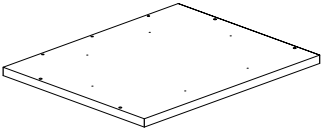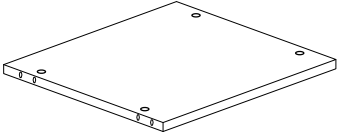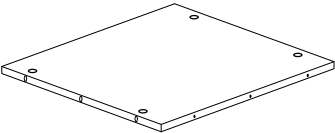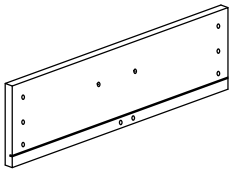



Label	Picture	Description	QTY
A		Right Side Panel	1
B		Left Side Panel	1
C		Top Panel	1
D		Bottom Panel	1
E		Fixed Panel	1
F		Back Panel	1
G		Drawer Front	1
H		Drawer Right Panel	1
I		Drawer Left Panel	1
J		Drawer Back Panel	1

Parts List

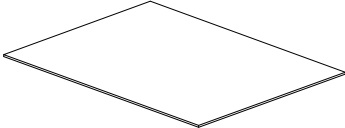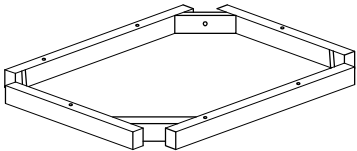Label	Picture	Description	QTY
K		Bottom Support	1
L		Drawer Base	1
M		Leg	4
N		Wooden Frame	1


Hardware

Label	Picture	Description	QTY
①		Handle	1
②		Pan Head Bolt (M4 x 19mm)	3
③		Camlock Cover	5
④		Leveler	5
⑤		Large Camlock (15 X 12mm)	9
⑥		Small Camlock (15 x 9mm)	9
⑦		Cam Bolt	17
⑧		Flat Head Screws (M8 x 38mm)	8

Label	Picture	Description	QTY
9		Wood Dowel (Ø6 X 30mm)	17
10		Flat Head Screws (M3.5 x 25mm)	9
11		Pan Head Screws (M8 x 30mm)	7
12		Allen Wrench (M5)	1
13		Allen Head Bolt (M8 X 70MM)	5
14		Spring Washer	5
15		Flat Washer	5
16		Anti Tip Strap + Screw	1
17		Screw Driver (Not Provided)	1
18		Measuring Tape (Not Provided)	1

Assembly Preparation

Before
Beginning
Assembly

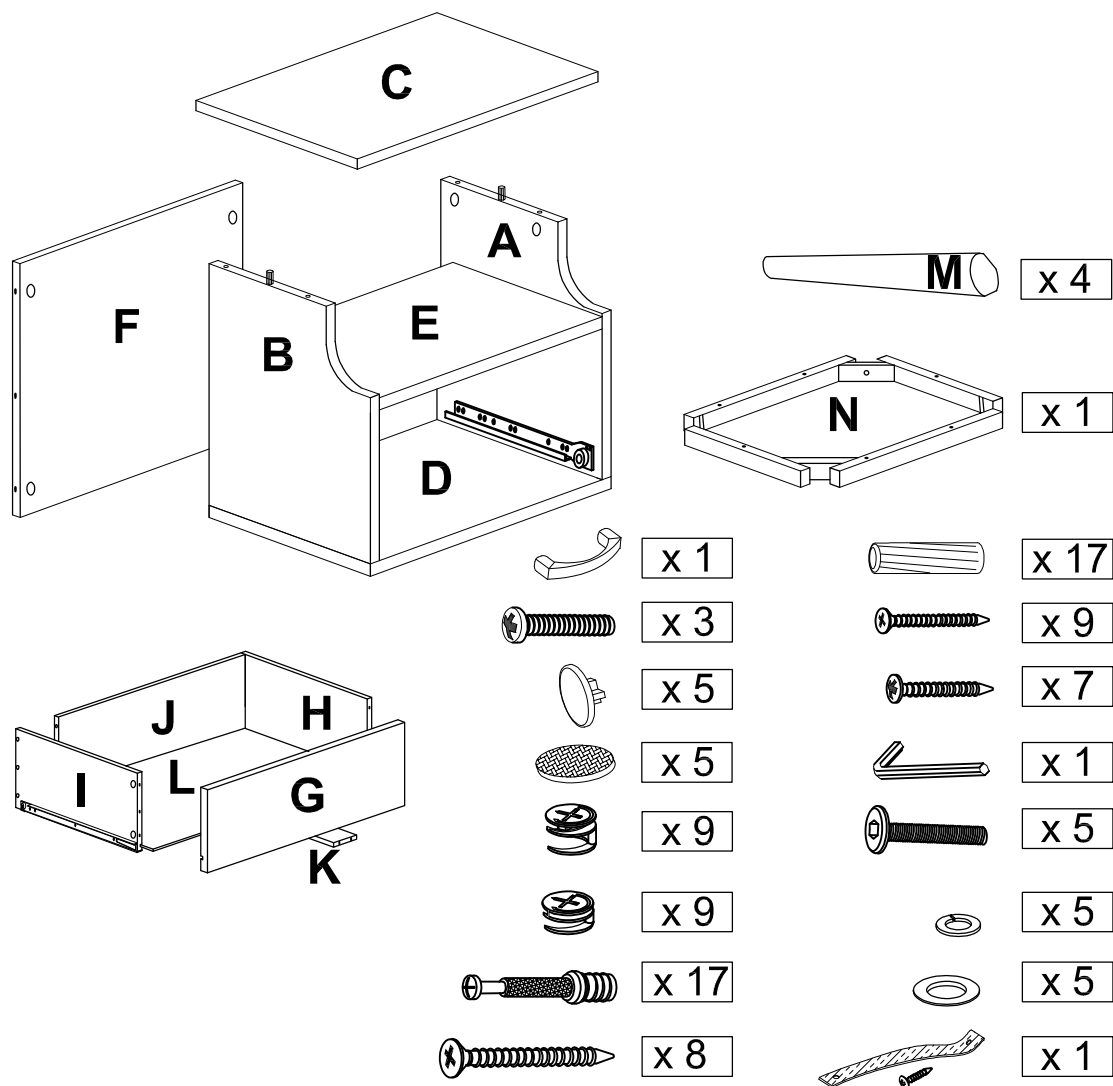

- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-


Assembly Steps

Overview

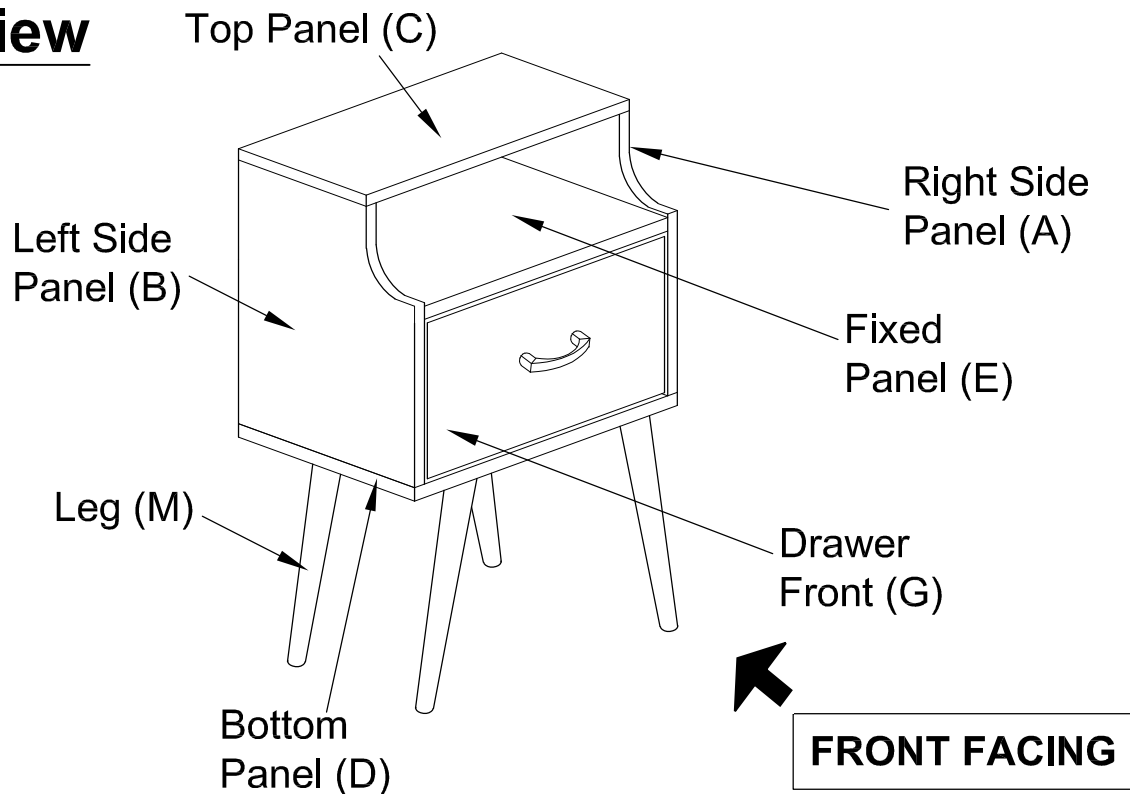

This Nightstand has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Drawer parts, the above picture is to help you put the various parts into perspective. Please read through the instructions here below to familiarize yourself with the parts and steps before assembly.

Step 1

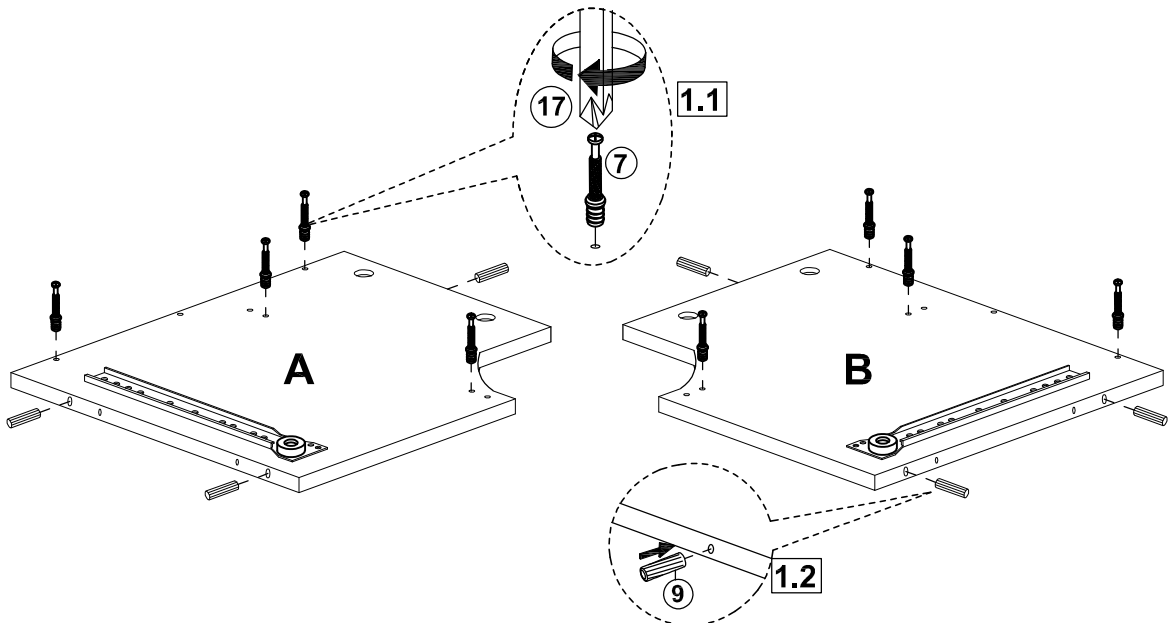


Unpack and place all parts on a clean, non-marring surface.

1.1 Attach Cam Bolts (7) to the mounting positions on Right Side Panel (A) and Left Side Panel (B) with a Screw Driver (17).


1.2 Insert Wood Dowels (9) into the mounting positions on the side edges of the Right Side Panel (A) and Left Side Panel (B).

Step 2

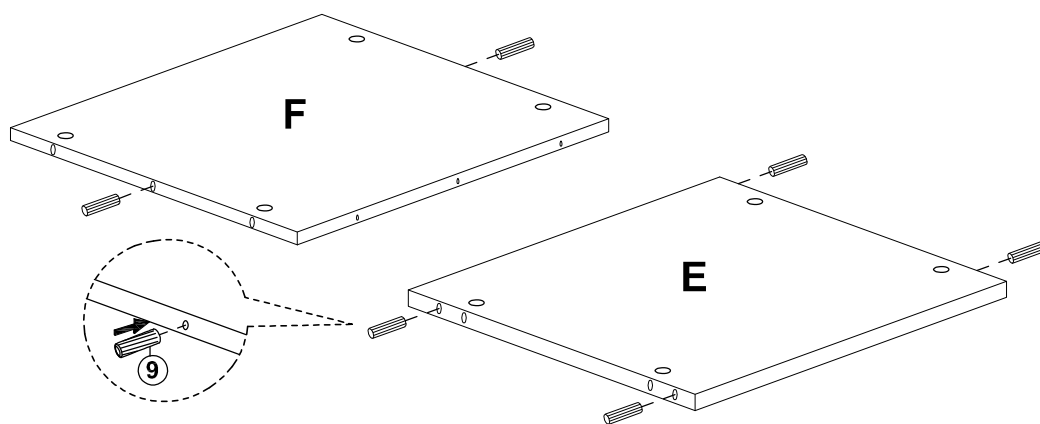


Insert Wood Dowels (⑨) into the mounting positions on the side edges of the Fixed Panel (E) and Back Panel (F).

Step 3

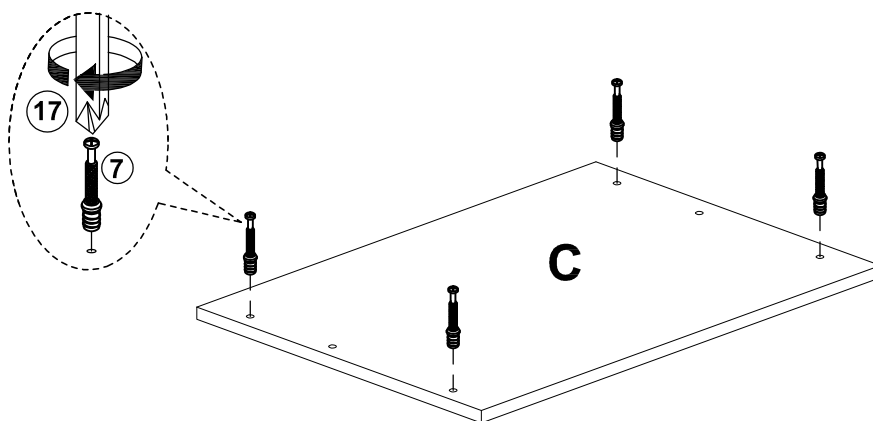

Attach Cam Bolts (⑦) to the mounting positions on Top Panel (C) with a Screw Driver (⑰).

Step 4

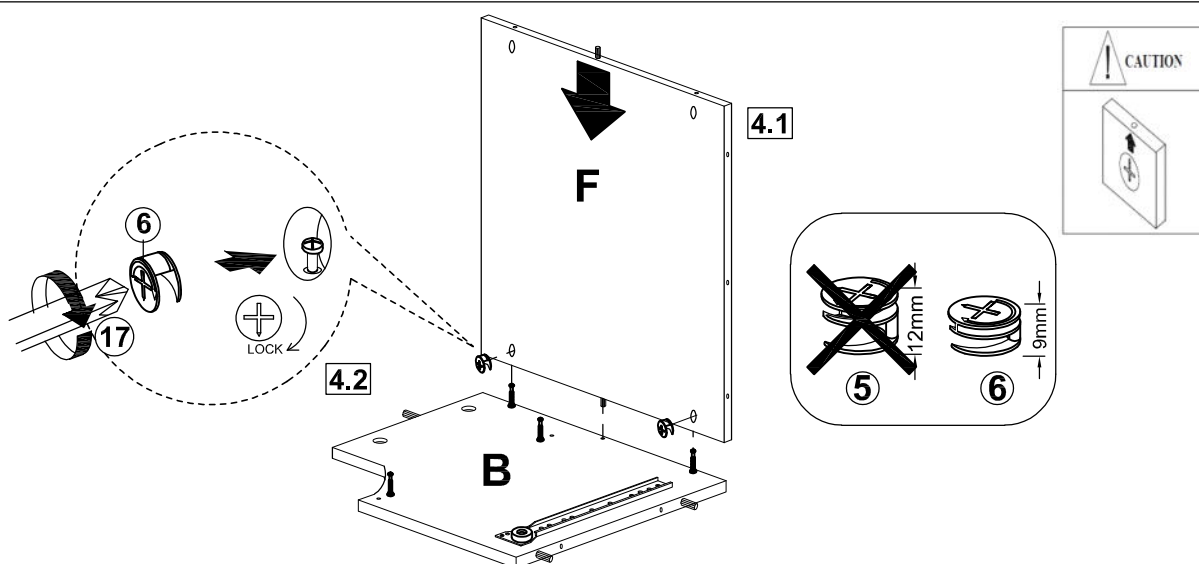


4.1) Attach Back Panel (F) to Left Side Panel (B) via the cam-bolts and the wood dowels on the respective parts.

4.2) Insert Small Cam-locks (⑥) into the mounting positions on Back Panel (F) and turn clockwise to lock onto the cam-bolts using a Screw Driver (⑰).

CAUTION: Insert the Cam-locks (⑥) per the correct orientation as indicated in the above picture.

Step 5

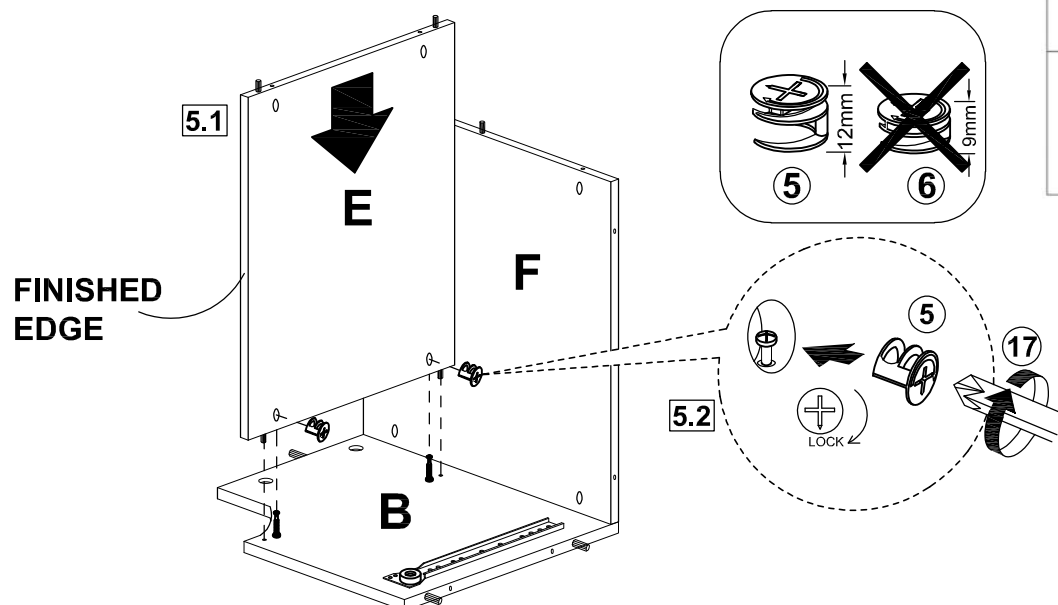


5.1) Attach Fixed Panel (E) to Left Side Panel (B) via the cam-bolts and the wood dowels on the respective parts.

5.2) Insert Large Cam-locks ((5)) into the mounting positions on Fixed Panel (E) and turn clockwise to lock onto the cam-bolts using a Screw Driver ((17)).

CAUTION: Insert the Cam-locks ((5)) per the correct orientation as indicated in the above picture.

Step 6

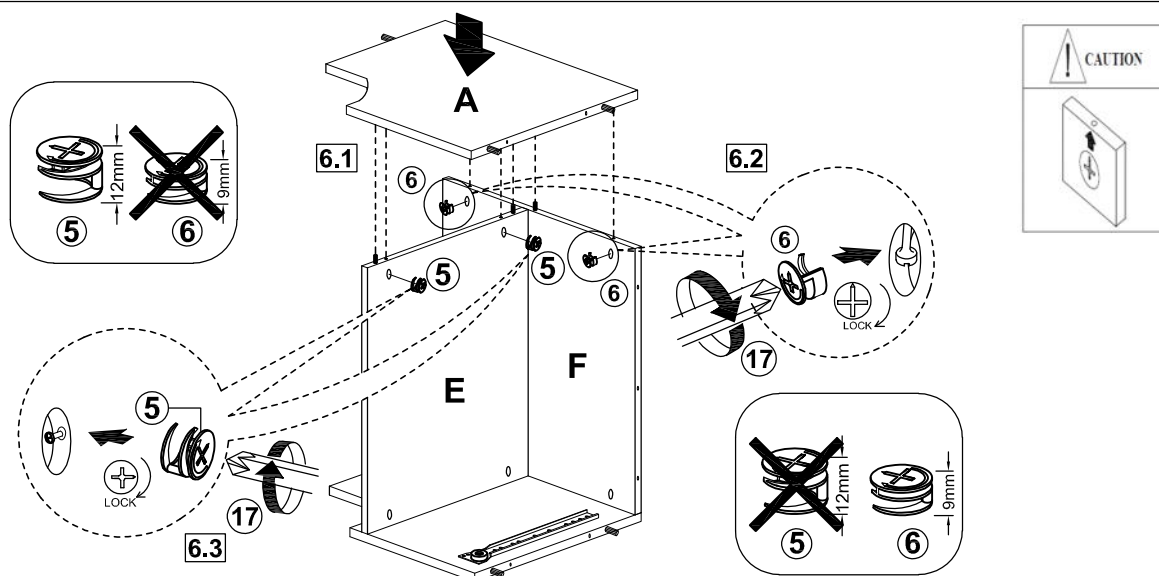

6.1) Attach Right Side Panel (A) to Fixed Panel (E) and Back Panel (F) via the cam-bolts and the wood dowels on the respective parts.


6.2) Insert Small Cam-locks ((6)) into the mounting positions on Back Panel (F) and turn clockwise to lock onto the cam-bolts using a Screw Driver ((17)).

6.3) Insert Large Cam-locks ((5)) into the mounting positions on Fixed Panel (E) and turn clockwise to lock onto the cam-bolts using a Screw Driver ((17)).

CAUTION: Insert the Cam-locks ((6)) per the correct orientation as indicated in the above picture.

CAUTION: Insert the Cam-locks ((5)) per the correct orientation as indicated in the above picture.

Step 7

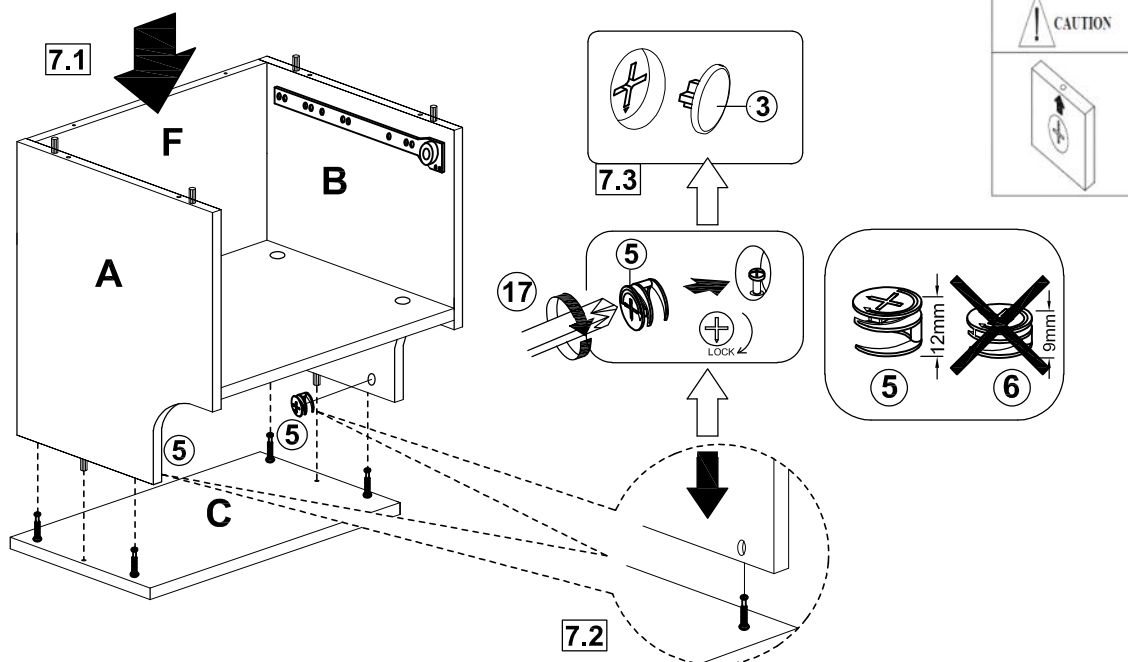

7.1) Attach Right Side Panel (A), Left Side Panel (B) and Back Panel (F) to Top Panel (C) via the cam-bolts and the wood dowels on the respective parts.


Note: Use a measuring tape (18) to ensure the Top Panel (C) is in the correct position.

7.2) Insert Large Cam-locks (5) into the mounting positions on Right Side Panel (A) and Left Side Panel (B) and turn clockwise to lock onto the cam-bolts using Screw Driver (17).

7.3) Insert Cam-lock Covers (3) to cover all Cam Locks (5) (can omit by hand).

CAUTION: Insert the Cam-locks (5) per the correct orientation as indicated in the above picture.


Step 8

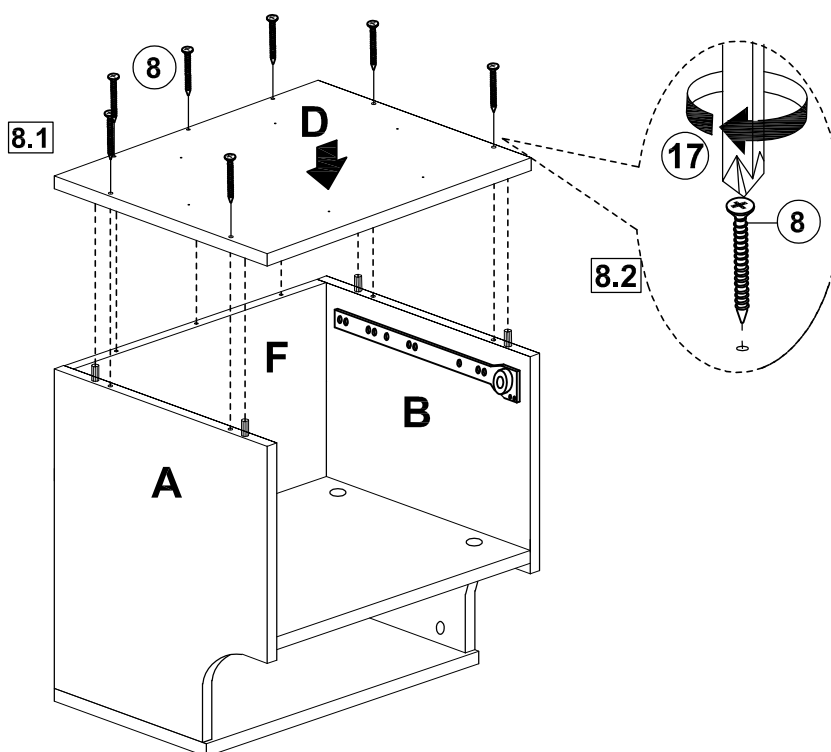

8.1) Attach Bottom Panel (D) to Right Side Panel (A), Left Side Panel (B) and Back Panel (F) via the wood dowels on the respective parts.

8.2) Use Flat Head Screws (8) to fasten Bottom Panel (D) to Right Side Panel (A), Left Side Panel (B) and Back Panel (F) .

Step 9

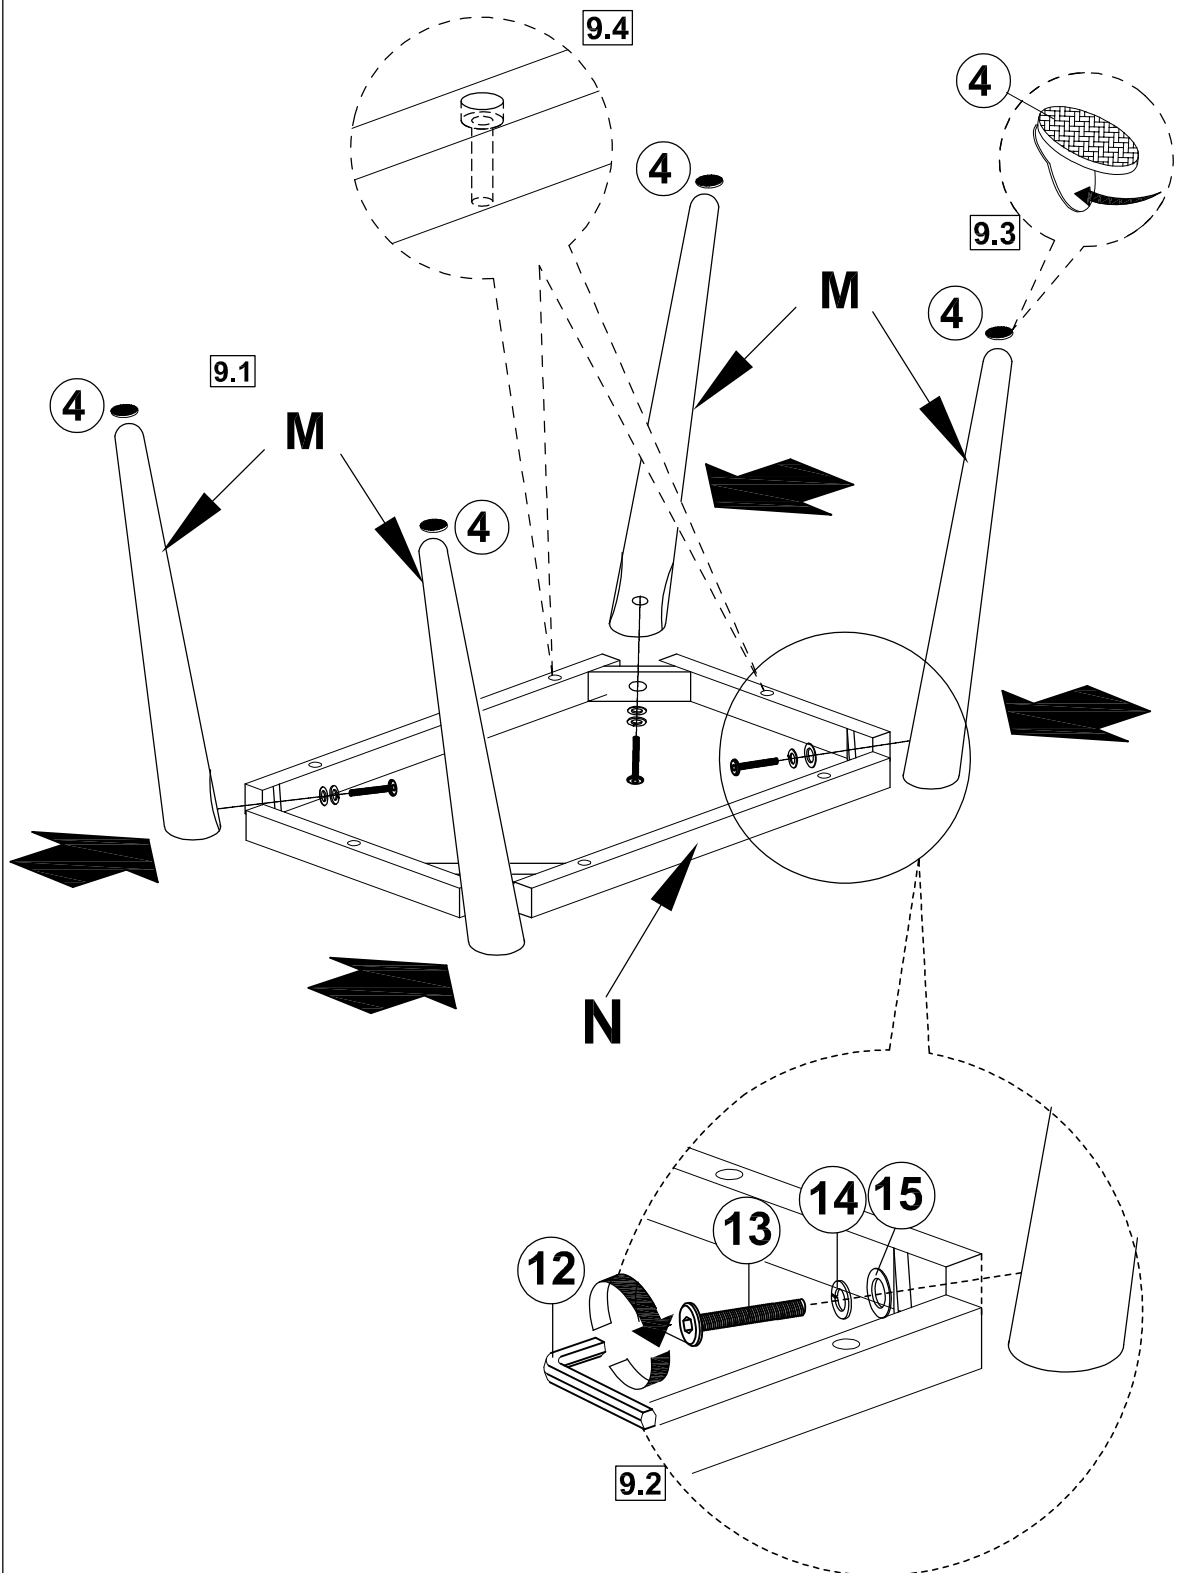


9.1) Identify and position the Legs (M) to Wooden Frame (M) as shown.

9.2) Use Allen Wrench (12) to fasten Allen Head Bolts (13) fitted with Spring Washers (14) and Flat Washers (15) to fasten each Leg to the Wooden Frame. Do not tighten the bolts completely until all bolts are in place on each leg.

9.3) Paste a leveler (4) on the bottom of each Leg (M).

9.4) Note : Bigger holes are facing up when assembly.


Step 10

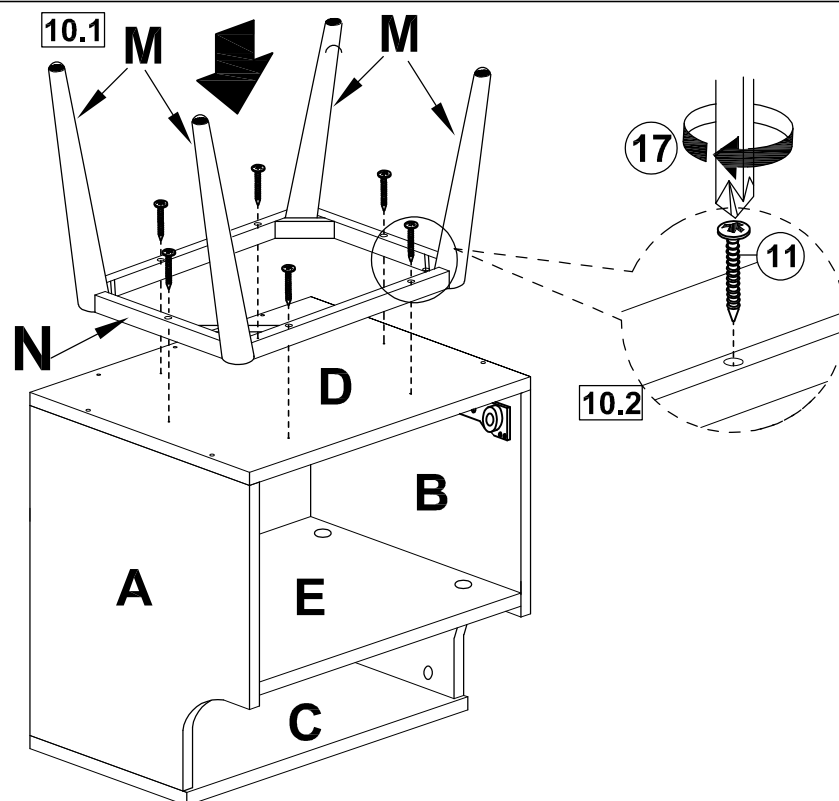

10.1) Position the Legs (M) and Wooden Frame (N) as shown and align the mounting positions on the Wooden Frame (N) to the mounting positions on the bottom side of Bottom Panel (D).

10.2) Use Pan Head Screws (11) to fasten the Legs to Wooden Frame (N) using a Screw Driver (17).

Step 11

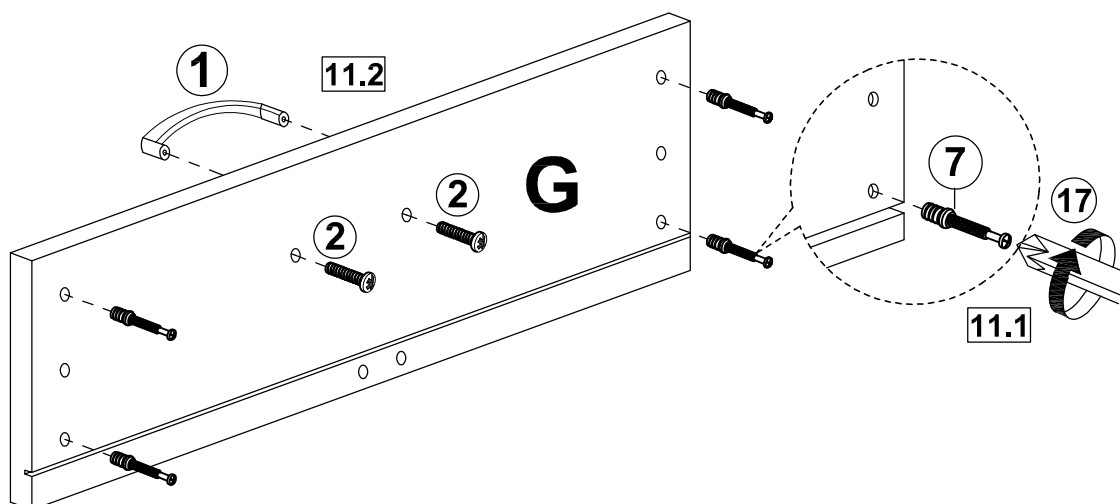


11.1) Use a Screw Driver (17) to screw Cam Bolts (7) into the mounting positions on the inside face of Drawer Front (G) as shown.

Note : It is easier to screw in the Cam Bolts with the Drawer Front laid flat down - take care not to scratch or damage the front face of the Drawer Front panel.

11.2) Position Drawer Front (G) vertically as shown. Align the mounting positions on the Drawer Handles to the screw holes on Drawer Front (G). Insert Pan Head Bolts (2) through the bolt holes on Drawer Front (G) to thread into the bolt holes on the handles (1). Use a Screwdriver (17) to screw in the Pan Head Bolts- do not tighten the bolts fully until both bolts are in place.

Step 12

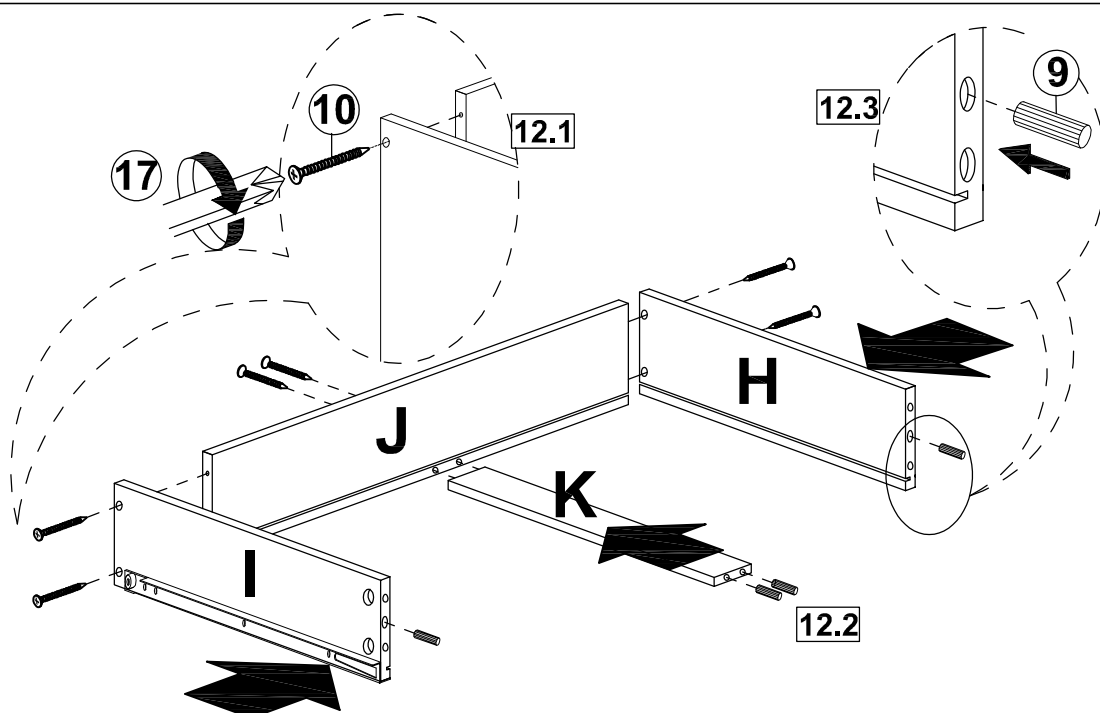


12.1) Attach Drawer Right Panel (H) and Drawer Left Panel (I) to Drawer Back Panel (J) as shown-note the grooves on each panel are at the bottom. Use Flat Head Screws (10) to fasten side panels to back panel.

Do not tighten screws completely until all screws are in place in each panel.

12.2) Align the mounting positions on Drawer Bottom Support (K) to the mounting positions on (J) and use Flat Head Screws (10) to fasten Bottom Support (K) to Drawer Back Panel (J).


12.3) Insert Wood Dowels (9) into the mounting positions on the front edge of Drawer Right Panel (H), Drawer Left Panel (I) and Drawer Bottom Support (K) .

Step 13

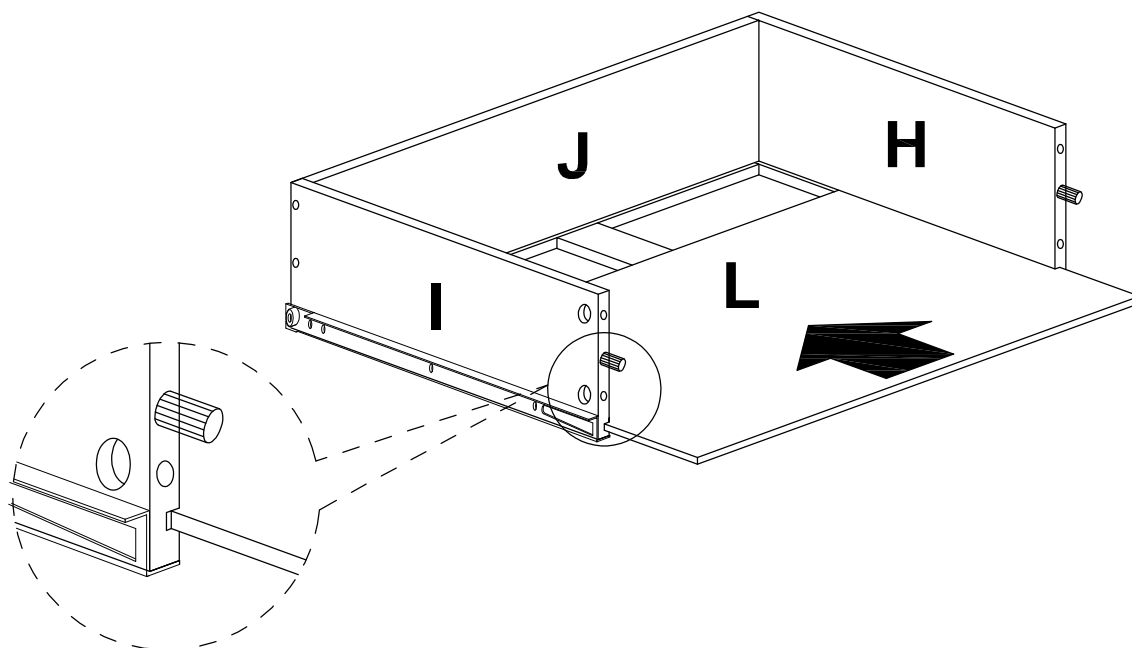

Slide the Drawer Base (L) into the grooves on Drawer Right Panel (H), Drawer Left Panel (I) and Drawer Back Panel (J).

Step 14

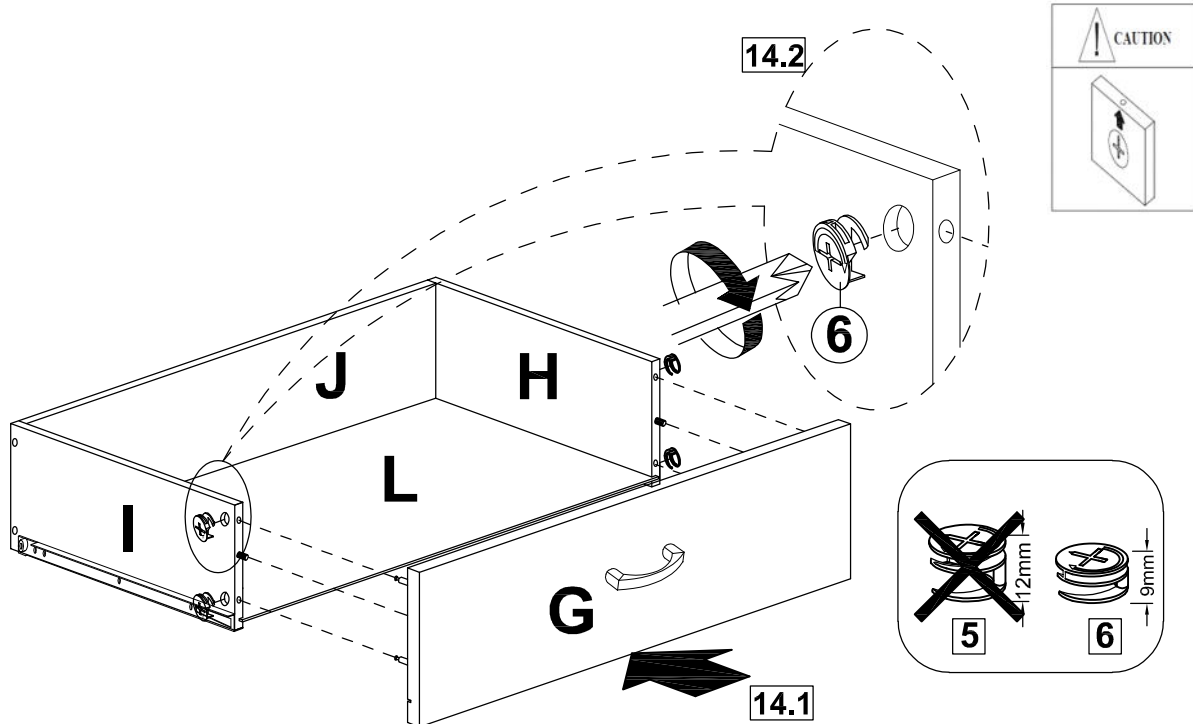


14.1) Attach Drawer Front Panel (G) to Drawer Right Panel (H), Drawer Left Panel (I) via the cam-bolts and the wood dowels on the respective parts. Check that the front edge of Drawer Base (L) fits into the groove on Drawer Front Panel (G).

14.2) Insert Drawer Small Cam-locks (⑥) into the mounting positions on Drawer Right Panel (H) and Drawer Left Panel (I) and turn clockwise to lock onto the cam-bolts.


CAUTION: Insert the Cam-locks (⑥) per the correct orientation as indicated in the above picture.

Step 15

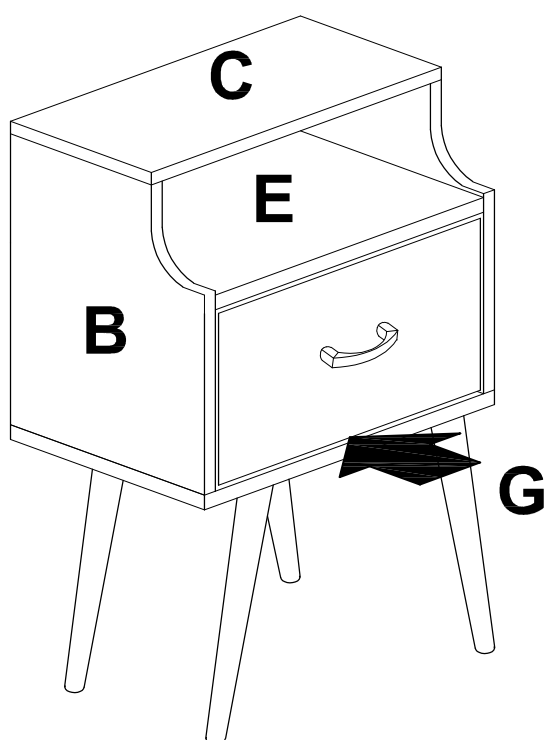


Place the Drawer assembly in place by aligning the rails.

Step 16

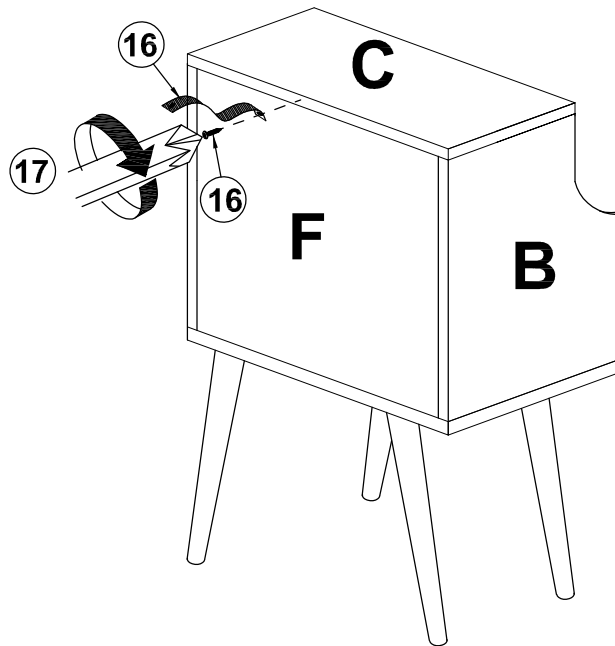

Insert Screw (16) through Anti Tip Strap (16) at the marked sticker area on the back side edge of Back Panel (F) and drive in the screw using a Screw Driver (17).

Step 17

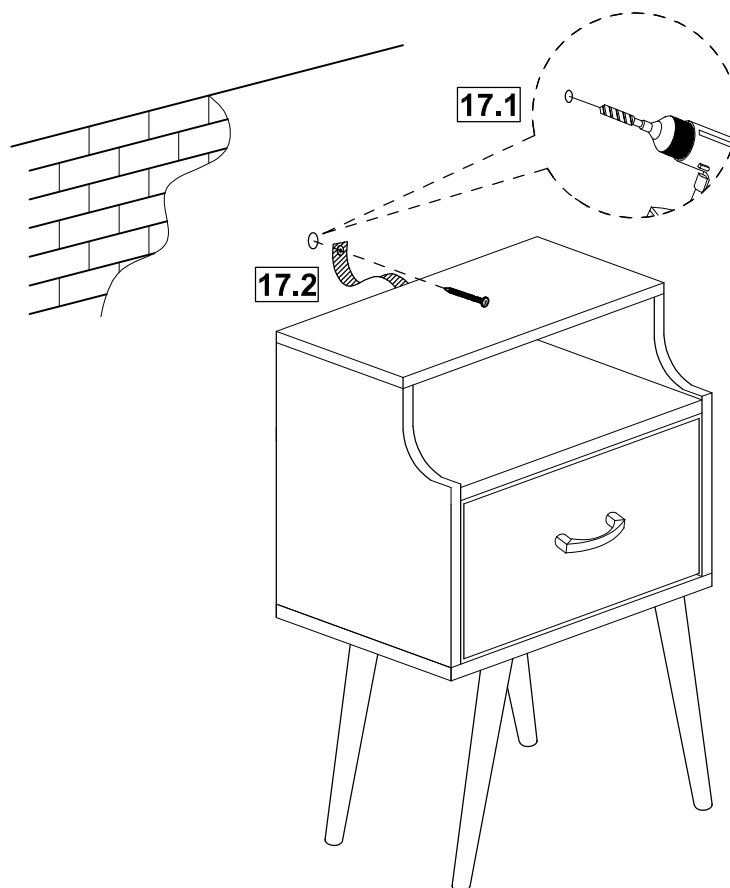

17.1) Drill a hole in the wall and insert the wall anchor / Rawl plug.

17.2) Insert a screw through the strap and drive the screw into the wall anchor / Rawl Plug.


NOTE : Wall fixings are not supplied with this product as different wall materials require different types of fixing devices (such as Rawl plugs on brick work). You must use fixing devices suitable for the type of wall you intend to mount this product to. Please ensure that the head of any screw used has a diameter greater than the diameter of the mounting hole on the Anti-Tip Strap and that the fixing is safe and secure before use.

The screw supplied is to affix the Anti-Tip Strap to the cabinet.




WARNING

Serious or fatal crushing injuries can occur from tipping furniture.
To help prevent tip-over: **ALWAYS** secure this furniture to the wall using
Cabinet Restraint Device.
See product instructions for more ways to help prevent furniture tip-over.

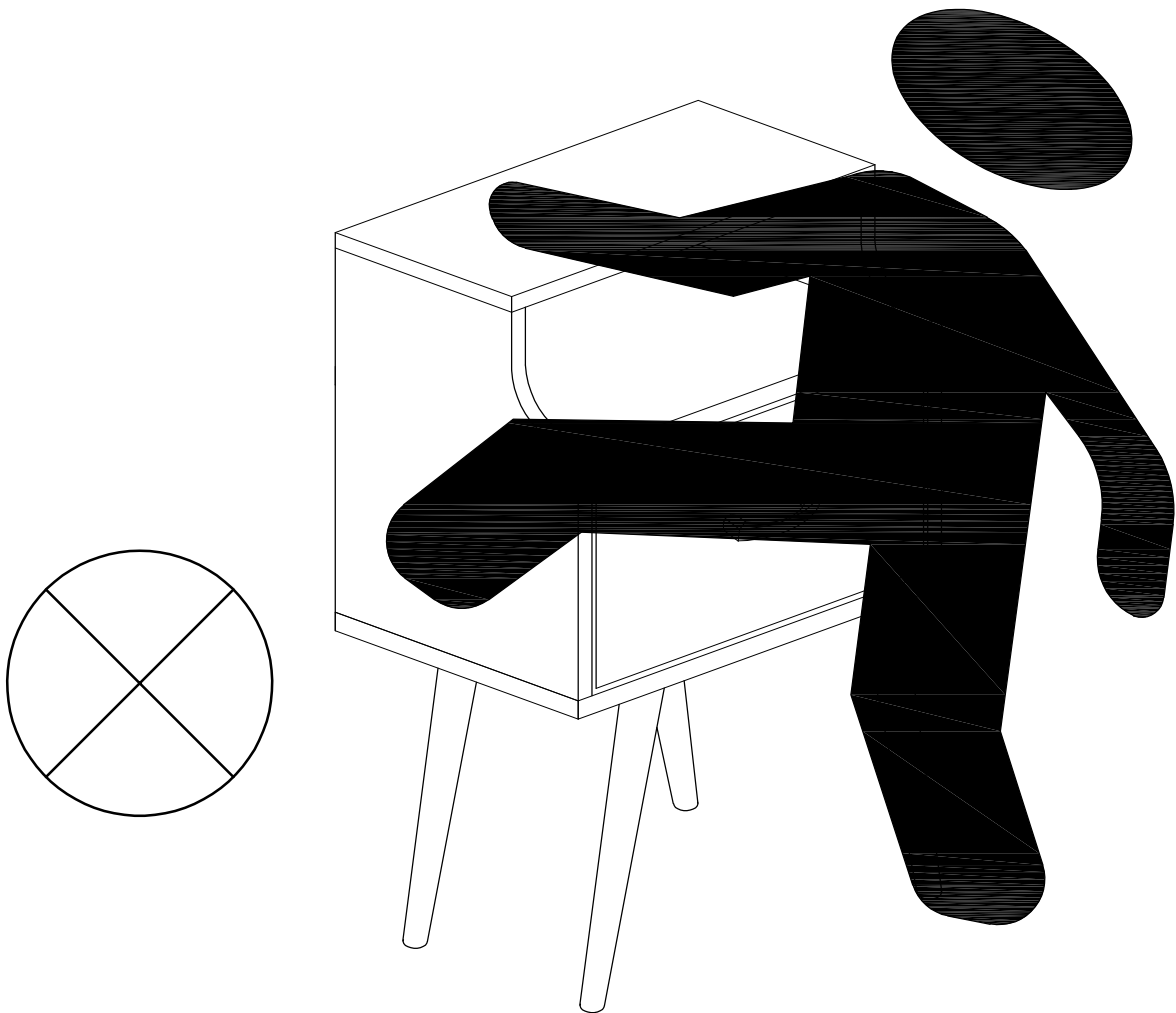

Step 18

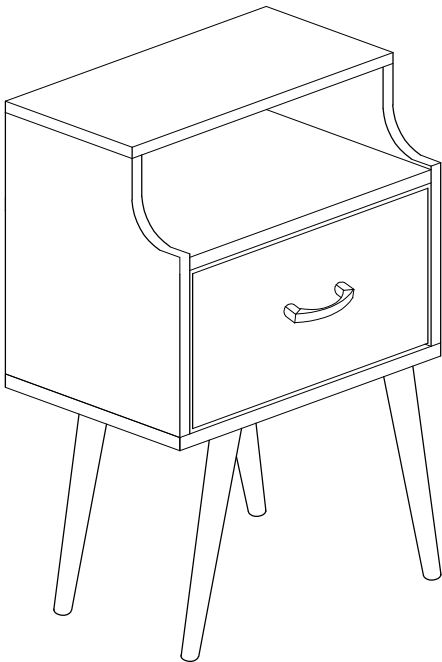

Your Nightstand is ready for use.

Care & Maintenance



- Furniture may scratch floors. We recommend using furniture pads to protect your floors.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For Indoor use only.



- Not for commercial use. For residential use only.



- Stains may be removed with mild soap solution and damp cloth.



- Children should not climb or jump on the furniture.



- Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Questions & Answers about Proposition 65

• What is Proposition 65?

Proposition 65 requires businesses to provide warnings to Californians about significant exposures to chemicals that cause cancer, birth defects or other reproductive harm. These chemicals can be in the products that Californians purchase, in their homes or workplaces, or that are released into the environment. By requiring that this information be provided, Proposition 65 enables Californians to make informed decisions about their exposures to these chemicals. Proposition 65 also prohibits California businesses from knowingly discharging significant amounts of listed chemicals into sources of drinking water.

Proposition 65 requires California to publish a list of chemicals known to cause cancer, birth defects or other reproductive harm. This list, which must be updated at least once a year, has grown to include approximately 900 chemicals since it was first published in 1987.

• What types of chemicals are on the Proposition 65 list?

The list contains a wide range of naturally occurring and synthetic chemicals that include additives or ingredients in pesticides, common household products, food, drugs, dyes, or solvents. Listed chemicals may also be used in manufacturing and construction, or they may be byproducts of chemical processes, such as motor vehicle exhaust.