


INSTALLATION



Product Manual

Version: 020566US-01-26A-LY

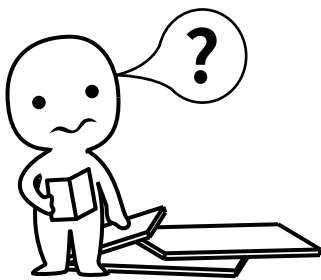


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

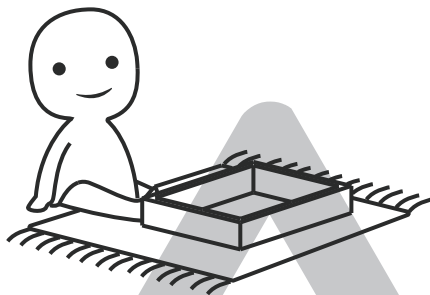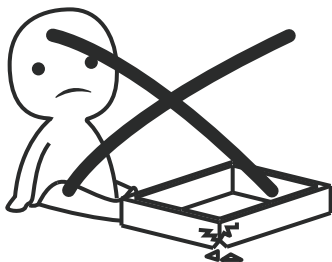



AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

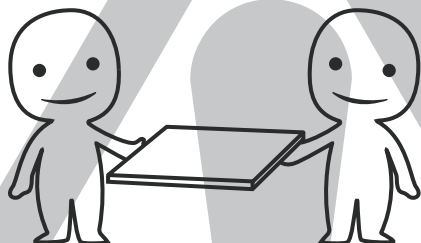

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

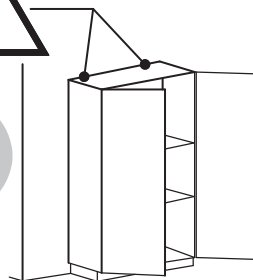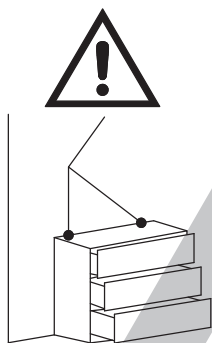

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

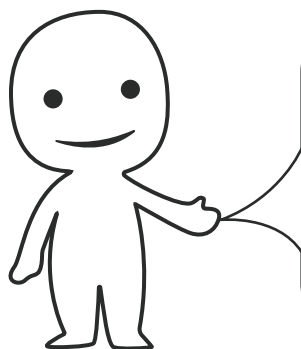


Please prepare the following tools

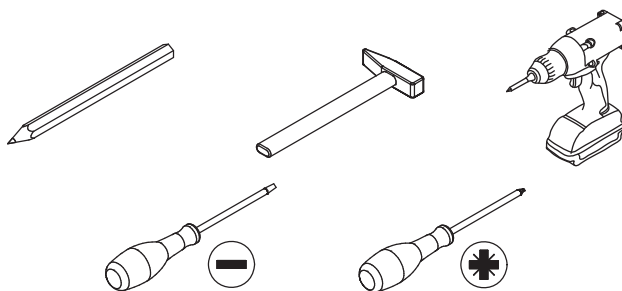

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 128+4

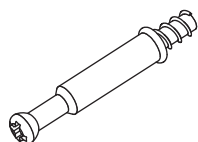


Ø 6 x 35 mm

B x 136+4




Ø 14 x 9 mm

C x 142+4



Ø 6 x 30 mm

D x 44+4




Ø 4 x 30 mm

E x 30+4



M6 x 20 mm

F x 8

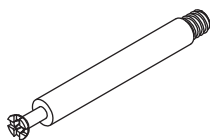


Ø 6 x 60 mm

G x 8



Ø 10 x 10 mm

H x 1

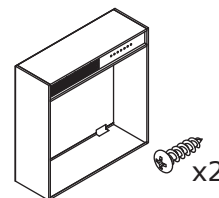

Ø 3 x 10 mm

I x 6




Ø 6 x 12 mm


J x 6



Ø 4 x 12 mm

K x 2

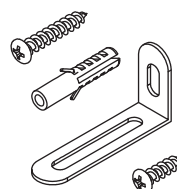

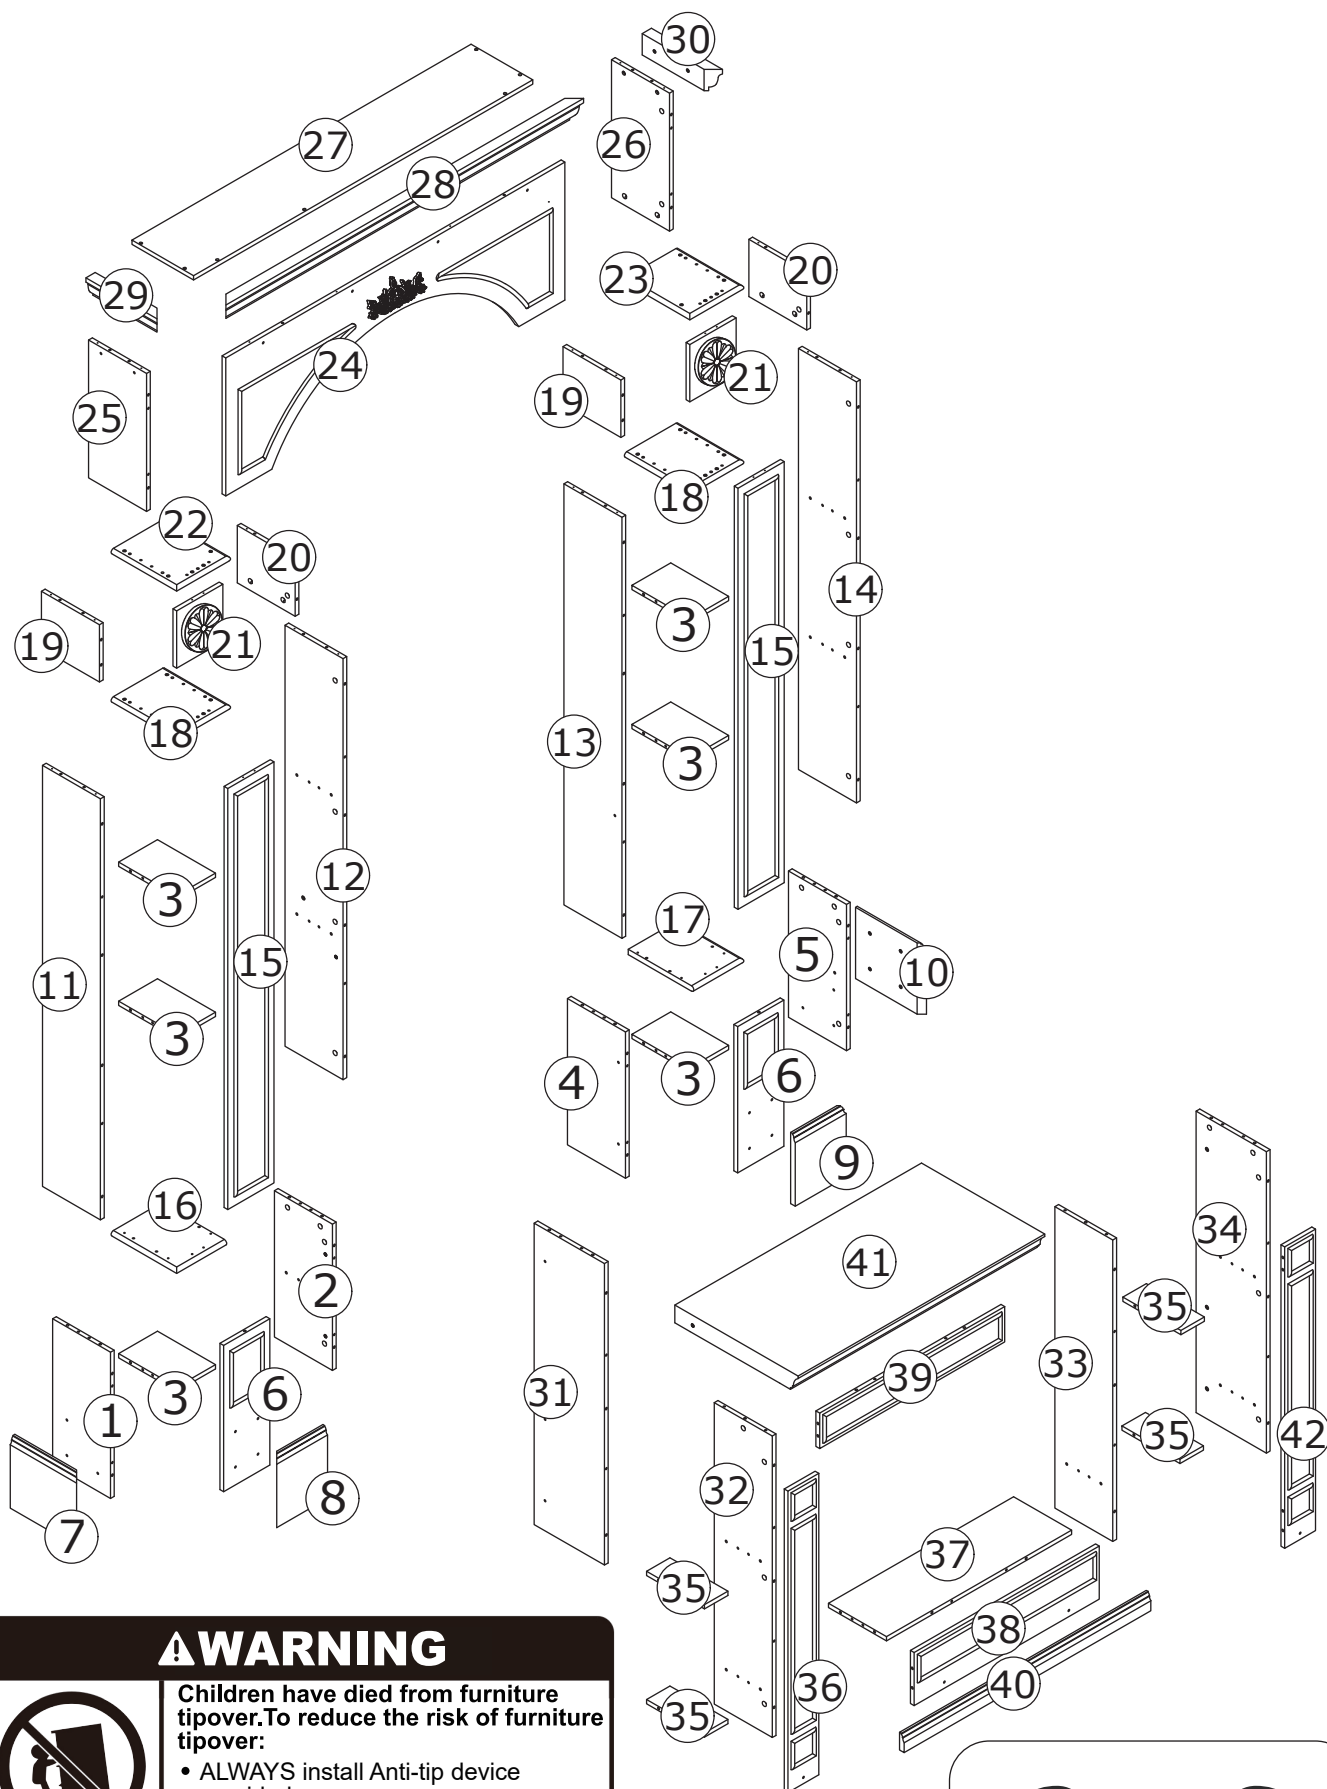


⚠ WARNING
























Children have died from furniture tipover. To reduce the risk of furniture tipover:






















- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

*This is a permanent label.
Do not remove!*



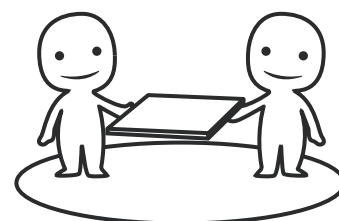


ASSEMBLED BY 2 ADULTS

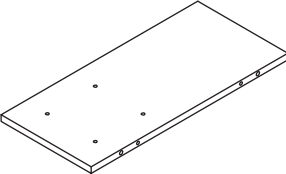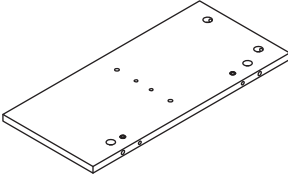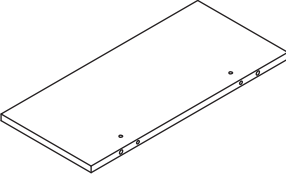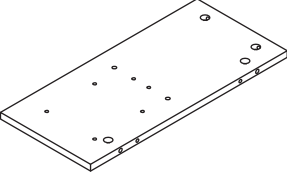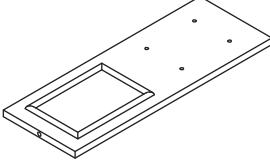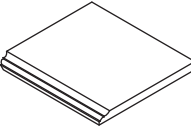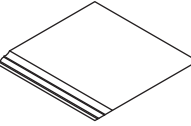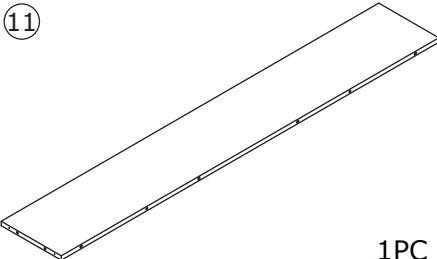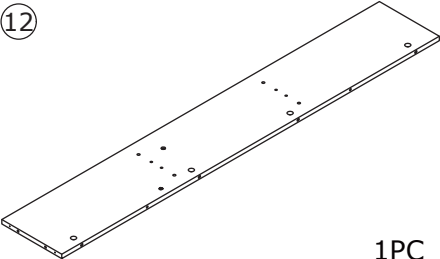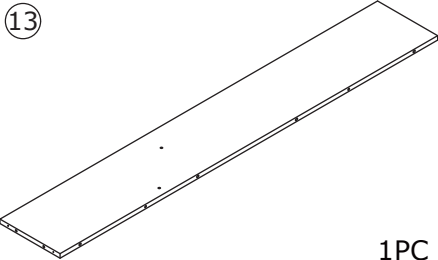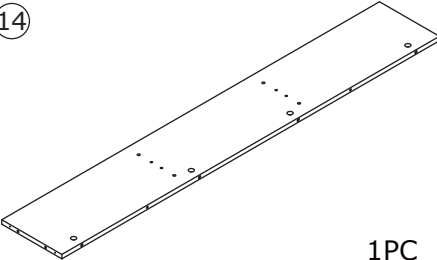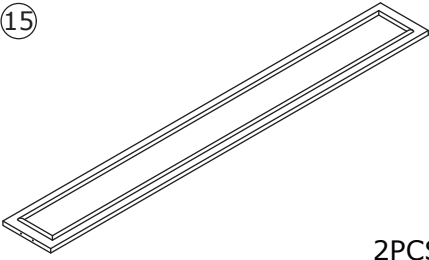
①  1PC	②  1PC	③  6PCS
④  1PC	⑤  1PC	⑥  2PCS
⑦  1PC	⑧  1PC	⑨  1PC
⑩  1PC	⑪  1PC	⑫  1PC
⑬  1PC	⑭  1PC	⑮  2PCS
⑯  1PC	⑰  1PC	⑱  2PCS
⑲  2PCS	⑳  2PCS	㉑  2PCS
5/52		

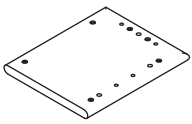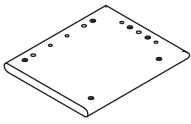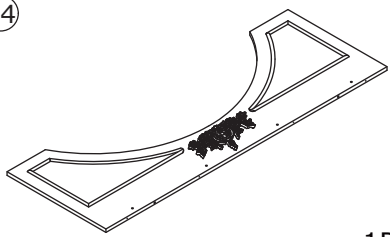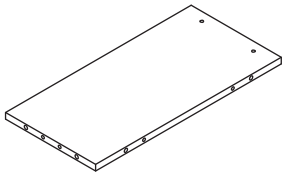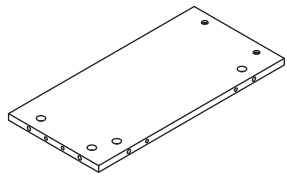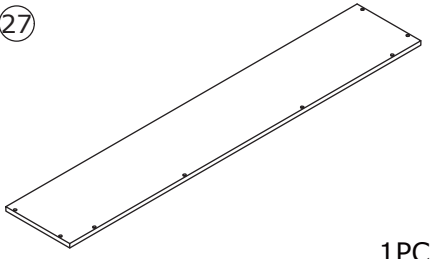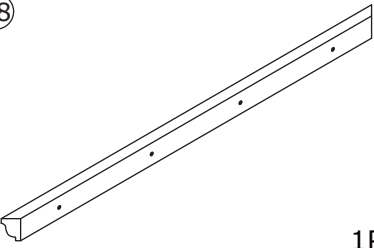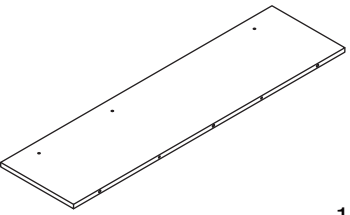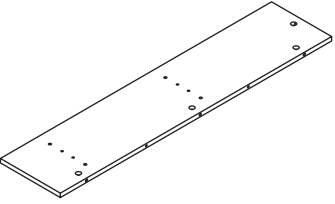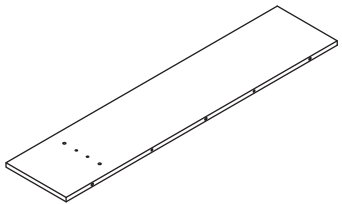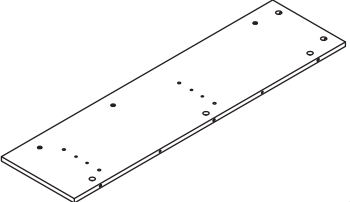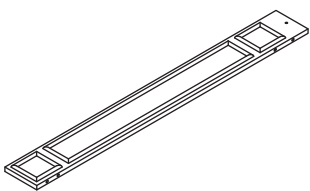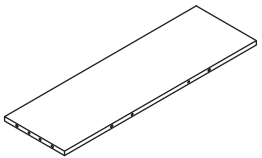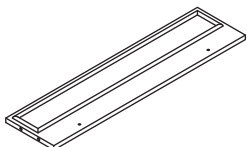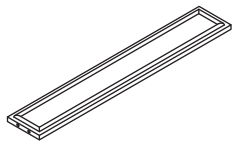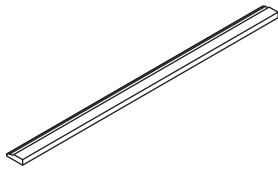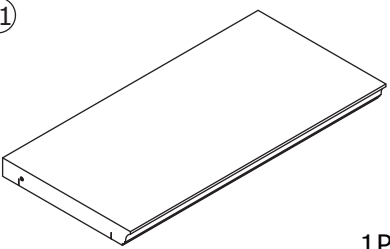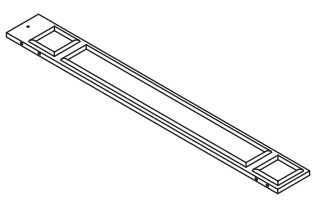22  1PC	23  1PC	24  1PC
25  1PC	26  1PC	27  1PC
28  1PC	29  2PCS	30  1PC
31  1PC	32  1PC	33  1PC
34  1PC	35  4PCS	36  1PC
37  1PC	38  1PC	39  1PC
40  1PC	41  1PC	42  1PC
6/52		


1

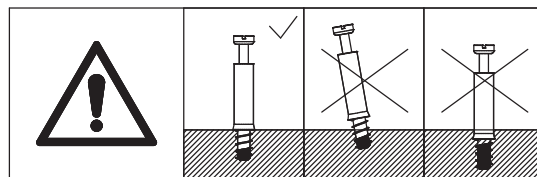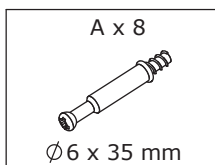

Screw eccentric rod (A) onto part 1, 2, 4 and 5.

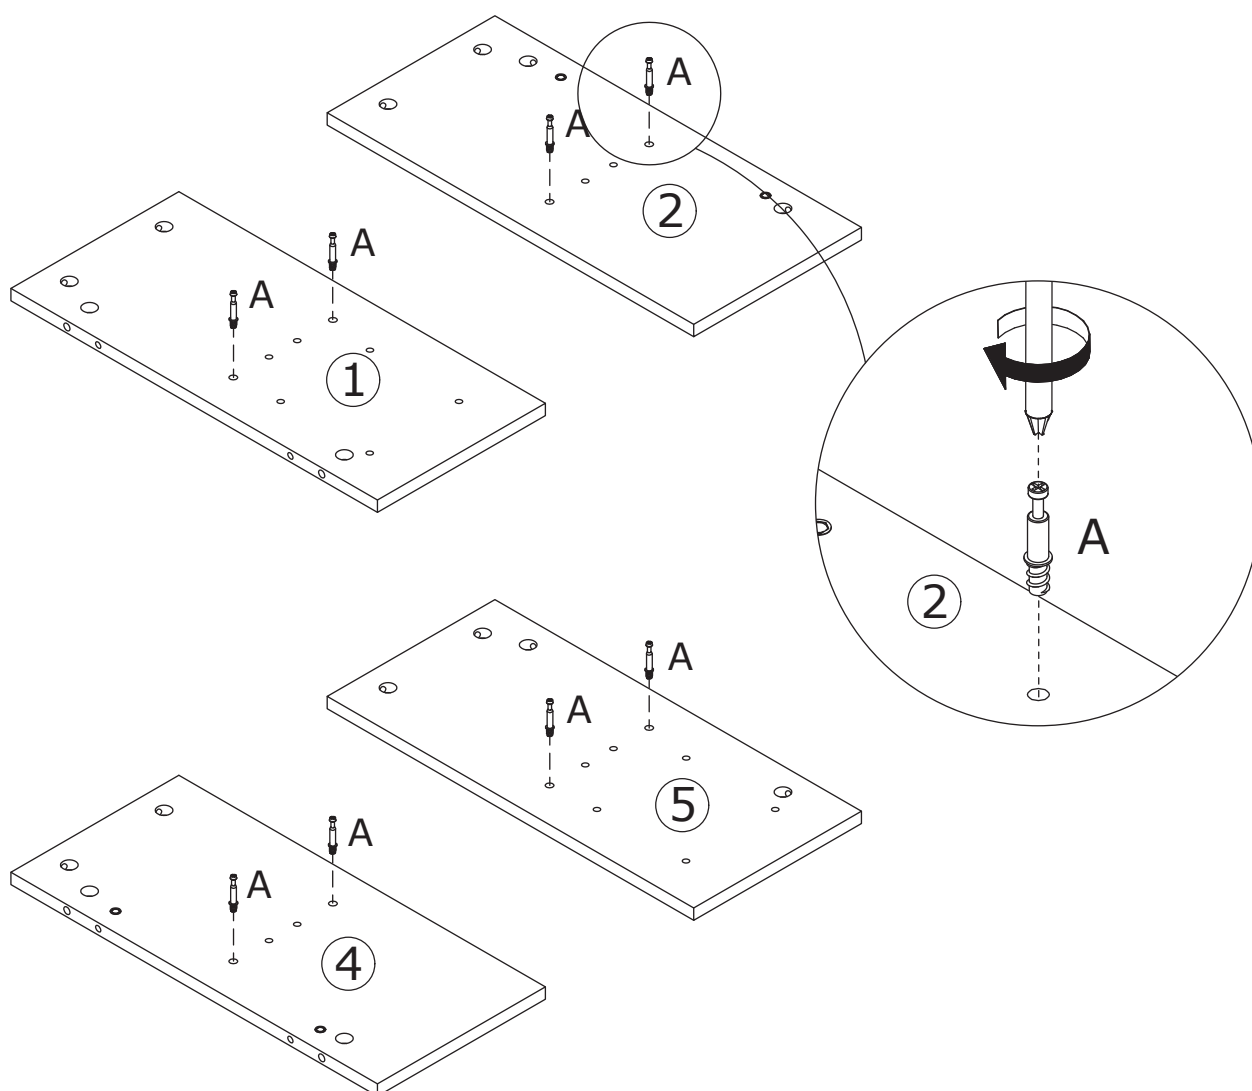


2

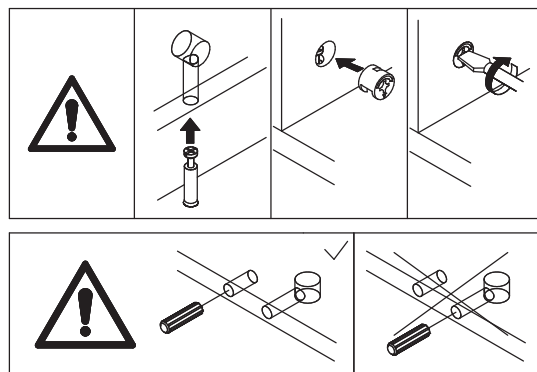

Connect part 1 and 2 to part 3 using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.



Connect part 4 and 5 to part 3 using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.

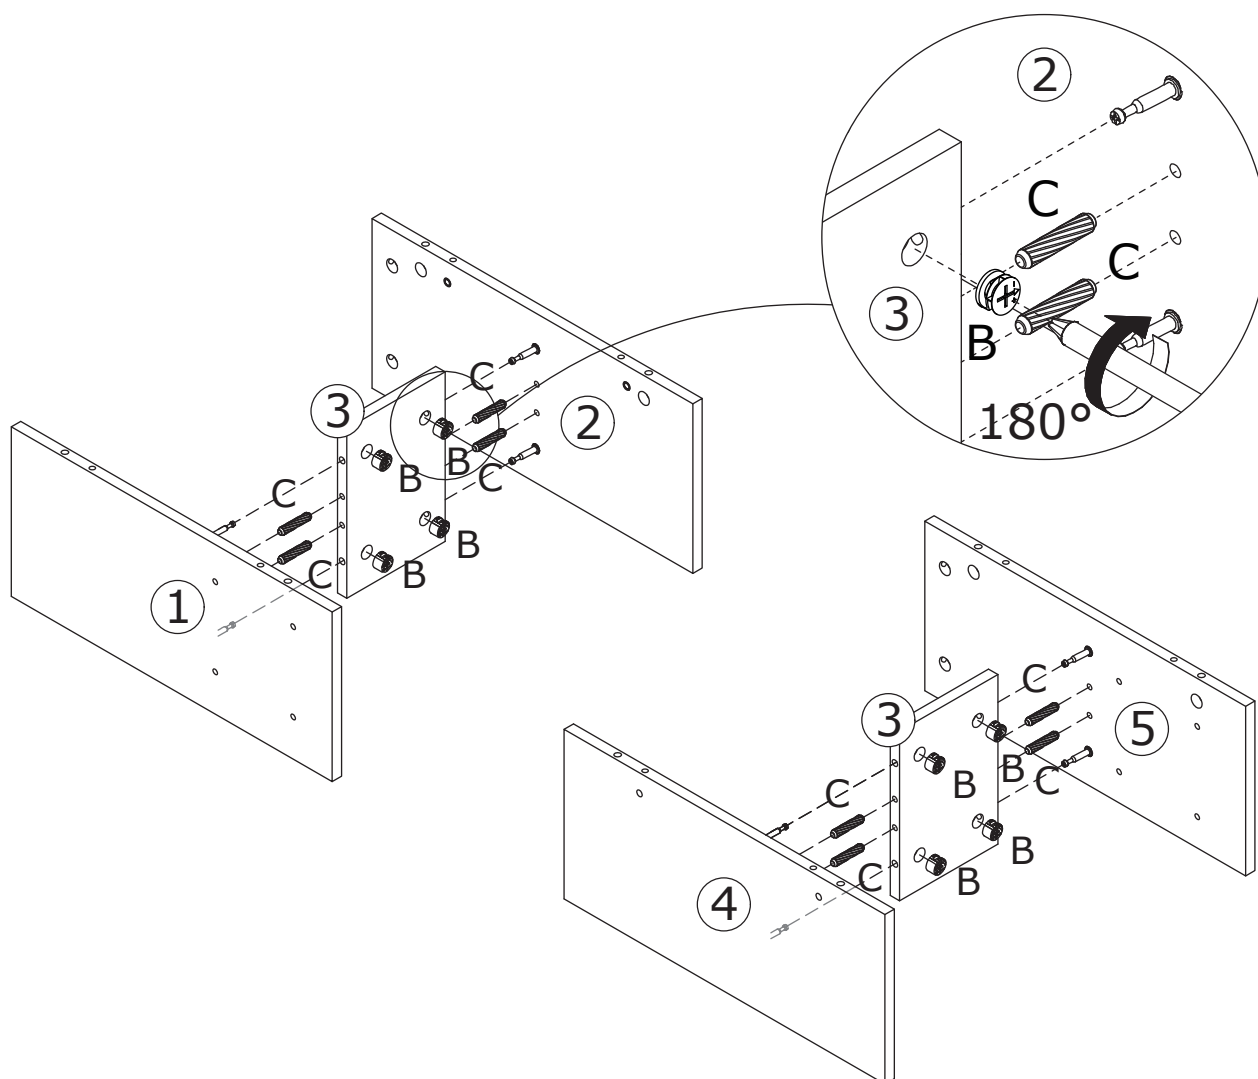


3



Ø6 x 35 mm

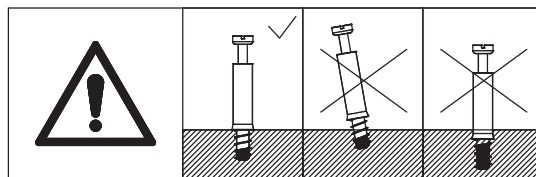

Screw eccentric rod (A) onto part 6.

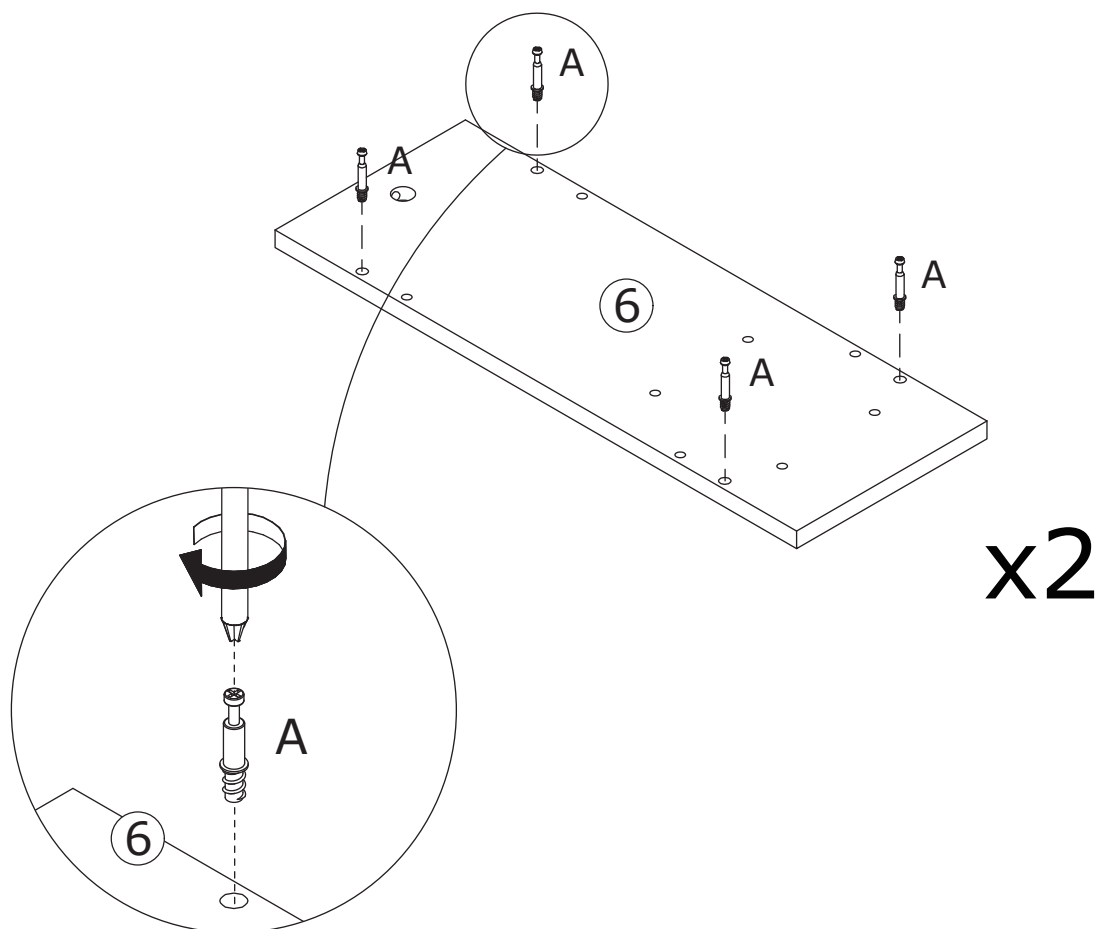

4

B x 8









Ø 14 x 9 mm

C x 8




Ø 6 x 30 mm

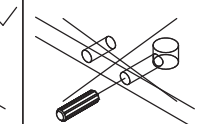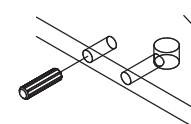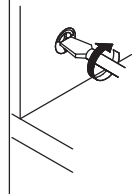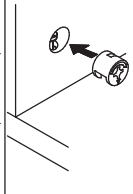



Connect part 6 to part 1 and 2 using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.


Connect part 6 to part 4 and 5 using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.

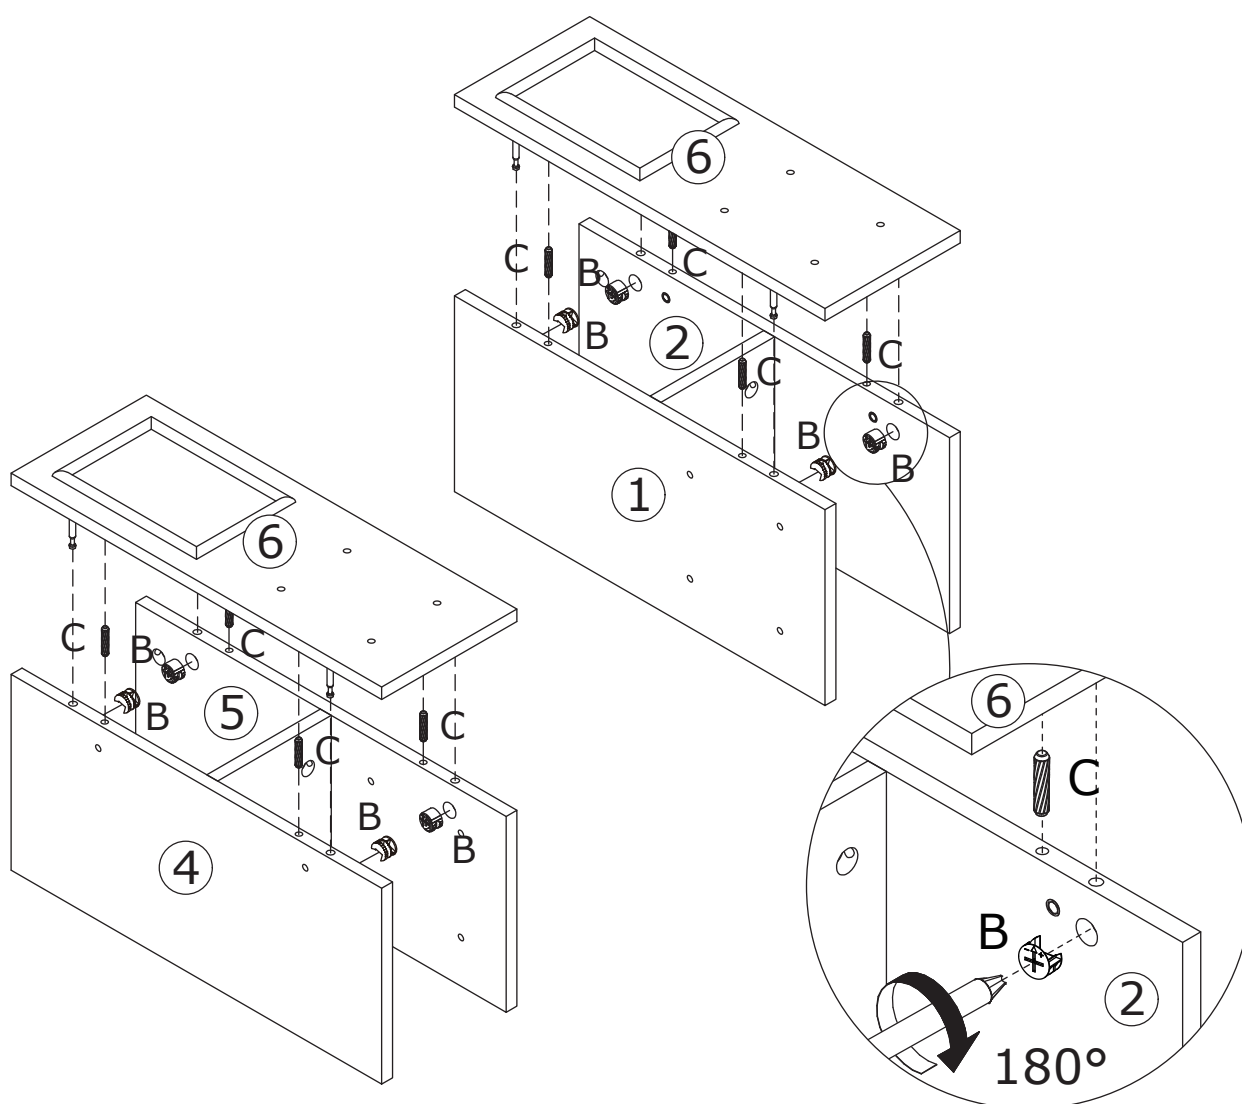



5

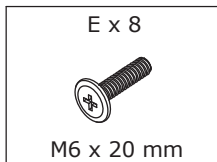


Secure part 9 to part 6, and part 10 to part 5 using screw (E).

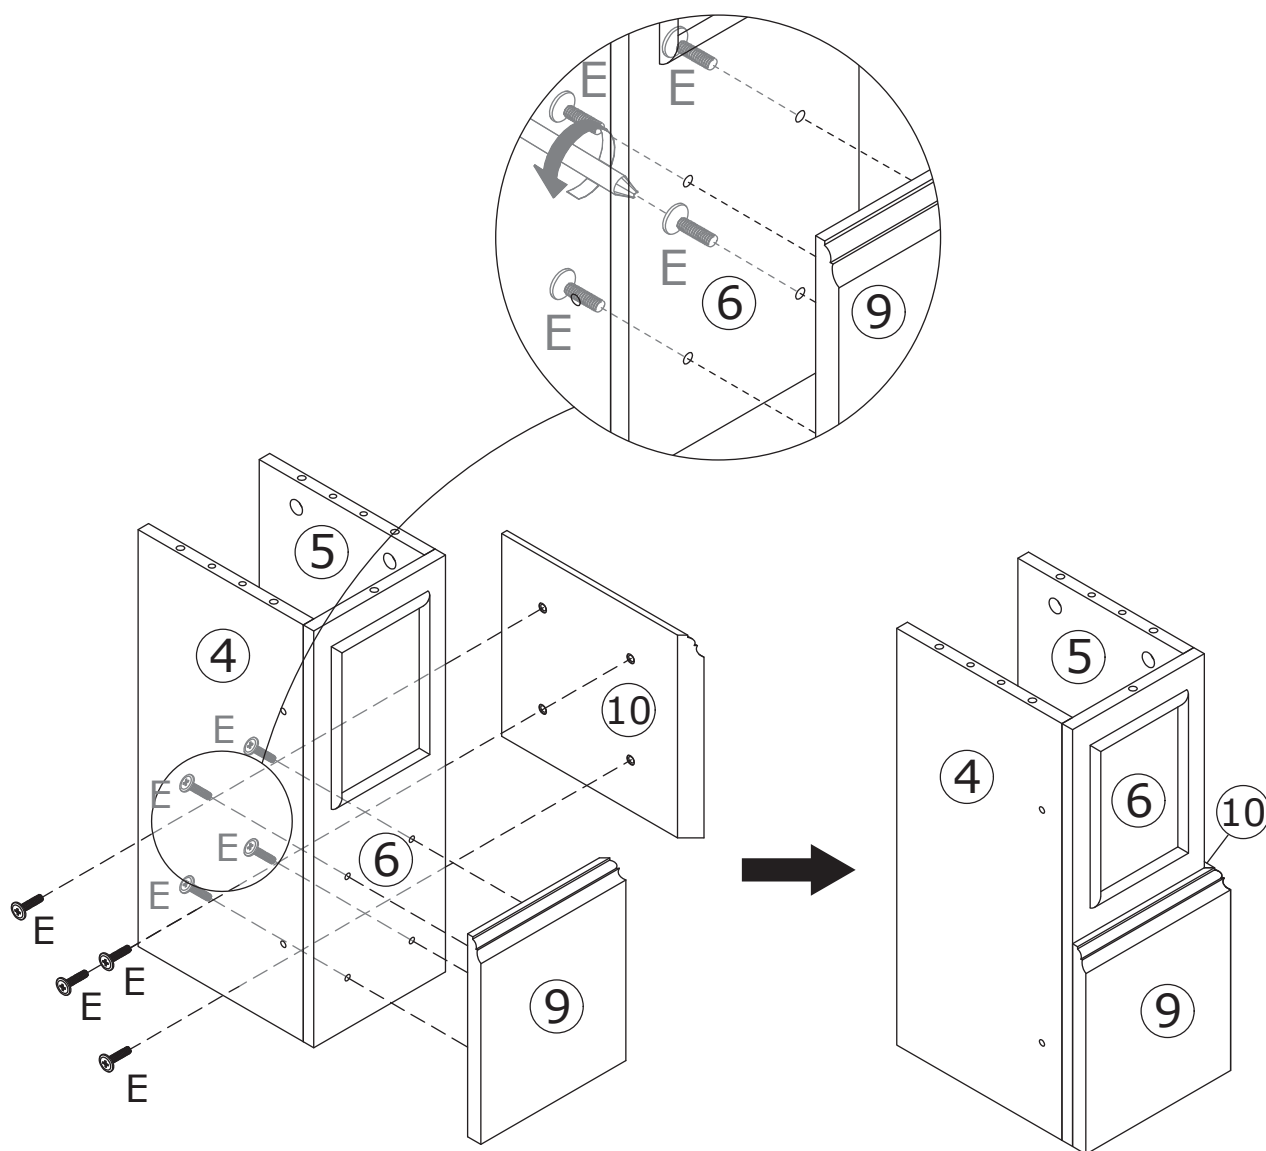



6

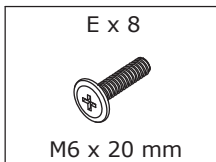




Secure part 7 to part 1, and part 8 to part 6 using screw (E).

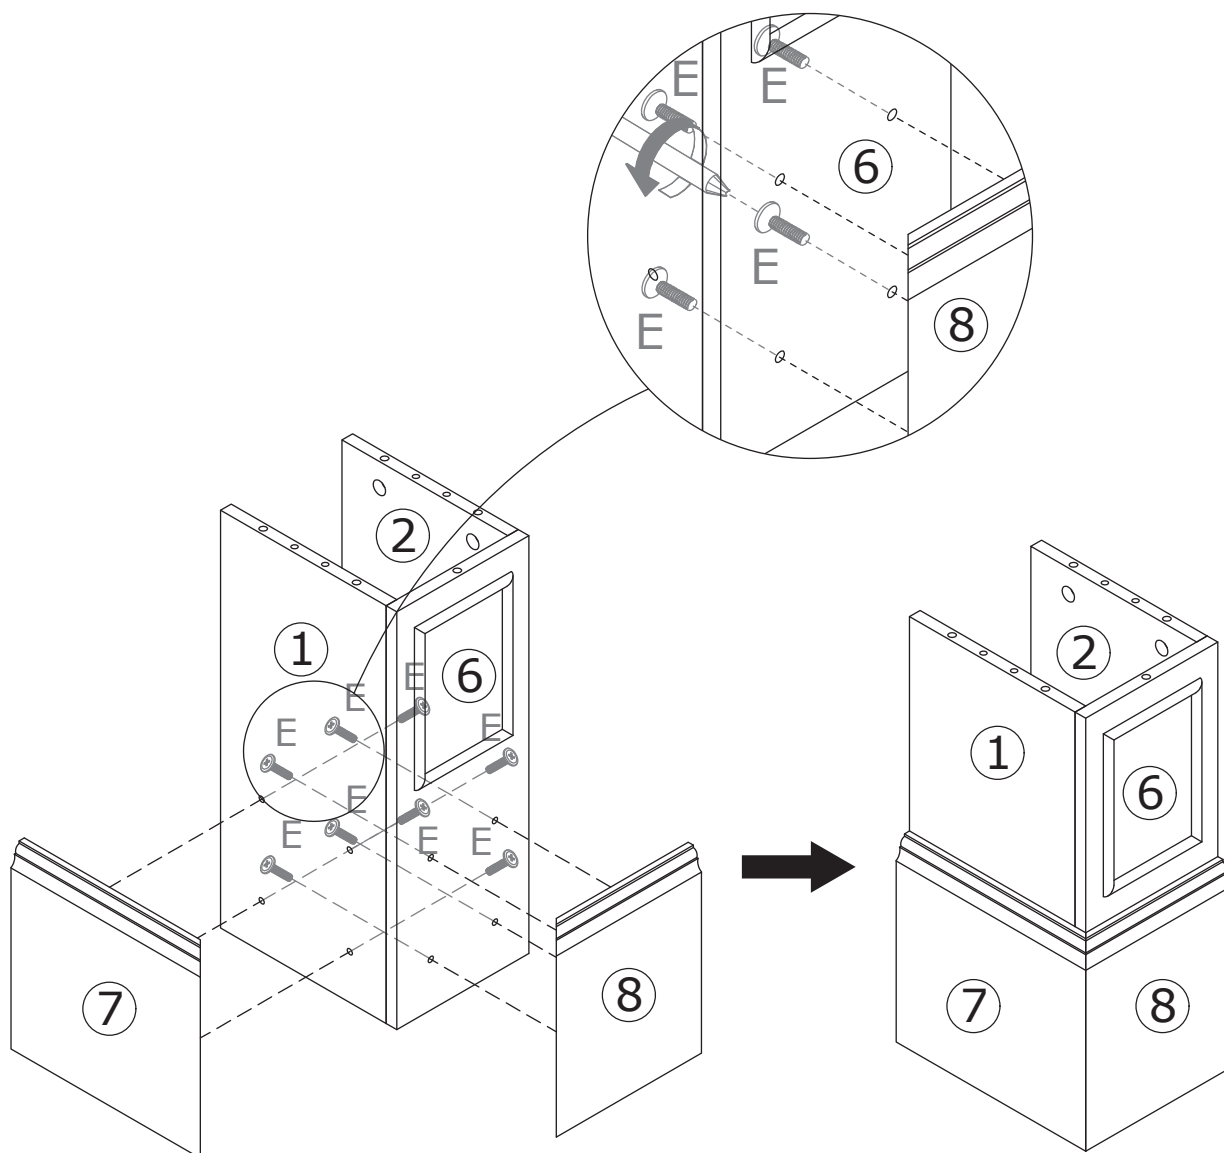



7

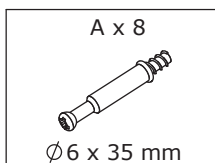




Screw eccentric rod (A) onto part 21.

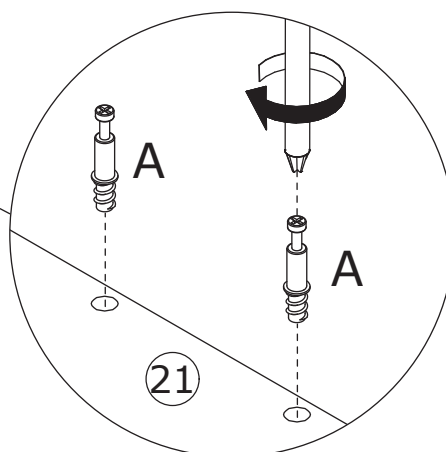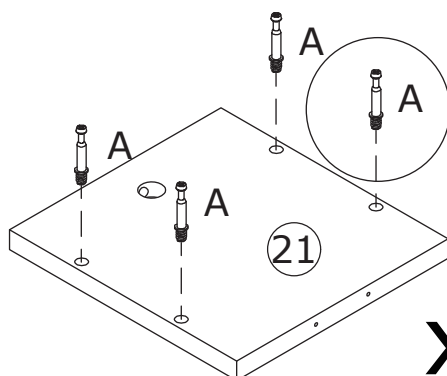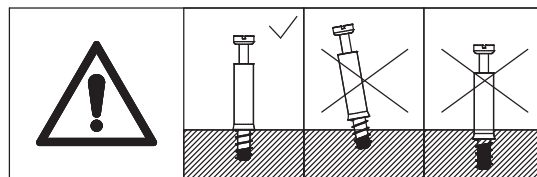


8

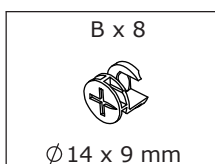


Connect part 19 and 20 to part 21, then tighten by turning eccentric wheel (B) clockwise.

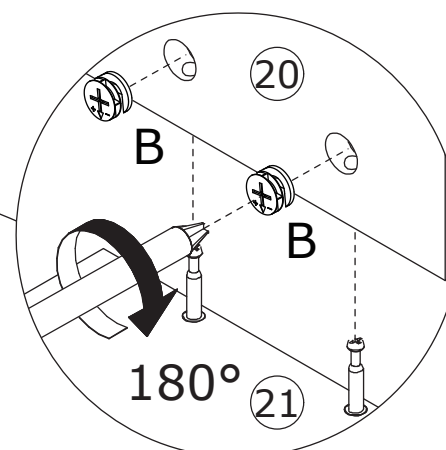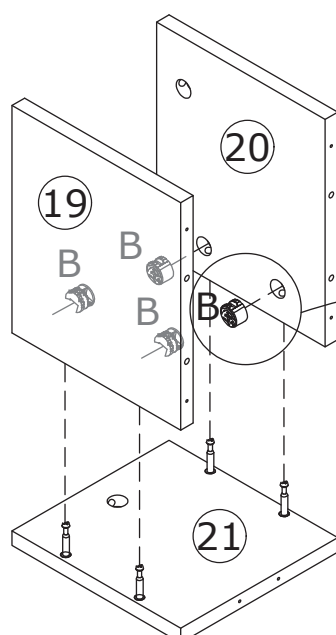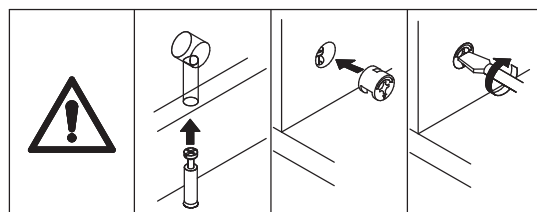

9

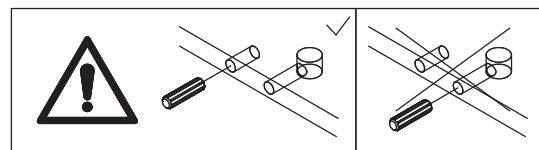

Connect part 19 and 20 using wooden dowel (C), then secure them using screw (D).



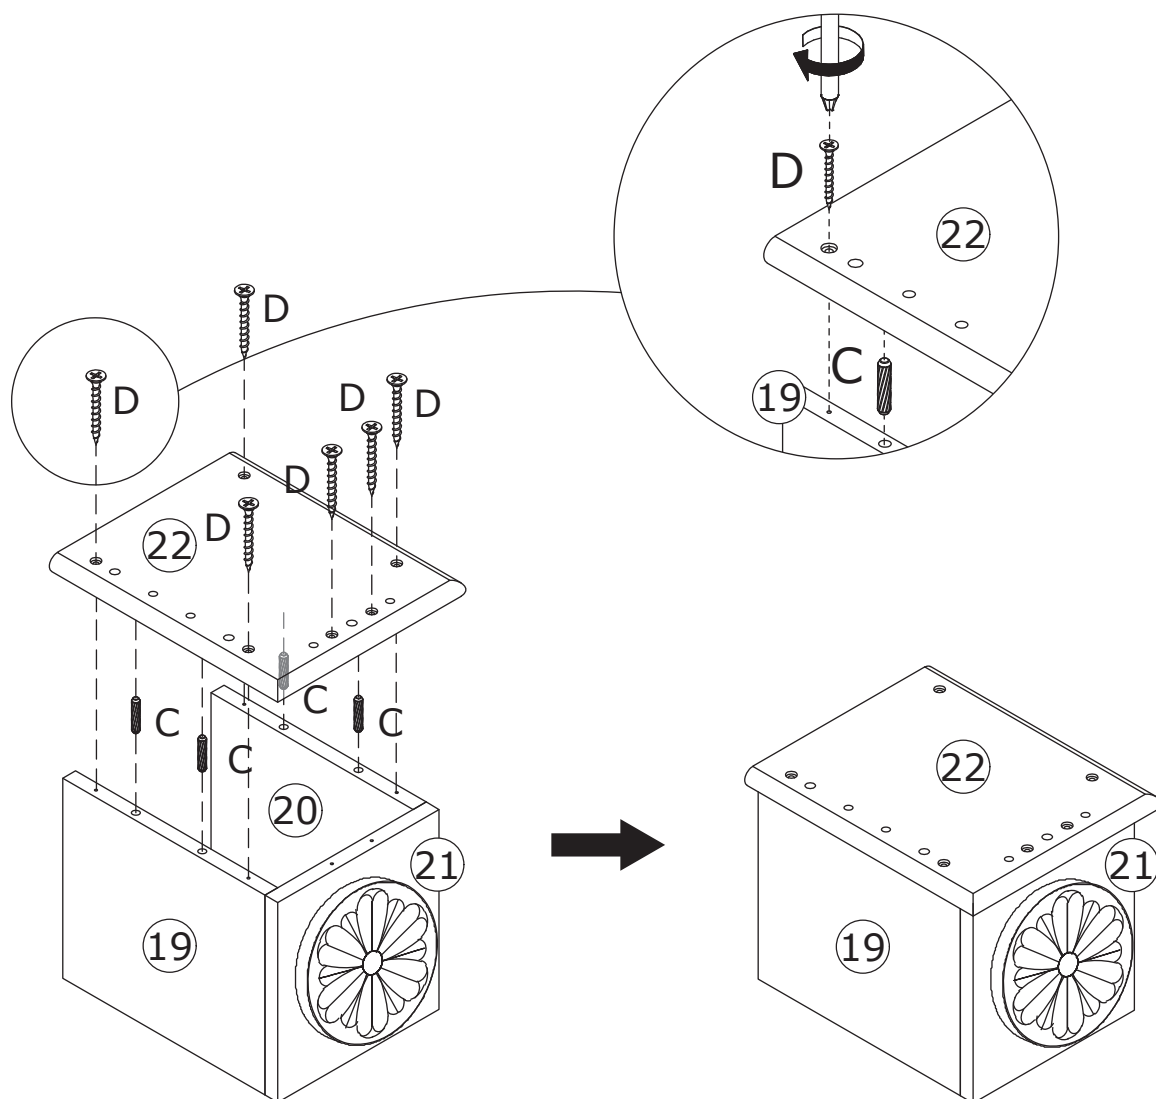


10


C x 4






D x 6

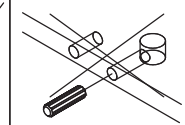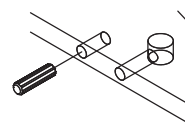


Connect part 23 to part 19 and 20 using wooden dowel (C), then secure them using screw (D).

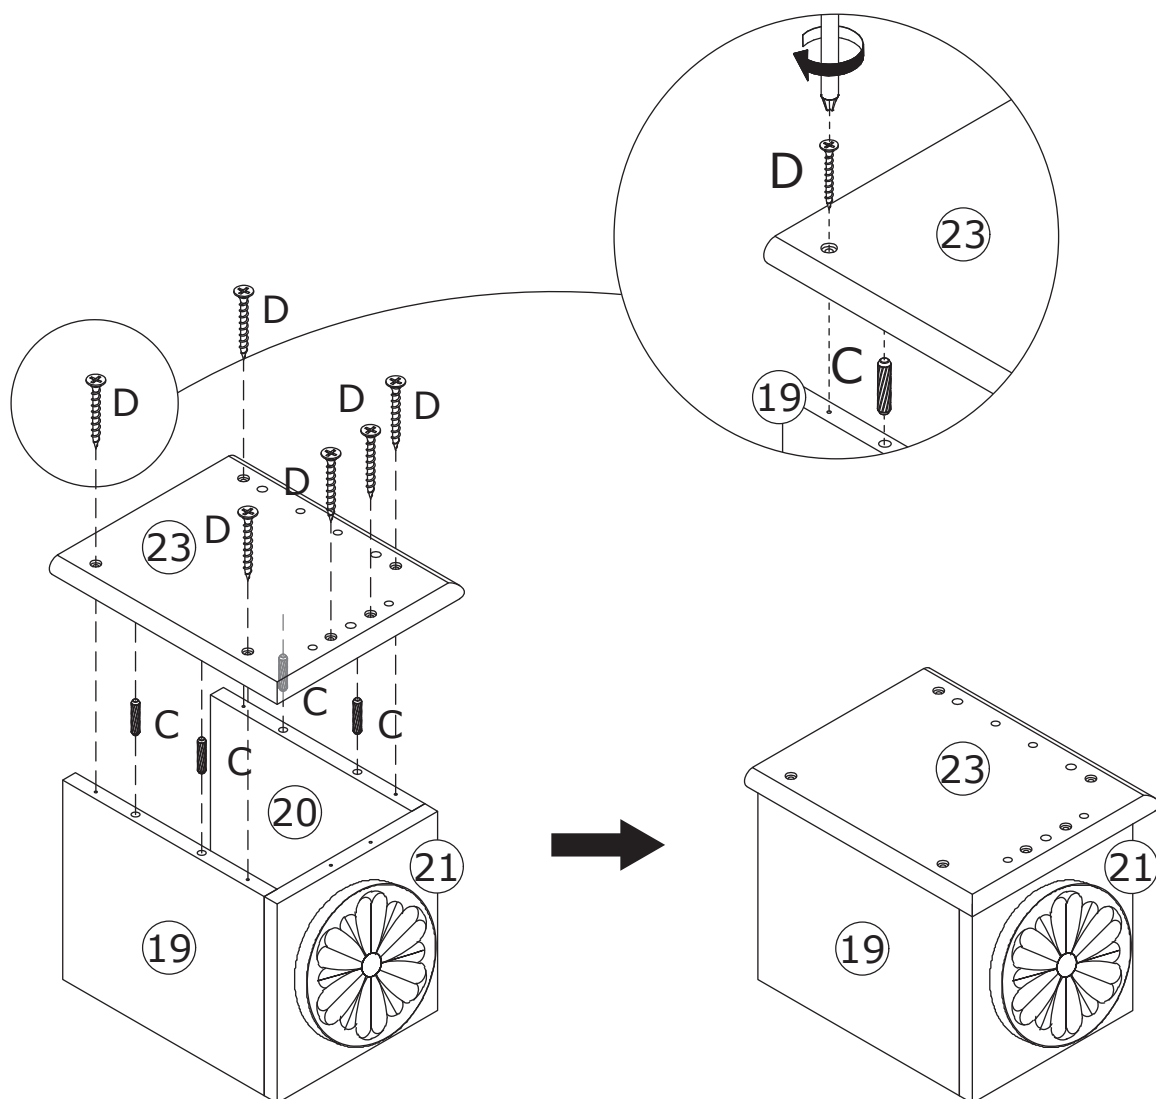

11

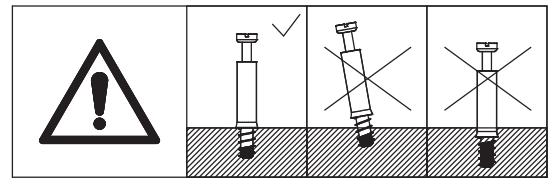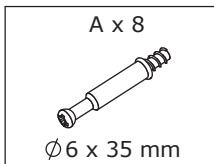

Screw eccentric rod (A) onto part 11 and 12.

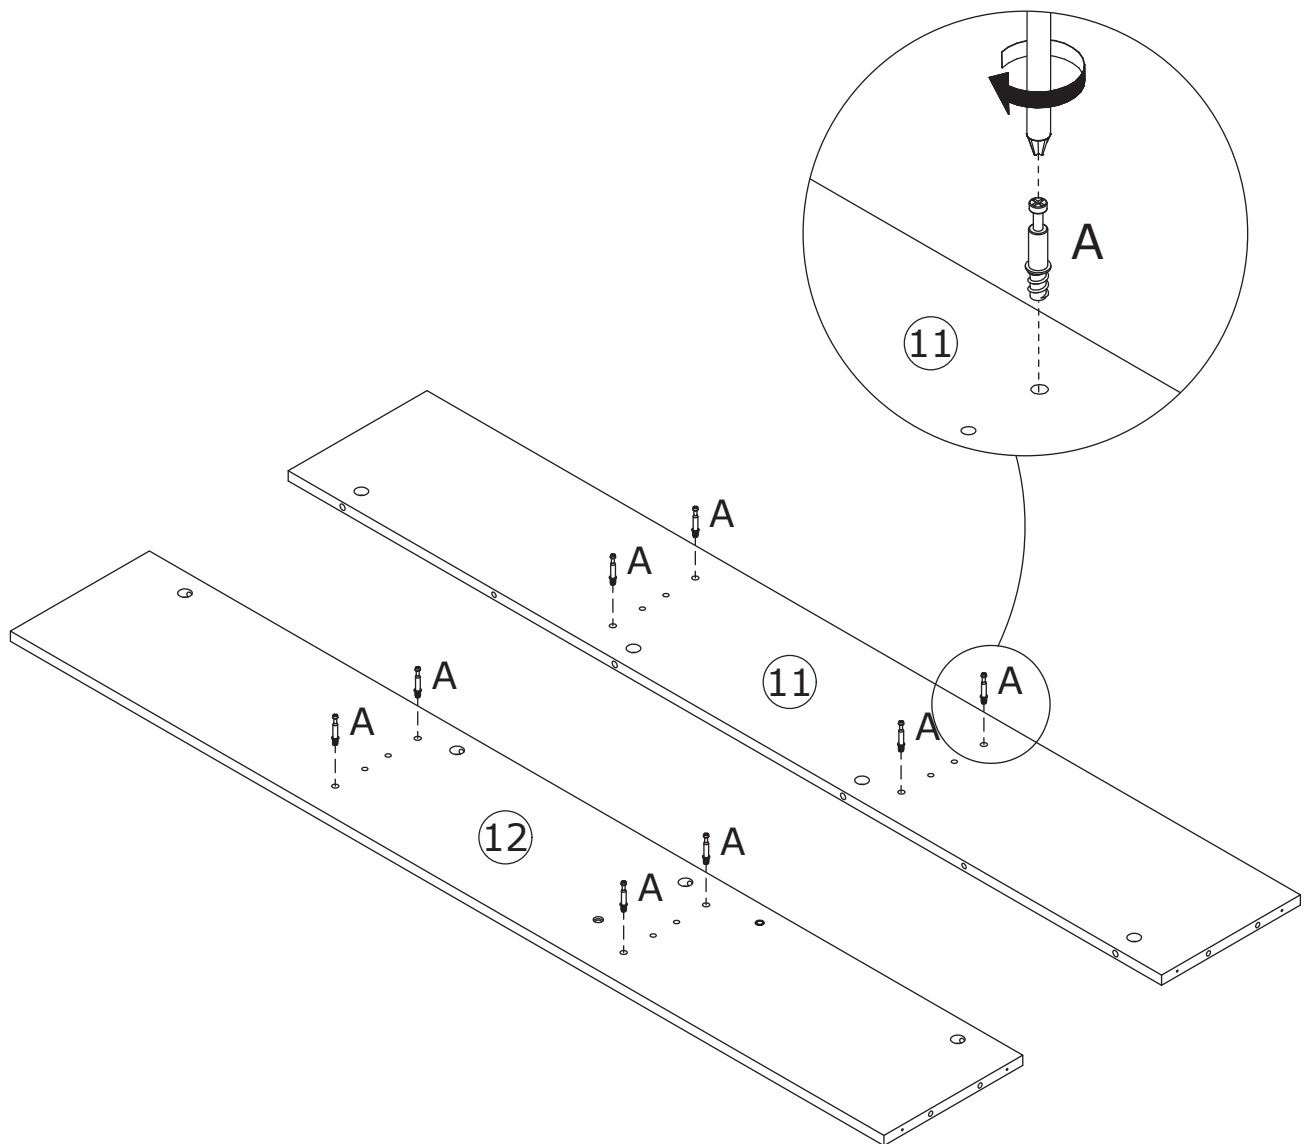

12

B x 8









Ø 14 x 9 mm


C x 8




Ø 6 x 30 mm

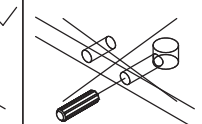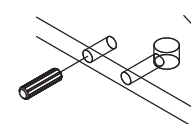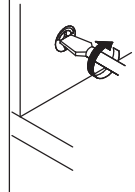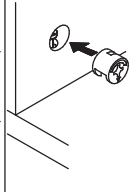



Connect part 11 and 12 to part 3 using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.

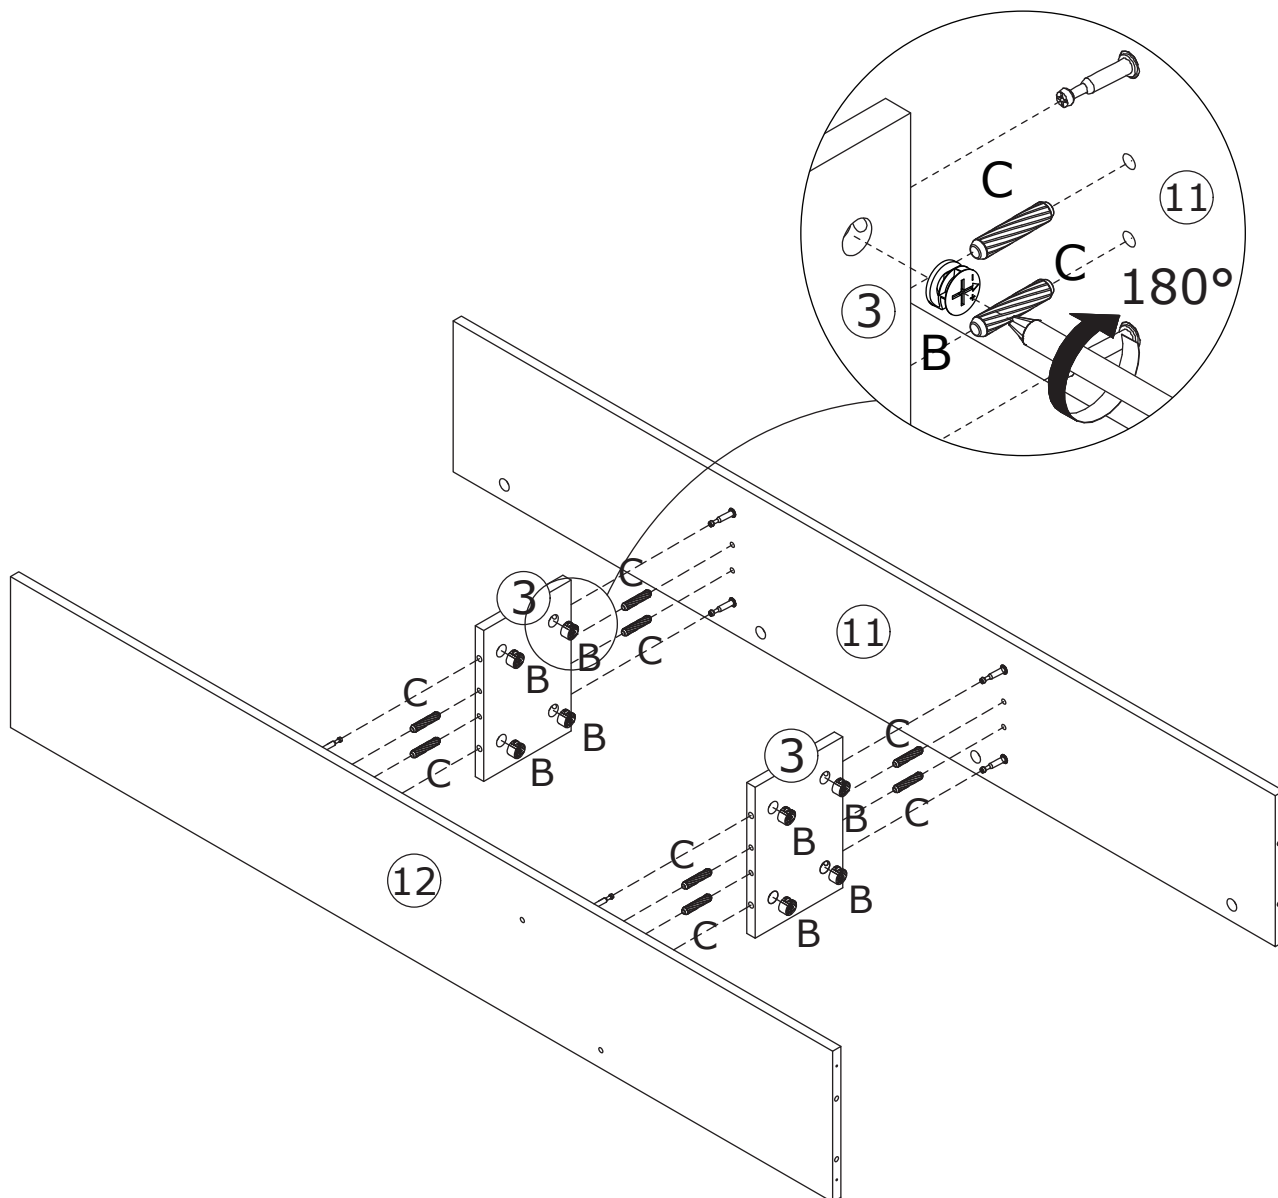


13

A x 8

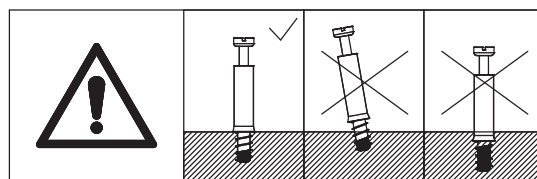 Ø6 x 35 mm

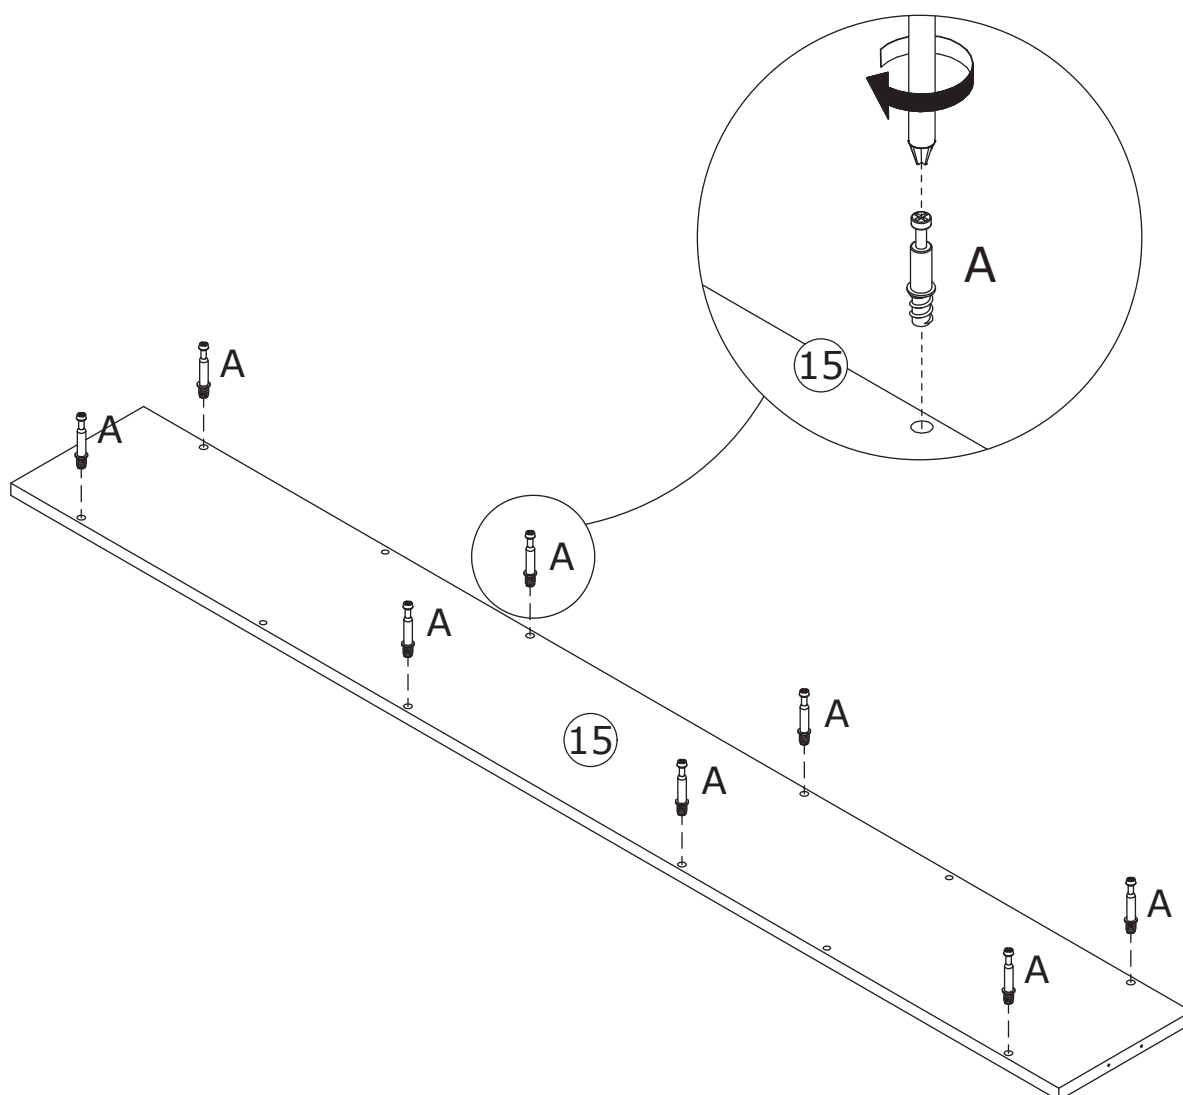

Screw eccentric rod (A)
 onto part 15.



14

B x 8









Ø 14 x 9 mm


C x 4




Ø 6 x 30 mm

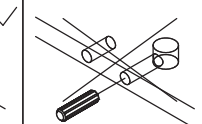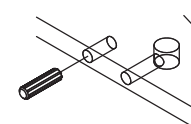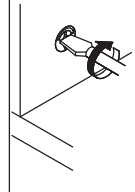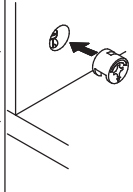



Connect part 11 and 12 to part 15 using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.

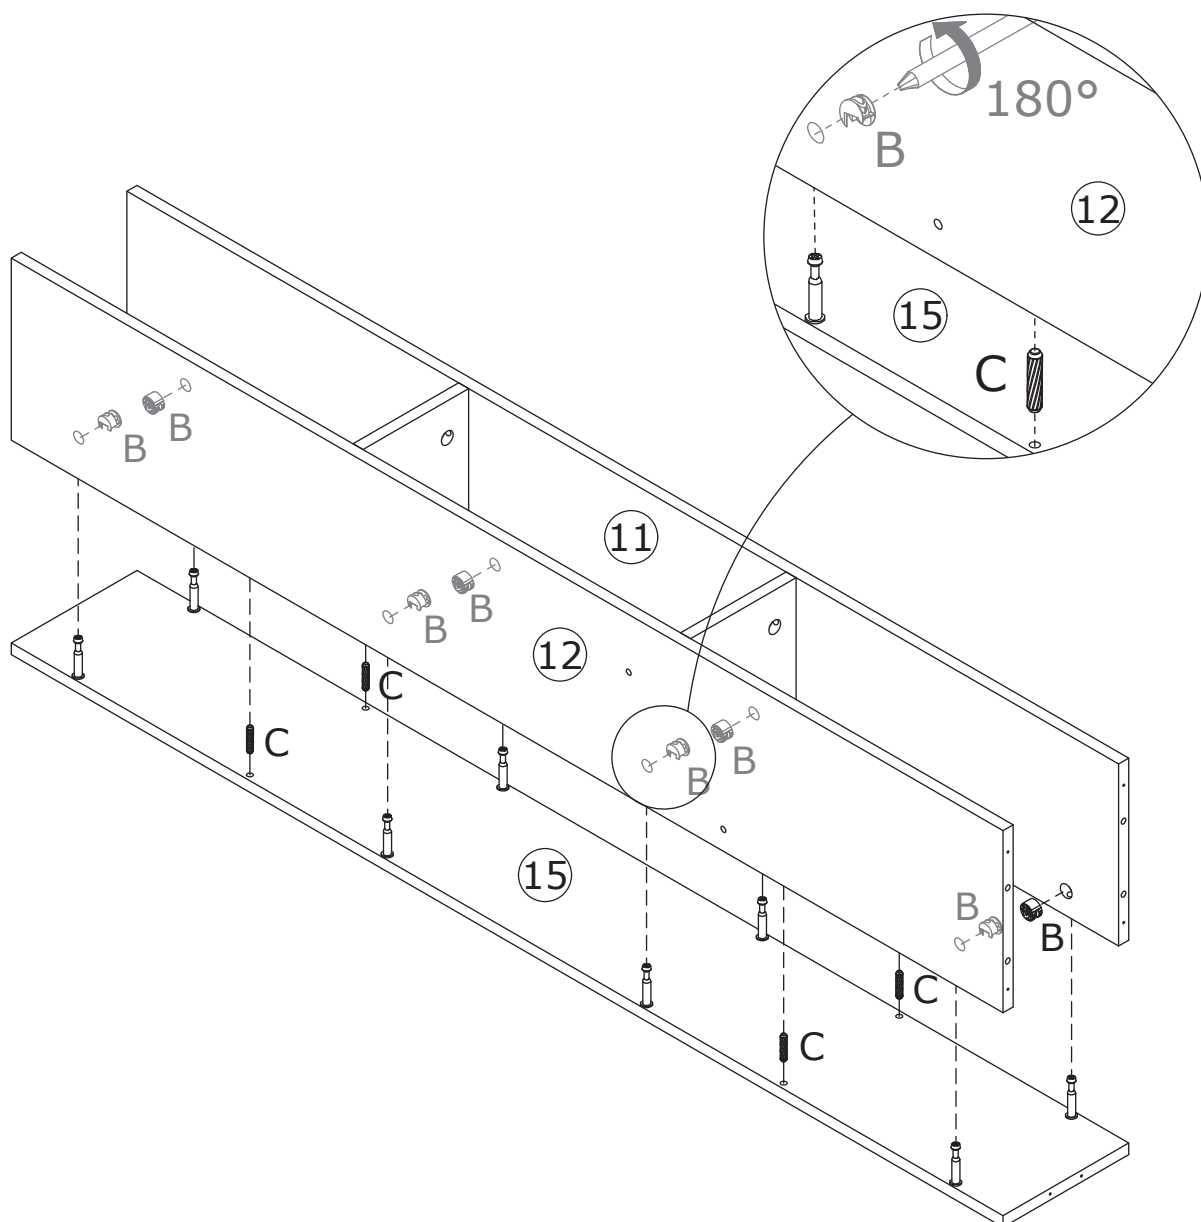


15

A x 8

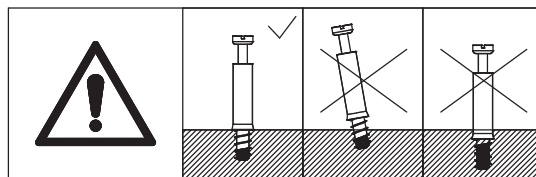 Ø6 x 35 mm

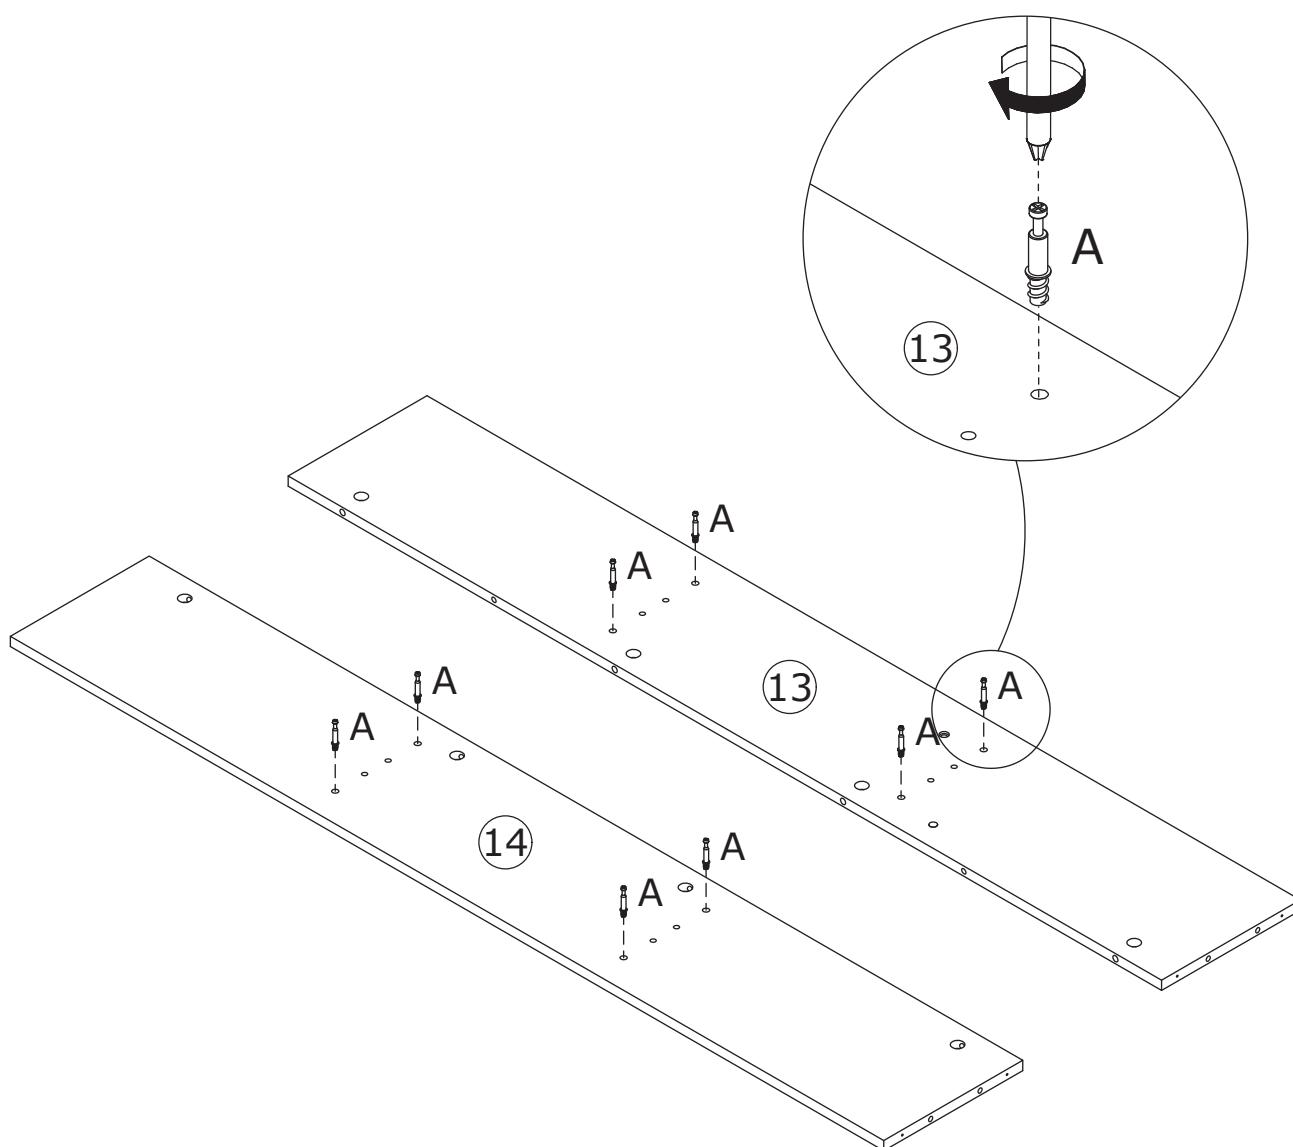

Screw eccentric rod (A) onto
 part 13 and 14.



16

B x 8









Ø 14 x 9 mm


C x 8




Ø 6 x 30 mm

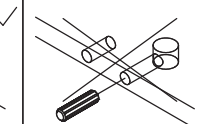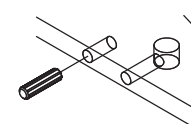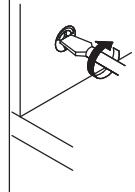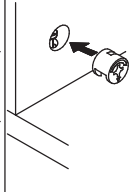



Connect part 13 and 14 to part 3 using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.

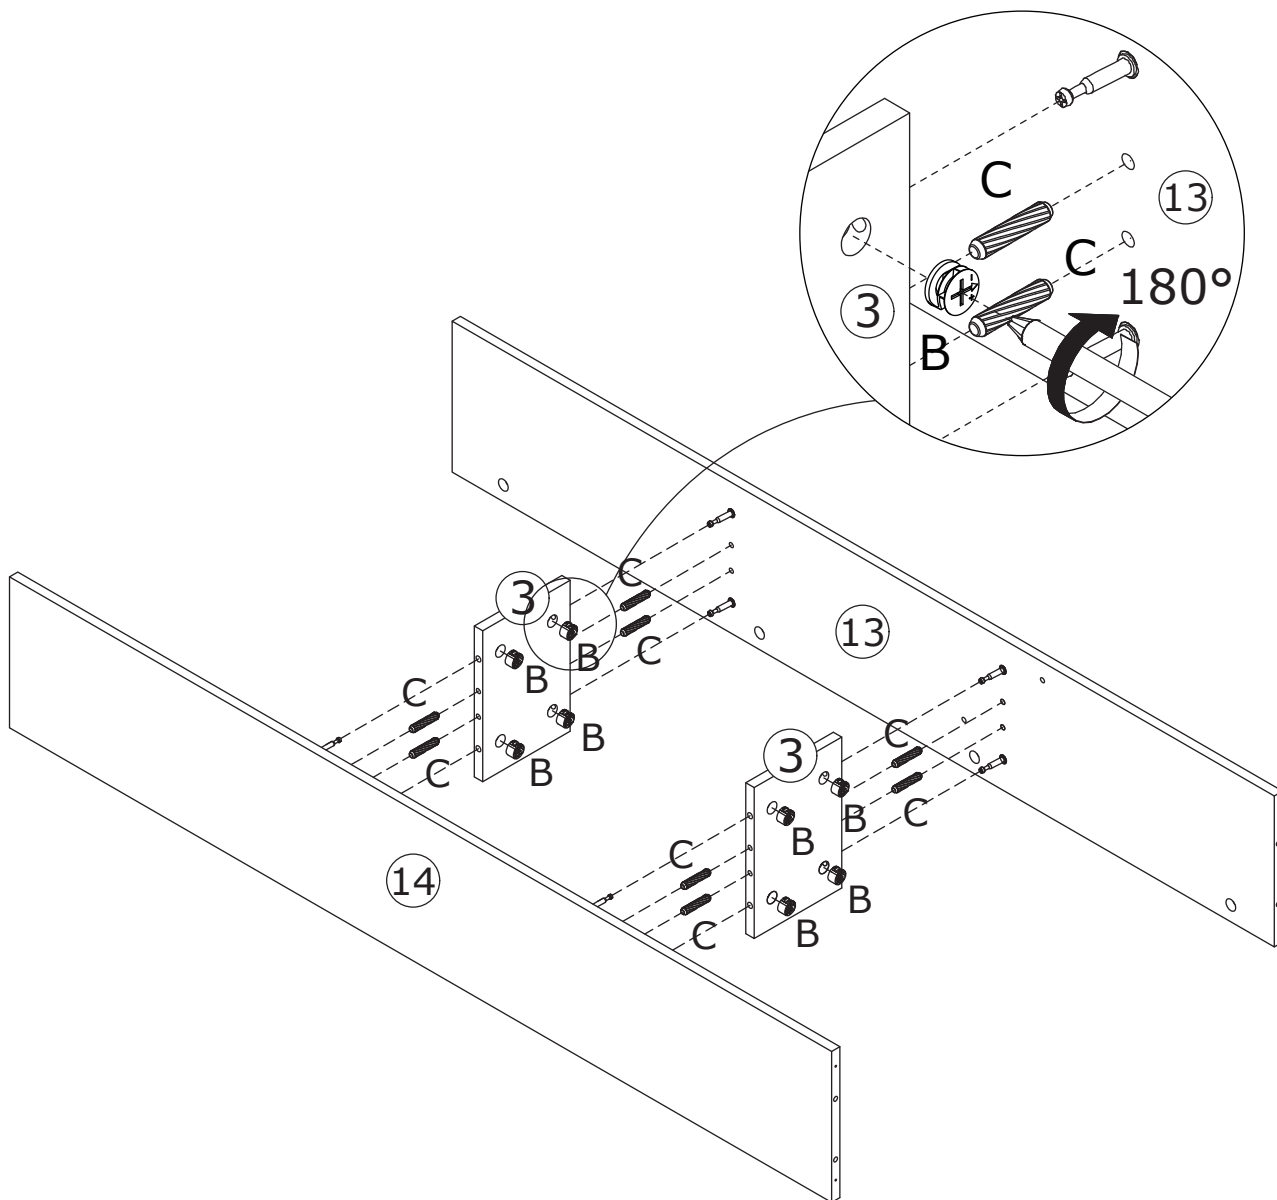


17

A x 8

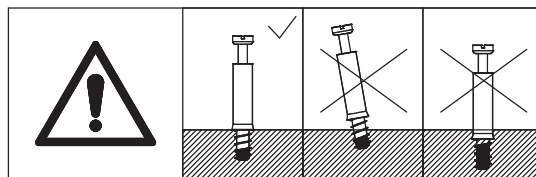 Ø6 x 35 mm

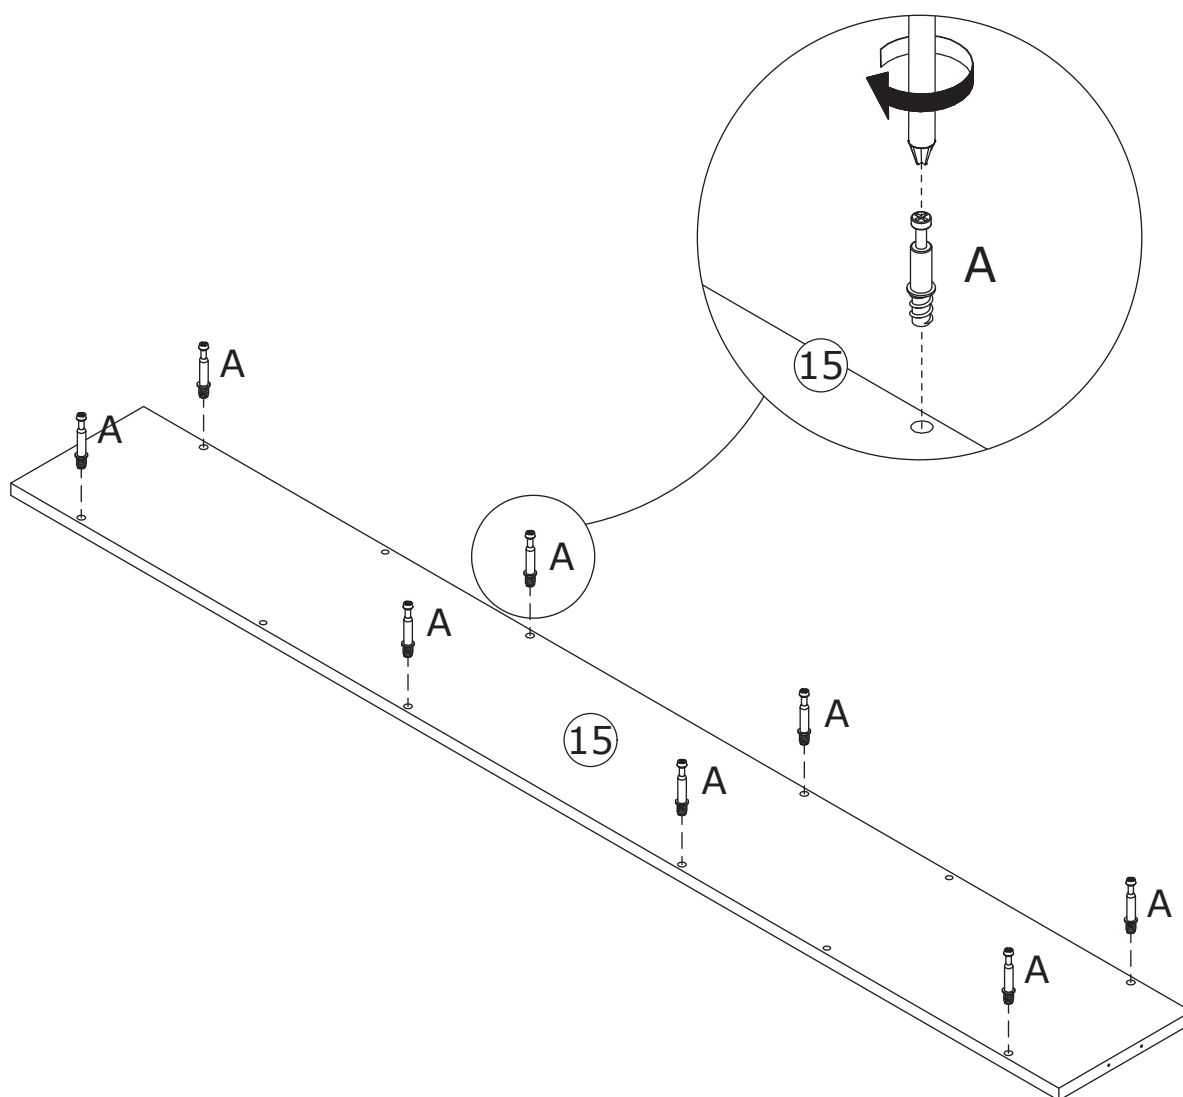

Screw eccentric rod (A)
 onto part 15.



18

B x 8









Ø 14 x 9 mm


C x 4



Ø 6 x 30 mm

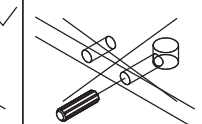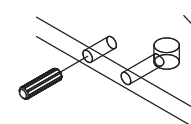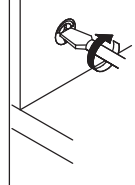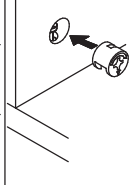

Connect part 13 and 14 to part 15 using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.



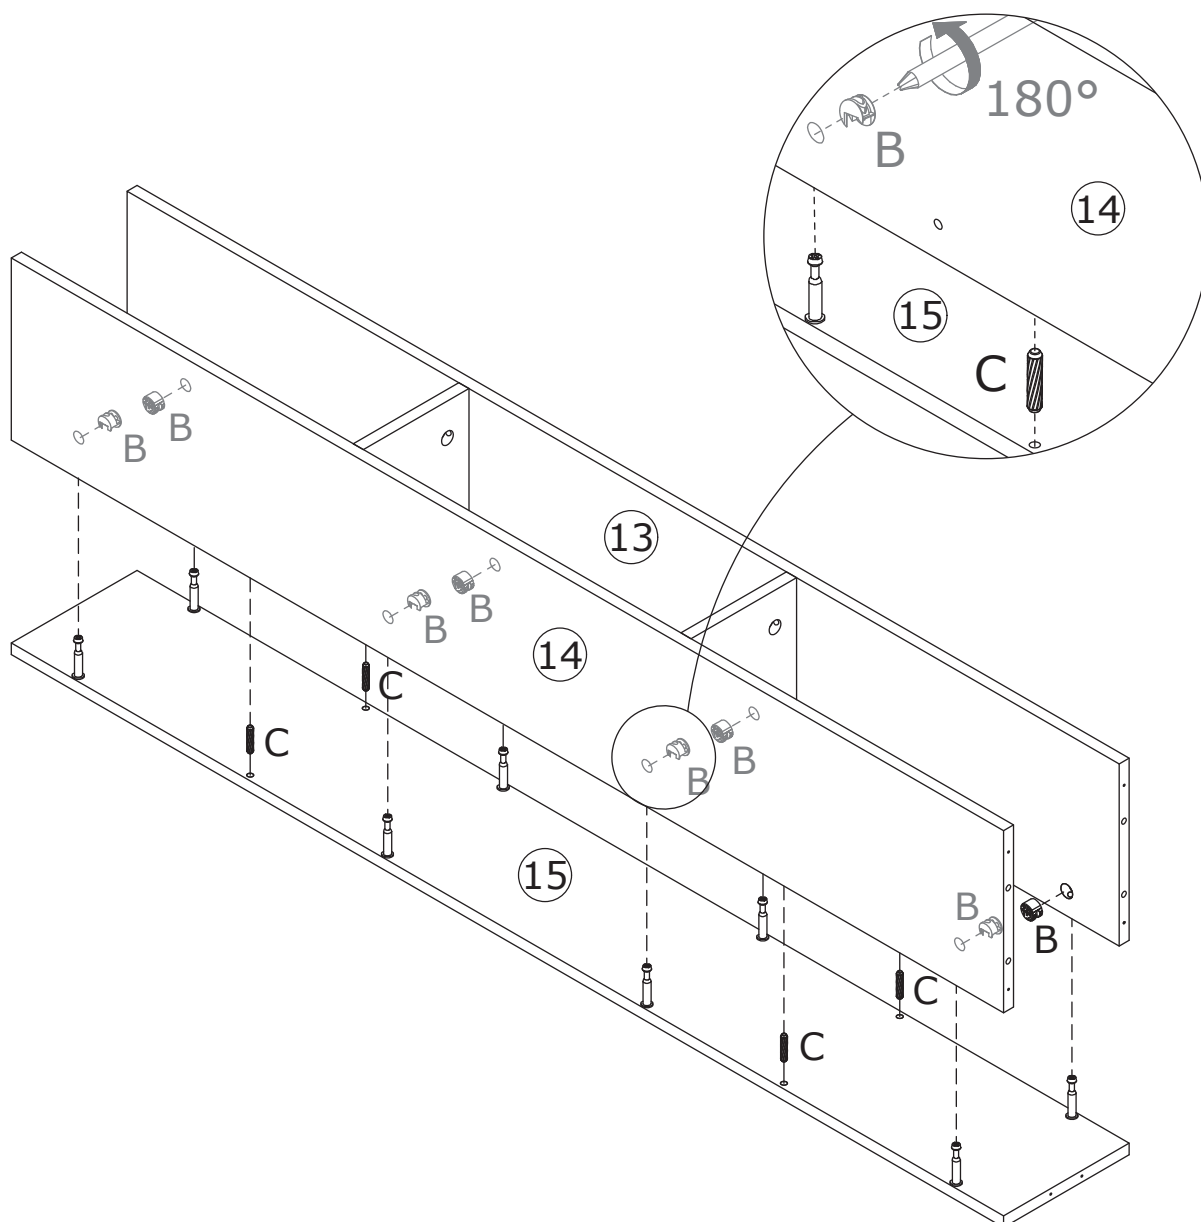


19


C x 8




D x 12

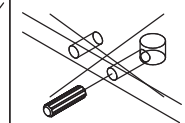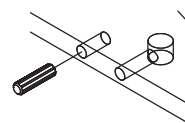


Connect part 17 and 18 to 13, 15 and 14 using wooden dowel (C), then secure with screw (D).

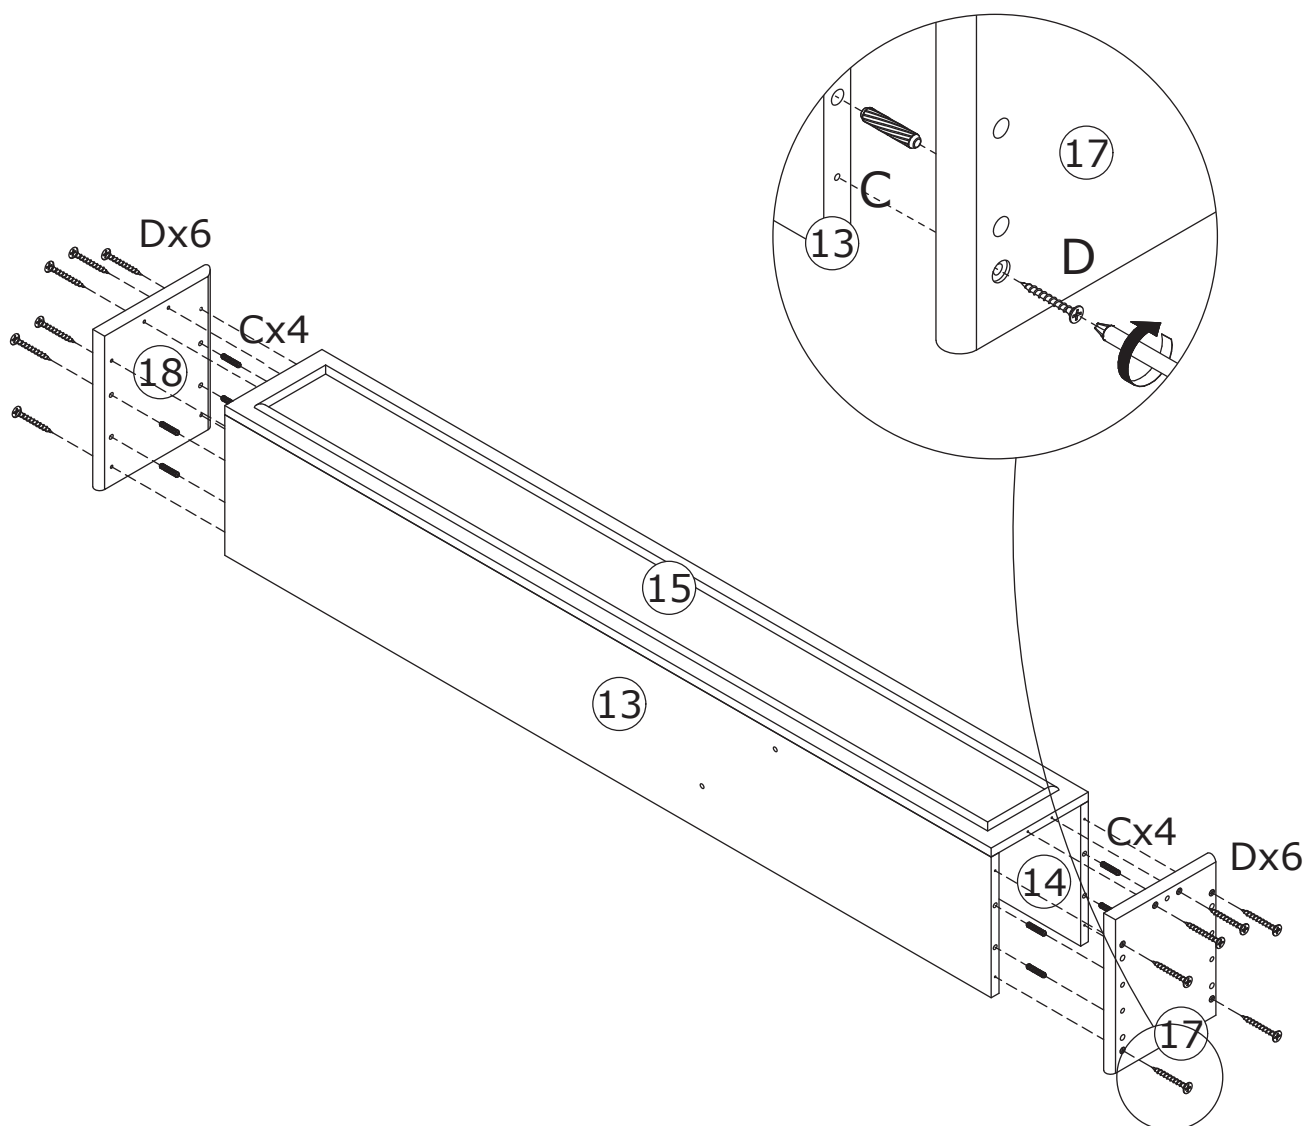




20

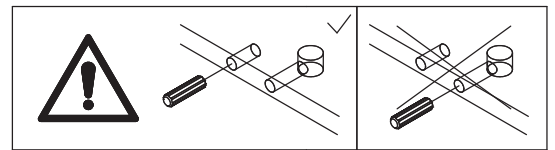


Connect part 16 and 18 to 11, 15 and 12 using wooden dowel (C), then secure with screw (D).

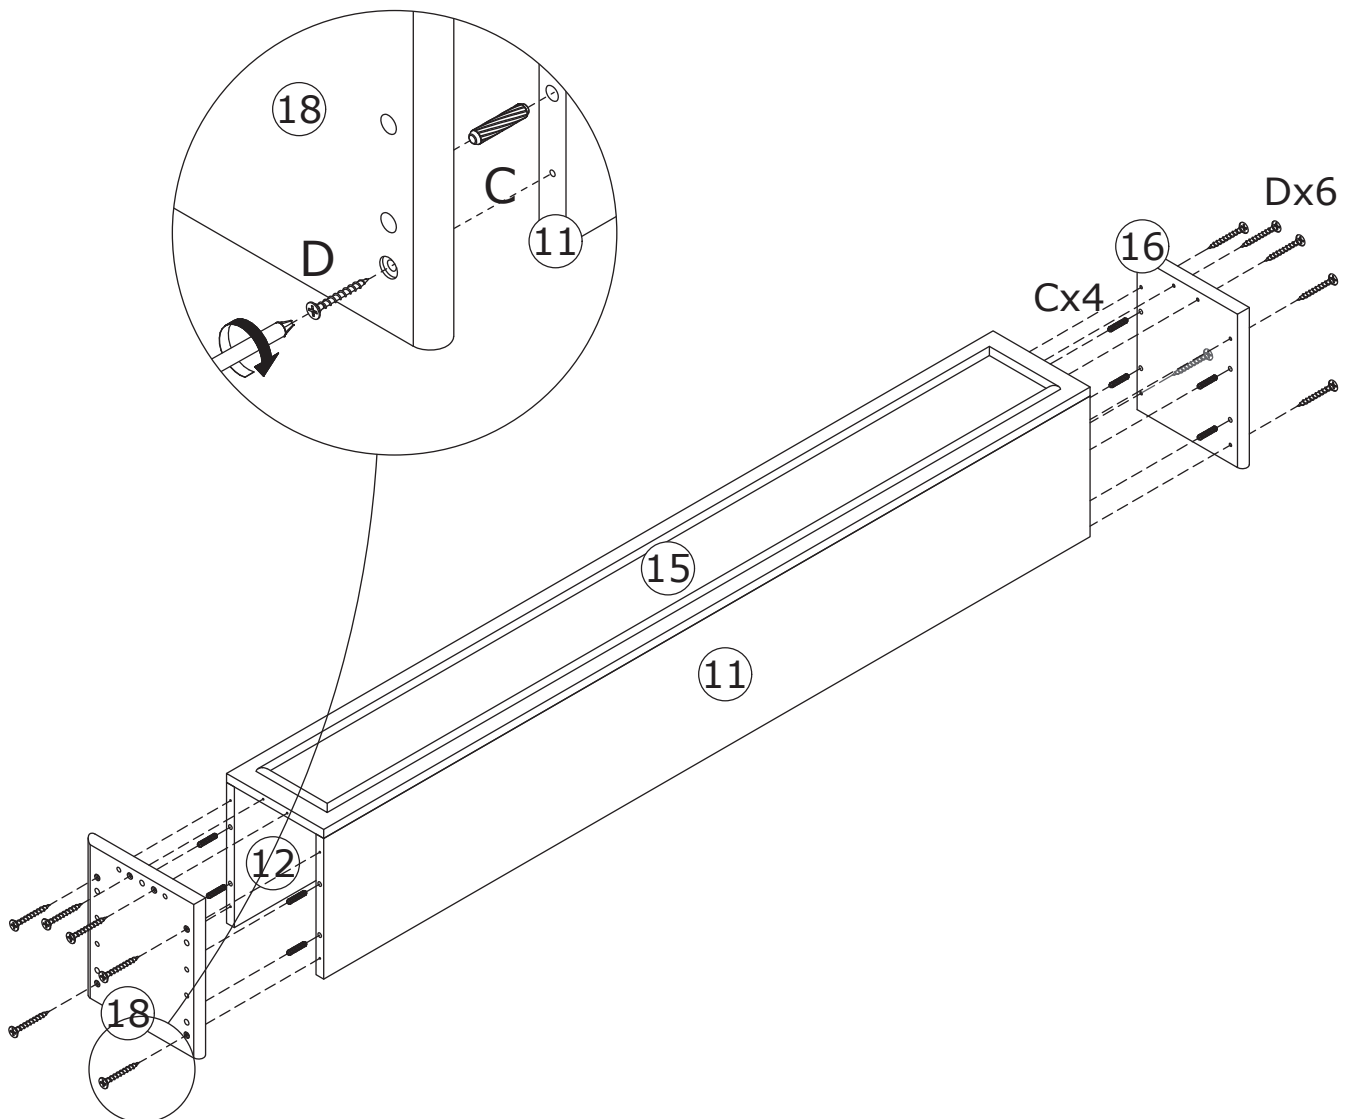




21

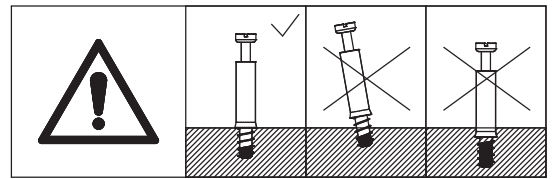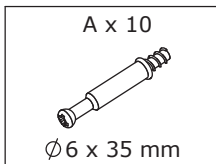


Screw eccentric rod (A) onto
 part 17 and 18.

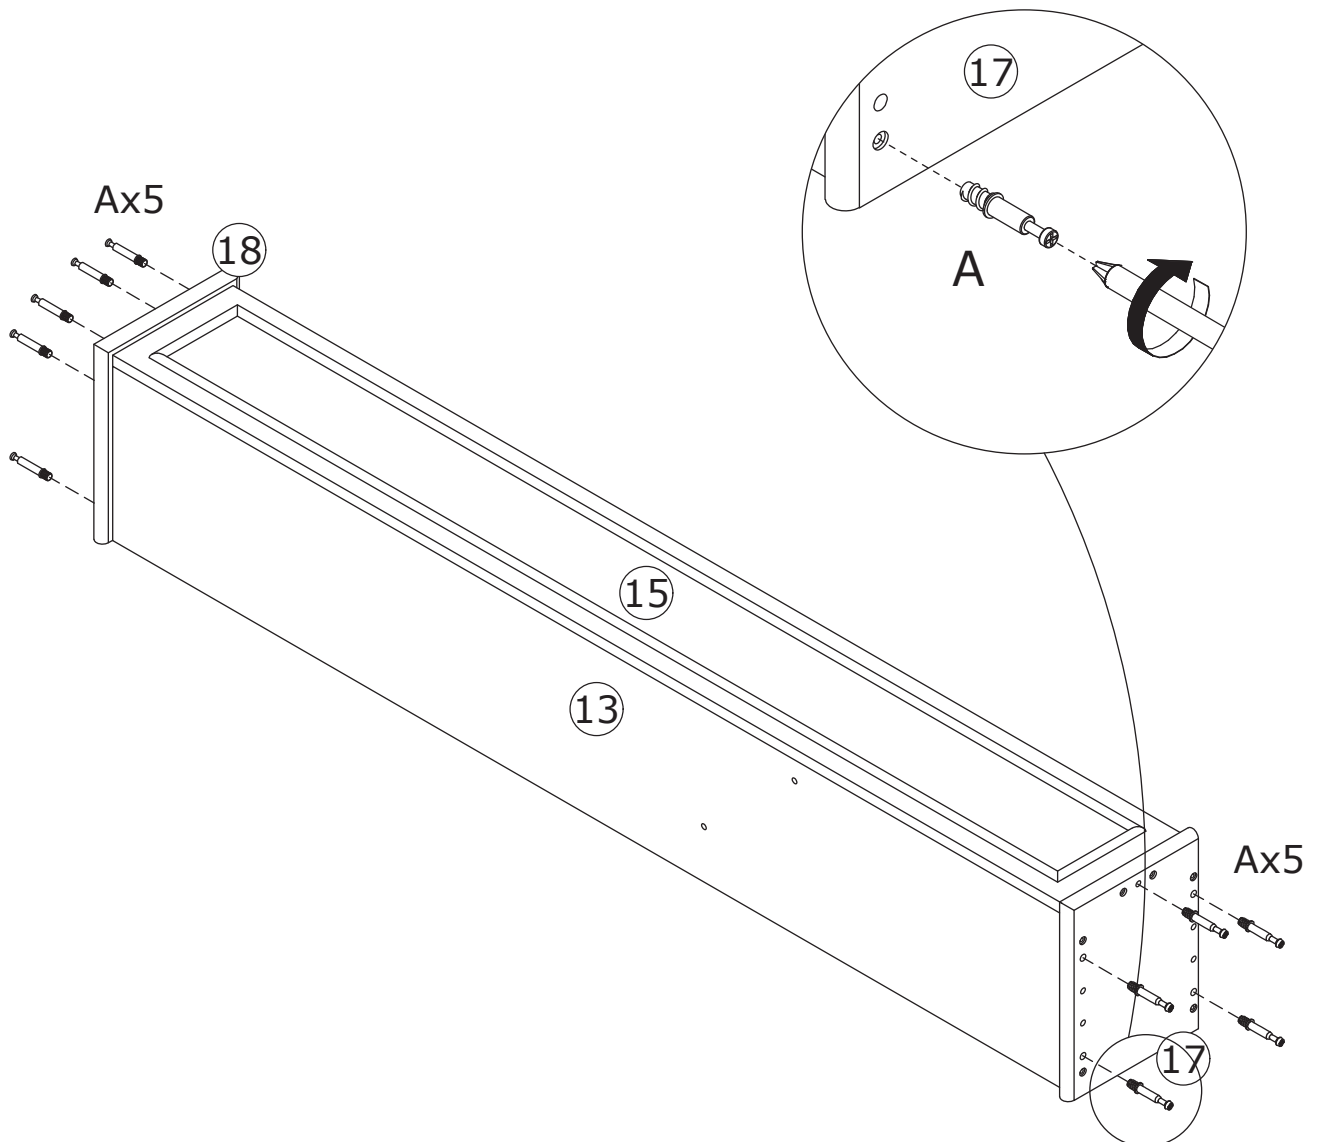

22

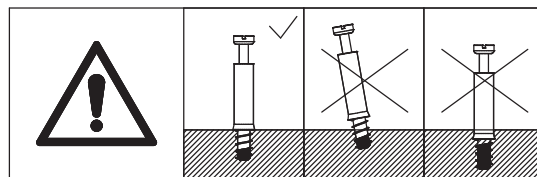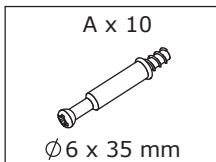

Screw eccentric rod (A) onto
 part 16 and 18.

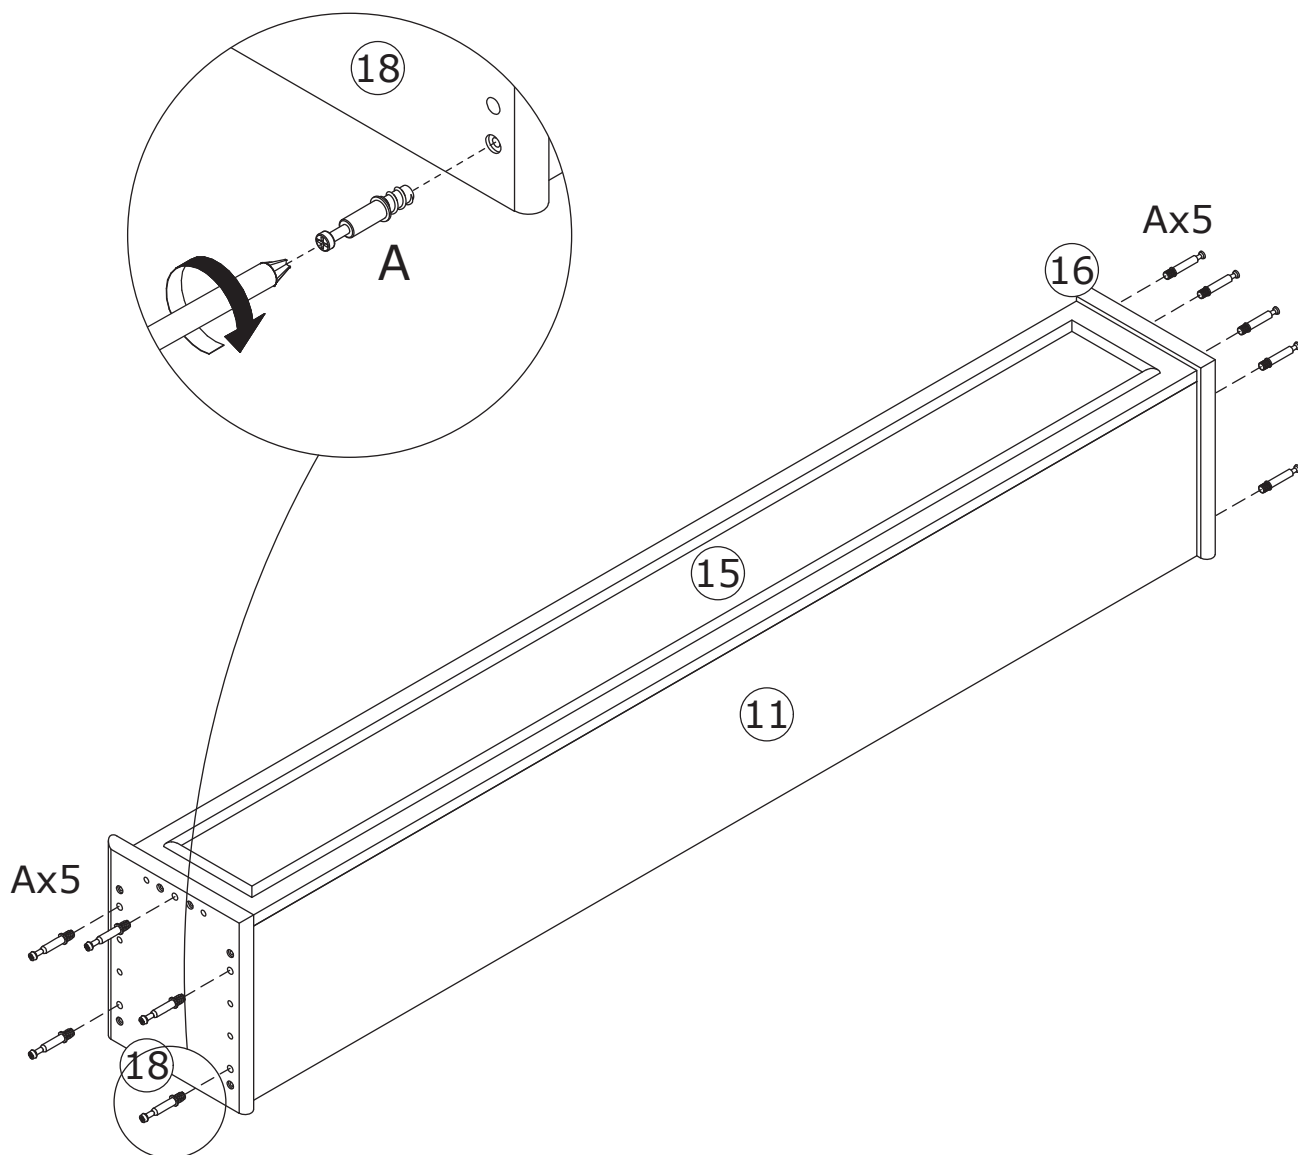

23

B x 10









Ø 14 x 9 mm

C x 10




Ø 6 x 30 mm

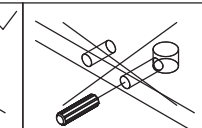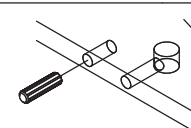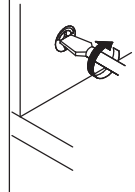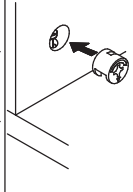

Connect part 19 and 20 to part 18 using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.

Connect part 1 and 2 to part 16 using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.

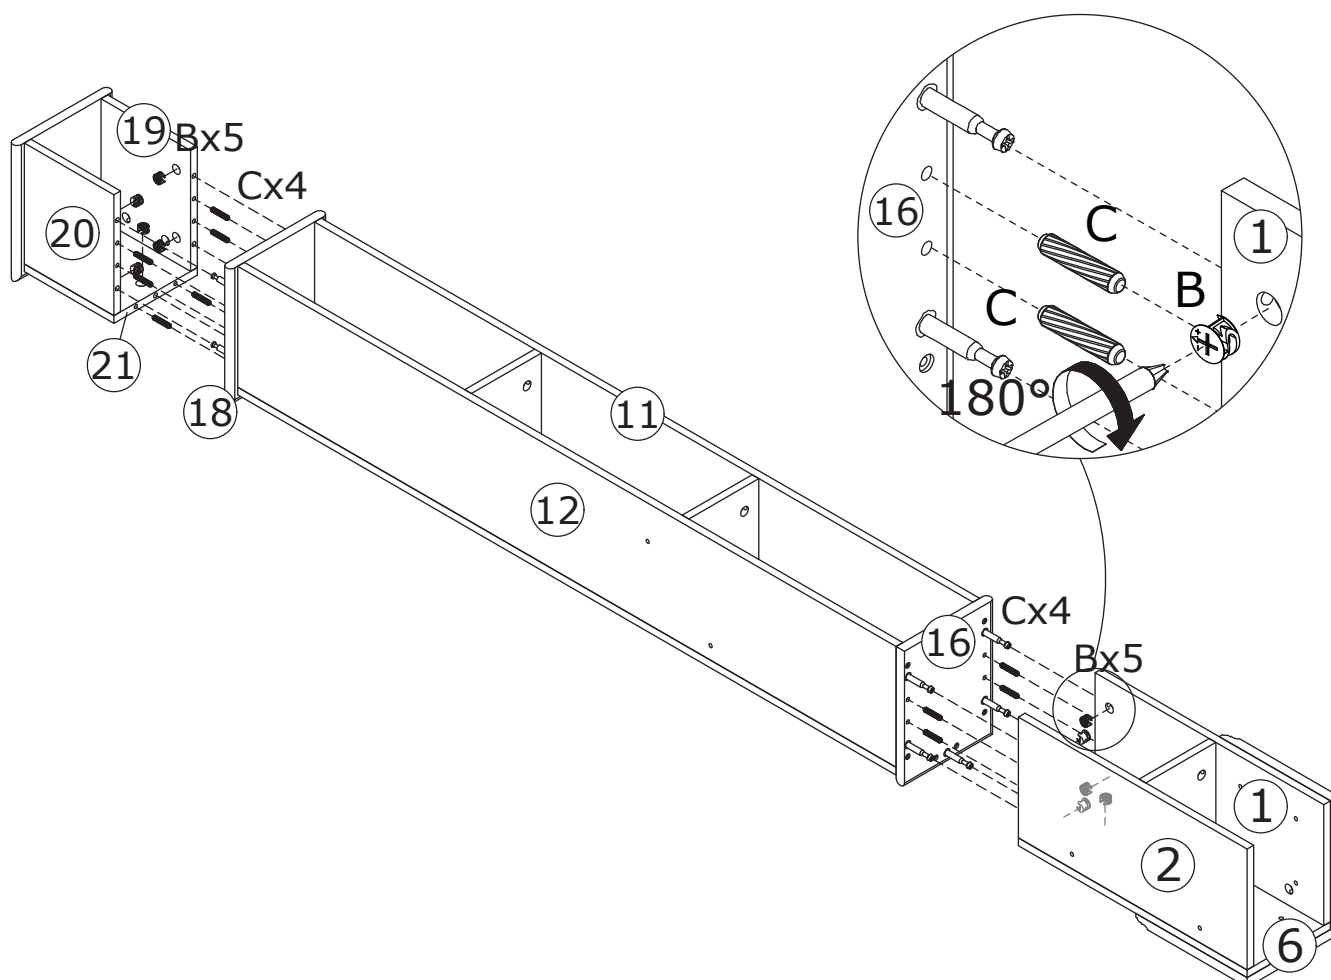

24

B x 10









Ø 14 x 9 mm

C x 10




Ø 6 x 30 mm

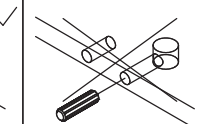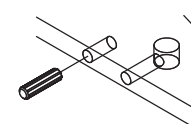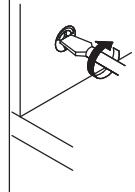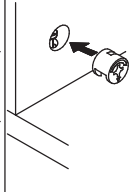




Connect part 19 and 20 to part 18 using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.


Connect part 4 and 5 to part 17 using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.

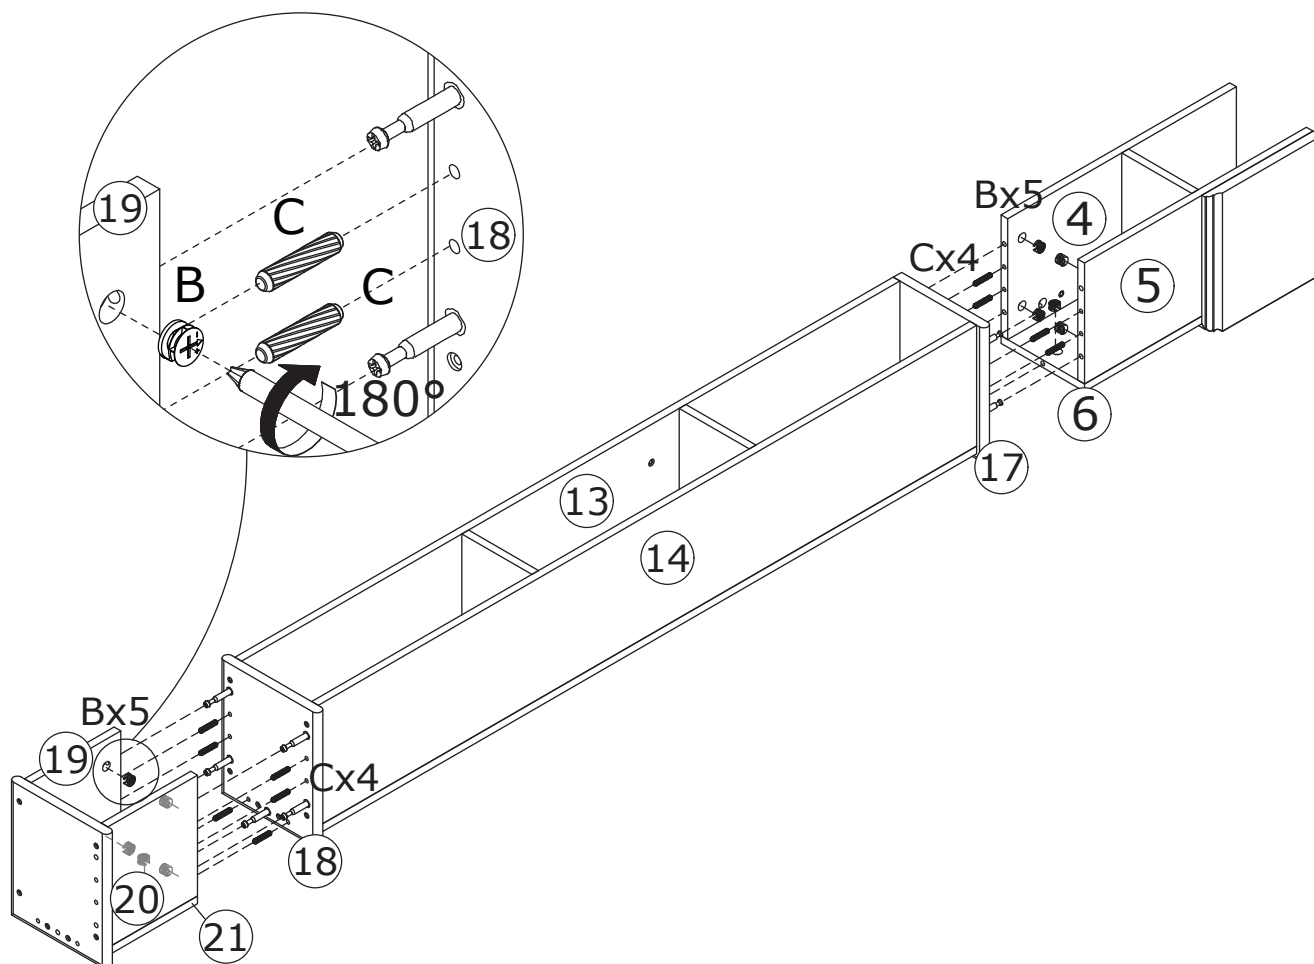



25

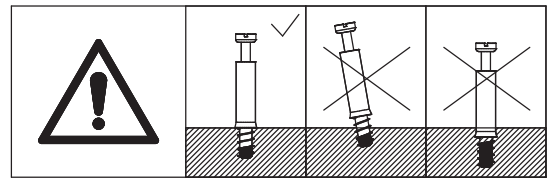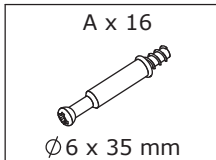


Screw eccentric rod (A) onto part 31, 32, 33, and 34.

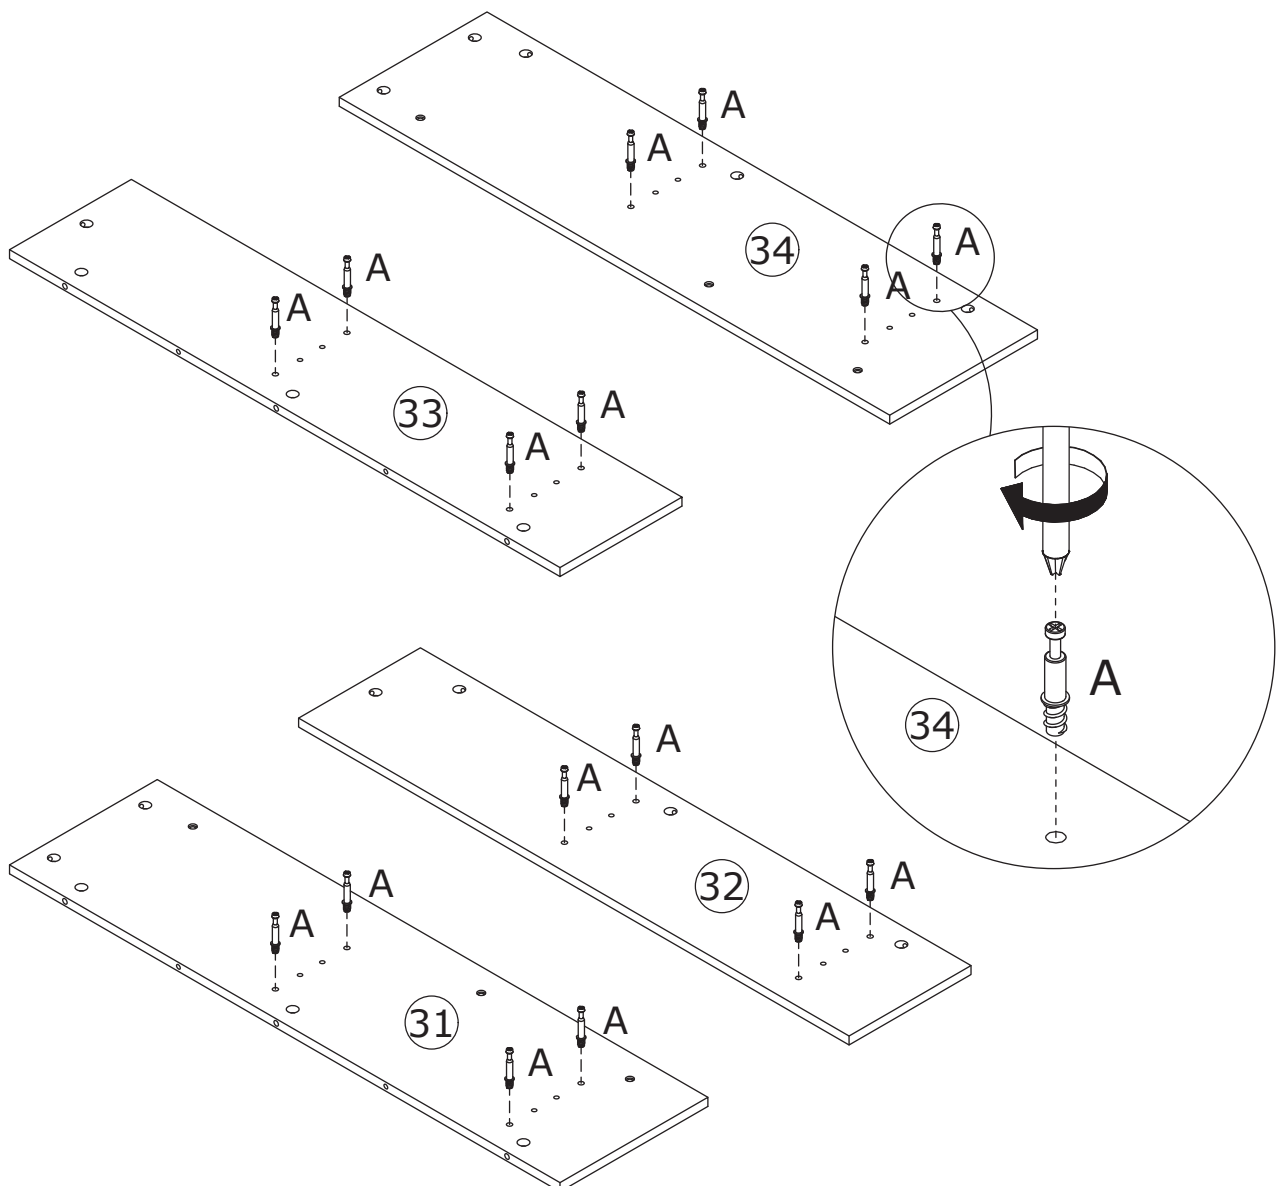



26

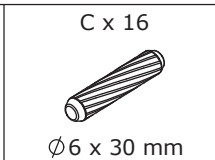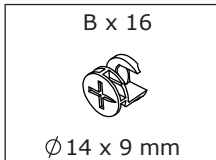



Connect part 33 and 34 to part 35 using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.

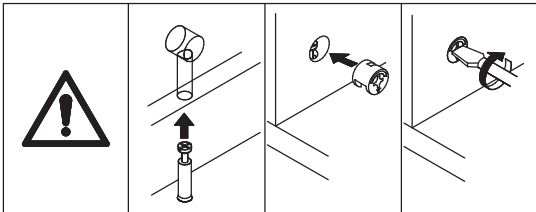


Connect part 31 and 32 to part 35 using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.

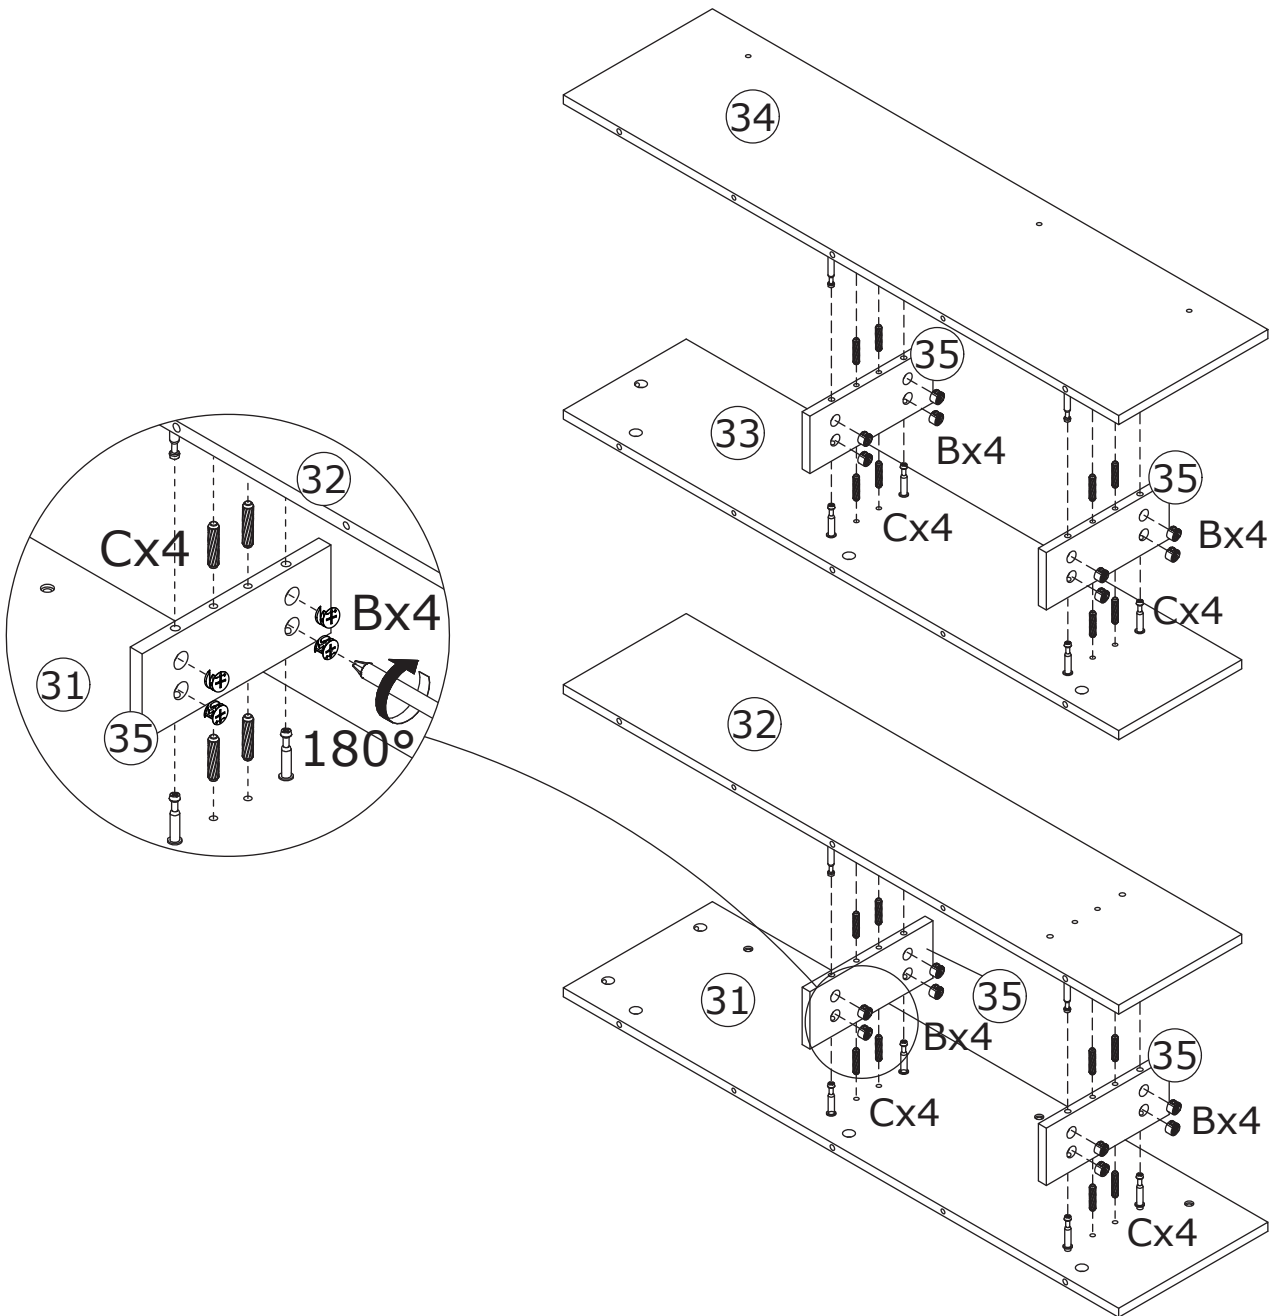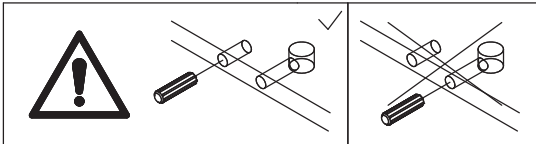



27

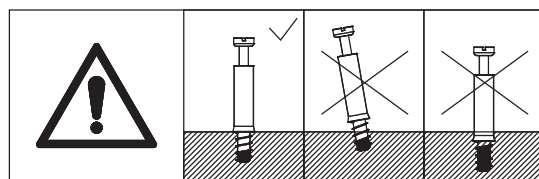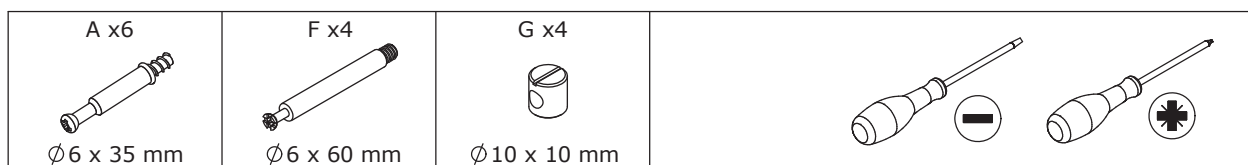


First put nut (G) into part 36, then screw eccentric rod (F) to part 36.
Screw eccentric rod (A) onto part 36.

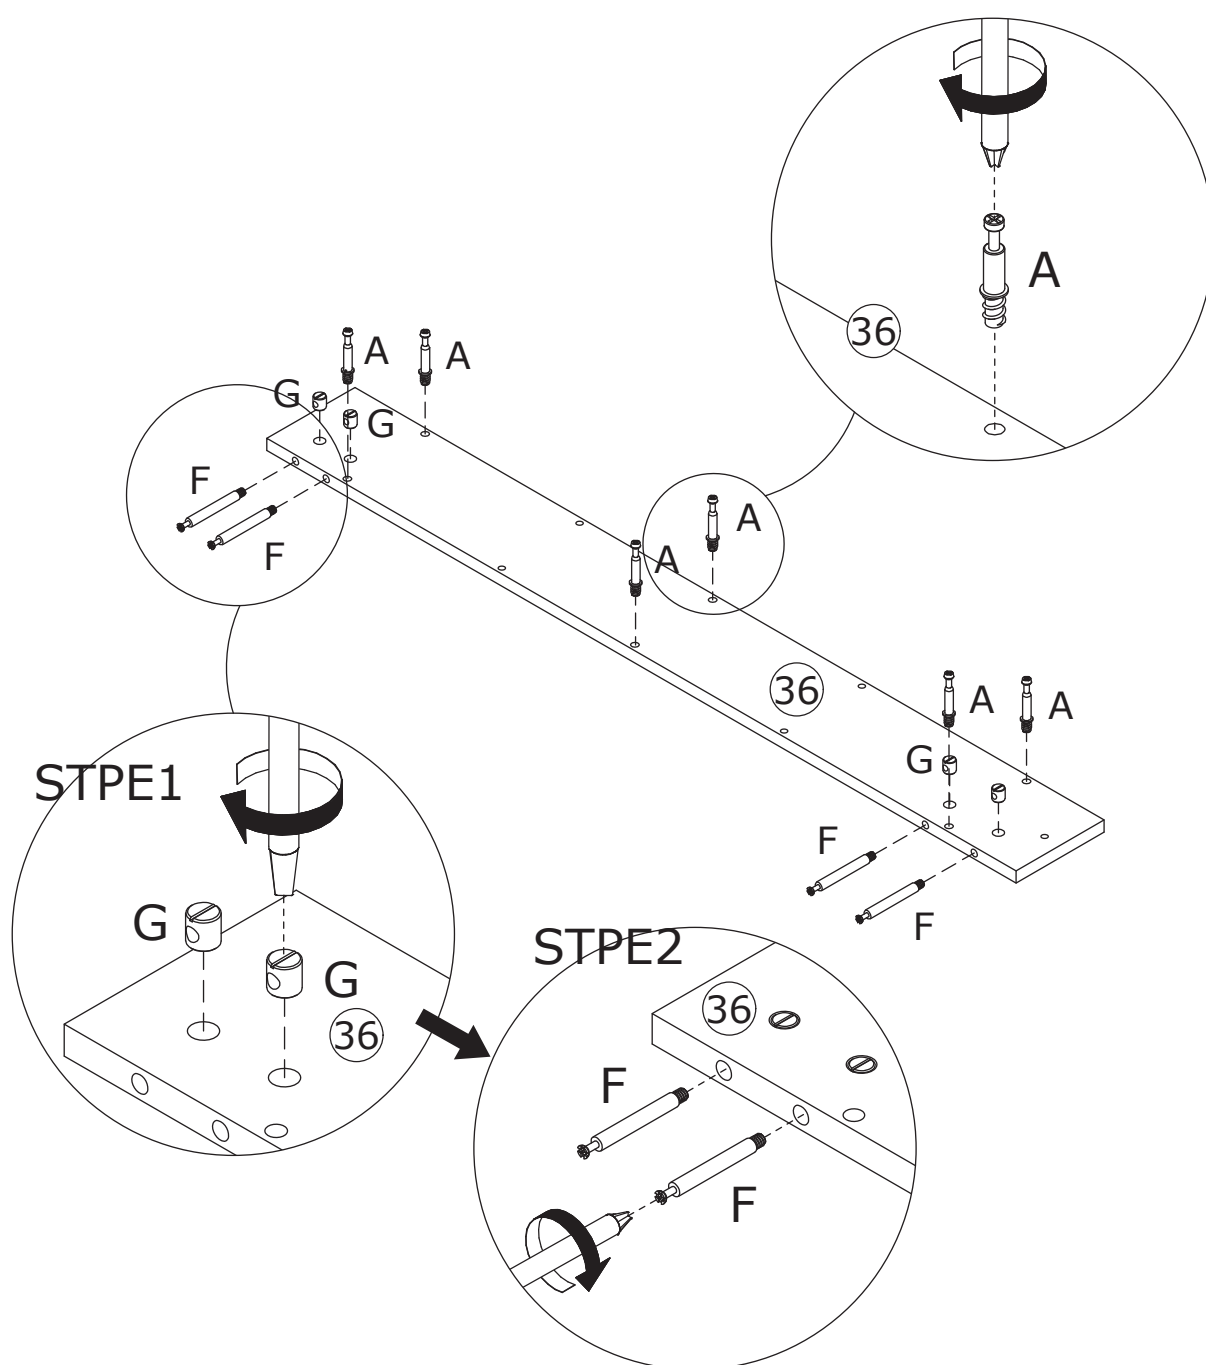

28

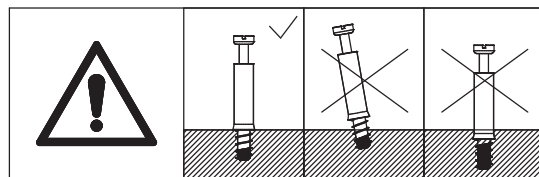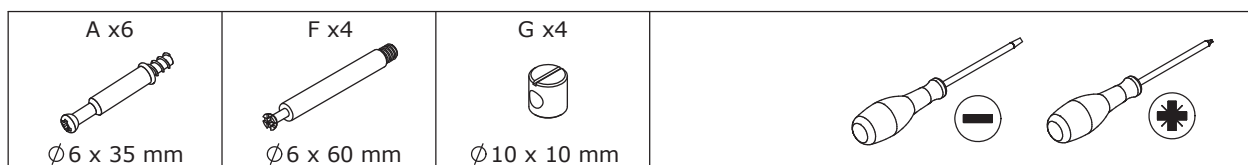

First put nut (G) into part 42, then screw eccentric rod (F) to part 42.
Screw eccentric rod (A) onto part 42.

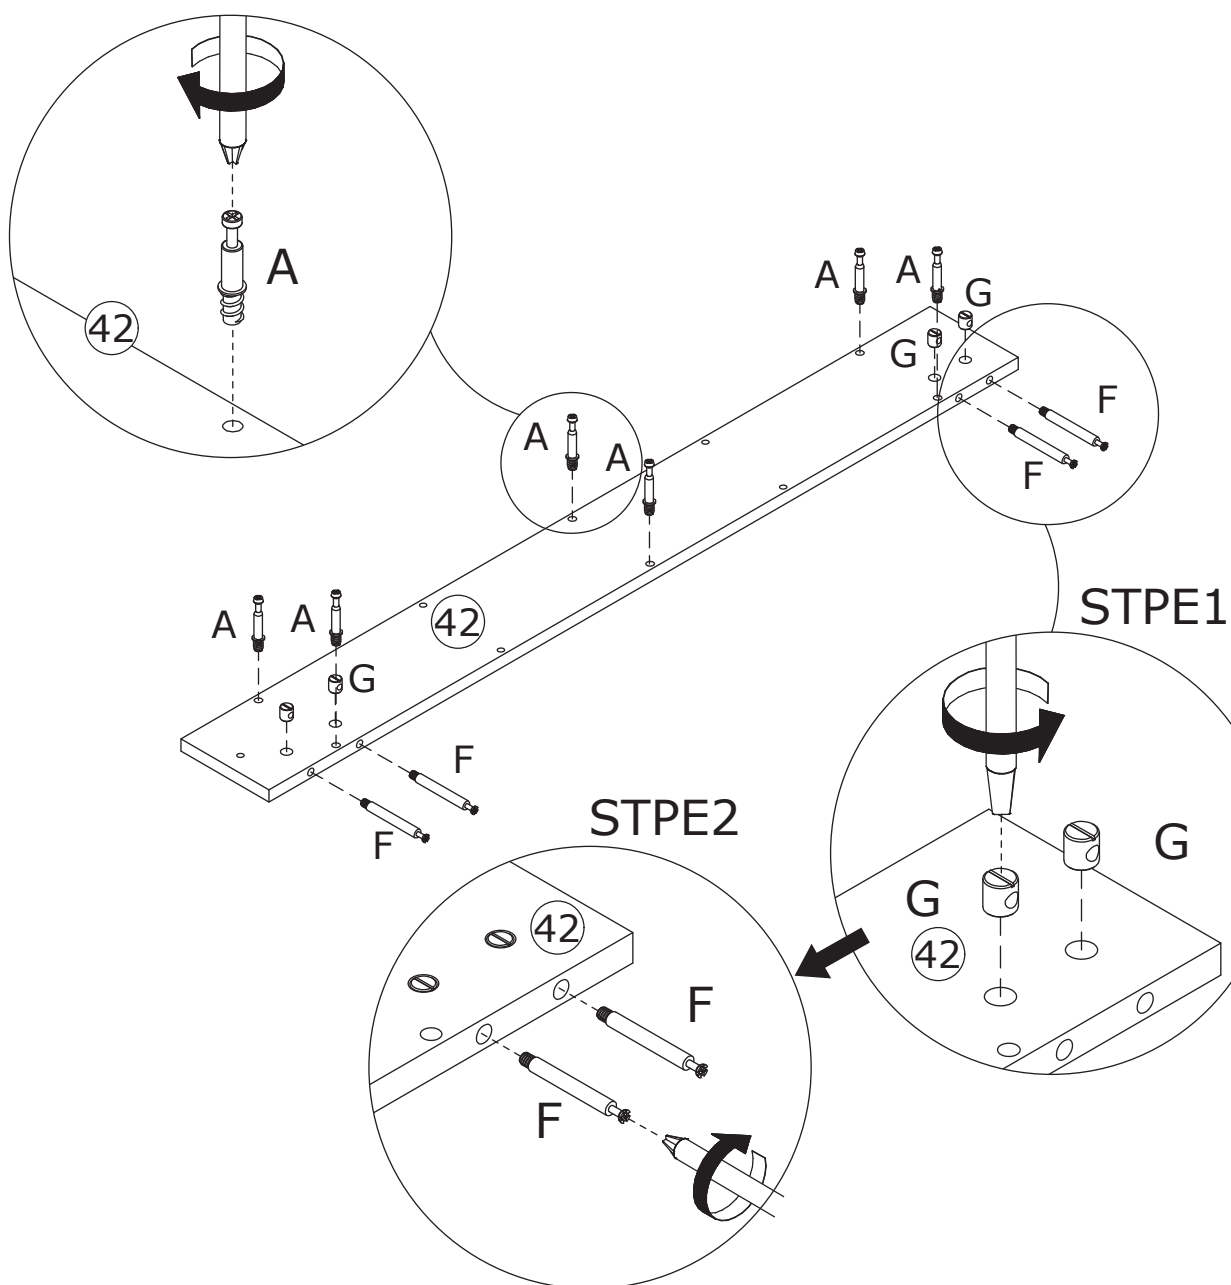

29

B x 6









Ø 14 x 9 mm


C x 4




Ø 6 x 30 mm

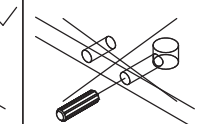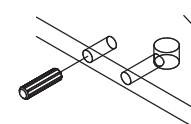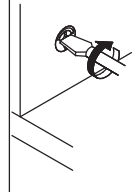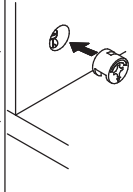


Connect part 31 and 32 to part 36 using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.

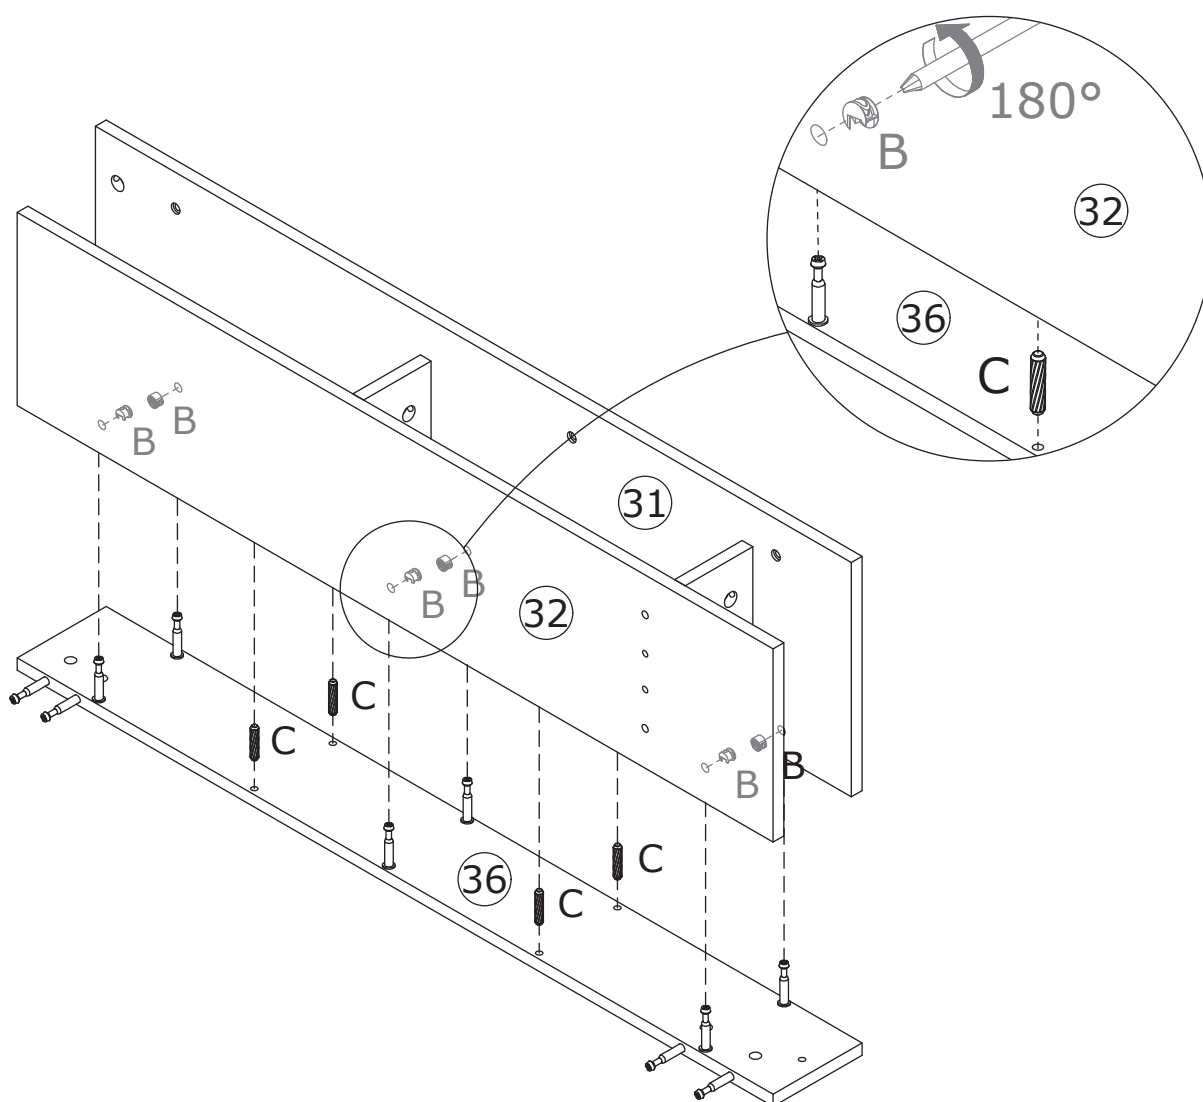


30


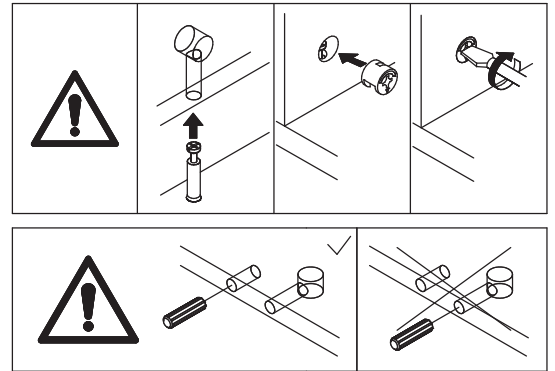


Connect part 33 and 34 to the part 42 using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.

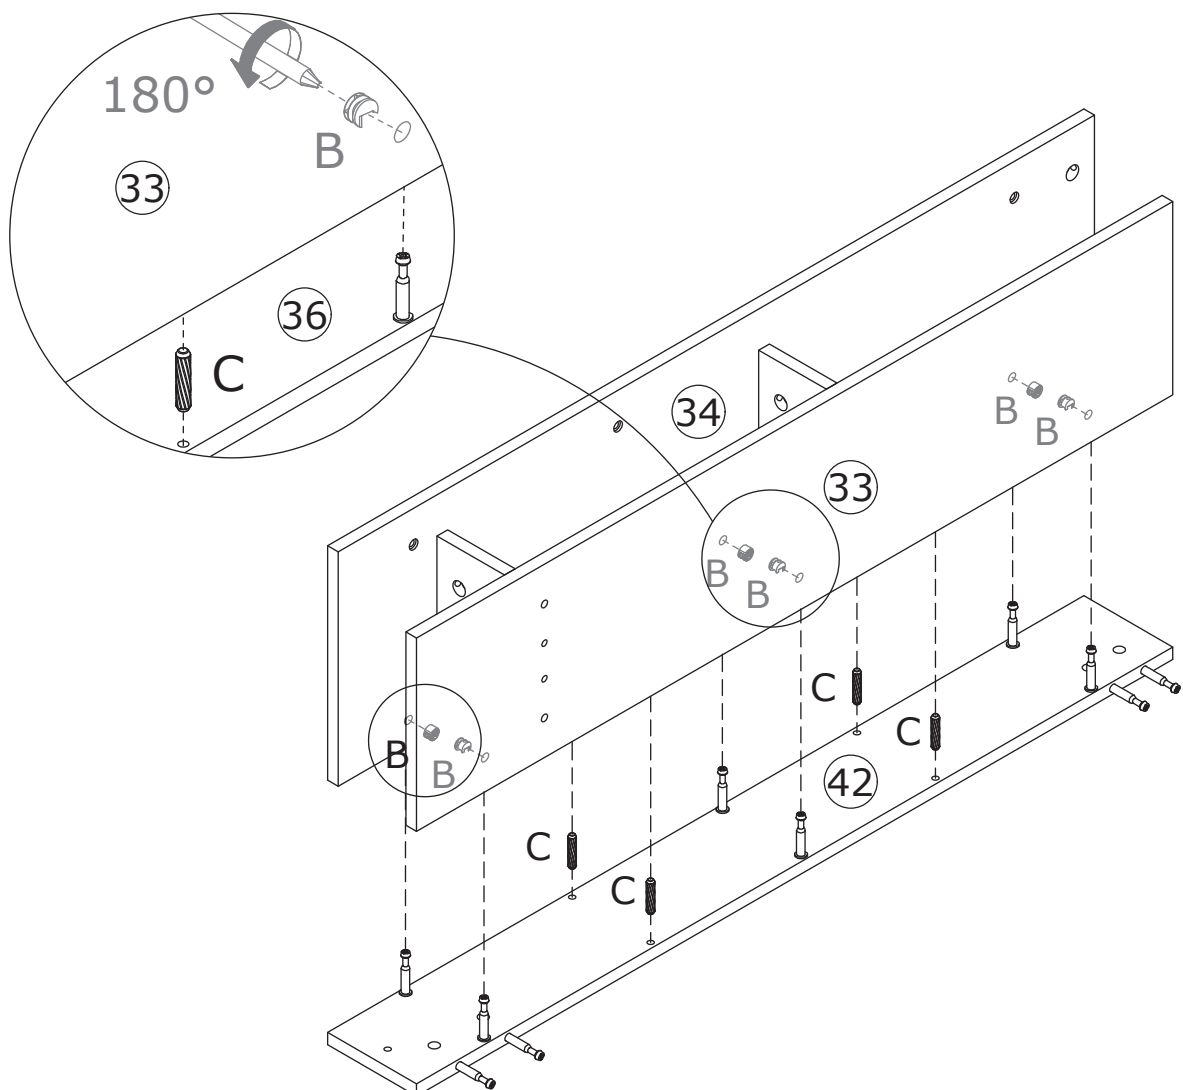


31

A x 4

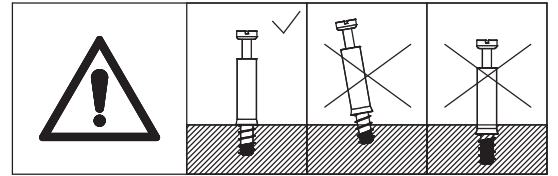 Ø6 x 35 mm


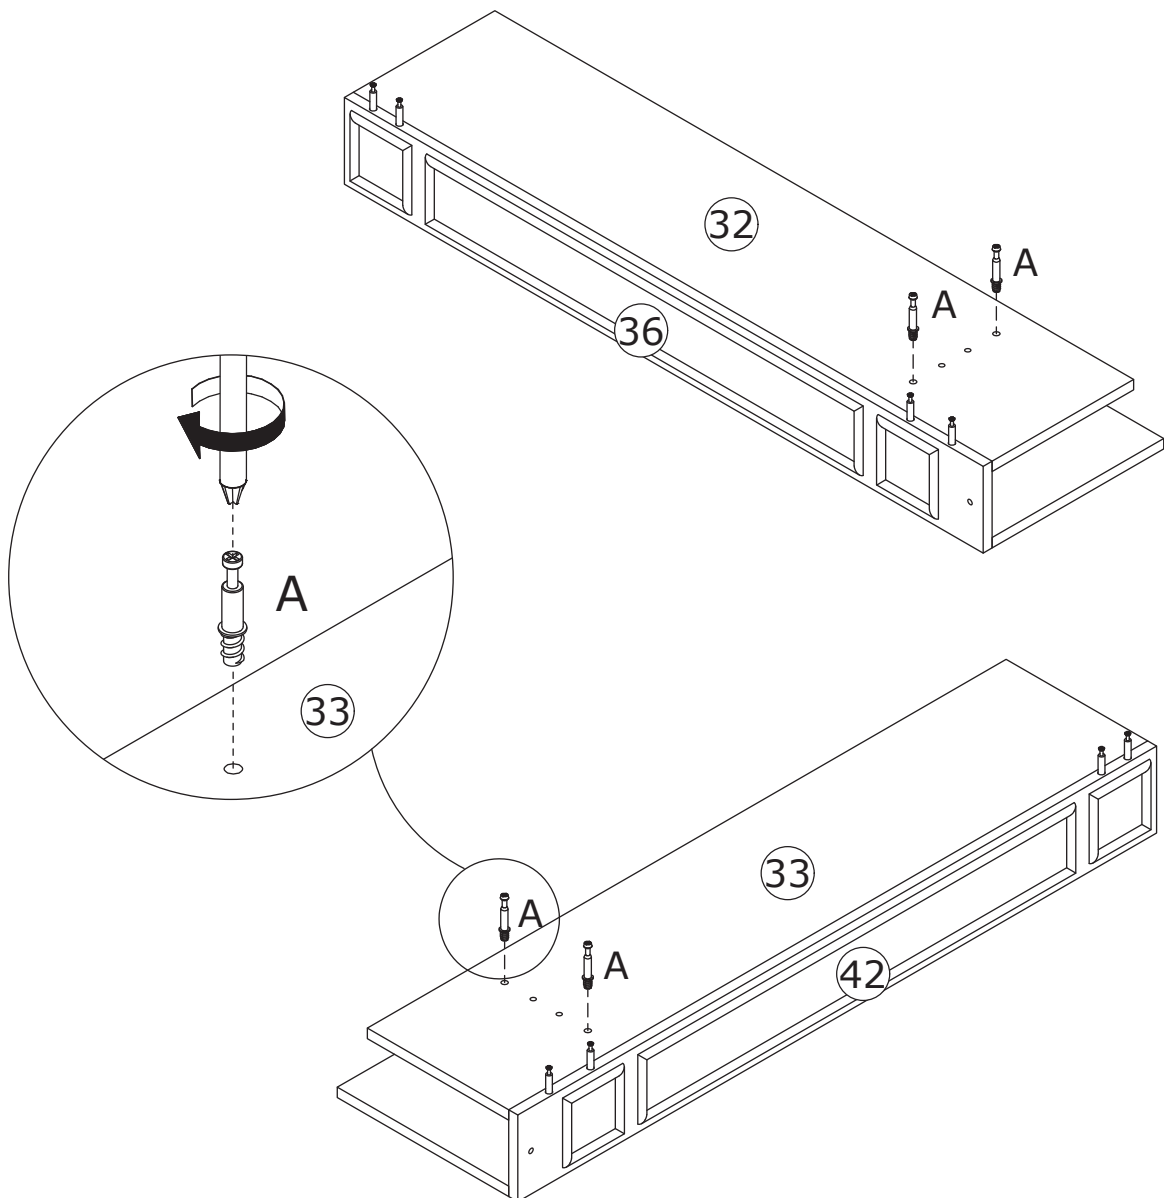


Screw eccentric rod (A) onto
 part 32 and 33.




32


A x 2
Ø6 x 35 mm

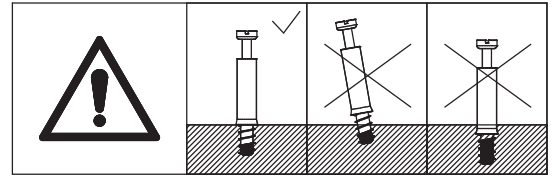


Screw eccentric rod (A)
onto part 38.

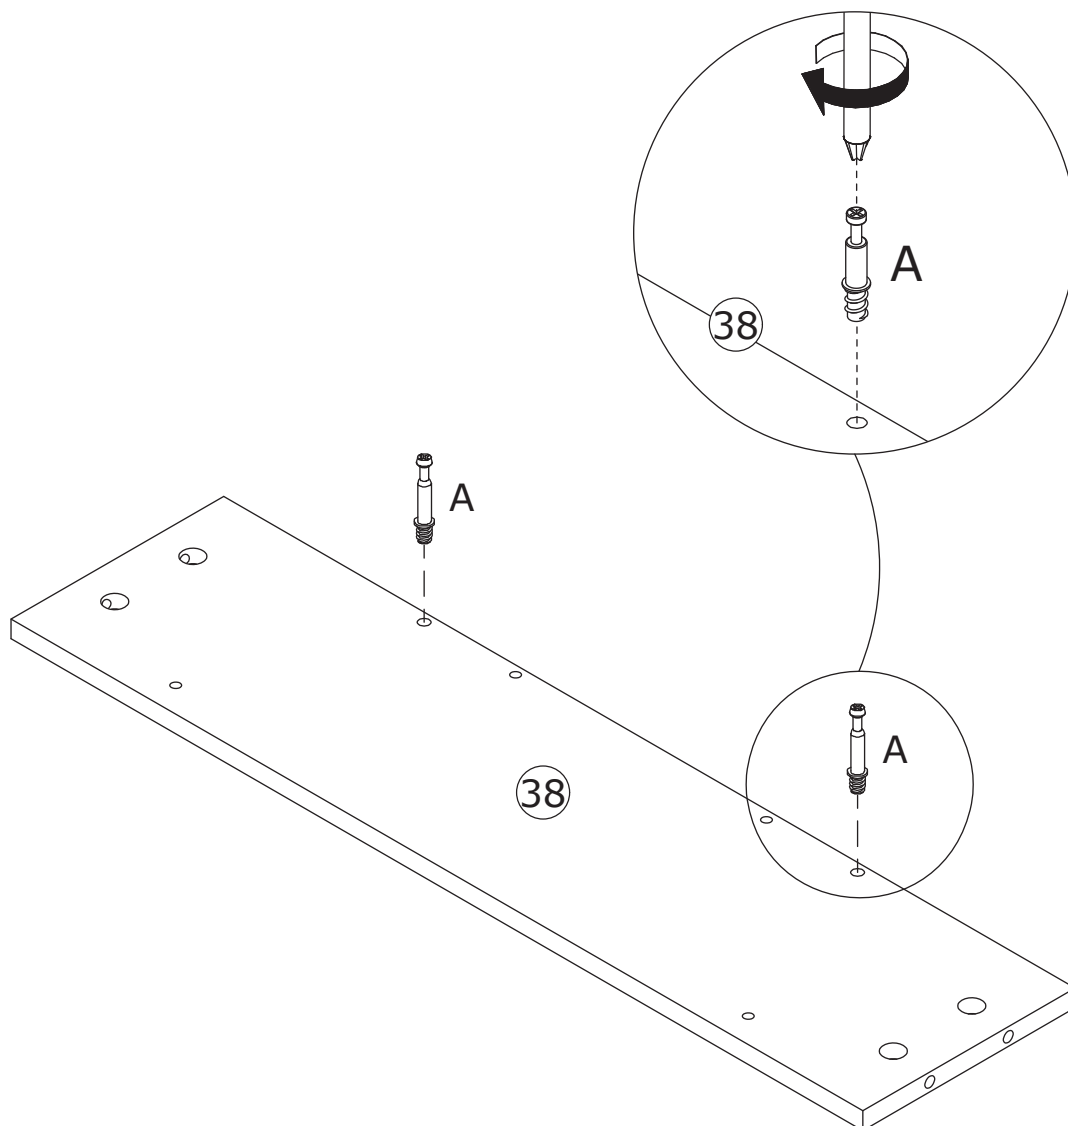


33




B x 2  Ø 14 x 9 mm	C x 2  Ø 6 x 30 mm	
---	---	---

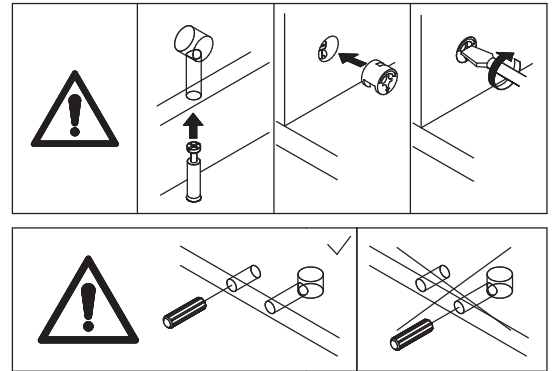


Connect part 38 to part 37 using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.

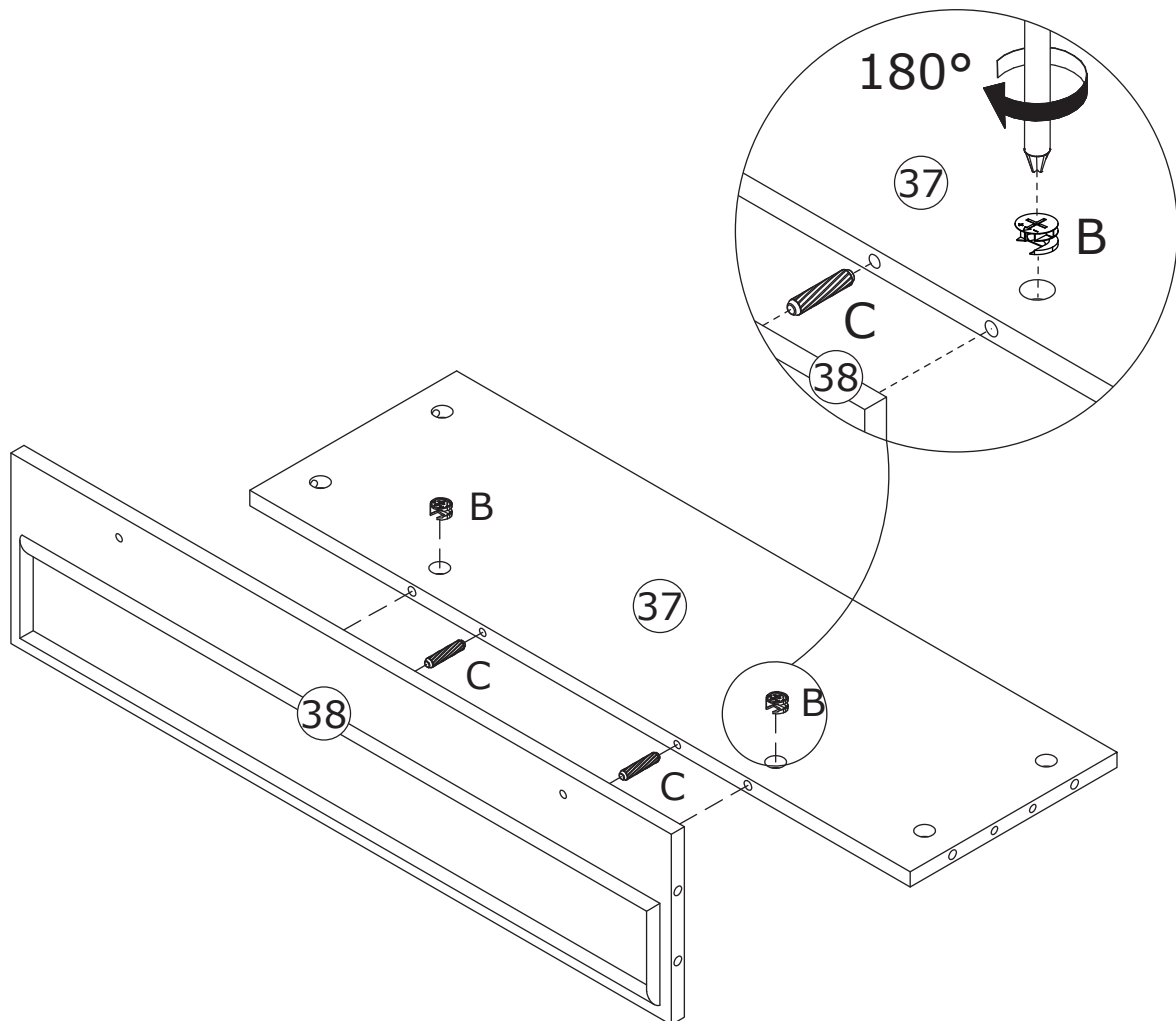




34

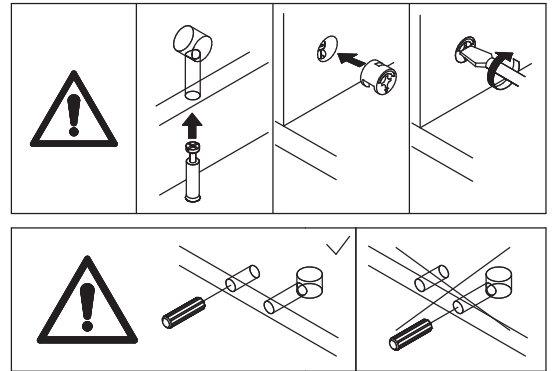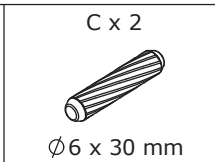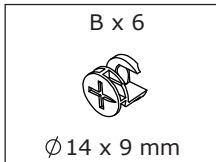


Connect part 39, 38, and 37 to part 32 using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.

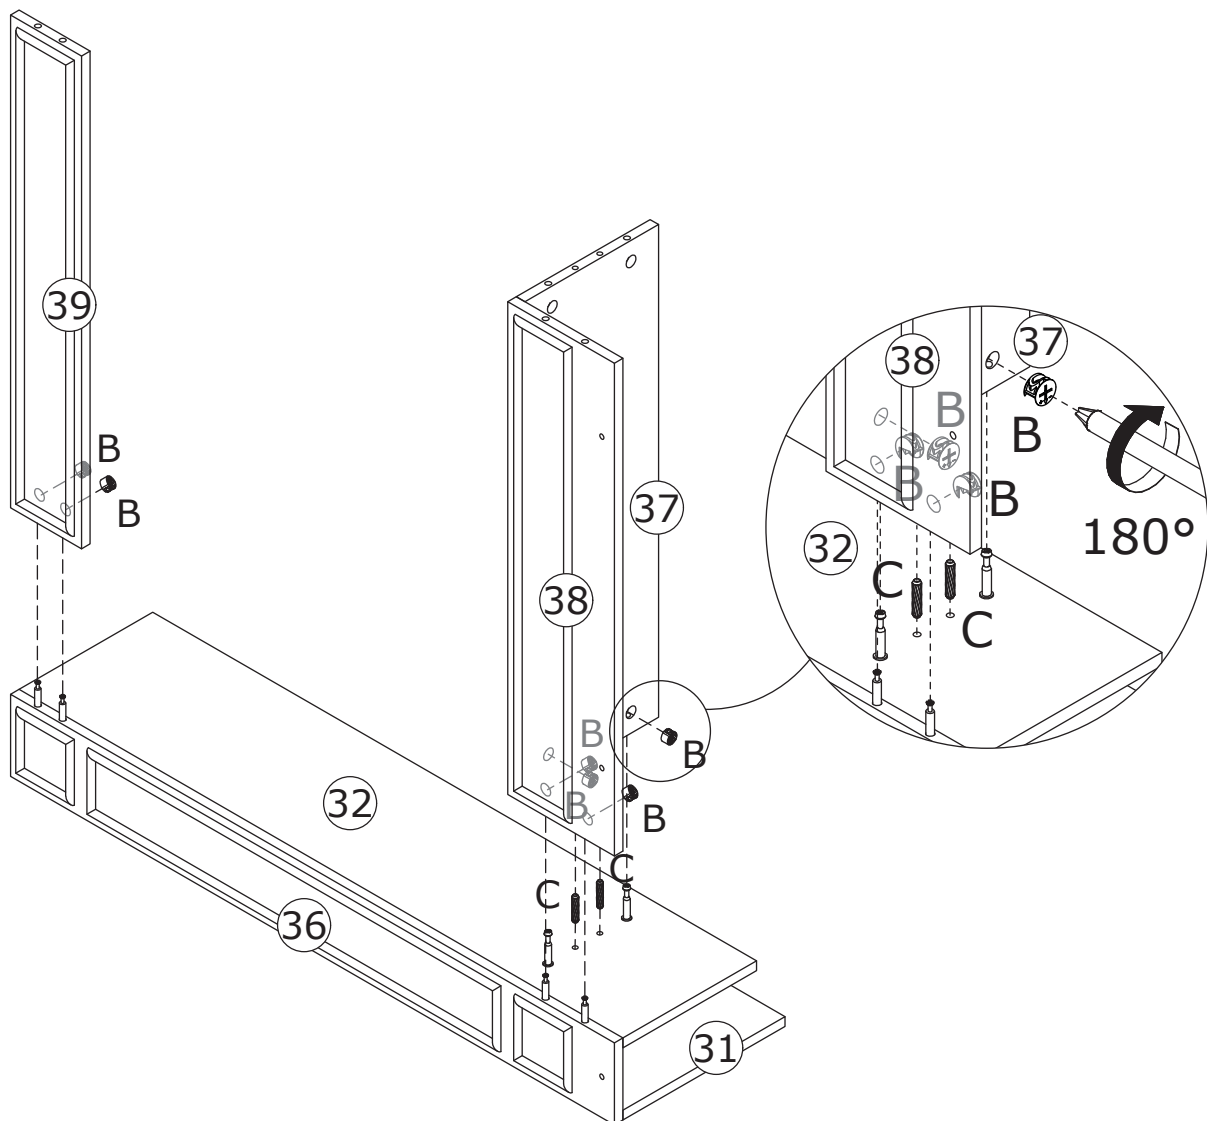

35

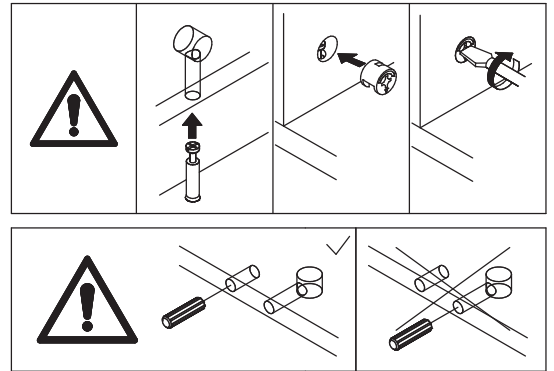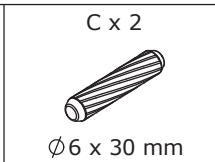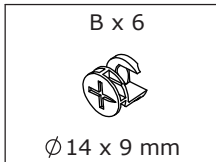

Connect part 42 to part 39 and 38, part 33 to part 37 using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.

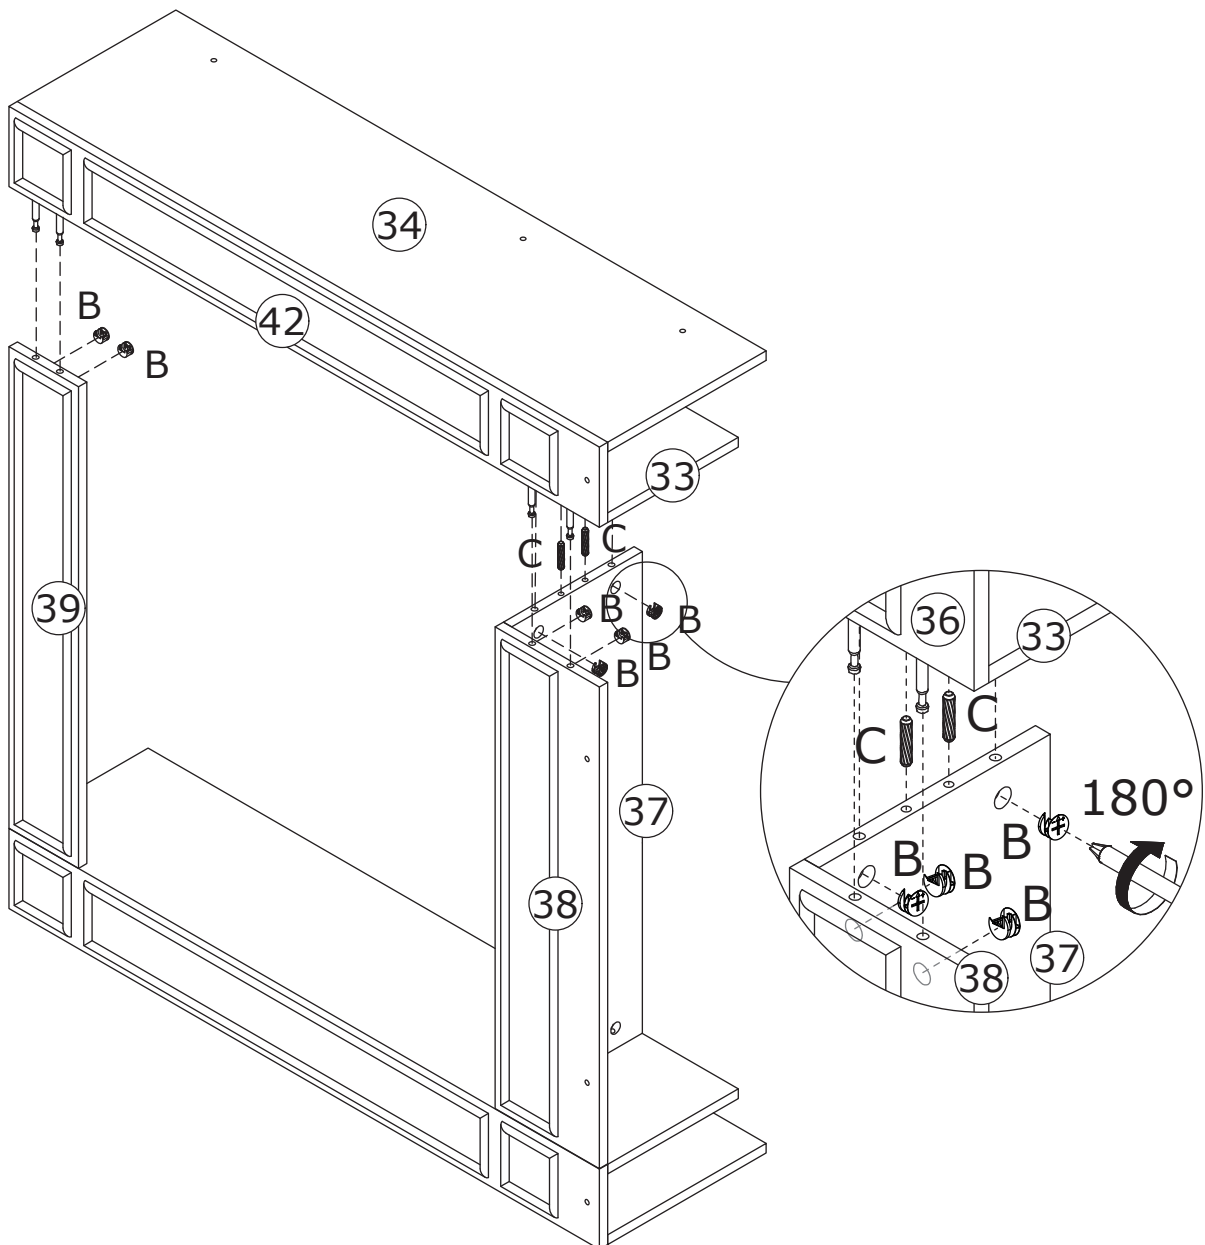


36


E x 4






M6 x 20 mm




Secure part 40 to part 36,38,and 42 using screw (E).

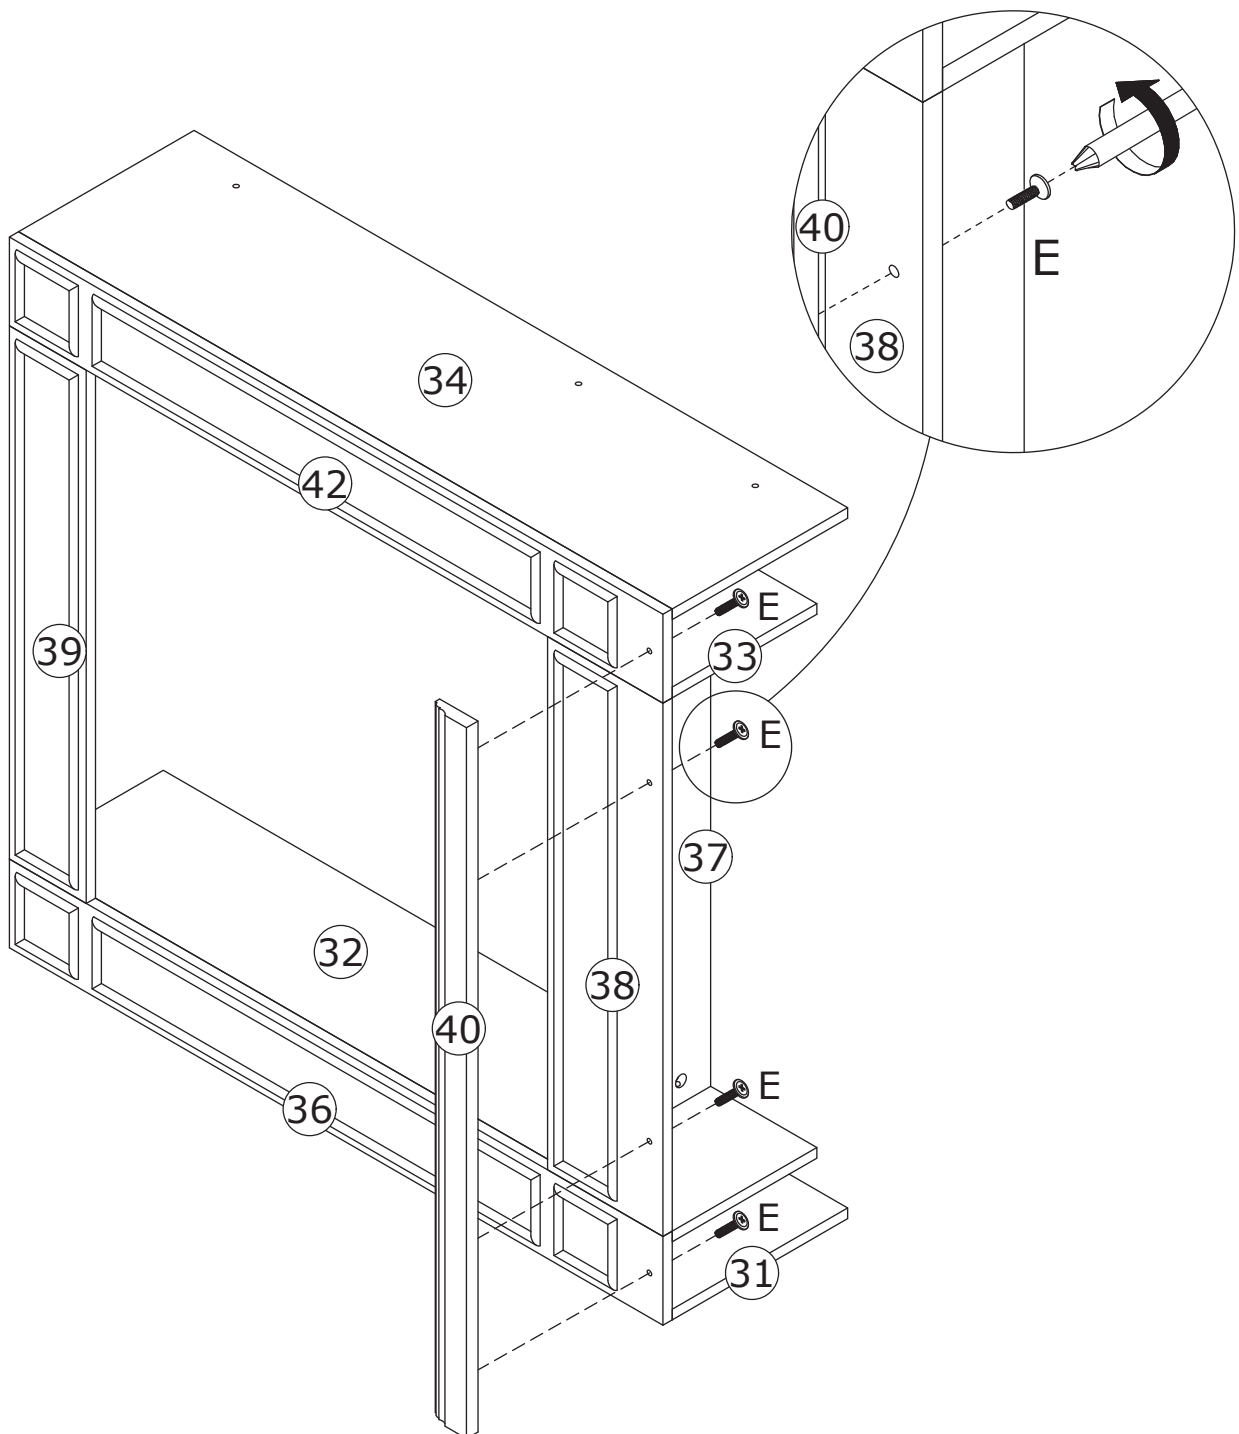



37

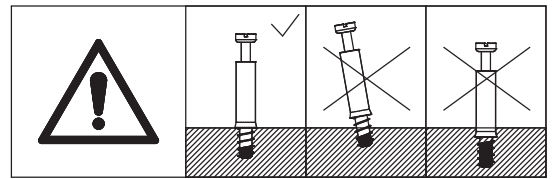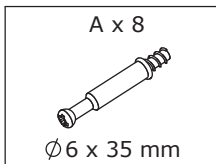




Screw eccentric rod (A)
onto part 41.

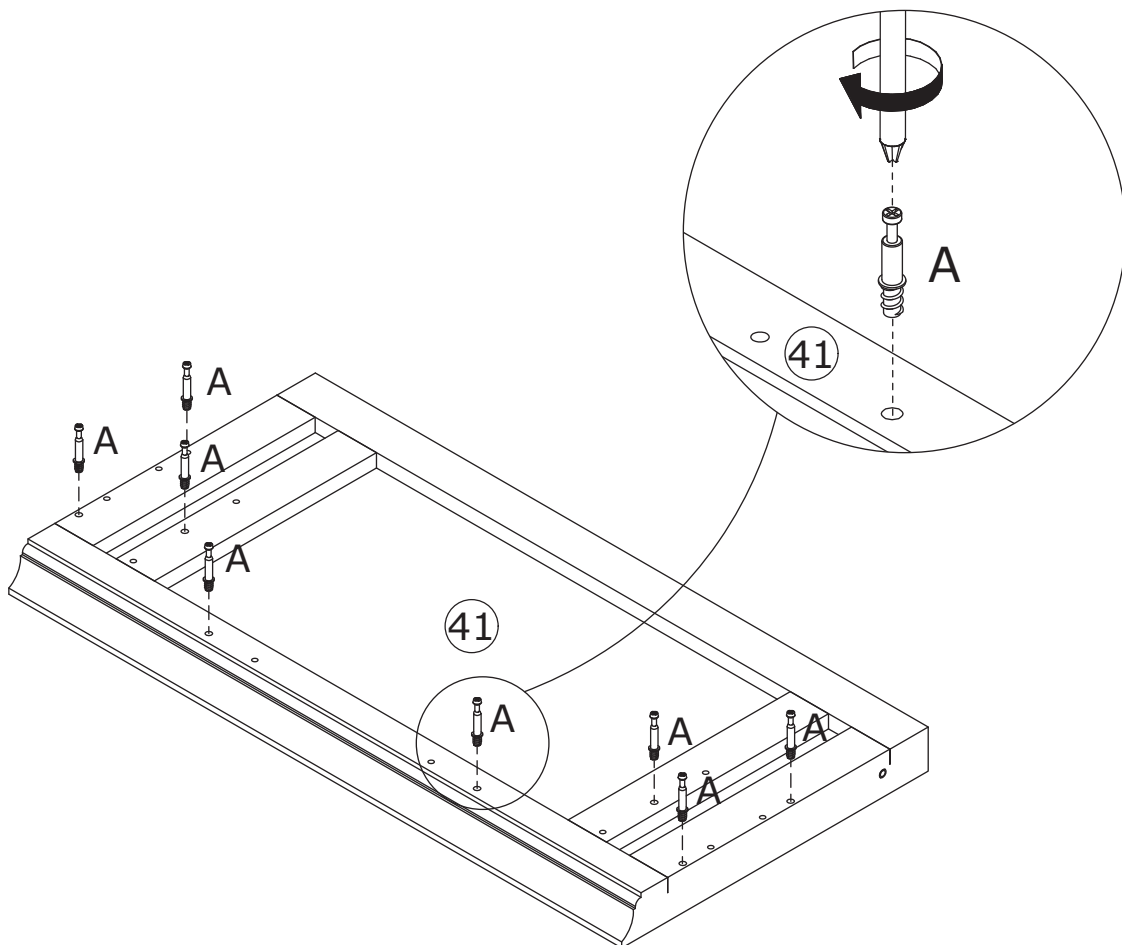

38

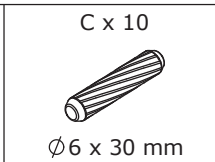
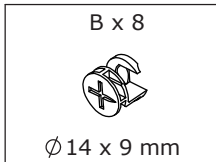


Connect part 41 to part 31, 32, 33, 34, and 39 using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.

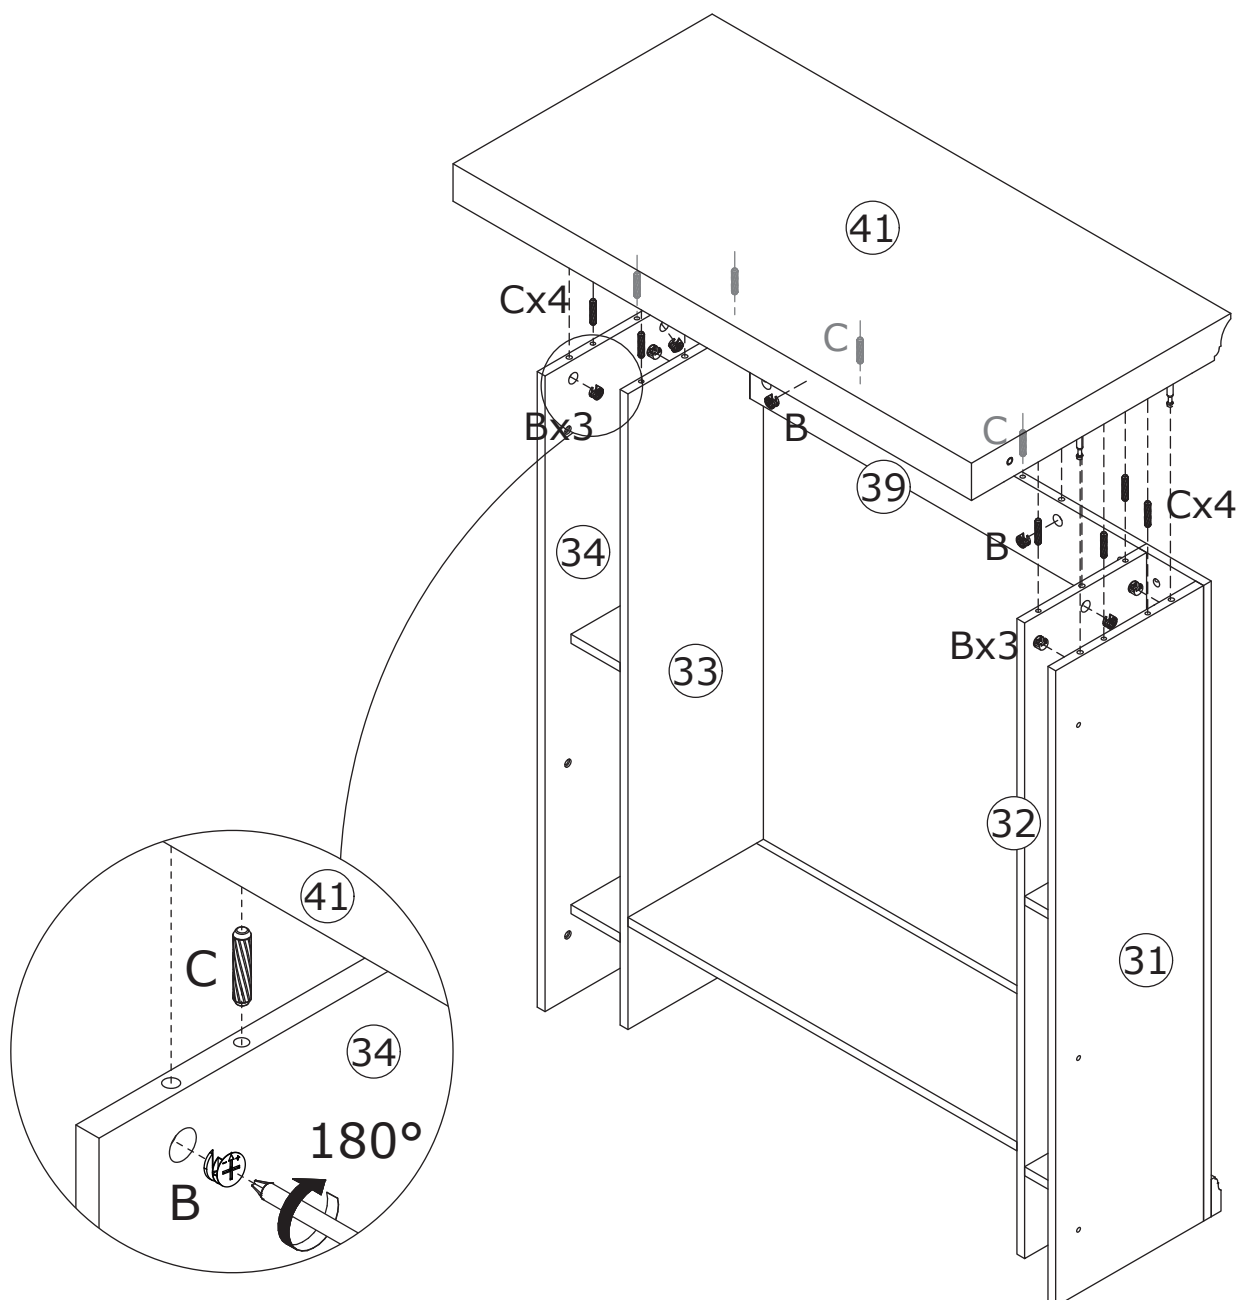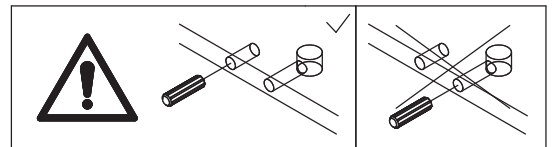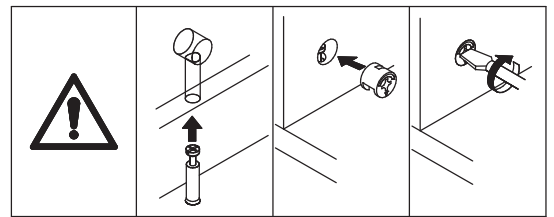


39

A x 4
Ø6 x 35 mm

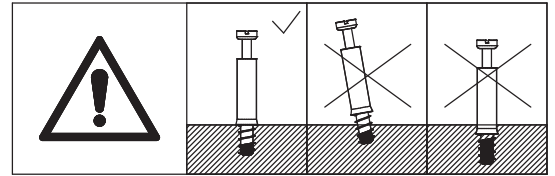

Screw eccentric rod (A)
onto part 24.

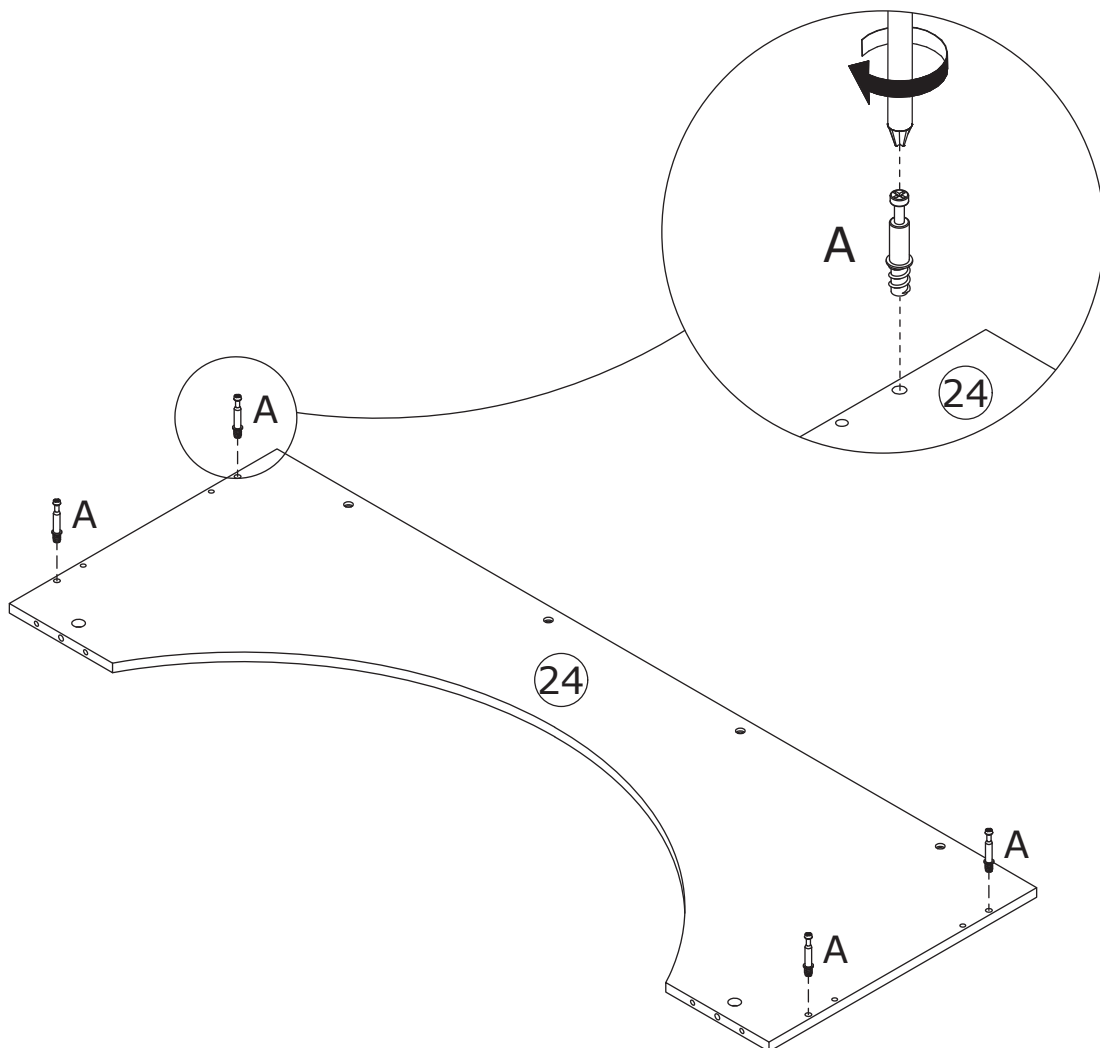

40

B x 4









Ø 14 x 9 mm


C x 4



Ø 6 x 30 mm

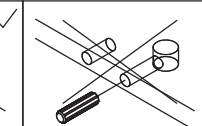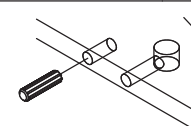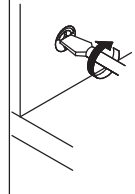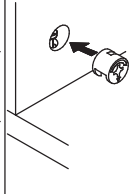

Connect part 25 and 26 to part 24 using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.

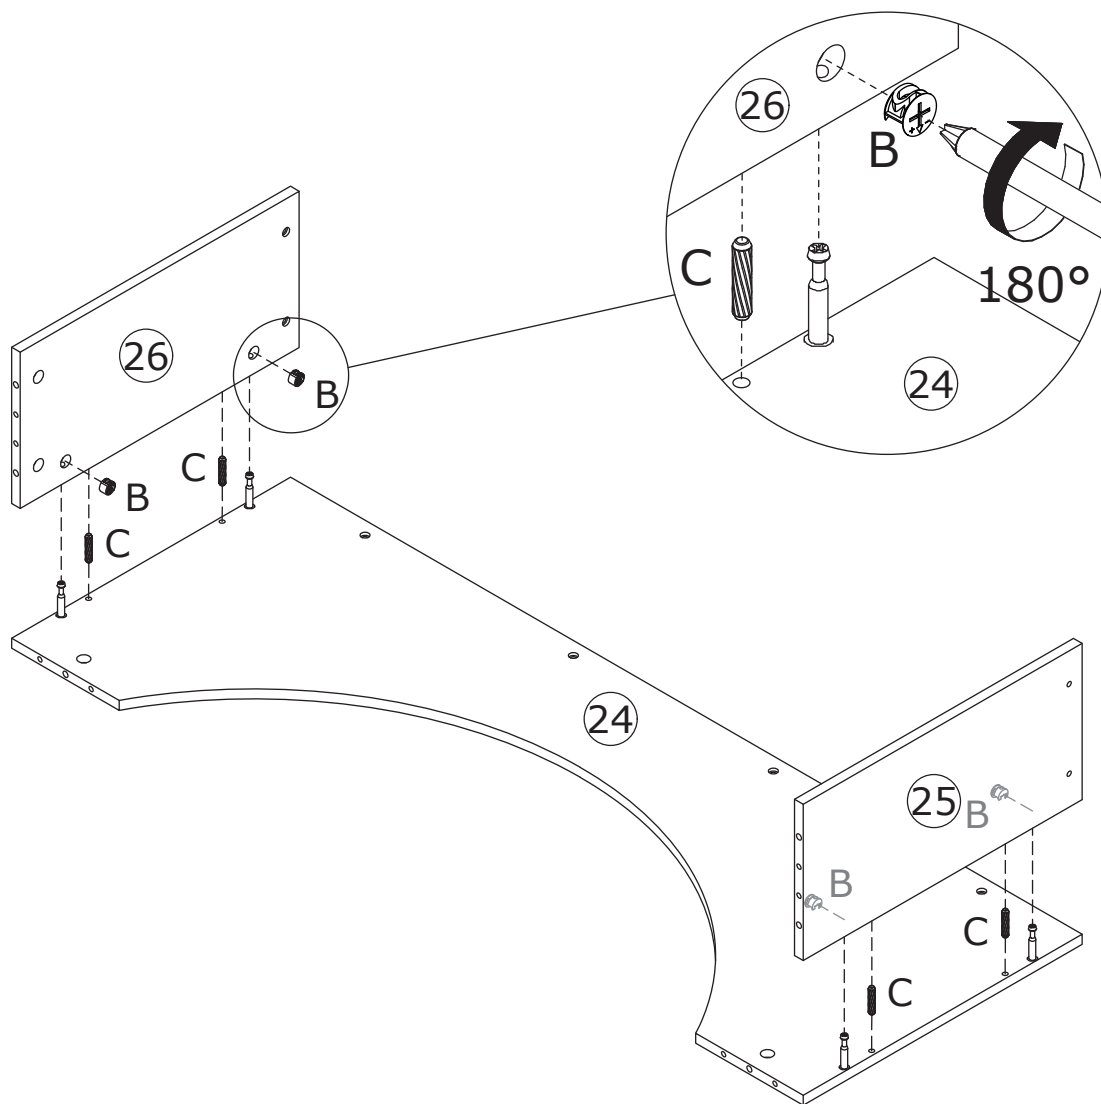

41




C x 6



D x 8




K x 2

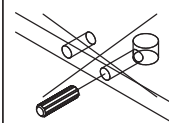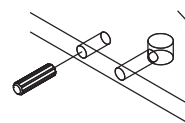

Connect part 27 to part 24, 25, and 26 using wooden dowel (C), then secure them with screw (D).

Secure anti-tipping device (K-1) onto part 27.

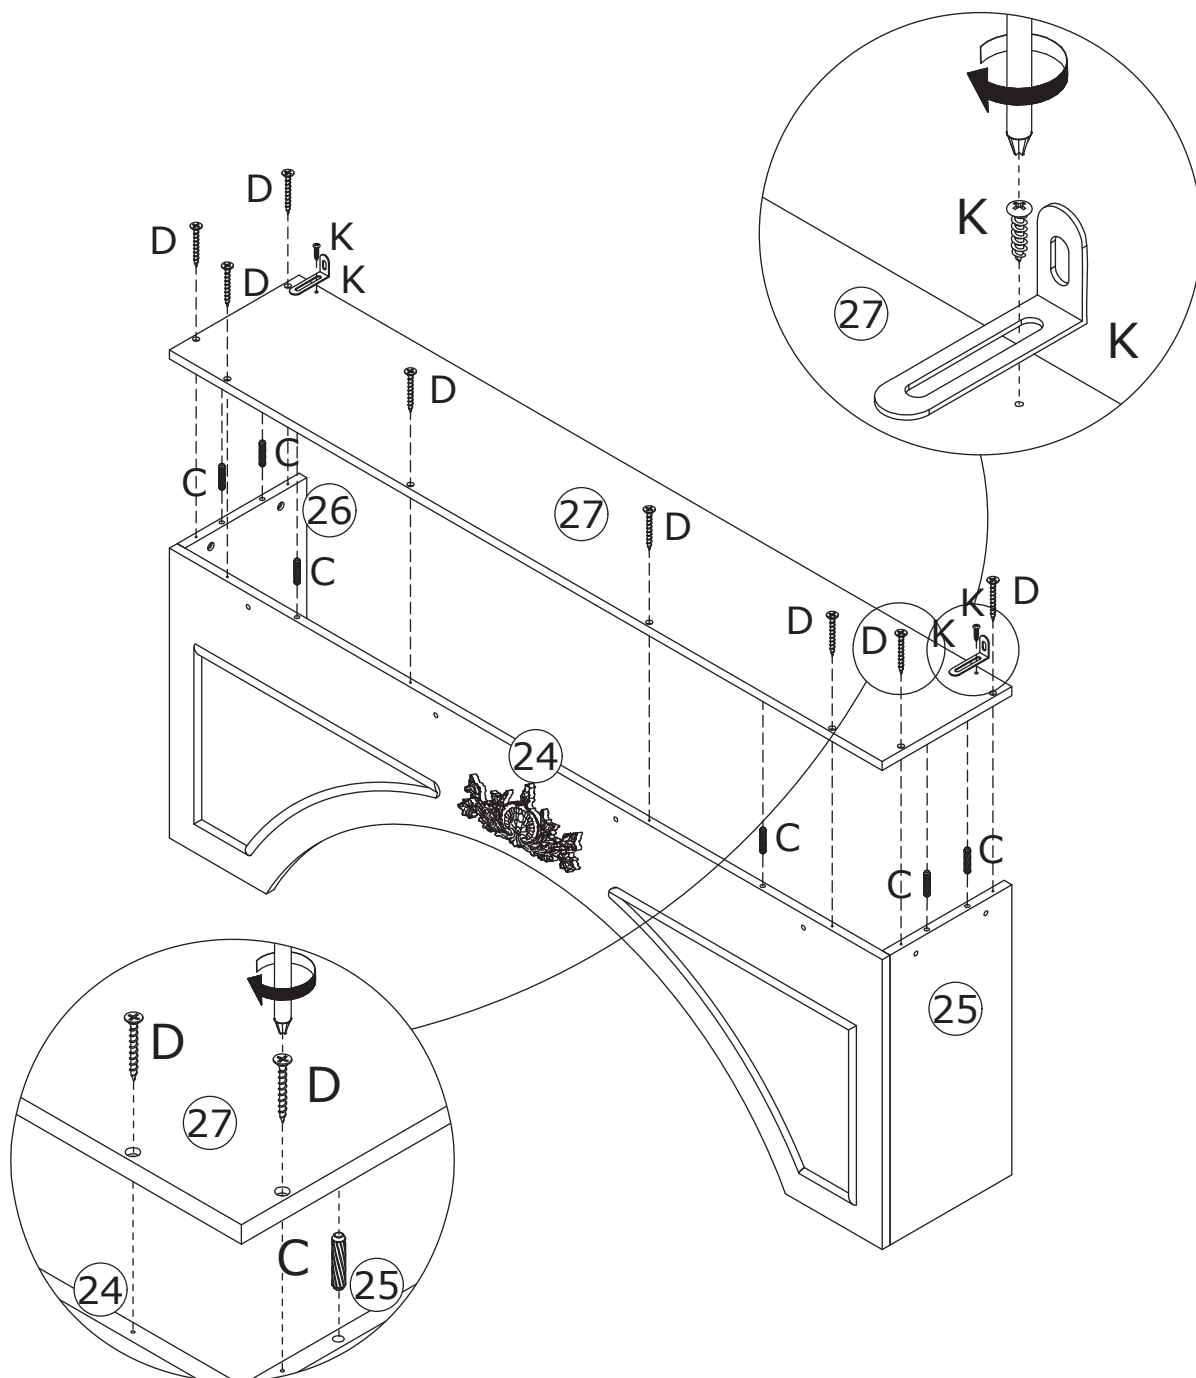


42


E x 8



M6 x 20 mm



Secure part 29, 28 and 30 to part 26, 24 and 25 using screw (E).

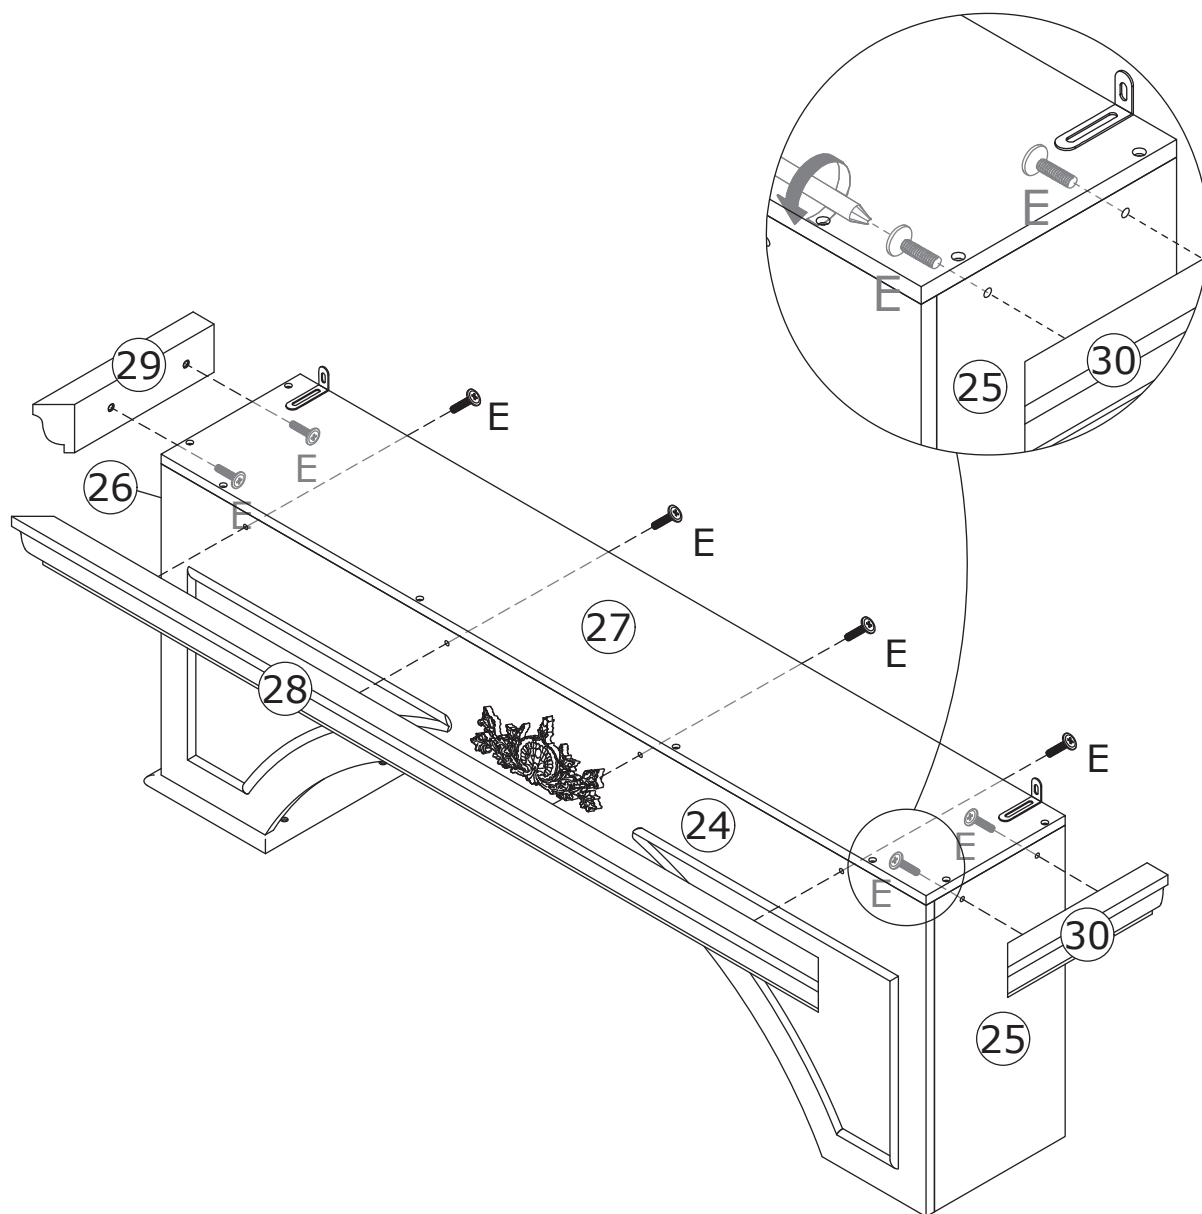

43

E x 2



M6 x 20 mm

I x 6




Ø6 x 12 mm


J x 6




Ø4 x 12 mm




Secure the three components using screw (E), (J) and nut (I).


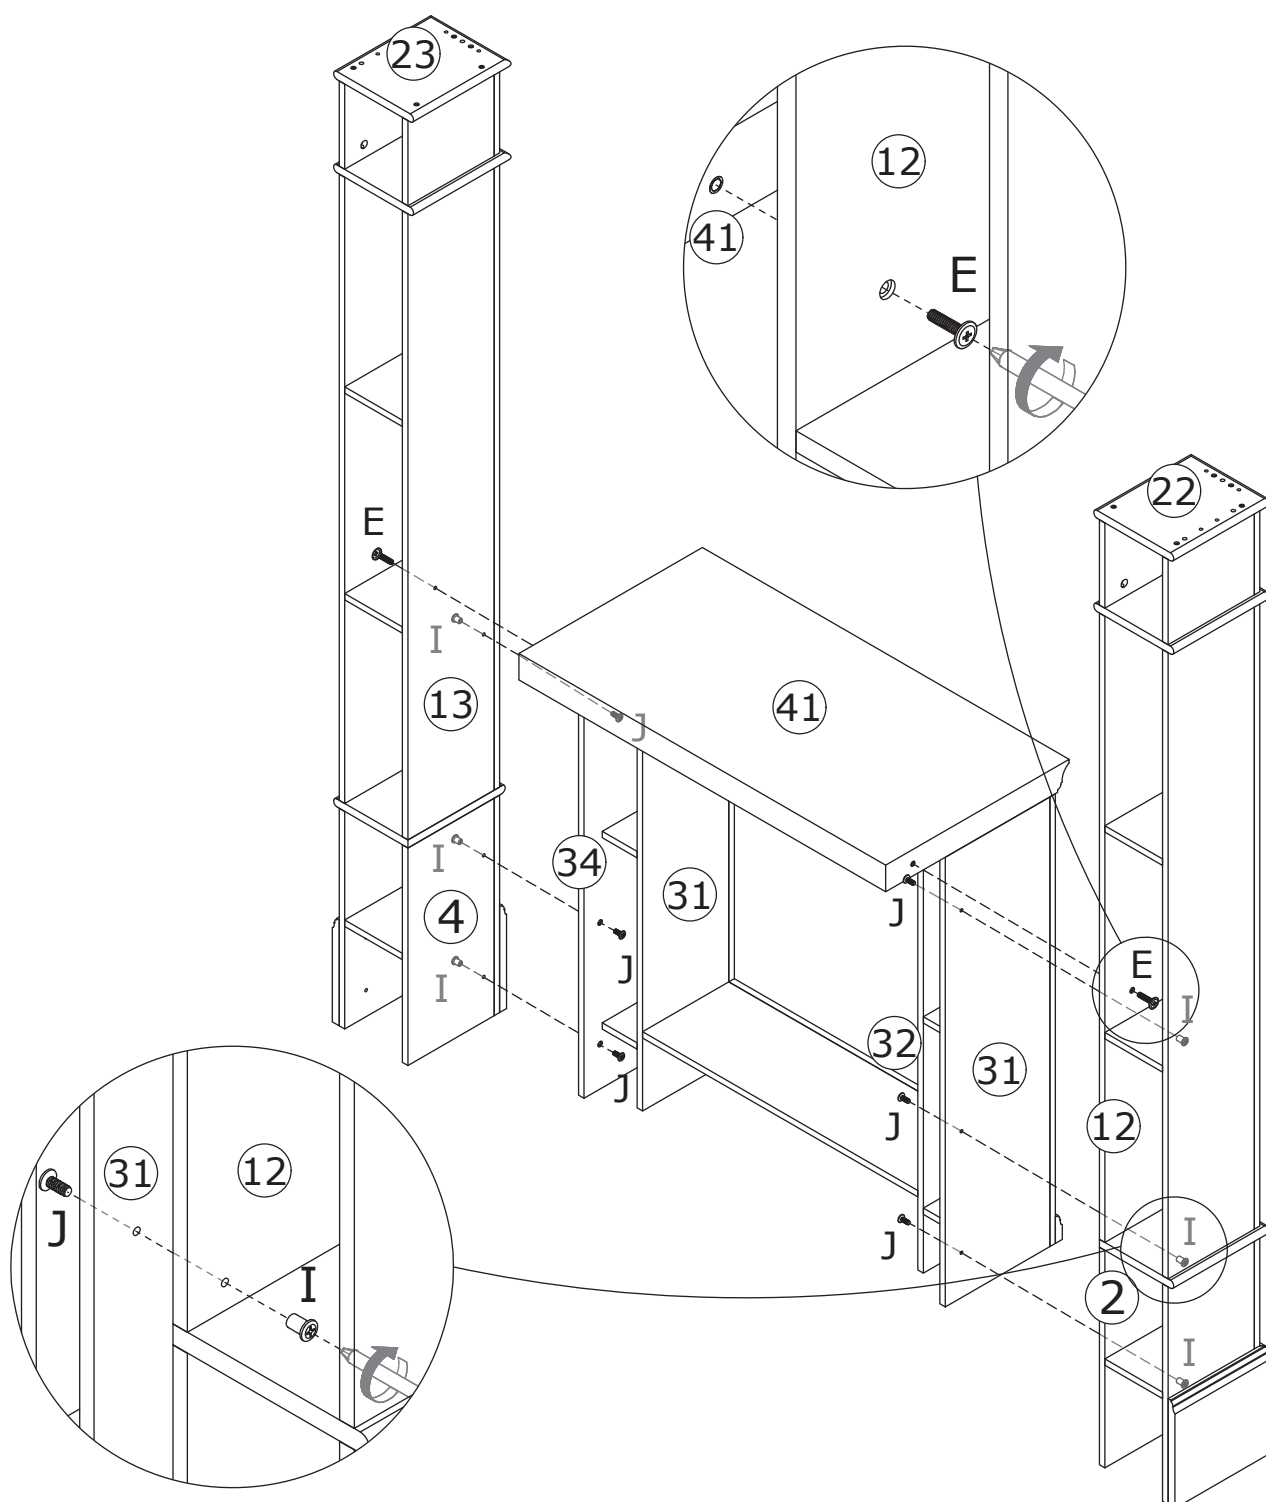


44

A x 6

 Ø6 x 35 mm

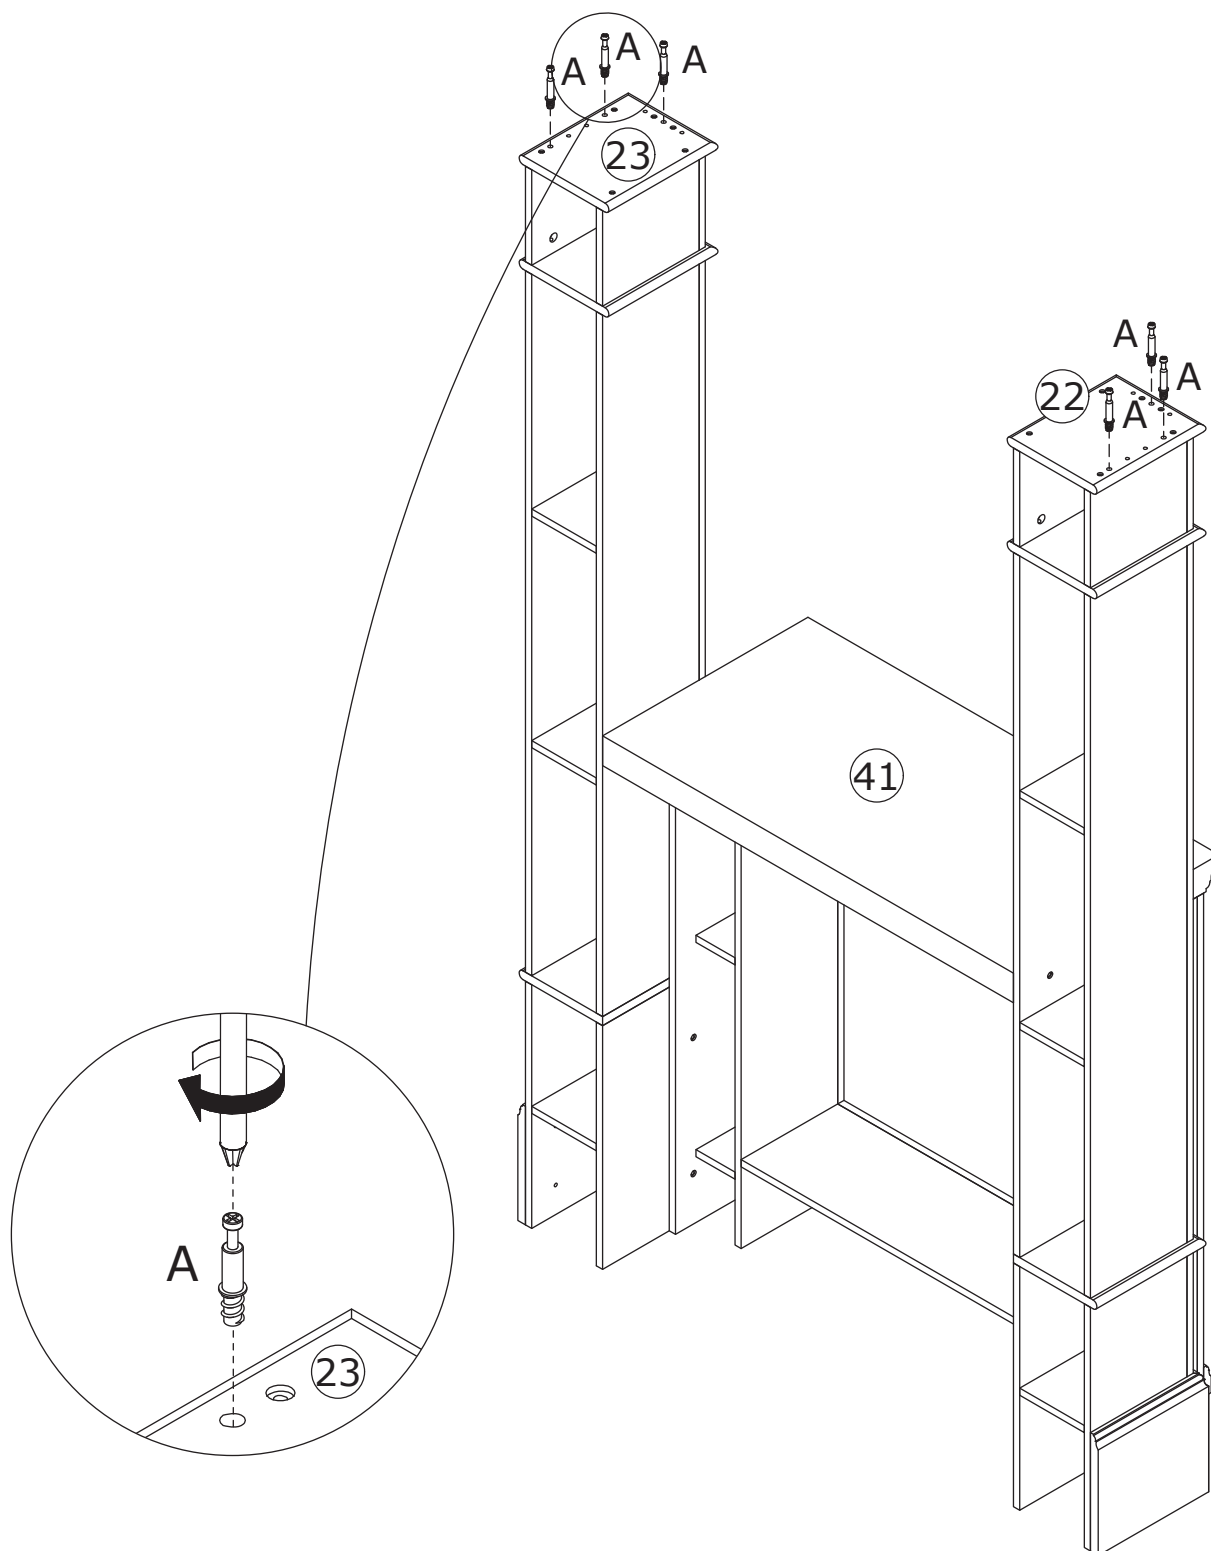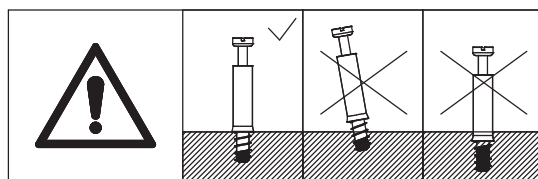



Screw eccentric rod (A) onto part 22 and 23.



50



Connect part 24, 25, and 26 to part 22 and 23 using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.

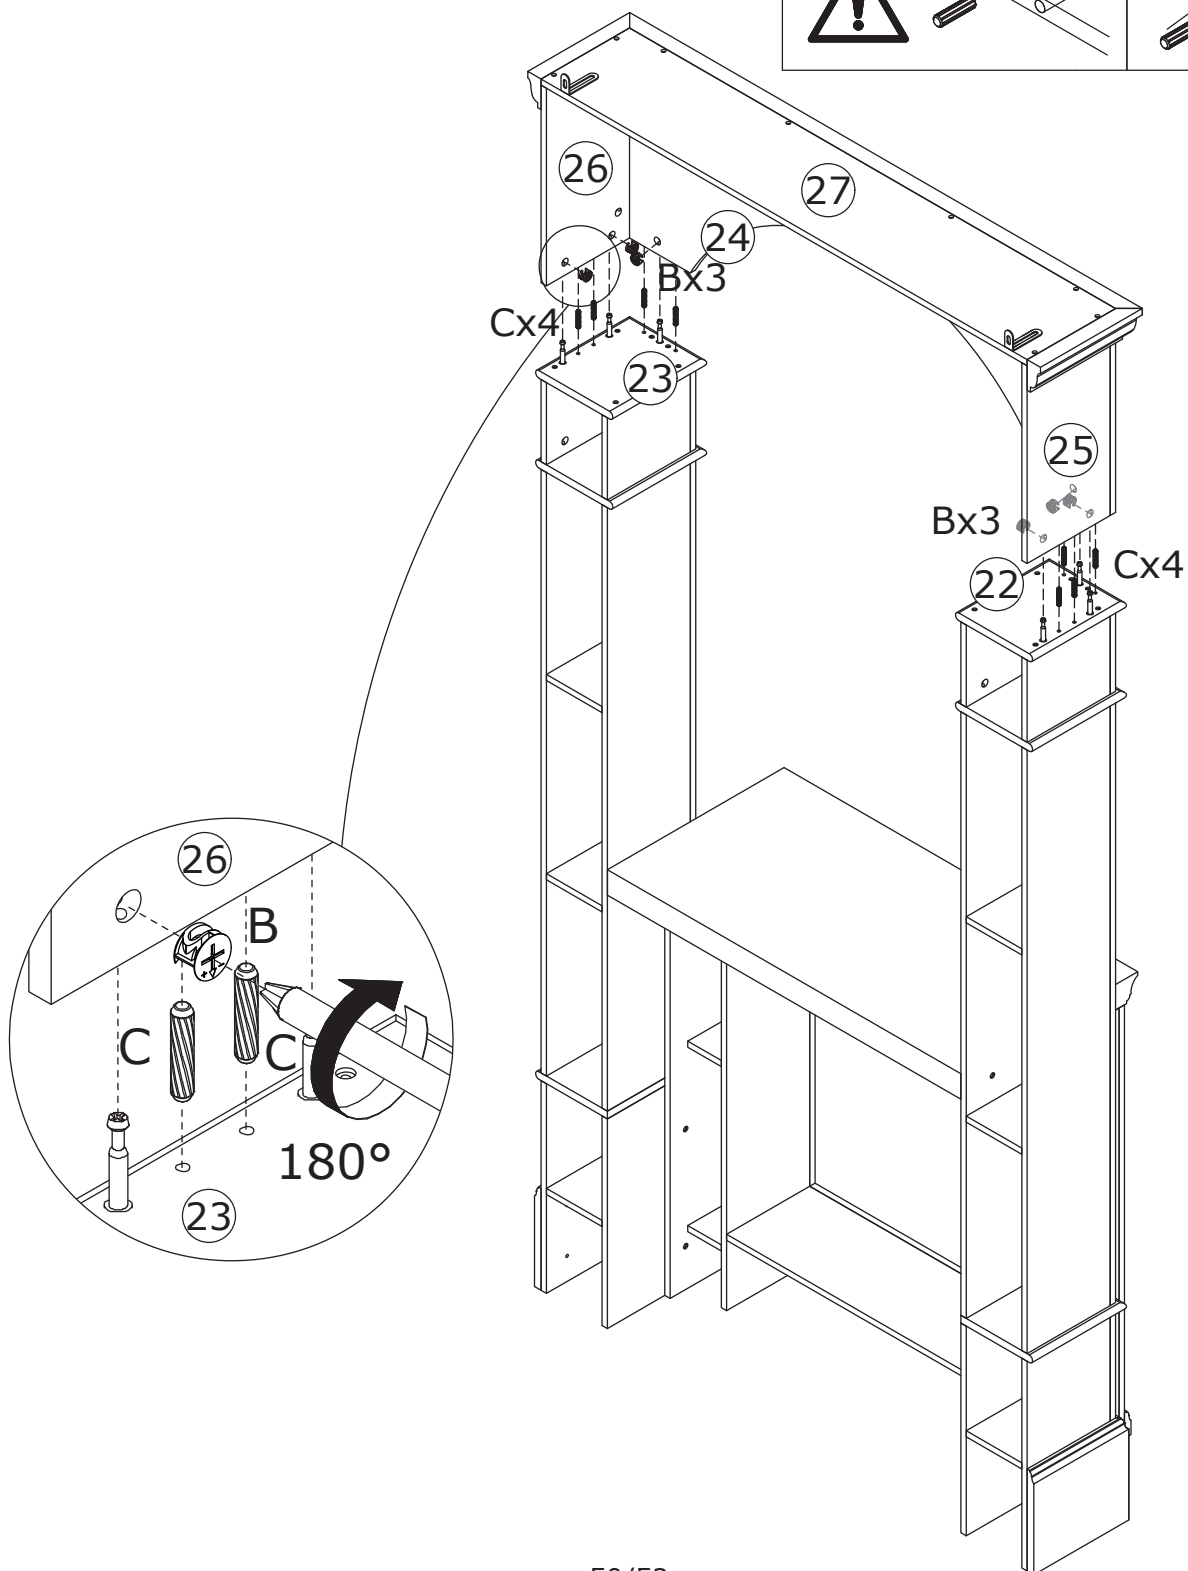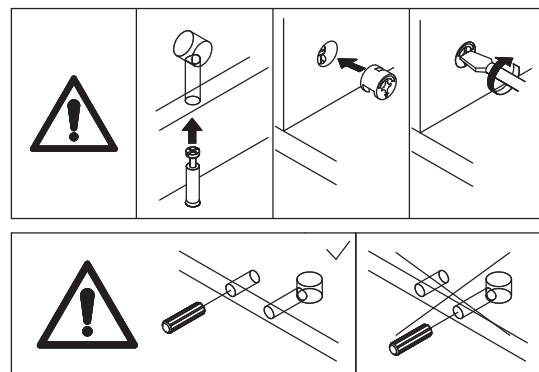


46


H x 2



Ø 3 x 10 mm






Secure the fireplace to the back of the cabinet body.

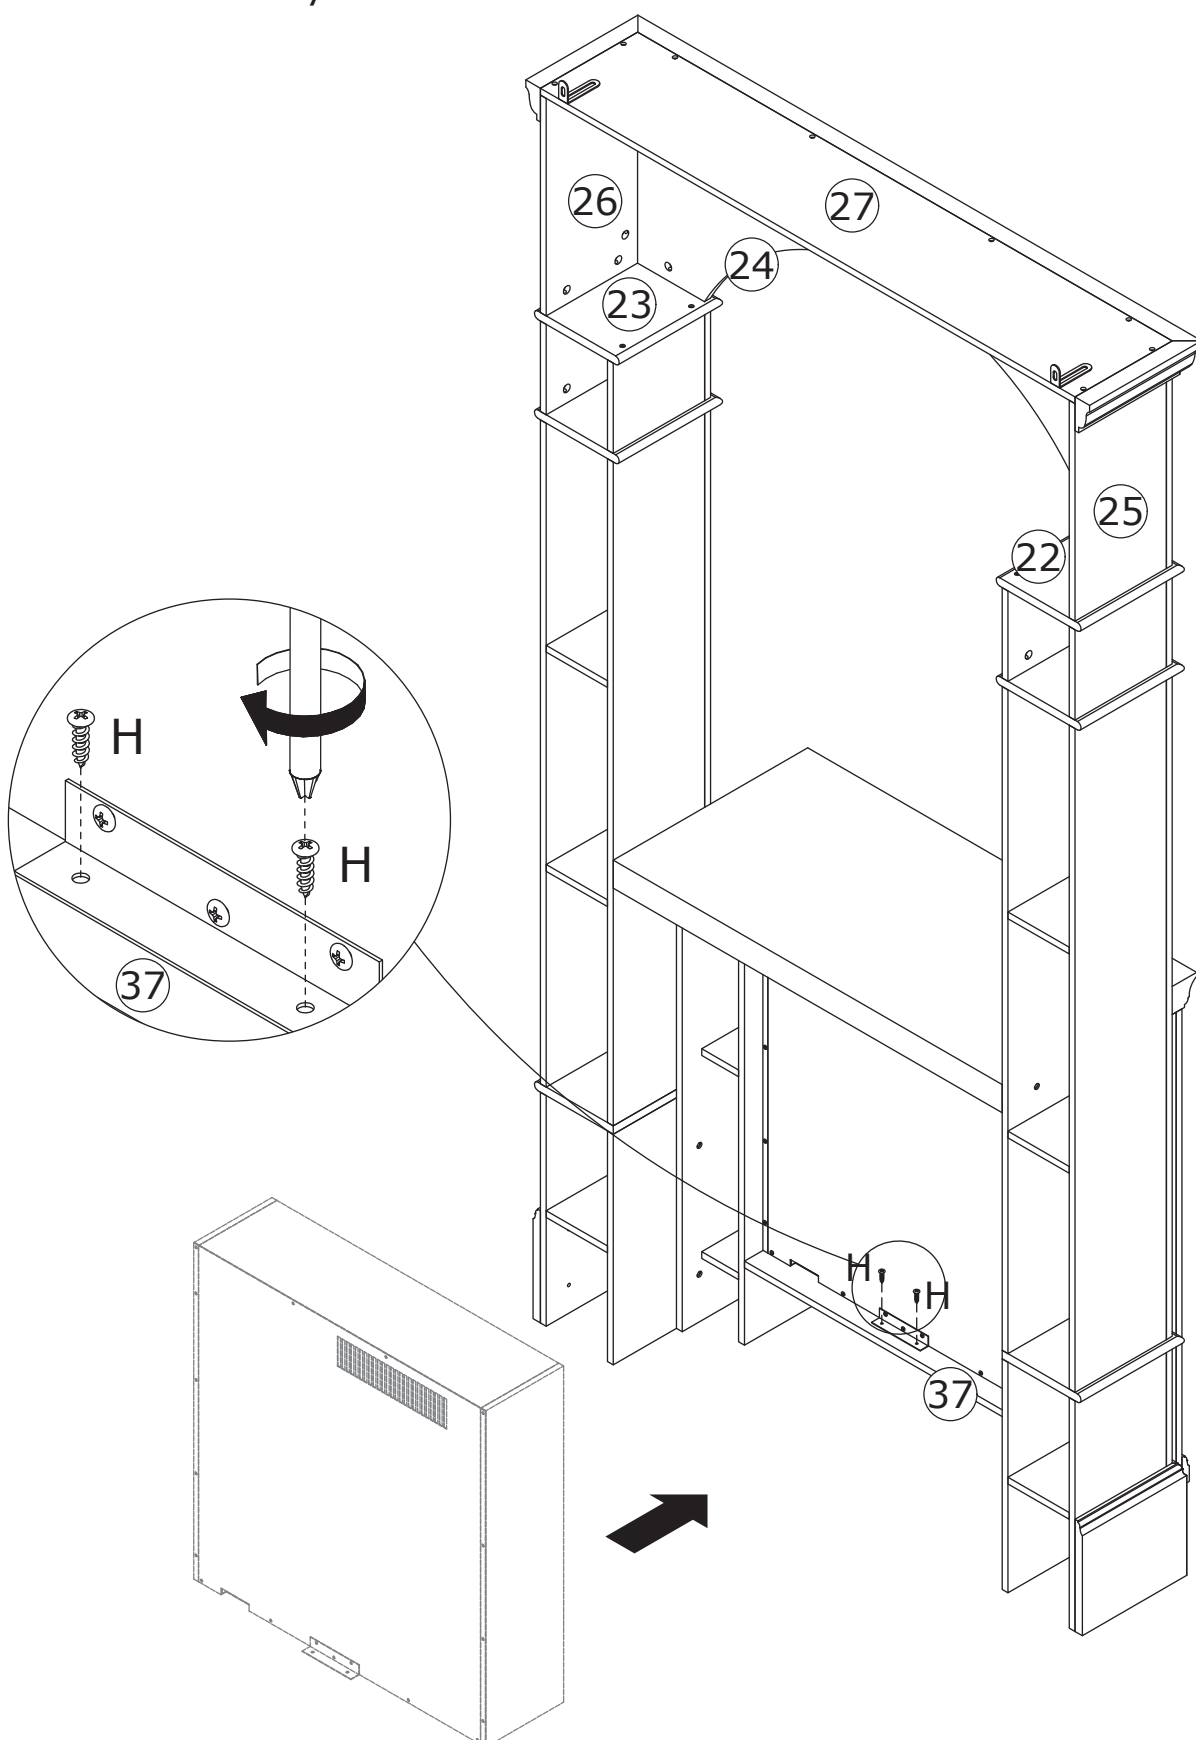


47


K x 2




Mark points on the wall, drill holes with an electric drill, tap in the plastic anchor (K-3).
Use screw (K-4) to screw through the anti-tipping device (K-1) into the plastic anchor (K-3).

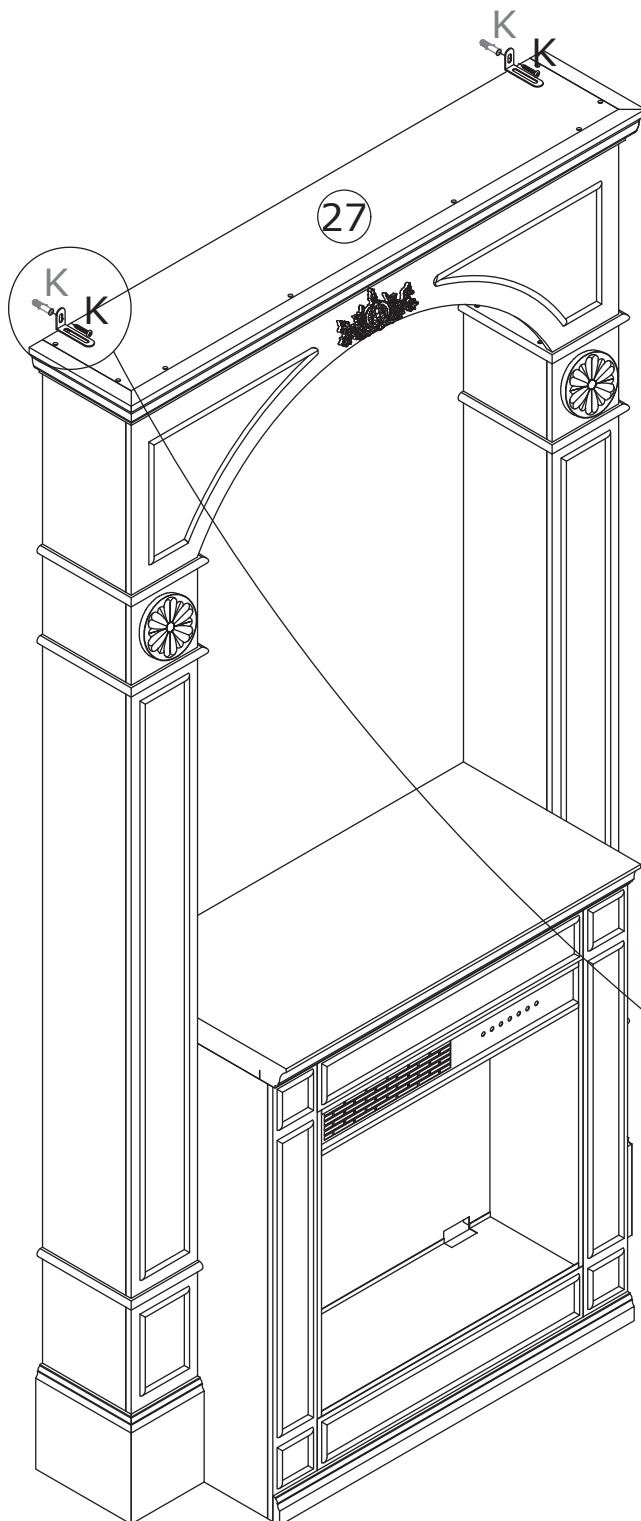


1.

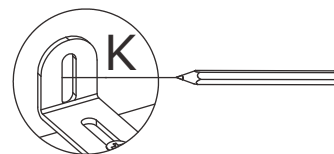



2.

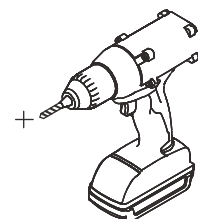

3.

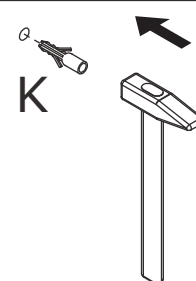

4.

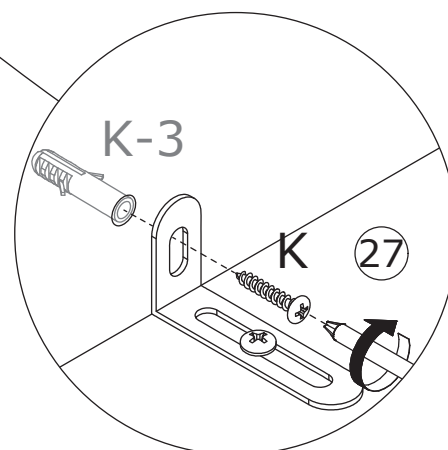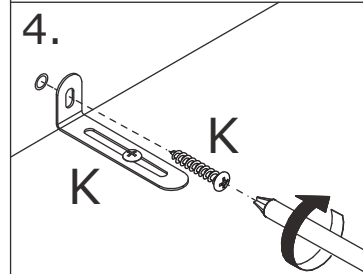

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



adelahu@fufugaga.com



208-820-0068