


Wood 7 Drawer Storage Cabinet

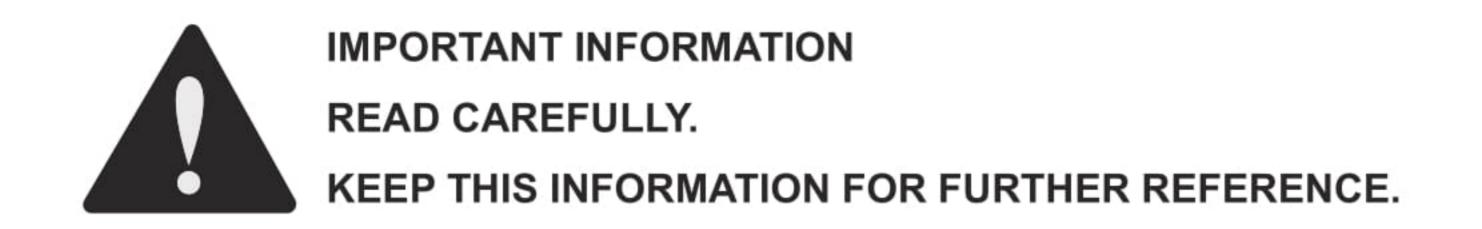

GENERAL GUIDELINES

- Please read the following instruction carefully and use the product accordingly.
- Please keep this manual and hand it over when you transfer the product.
- This summary may not include every detail of all variations and considered steps.
 Please <u>contact us</u> when further information and help are needed.

NOTES

- Please follow the assembly instructions precisely and only use the product as intended.
- If an odor is present when first opening the package, please leave the unwrapped product in a shaded and ventilated area for a few days to air out.
- Prior to assembly, please check the product for defects or missing accessories. If any
 defects are found or accessories are missing, do not use product as damage or injury
 may occur;

Please contact us for assistance and replacement.


- It is suggested you regularly check the products bolts and connections to ensure safe use.
- Assemble the item on a soft flat and clean surface to avoid scratches and damage.
- It is recommended that two people assemble this product.

WARNINGS

- During assembly, keep parts and packaging materials away from children and pets as there could cause injury and are a potential choking hazard.
- Avoid sharp objects or corrosive chemicals to prevent damage to the product.
- Please open the item slowly and cautiously to avoid pinching your hands by metal joints, especially children.

ANTI-TIP WARNING

- Serious or fatal crushing injuries can occur from furniture tip-over. To prevent this furniture from tipping over it must be permanently fixed to the wall.
- Since different wall materials require different types of fixing device, for advice on suitable fixing systems, contact your local specialized dealer.

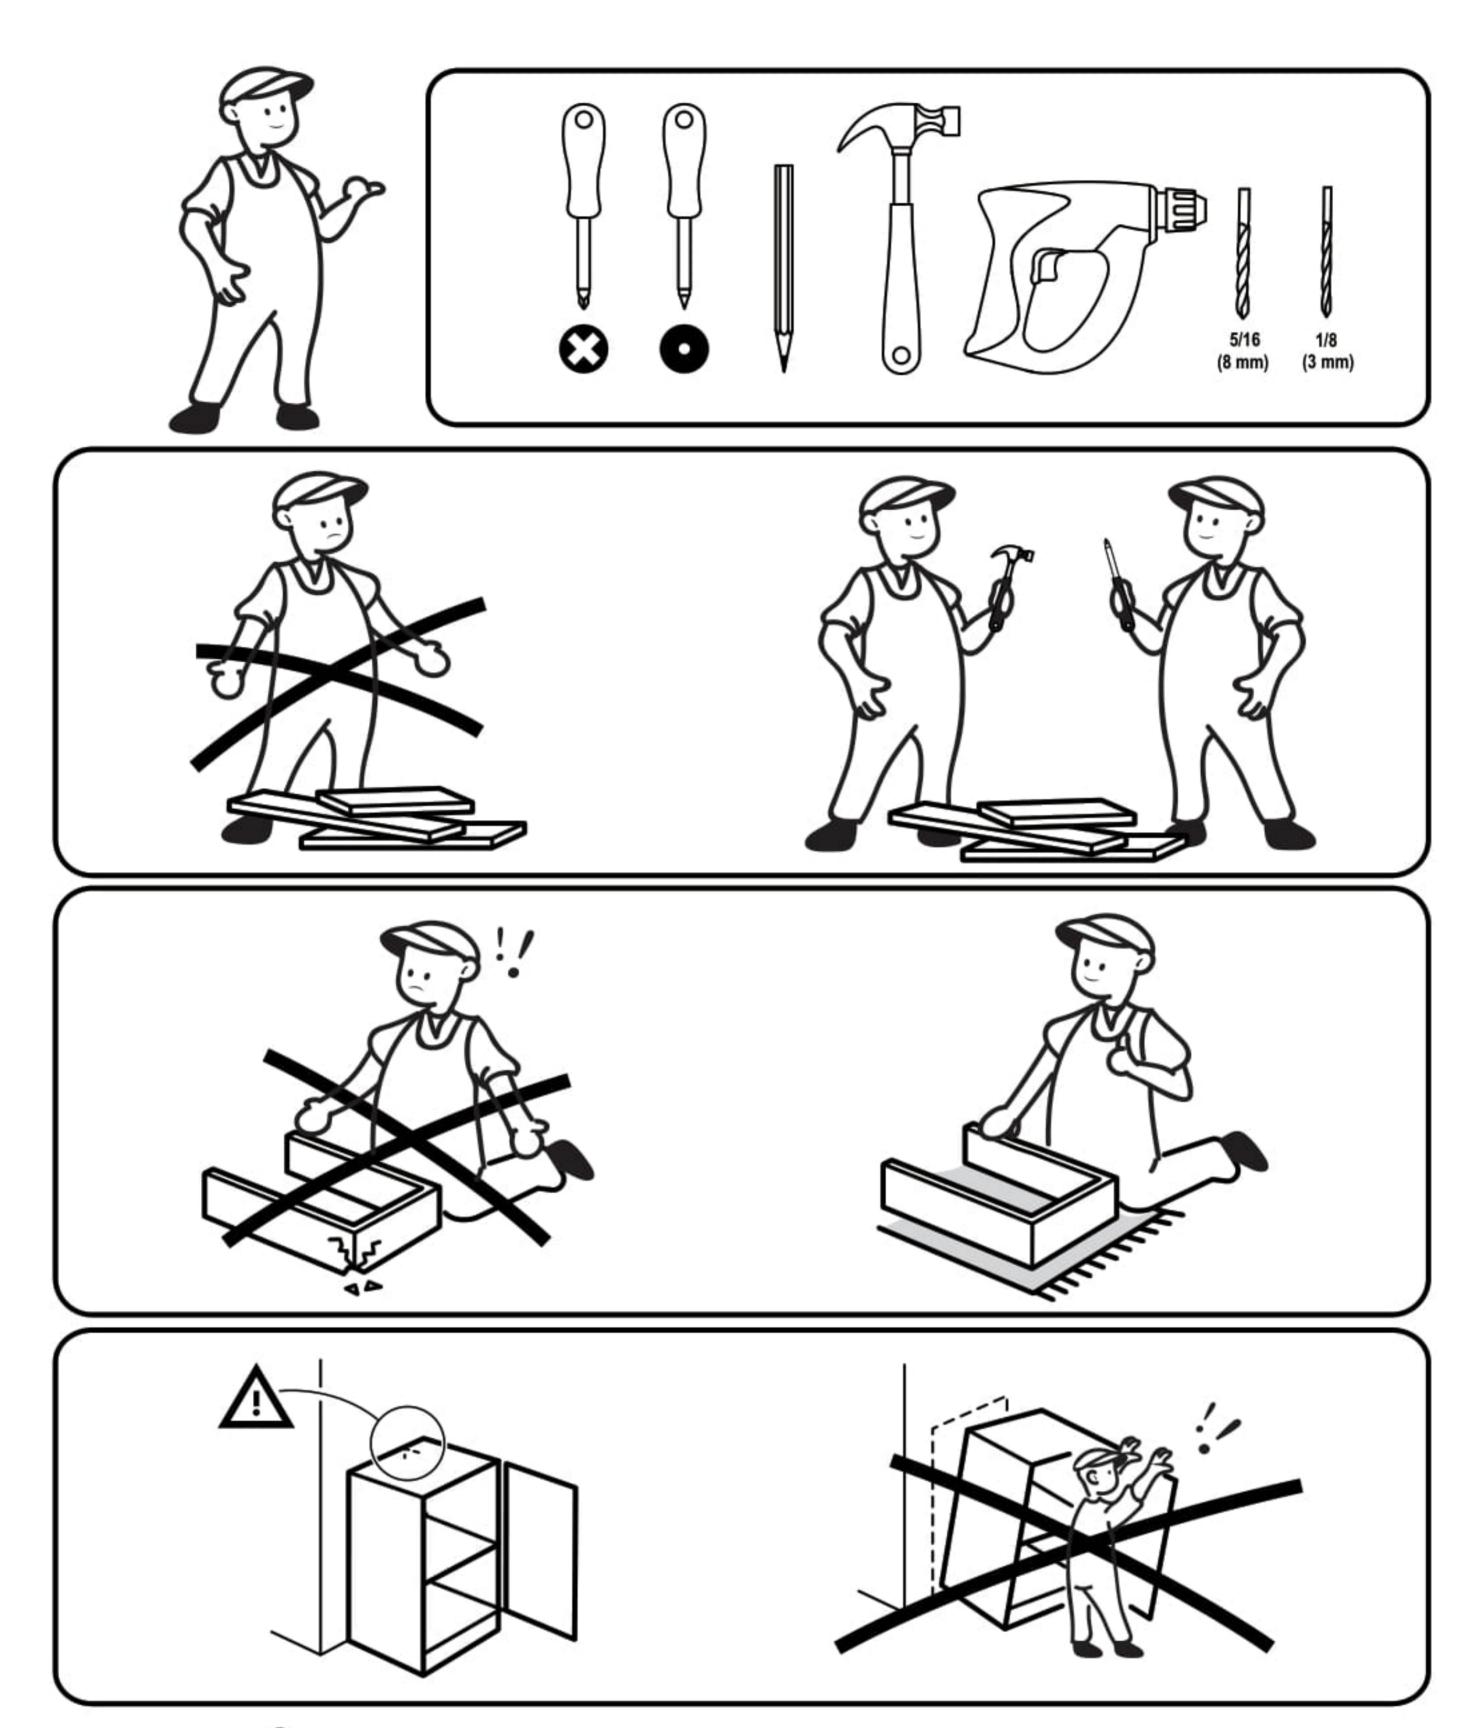





If you have any further questions, please feel free to contact us

We will reply ASAP.


- Before installation, please make sure you have all the hardware, the serial numbers are properly labeled corresponding to the list, and the quantity is correct.
- Enjoy your new purchase!


EXPLODED DRAWING

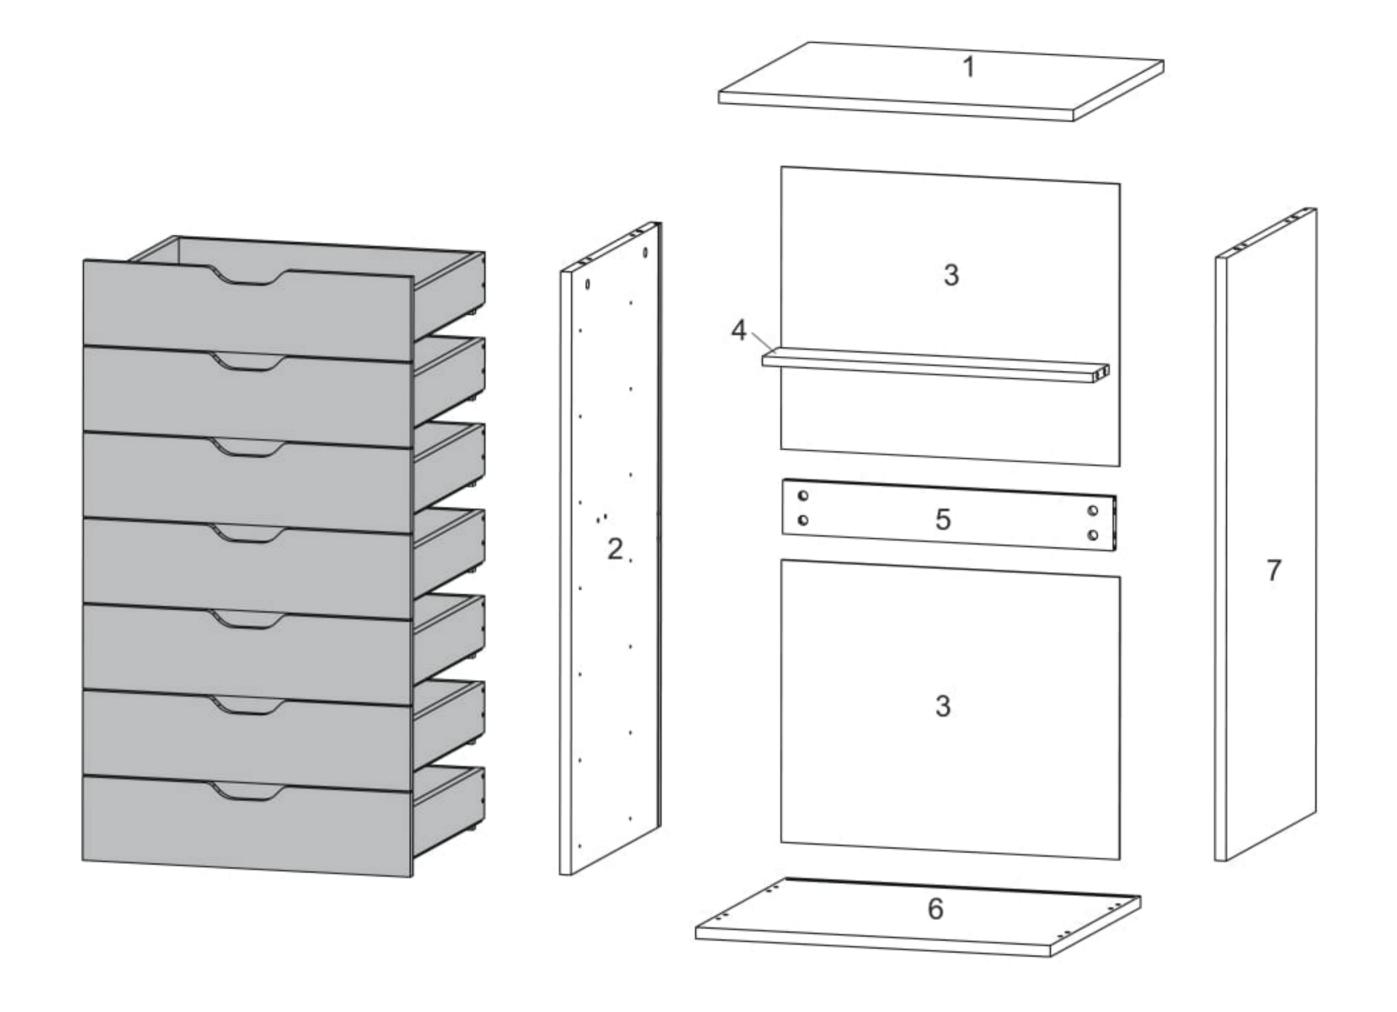

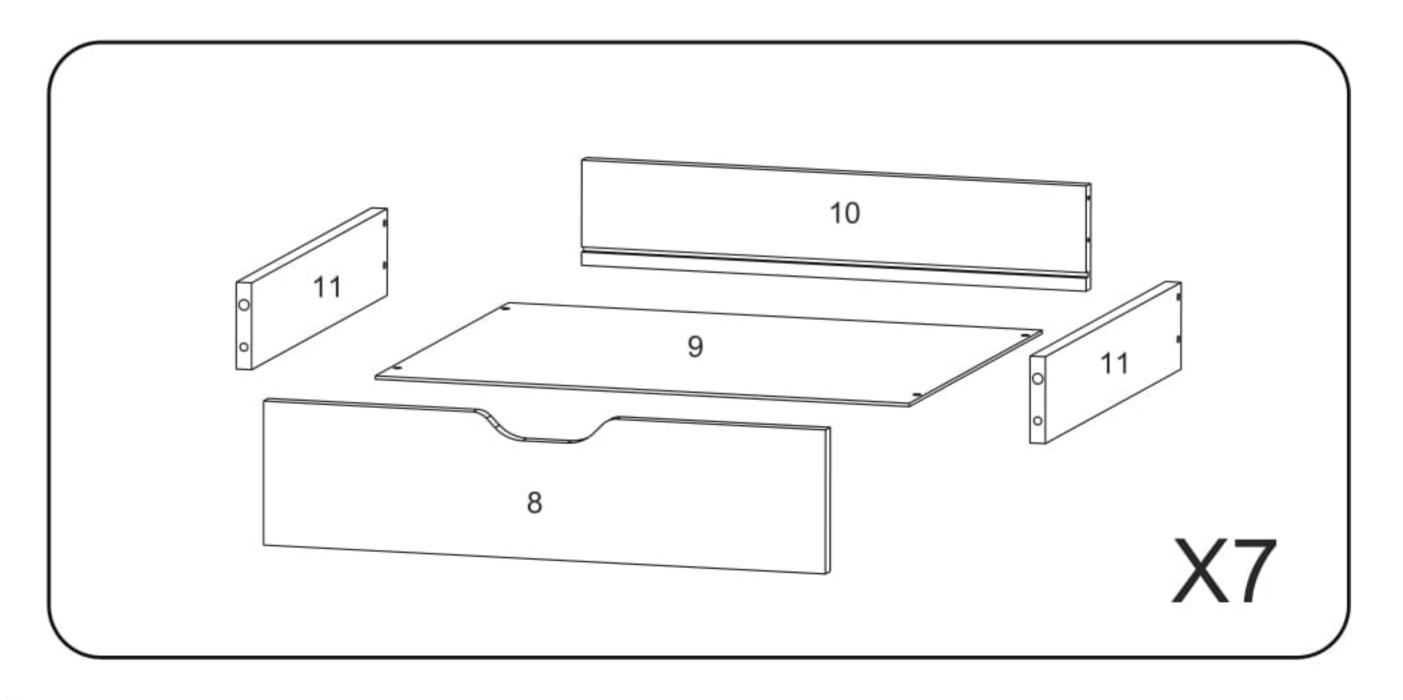


PARTS

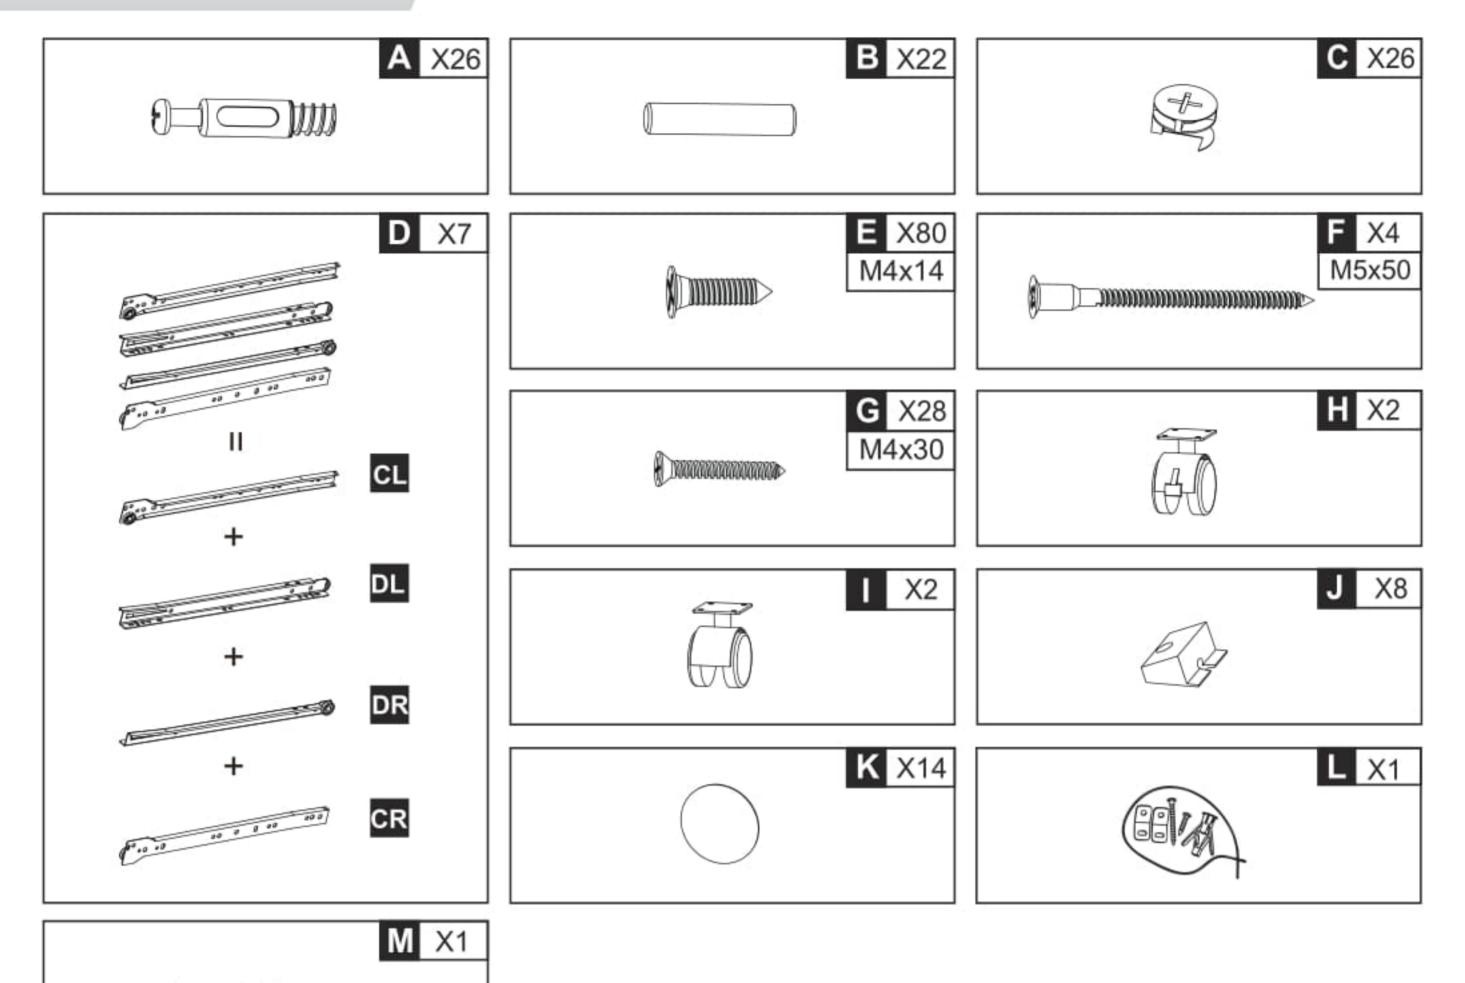




REMARK

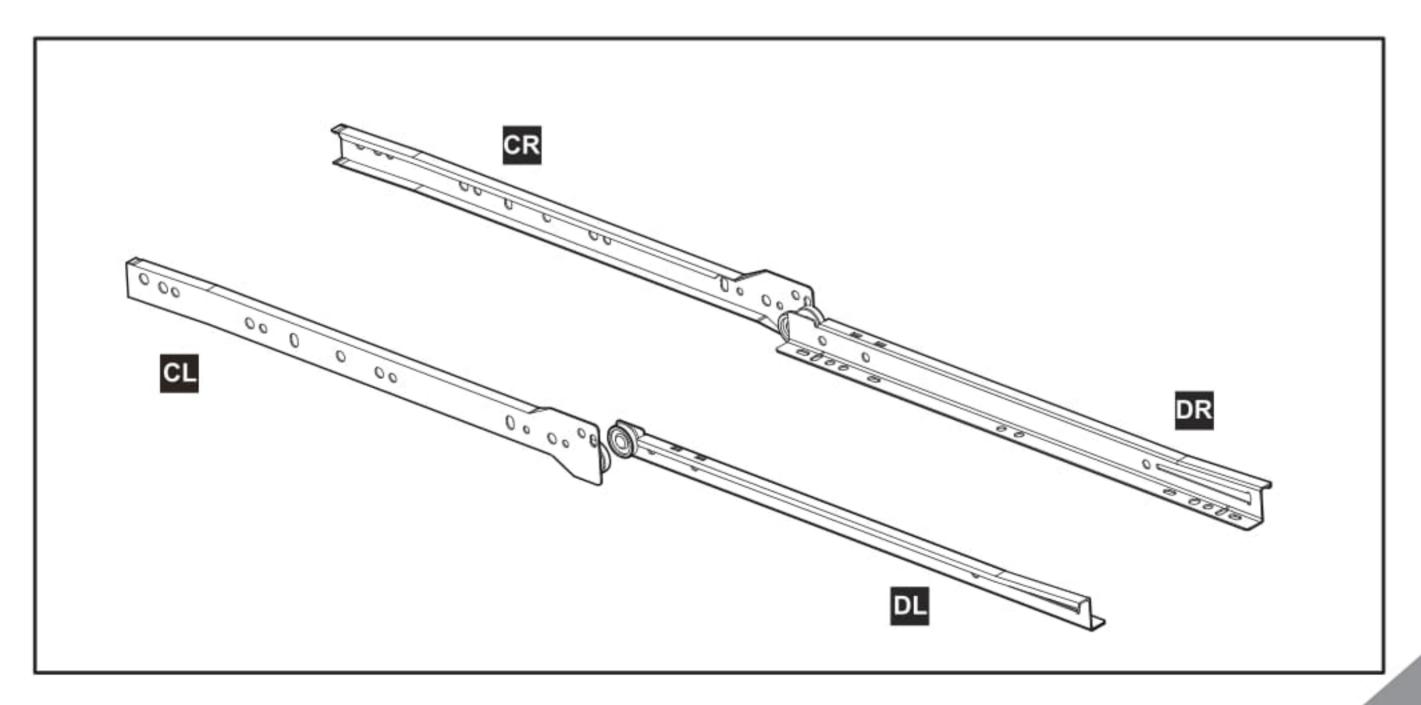

REMARK


MINIFIX POSITION

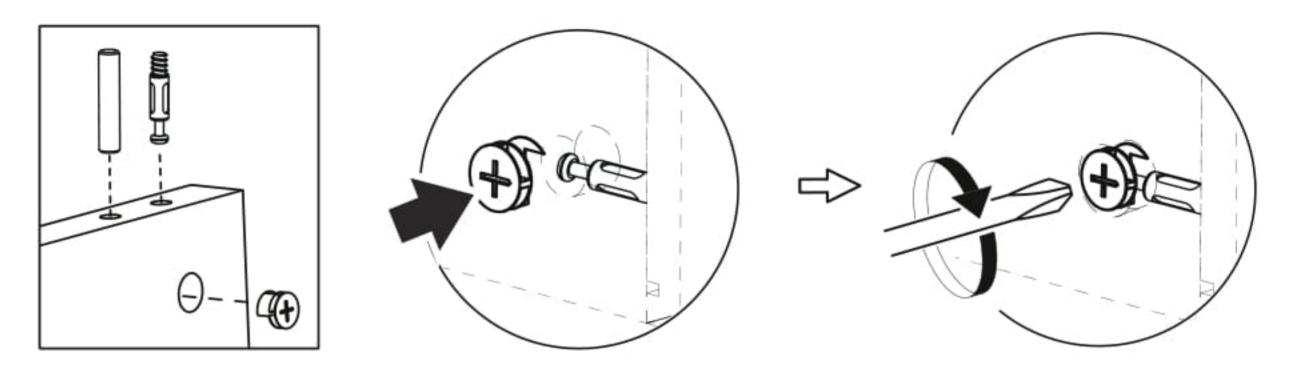





REMARK

1. Put a blanket under the product to avoid scratch or damage.

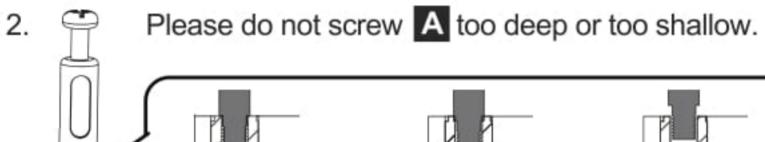


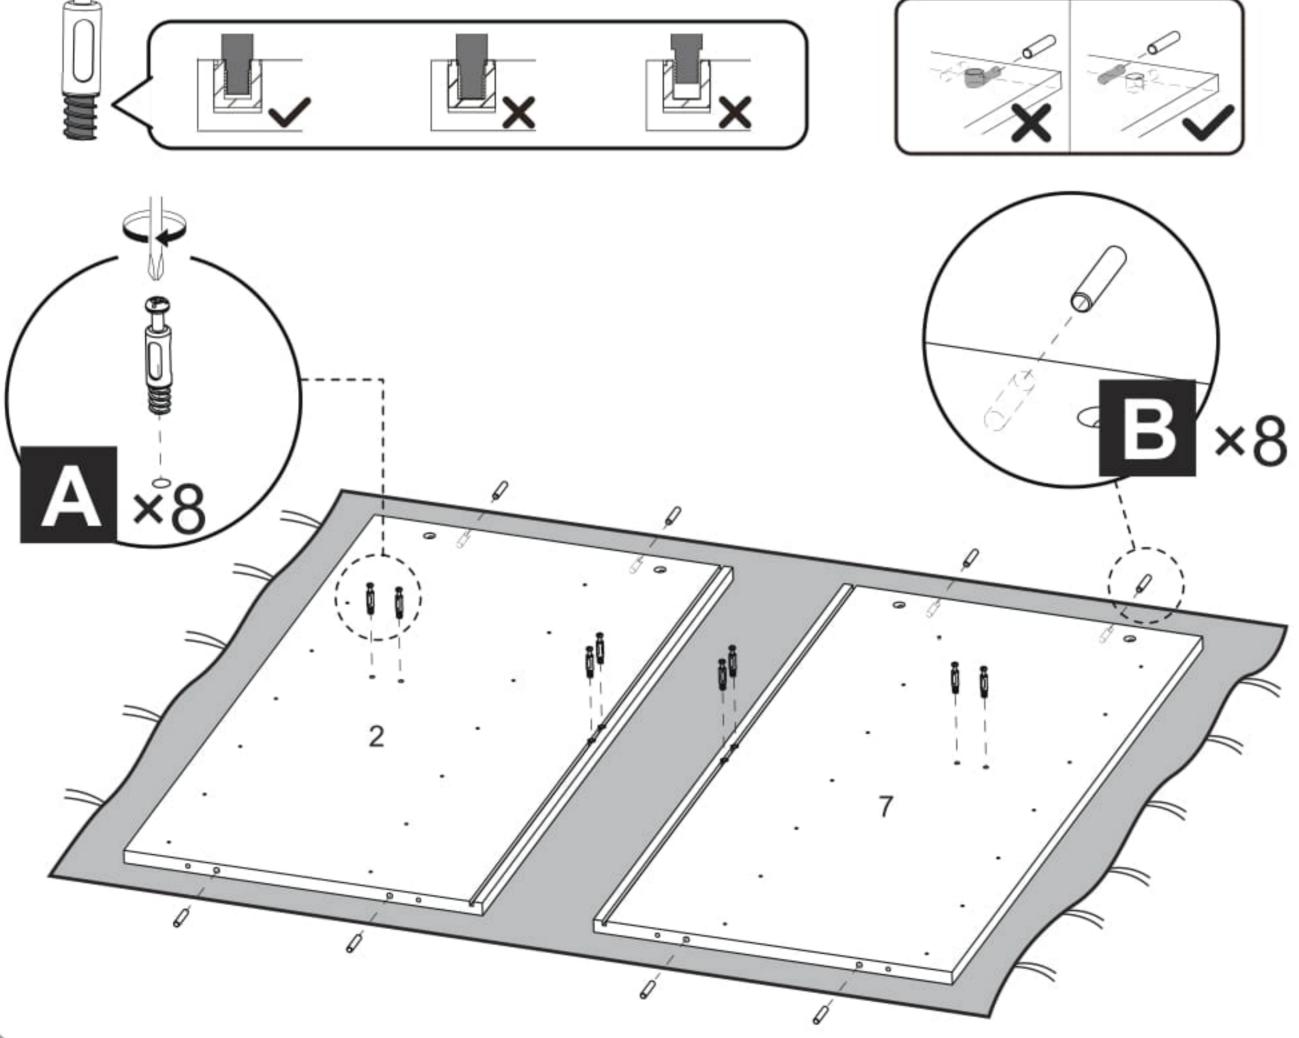


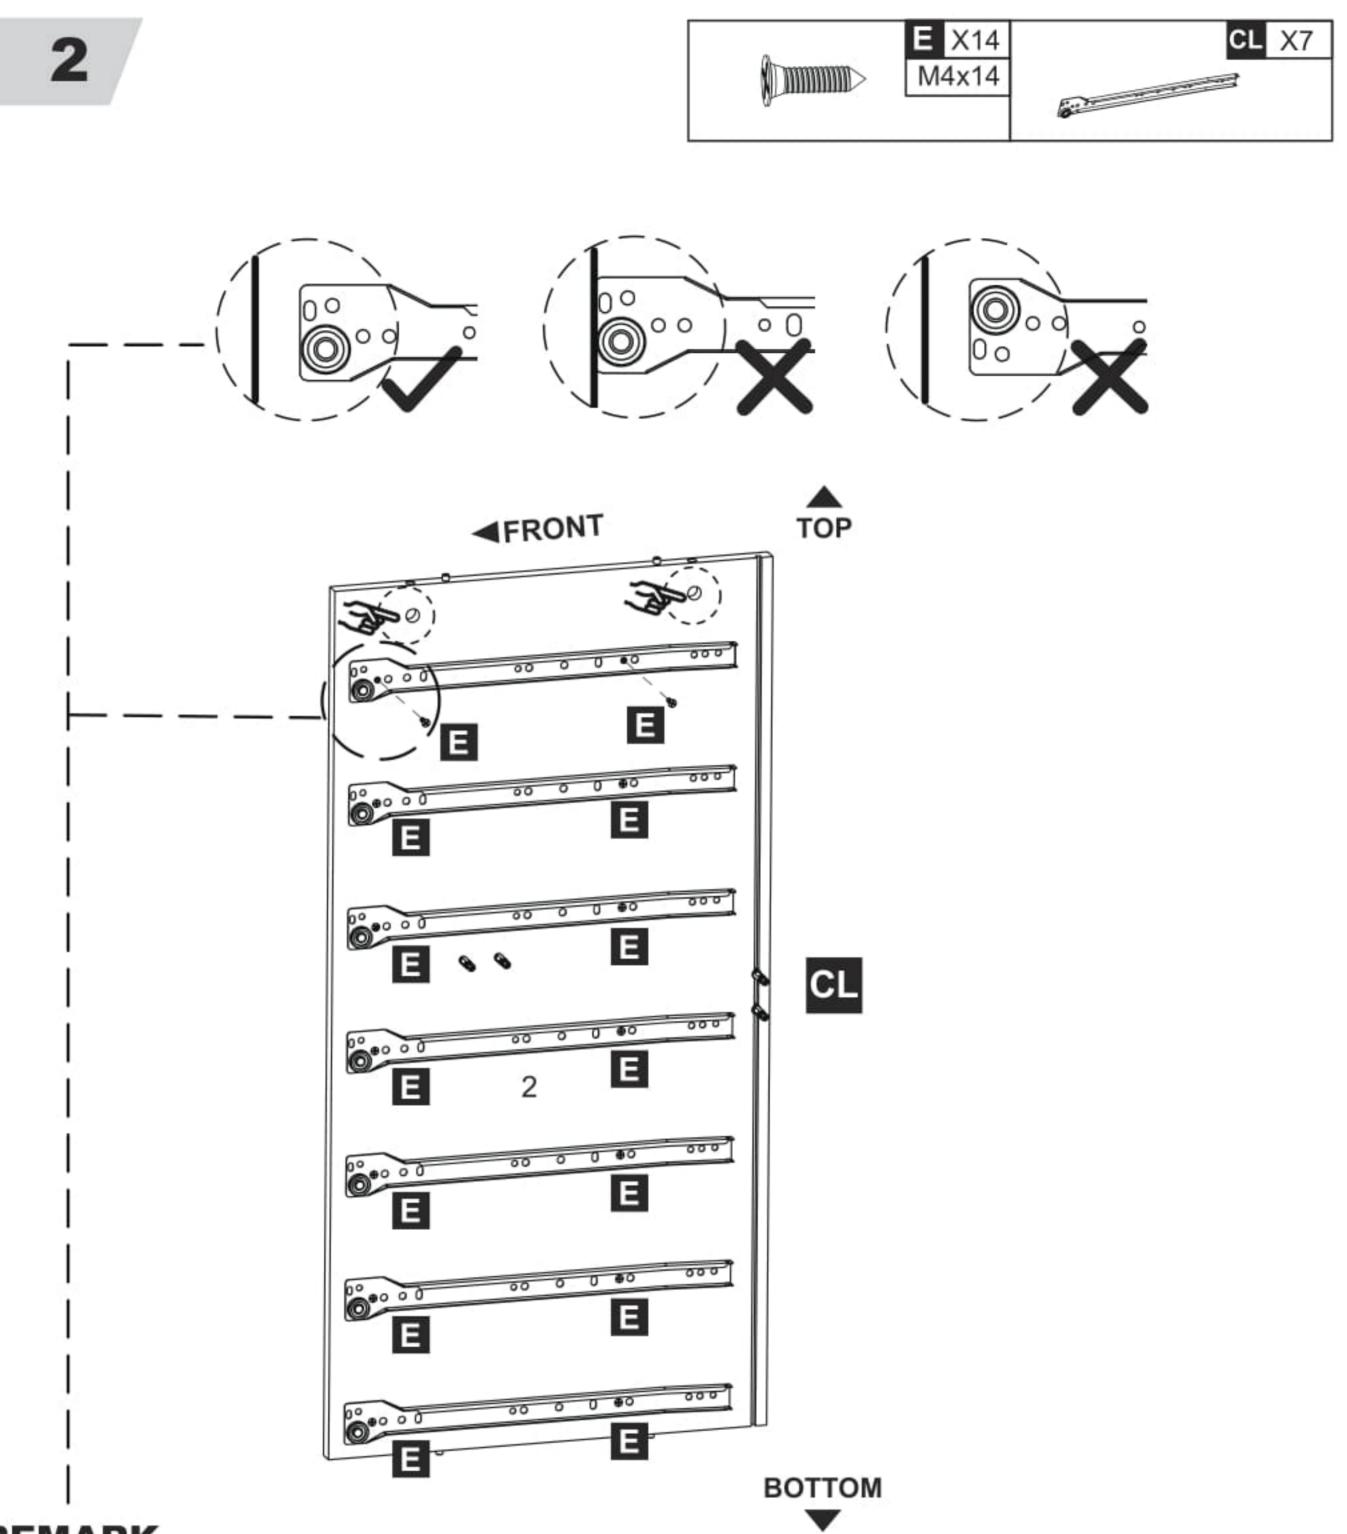



REMARK


When installing, please make sure the screws are flattened, not crooked; Otherwise the drawers will not be installed perfectly.

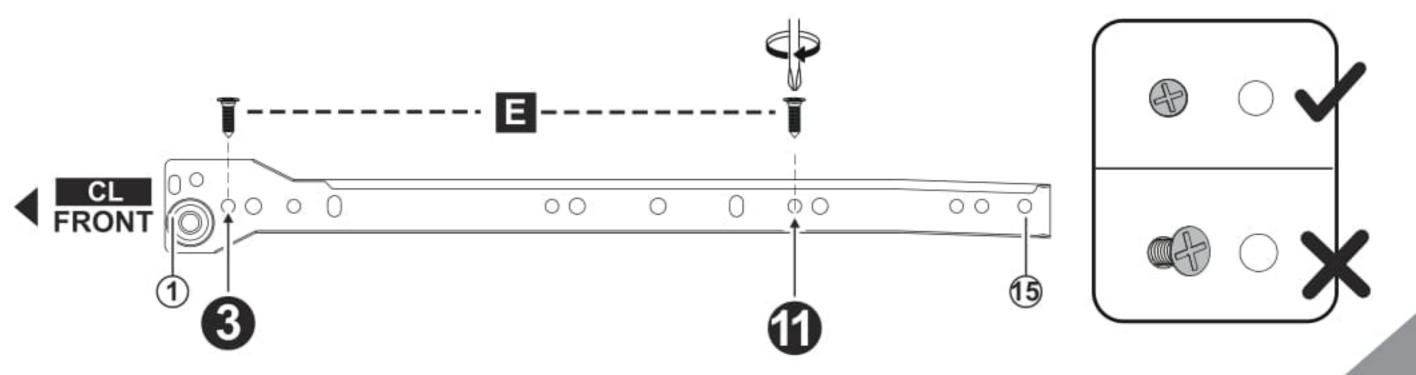


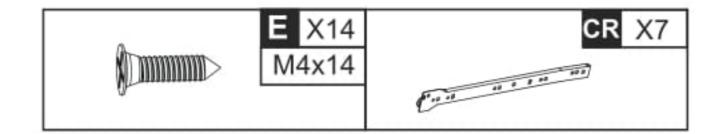


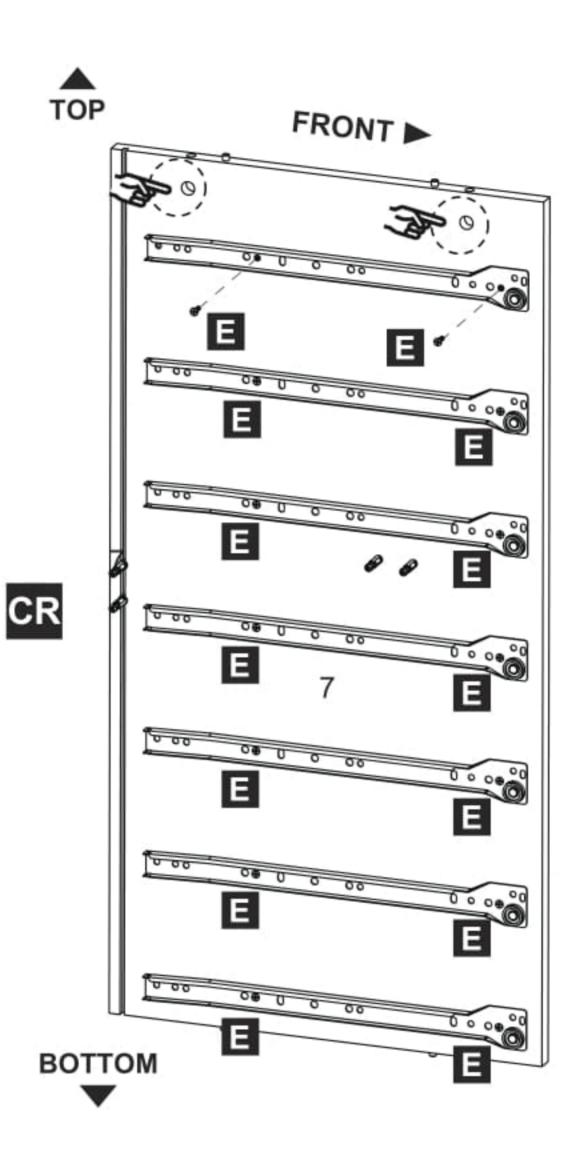


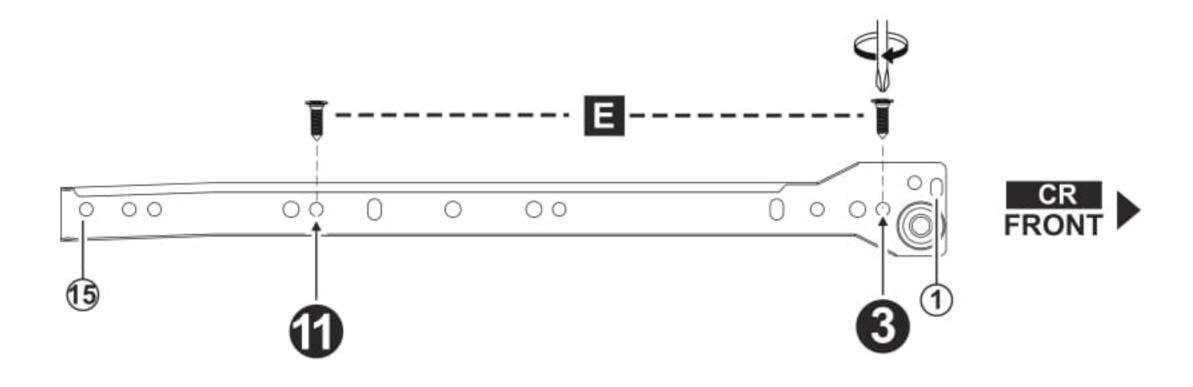


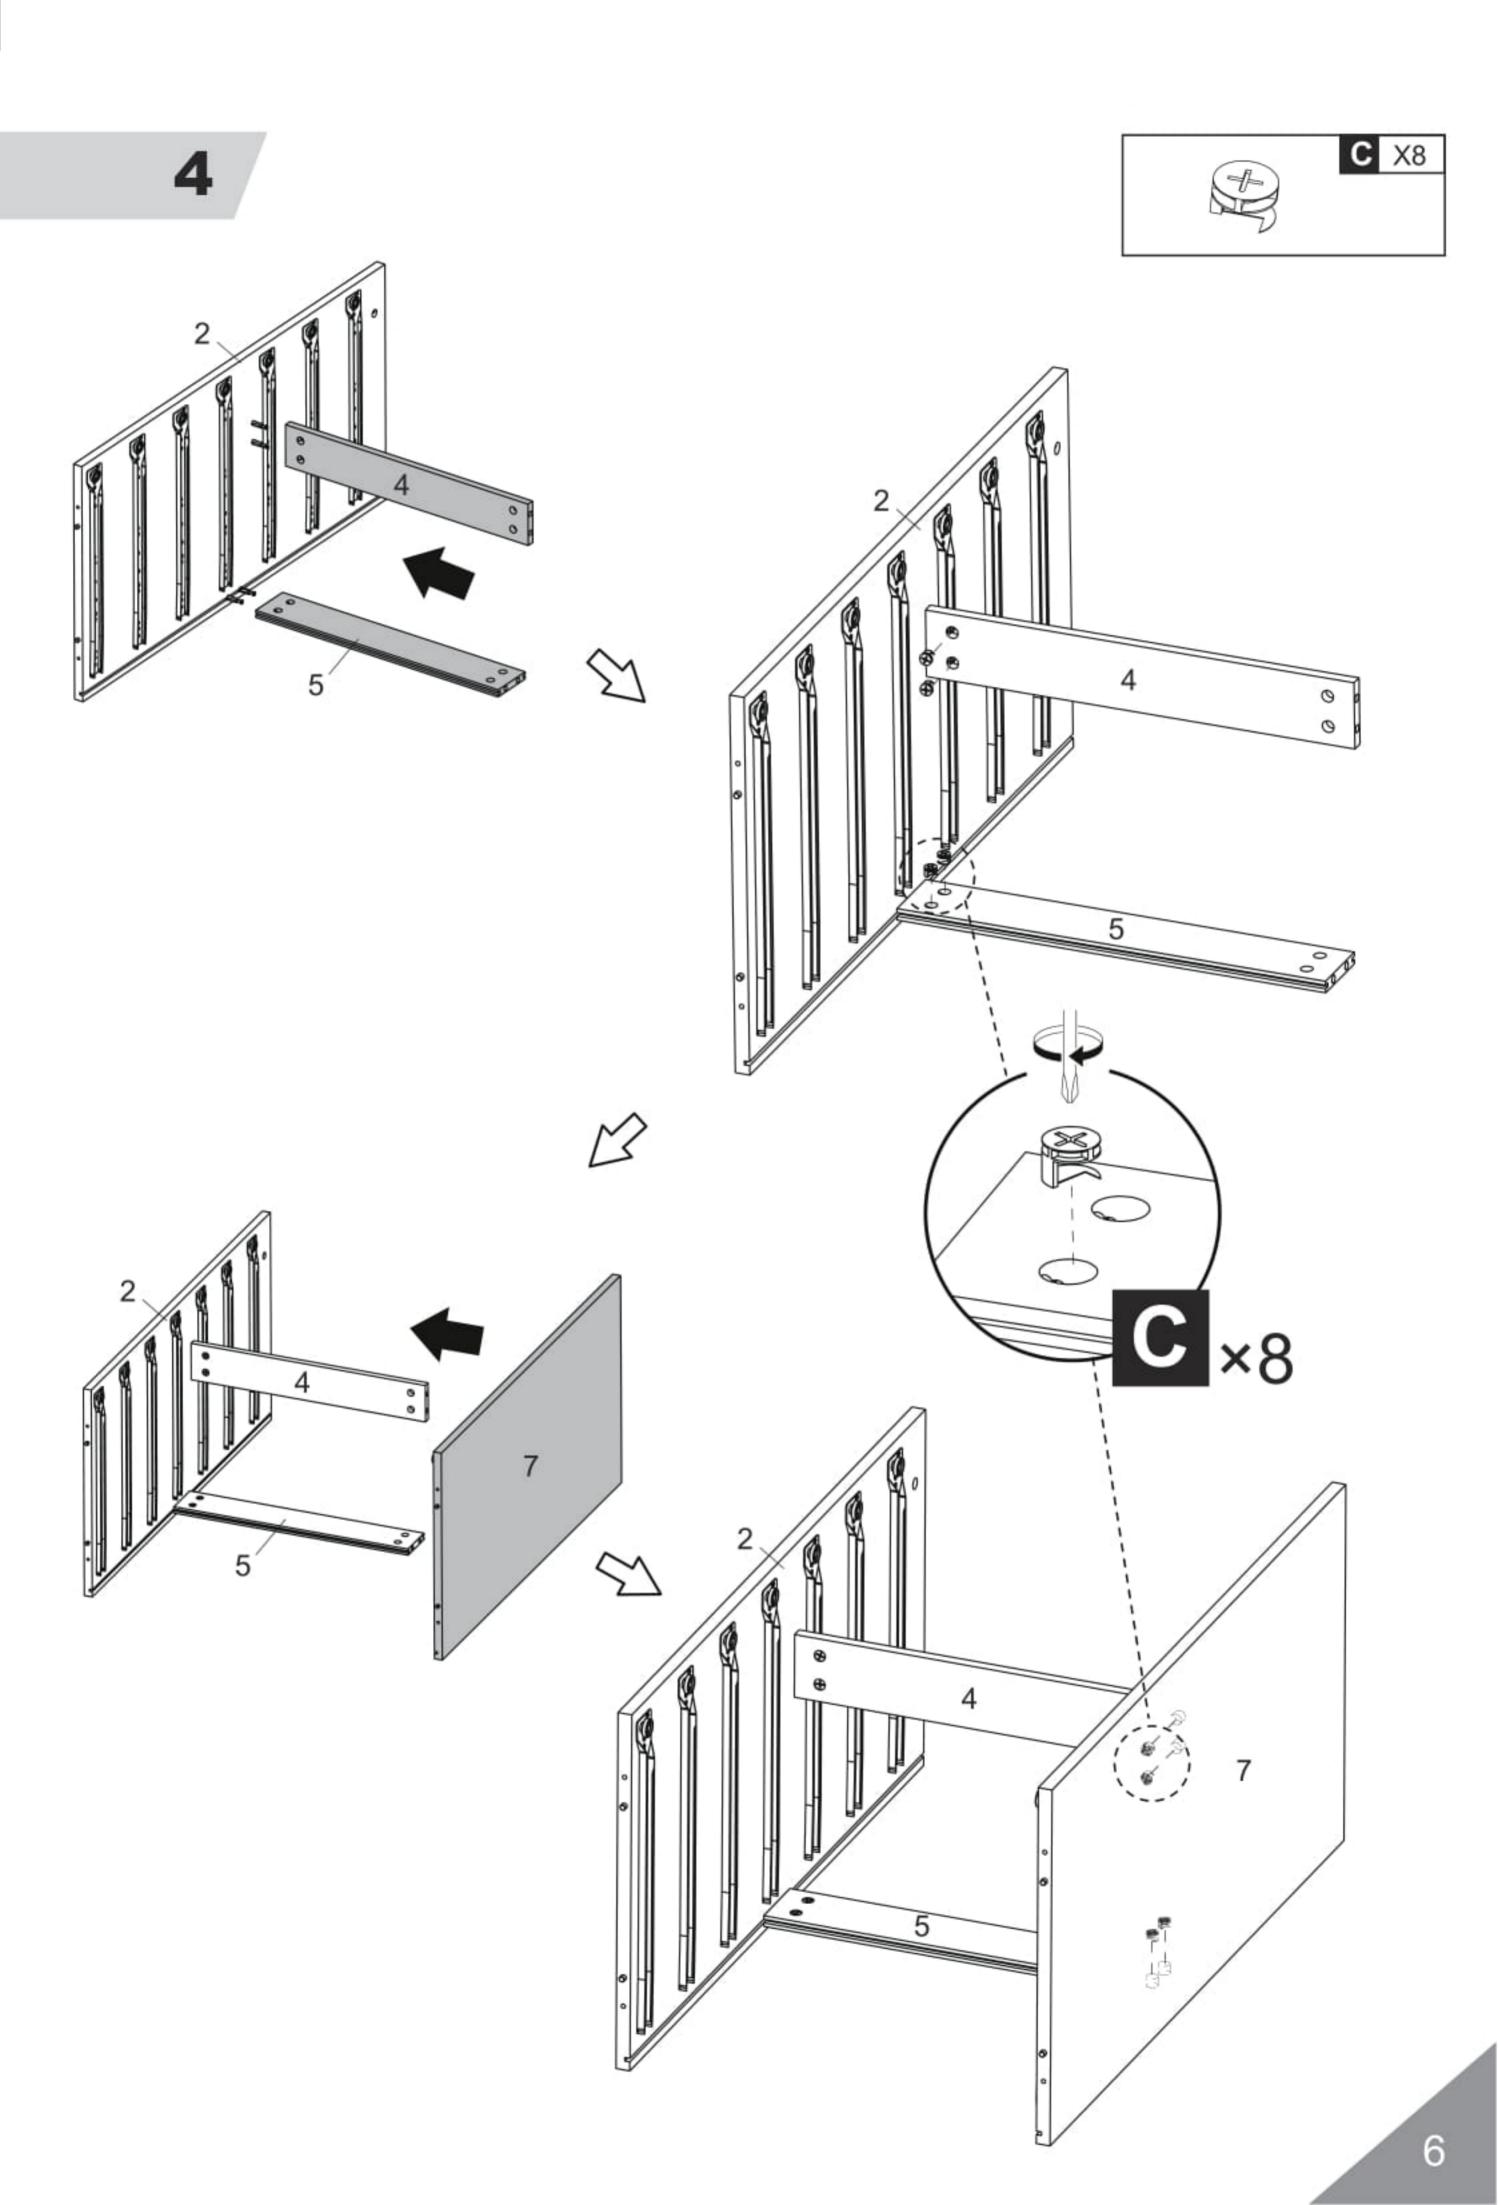

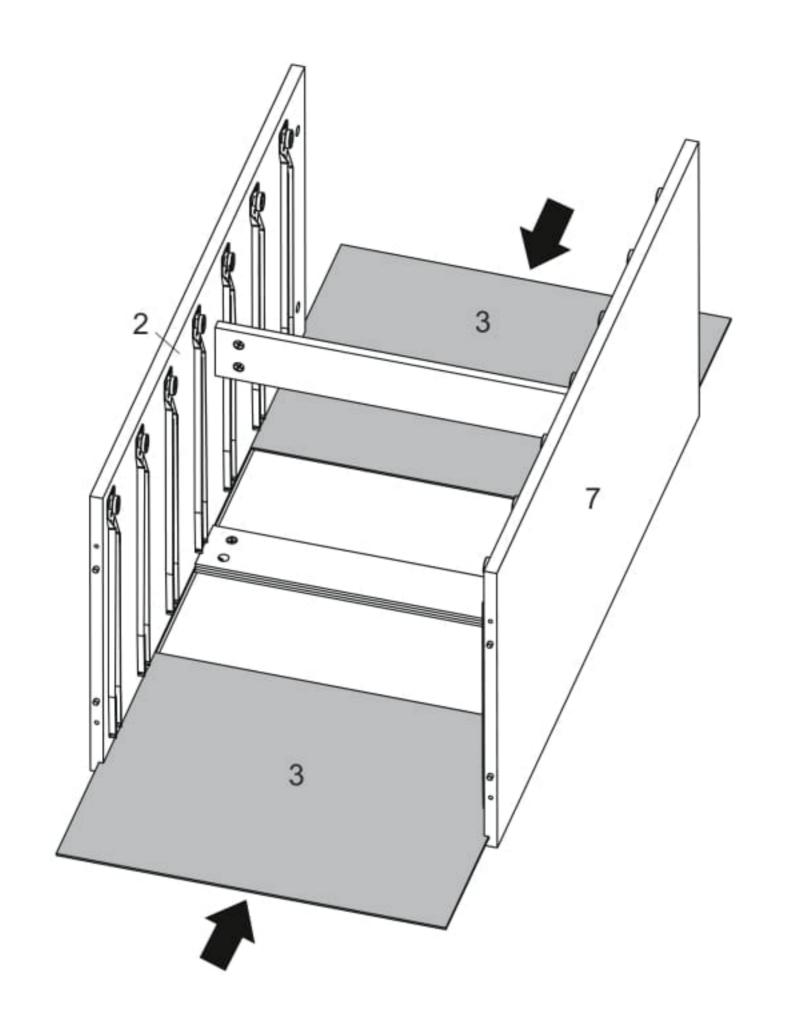

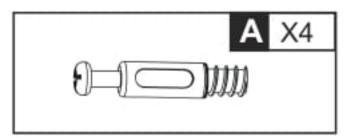

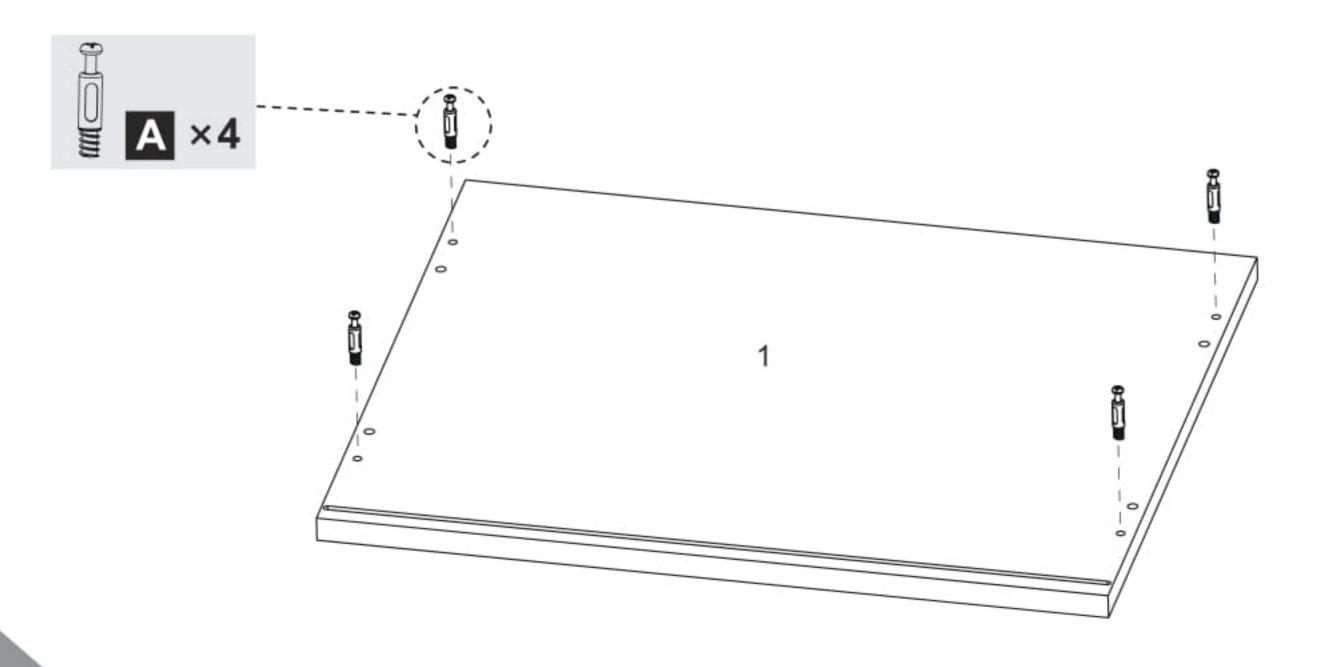


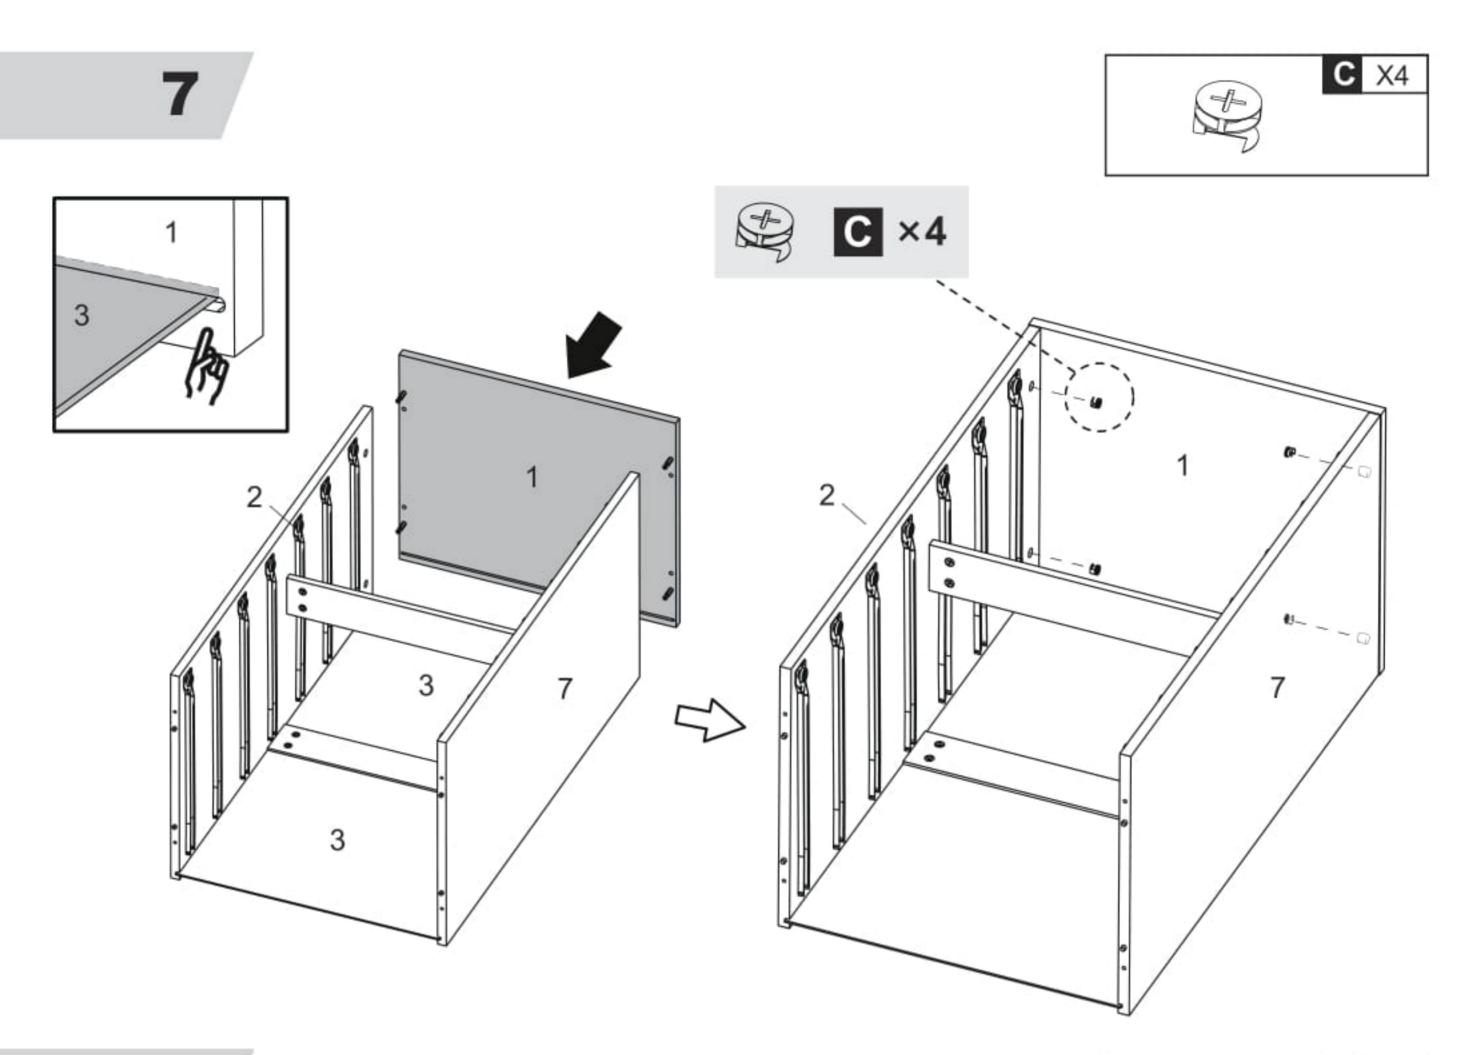





REMARK


- 1. Install screw F after connect part 6 with part 2 and part 7.
- 2. Please do not fully tighten screws until all screws are in place.

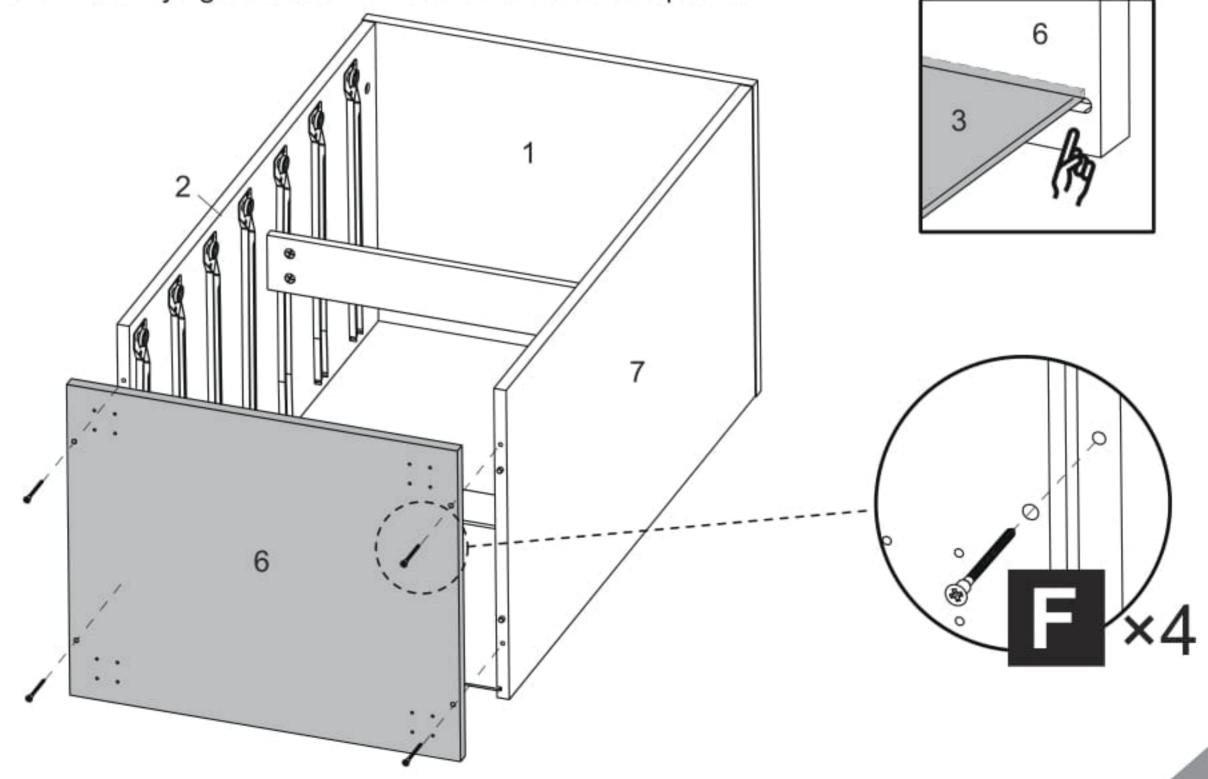

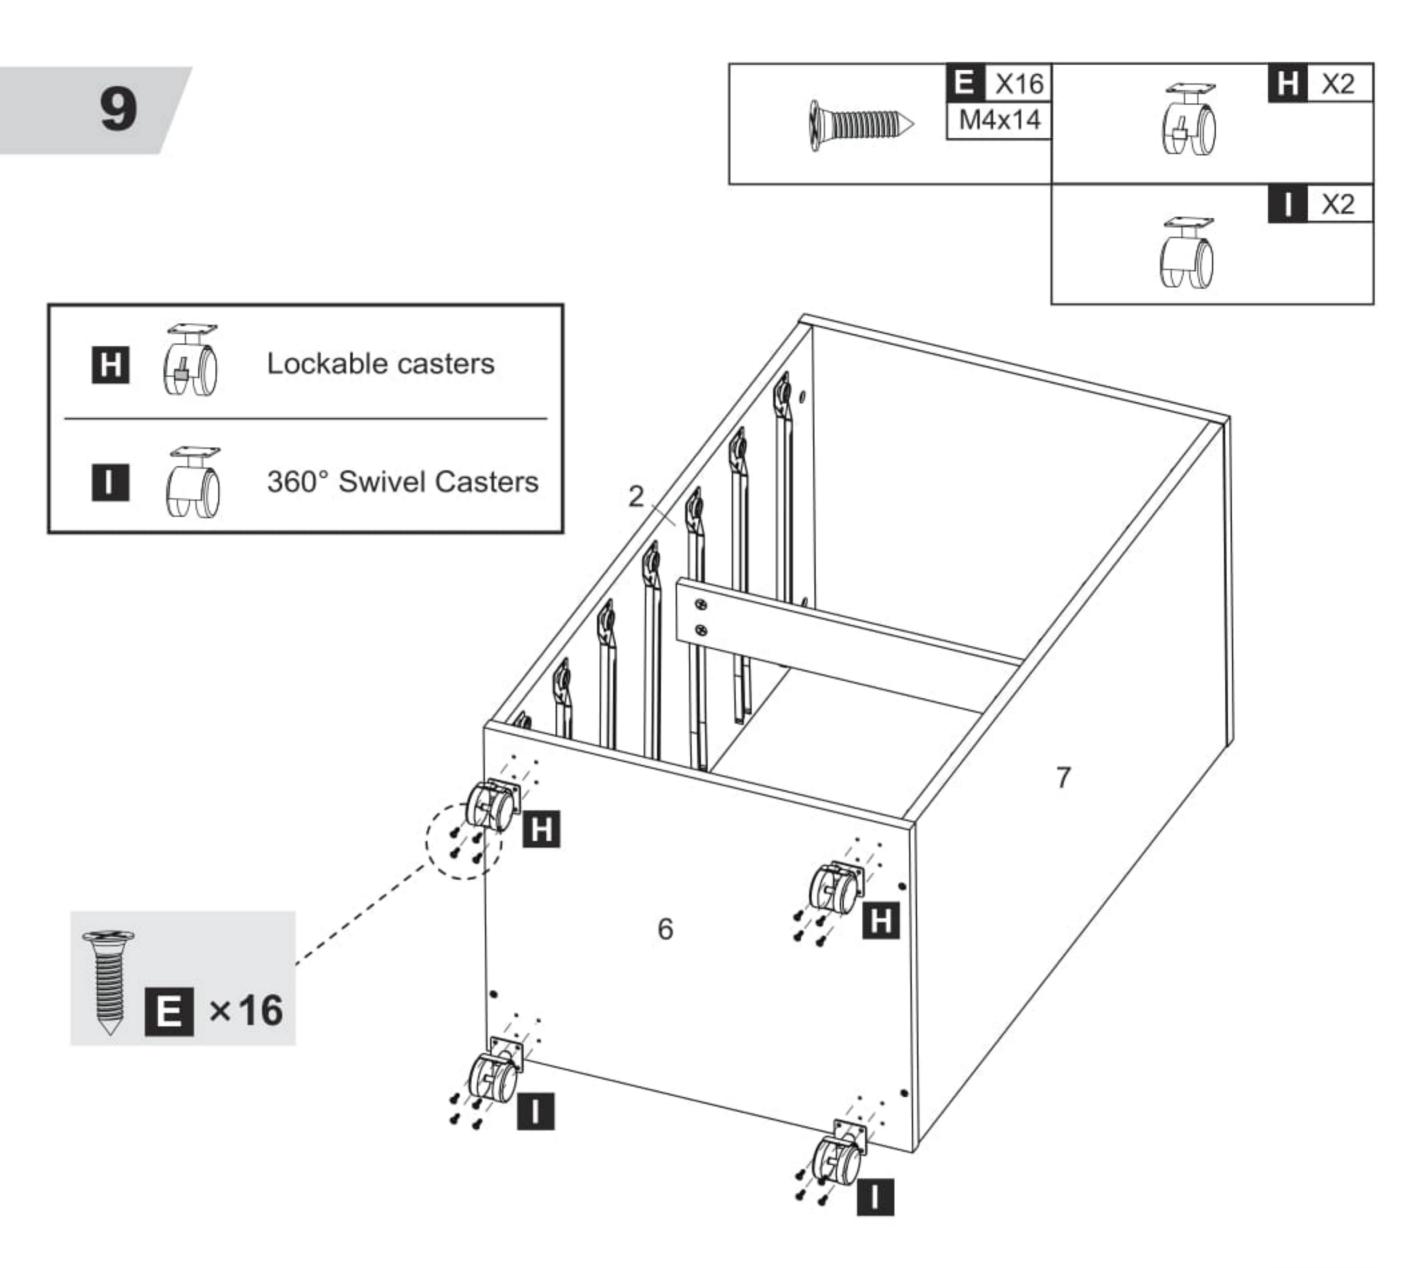




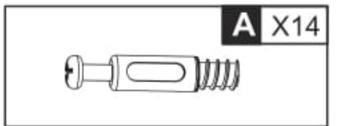


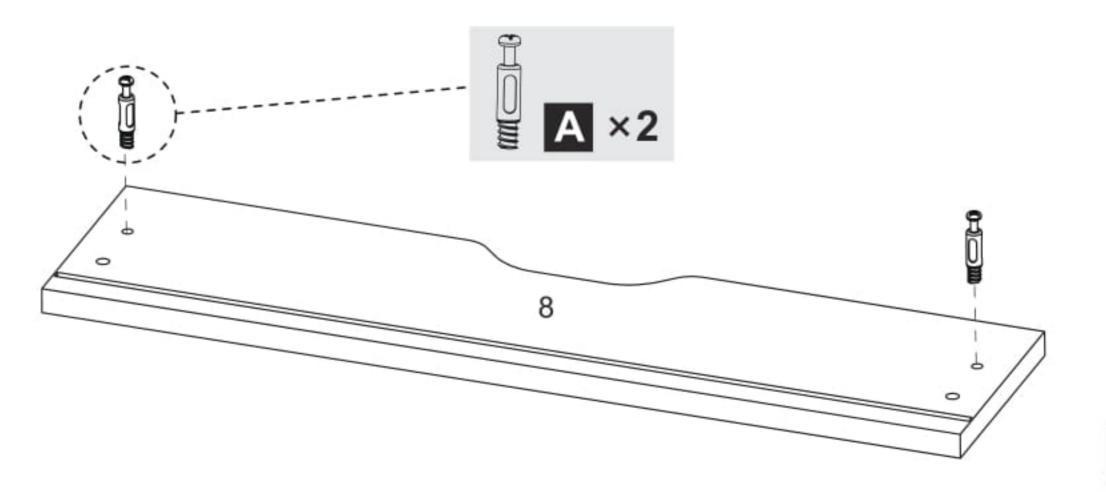




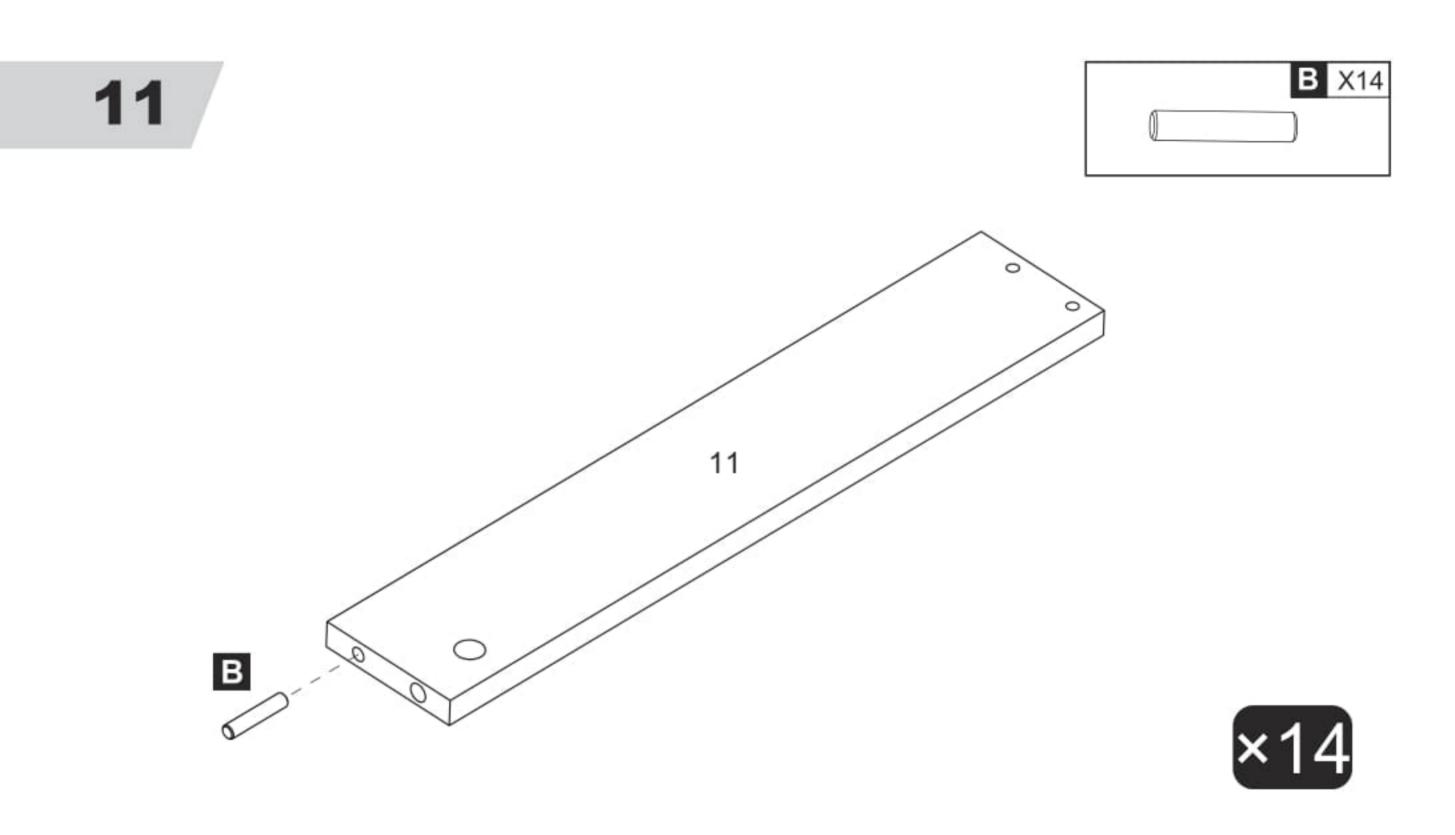




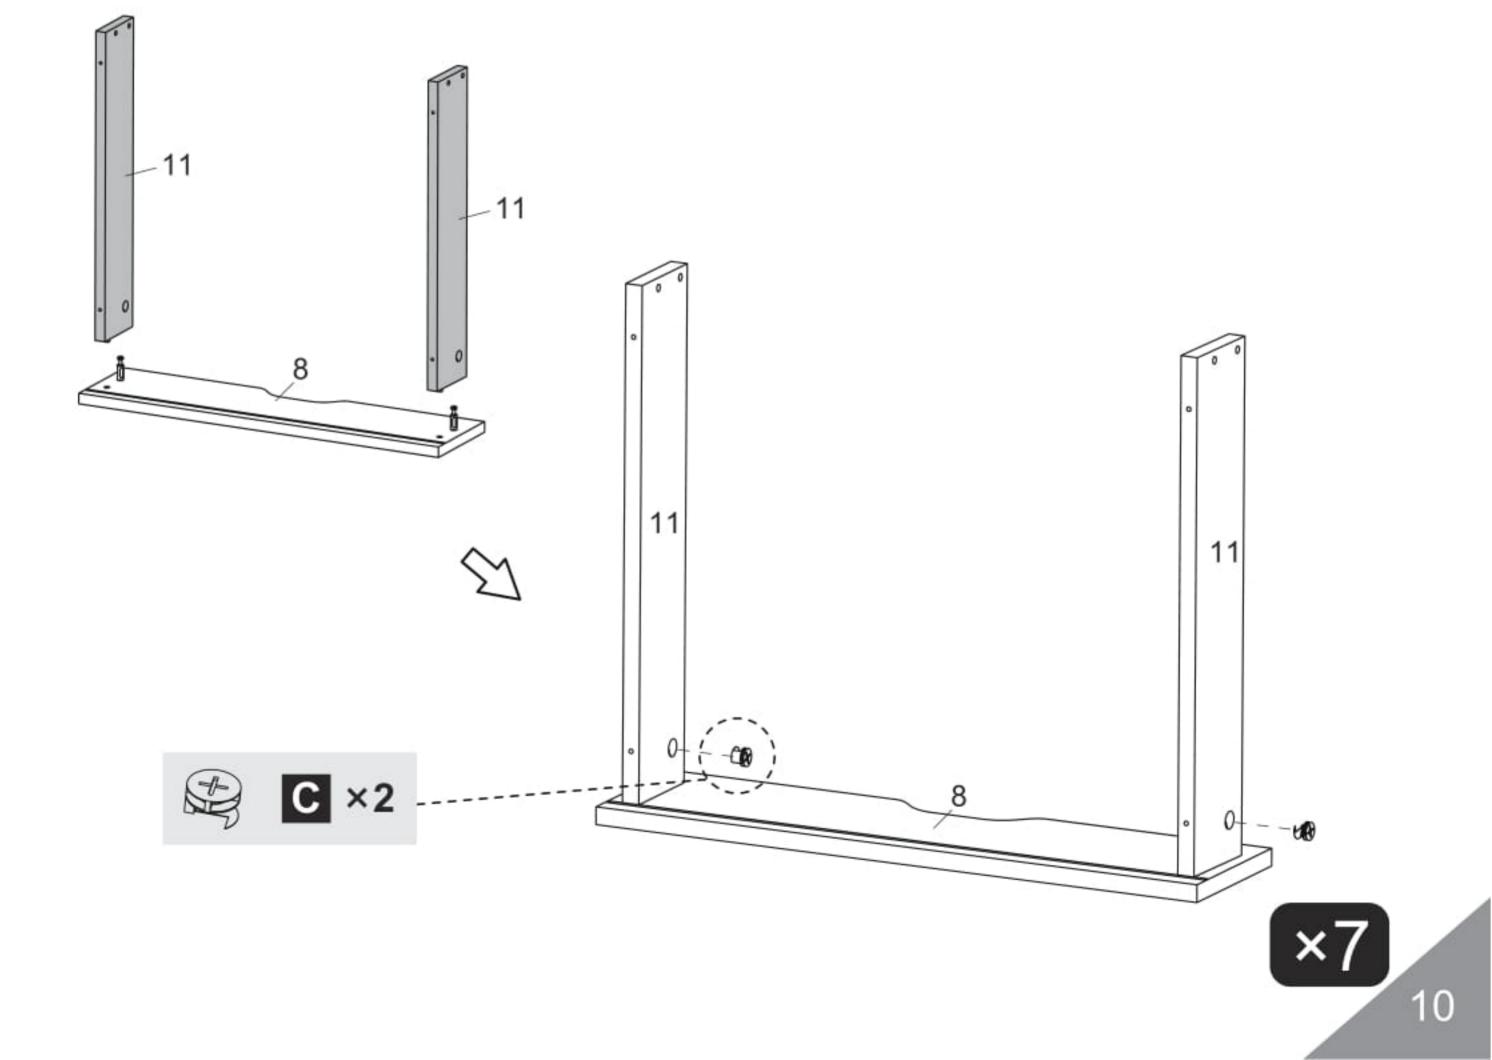

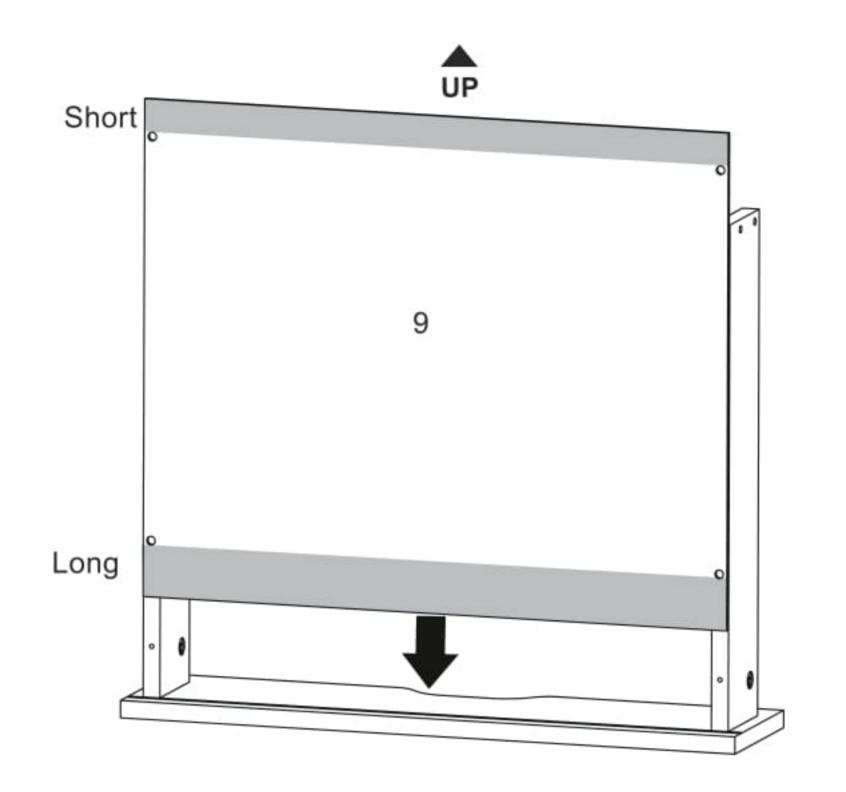





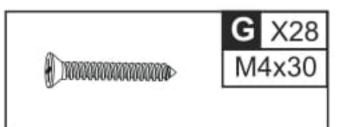





Please do not fully tighten screws until all screws are in place.

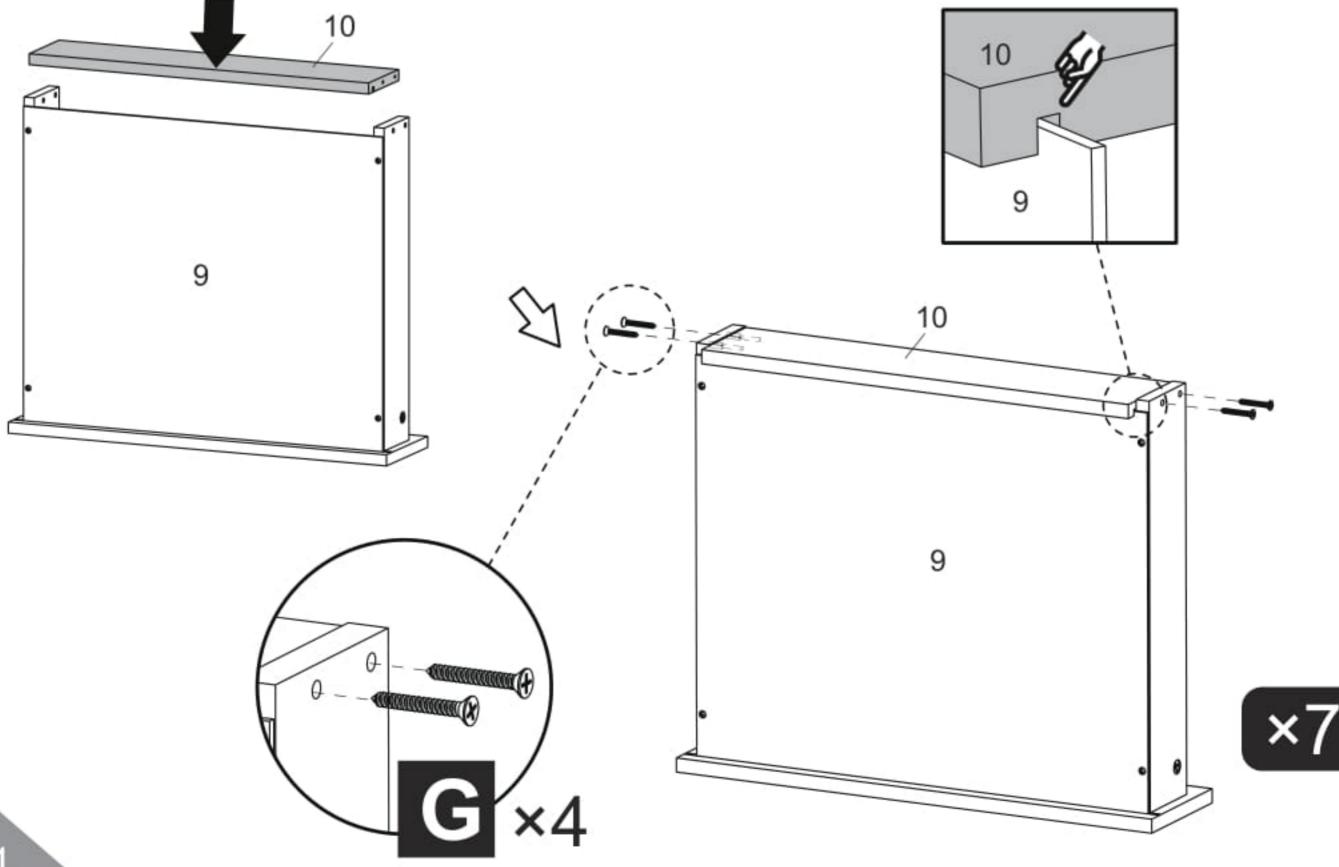

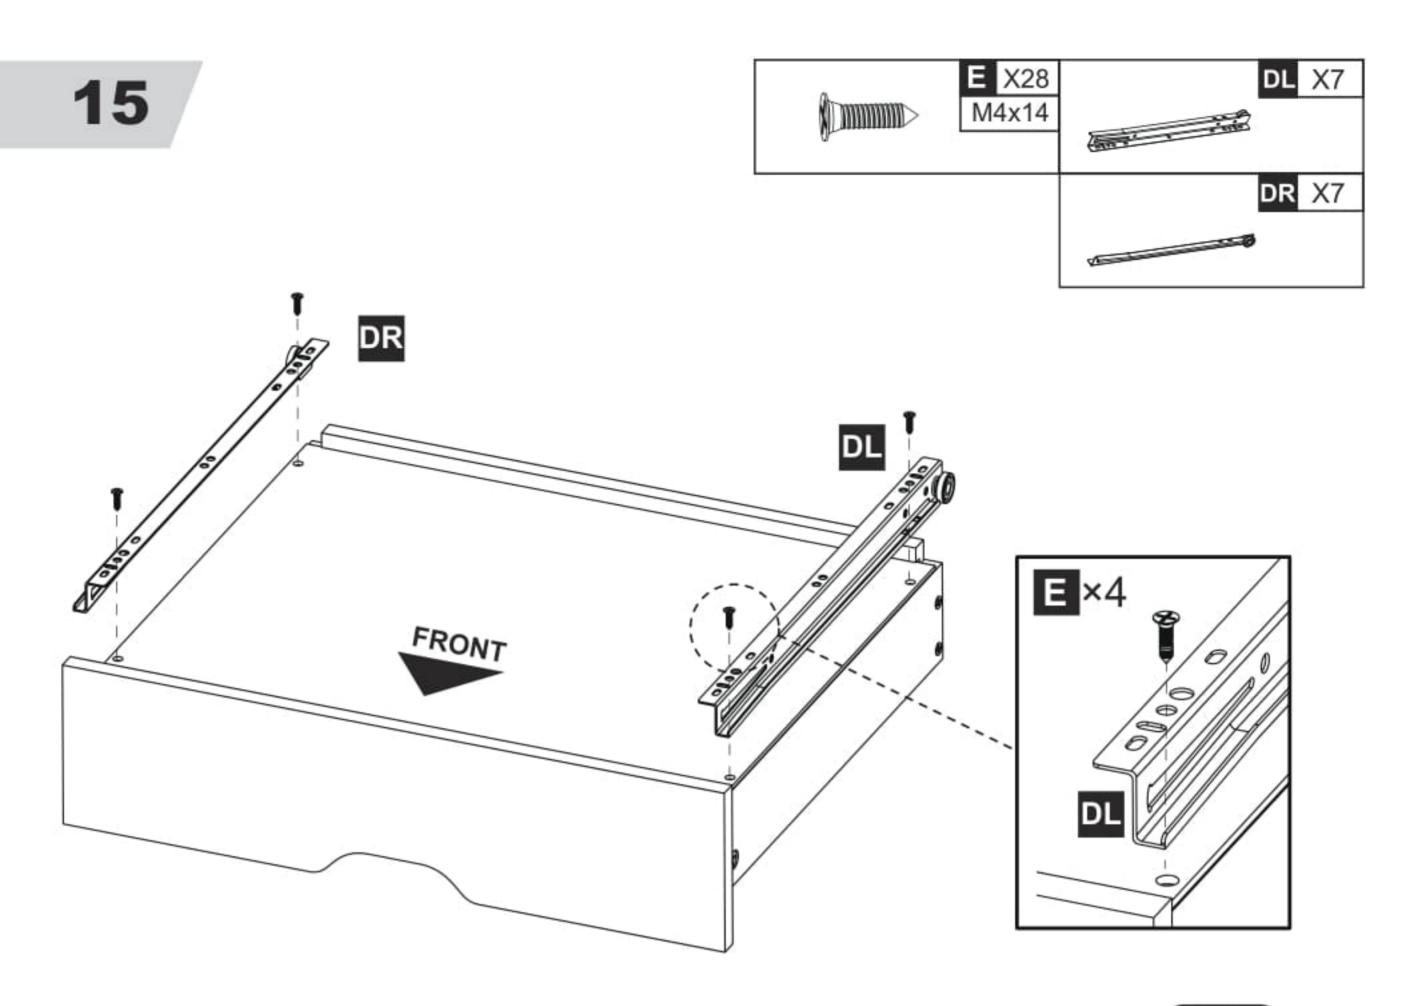





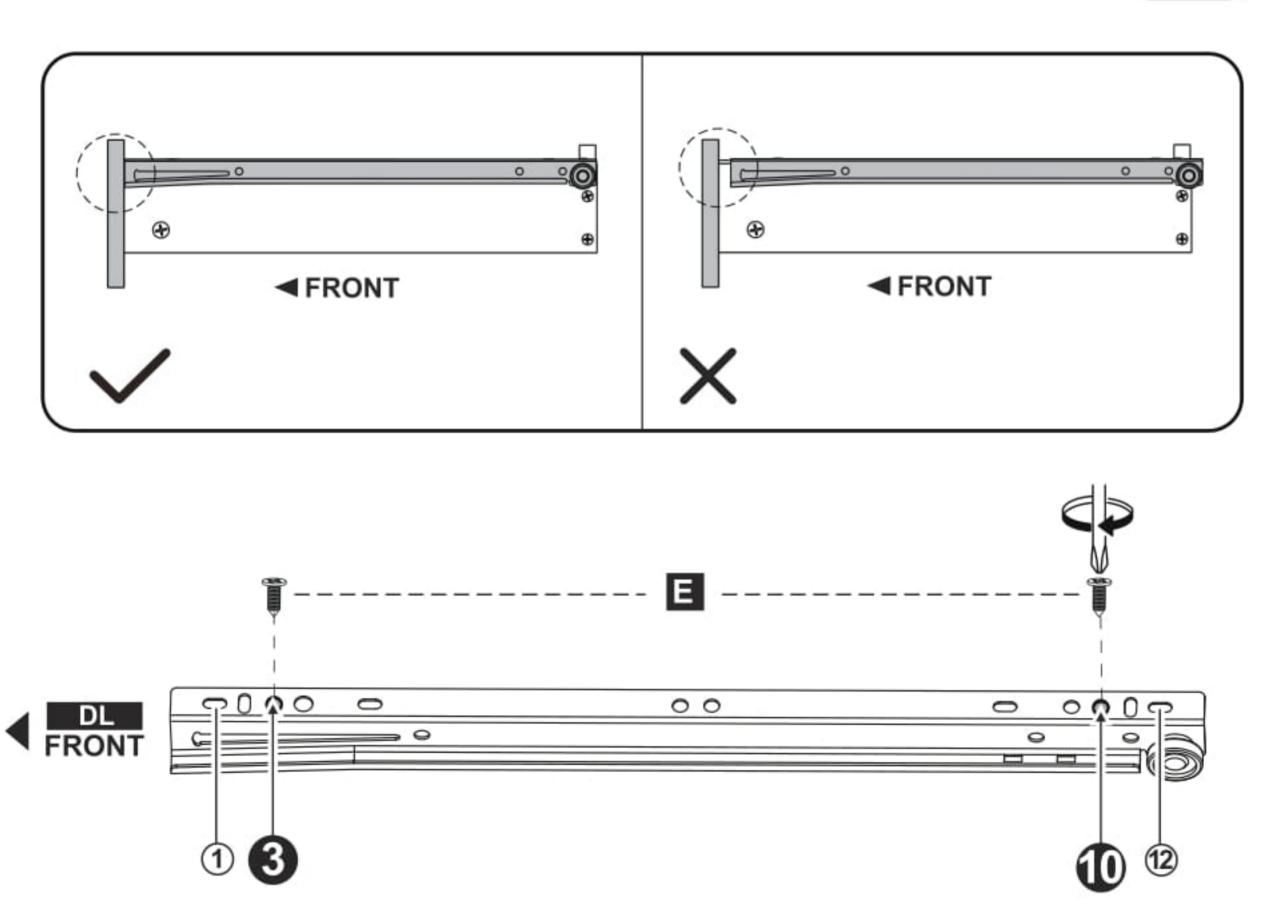


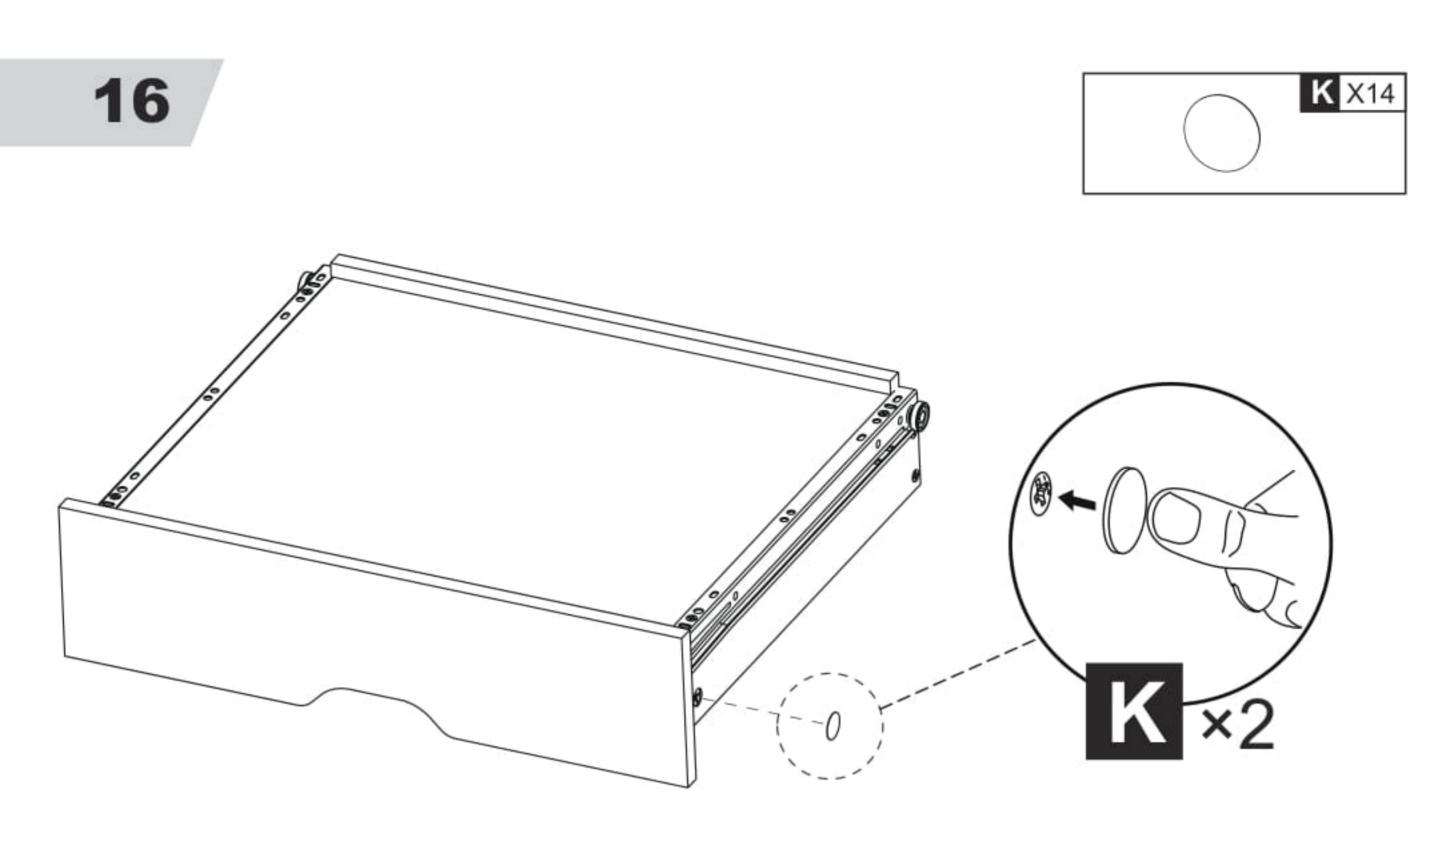

×7

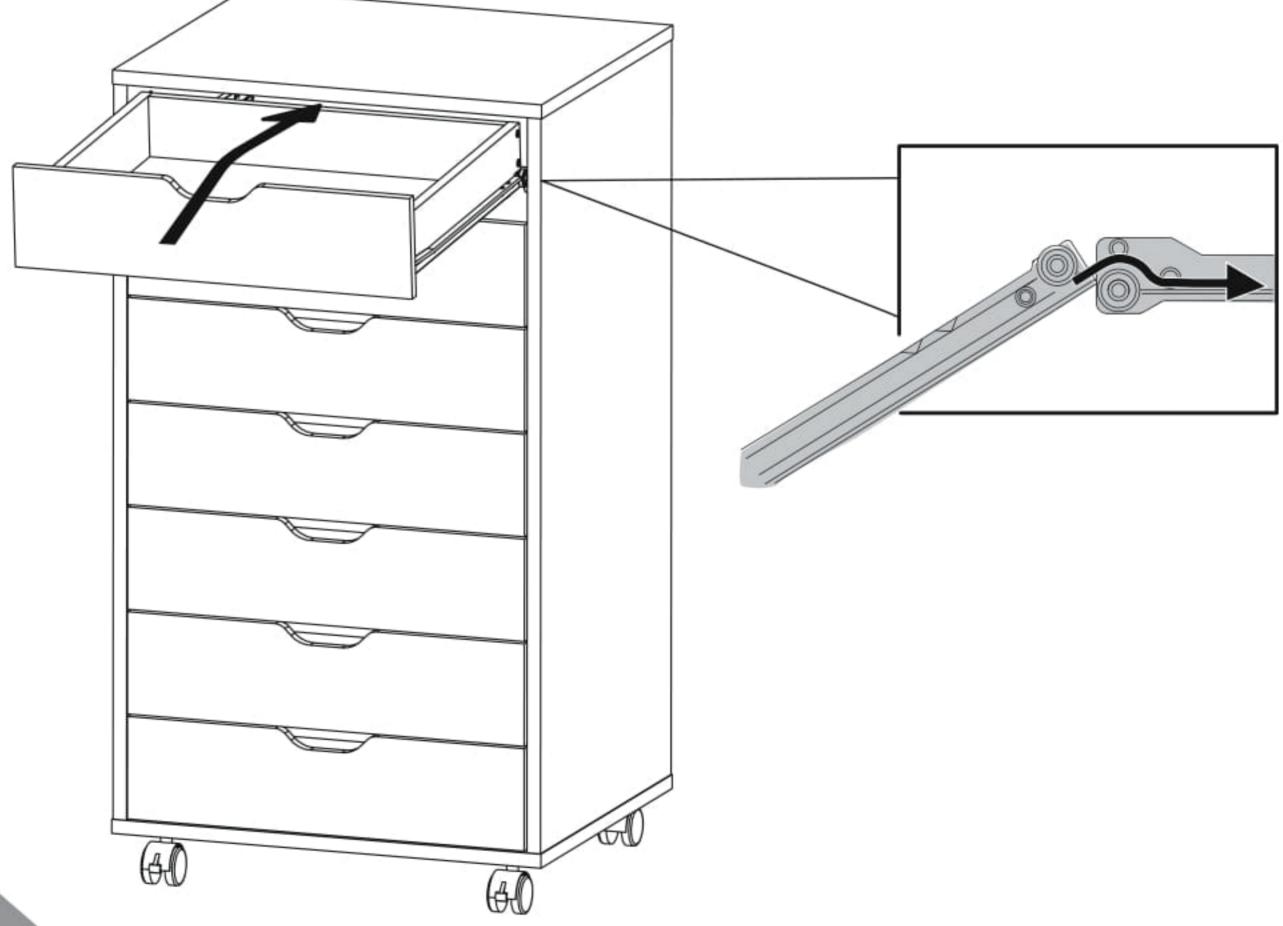


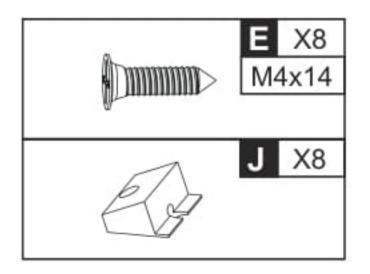

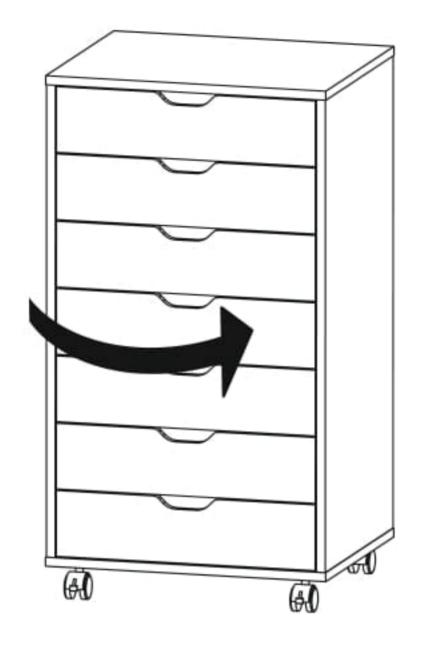





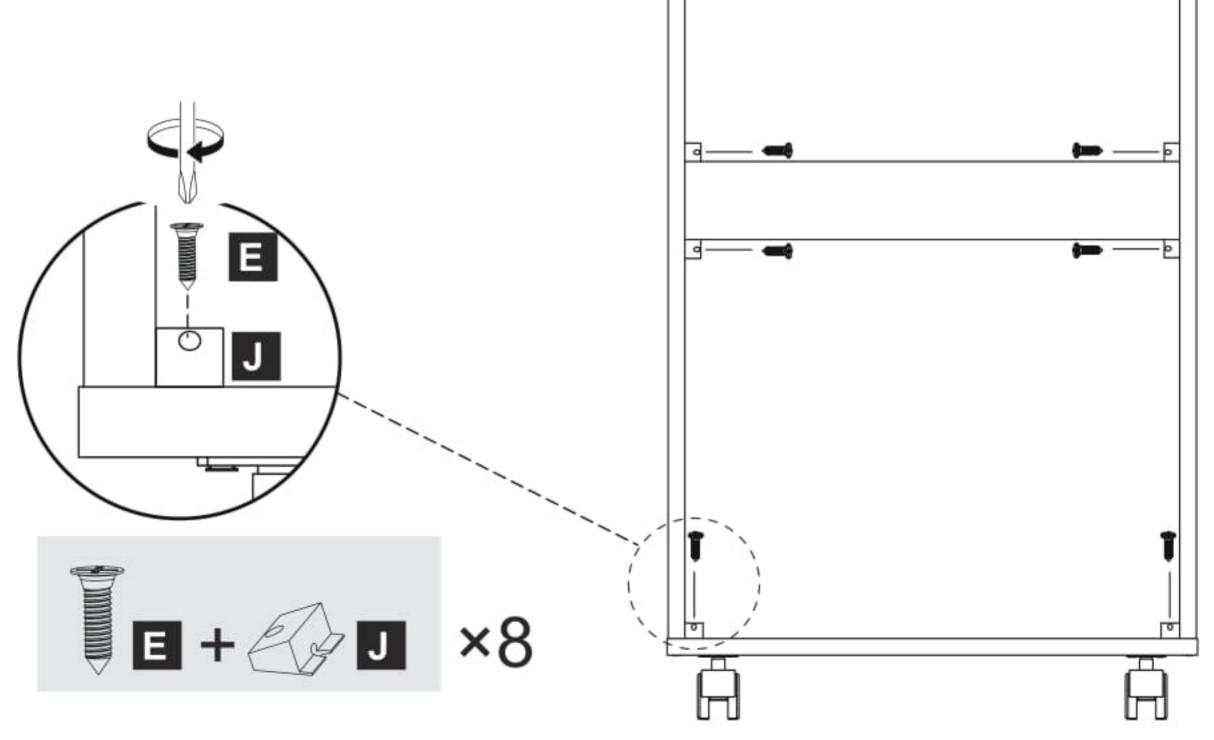


A WARNING

ANTI-TIPPING DEVICE

WALL ANCHORING GUIDE

The hardware you should use to secure your furniture to the wall depends on both the type of furniture you have and your wall material.


Attaching your furniture to cavity wall with anti-tipping device

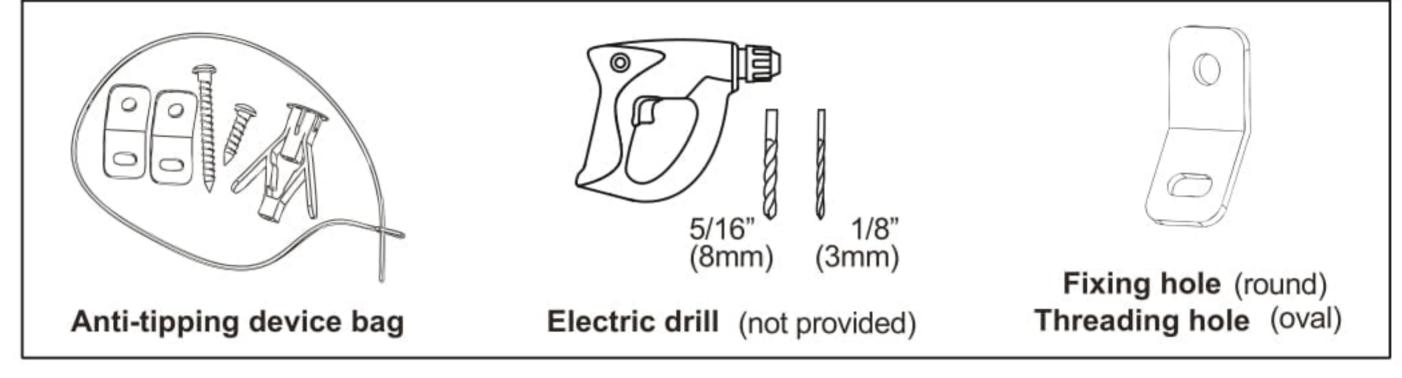



Type of Wall Material

Using the guide below, identify your wall material and choose the correspongding steps.

Mark the attachment point(s) with a pencil at the appropriate height.

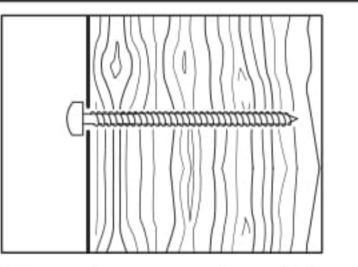

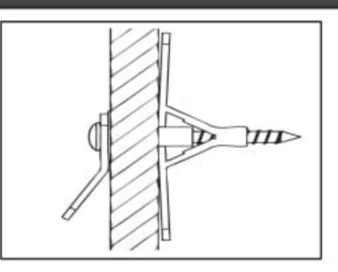

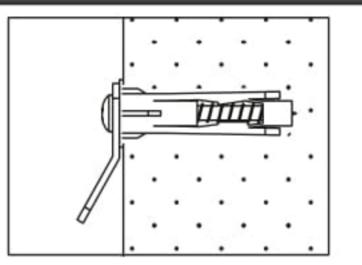


Drywall or plaster with available wood stud

 Drill 1/8-inch (3mm) diameter pilothole(s) into the wood stud(s), at the height you marked with pencil.

Drywall without available wood stud

 Drill 5/16-inch (8mm) diameter hole(s) through the wall at the height you marked with pencil.



Masonry

- Drill 5/16-inch (8mm) diameter hole(s) 2-inches (50mm) deep into the wall at the height you marked with pencil.
- Drive the plastic plug(s) into the hole(s), using a hammer if needed.

Follow the appropriate pictogram instructions on the following pages, drive the screw(s) with washer(s) through the brackets and tighten screw(s) firmly into the plastic plug(s) in the wall. Do not over-tighten.

If your wall material is not listed here, or if you have any questions,consult your local hardware store.

