

Installation Instructions


Item No.: IN-0501-4

Step 1: Trace Box

For your safety, turn off power before starting this project. If the box does not come with a cardboard template, hold its face against the wall, use a levelling tool to make sure it is straight, and trace it. With a utility knife, cut the line deeply enough to cut through the drywall paper.


Step 2: Cut Hole

Cut the hole with a drywall saw. Cut to the inside of the knife cut to prevent paper from fraying. Test to make sure the old-work box fits in the hole. Adjust the hole size to accommodate the box. The box is to fit snugly in the hole.

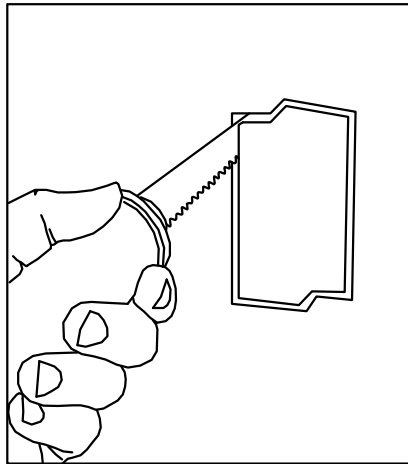


Step 3: Thread Cables

Run cable through the hole. Strip 8-12 inches of NM-B cable jacket and run the cable into the box. Whichever clamping method the box uses; 1/2-inch of NM-B cable jacket should show inside the box. Tug to make sure the cable clamps tightly.

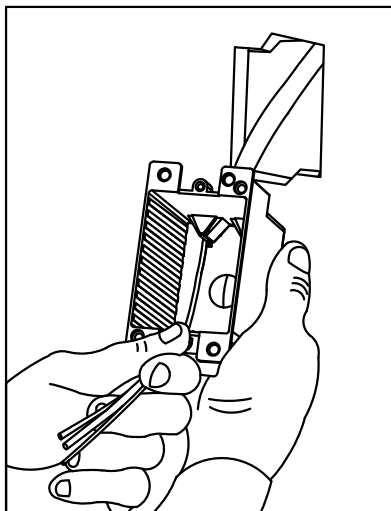


Step 4: Insert Box

Push the box into the hole. If it fits tightly, do not force it or you may damage the drywall. If needed, use a utility knife to enlarge the hole in your wall.

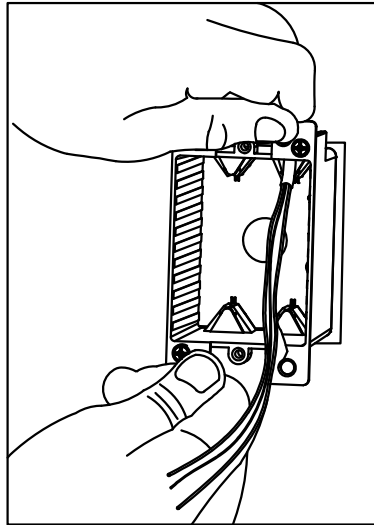

Step 5: Secure Box to Wall

This type of box has wings that extend outward when you start to drive the screw, then grasp the back of the drywall as the screw is tightened. Tighten the screws until you feel resistance and the box is firmly attached. Verify the box is secured.

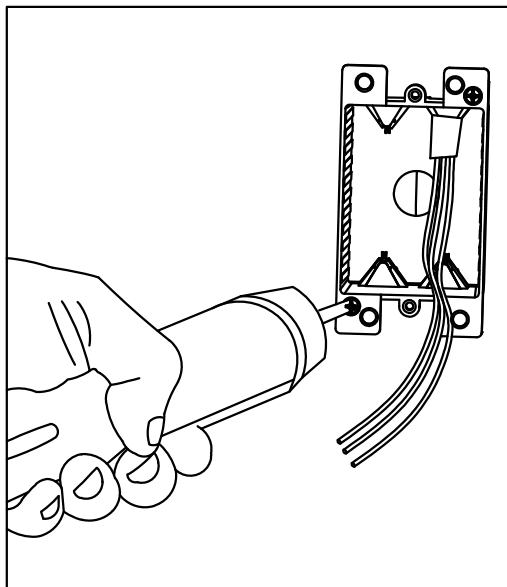

END