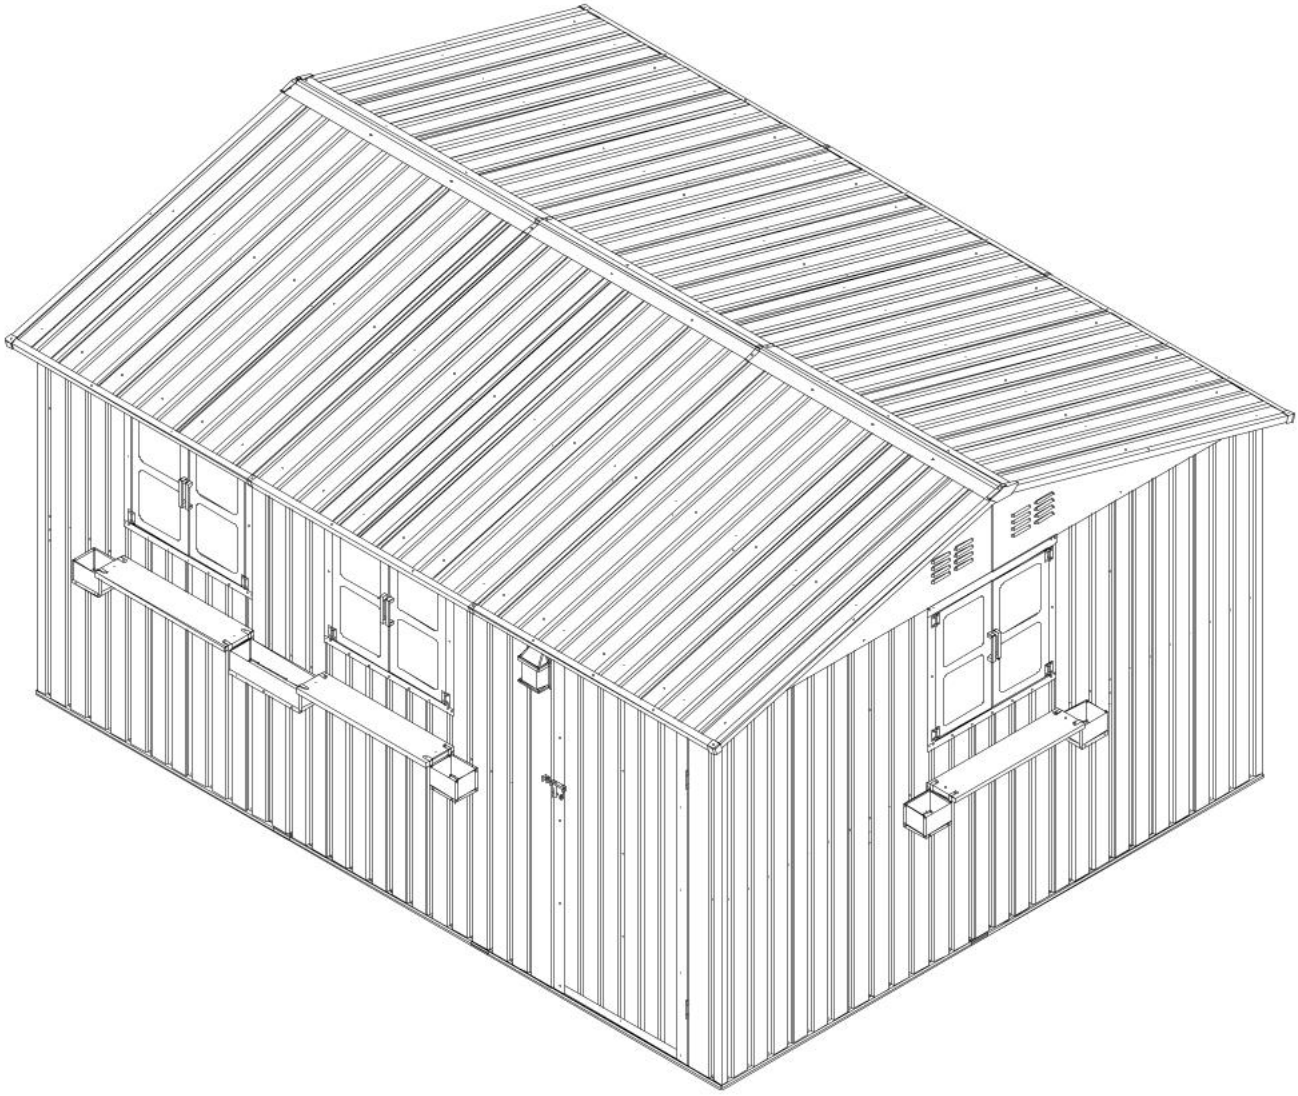
OUTDOOR TOOL SHED

ASSEMBLY INSTRUCTIONS

MODEL: 12x10 With windowsill flower basket



IMPORTANT! ⚠

READ ALL INSTRUCTIONS BEFORE STARTING ASSEMBLY
KEEP THIS MANUAL FOR FUTURE REFERENCE
TWO-PERSON ASSEMBLY RECOMMENDED

PRODUCT DIMENSIONS

SIZE:304x371x205cm

PACKING CONTENT

1)OUTDOOR TOOL SHED -1

2)Specification -1

PERSONAL PROTECTION

Always wear safety glasses and work gloves.

Wear appropriate footwear with good traction.

ASSEMBLY SAFETY

TWO PERSON ASSEMBLY REQUIRED for lifting and positioning.

Keep children and pets away from work area.

Do not assemble in high winds or inclement weather.

Beware of overhead power lines and underground utilities.

Keep work area clean and well-lit.

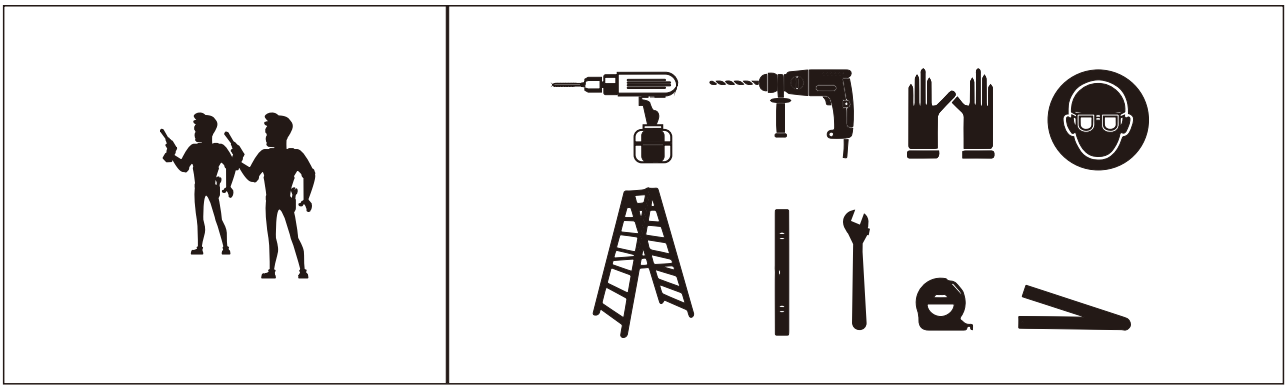
BEFORE YOU BEGIN




Check package contents against Parts List.

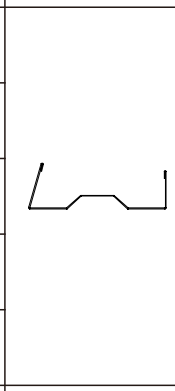

Foundation must be level.



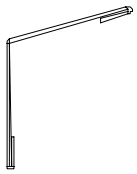

You can choose to remove the protective film first before installation.









Packaging List




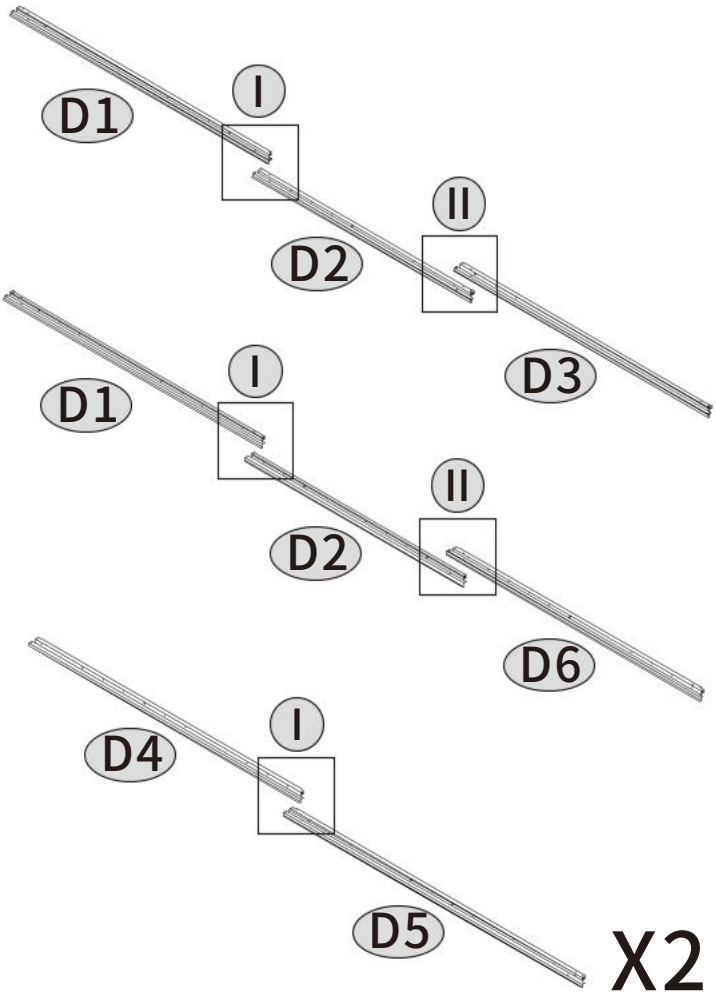
REF	IMAGE	QTY
D1		2
D2		2
D3		1
D4		2
D5		2
D6		1
Q1		10
Q2		7
Q3		4
Q4		3
Q5		6
Q6		2
SL		2
SR		2
W1		5
W2		5
W3		5
W4		5

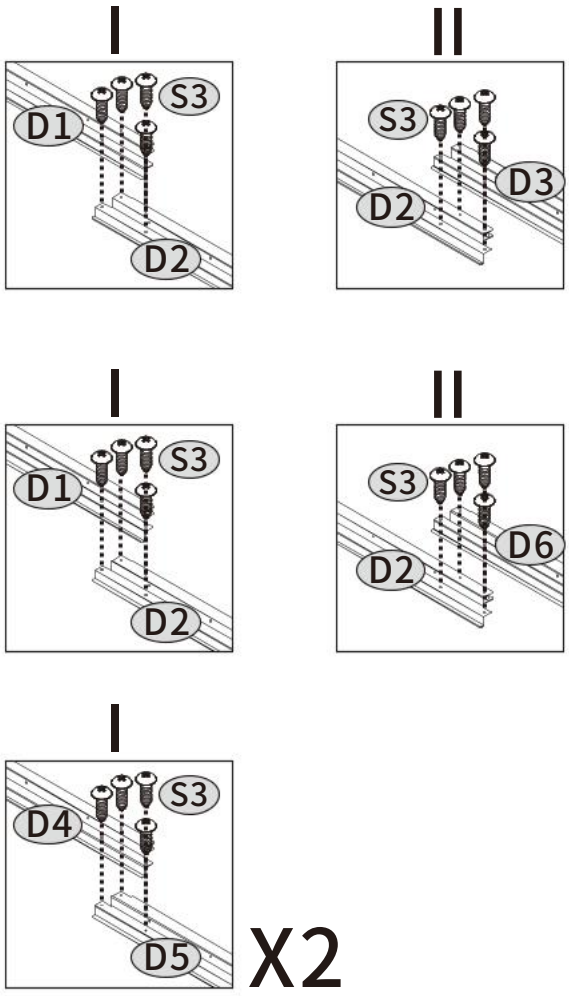
REF	IMAGE	QTY
H1		2
H2		2
H3		4
H4		2
H5		2
Z1		1
Z2		1
Z3		1
Z4		1
Z5		1
Z6		1
Z7		1
Z8		1
Z9		1
L1		4
L2		2
L3		1
L4		2

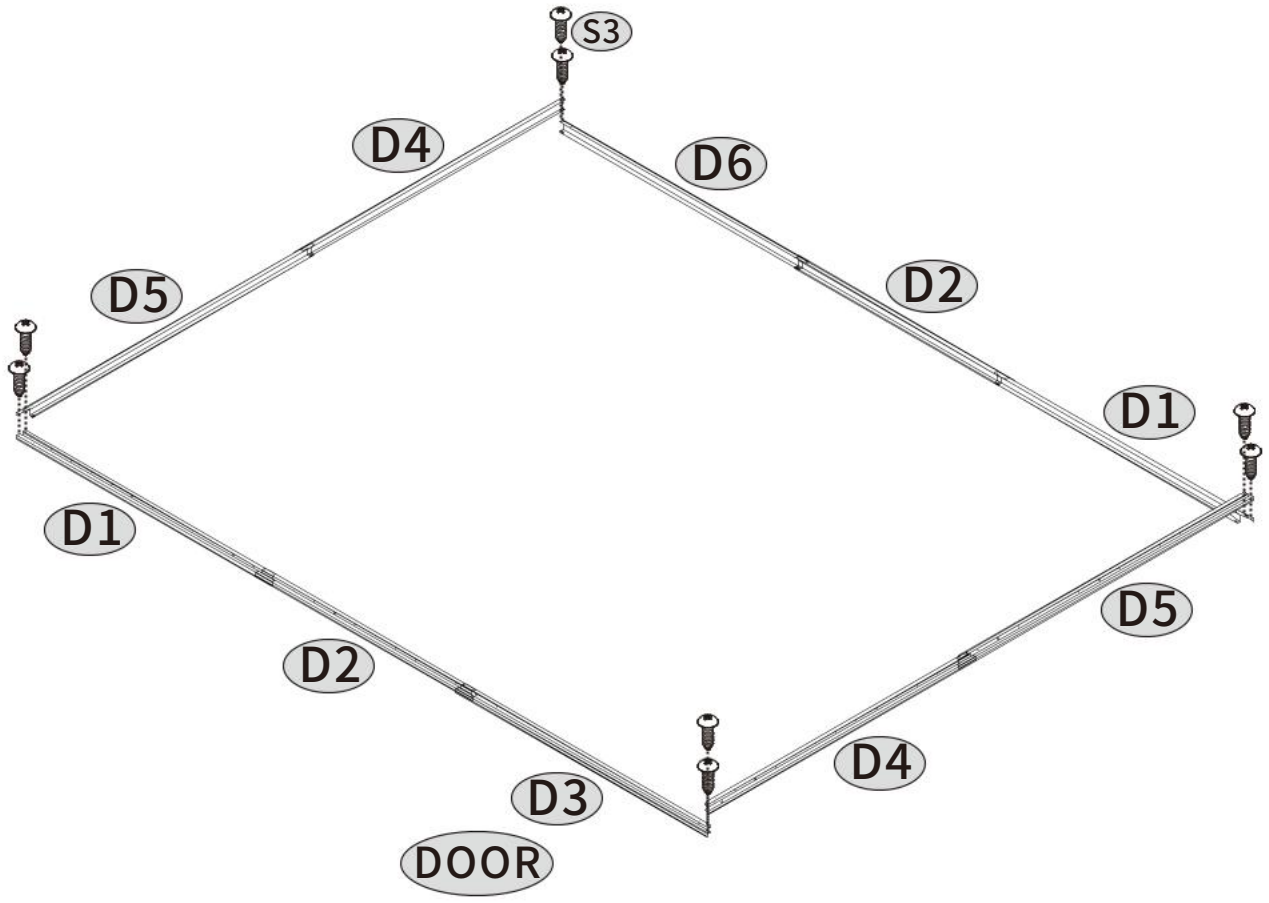
REF	IMAGE	QTY
L5		1
DA		2
DJ1		2
DJ2		1
DBR		1
DBHG		1
DBT		2
LL		1
LR		1
B1		2
B2		2
B3		1
B4		1
B5		1
B7		1
B8		1
B6		1

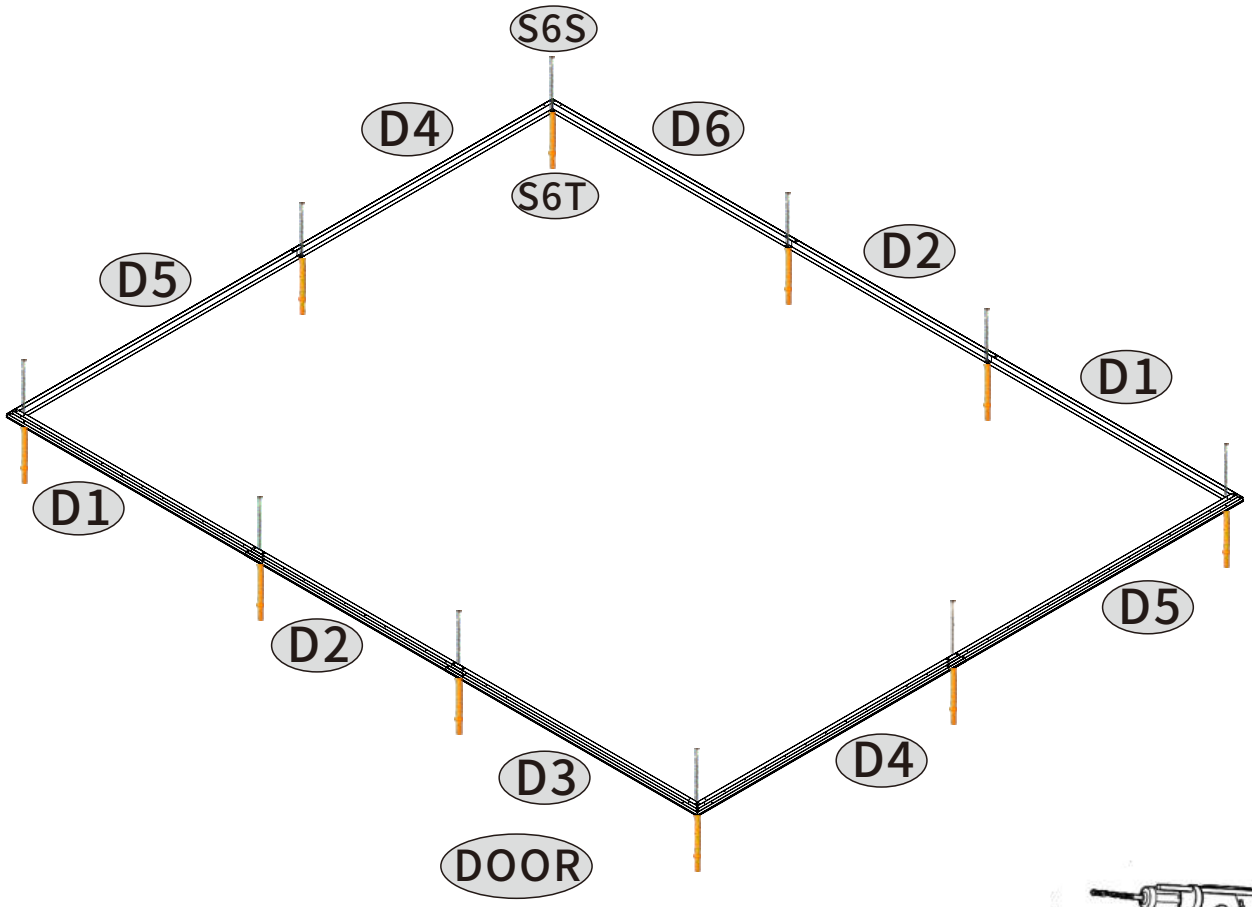
REF	IMAGE	QTY
G1		1
G2		1
G3		1
CK-1		3
CK-2		3
CK-3		3
CK-4		3
CT-1		3
CT-2		6
CL-1		3
CL-2		3
CL-3		3
CL-4		3
CR-1		3
CR-2		3
CR-3		3
CR-4		3
C01		6
HL1		1
HL2		2
HL3		10
HL4		12
HL5		4
HL6		8

REF	IMAGE	QTY
P4		4
P5		2
J1		4
J2		4
LATCH-A		1
LATCH-B		1
HG		12
HG-1		2
HANDLE		6
Slide Bolt		6
Support Rod		6
DJ-2		4
S1		200
S2		240
S3		700
S4		750
S5		460
S6S		10
S6T		10
S7		240
S10		60


D1
I
II
D2
D3
D1
I
II
D2
D6
D4
I
D5
X2


I
II
S3
D1
D2
S3
D3
D2
I
II
S3
D1
D2
S3
D6
D2
I
S3
D4
D5
X2

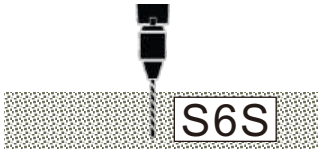

S3
D4
D6
D5
D2
D1
D1
D5
D2
D4
D3
DOOR



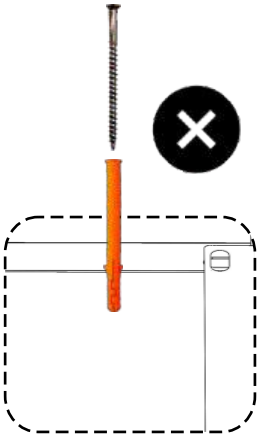




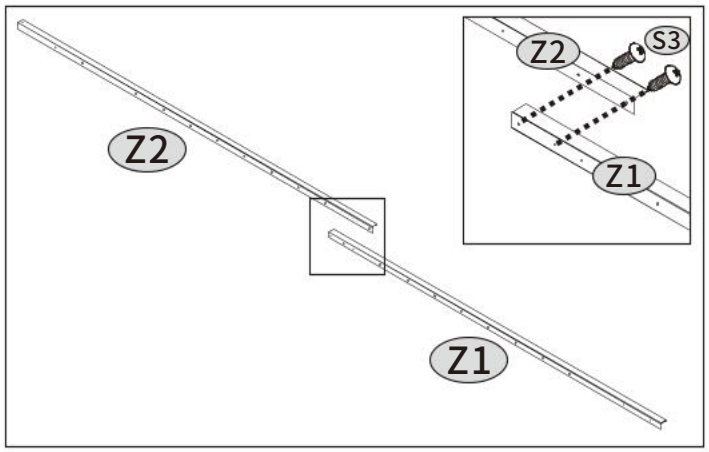
6mm

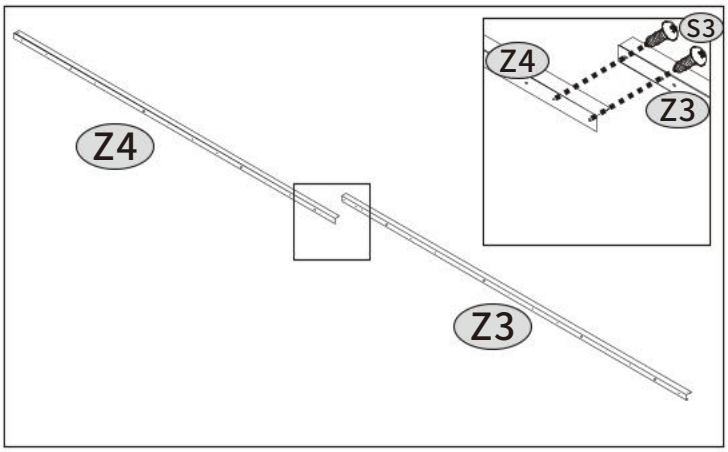


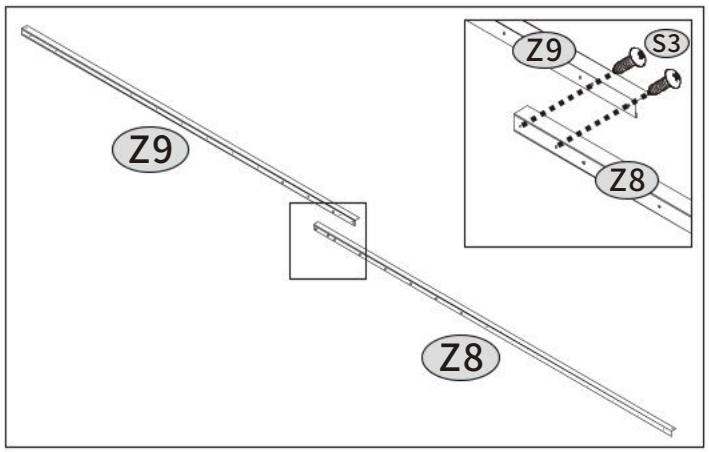


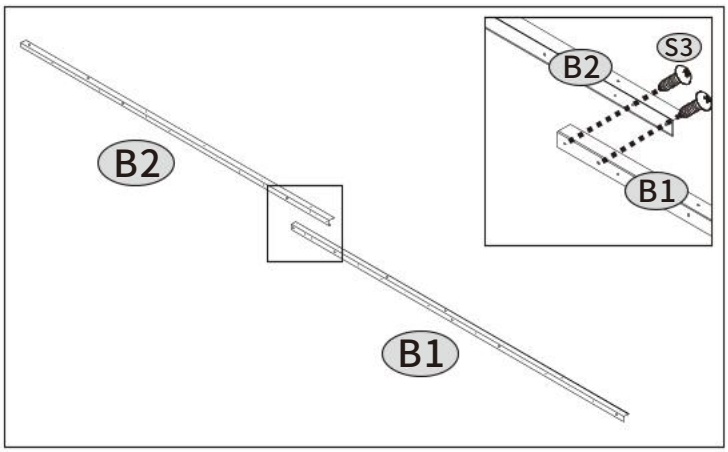


Please note that [S6S] and [S6T] consist of two parts: yellow tube and the matching screws.
You should first drive the tube into the pre-drilled screw hole, then screw the screw into the tube.

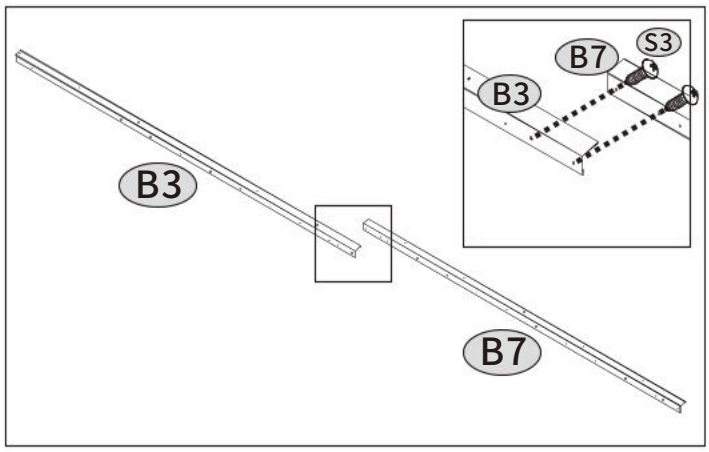

Z2
S3
Z2
Z1
Z1

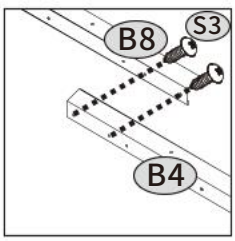

Z4
S3
Z4
Z3
Z3

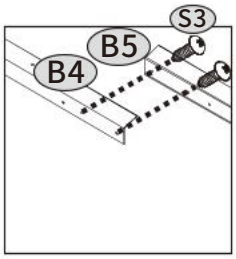

Z9
S3
Z9
Z8
Z8


B2
S3
B2
B1
B1

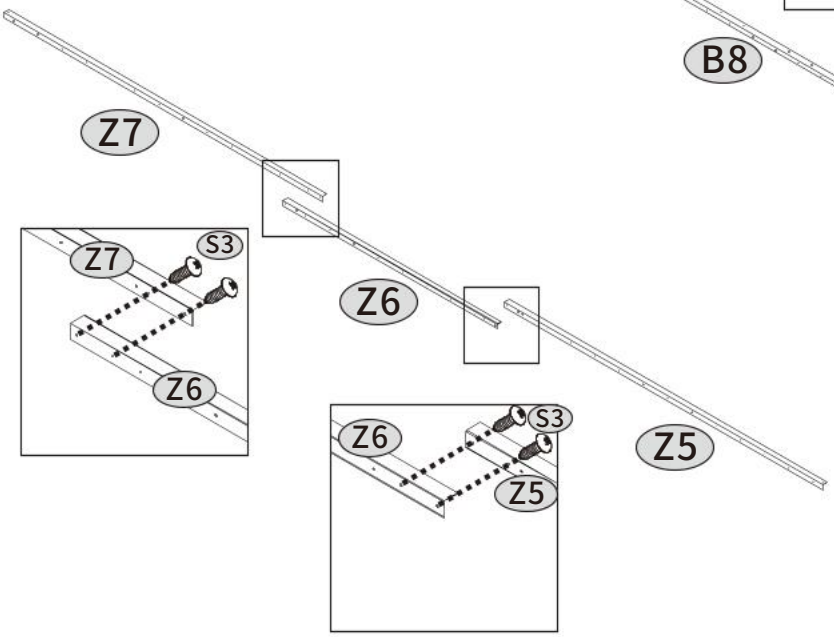
X2

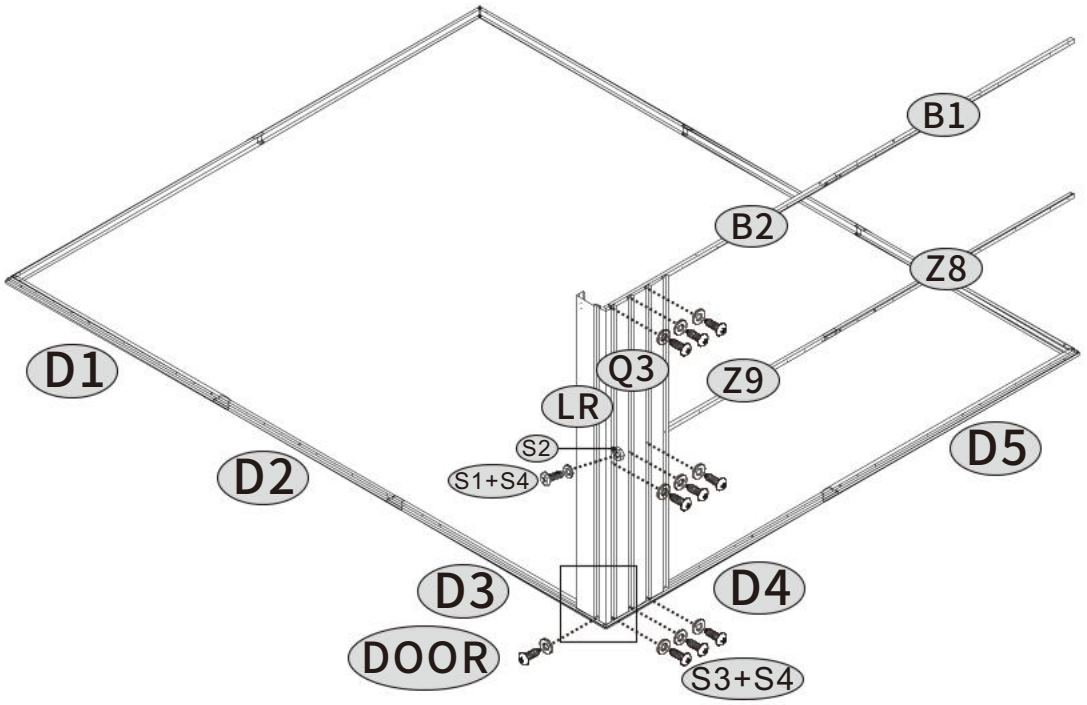

B3
B7
S3
B3
B7

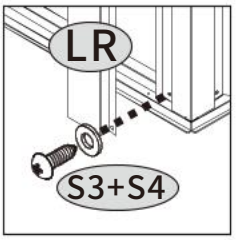

B8
S3
B4

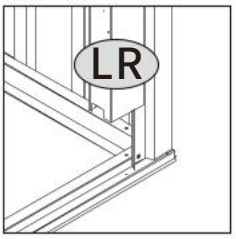

S3
B5
B4

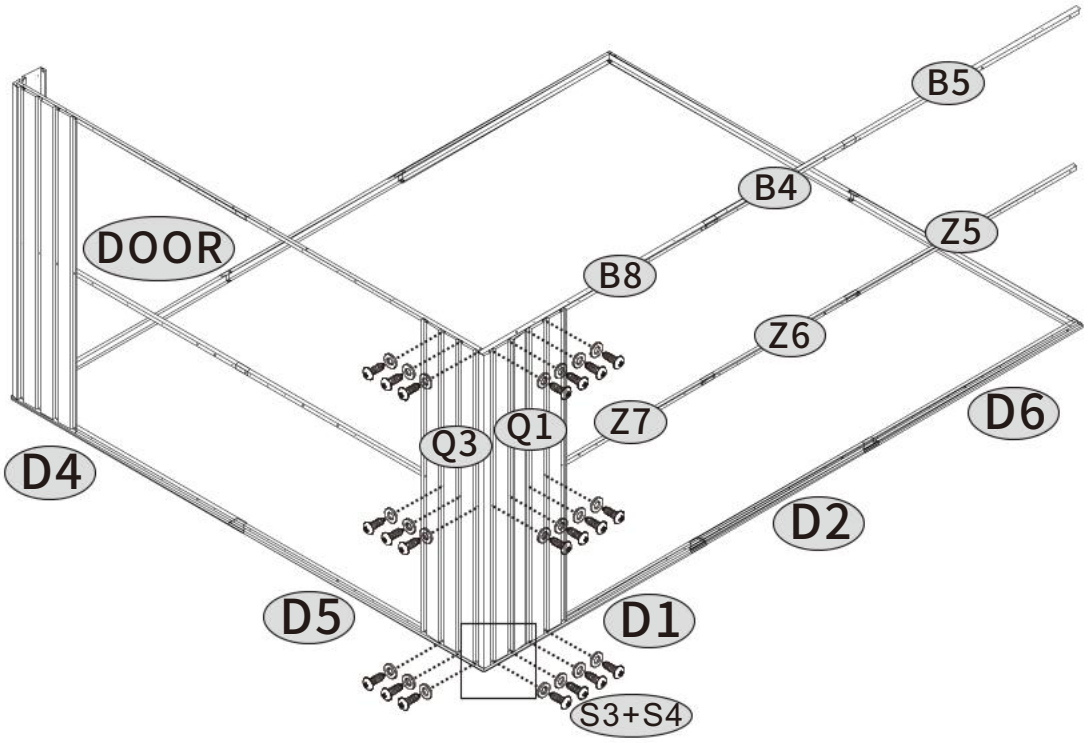
B8
B4
B5

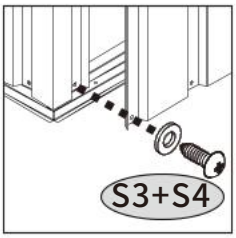

Z7
S3
Z7
Z6
Z6
Z6
S3
Z5
Z5

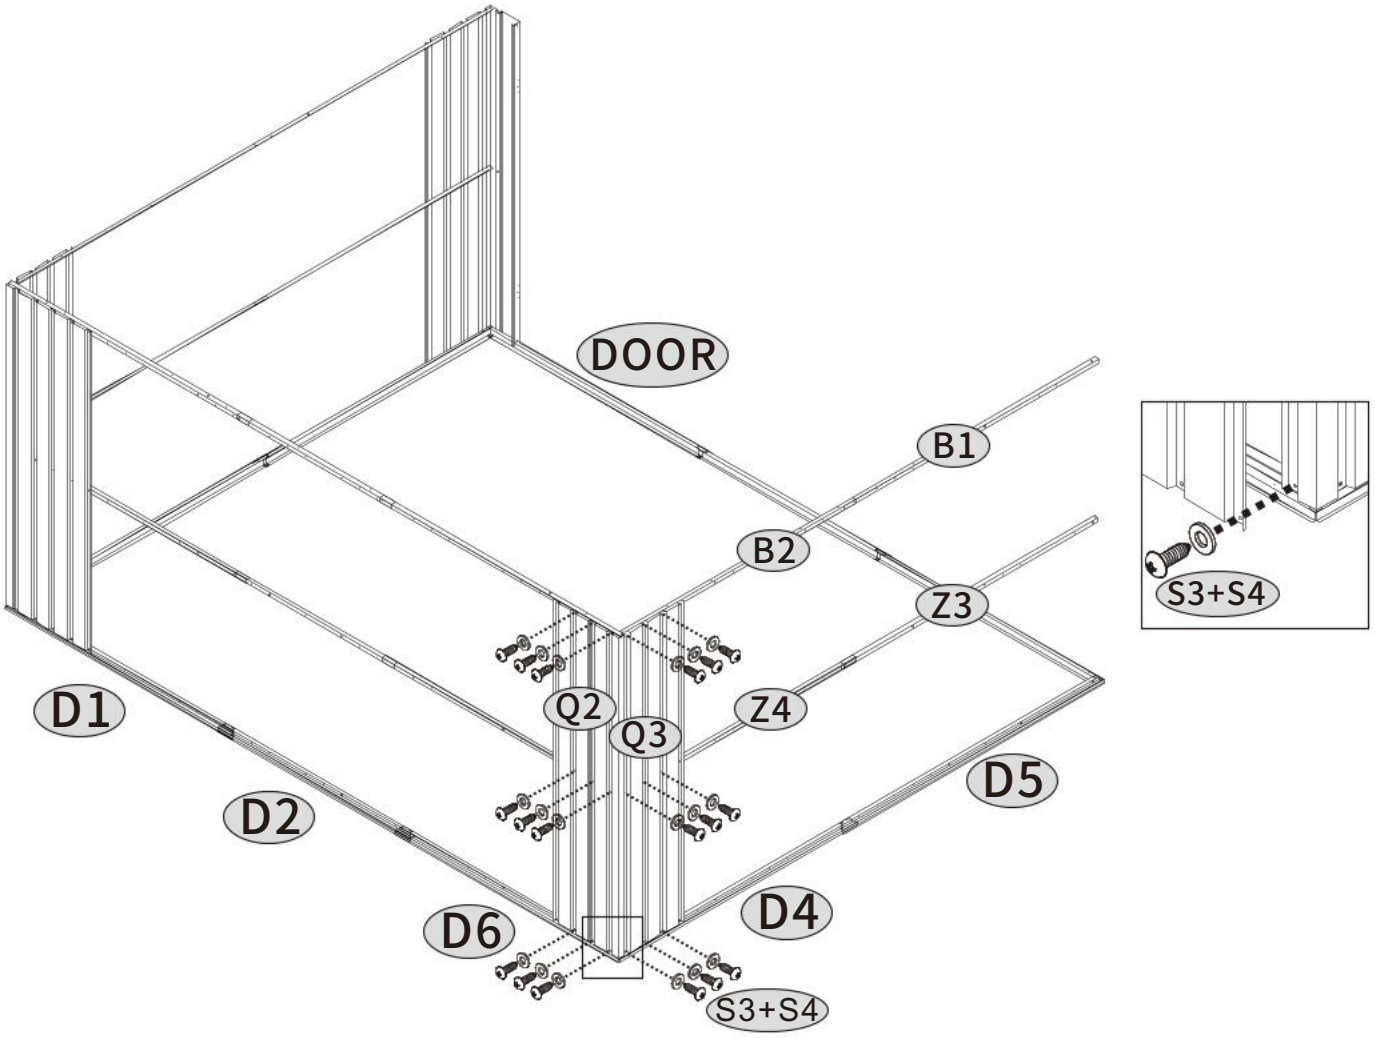

B1
B2
Z8
Z9
Q3
LR
S2
S1+S4
D1
D2
D5
D3
D4
DOOR
S3+S4

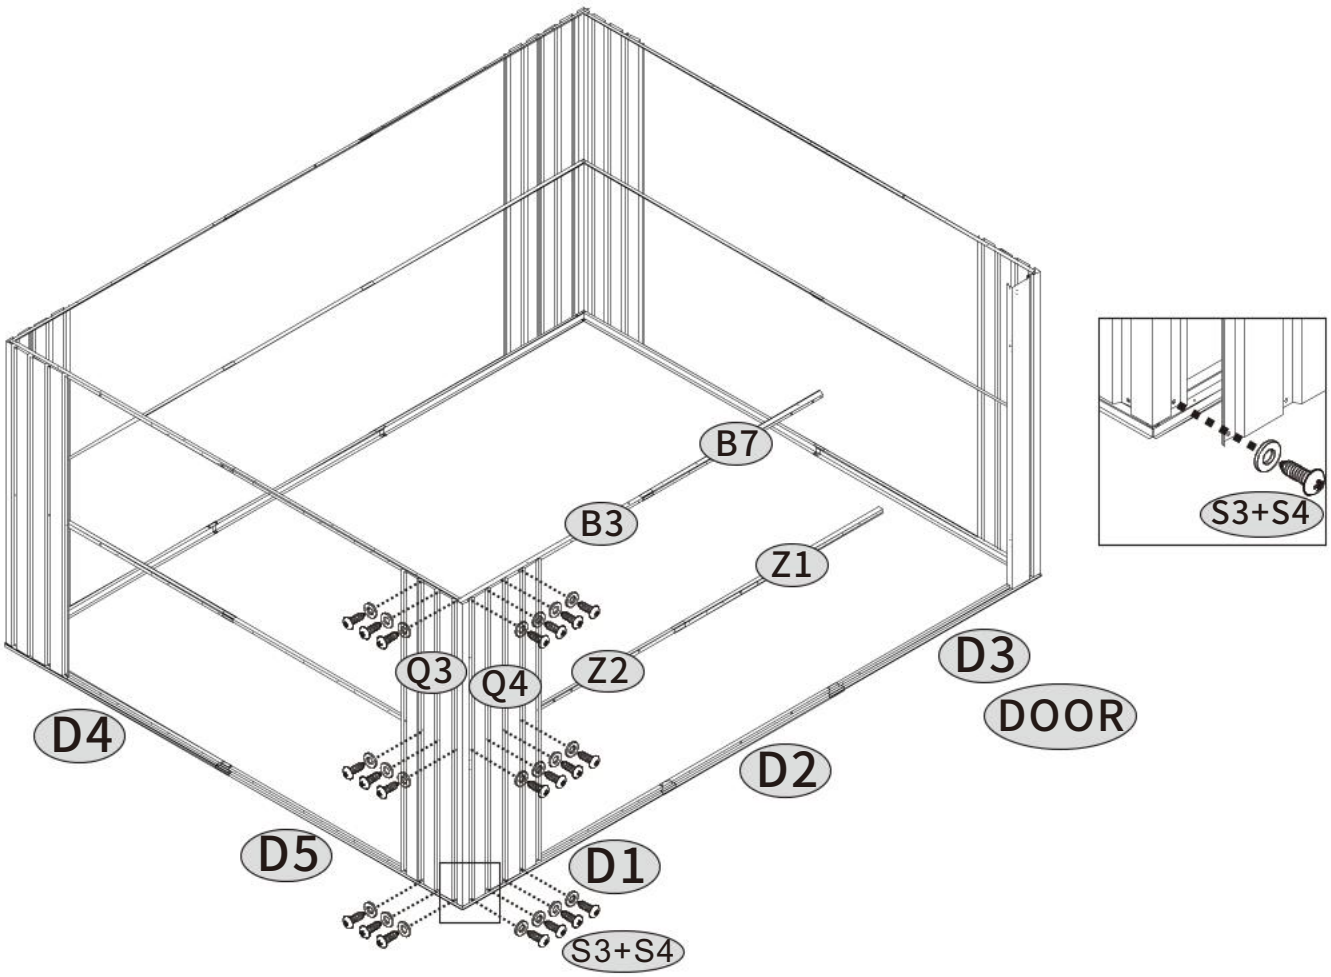

LR
S3+S4

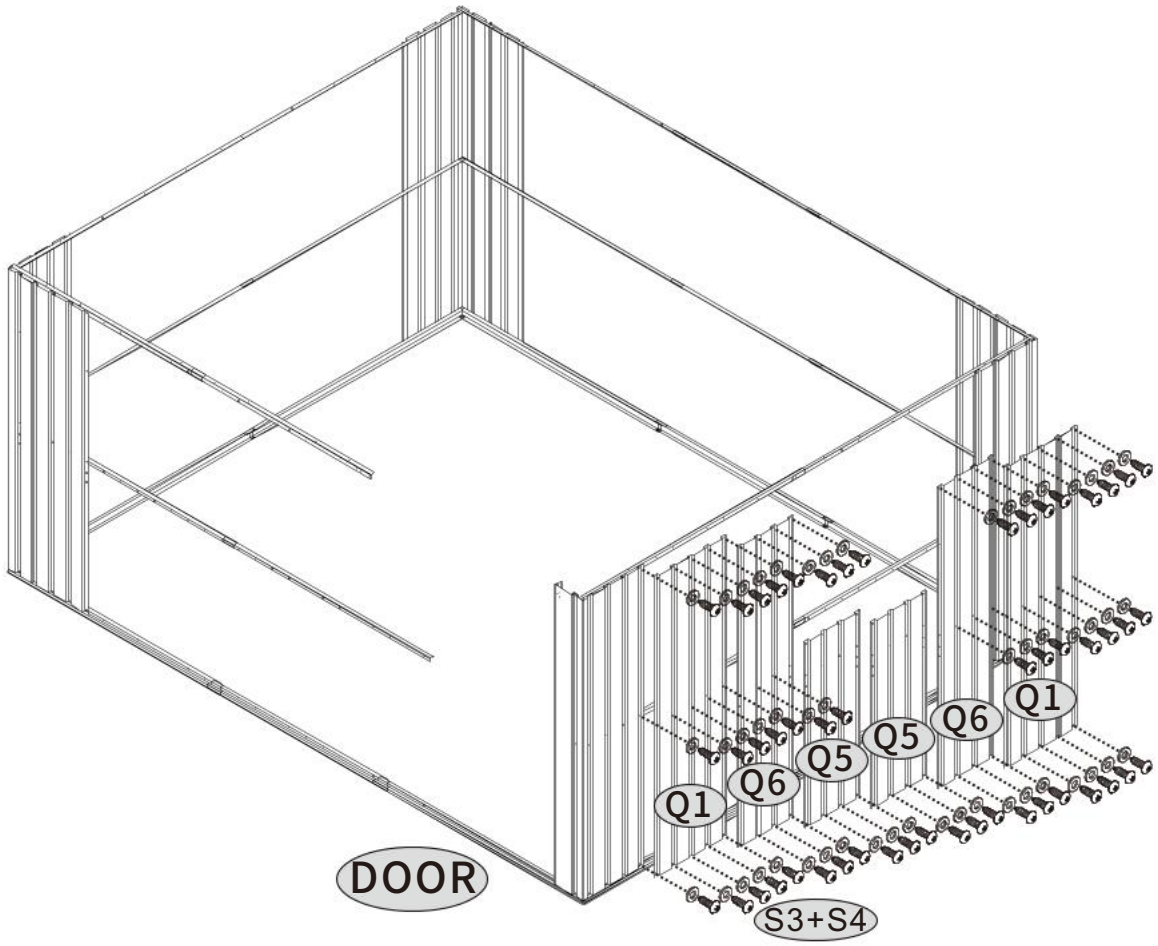

LR

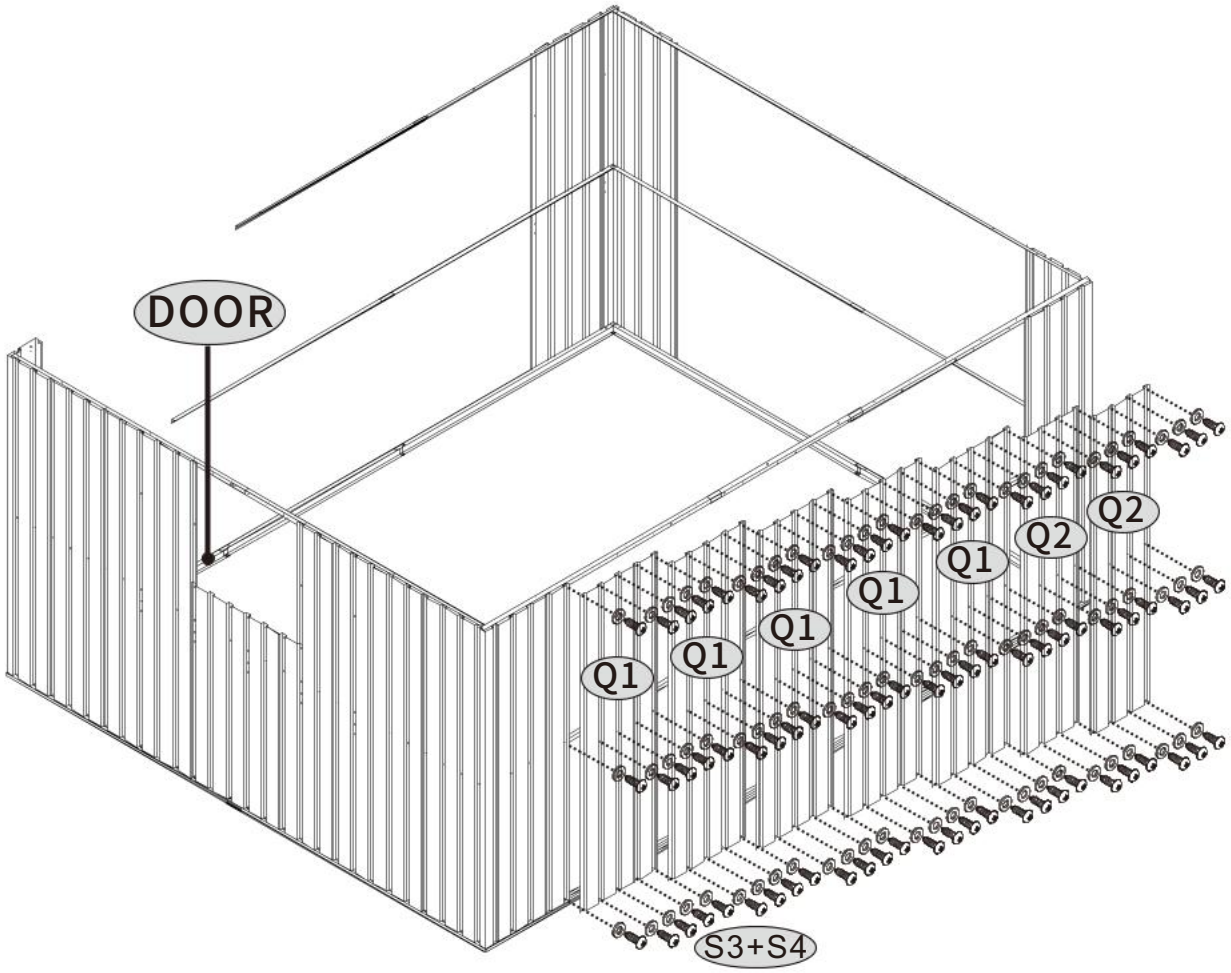

B5
B4
Z5
B8
Z6
Z7
Q3
Q1
DOOR
D4
D6
D2
D5
D1
S3+S4

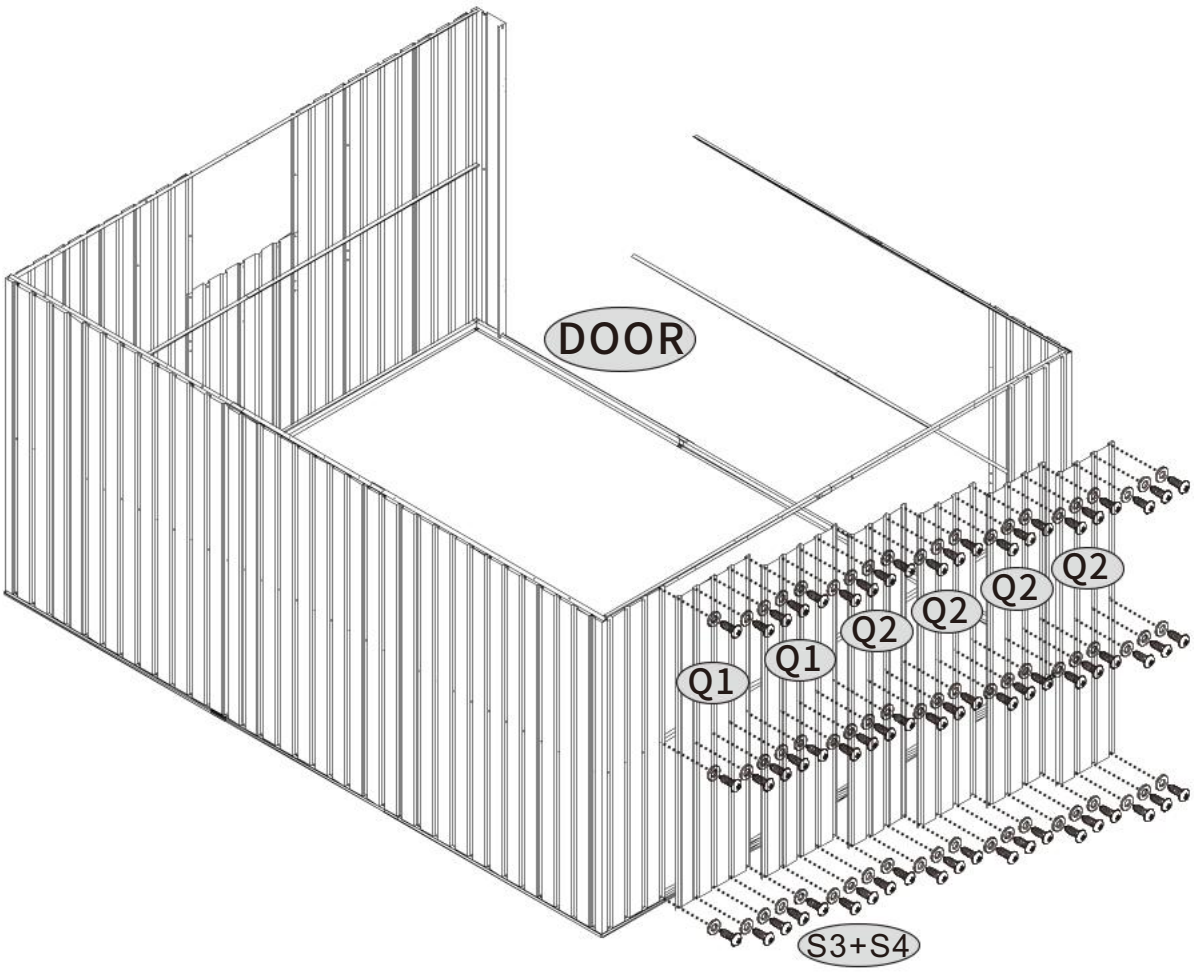

S3+S4

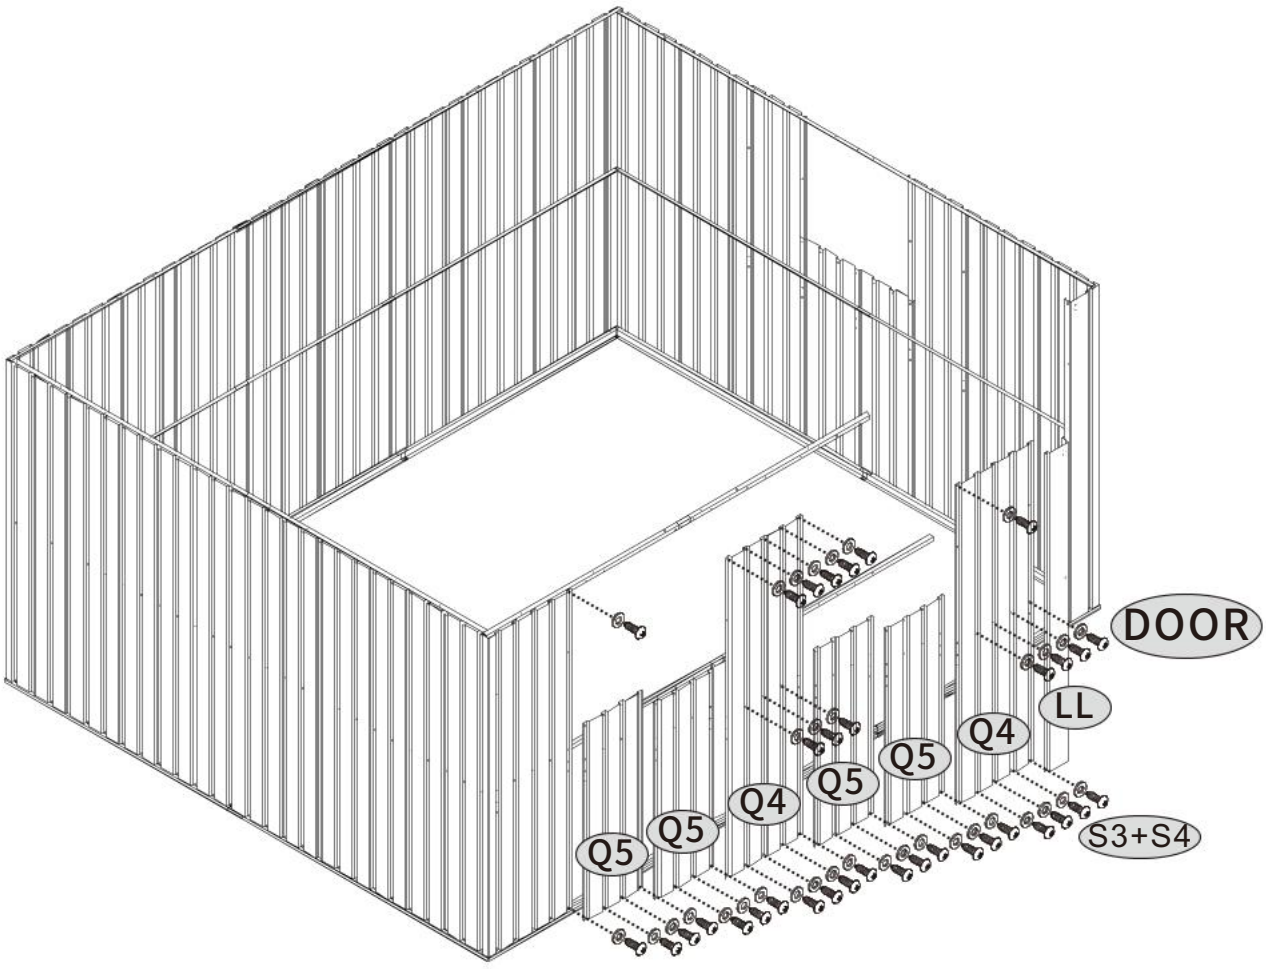

DOOR
B1
B2
Z3
Z4
Q2
Q3
D1
D2
D5
D4
D6
S3+S4
S3+S4

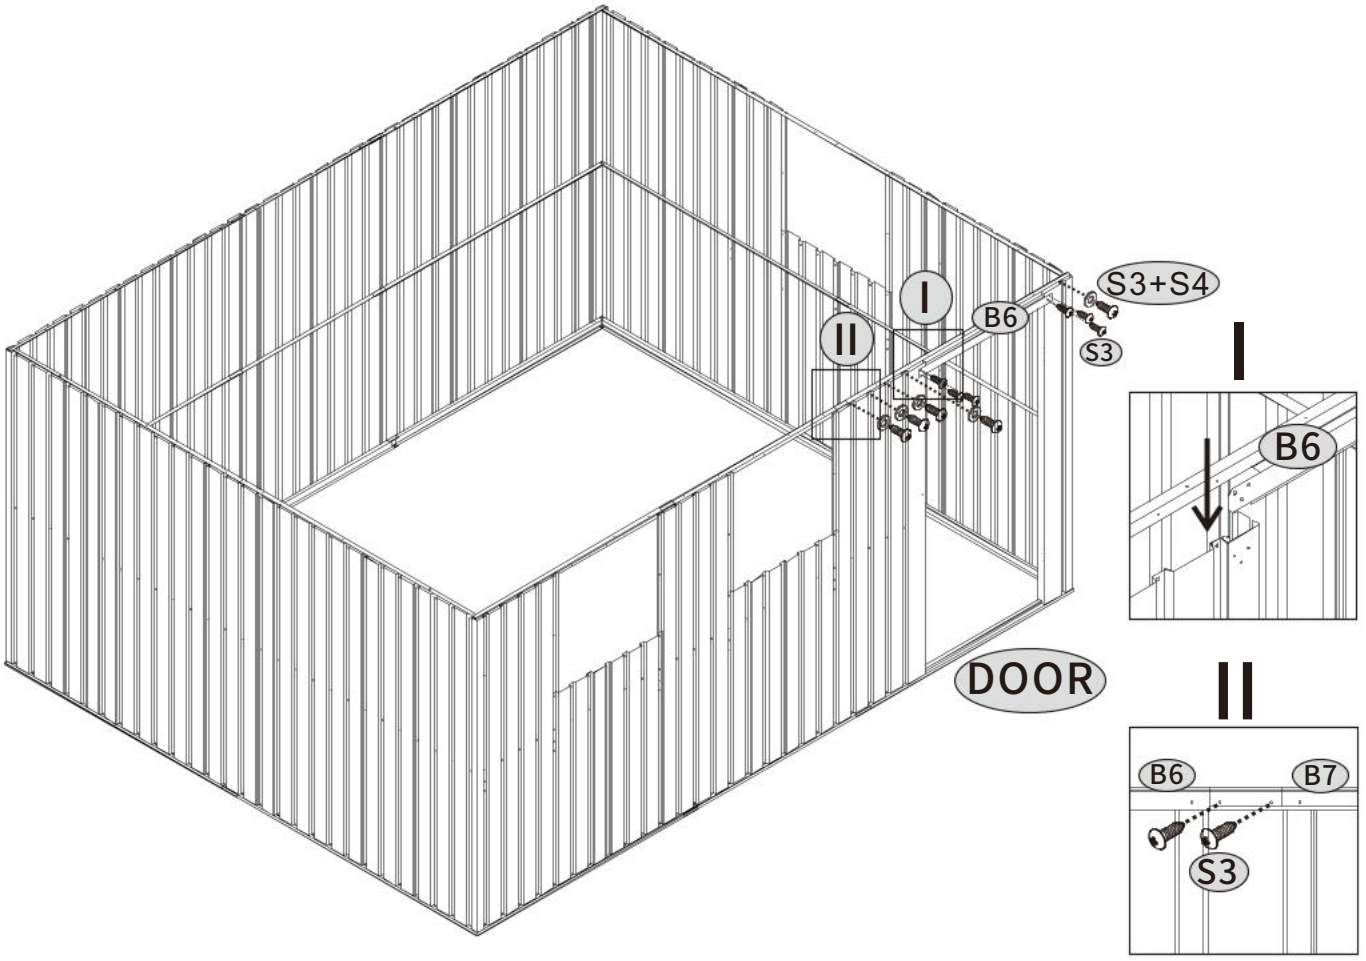

B7
B3
Z1
Z2
Q3
Q4
D3
DOOR
D4
D2
D5
D1
S3+S4
S3+S4

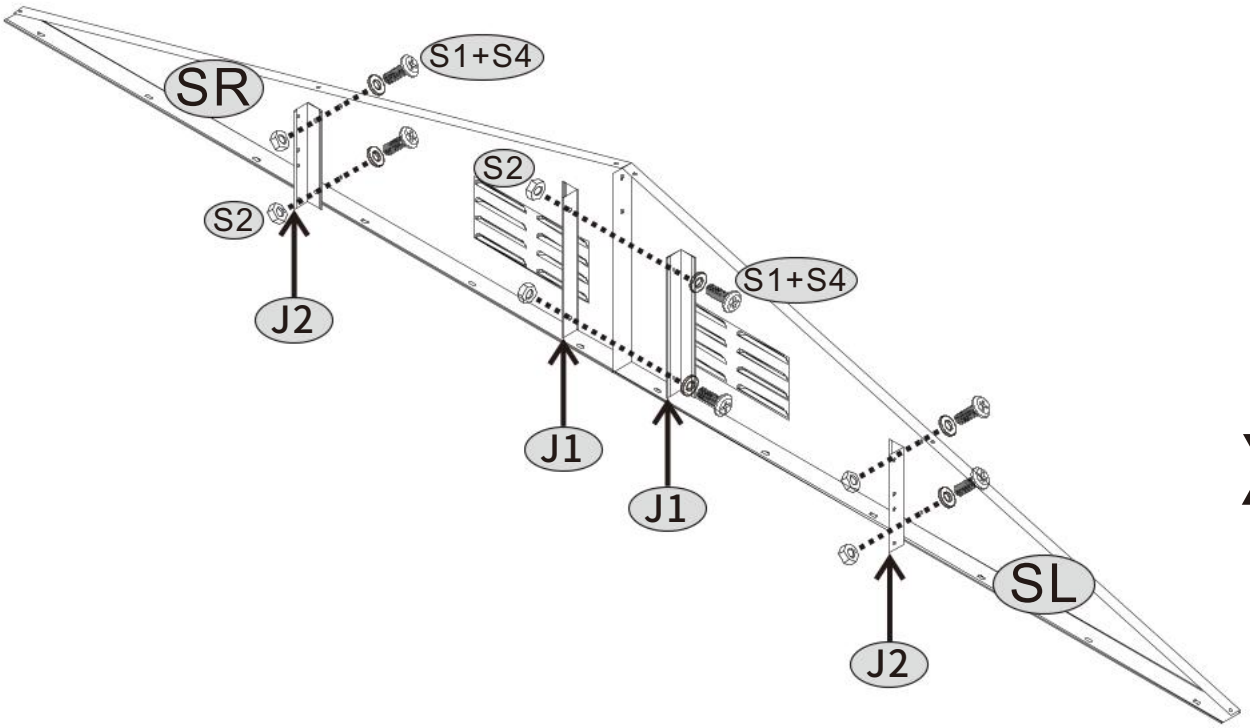

Q1
Q6
Q5
Q5
Q6
Q1
DOOR
S3+S4


DOOR
Q2
Q2
Q1
Q1
Q1
Q1
Q1
S3+S4

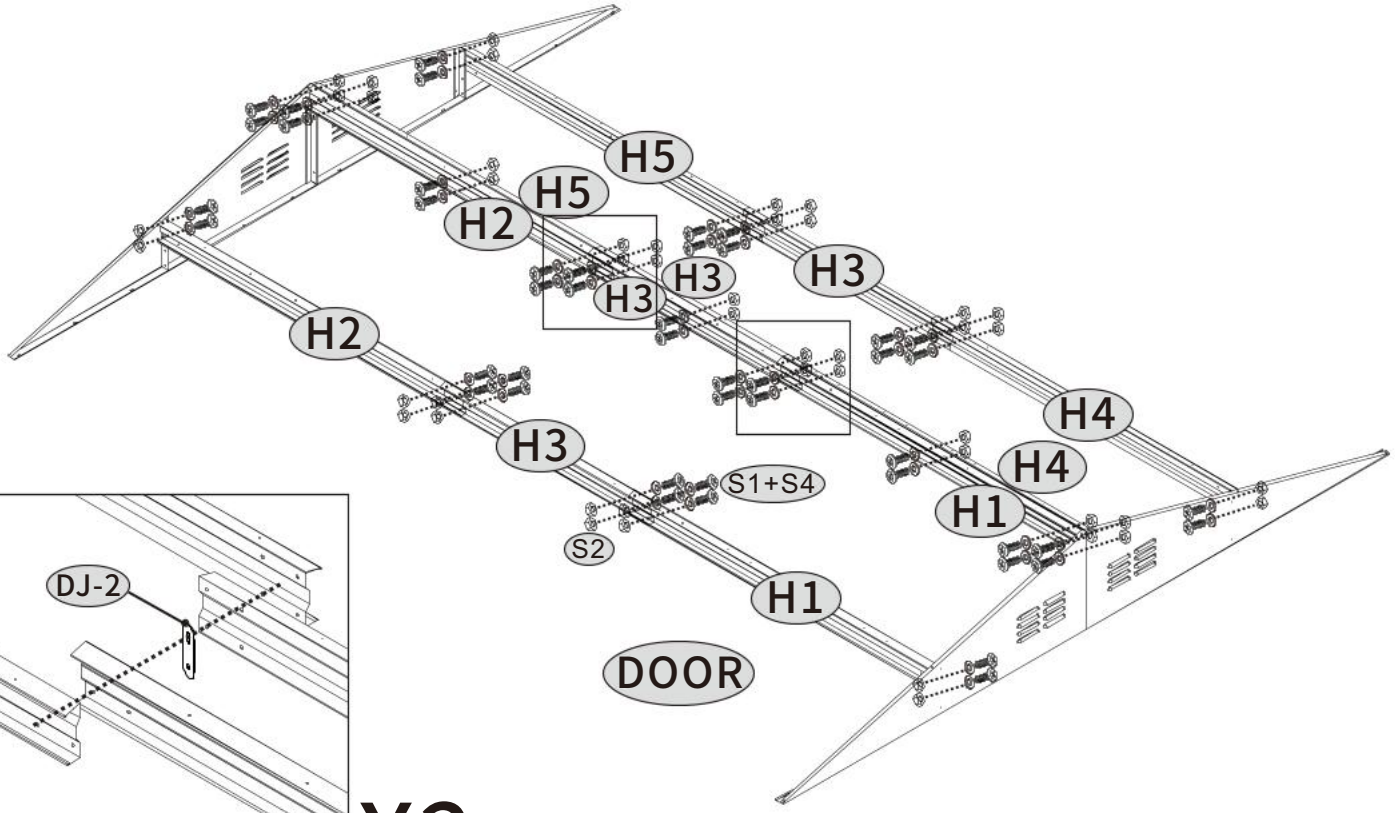

DOOR
Q2
Q2
Q2
Q2
Q1
Q1
S3+S4


DOOR
LL
Q4
Q5
Q5
Q4
Q5
S3+S4

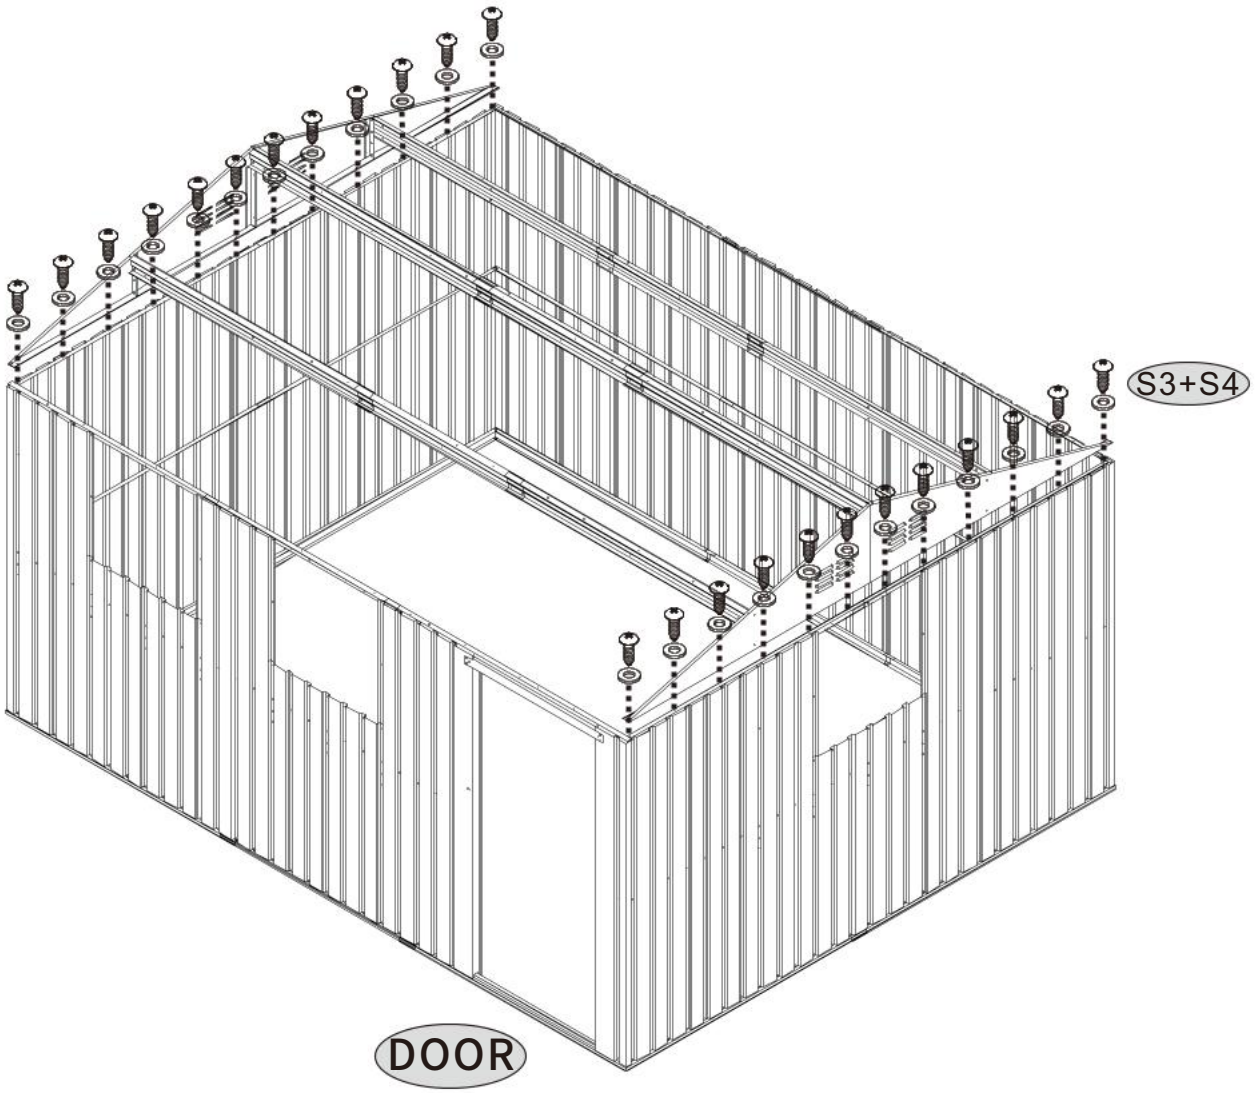

S3+S4
I
B6
S3
II
DOOR
I
B6
II
B6
B7
S3


SR
S1+S4
S2
S2
J2
S1+S4
J1
J1
SL
J2

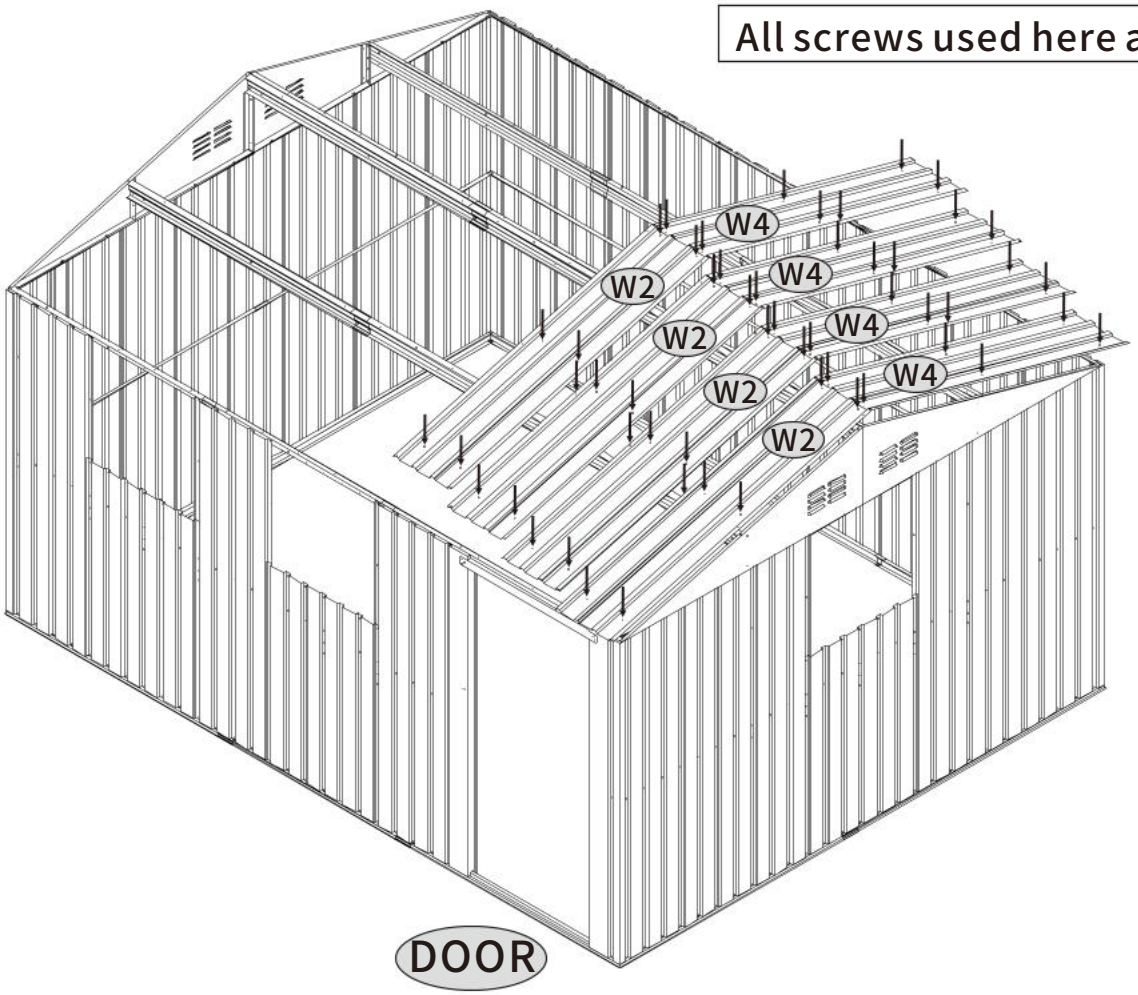
X2

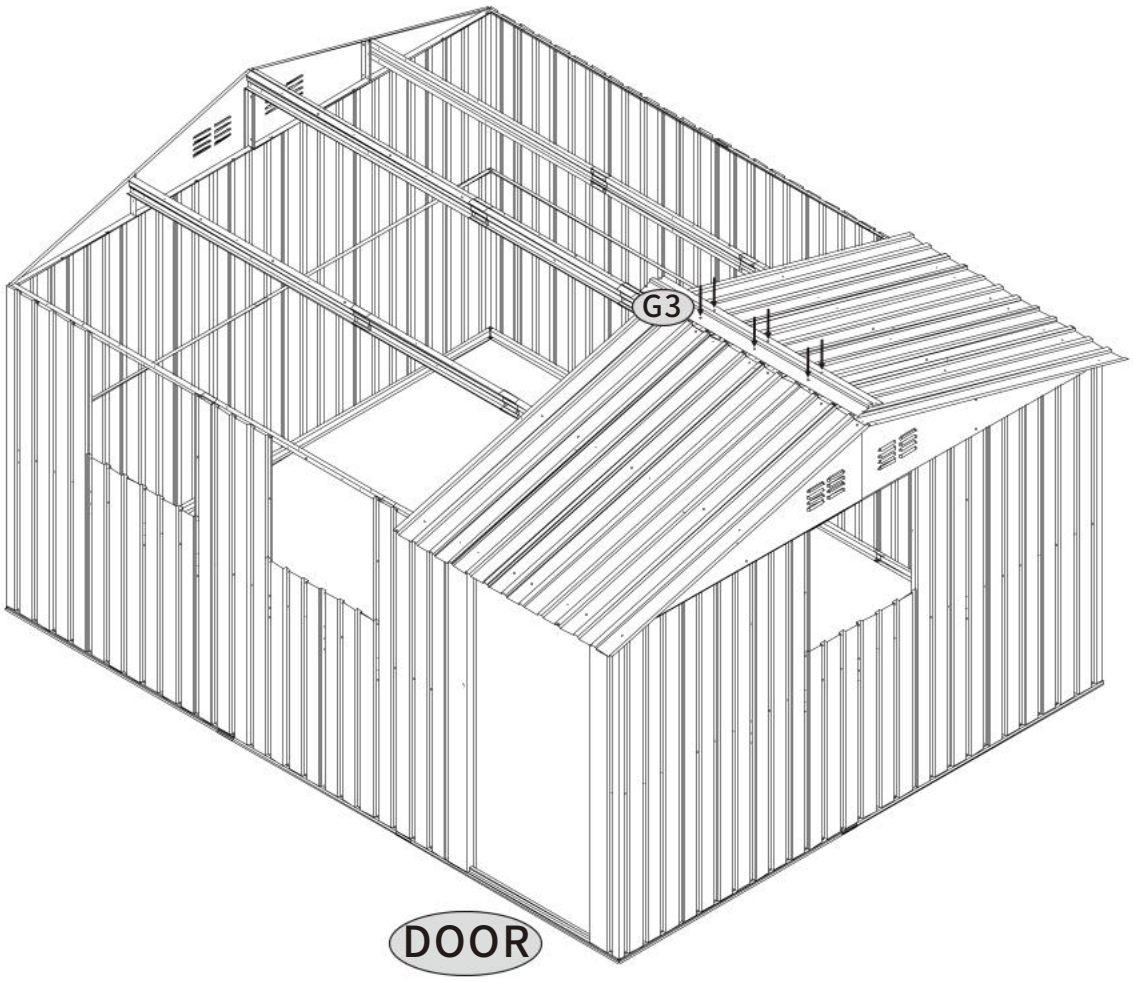


X2

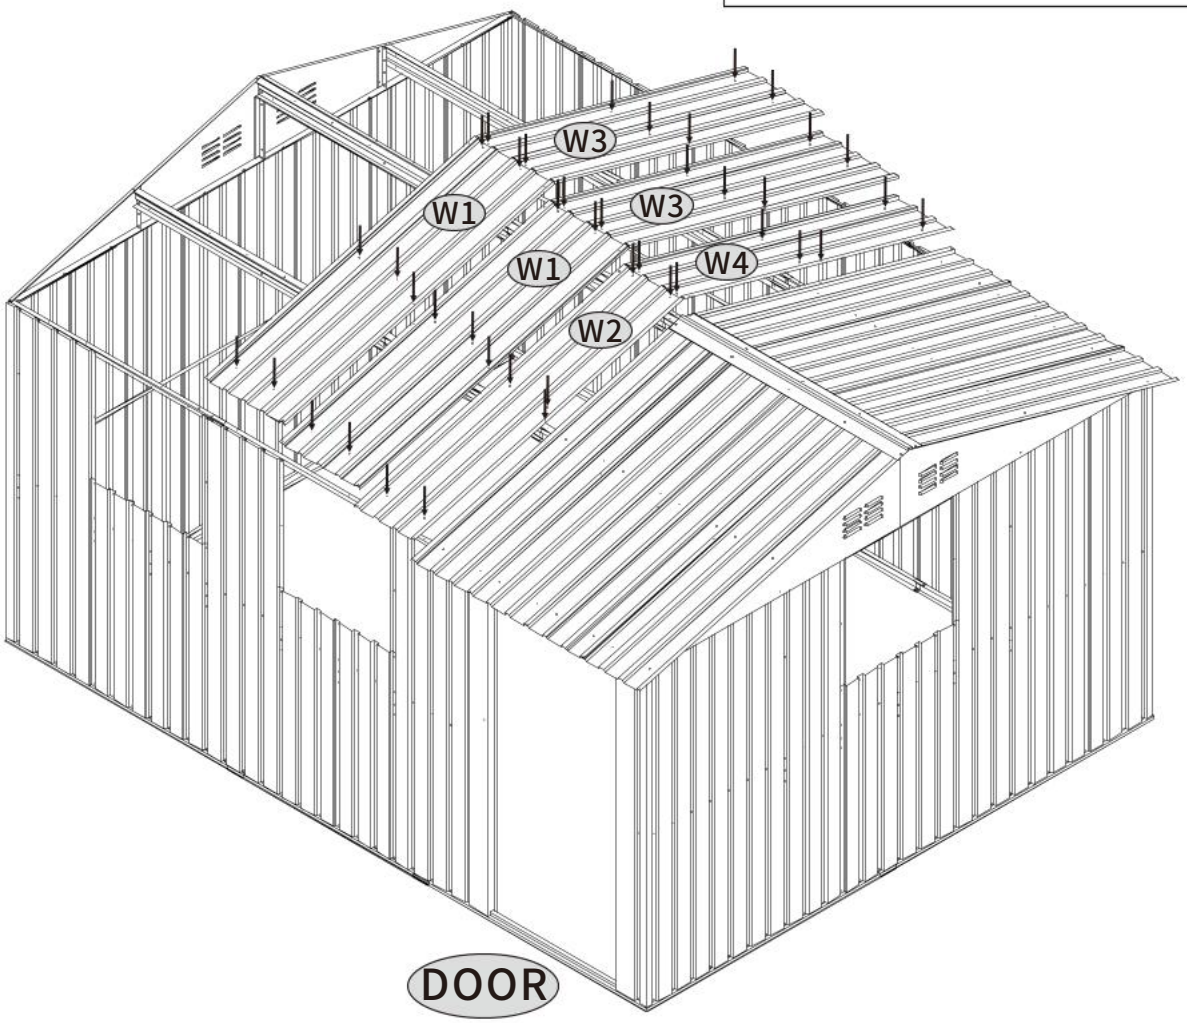


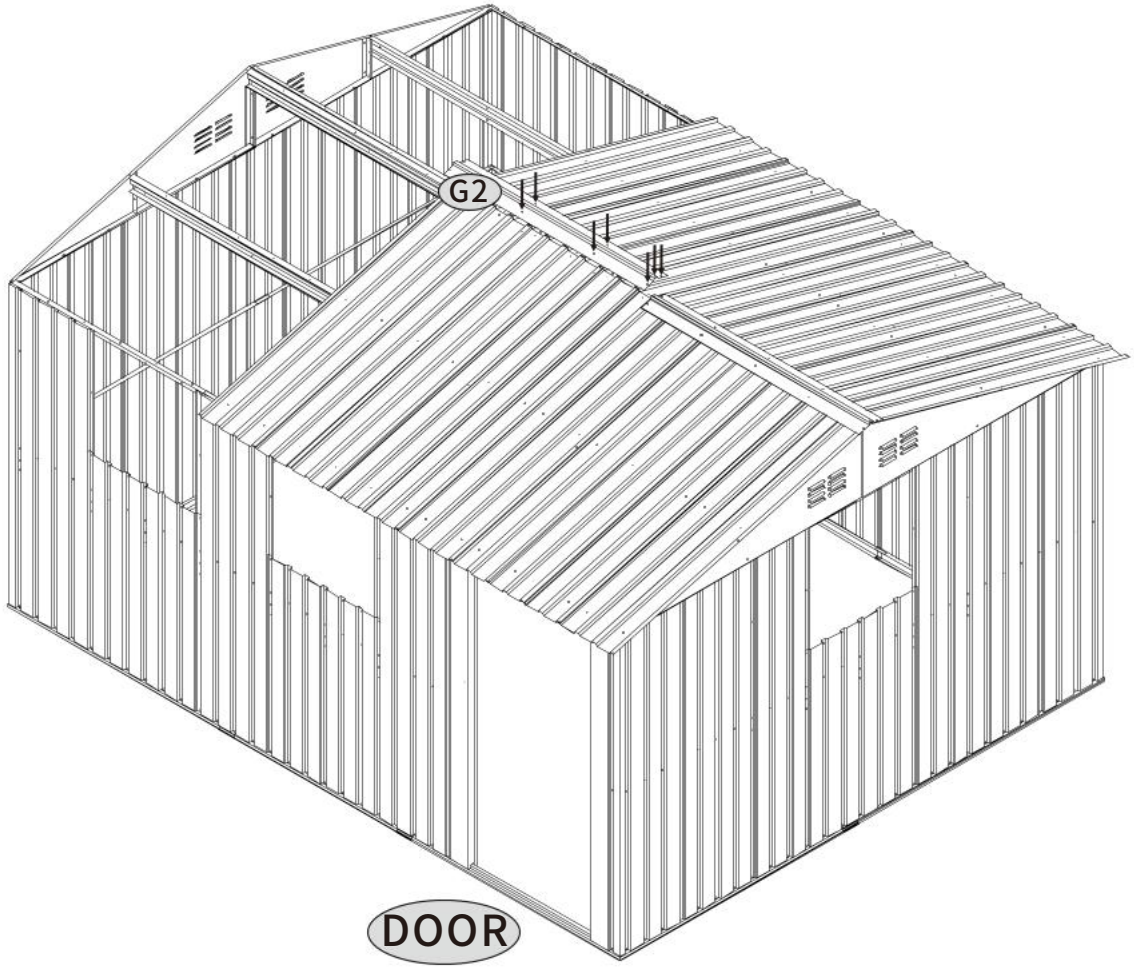
All screws used here are S3 and S4.



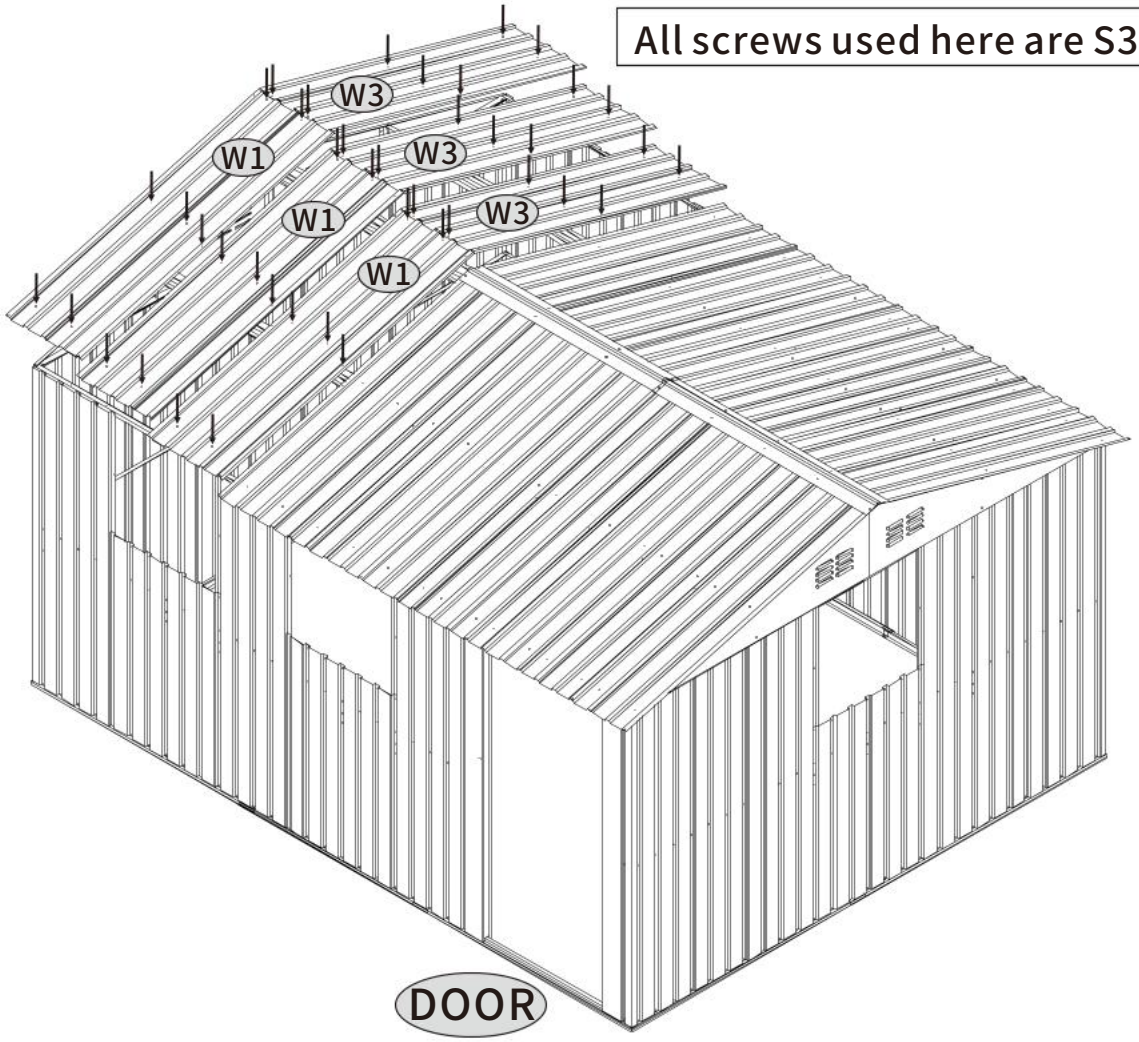


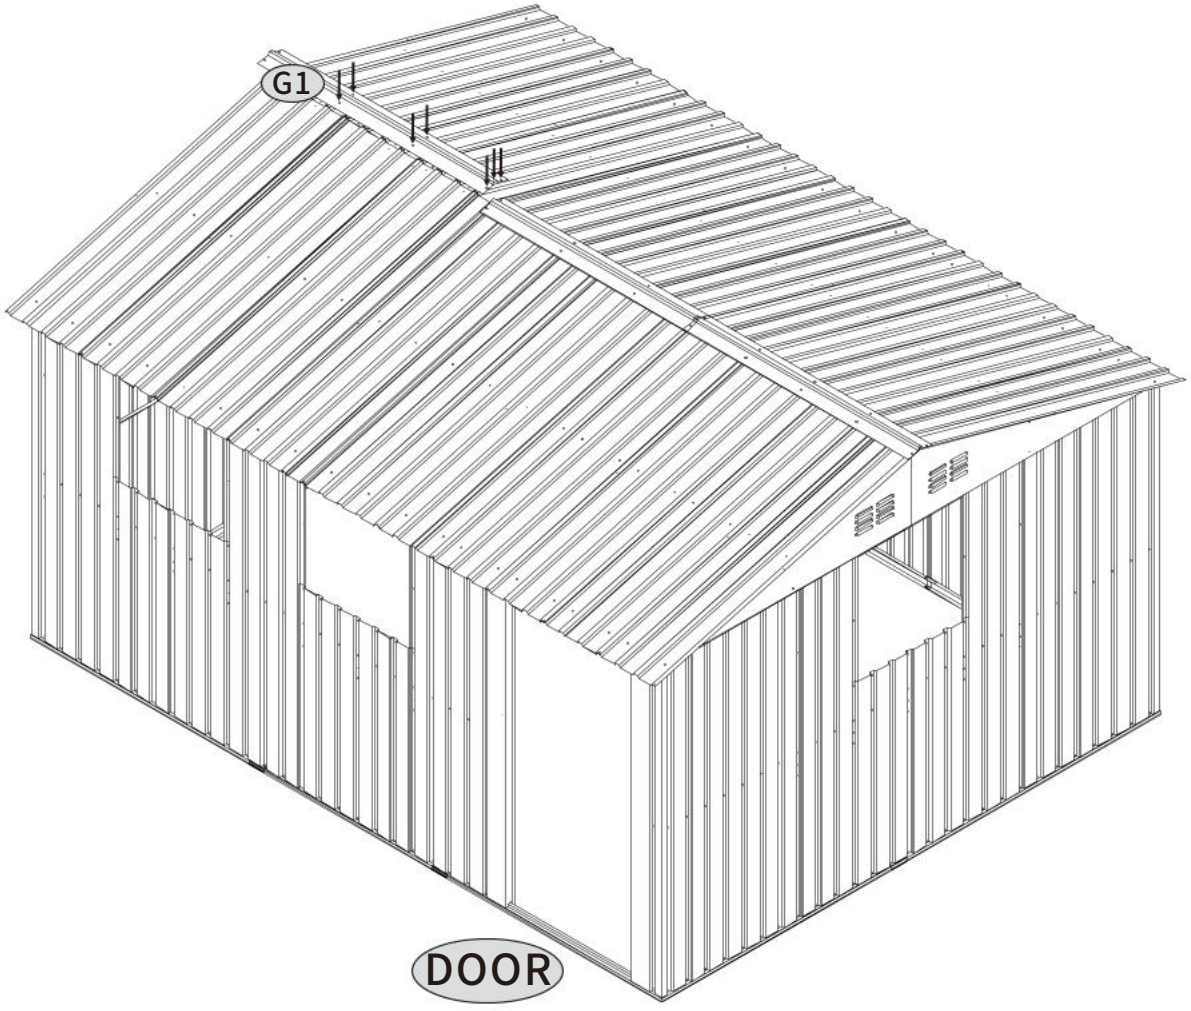
All screws used here are S3 and S4.



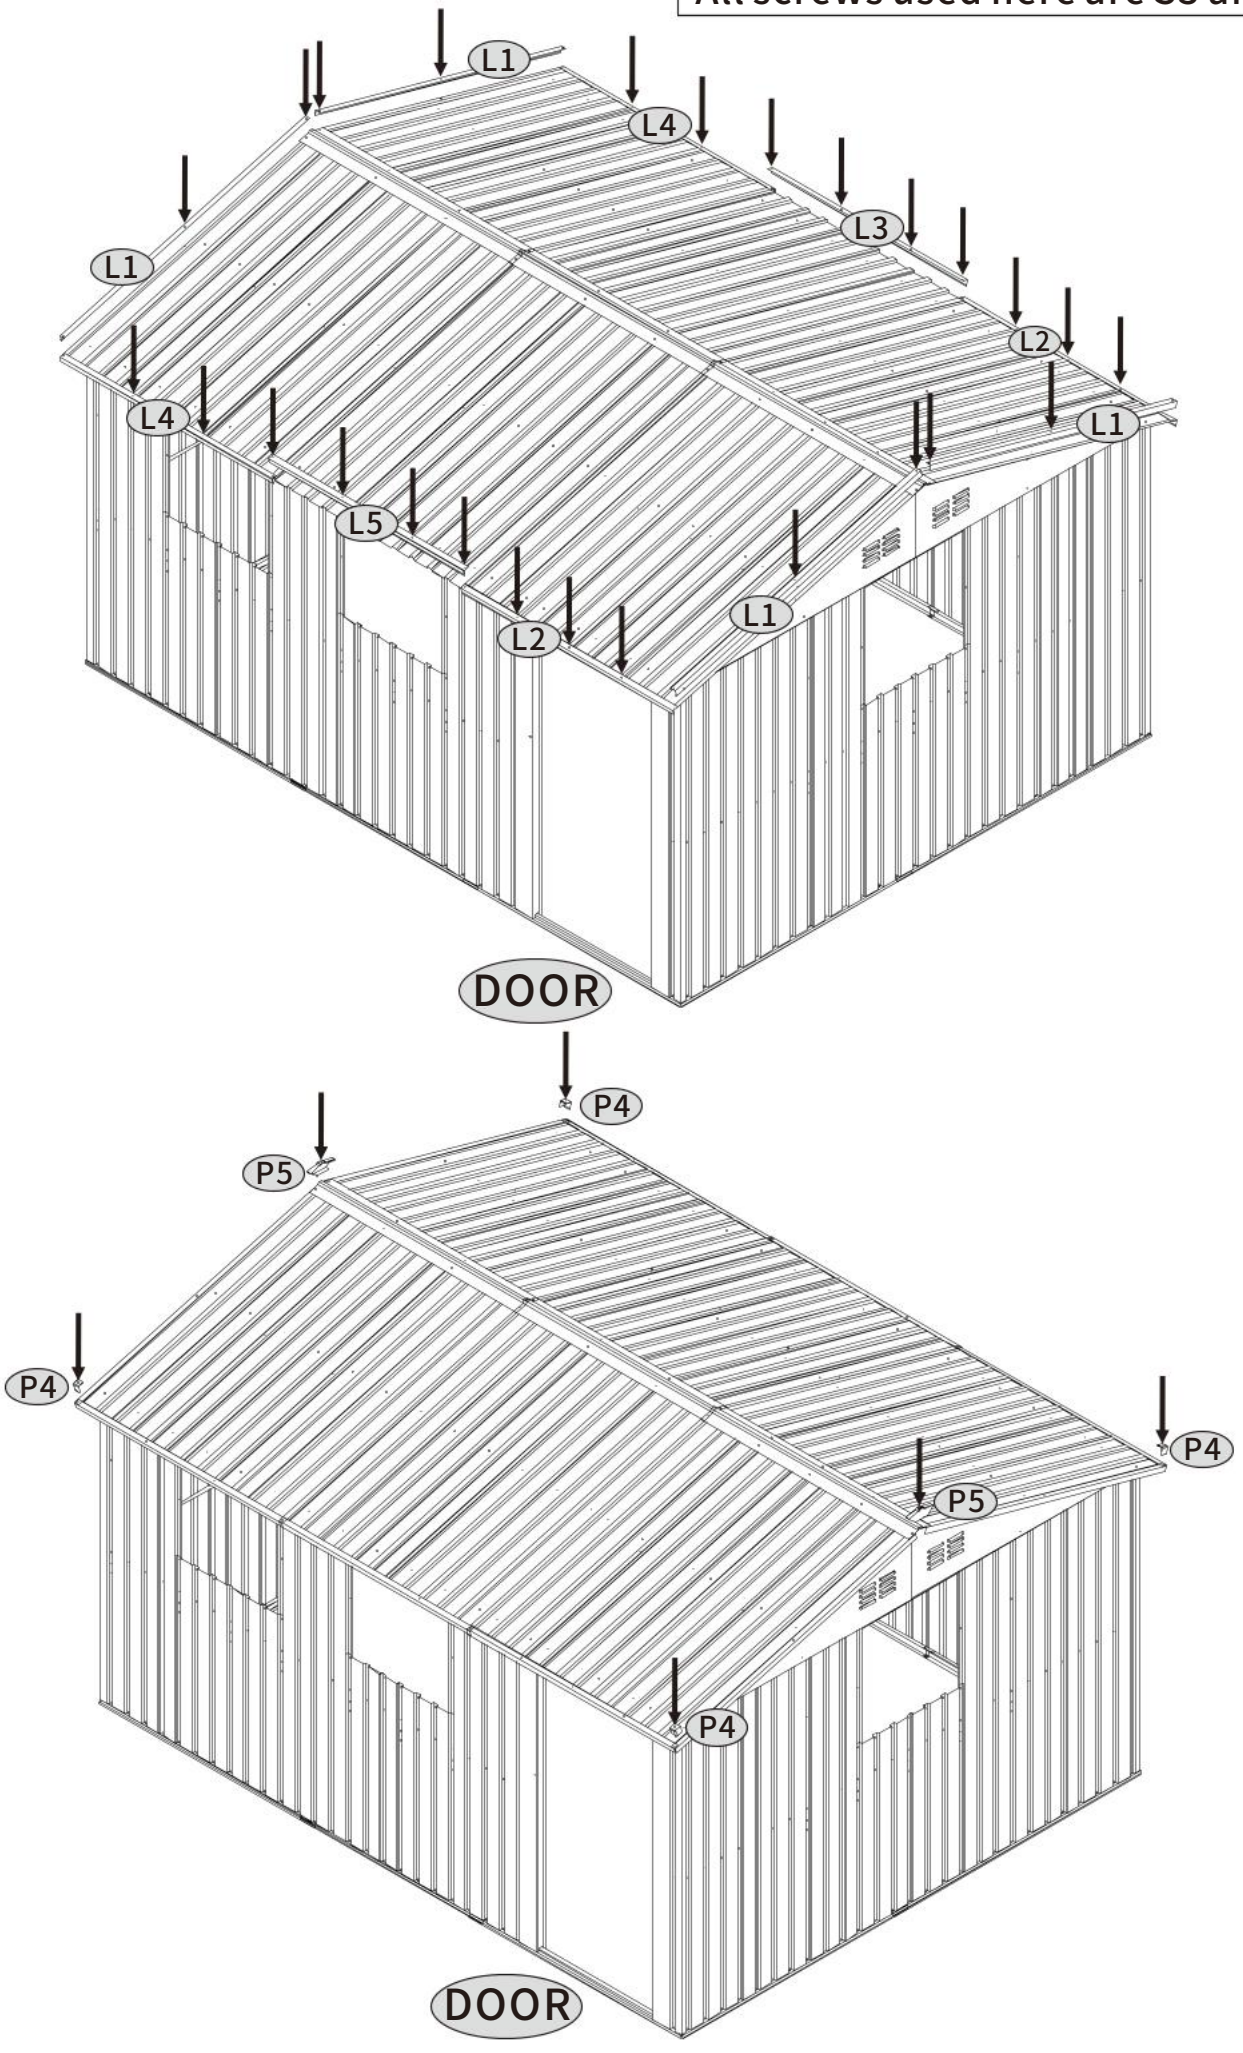


All screws used here are S3 and S4.



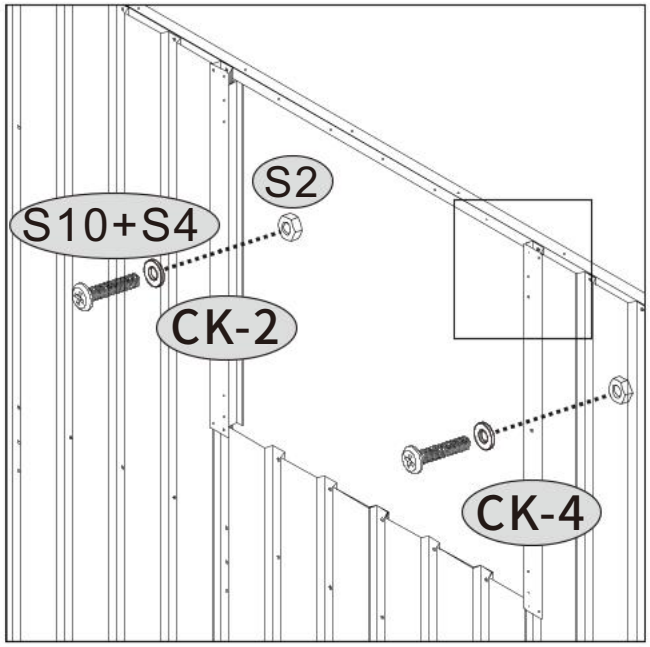


All screws used here are S3 and S4.



Note:
Window installation steps are shown on a flat surface for clarity.
Perform actual installation on a complete wall structure.

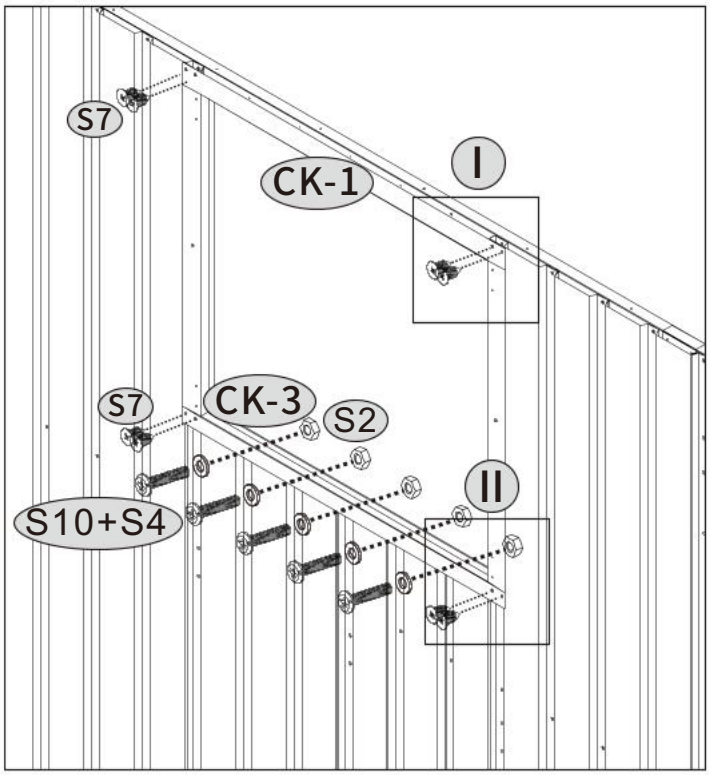
External View



X3



External View



X3

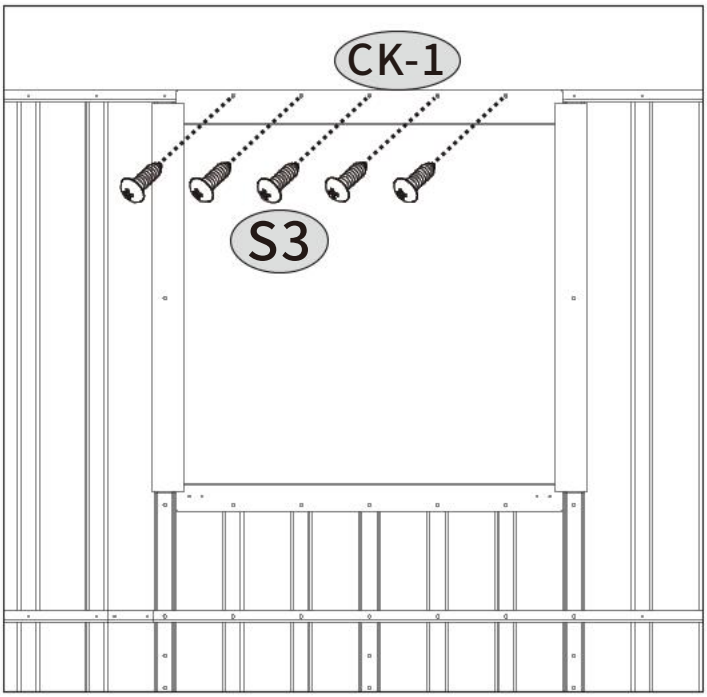
I



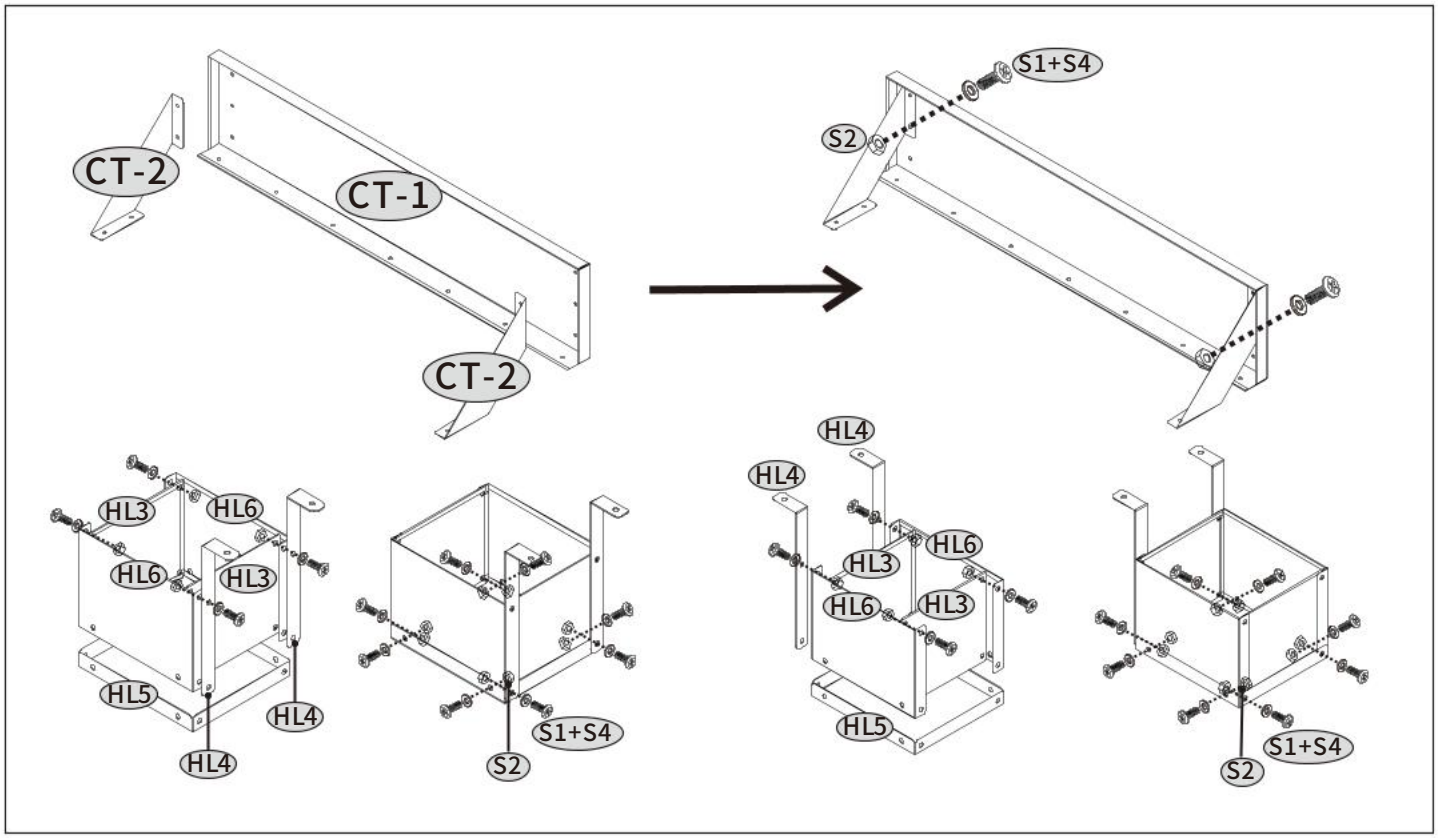
II



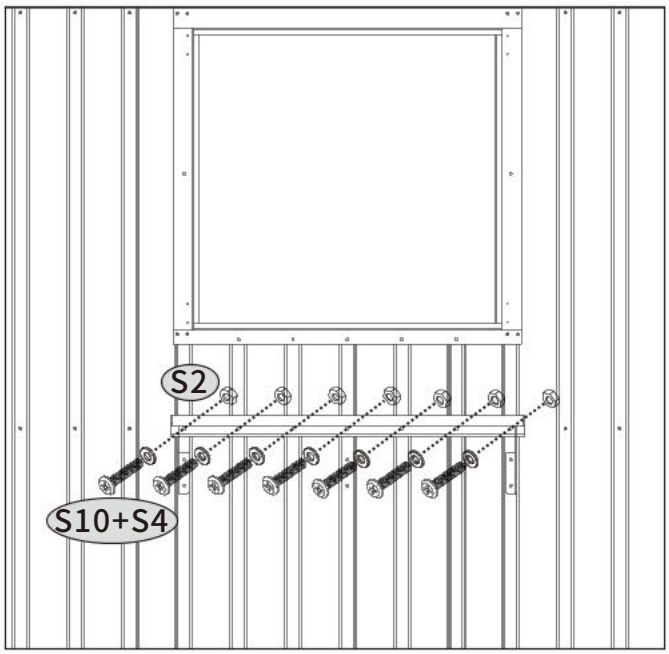
Internal View



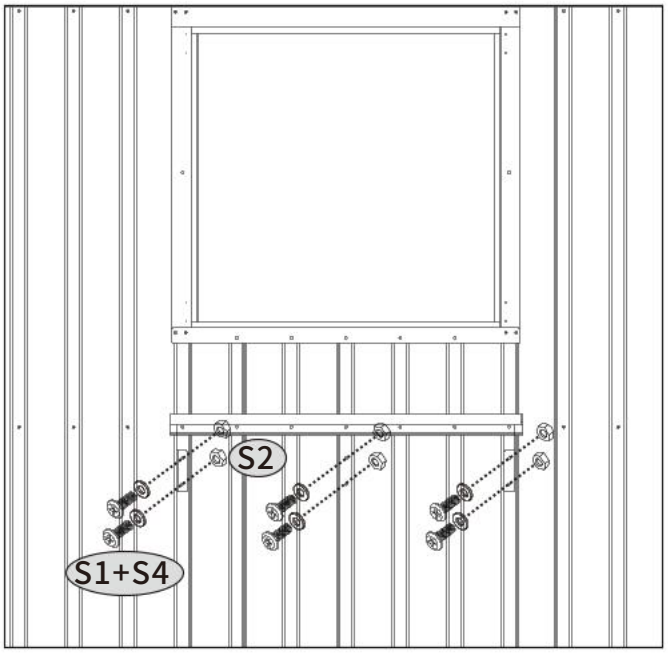
X3



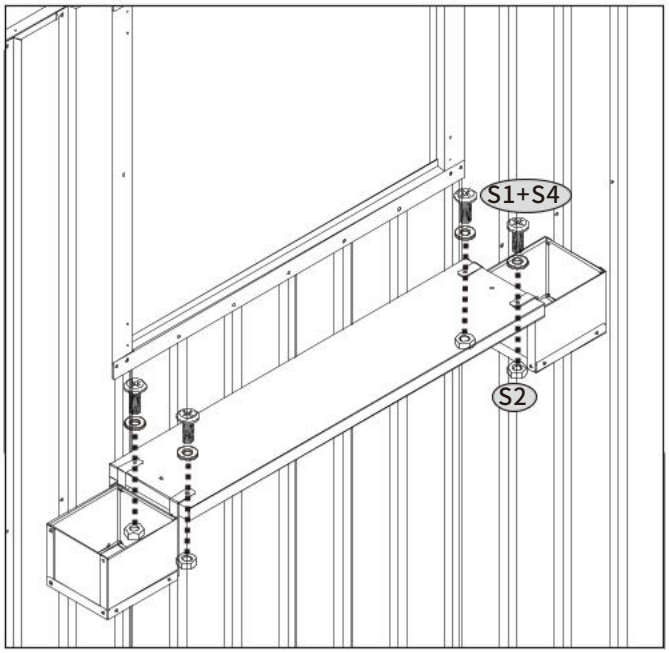
External View



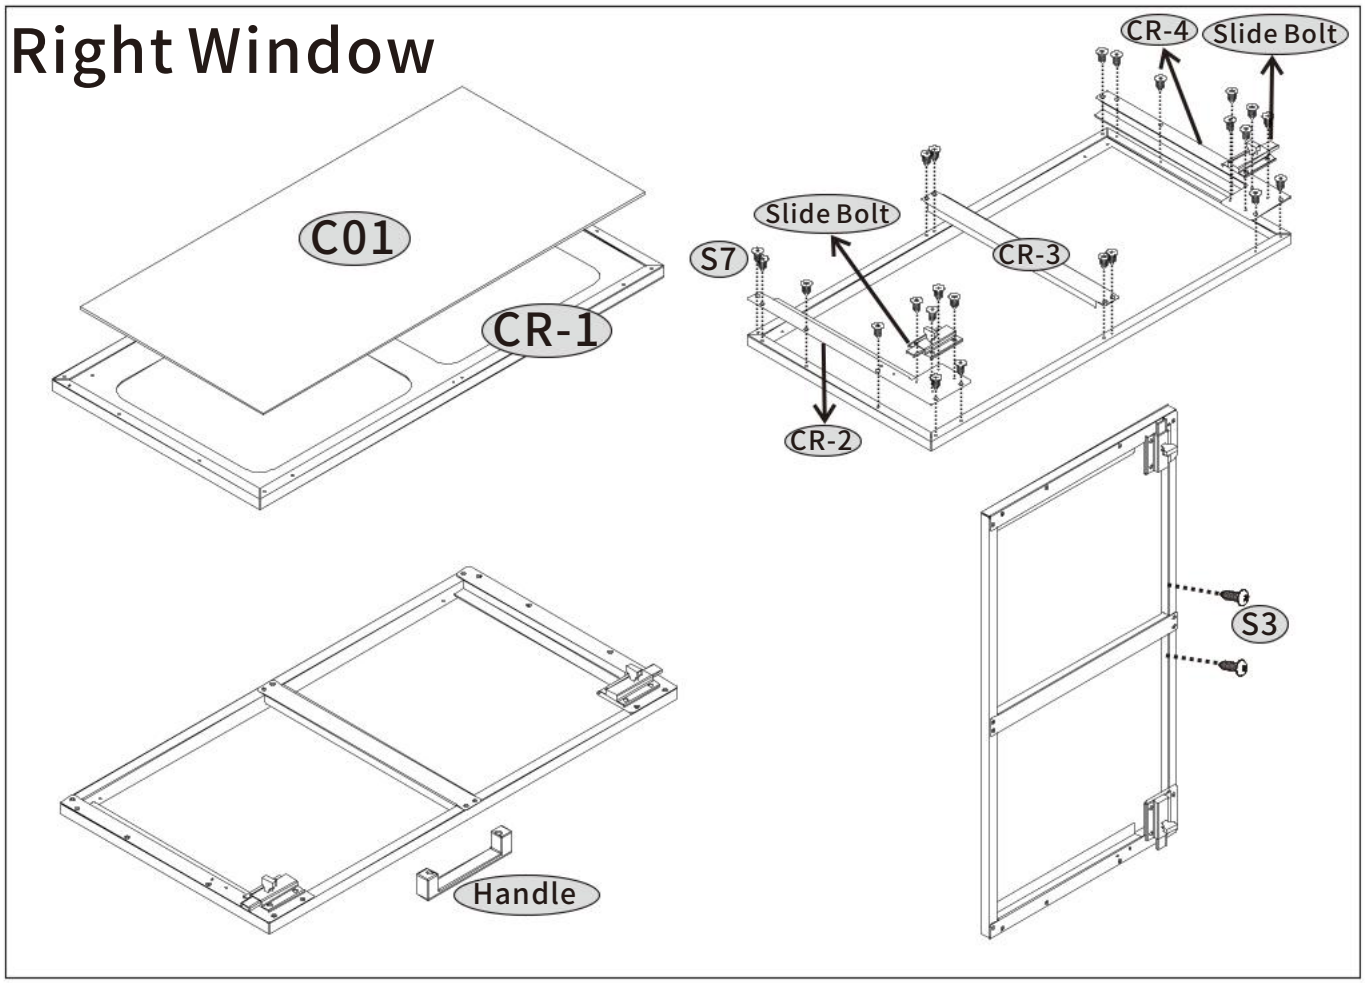
External View



External View

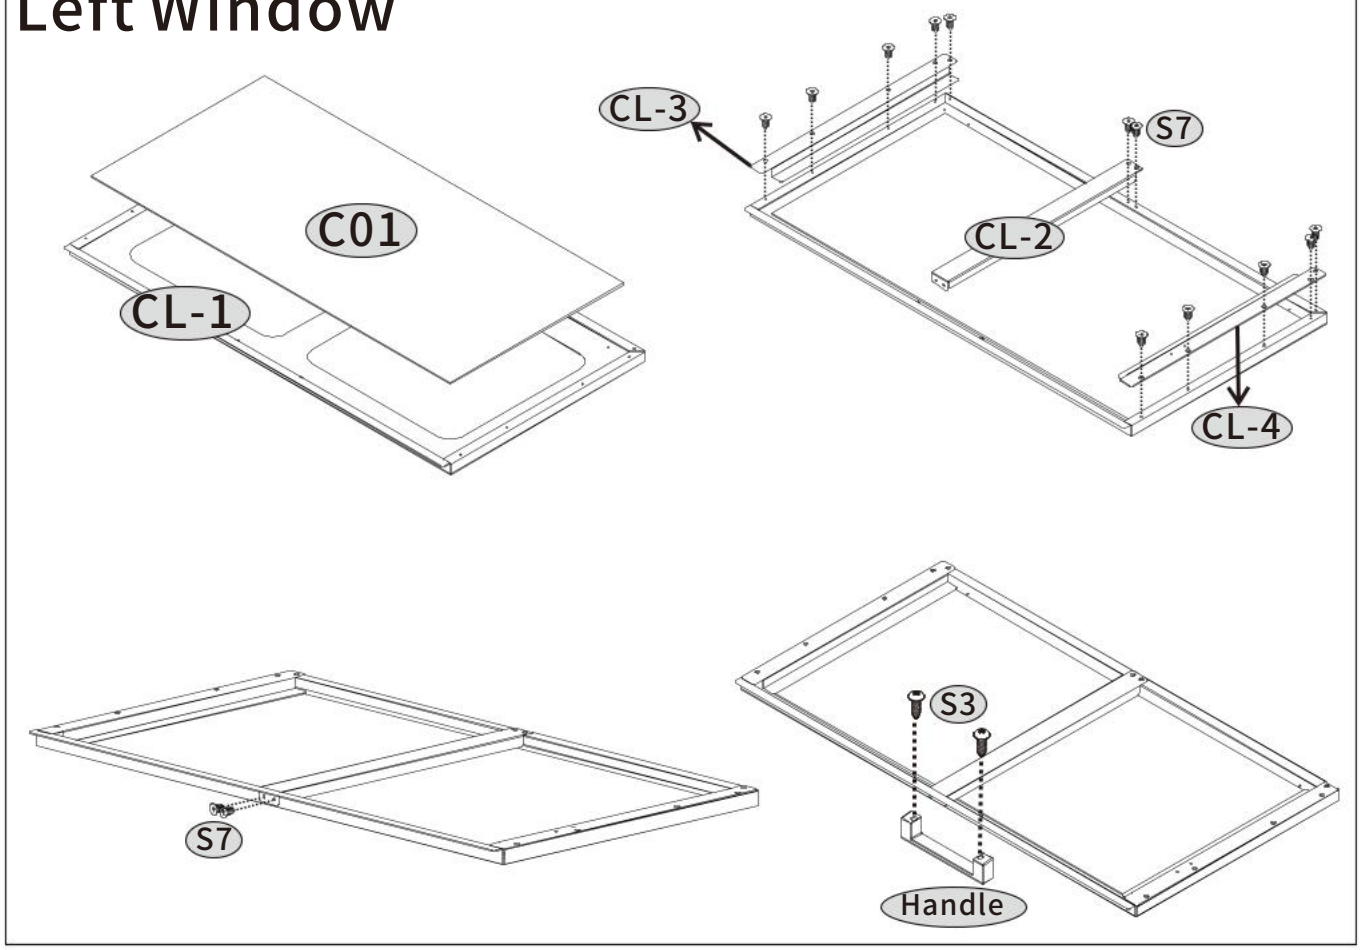


Right Window



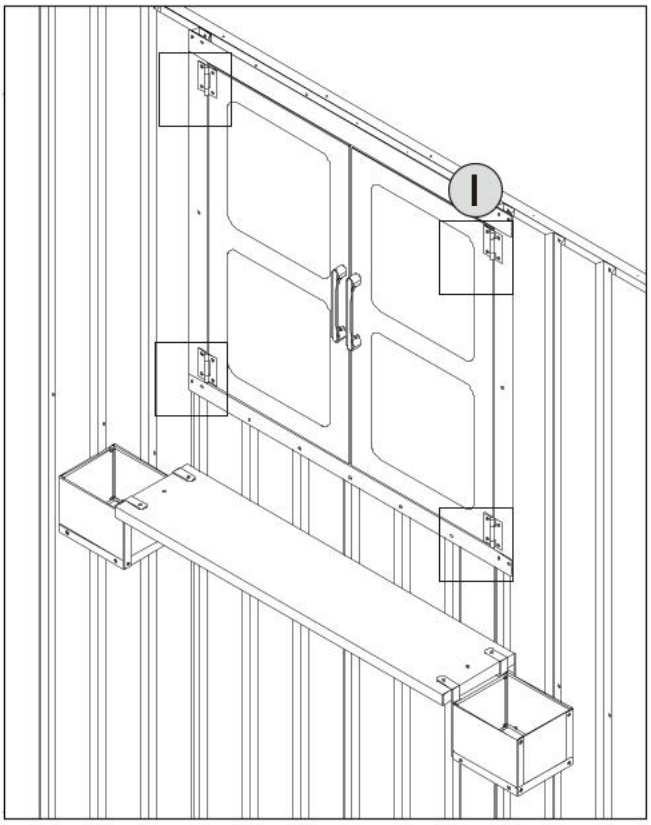
X3

Left Window

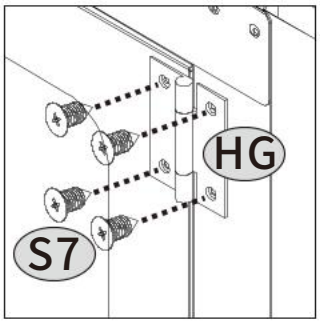


X3

External View

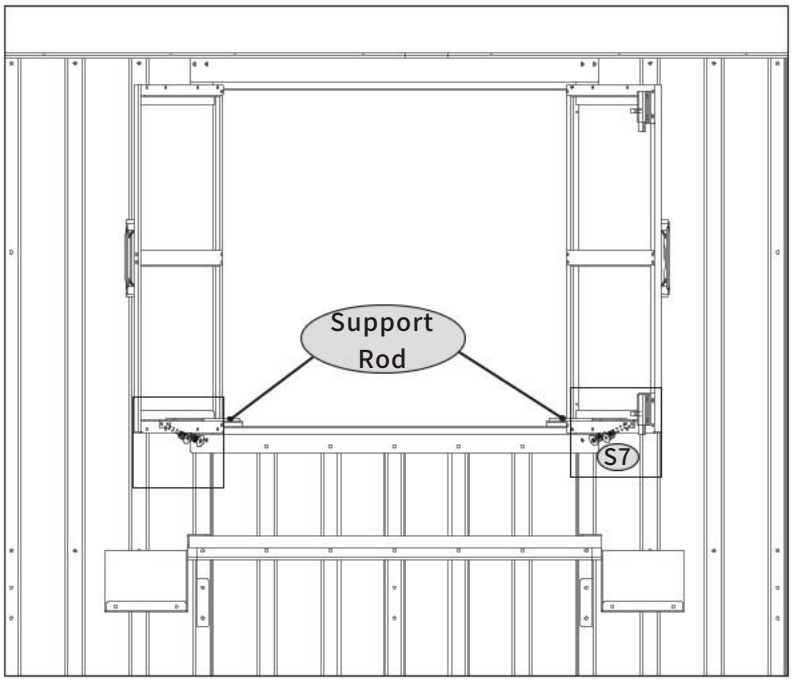


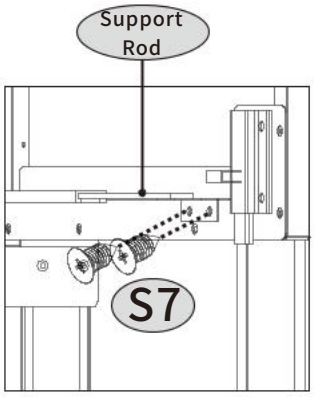
I



X4

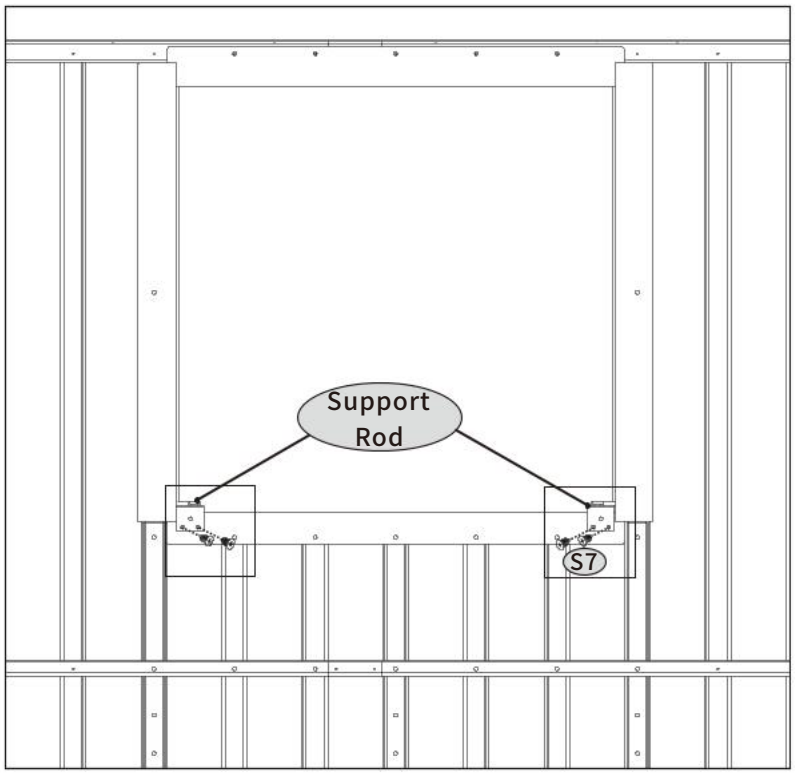
External View

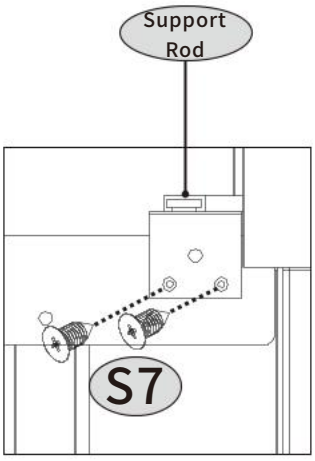




X2

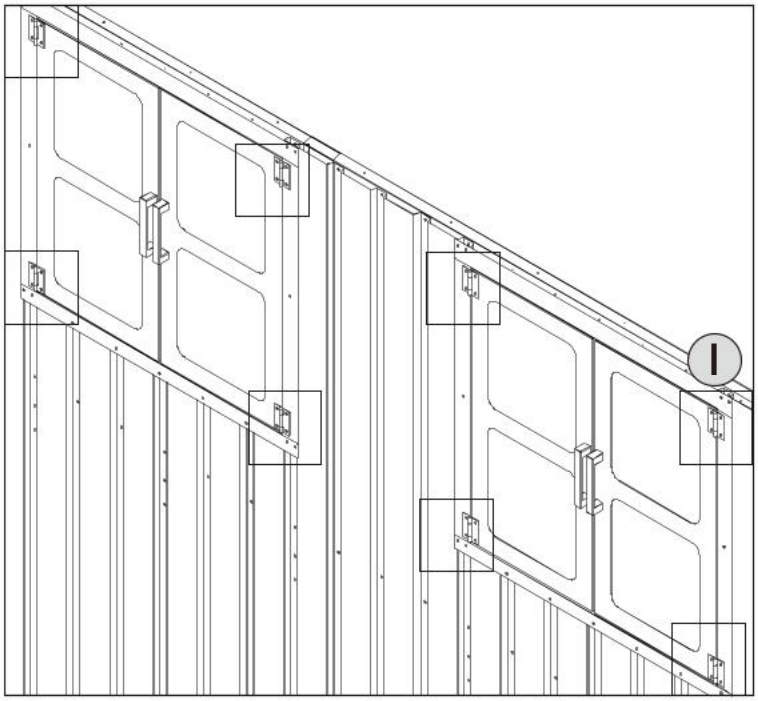
Internal View



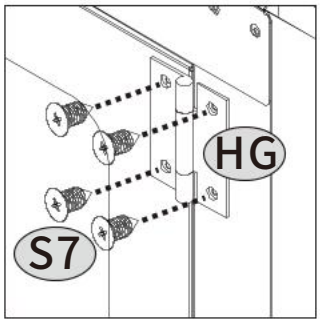


X2

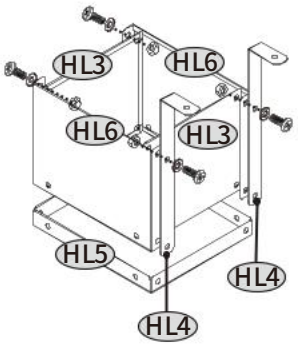
External View

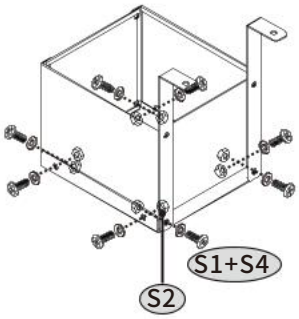


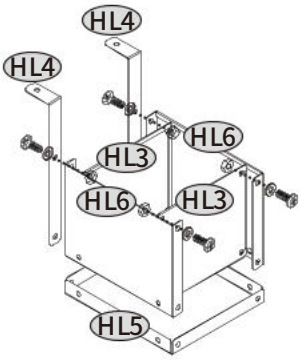
I

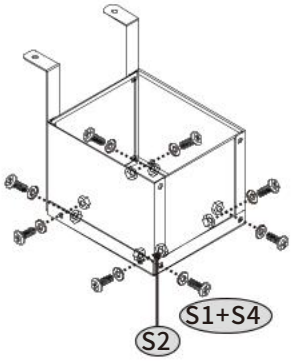


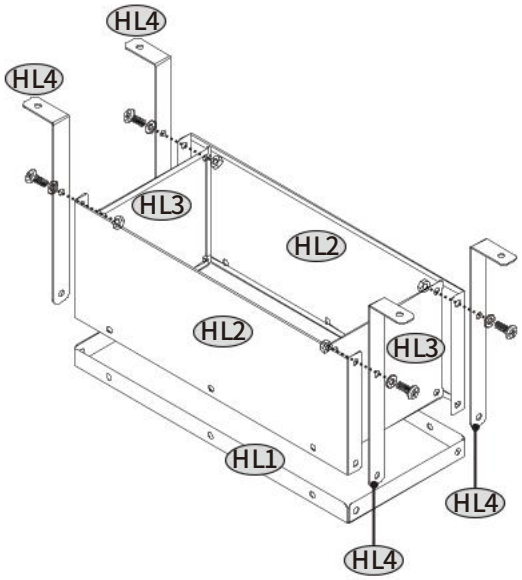
X8

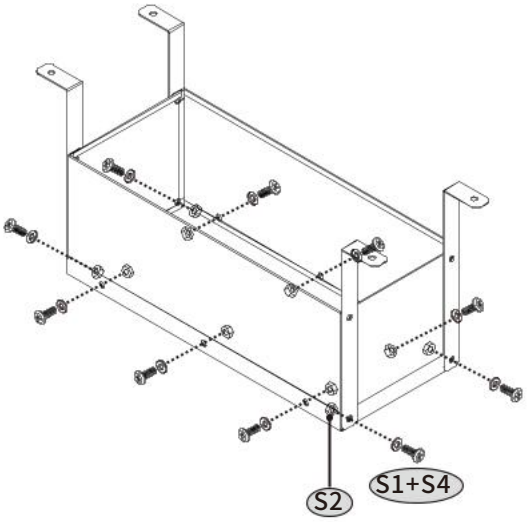

HL3
HL6
HL6
HL3
HL5
HL4
HL4

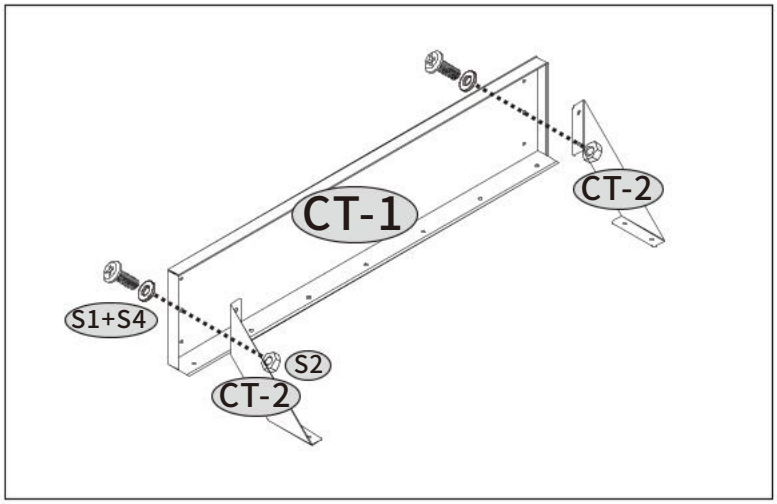

S1+S4
S2


HL4
HL4
HL6
HL3
HL6
HL3
HL5


S1+S4
S2

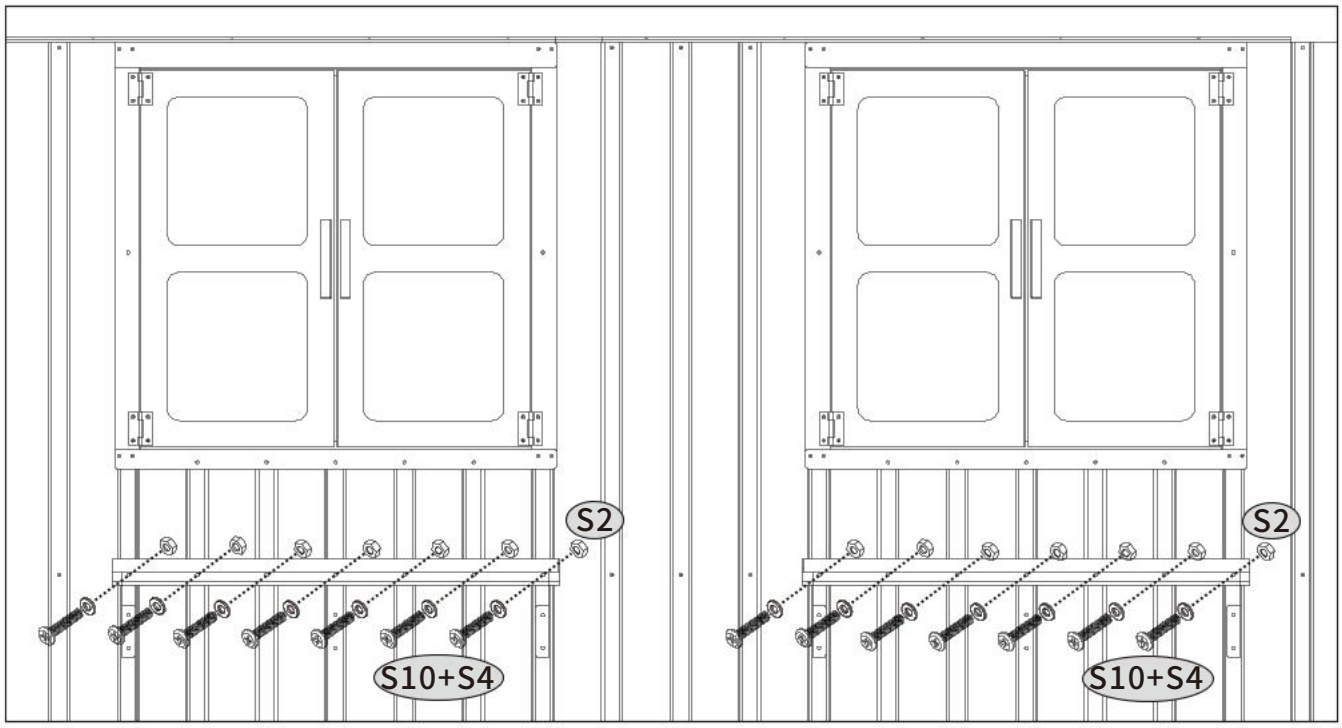

HL4
HL4
HL3
HL2
HL2
HL3
HL1
HL4
HL4


S2
S1+S4

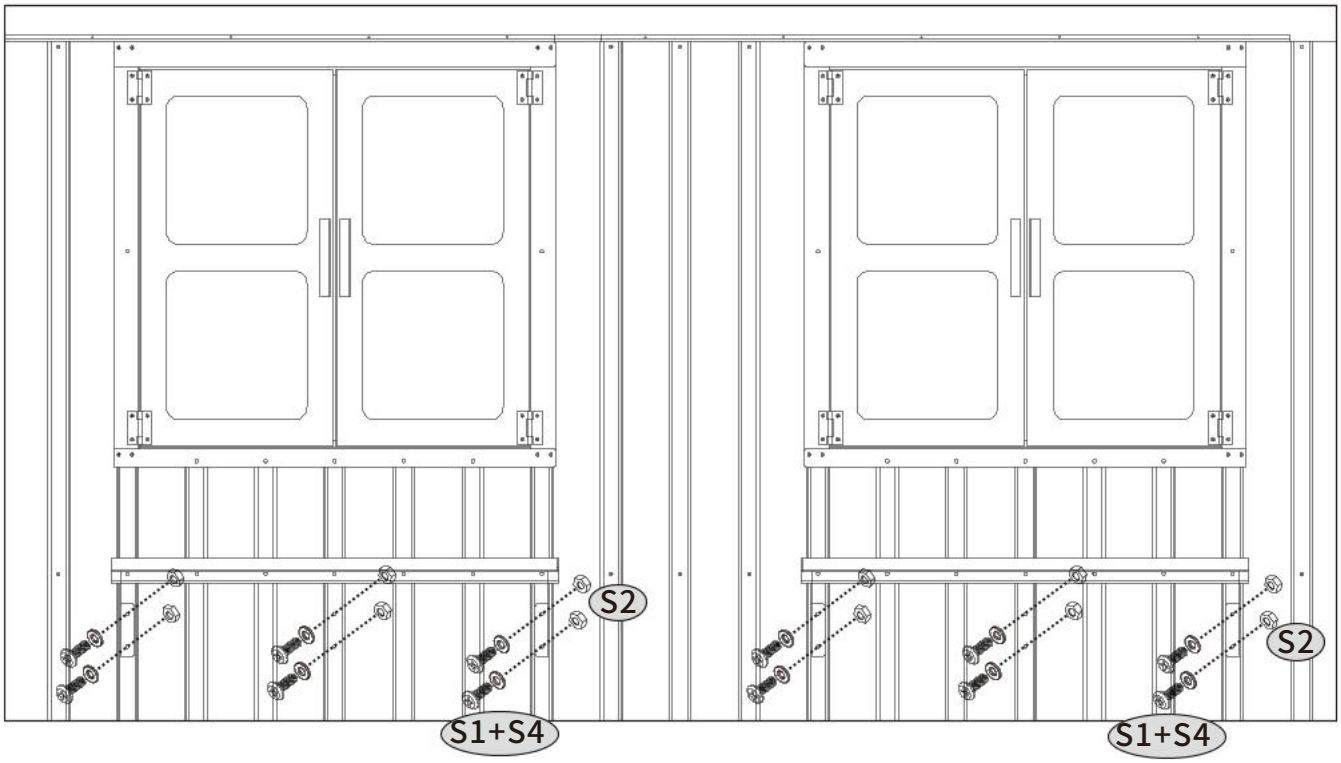

CT-1
CT-2
S1+S4
S2
CT-2

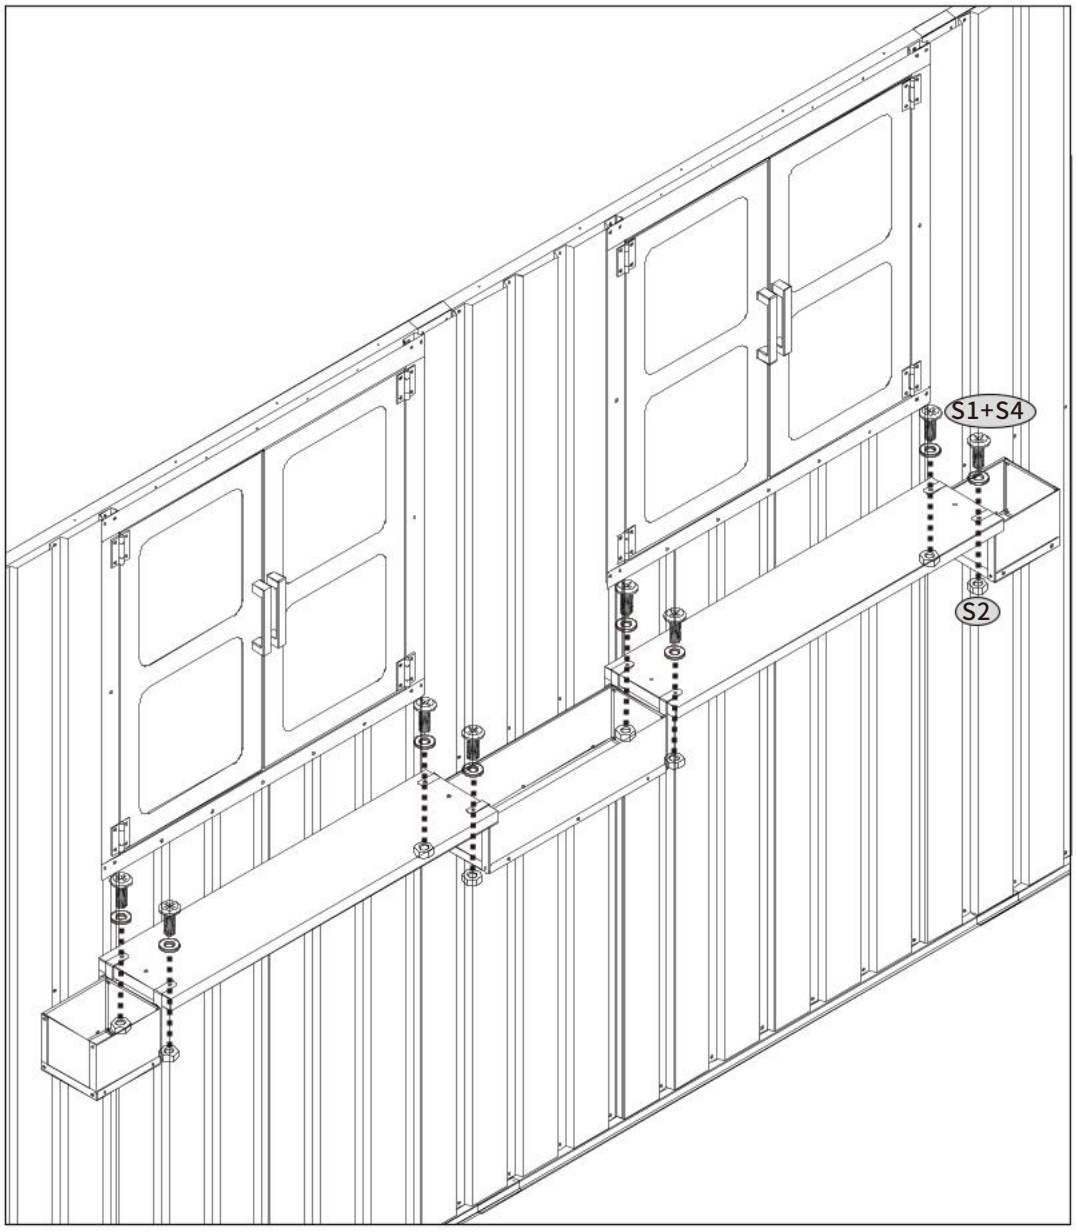
X2

External View

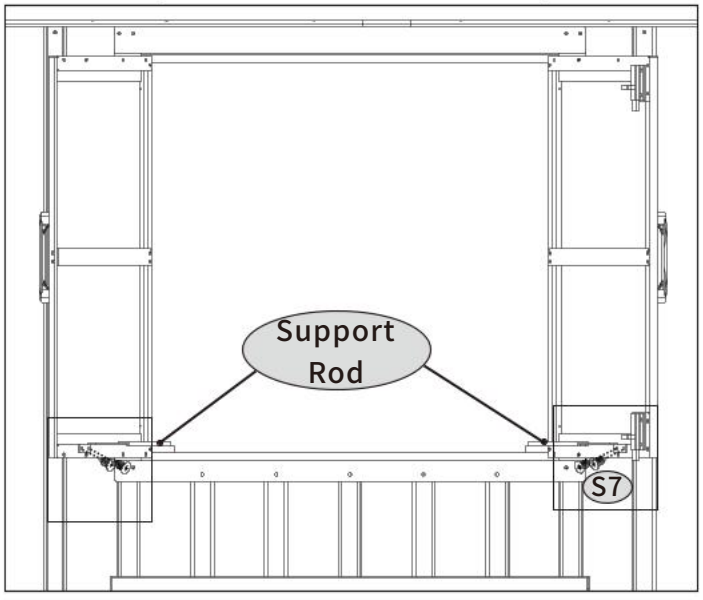


External View

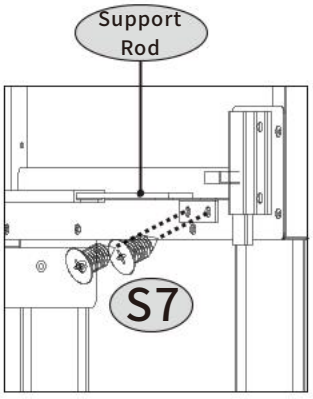




External View

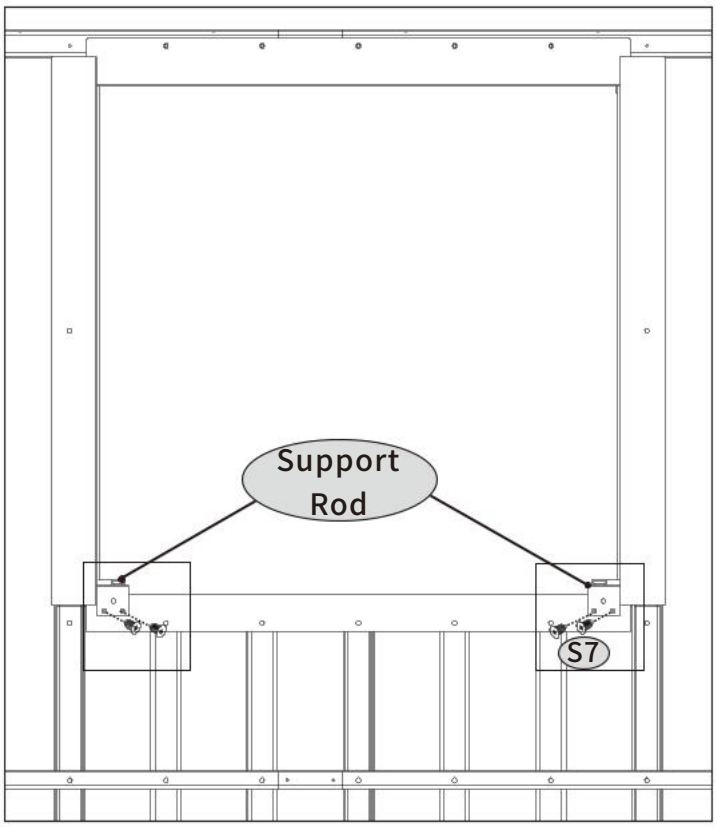


X2

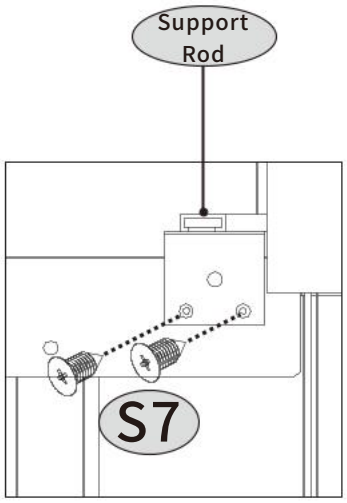


X4

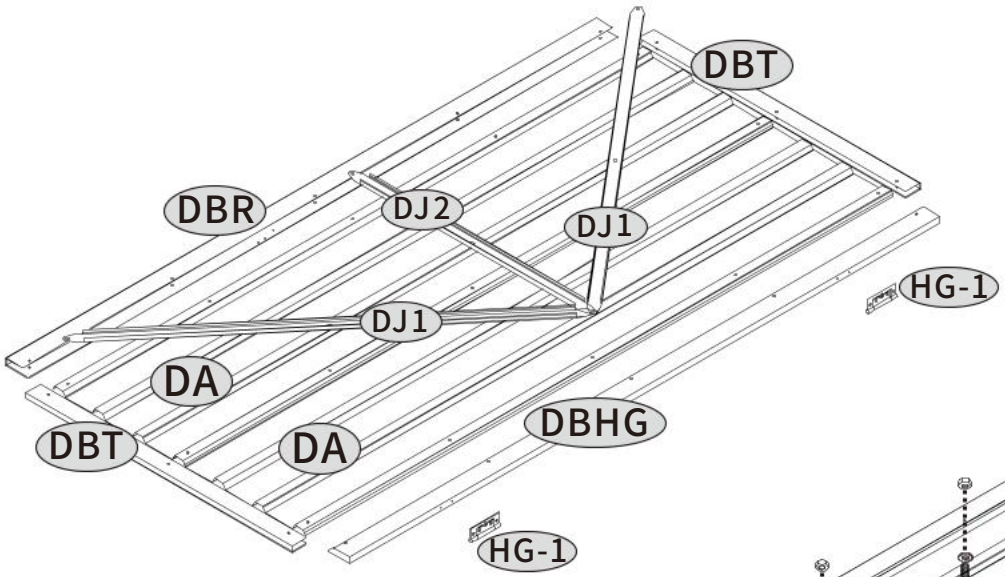
Internal View

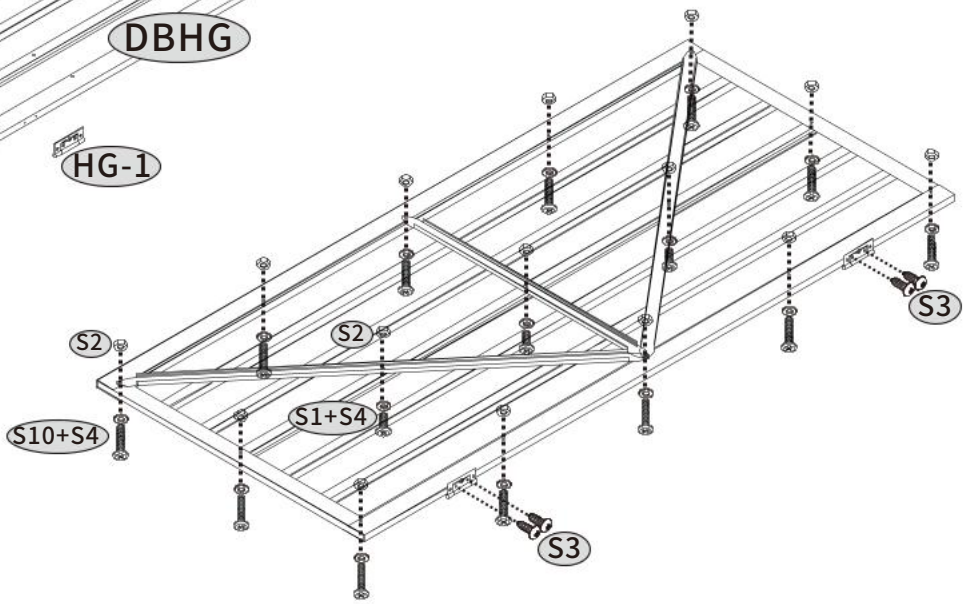


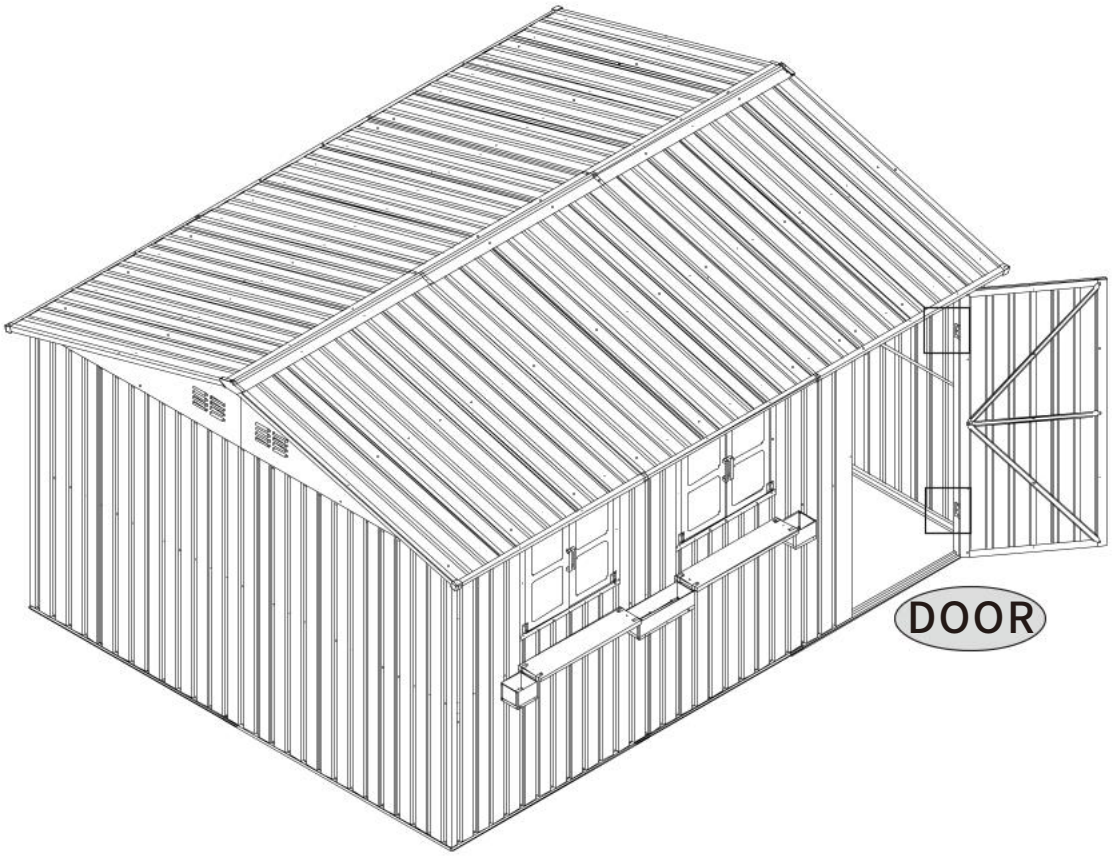
X2

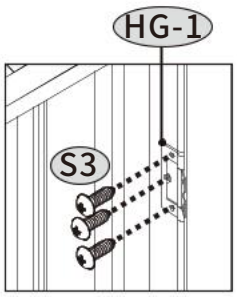


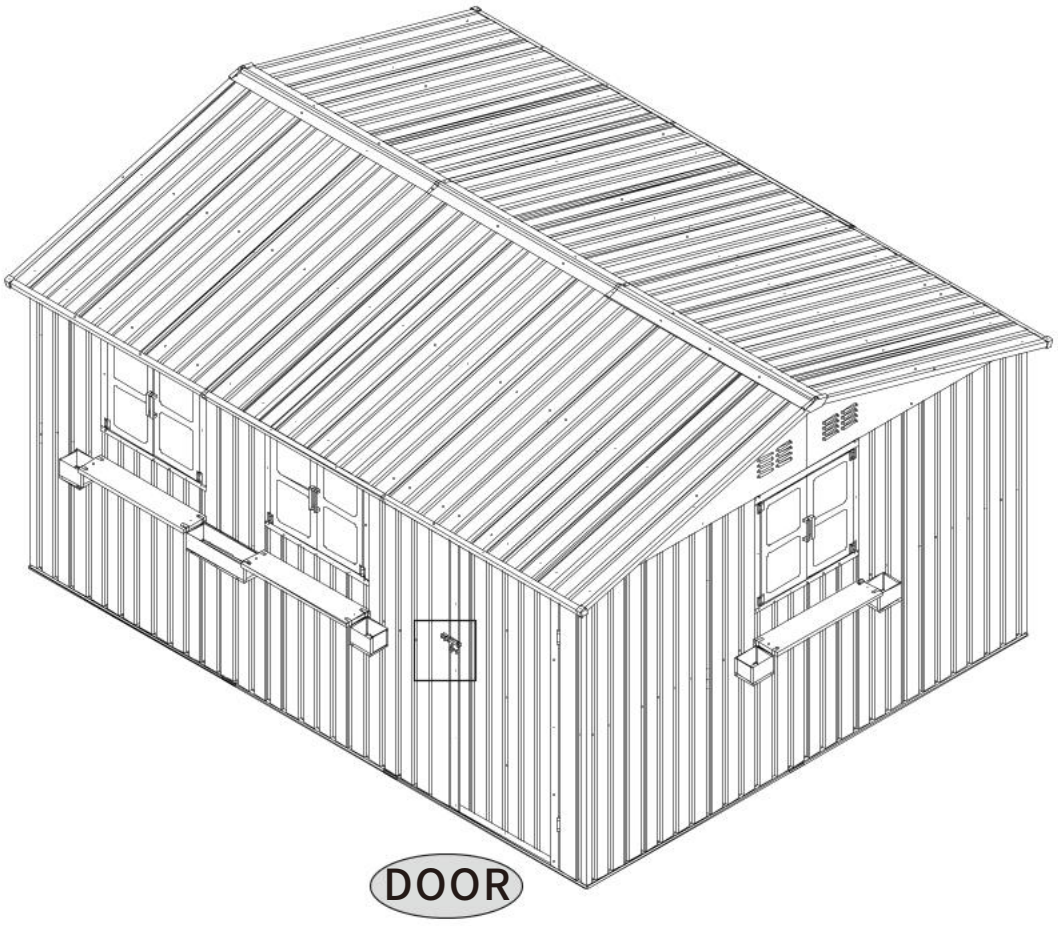
X4

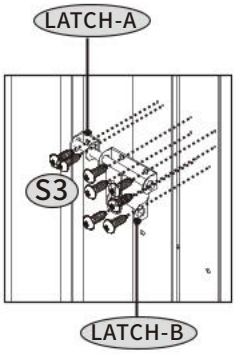





DOOR


HG-1
S3
X2


DOOR


LATCH-A
S3
LATCH-B



[S3] [S5]



[S3] [S4] [S5]

Note:

After installation, you will notice some sharp protrusions marked [S3].
These protrusions are hazardous, and you must cover/seal them with [S5].