

# EASY SETUP


## INSTALLATION + CARE GUIDE

**ART CANVAS®**

1

### HANDLING


Carefully remove the canvas from its packaging, handling it primarily by the wood frame.

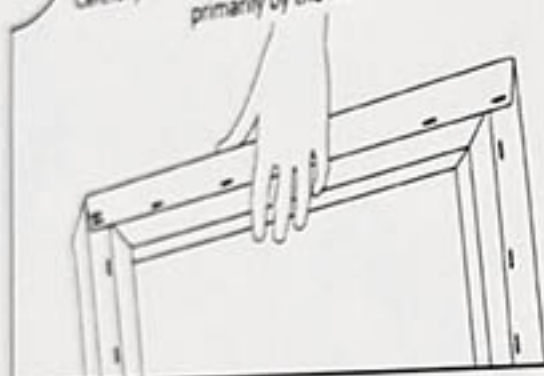

2

### PREPARATION

Hold the canvas against the wall at your desired height and use a pencil to mark the top.

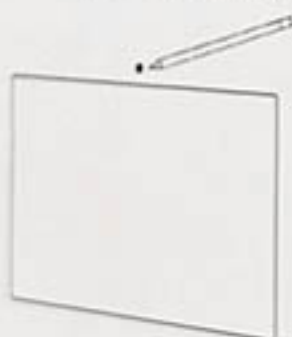

Put your canvas aside and make another 2 adjacent marks, 2" lower than the first mark. Erase the first mark. Use a level to ensure the distance between the new marks creates a straight and leveled line.




3

### INSTALLATION

Use a drill with a 1/4" drillbit to drill holes at the marked spots. The provided hanging materials are intended for use on drywall. \*Drywall anchors are not needed for installation on wood\*



Lightly tap the drywall anchors into the holes with a hammer. Use a screwdriver to screw in the 2 provided screws. (Screws included vary on thickness of the frame.)

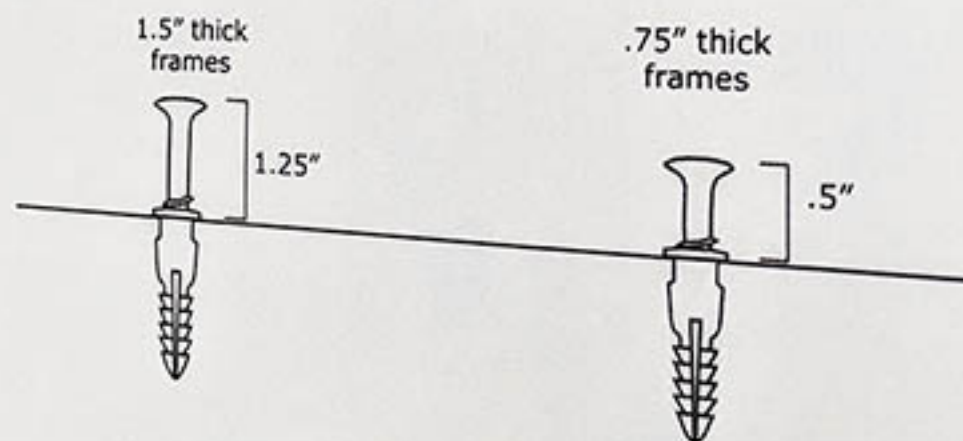

Hang the canvas on the screws. Make sure the screwtops do not poke the canvas.