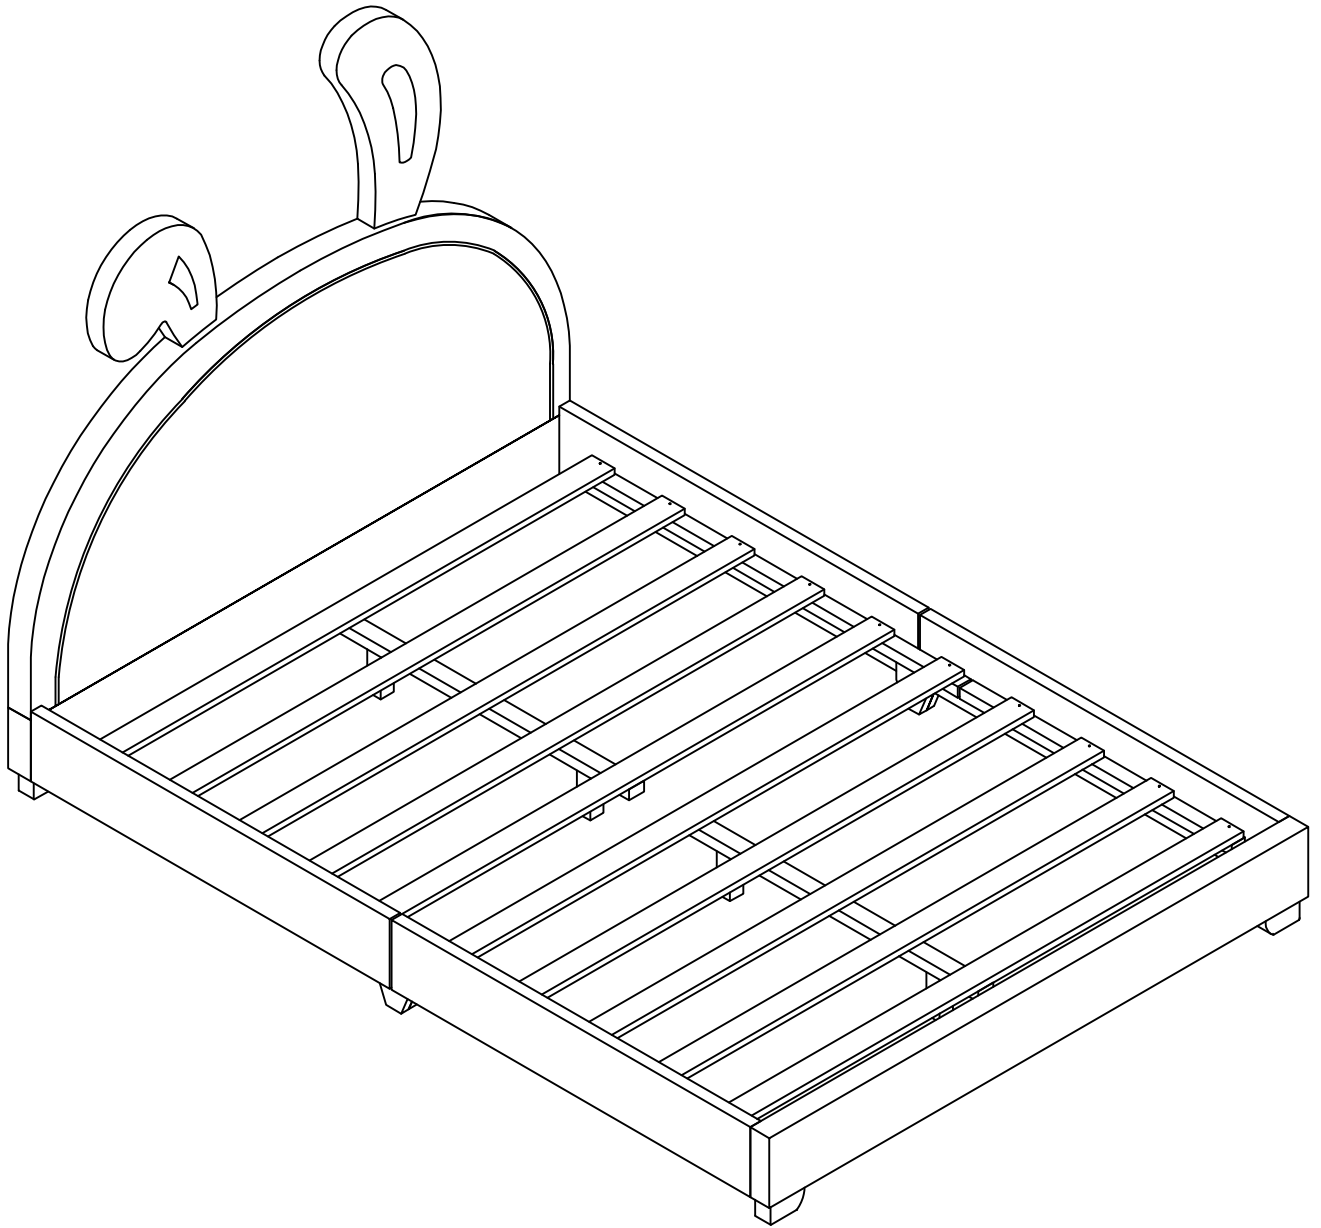


ASSEMBLY INSTRUCTIONS



IMPORTANT NOTE









****PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED**

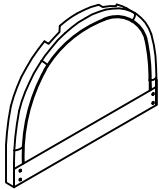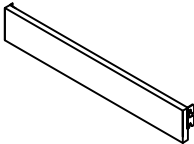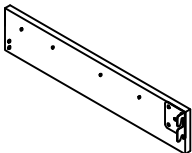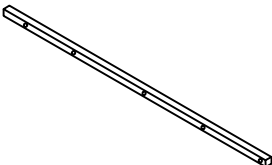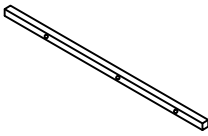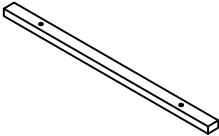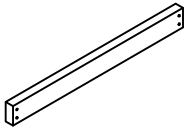**** BEFORE YOU BEGIN , KINDY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP**

****DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE BED IS FULLY SET-UP**






ASSEMBLY INSTRUCTION

PART LIST BOX 1: WF 299139

1		2		3	
	Headboard Panel (1 pc)		Left Headboard Ear (1 pc)		Right Headboard Ear (1 pc)
4		5		6	
	Leg (4 pcs)		Side Front Rail (2 pcs)		Side Back Rail (2 pcs)
7		8		9	
	Rail Support Legs (2 pcs)		Bed Support Bar (2 pcs)		Bed Support Bar (2 pcs)
10		11		12	
	Roll Slat (10 pcs) 985*60*15		Footboard Panel (1 pc)		Center Rail (2 pcs)
13		14			
	Bed Slat Support With Leveler (4 pcs)		Bedside Junction Box (1 pc)		


ASSEMBLY INSTRUCTIONS

HARDWARE LIST

A  Short Bolt (8pcs) (Ø 5/16 "X25mm)	B  Long Bolt (6 pcs) (Ø 5/16 "X32mm)	C  Long Bolt (8 pcs) (Ø 5/16 "X38mm)
D  Long Bolt (20pcs) (Ø 5/16 "X45mm)	E  Long Bolt (4pcs) (Ø 5/16 "X50mm)	F  Allen Wrench (1 pc) (M4x75mm x32mm)
G  Flat Washer (42 pcs) (Ø 5/16 "-RBW)	H  Spring Washer (42 pcs) (Ø 5/16 "-RBW)	I  Flat Head Screw (24 pcs) (m4x30mm-RBW)


ASSEMBLY INSTRUCTIONS

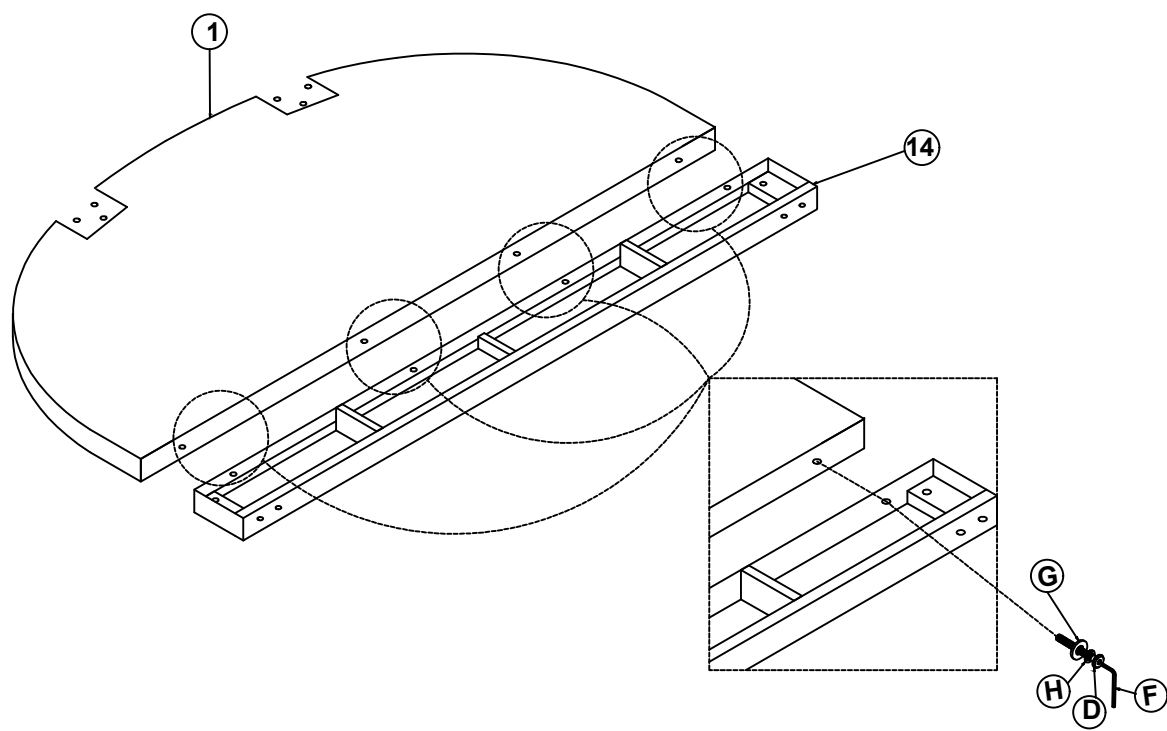STEP 1



D	Bolt (Ø 5/16 "X45mm)		4pcs	G	Flat Washer (Ø 5/16 "-RBW)		4pcs
F	Allen Wrench (M4x75mm x32mm)		1pc	H	Spring Washer (Ø 5/16 "-RBW)		4pcs

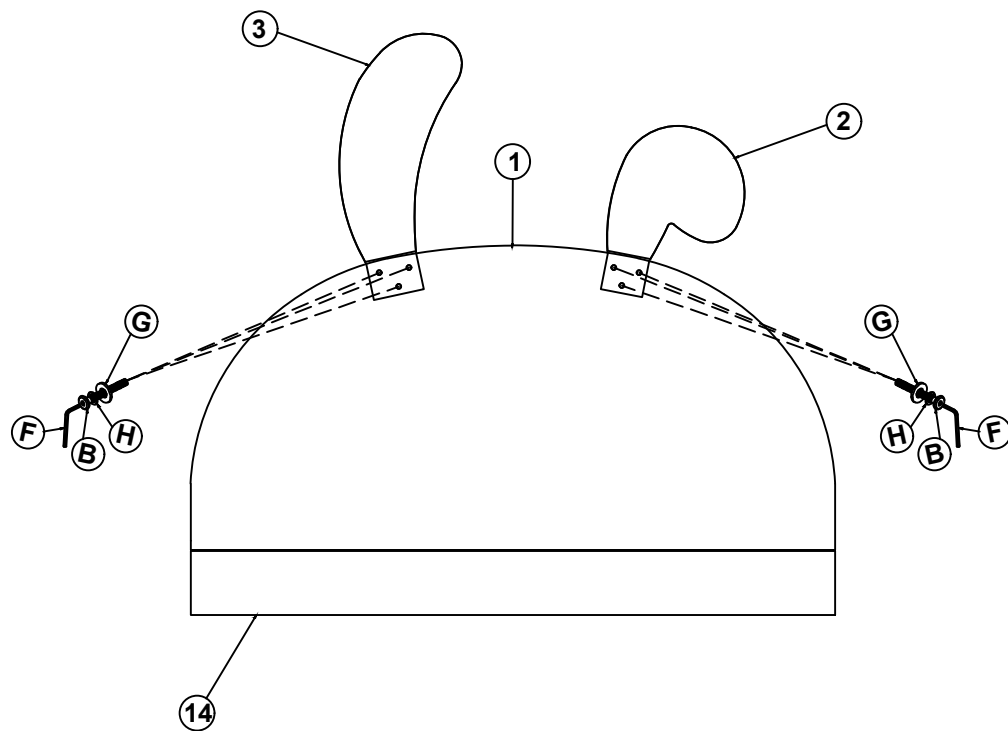
STEP 2



B	Bolt (Ø 5/16 "X32mm)		6pcs	G	Flat Washer (Ø 5/16 "-RBW)		6pcs
F	Allen Wrench (M4x75mm x32mm)		1pc	H	Spring Washer (Ø 5/16 "-RBW)		6pcs


ASSEMBLY INSTRUCTIONS

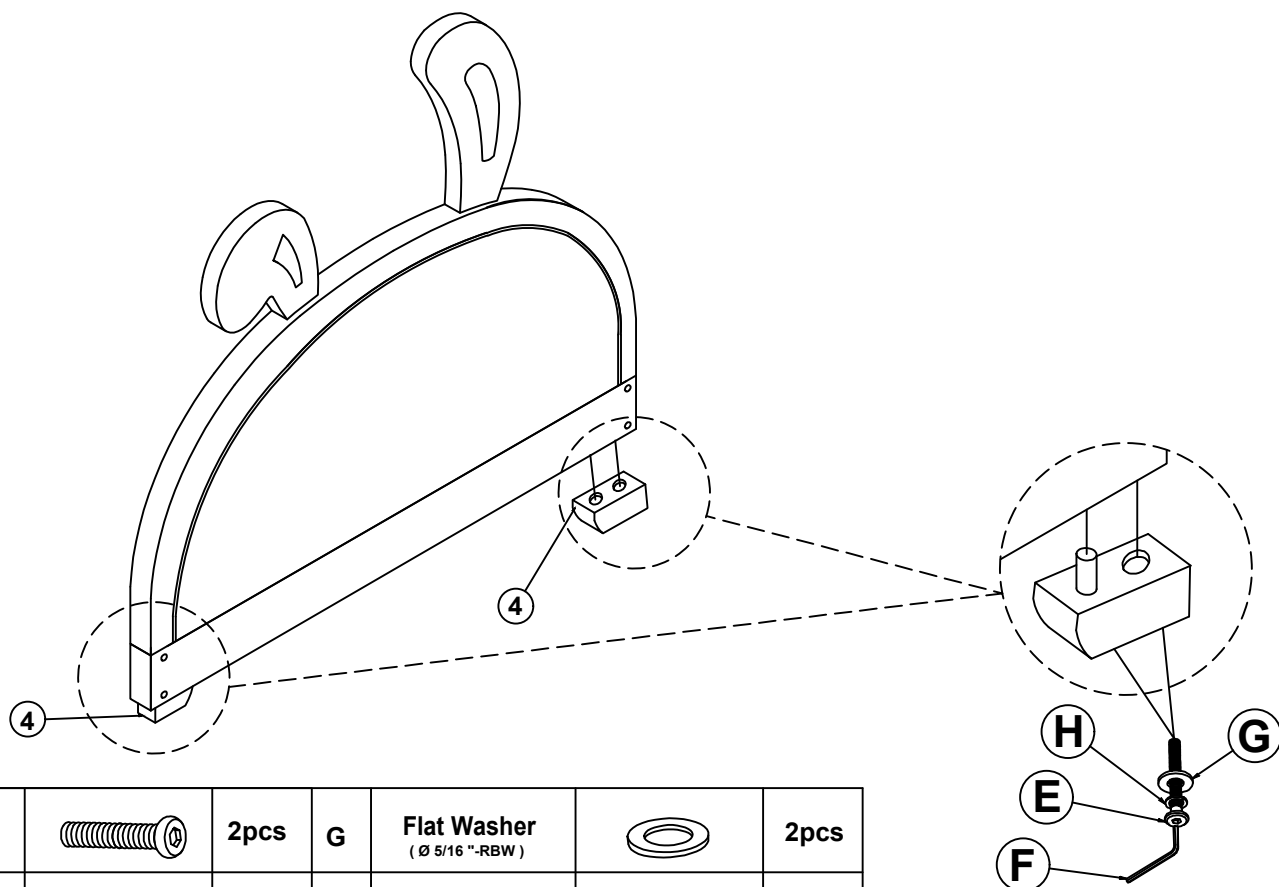STEP 3



E	Bolt (Ø 5/16 "X50mm)		2pcs	G	Flat Washer (Ø 5/16 "-RBW)		2pcs
F	Allen Wrench (M4x75mm x32mm)		1pc	H	Spring Washer (Ø 5/16 "-RBW)		2pcs

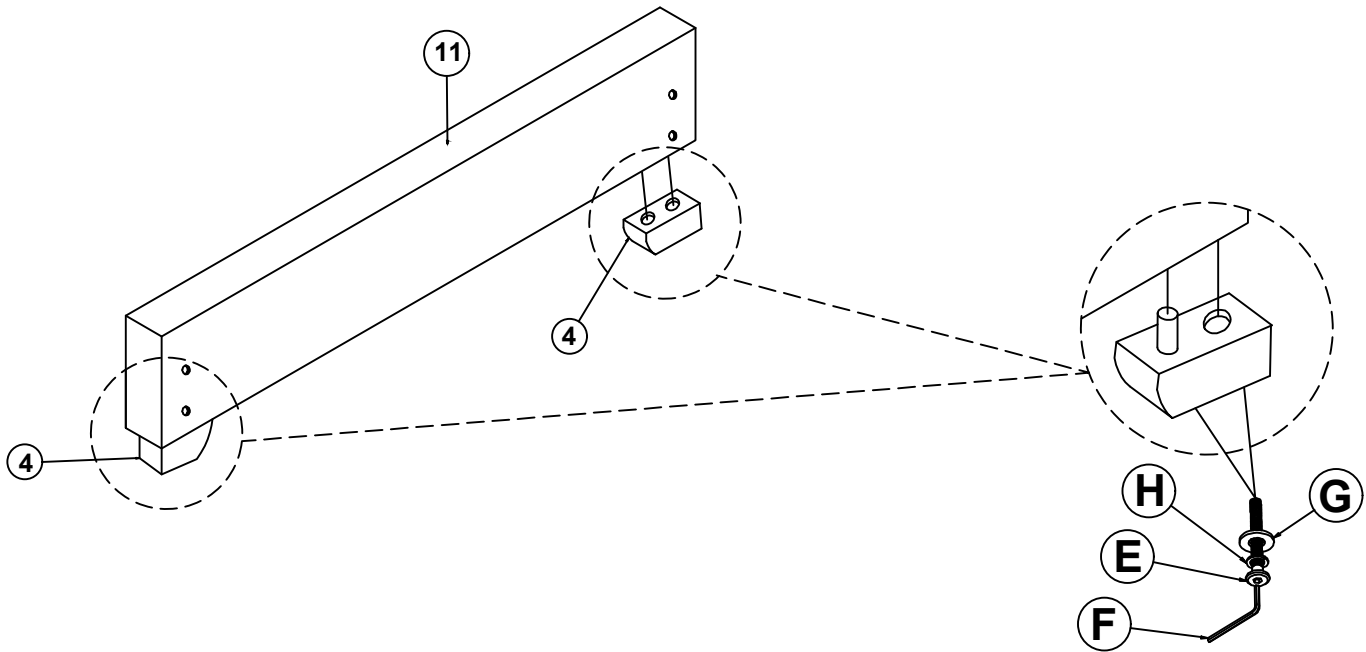
STEP 4



E	Bolt (Ø 5/16 "X50mm)		2pcs	G	Flat Washer (Ø 5/16 "-RBW)		2pcs
F	Allen Wrench (M4x75mm x32mm)		1pc	H	Spring Washer (Ø 5/16 "-RBW)		2pcs


ASSEMBLY INSTRUCTIONS

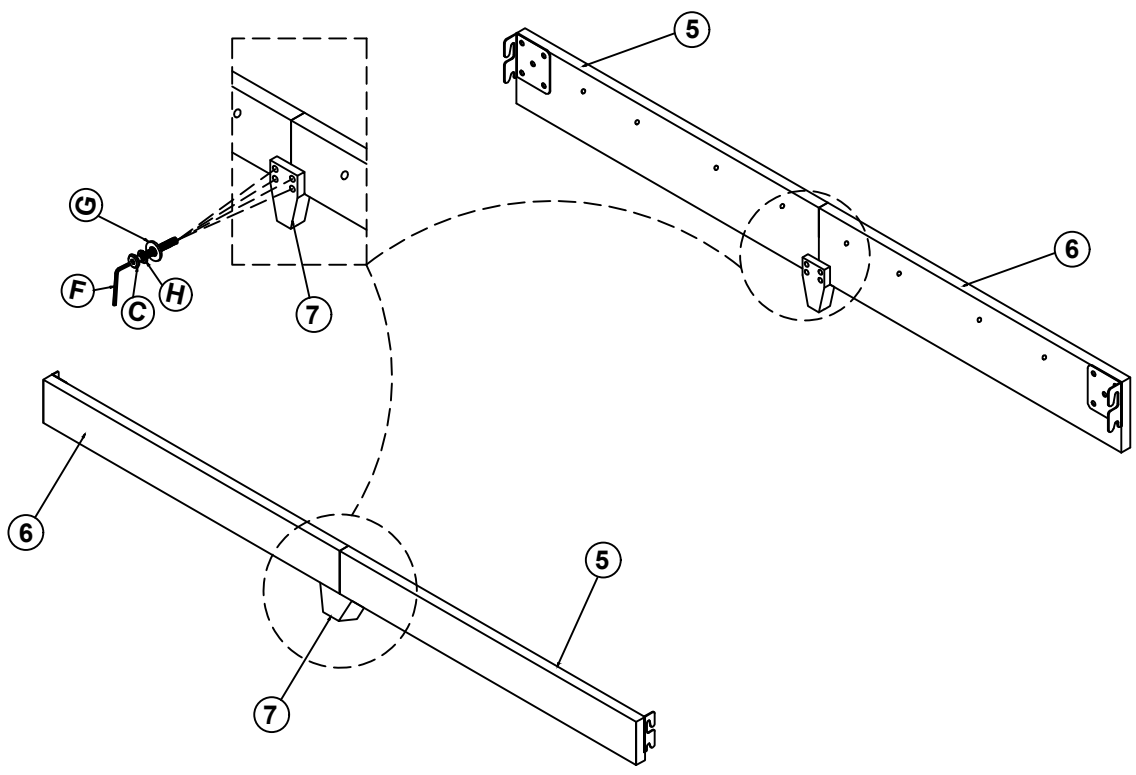STEP 5



C	Bolt (Ø 5/16 "X38mm)		8pcs	G	Flat Washer (Ø 5/16 "-RBW)		8pcs
F	Allen Wrench (M4x75mm x32mm)		1pc	H	Spring Washer (Ø 5/16 "-RBW)		8pcs

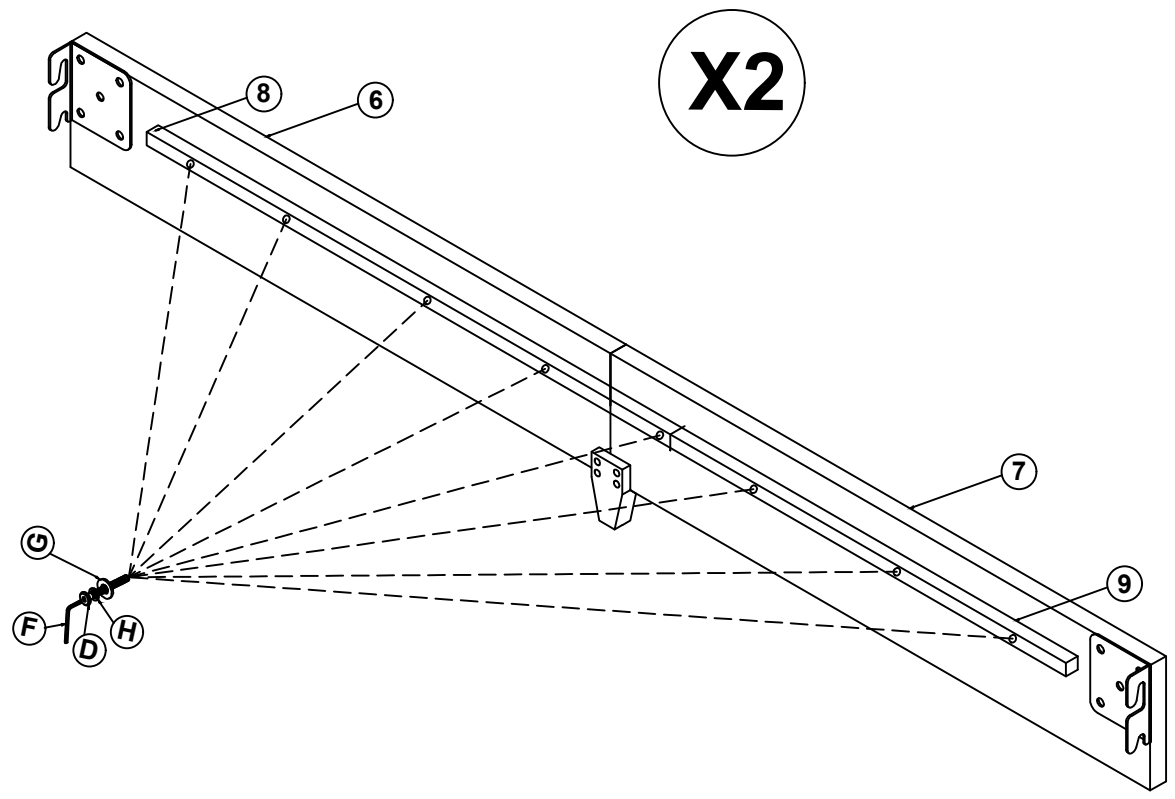
STEP 6



D	Bolt (Ø 5/16 "X45mm)		16pcs	G	Flat Washer (Ø 5/16 "-RBW)		16pcs
F	Allen Wrench (M4x75mm x32mm)		1pc	H	Spring Washer (Ø 5/16 "-RBW)		16pcs


ASSEMBLY INSTRUCTIONS

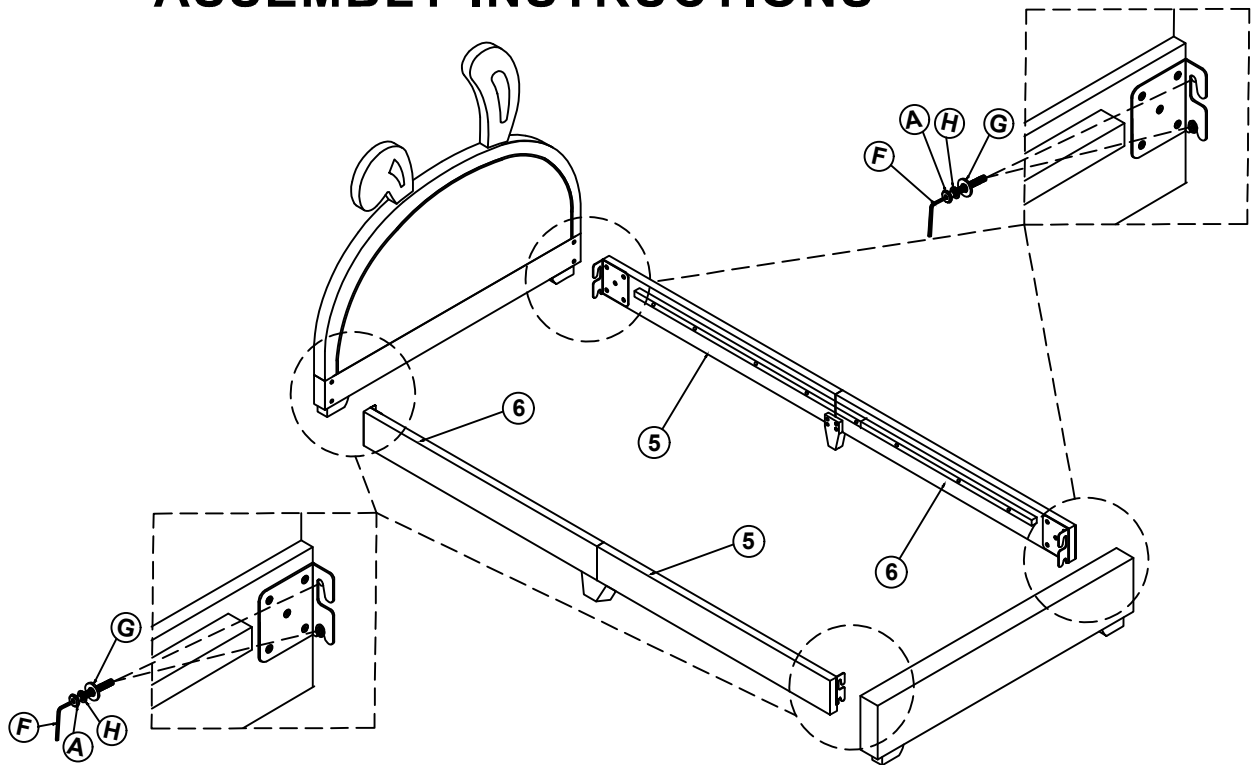
STEP 7



A	Bolt (Ø 5/16 "X25mm)		8pcs	G	Flat Washer (Ø 5/16 "-RBW)		8pcs
F	Allen Wrench (M4x75mm x32mm)		1pc	H	Spring Washer (Ø 5/16 "-RBW)		8pcs

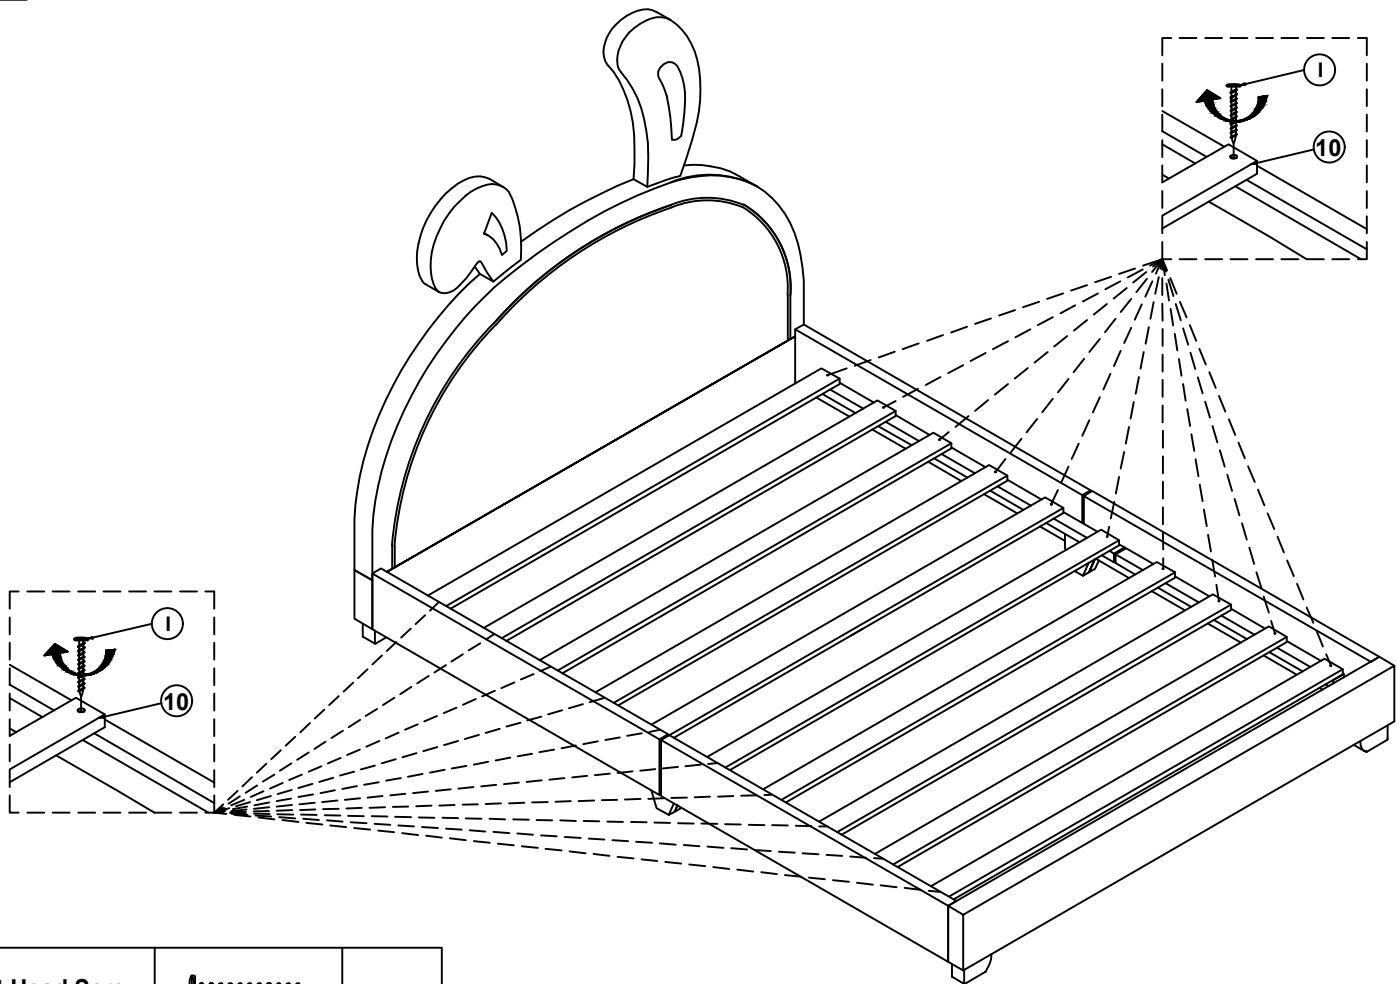
STEP 8




I	Flat Head Screw (m4x30mm-RBW)		20pcs
---	----------------------------------	---	-------


ASSEMBLY INSTRUCTIONS

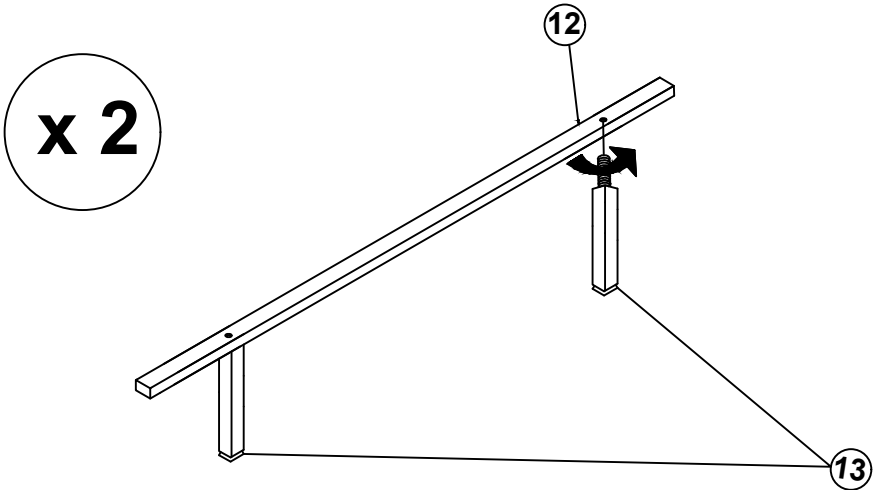STEP 9



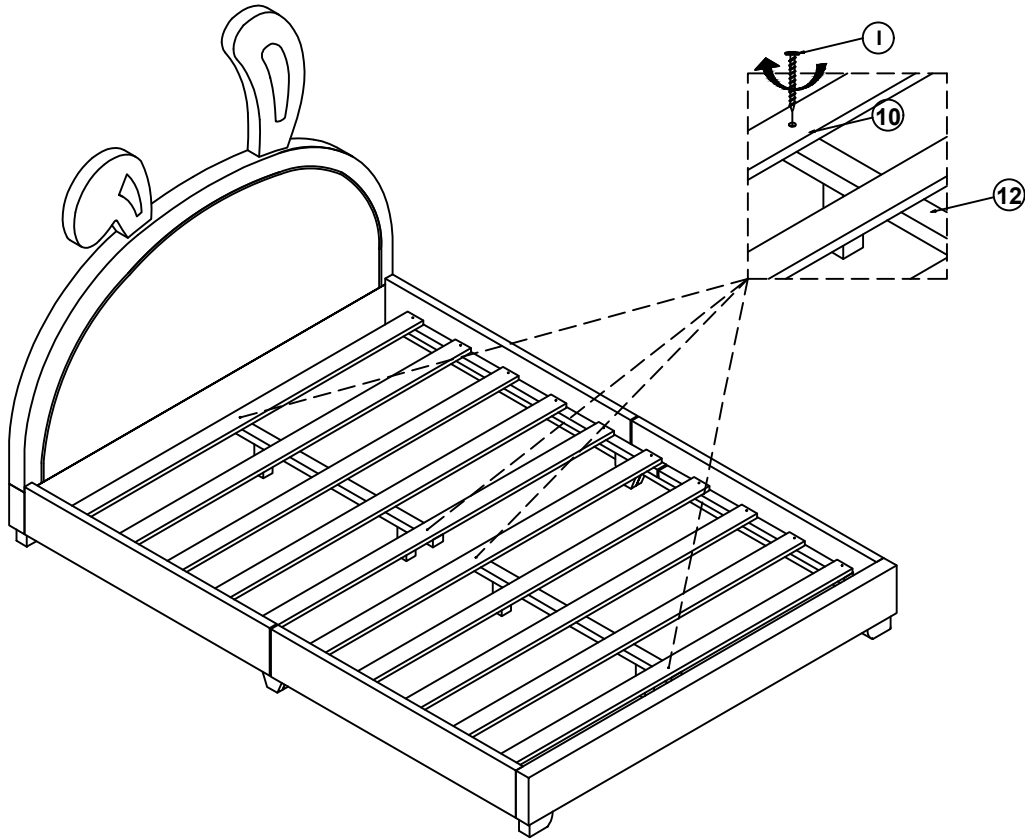STEP 10



1	Flat Head Screw (m4x30mm-RBW)		4pcs
---	----------------------------------	---	------

ASSEMBLY INSTRUCTIONS

STEP 11
COMPLETE

