# *ASSEMBLY INSTRUCTIONS*



## ***Queen Bed***

# ASSEMBLY INSTRUCTIONS

## ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



**WARNING!**

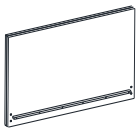


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




| ASSEMBLY TIME | 20 MINUTES |
|---|---|

# PARTS IDENTIFICATION

## B1 (BOX 1)

| | | | |
|---|---|---|---|
| A | HEADBOARD PANEL |  | 1PC |
| B | FOOTBOARD PANEL |  | 1PC |
| C | TOP PANEL |  | 2PCS |
| D | LEG |  | 4PCS |
| E | CROSSBAR |  | 2PCS |
| F | ROLL SLAT (20PCS) |  | 1SET |
| G | CENTER RAIL SUPPORT WITH LEVELER |  | 3PCS |

## B2 (BOX 2)

| | | | |
|---|---|---|---|
| H | BED RAIL |  | 2PCS |
| I | CENTER RAIL |  | 1PC |

## NOTE:

**Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.**

# ASSEMBLY INSTRUCTIONS

## ASSEMBLY TIPS:





1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

## WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

# HARDWARE IDENTIFICATION

## Z-B1 (BOX 1) - HARDWARE PACK

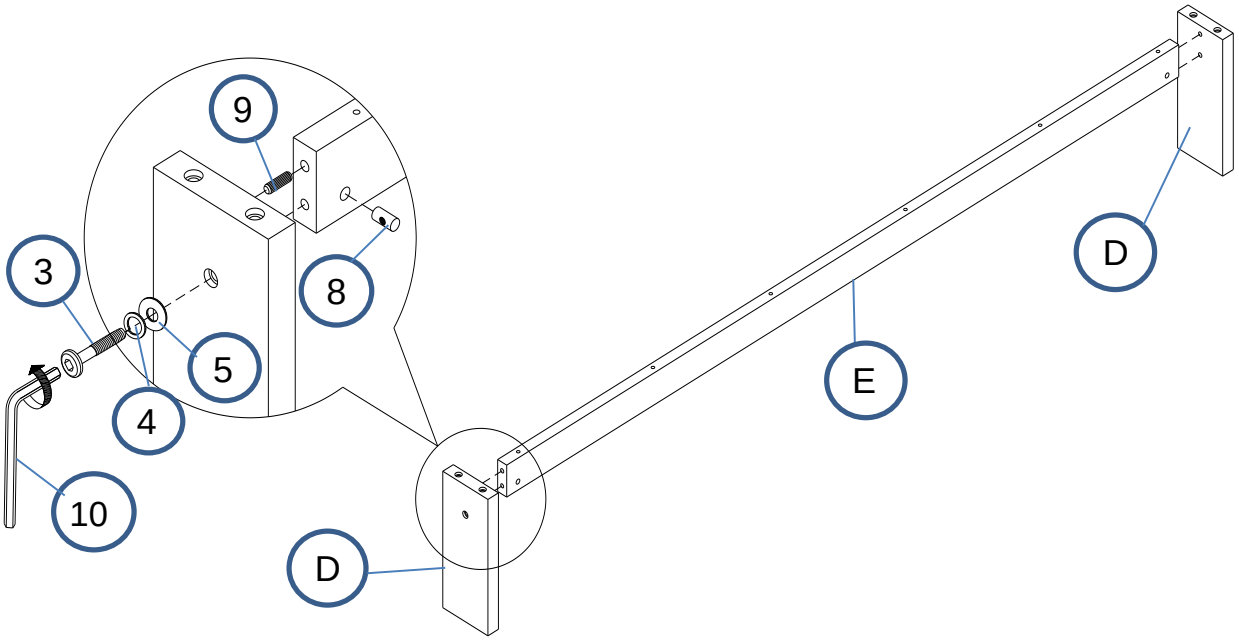
| | | | |
|---|---|---|---|
| 1 | **SHORT BOLT**<br>**(M8 x 20mm - RBW)** |  | **8PCS** |
| 2 | **MEDIUM BOLT**<br>**(M6 x 35mm - BLK)** |  | **8PCS** |
| 3 | **LONG BOLT**<br>**(M6 x 60mm - BLK)** |  | **4PCS** |
| 4 | **LOCK WASHER**<br>**(M6 - BLK)** |  | **12PCS** |
| 5 | **SMALL FLAT WASHER**<br>**(M6 x 13mm - BLK)** |  | **12PCS** |
| 6 | **BIG FLAT WASHER**<br>**(M8 x 18mm - RBW)** |  | **8PCS** |
| 7 | **PAN HEAD SCREW**<br>**(M4 x 30mm - BLK)** |  | **76PCS** |
| 8 | **BARREL NUT**<br>**(M6 x 13mm - SLV)** |  | **4PCS** |
| 9 | **WOOD DOWEL**<br>**(M8 x 30mm - NAT)** |  | **4PCS** |
| 10 | **SMALL ALLEN WRENCH**<br>**(M4 x 65mm - BLK)** |  | **1PC** |
| 11 | **BIG ALLEN WRENCH**<br>**(M5 x 65mm - BLK)** |  | **1PC** |

**NOTE:**

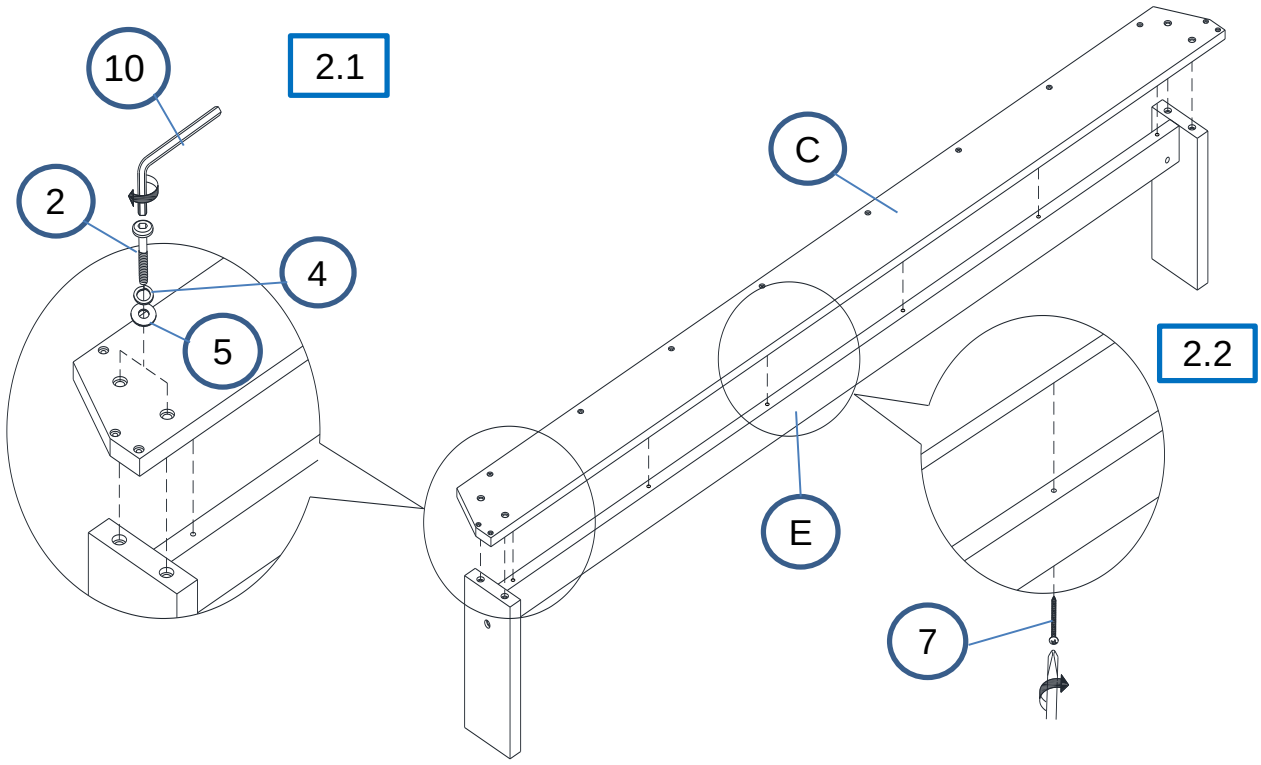
**Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.**

## ASSEMBLY INSTRUCTIONS

## STEP 1

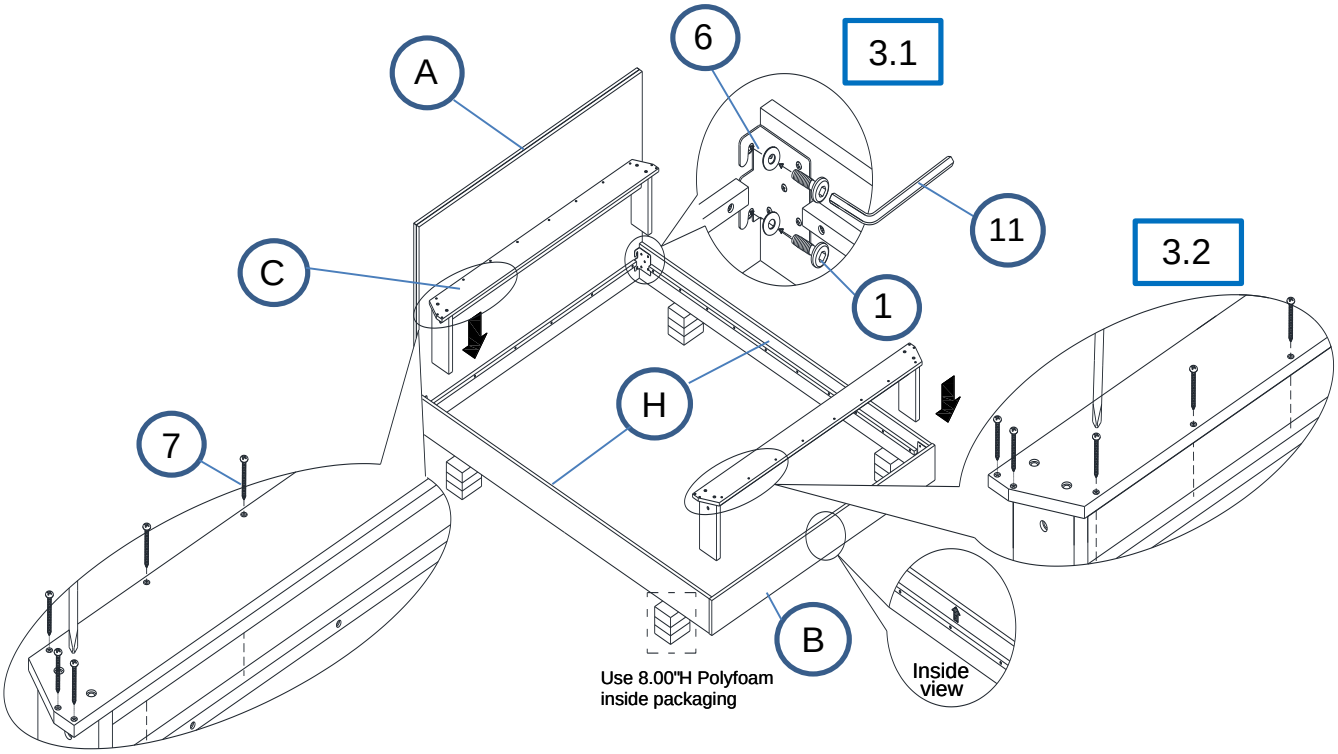



## STEP 2

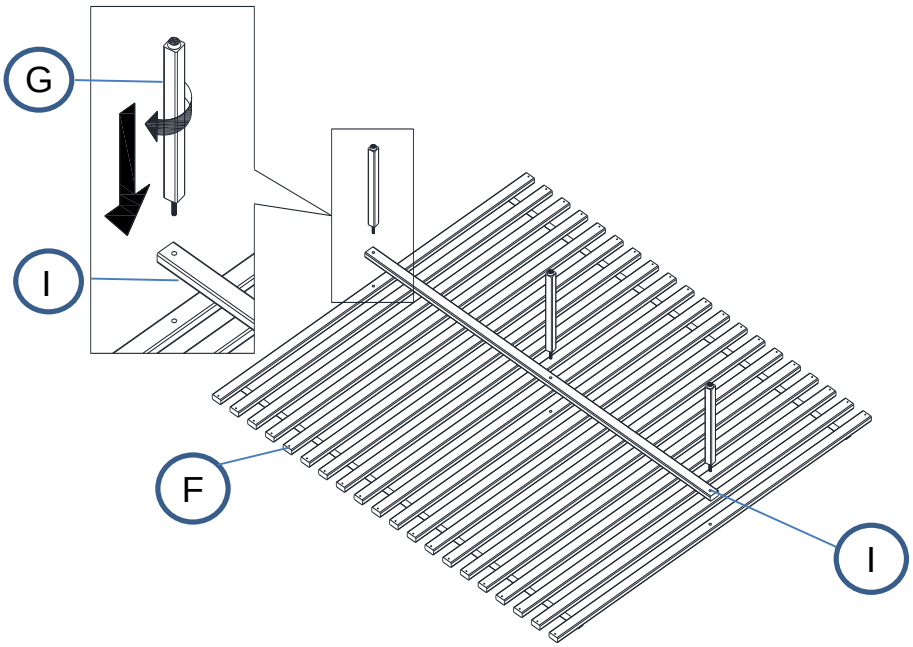


## ASSEMBLY INSTRUCTIONS

# STEP 3

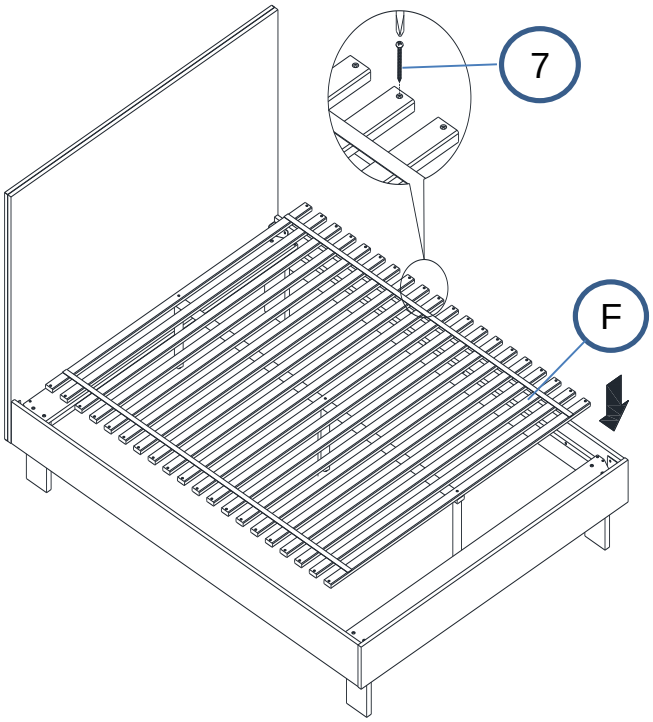



# STEP 4



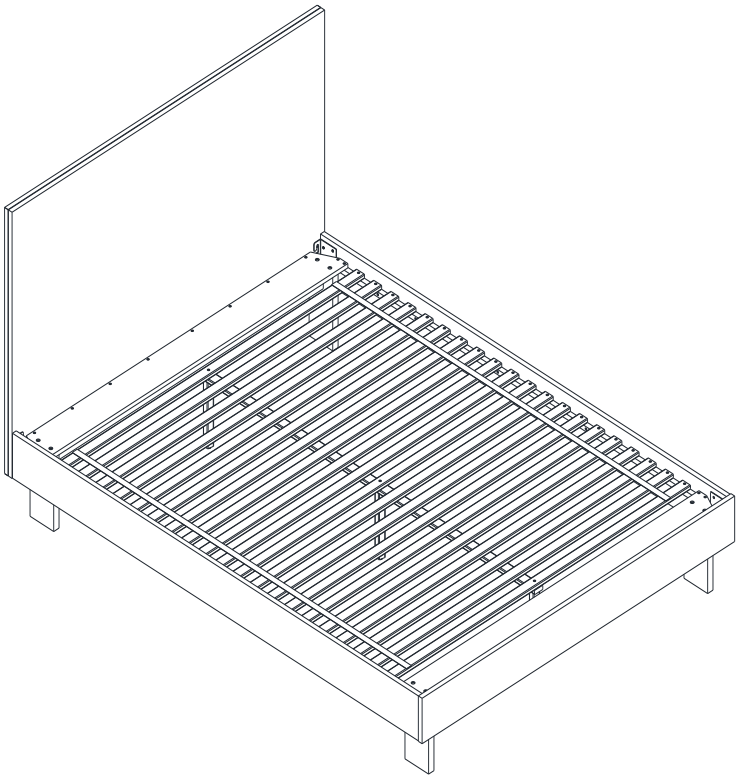
## ASSEMBLY INSTRUCTIONS

## STEP 5



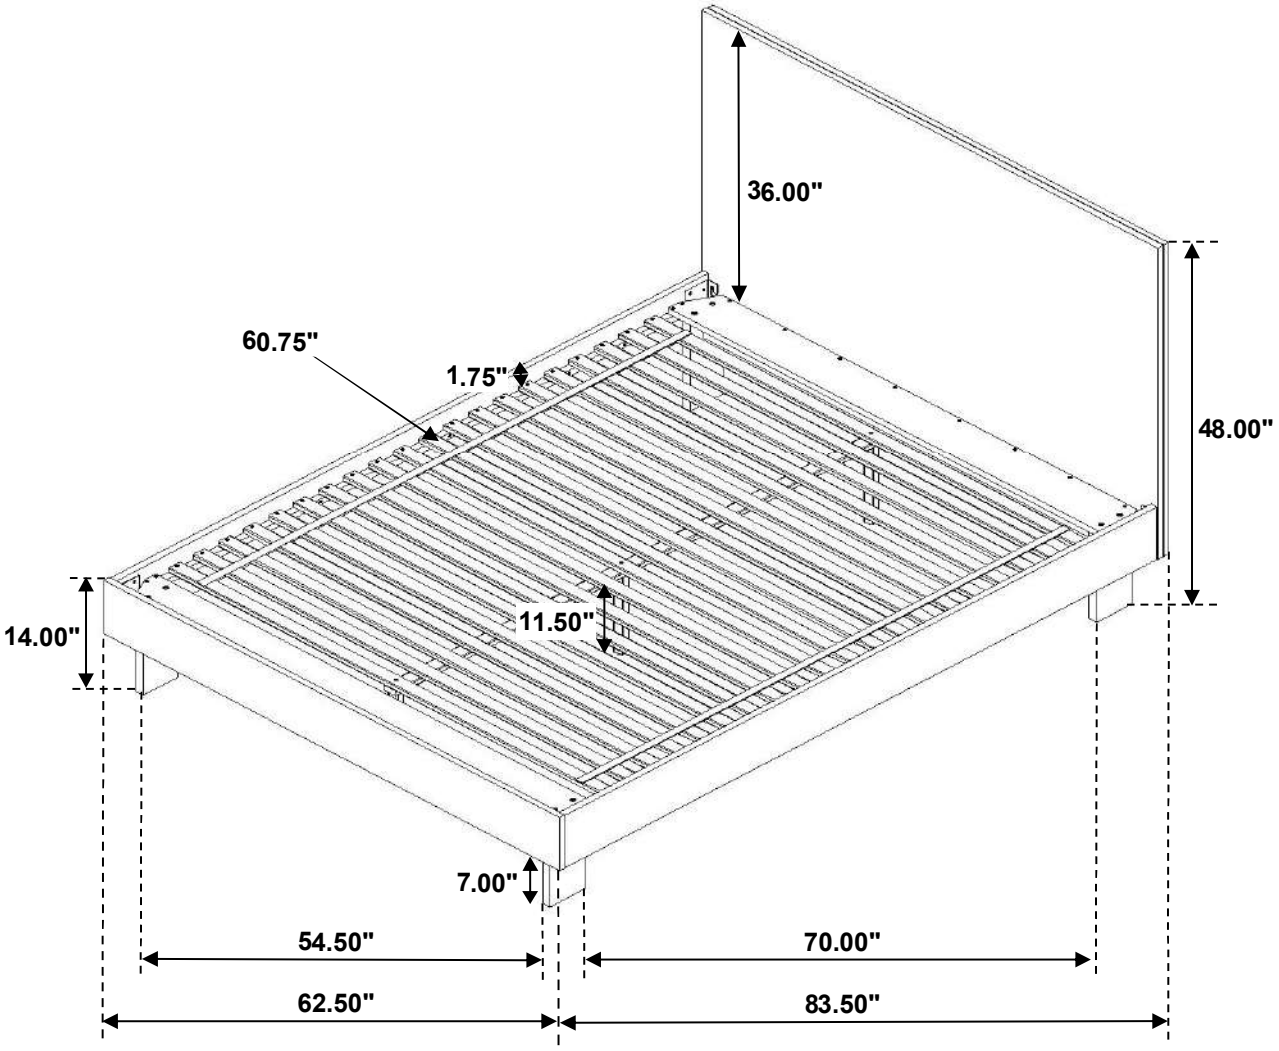

## STEP 6

## COMPLETE





**Inner Size : 61.00"W x 81.00"D**




**Note : Dimension tolerance ±5%**