


ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION : CABINET

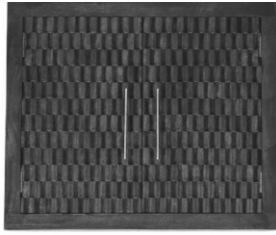


1

Reverse the cabinet top & place the leg as shown & align the leg to match the apron.




2

Place the bolt & washer in the cut out & tighten it with allen key provided as in Fig1.

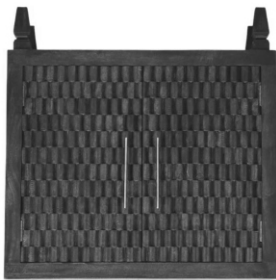

3

Fix the other leg set in the similar way

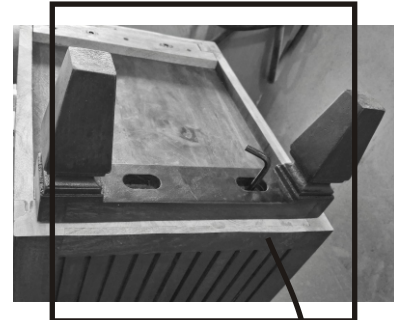

4

Reverse the cabinet straight. Now your cabinet is ready for use

