

## ASSEMBLY INSTRUCTIONS

### DESK

#### ASSEMBLY REQUIREMENTS

2-Person  
Assembly

2 Hours  
Assembly Time  
(Approximate)

Tools Required  
(Not Provided)



Phillips Screwdriver



Flat Screwdriver




Mallet

Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product. Contact our customer service department in case there are any missing or damage parts or hardware. Replacement parts are normally shipped within 2 or 3 days.

We appreciate your business!

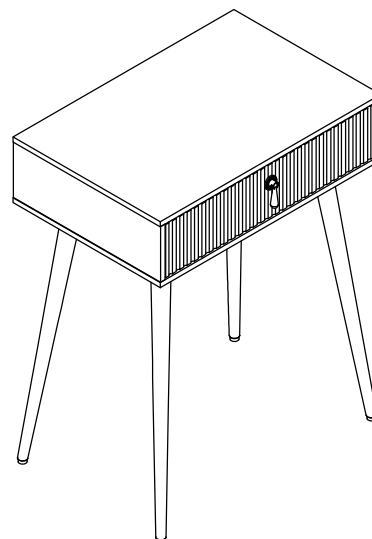

#### ASSEMBLY PREPARATION

1. Remove all packaging materials, staples and packing straps from the carton.
2. Refer to Parts List and Hardware List and ensure parts and hardware are complete before you start assembling. Contact customer service for missing parts.
3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from getting scratched.

#### SAFETY PRECAUTION

1. KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.

#### TIPS FOR ASSEMBLY













1. Allow ample room for assembly and in close proximity to where product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Identify all of the parts, hardware and quantities required for each step.
4. During assembly, do not over-tighten any fittings as this may cause damage.
5. Always place the product on a flat, level surface.
6. Do not sit or stand on the partially assembled product; only use the product for which it is intended.

#### CARE AND MAINTENANCE







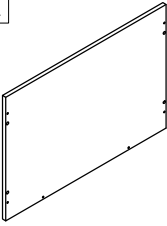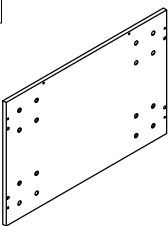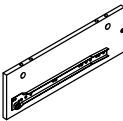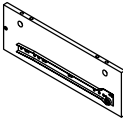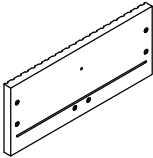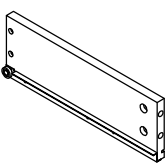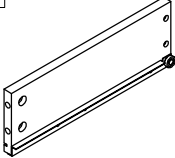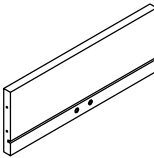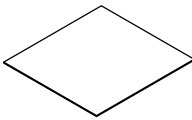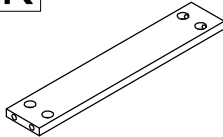



- Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.
- Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or delaminate.
- Do not place hot items (e.g. hot drinks) directly onto the wood surface.
- Do not drag and/or pull the furniture.

This product is for indoor and household use only - not for commercial use.


# PART LIST

<b>A</b> 	<b>B</b> 	<b>C</b> 	<b>D</b> 	<b>E</b> 
600*400*12mm Top panel 1 PC	600*400*12mm Bottom panel 1 PC	400*131*12mm Left side panel 1 PC	400*131*12mm Right side panel 1 PC	574*131*12mm Back panel 1 PC
<b>F</b> 	<b>G</b> 	<b>H</b> 	<b>I</b> 	<b>J</b> 
568*125*18mm Drawer front panel 1 PC	350*96*12mm Drawer left side panel 1 PC	350*96*12mm Drawer right side panel 1 PC	525*96*12mm Drawer back panel 1 PC	536*347*5mm Drawer bottom panel 1 PC
<b>K</b> 	<b>L</b> 			
336*60*12mm Bottom Bar of drawer 1 PC	609*80*80mm Iron Feet 4 PCS			

# HARDWARE LIST

<b>#1</b> 	<b>#2</b> 	<b>#3</b> 	<b>#4</b> 	<b>#5</b> 
Cam bolt Ø6*35mm 22PCS (+4)	Cam lock Ø15*9mm 22PCS (+4)	Wood Dowel Ø8*30mm 12PCS (+2)	Short Round head bolt M4**22mm 1 PC	Bolt M6**13mm 16PCS(+2)
<b>#6</b> 	<b>#7</b> 	<b>#8</b> 	<b>#9</b> 	<b>#10</b> 
Screw Ø7*38mm 4 PCS (+2)	Screw Ø4*25mm 4 PCS (+2)	Knob 1 PC	Allen wrench 4mm 1 PC	SAFETY STRAP KIT 1SET

# Instructions For Fastening CAM-BOLT and CAM-LOCK




CAM-BOLT




CAM-LOCK

## Tools Required

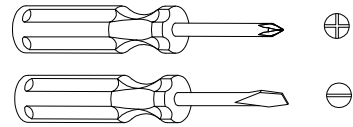


### INSERTING AND TIGHTENING CAM-BOLT

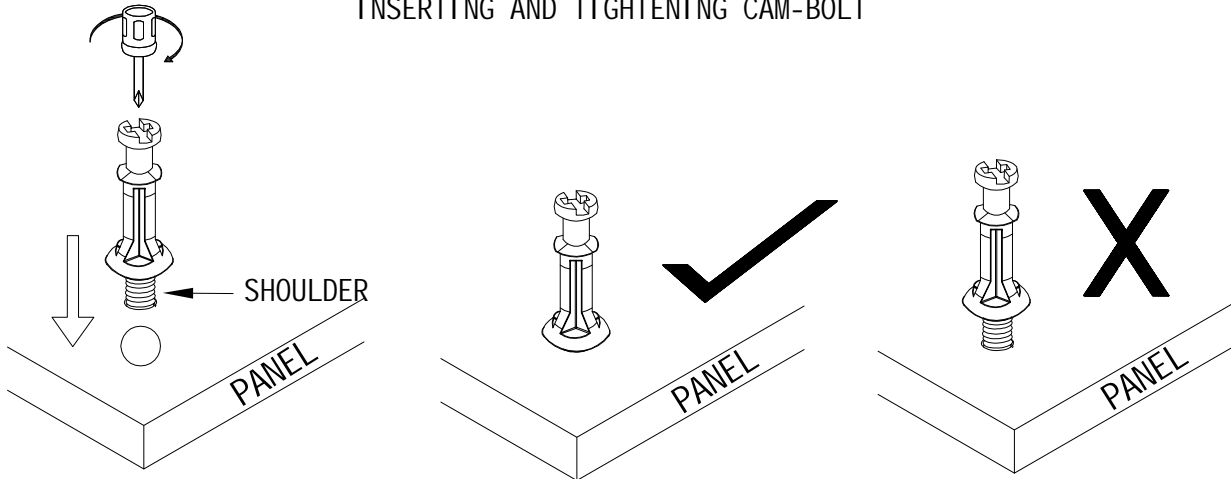

Place Cam-bolt on pre-drilled hole. Shoulder is flushed (on the same level) with the panel. hole and screw in vertically same level) with the panel.

Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.

### INSERTING CAM-LOCK

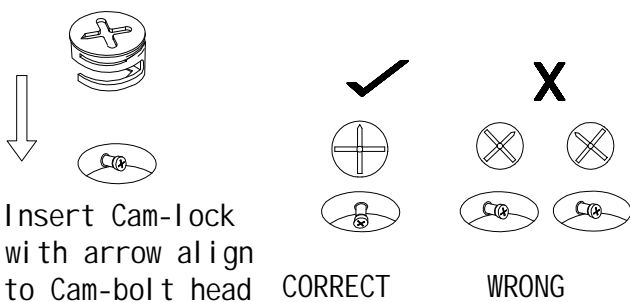


Insert Cam-lock with arrow align to Cam-bolt head

CORRECT

WRONG


### TIGHTENING CAM-LOCK




Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

Use a Flat-head Screwdriver to turn Camlock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.


Step 1.

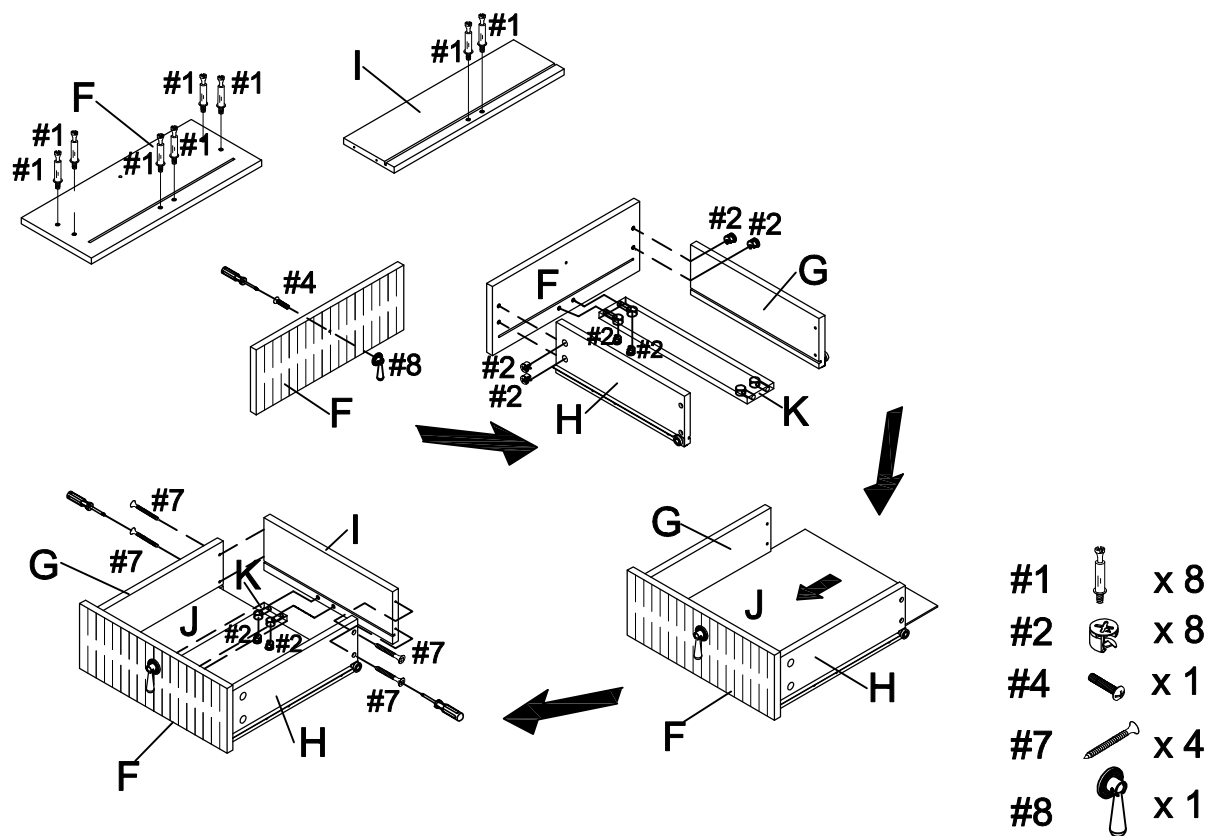

Step 2.

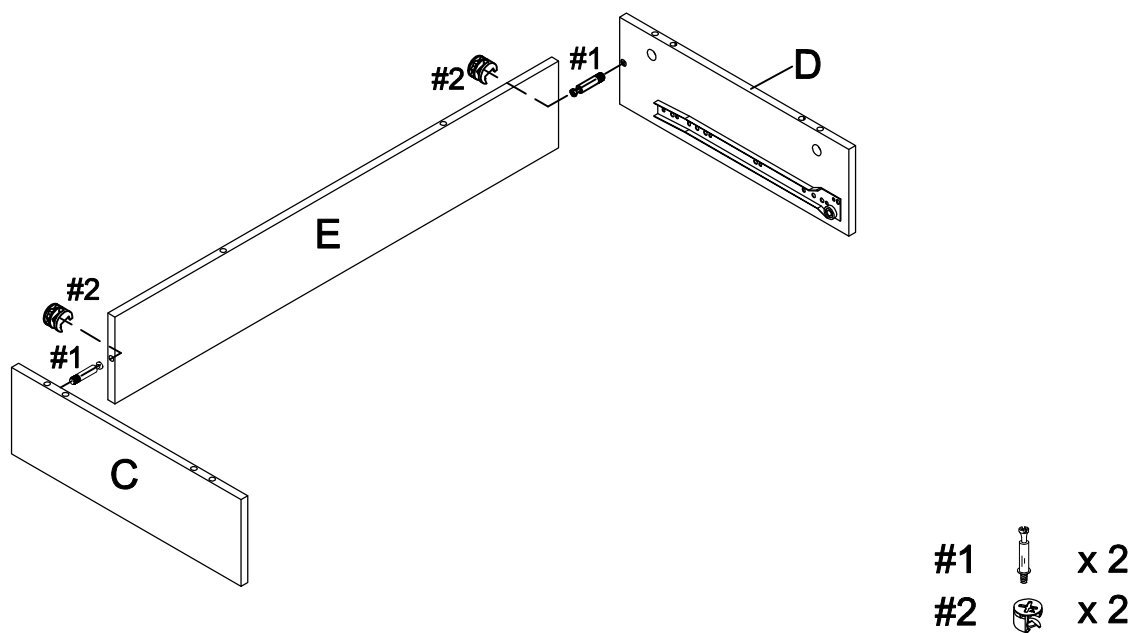


Step 3.

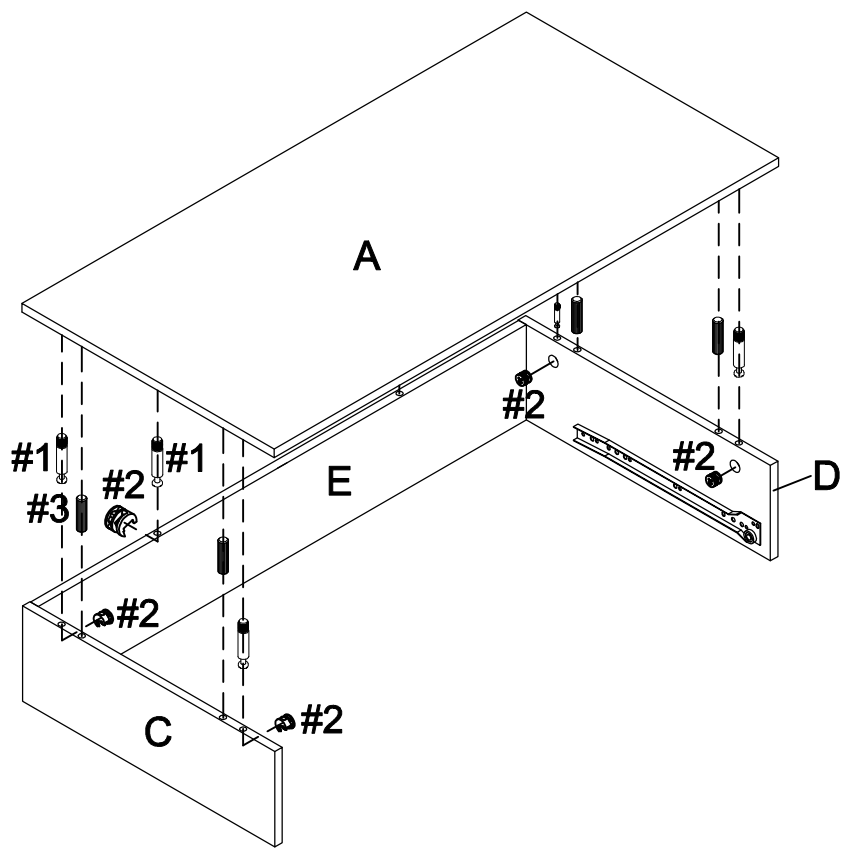


- |    |  |     |
|----|--|-----|
| #1 |  | x 6 |
| #2 |  | x 6 |
| #3 |  | x 4 |

Step 4.

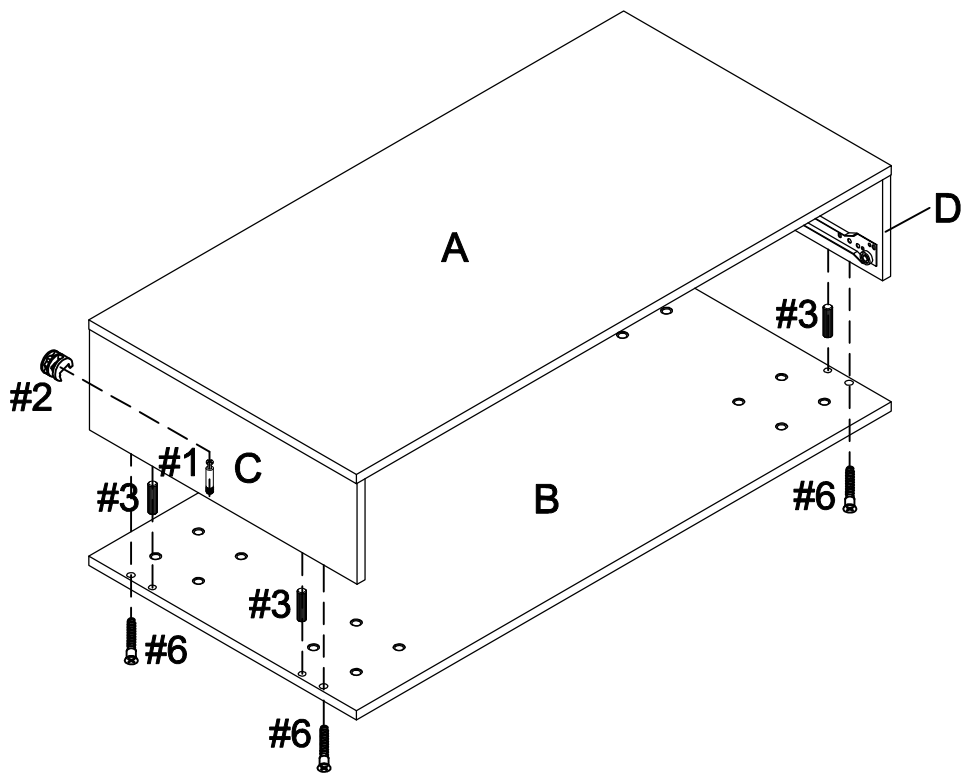




- |    |  |     |
|----|--|-----|
| #1 |  | x 2 |
| #2 |  | x 2 |
| #3 |  | x 4 |
| #6 |  | x 4 |

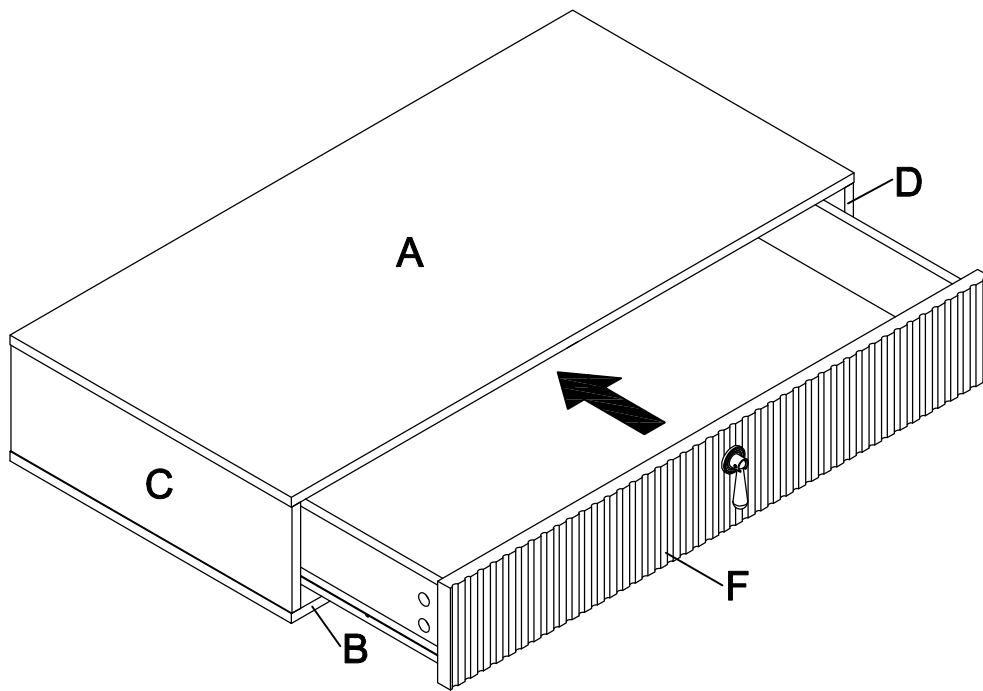
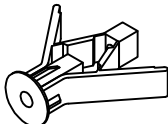



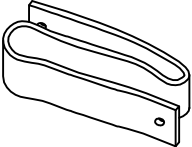
Step 5.

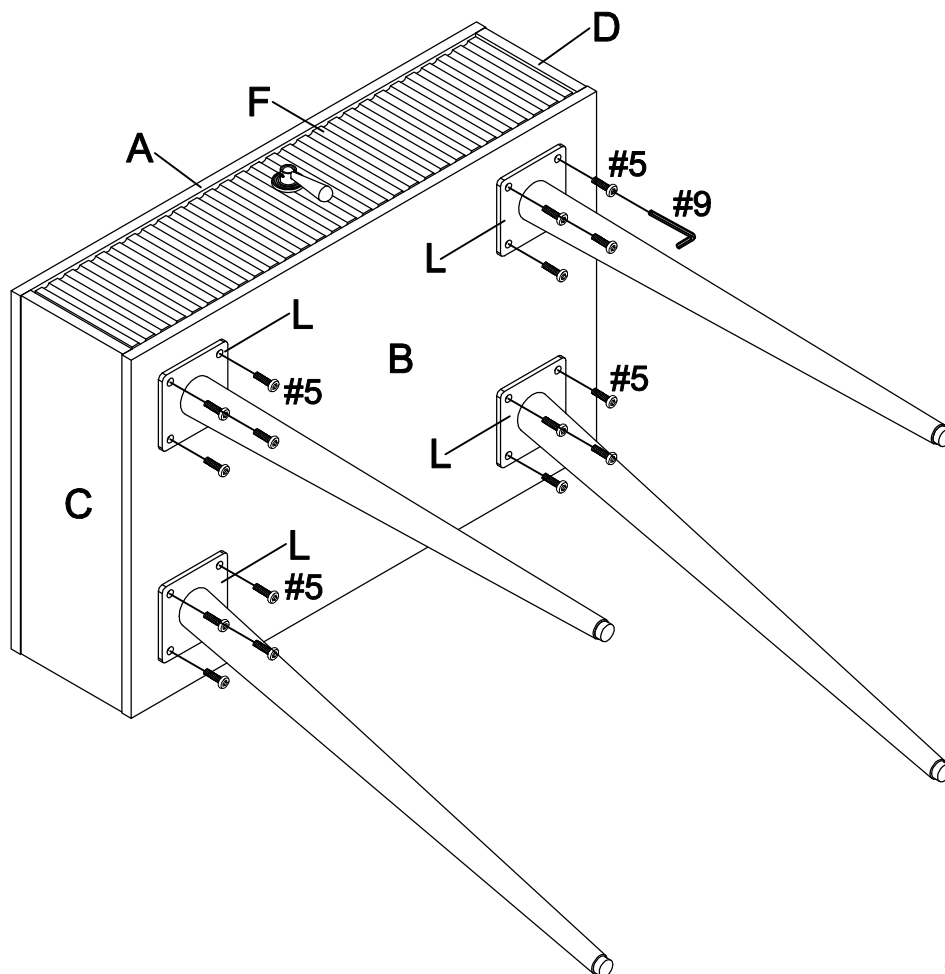

Step 6.



#5  x 16  
#9  x 1

<b>#10</b>	<b>A</b>	<b>B</b>	<b>C</b>	<b>D</b>	<b>E</b>
			 D8*3/4"	 D8*1-1/2"	
Safety Strap Kit	Wall Anchor	Washer	Short Screw	Long Screw	Safety Wall Strap
1 SET	1 PC	2 PCS	1 PC	1 PC	1 PC

## SAFETY WALL STRAP INSTALLATION

It is highly recommended to install the safety strap to prevent tip-over which can cause damage and/or injury.

1. Insert Short Screw (C) through Washer (B) and Safety Strap (E) to screw onto the Back edge of Top Panel (A). Use a Phillips screwdriver to drive (C).
2. At the location where you want to secure the unit, drill a hole to fit Wall Anchor (A) snugly. The drilled hole has to level with safety strap on the back edge of (A).
3. Next, fit Wall Anchor (A) into the drilled hole.
4. Insert Long Screw (D) through Washer (B) and Safety Strap (E) to screw into Wall Anchor (A). Use a Phillips screwdriver to drive (D).

Note: This item is not designed to store clothing.

