

ASSEMBLY INSTRUCTIONS



Console Table



NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Please never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

To insert a camlock: (Please read below instructions before assembling)

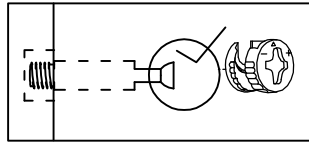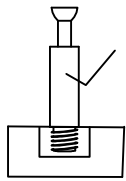

1. Insert cam screw into hole as shown in diagram A .

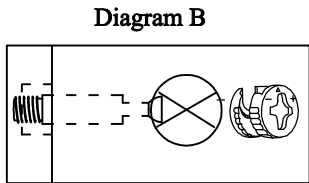
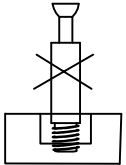


Diagram B

Make sure not to insert the cam screw:
Too deep as shown in figure B as this will cause the cam screw to be misaligned and unable to interlock properly.




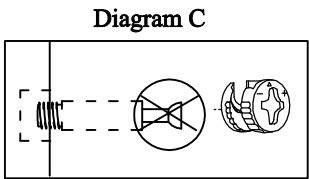


Diagram C


Also avoid inserting the cam screw too close to the surface of the hole as shown in figure C, as this will cause the cam lock to be too loose, and not interlock properly.

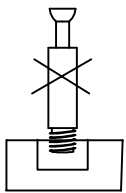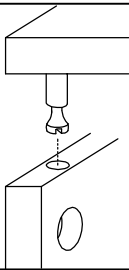


2. Connect the panels together.

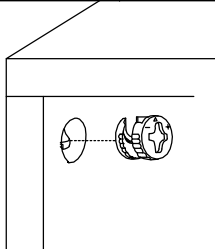

ARROW SIGN



3. When inserting the cam lock make sure the arrow of the cam lock faces the cam screw.

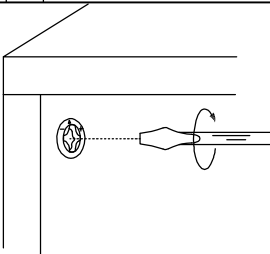





















4. To tighten the cam lock turn the cam lock clockwise 90-180 degree or until the arrow is facing opposite the place cam lock was inserted.

NOTE: DO NOT USE AN AUTOMATIC SCREWDRIVER TO TIGHTEN CAM LOCKS.












Note:

- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work , such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.

Part List

<p>A1. Quantity of 1</p>  <p>Right Divider</p>	<p>A2. Quantity of 1</p>  <p>Left Divider</p>	<p>A3. Quantity of 1</p>  <p>Middle Shelf</p>	<p>A4. Quantity of 1</p>  <p>Bottom Panel</p>
<p>A5. Quantity of 1</p>  <p>Left Side Panel</p>	<p>A6. Quantity of 1</p>  <p>Right Side Panel</p>	<p>A7. Quantity of 1</p>  <p>Top Panel</p>	<p>A8. Quantity of 1</p>  <p>Back Panel</p>
<p>A9. Quantity of 1</p>  <p>Back Panel</p>	<p>A10. Quantity of 1</p>  <p>Left Door</p>	<p>A11. Quantity of 1</p>  <p>Right Door</p>	<p>A12. Quantity of 2</p>  <p>Side Shelf</p>
<p>A13. Quantity of 1</p>  <p>Center Shelf</p>	<p>A14. Quantity of 3</p>  <p>Drawer Front Panel</p>	<p>A15. Quantity of 6</p>  <p>Drawer Side Panel</p>	<p>A16. Quantity of 3</p>  <p>Drawer Back Panel</p>
<p>A17. Quantity of 3</p>  <p>Drawer Bottom Panel</p>	<p>A18. Quantity of 2</p>  <p>Front Leg</p>	<p>A19. Quantity of 2</p>  <p>Rear Leg</p>	<p>A20. Quantity of 1</p>  <p>Center Leg</p>

Hardware List

<p>B1. Quantity of 20</p>  <p>Camlock</p>	<p>B2. Quantity of 20</p>  <p>Wood Dowel</p>	<p>B3. Quantity of 34</p>  <p>Screw</p>	<p>B4. Quantity of 24</p>  <p>Screw</p>
<p>B5. Quantity of 8</p>  <p>Screw</p>	<p>B6. Quantity of 5</p>  <p>Door Knob</p>	<p>B7. Quantity of 12</p>  <p>Support</p>	<p>B8. Quantity of 2</p>  <p>Magnet</p>
<p>B9. Quantity of 3</p>  <p>Stopper</p>	<p>B10. Quantity of 1</p>  <p>Screw and Anchor</p>	<p>B11. Quantity of 1</p>  <p>Anti-tip Kit</p>	



WARNING:

Serious or fatal crushing injuries can occur from furniture tip-over.


To help prevent tip-over:

- Place heaviest item in the lowest drawers.
- Unless specifically designed to accommodate, do not set TVs or other heavy objects on top of this product.
- Never allow children to climb or hang on drawers, doors or shelves.
- Never open more than one drawer at a time.(OR)
- Do not defeat or remove the drawer interlock system.

Use of tip-over restraints may only reduce, but not eliminate the risk of tip-over.

Step 1:


B9:  3SETS

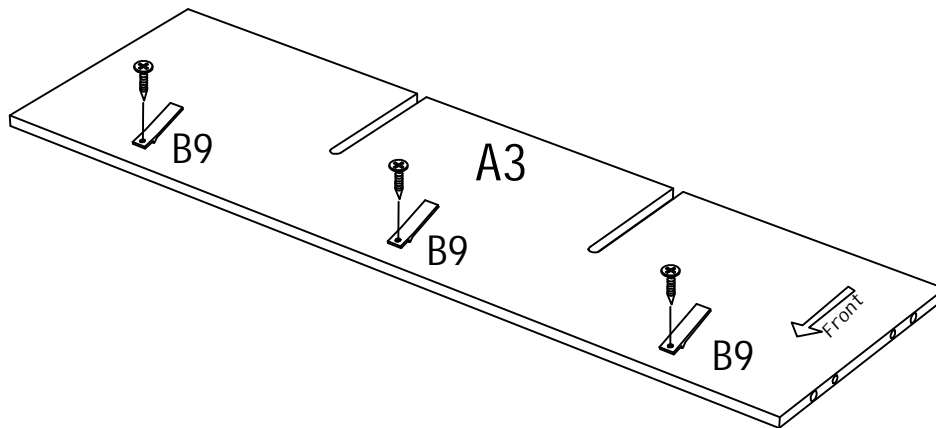

Attach Stoppers B9 to Middle Shelf A3 using included screws.(Holes are pre-drilled for assemble B9)


Step 2:

B8:  2SETS

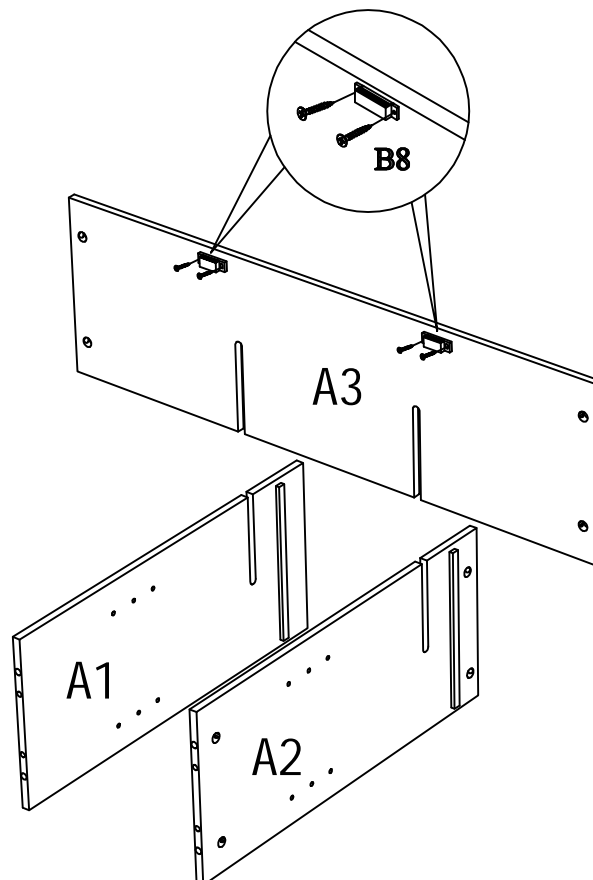


- 1). Attach Magnets B8 to the bottom of Middle Shelf A3 using included screws.
(Holes are pre-drilled for assemble B8)
- 2). Cross Middle Shelf A3 to Dividers A1&A2 as shown above.

Step 3:

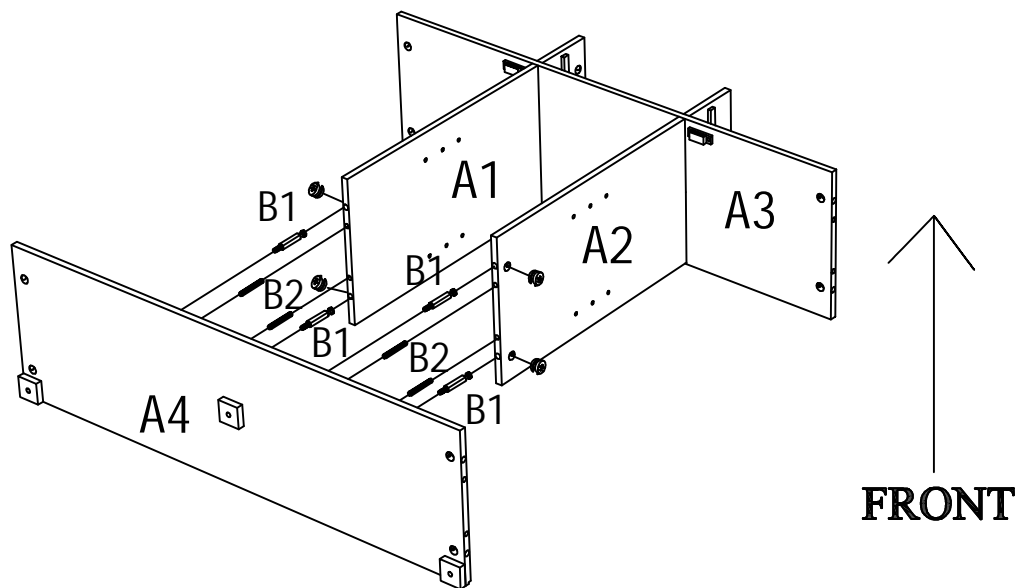


Assemble Dividers A1&A2 to Bottom Panel A4 using Wood Dowels B2 and Camlocks B1.

Step 4:

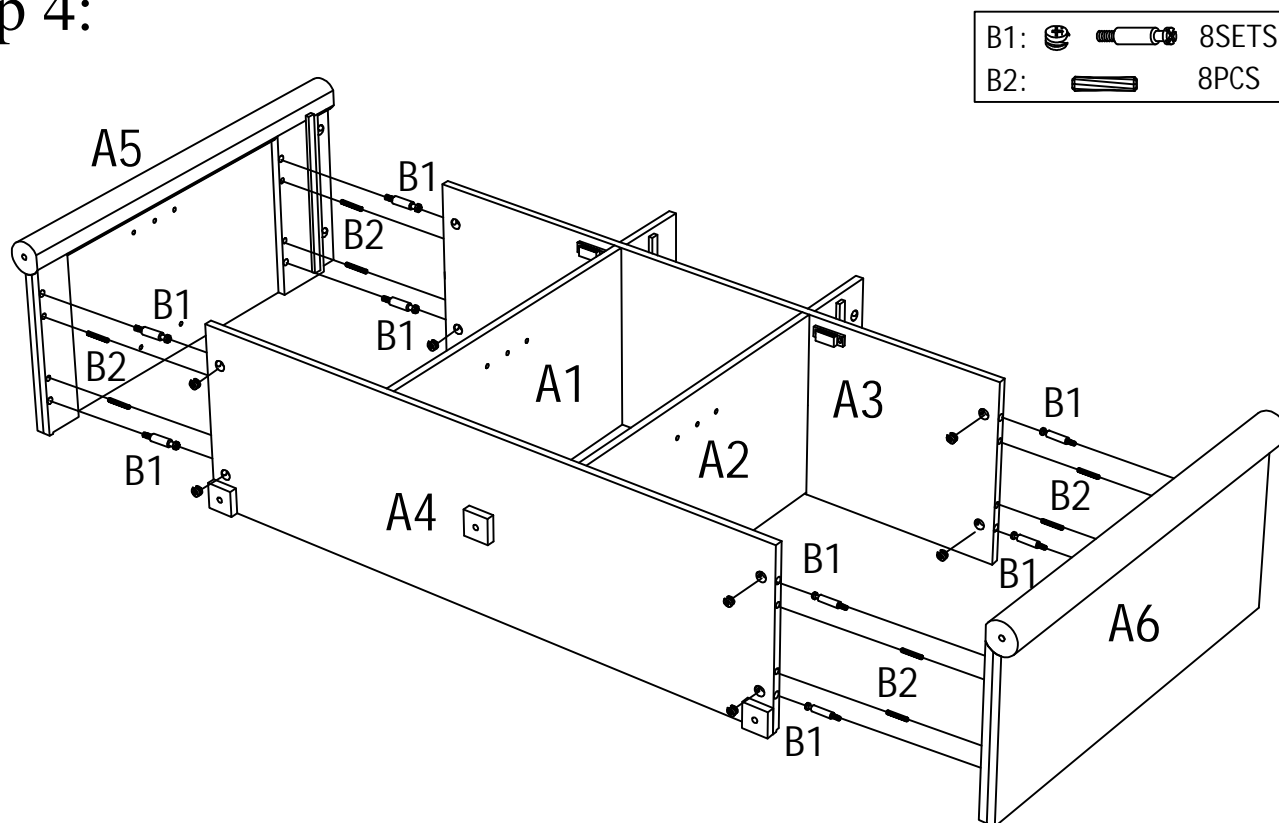


Assemble Side Panels A5&A6 to Bottom Panel A4 and Middle Shelf A3 using Wood Dowels B2 and Camlocks B1.

Step 5:

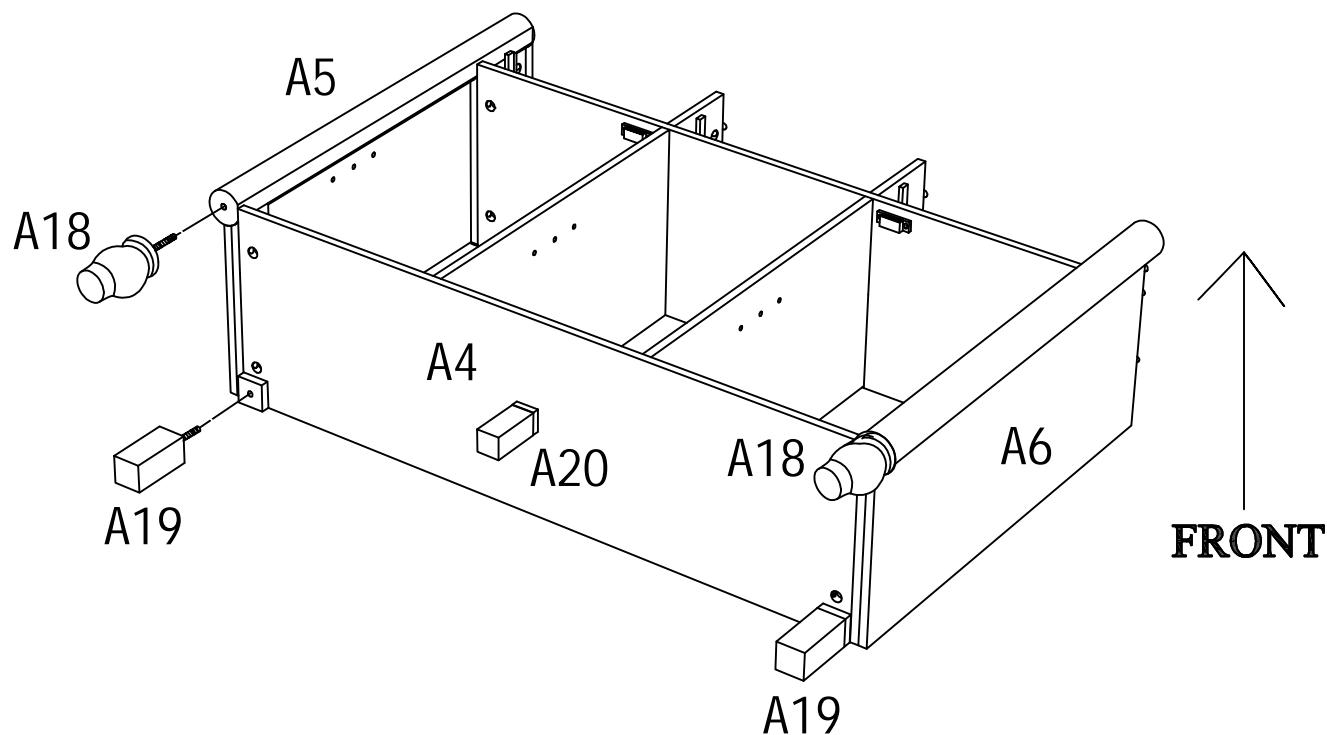

Tighten Rear Legs A19 & Center Leg A20 to the bottom of Bottom Panel A4, then assemble Front Legs A18 to Side Panels A5 & A6 as shown above.


Step 6:

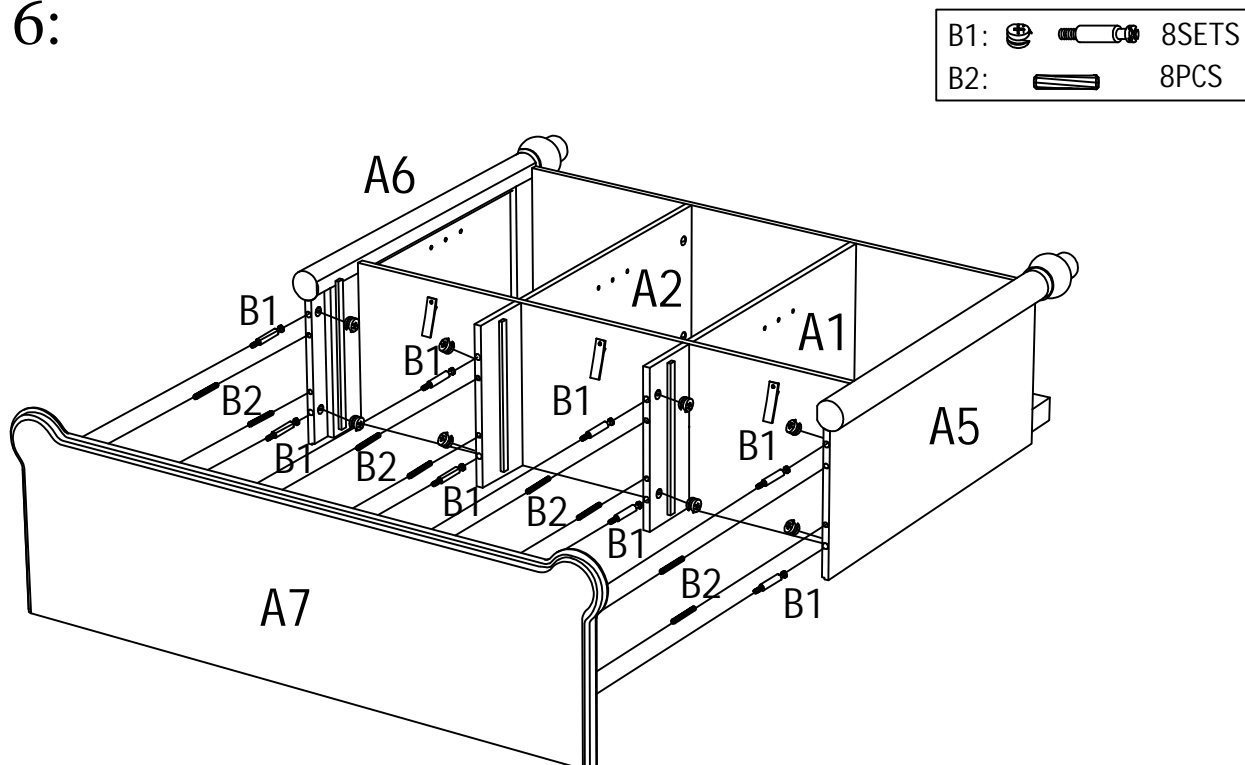

Assemble Top Panel A7 to Side Panels A5&A6 and Dividers A1&A2 using Wood Dowels B2 and Camlocks B1.

Step 7:


B3:  34PCS

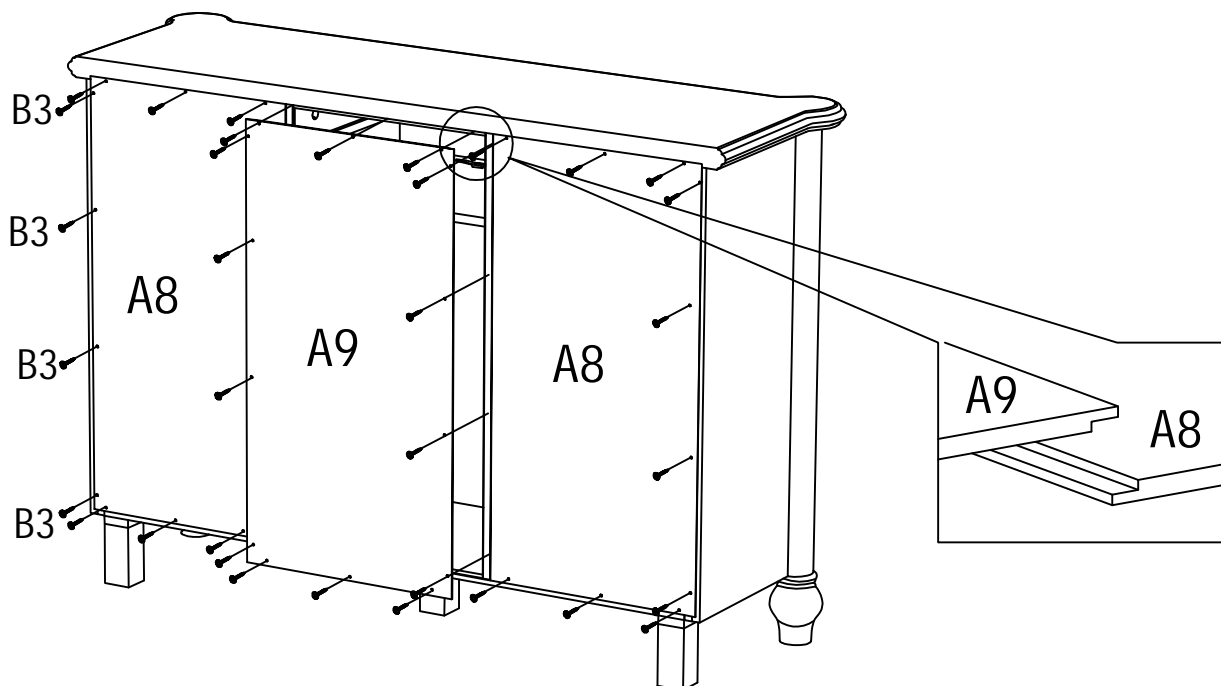

Assemble Back Panels A8 & A9 to the back of the unit using Screws B3.


Step 8:

B7:  12PCS

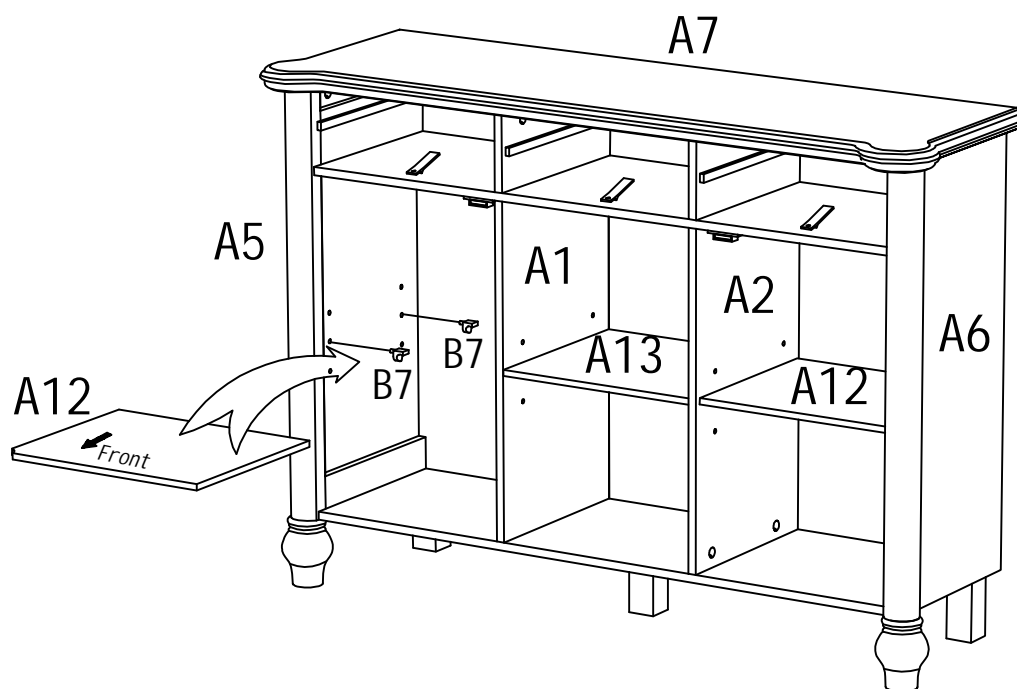


- 1). Insert Shelf Supports B7 into the holes on Side Panels A5 & A6 and Dividers A1 & A2.
- 2). Place Shelves A12 & A13 onto Shelf Supports B7.

Step 9:

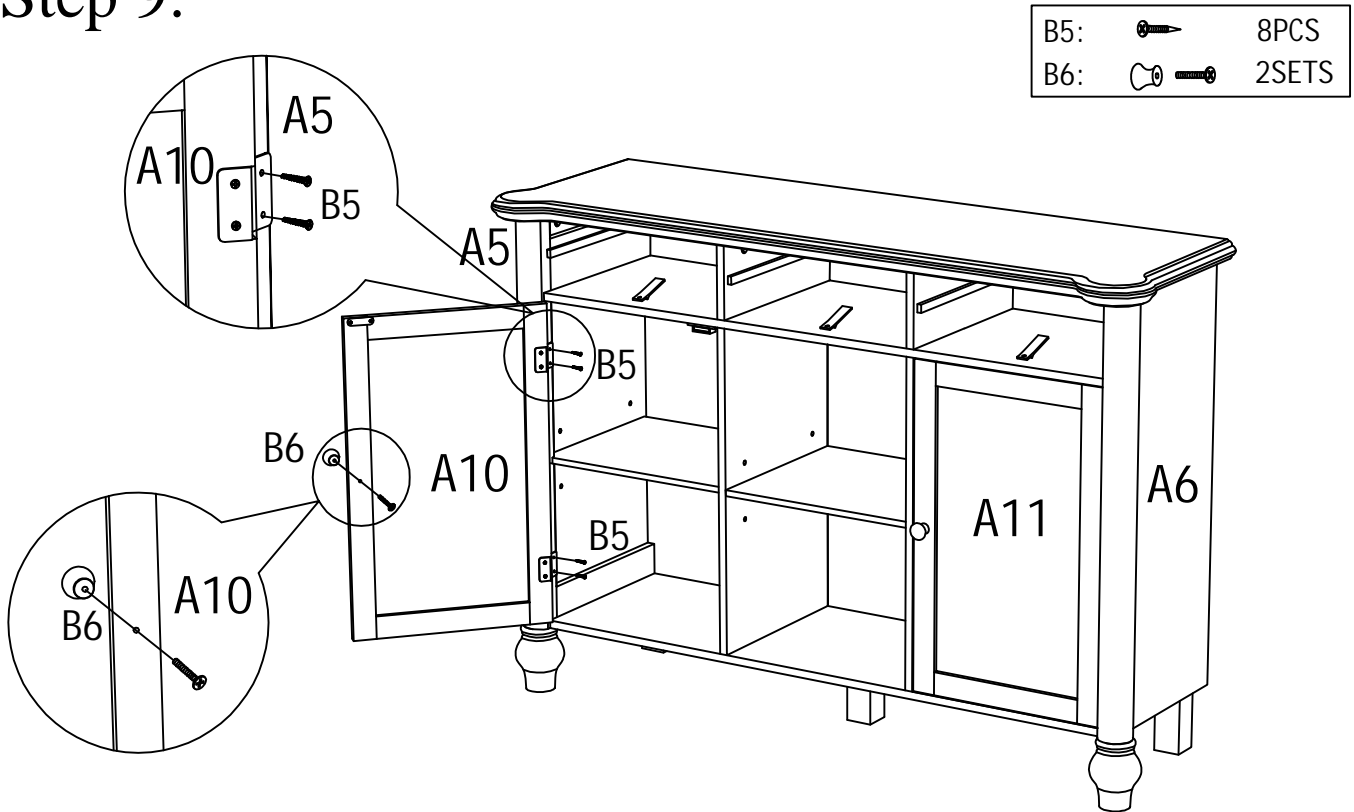


- 1). Attach Door Knob B6 to Left Door A10 using included bolt.
- 2). Attach Left Door A10 to Left Side Panel A5 using Screws B5. Then repeat this step to assemble the other door A11.

Step 10:

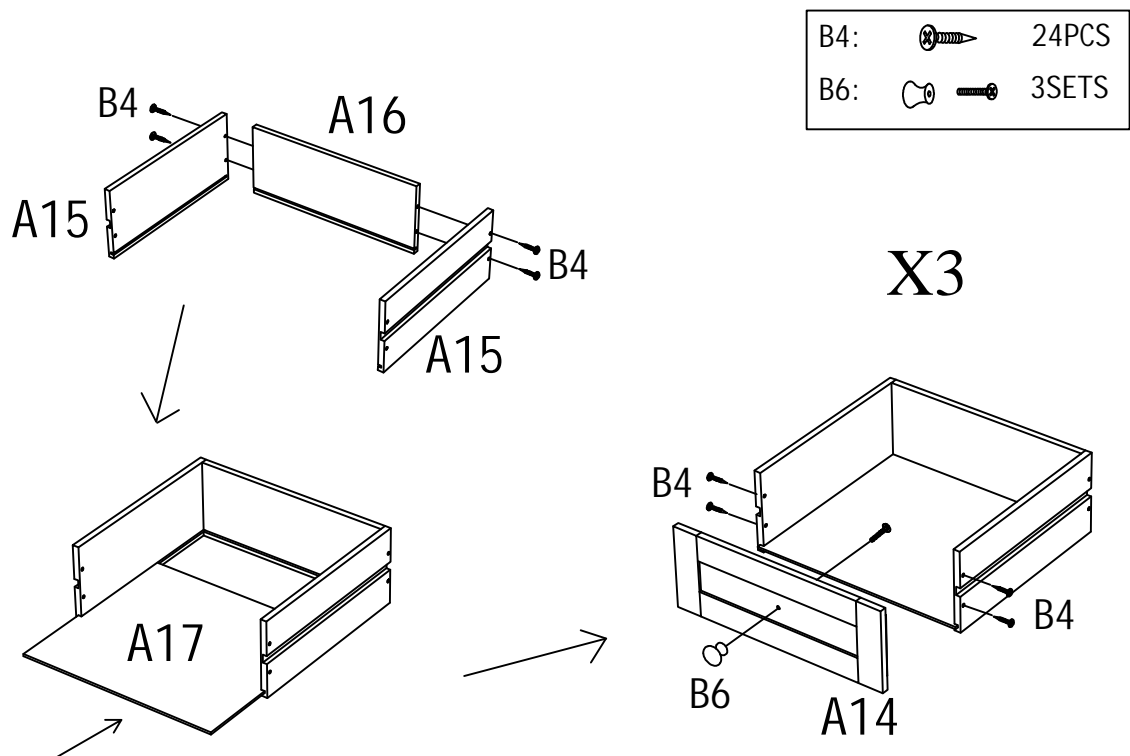


- 1). Assemble Drawer Side Panels A15 to Drawer Back Panel A16 using Screws B4.
- 2). Insert Drawer Bottom Panel A17 into the grooves on Drawer Side Panels A15 and Drawer Back Panel A16.
- 3). Assemble Drawer Front Panel A14 to Drawer Side Panels A15 using Screws B4.
- 4). Attach Drawer Knob B6 to Drawer Front Panel A14 using Included bolt.

Step 11:

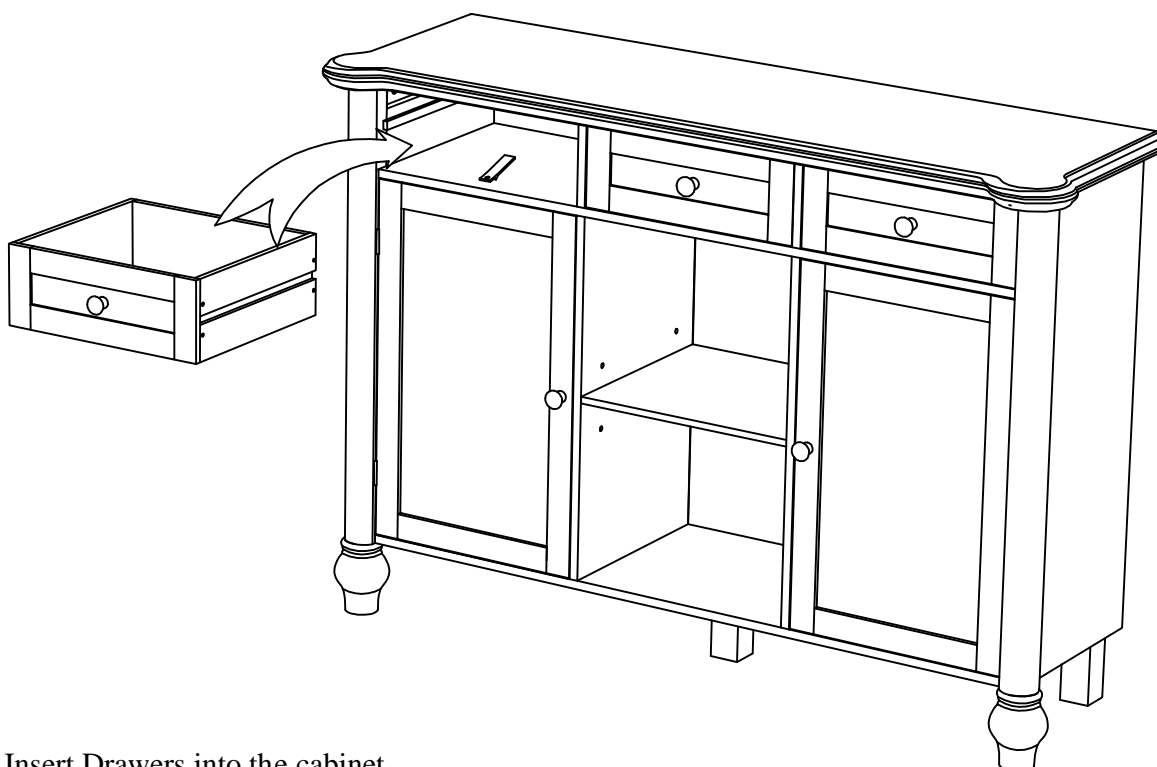










Insert Drawers into the cabinet.

Step 12:

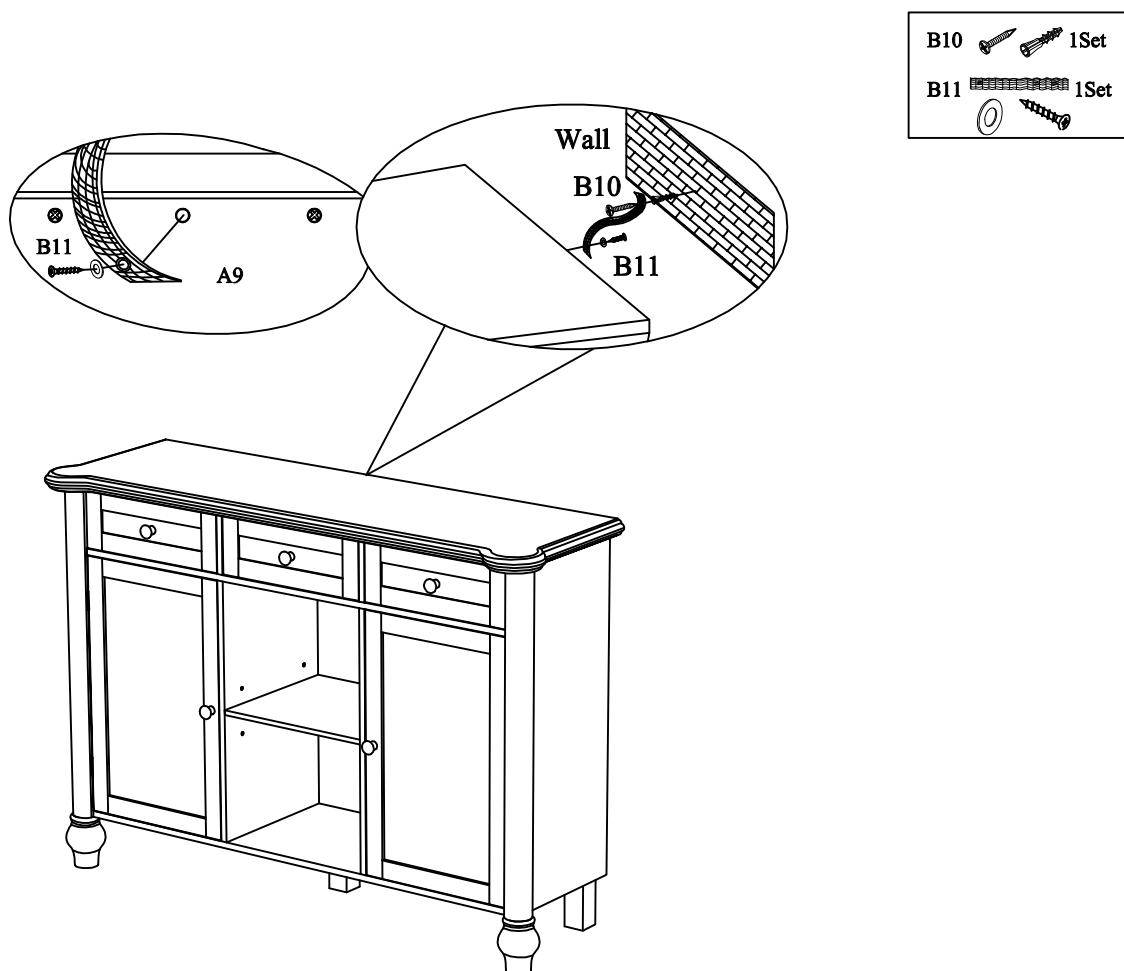

For your safety, please attached this table to the wall by Anchor with screws B10 and Anti-tip kit B11.

APPENDIX: Dimension of Hardwares in this AI.
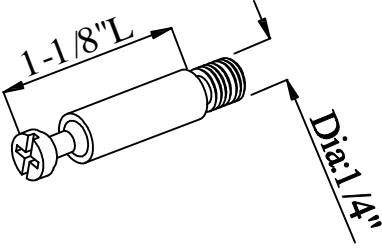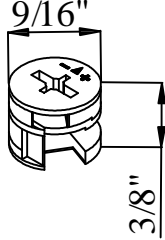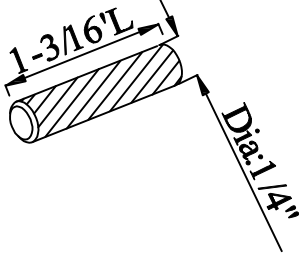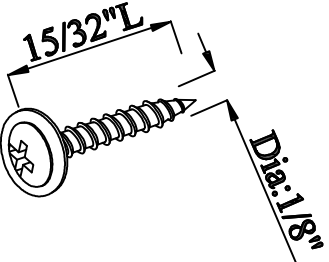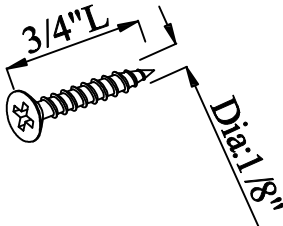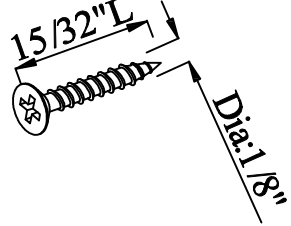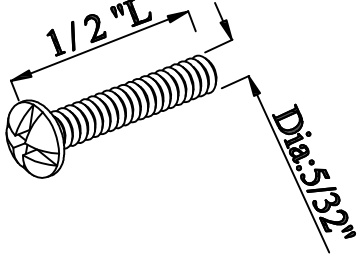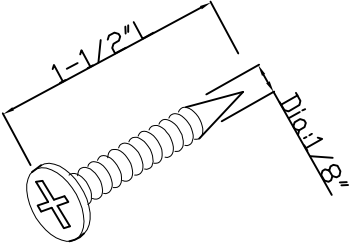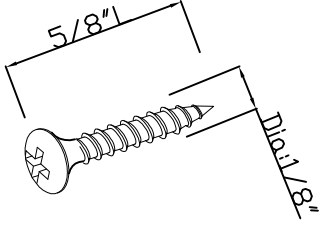
<p>B1</p>  <p>Cam-lock</p>	<p>B1</p>  <p>Cam-Nut</p>	<p>B2</p>  <p>Wood Dowel</p>
<p>B3&8</p>  <p>Screw</p>	<p>B4</p>  <p>Screw</p>	<p>B5</p>  <p>Screw</p>
<p>B6</p>  <p>Bolt for door knob</p>	<p>B10</p>  <p>Screw</p>	<p>B11</p>  <p>Screw for anti-tip kit</p>