


Sideboard cabinet

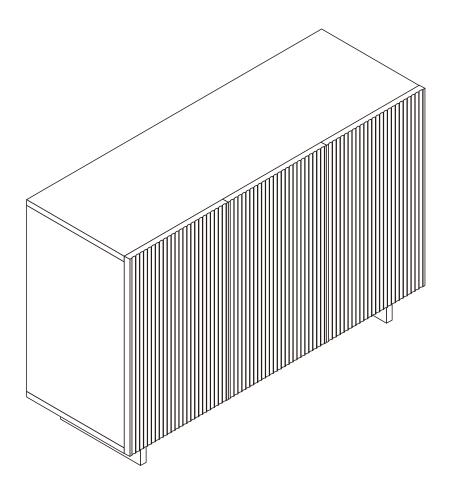


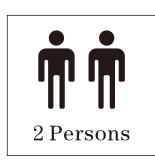

Installation Instructions

Notes: Don't tighten screws completely at first, just in case parts were assembled wrongly and need disassemble. Tighten screws at last when all parts are put together.

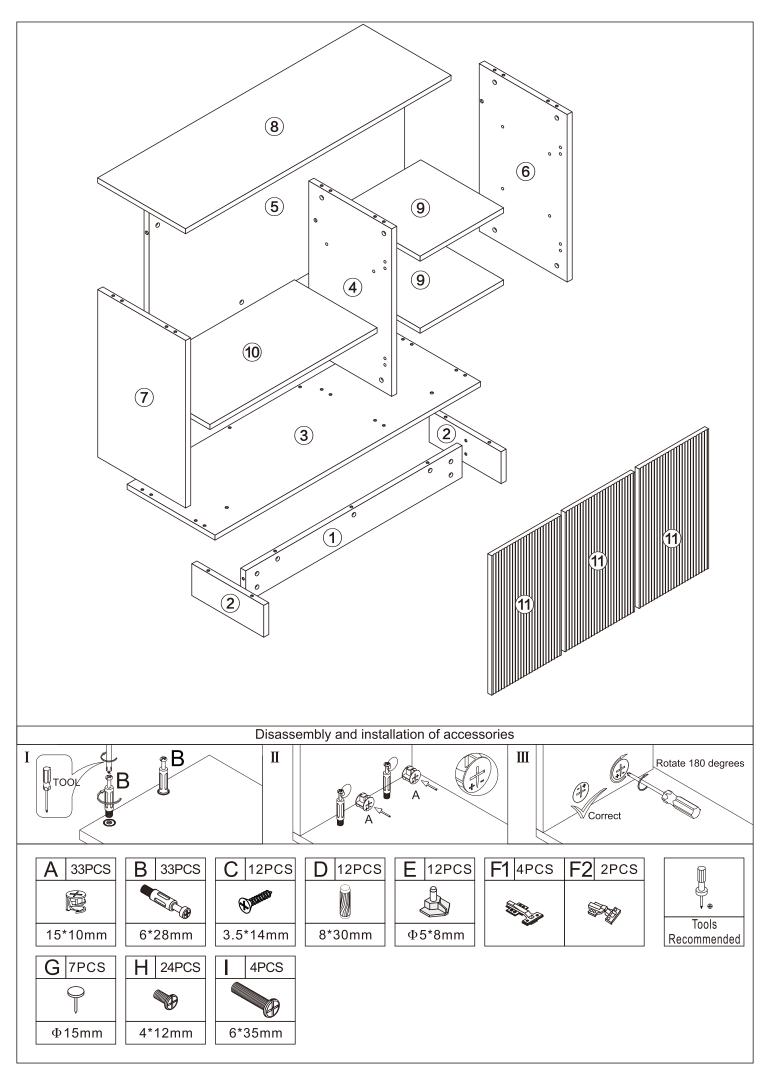

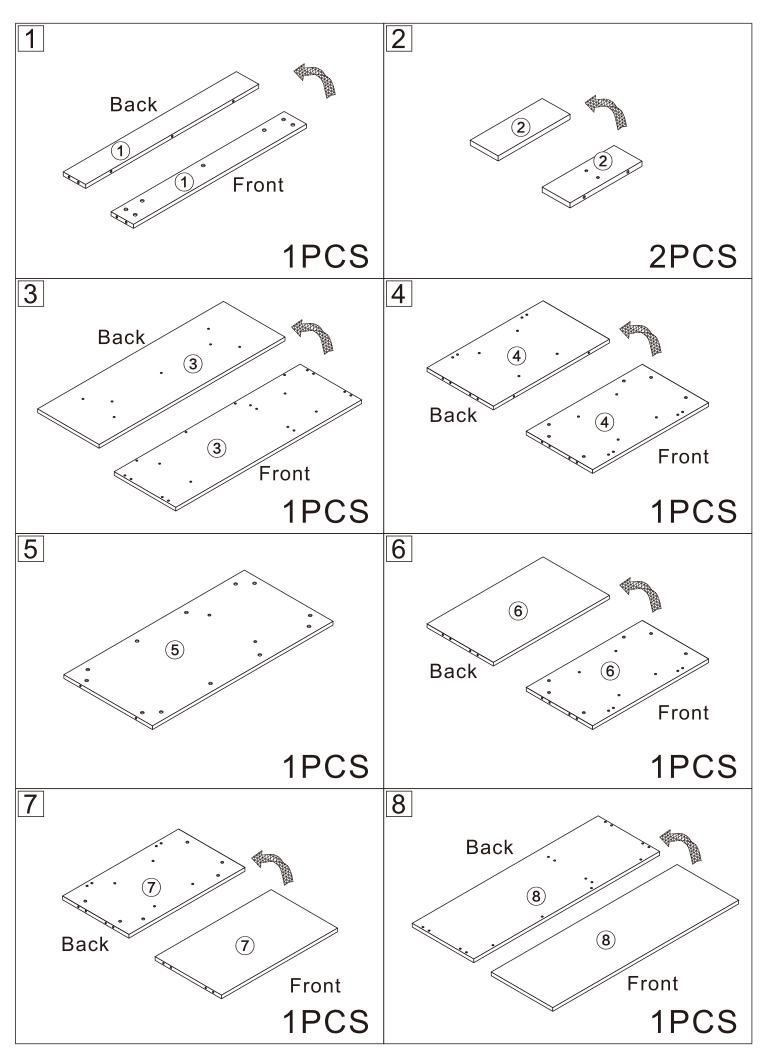

9	10
9	10
2PCS	1PCS
11 3PCS	
3703	

