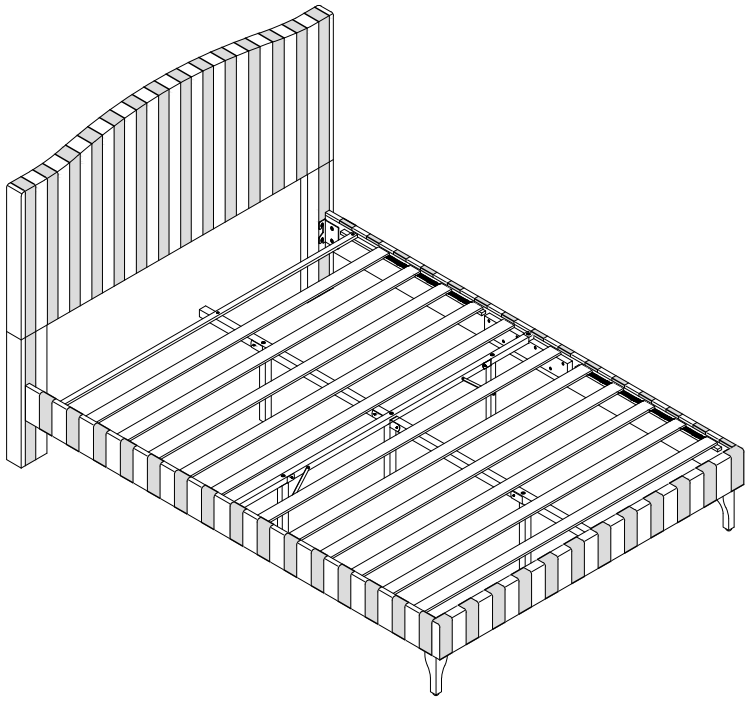
ASSEMBLY INSTRUCTION

ITEM NUMBER:QF437
SIZE: Full/Queen





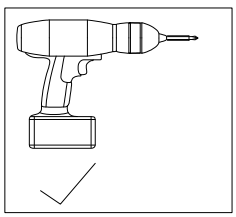
Please TEAR OFF this shrink film from side!
DO NOT USE CUTTER!

IMPORTANT NOTE


1. For the protection of your furniture, place all parts on a clean and smooth surface to prevent any damage.
2. Keep fittings out of children's reach and keep children well away from construction area.
3. When moving your assembled bed. it is best to lift the bed and never to drag it.
4. Do not use this product if parts are missing, damaged or worn.
5. This product should only be used on firm, level ground.
6. Please periodically check all fittings and re-tighten as necessary.
7. Do not use the bed unless all bolts and screws are firmly secured.
8. For further assistance, please provide a screenshot of your order and contact us via email at happycustomerscn@hotmail.com



















Minimum two person assembly



PART LIST

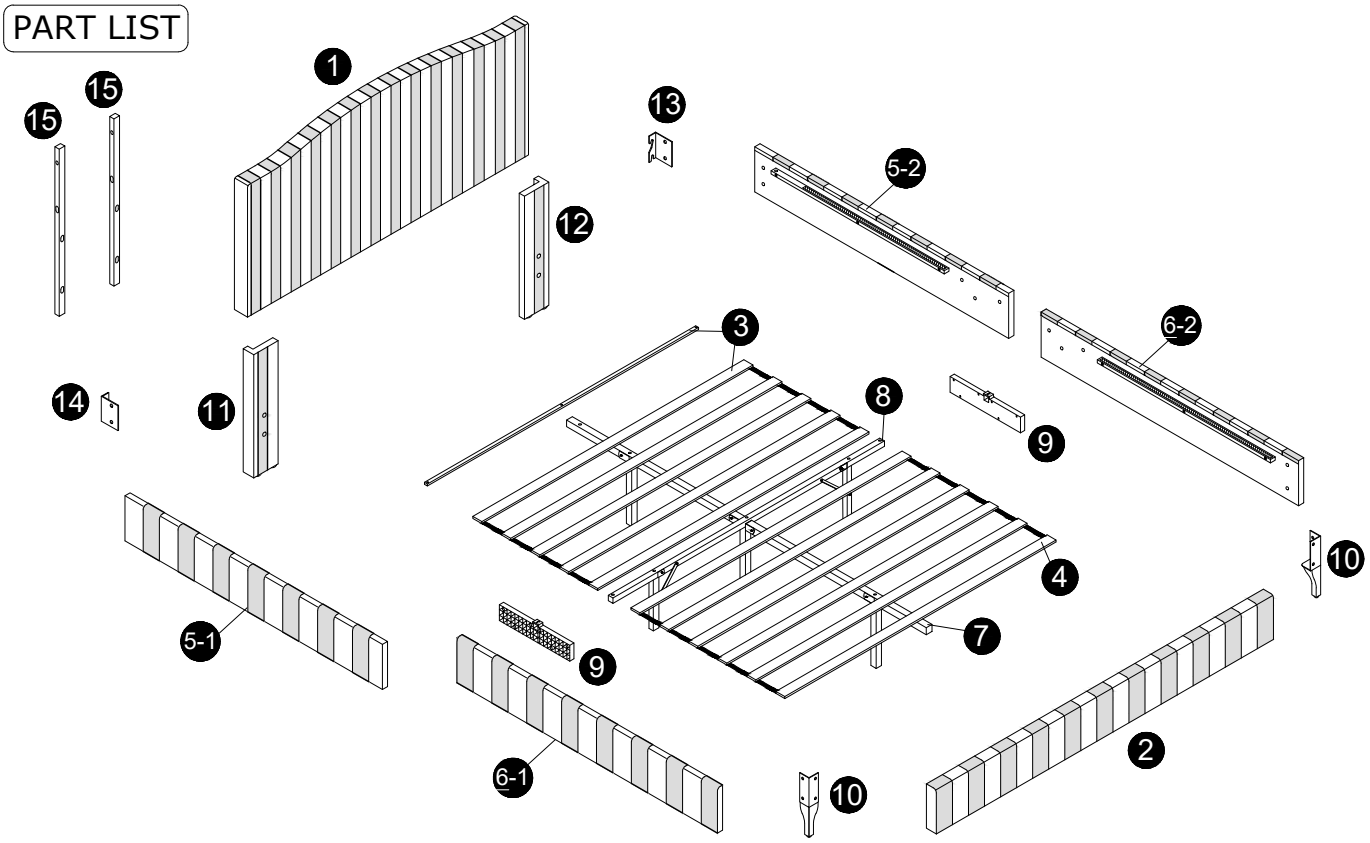

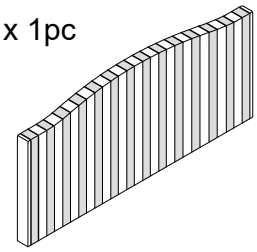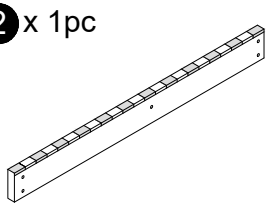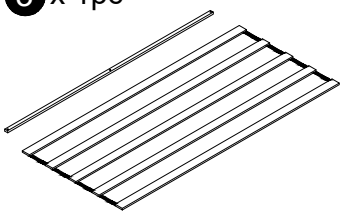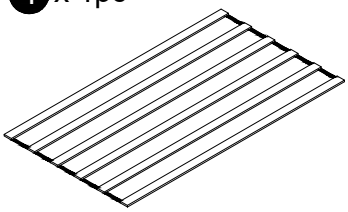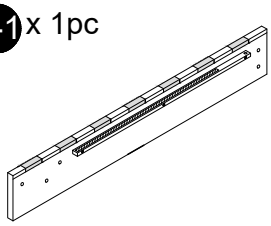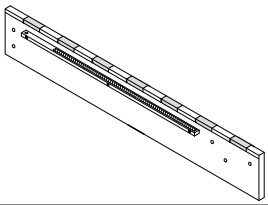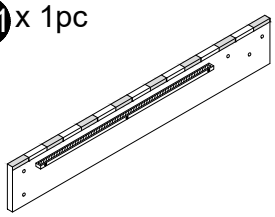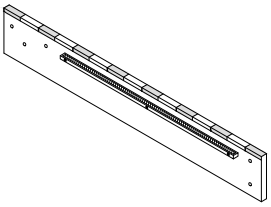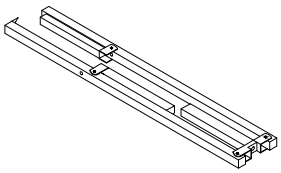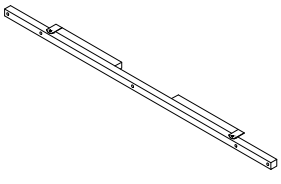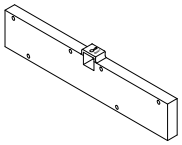
1 x 1pc 	2 x 1pc 	3 x 1pc 	4 x 1pc 
5-1 x 1pc 	5-2 x 1pc 	6-1 x 1pc 	6-2 x 1pc 
7 x 1pc 	8 x 1pc 	9 x 2pcs 	10 x 2pcs 
11 x 1pc 	12 x 1pc 	13 x 1pc 	14 x 1pc 	15 x 2pcs 

Please ensure to thoroughly inspect the small inner cardboard box containing the hardware, which are tied with a red string, before disposing of the box. If you have any assembly issues, missing or wrong parts, or need help, please contact us first via messages . We will solve it for you within 24 hours.


HARDWARE LIST

 H1 M5 x 1pc	 H2 M8x20mm x 17pcs	 H3 M8x50mm x 6pcs	 H4 M8x40mm x 23pcs
 H5 M8 x 12pcs	 H6 M8x22mm x 12pcs	 H7 M8x60mm x 1pc	

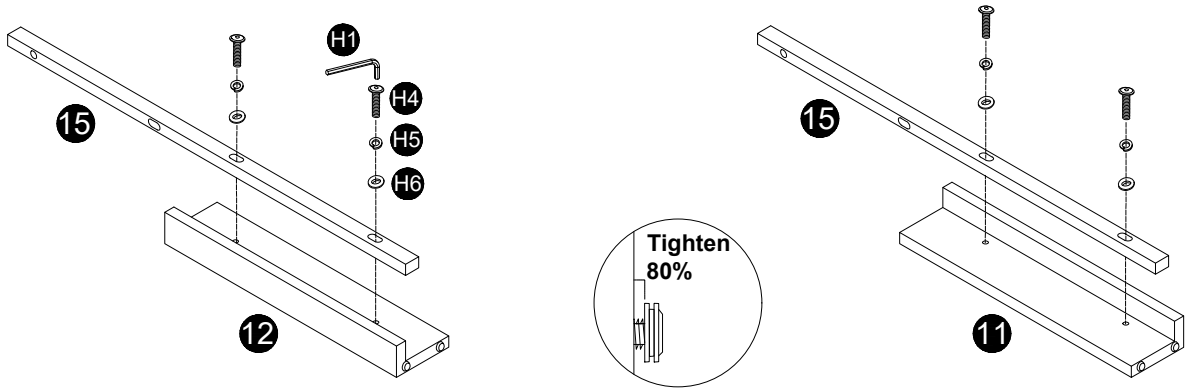
1



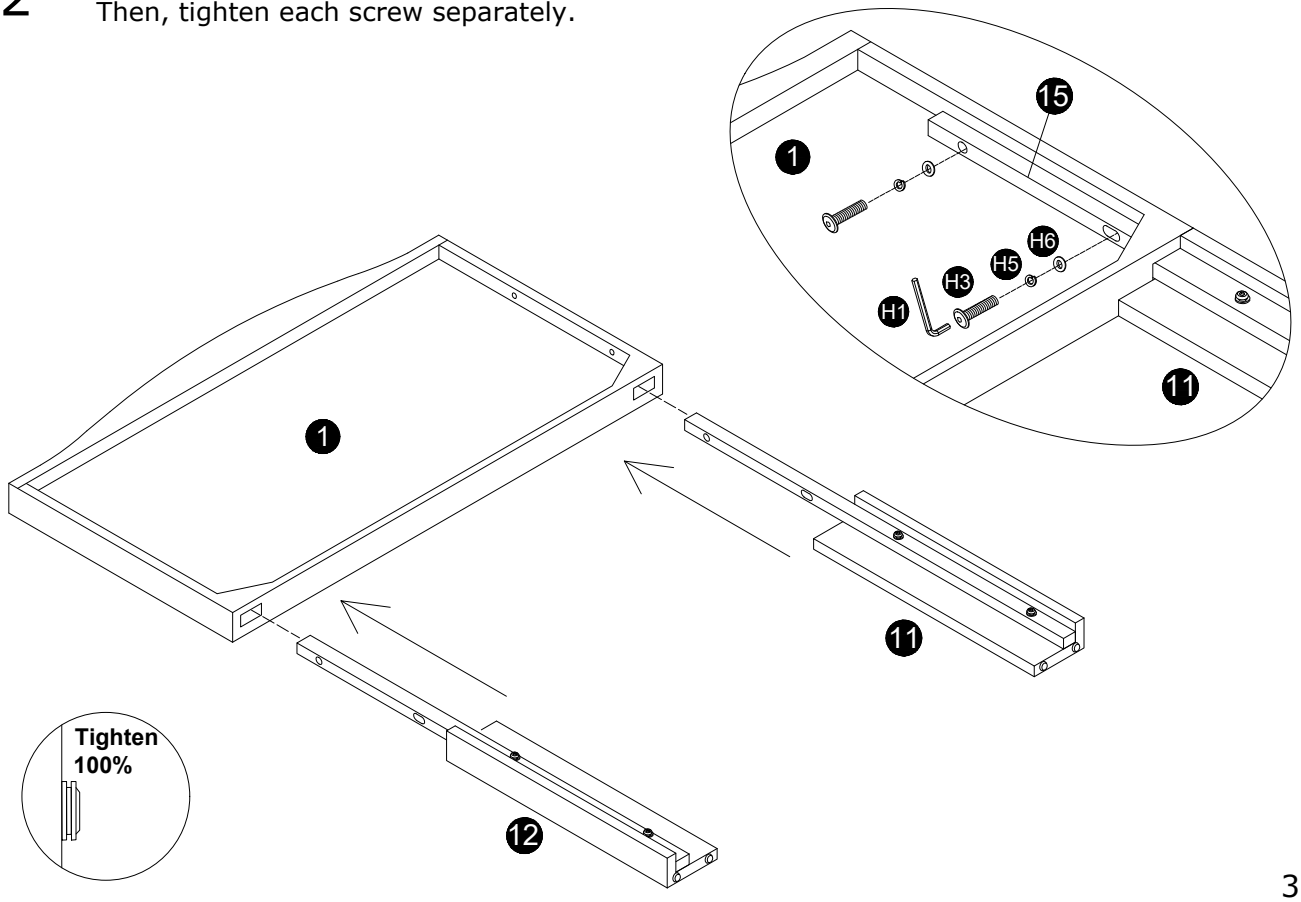
2 As shown in the diagram, align the screws with the corresponding holes and pre-fix them. Then, tighten each screw separately.




3

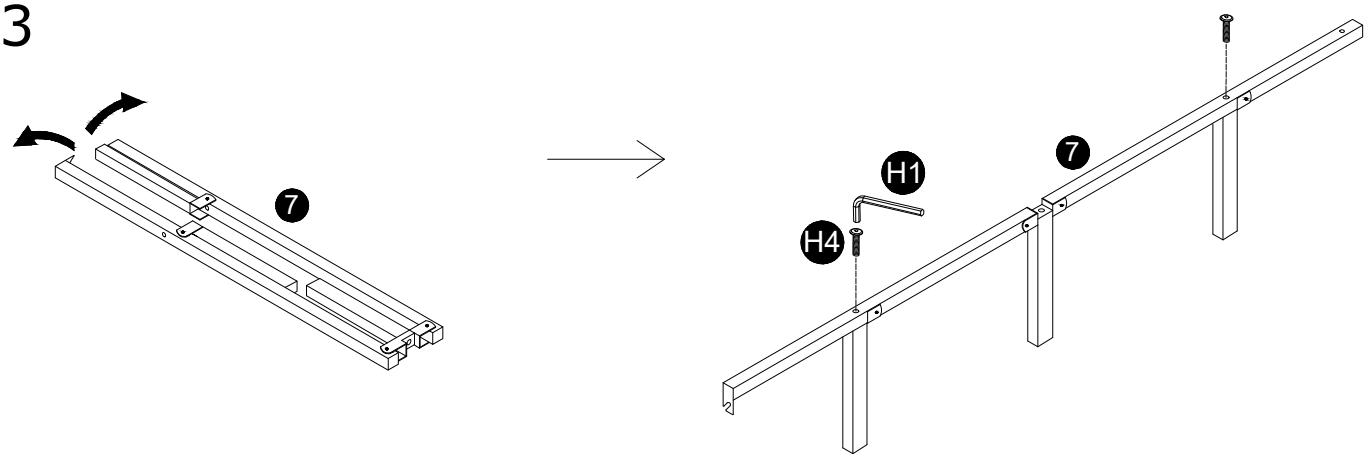
7
H1
H4
7

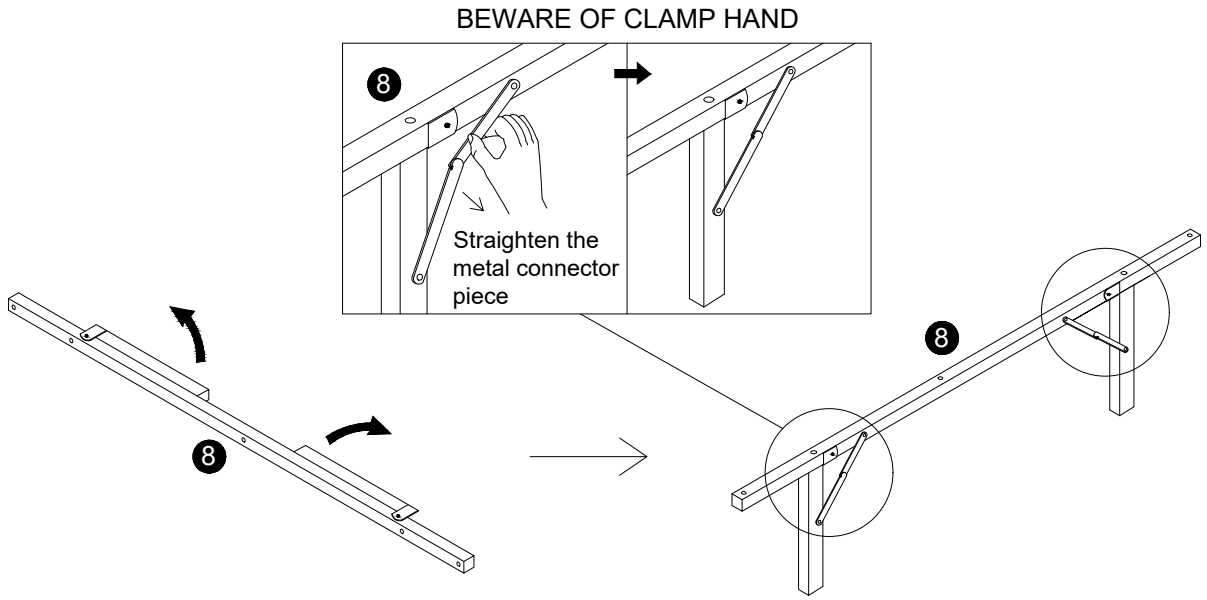
4


BEWARE OF CLAMP HAND
8
Straighten the metal connector piece
8
8

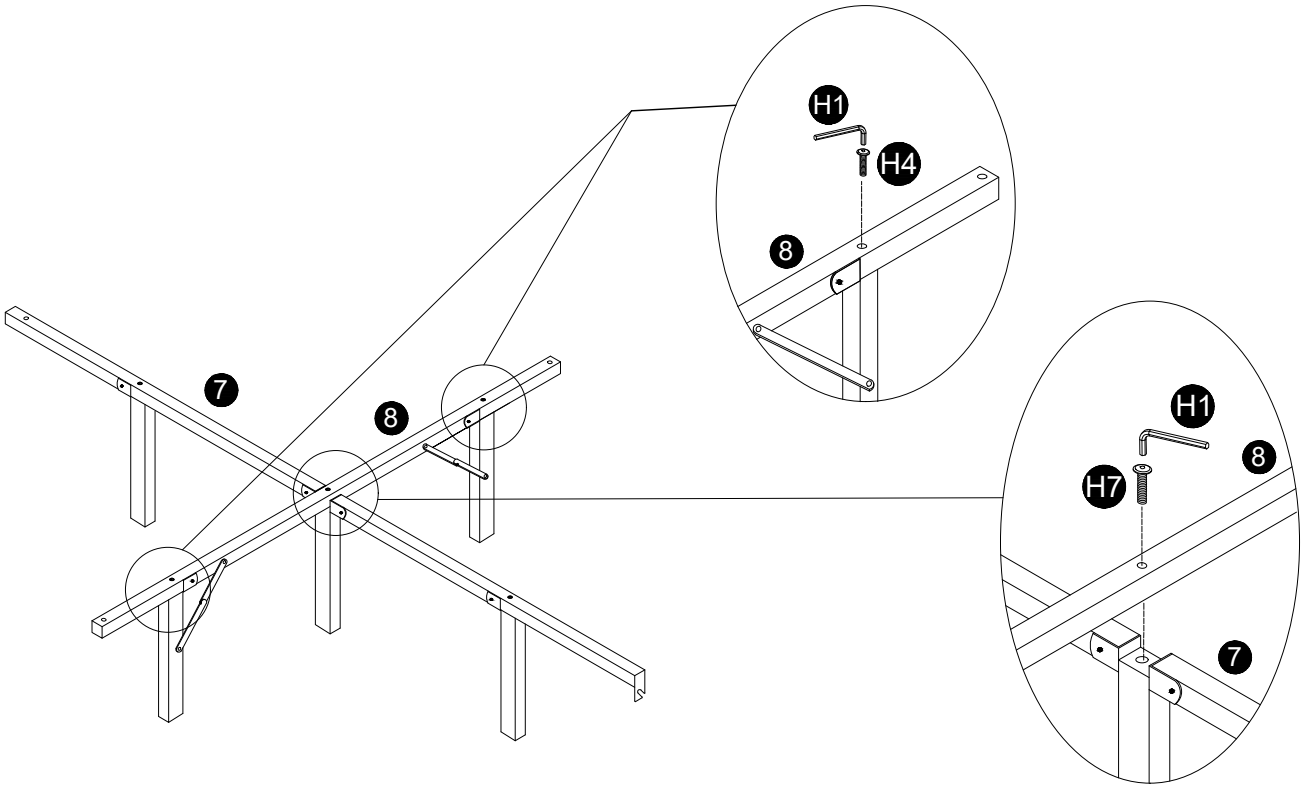
5


H1
H4
8
7
8
H1
8
H7
7

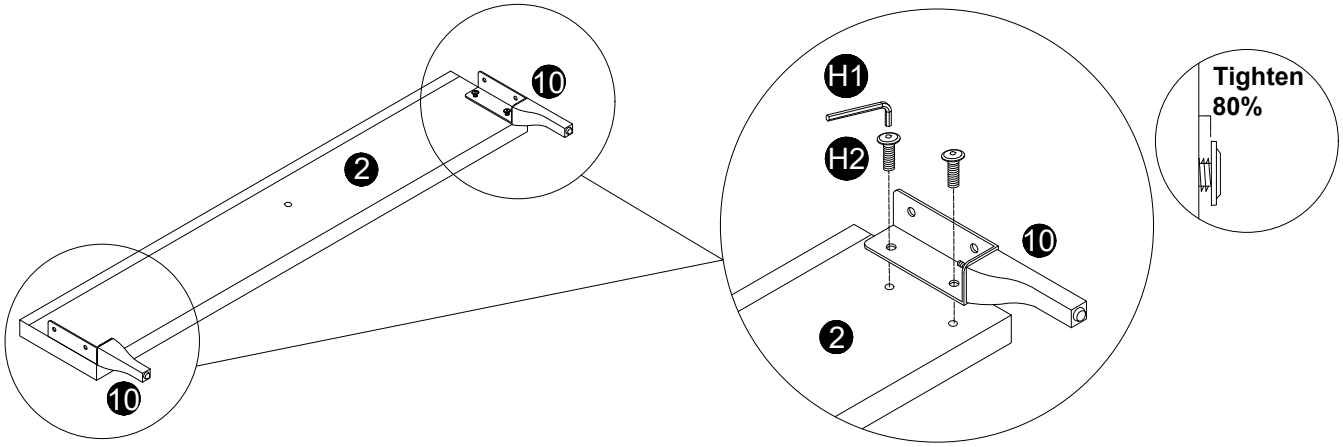
6




7

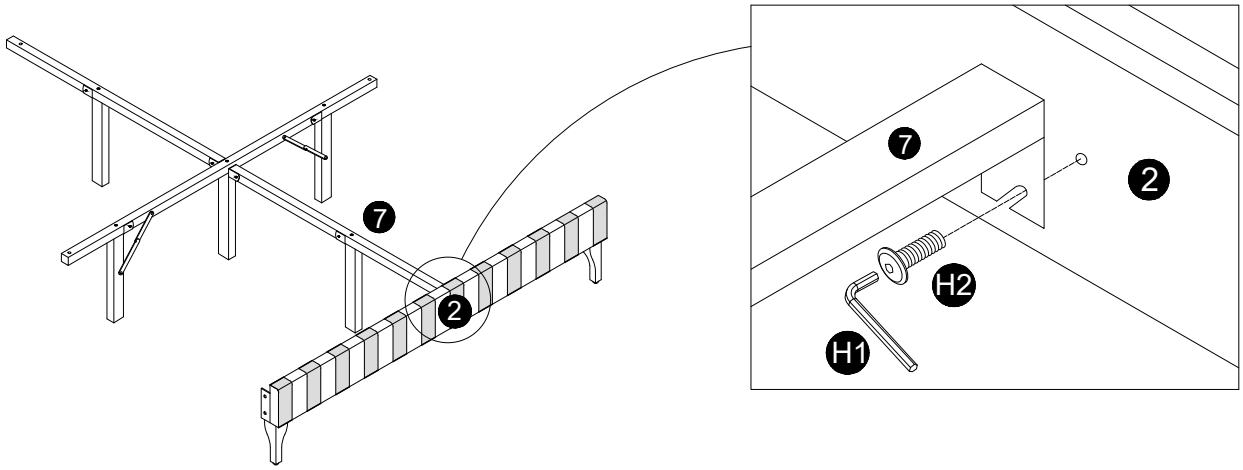

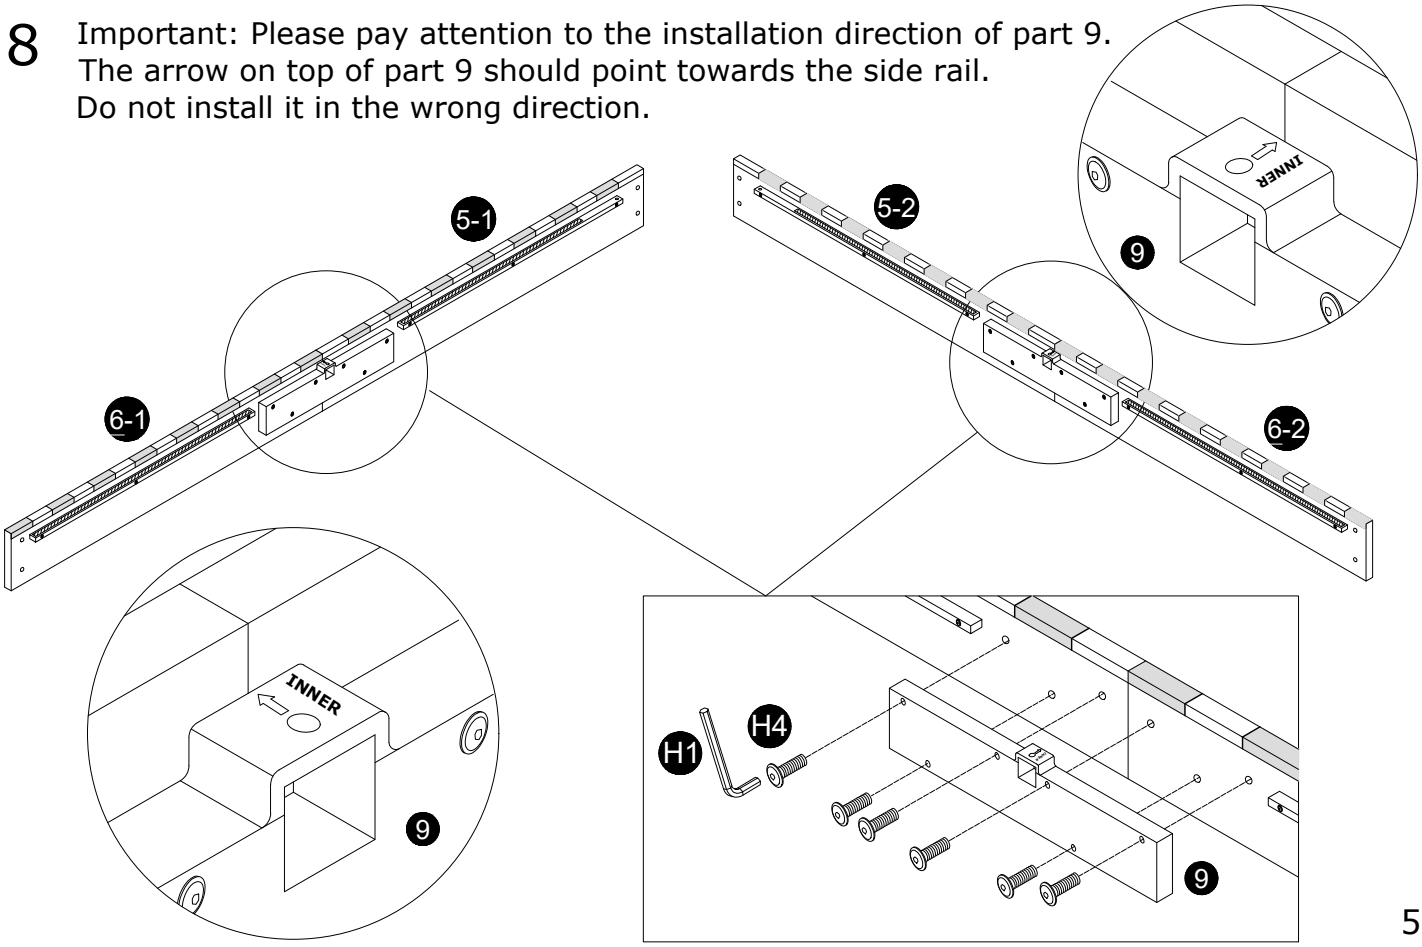
8 Important: Please pay attention to the installation direction of part 9.
The arrow on top of part 9 should point towards the side rail.
Do not install it in the wrong direction.




9

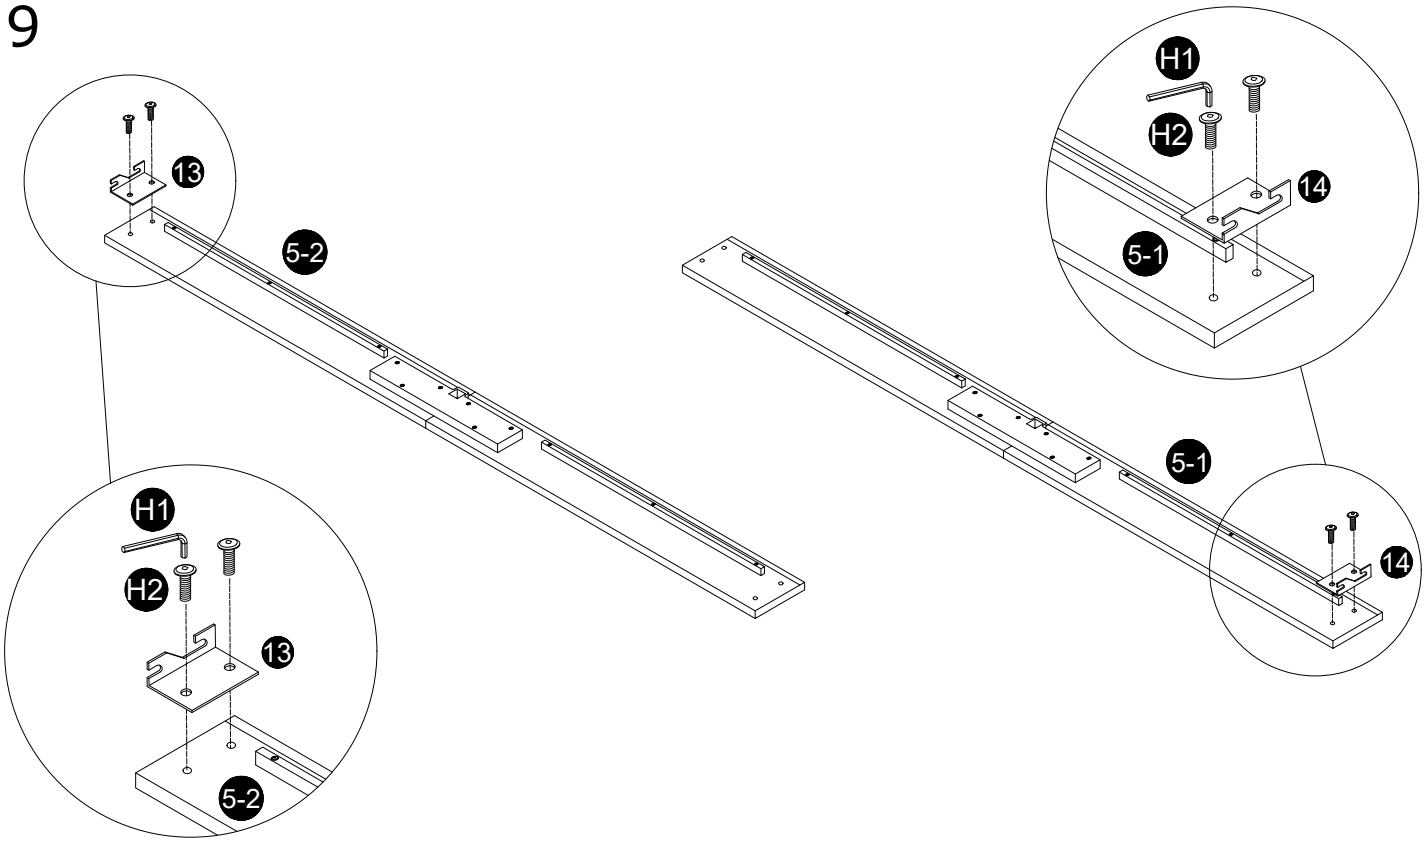


10

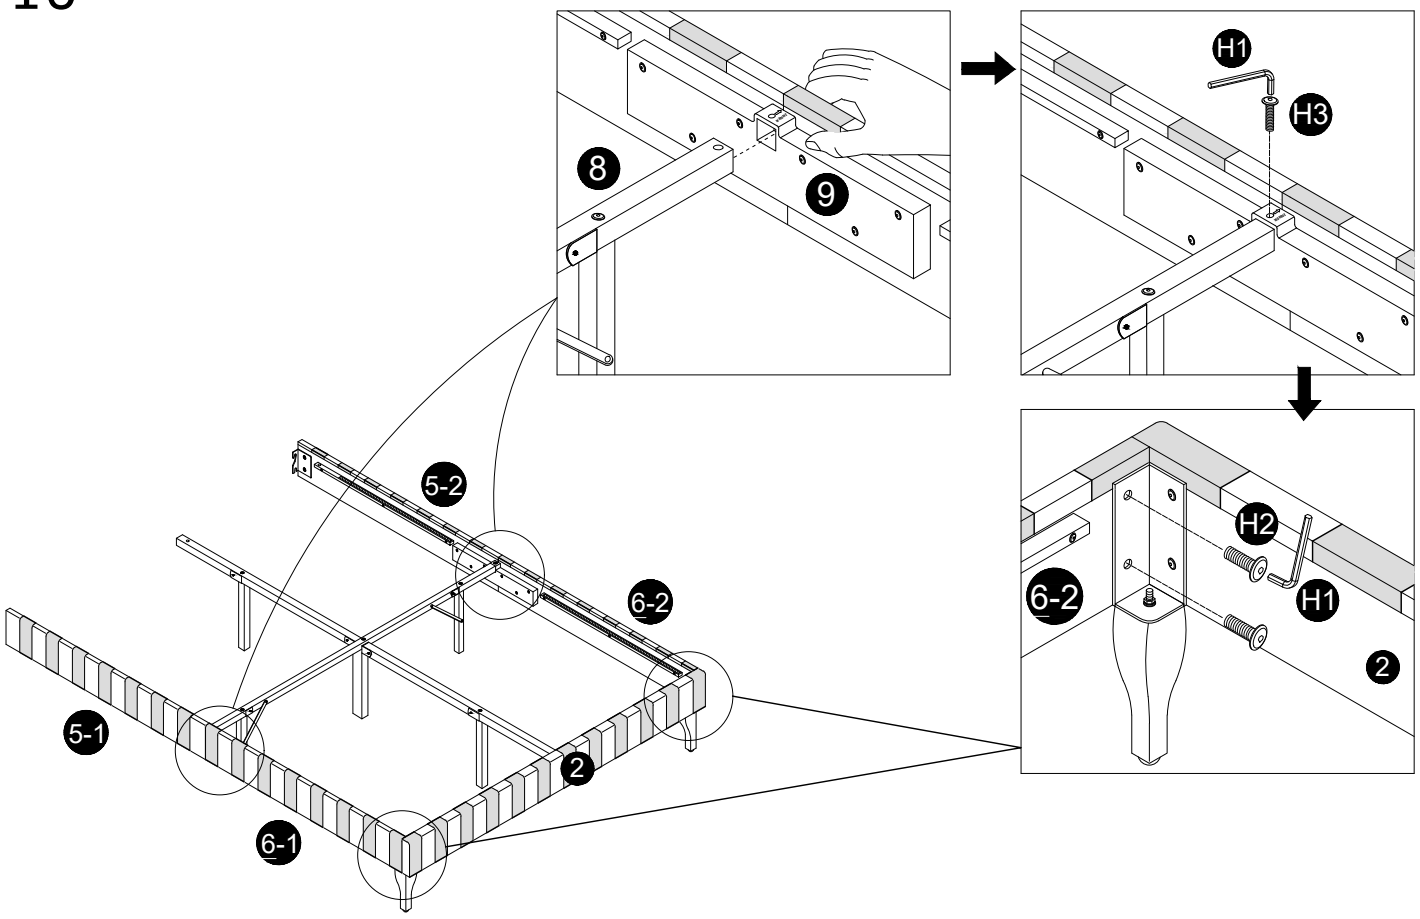



11

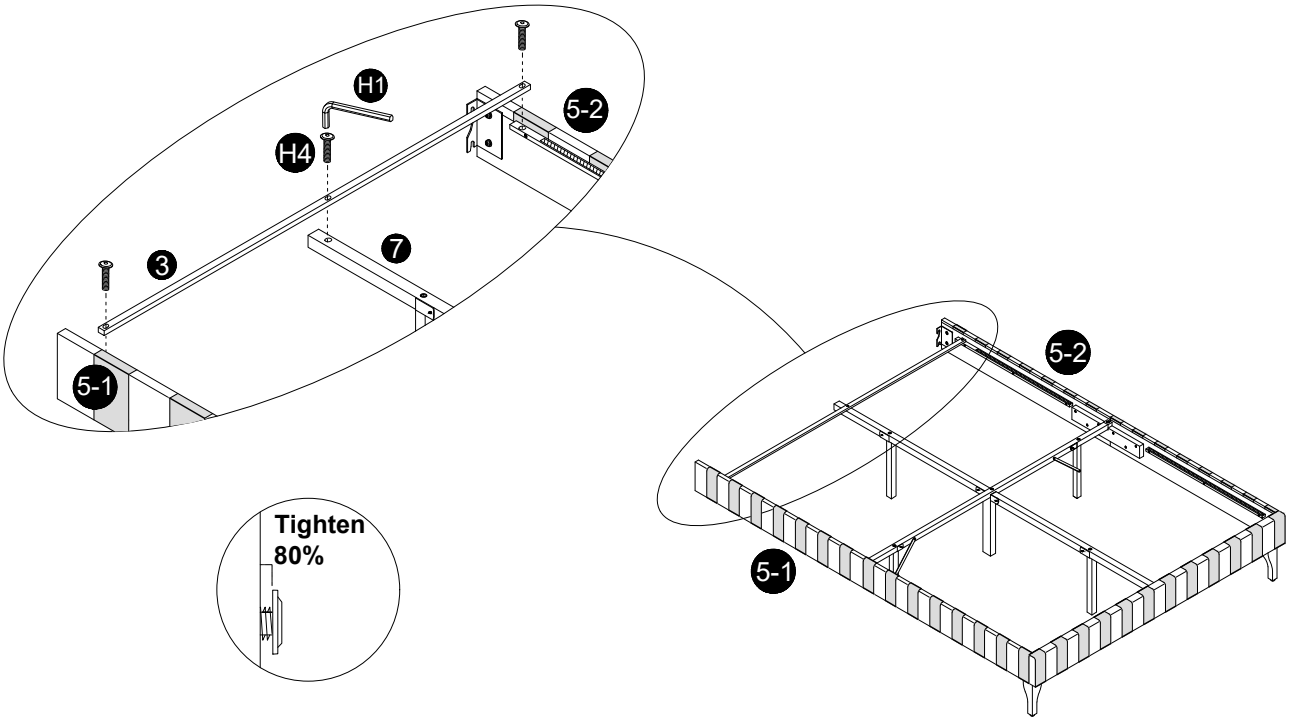

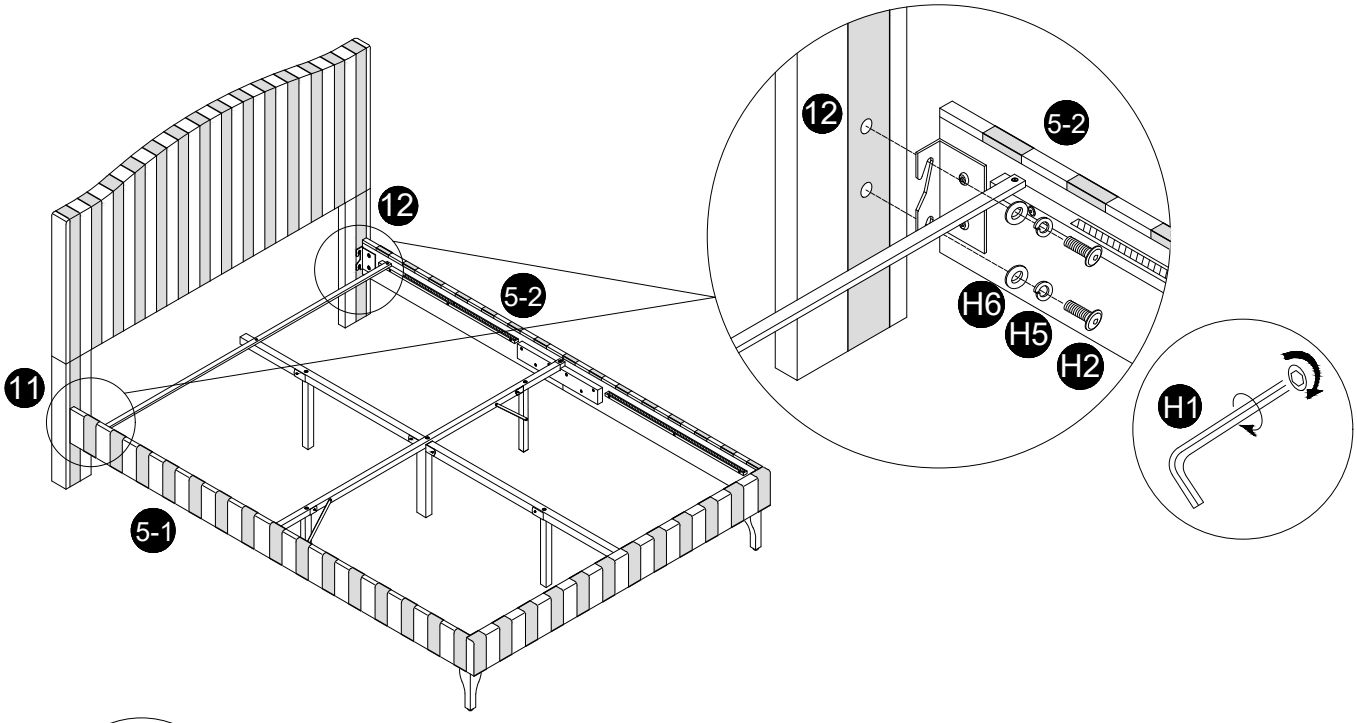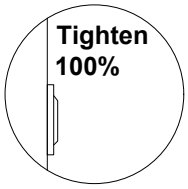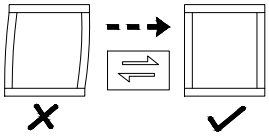12 As shown in the diagram, align the screws with the corresponding holes and pre-fix them. Then, tighten each screw separately.









Make certain the bed is squared up as shown in the diagram then tighten all bed assembly bolts 100%.

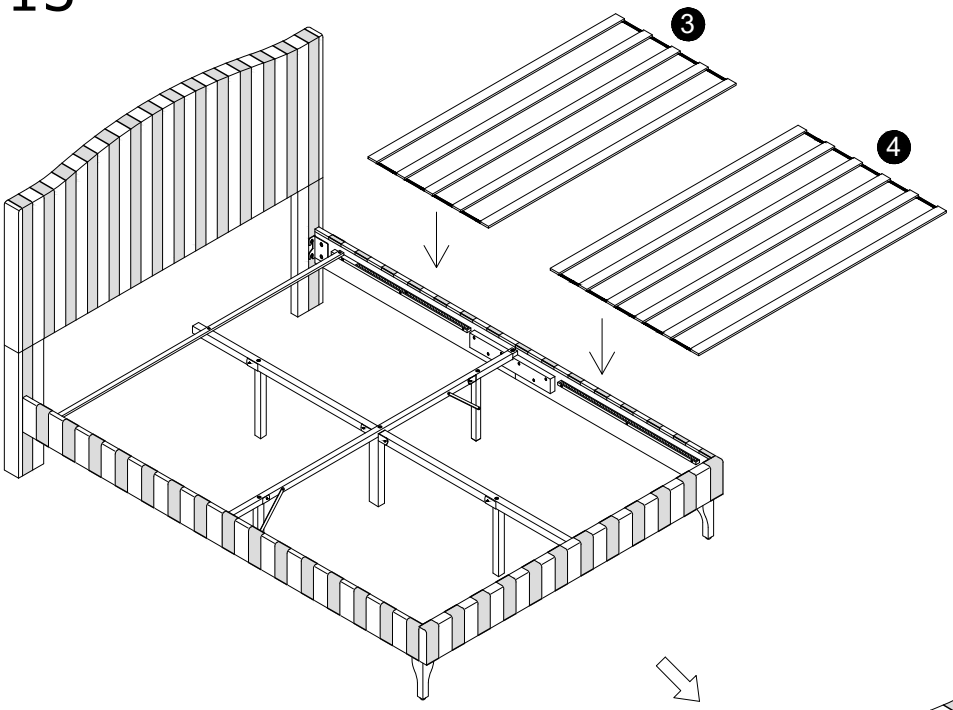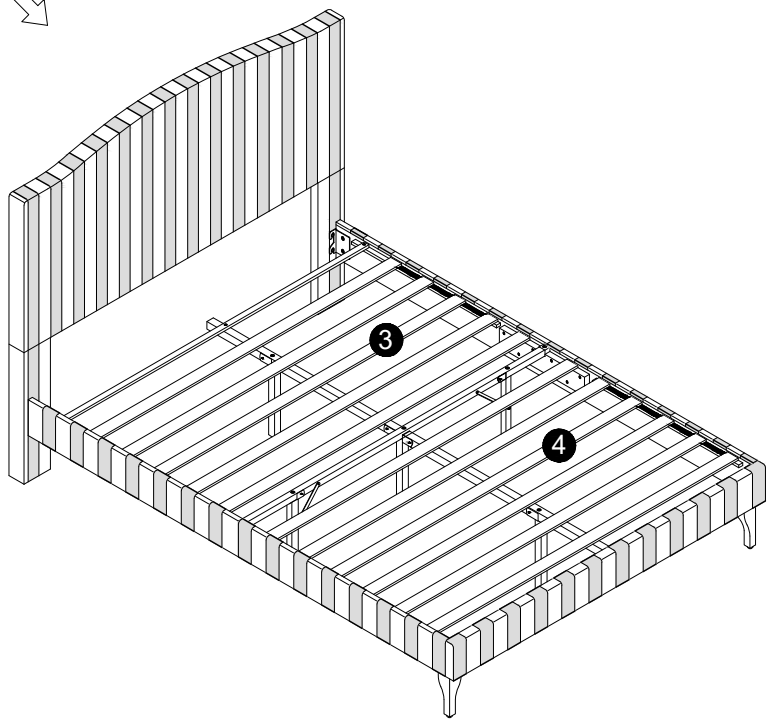13





Job Complete !

In the interest of our environment please dispose of all packaging thoughtfully.