




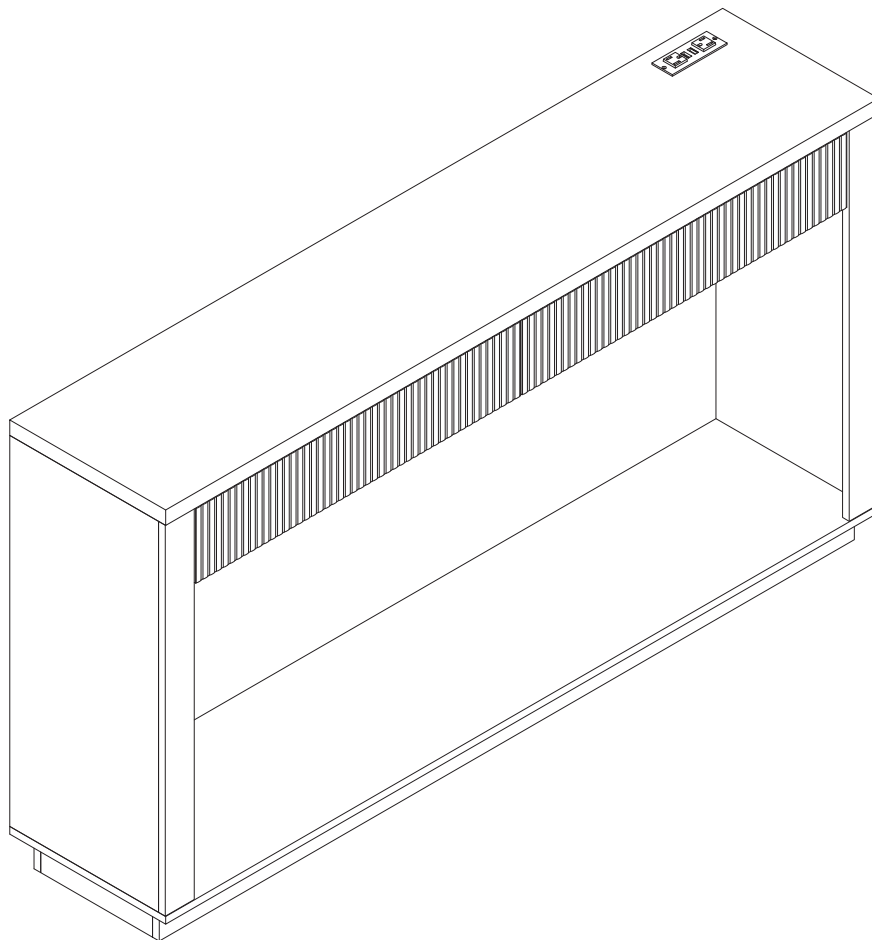


Please note: Items cannot be returned once assembled.


Installation & Assembly




IT IS RECOMMENDED
TO USE POWER TOOLS

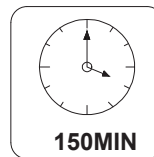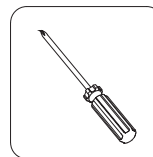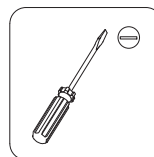


150MIN

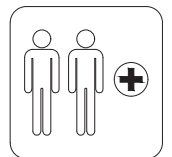


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

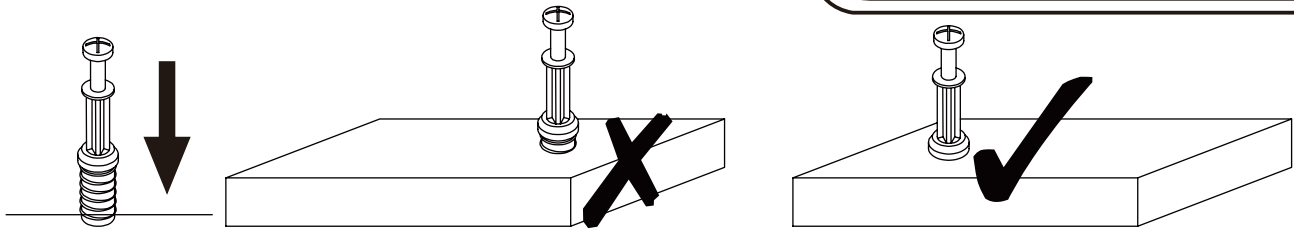


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

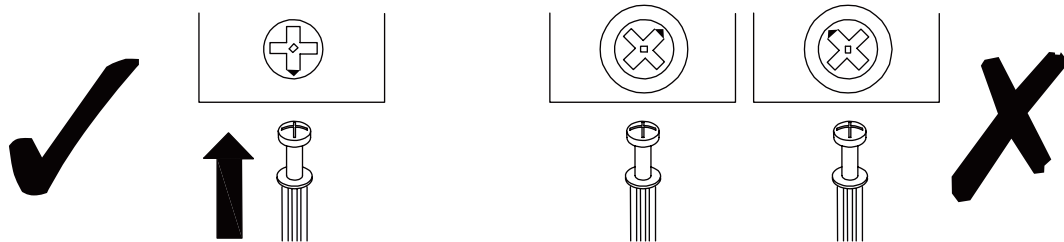








EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.







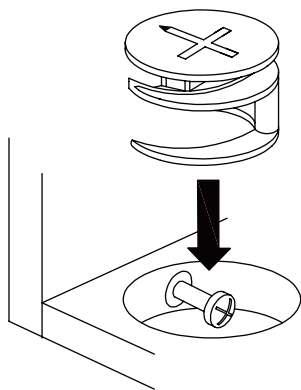




EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.



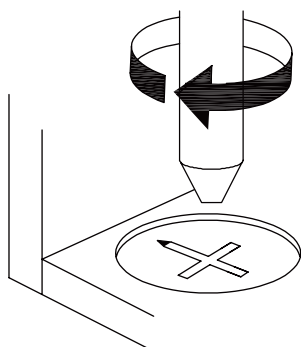












EN_Turn cam lock clockwise to tighten.

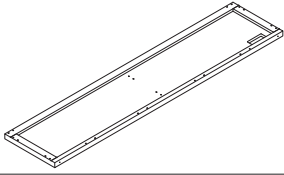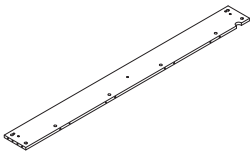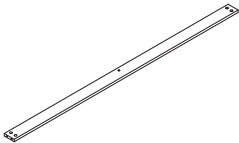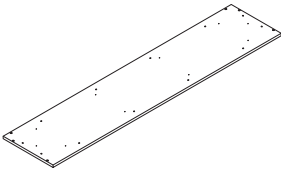NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x1	
⑦		x1	
⑧		x1	
⑨		x1	
⑩		x1	

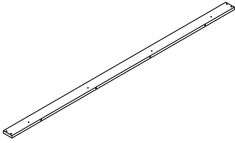
NO.	PARTS	QTY	SPARE
⑪		x1	
⑫		x1	
⑬		x2	
⑭		x2	
⑮		x2	
⑯		x2	
⑰		x2	
⑱		x2	
⑲		x4	
⑳		x1	

NO.	PARTS	QTY	SPARE
21		x1	
			
	Hardware Kit		

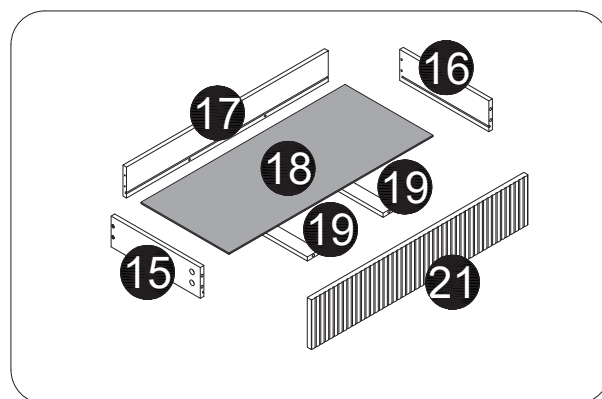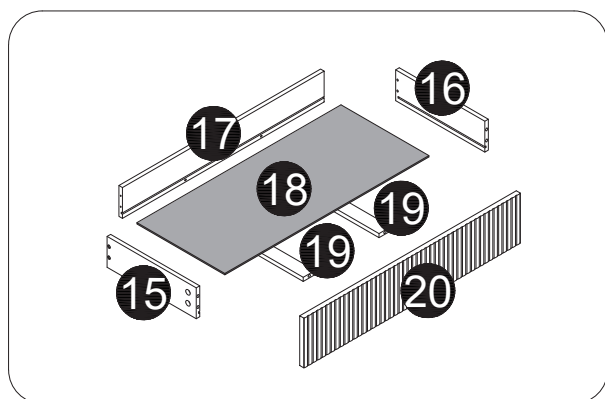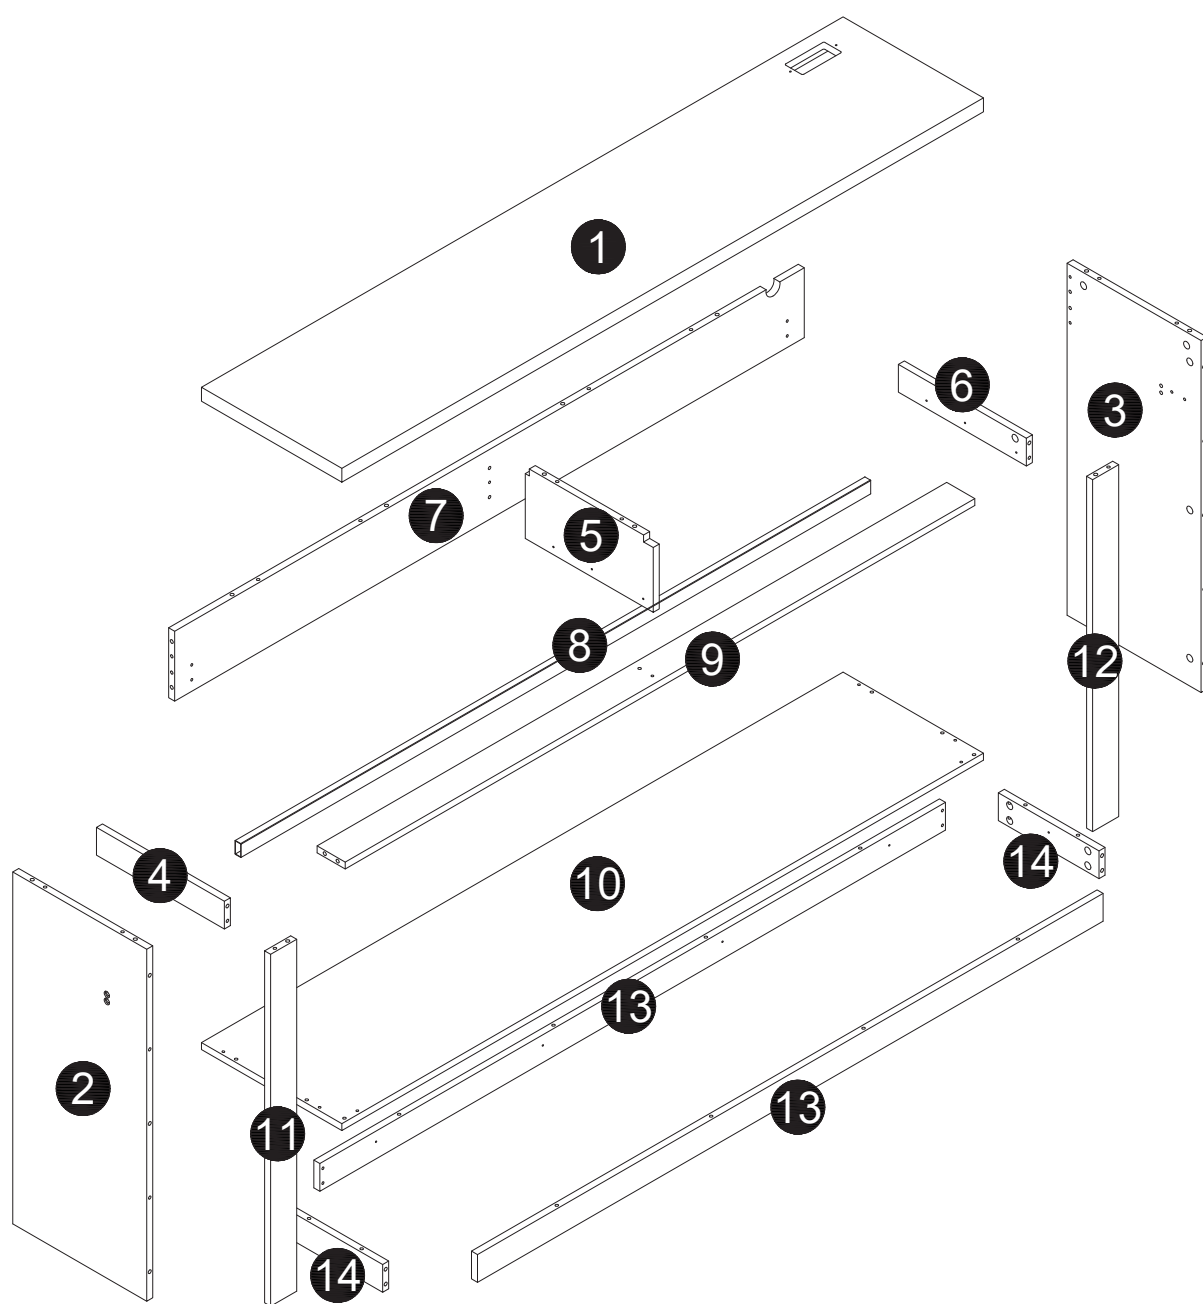


 A x48 Ø6x35mm +2(spare)	 B x48 Ø15x10mm +2(spare)	 C x43 Ø6x30mm +2(spare)	 D x24 Ø4x35mm +2(spare)	 E x44 Ø3.5x11mm +2(spare)	 F x4
 G x4	 H x10	 I-1  I-2 x1	 J-1  J-2 x2 Ø4x14mm	 K-1  K-2 x2	
 CL x2 L300mm	 CR x2 L300mm	 DL x2 L300mm	 DR x2 L300mm		


D x12



01

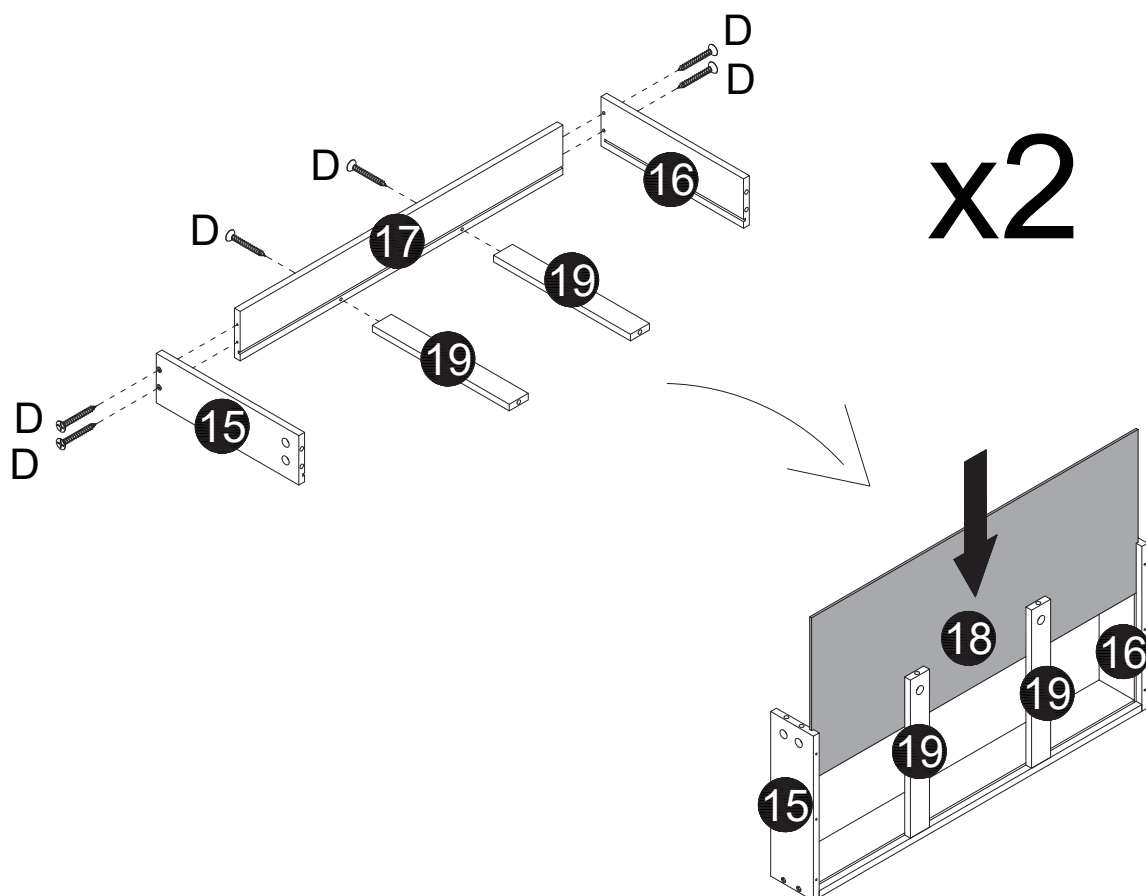

A x12




B x12





E x12



DL x2




DR x2

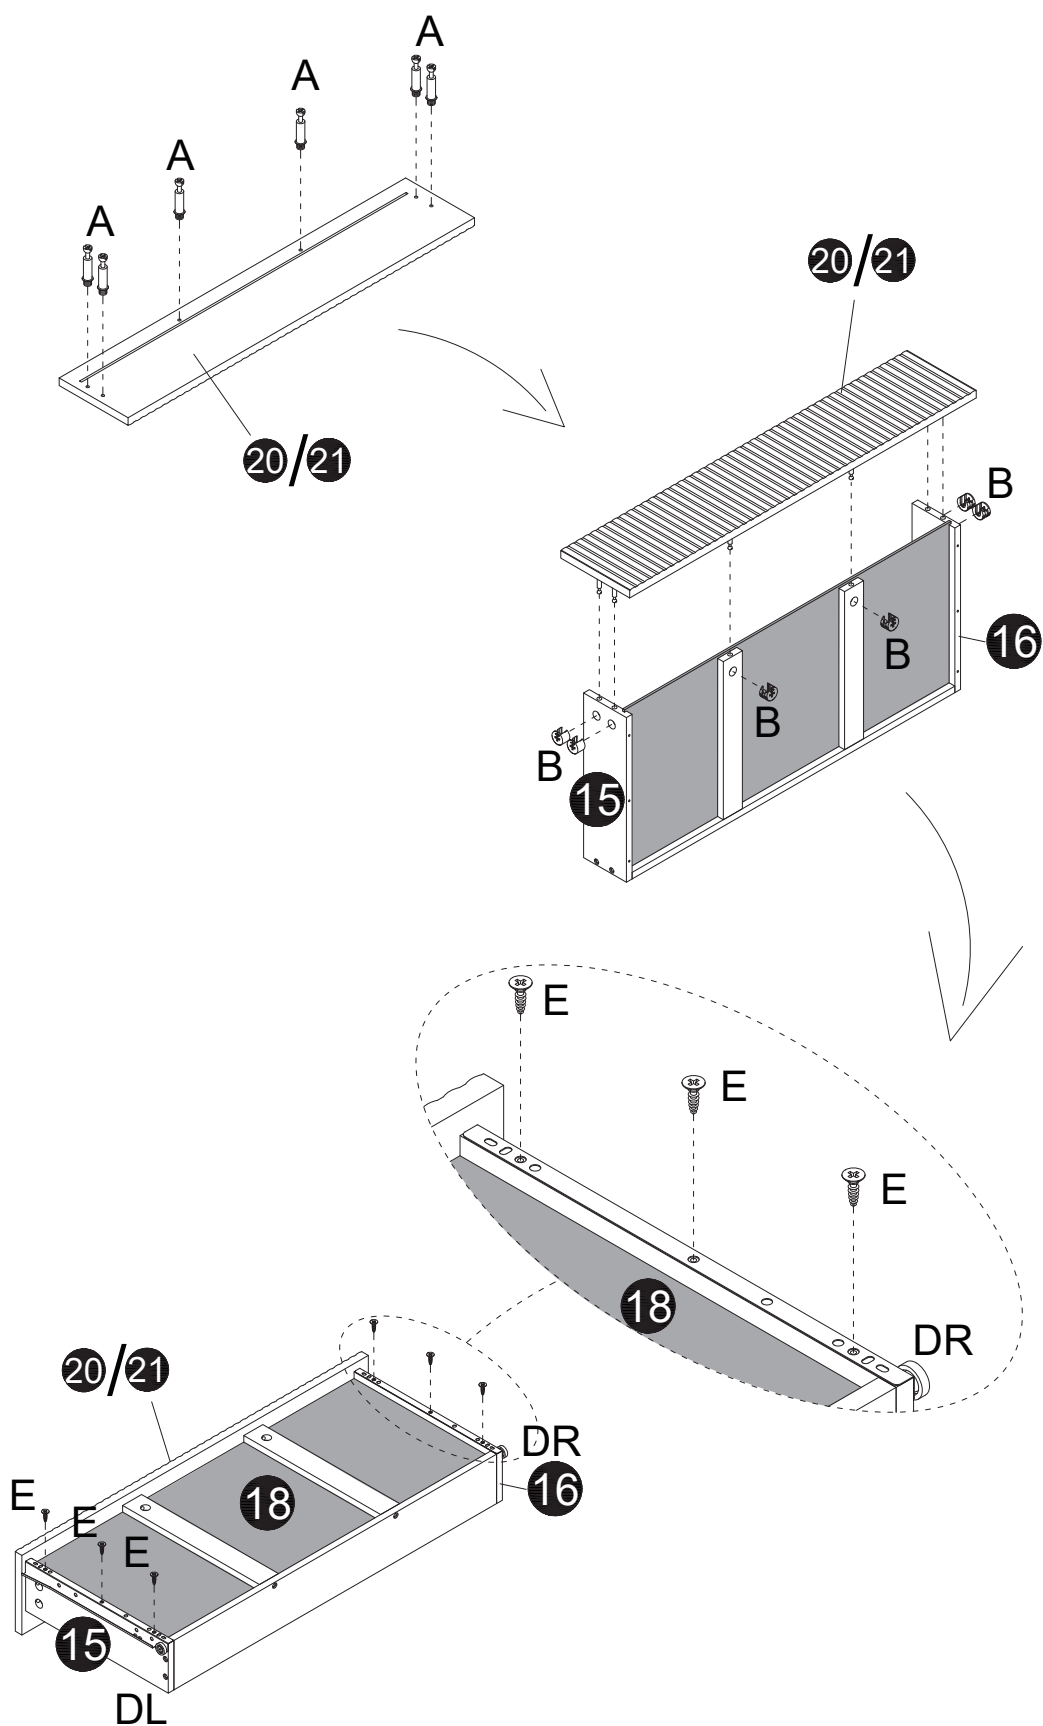



E x6




CL x1




CR x1

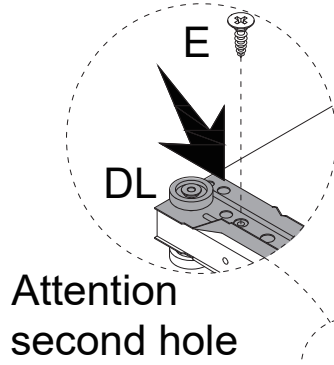

Attention
second hole

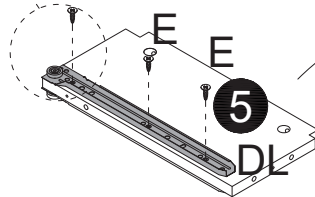


180°


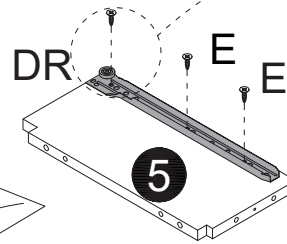


Attention
first hole

C x2




D x1

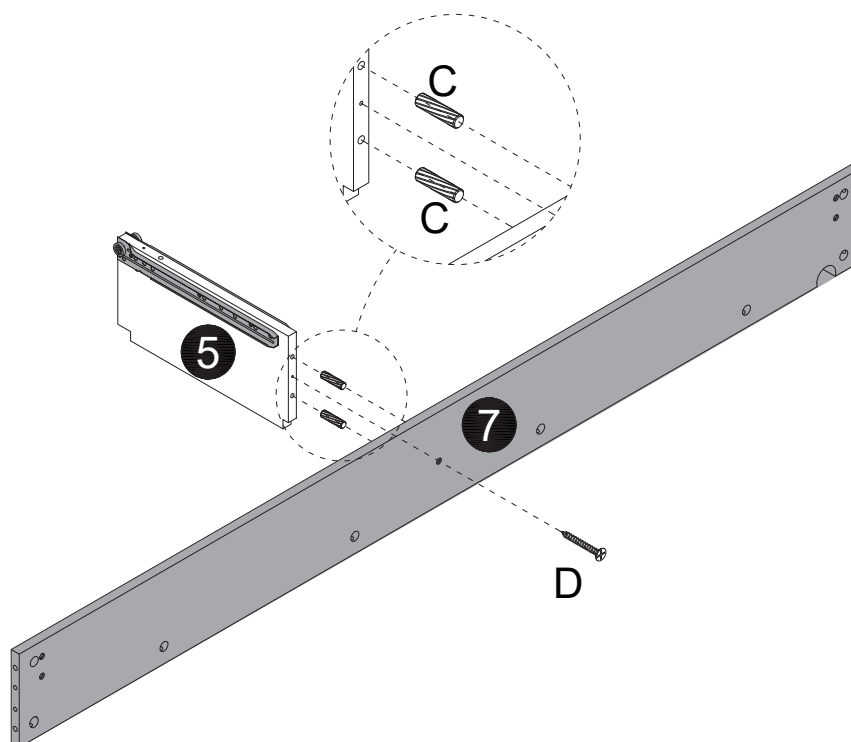


C x1




D x1




05

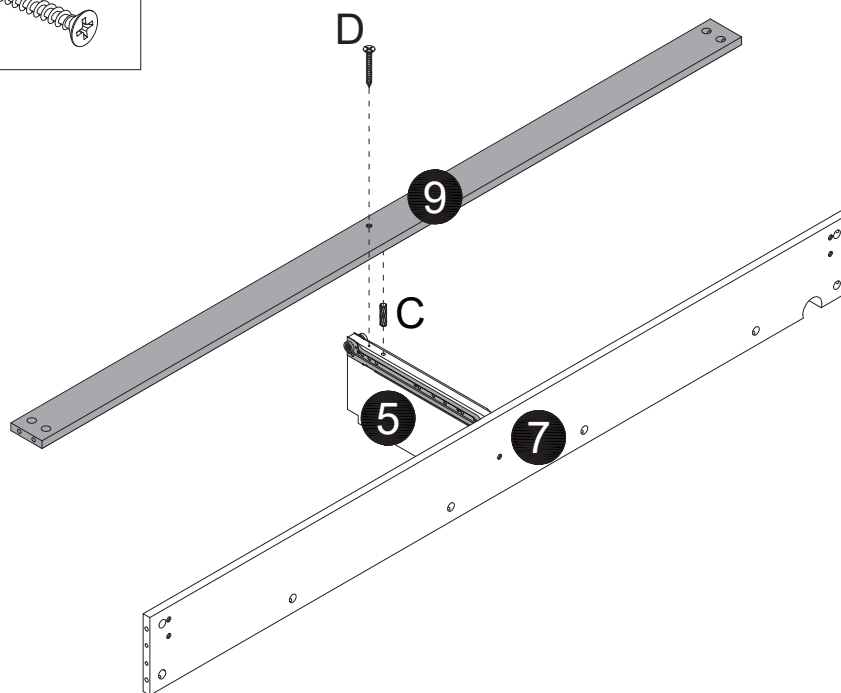

A x8




06

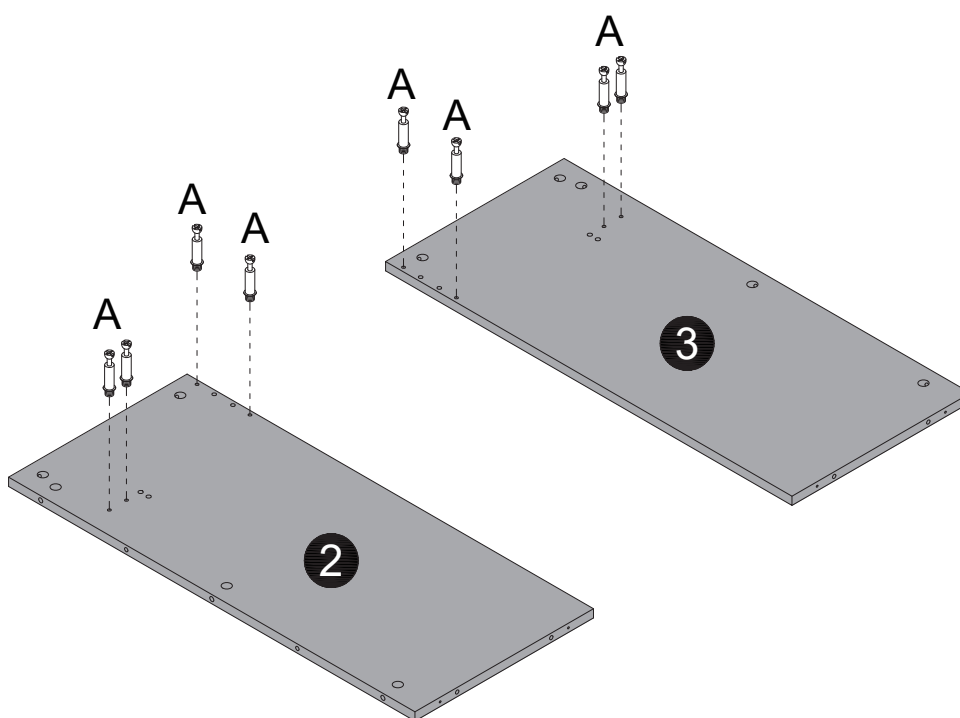

B x4


C x2

07

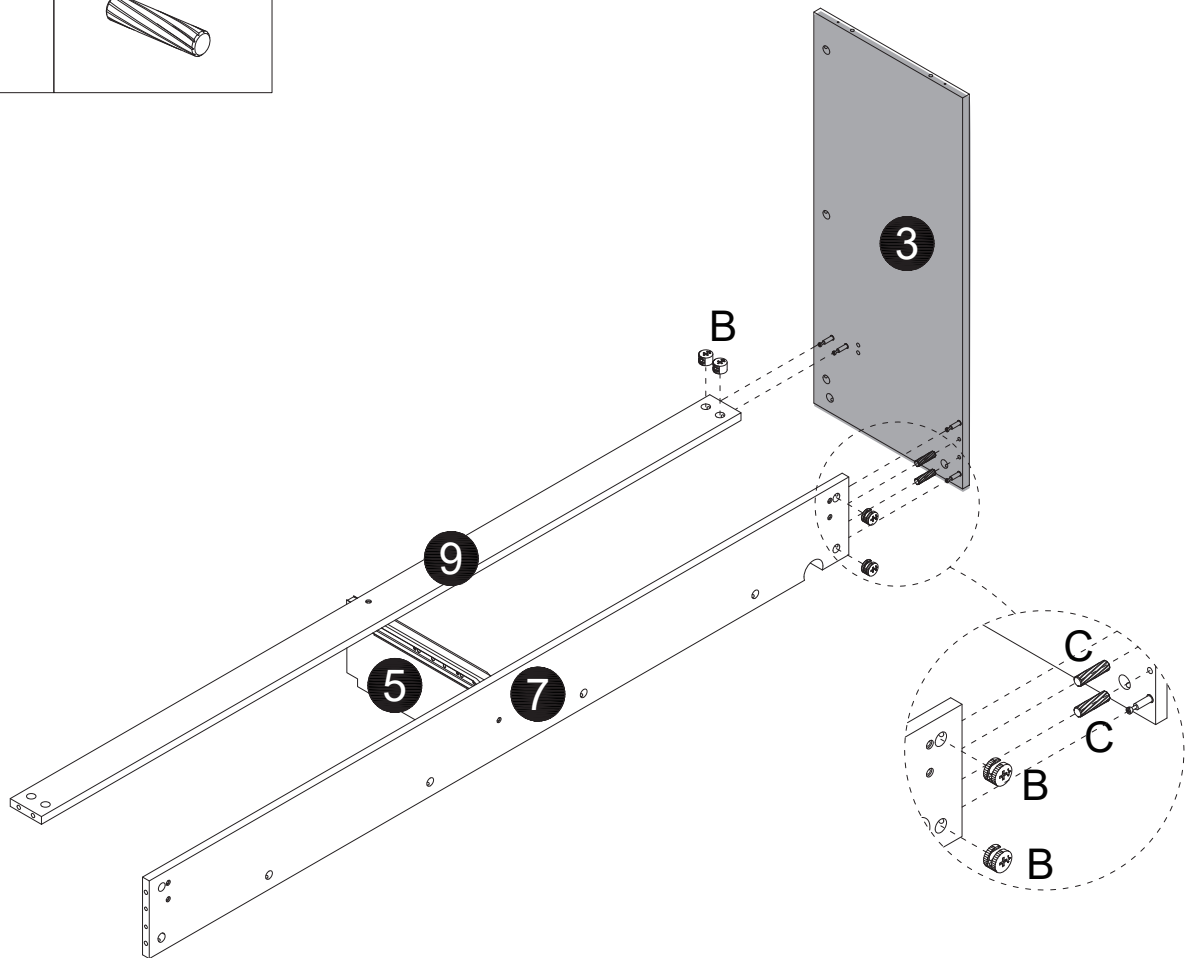

F x2





08

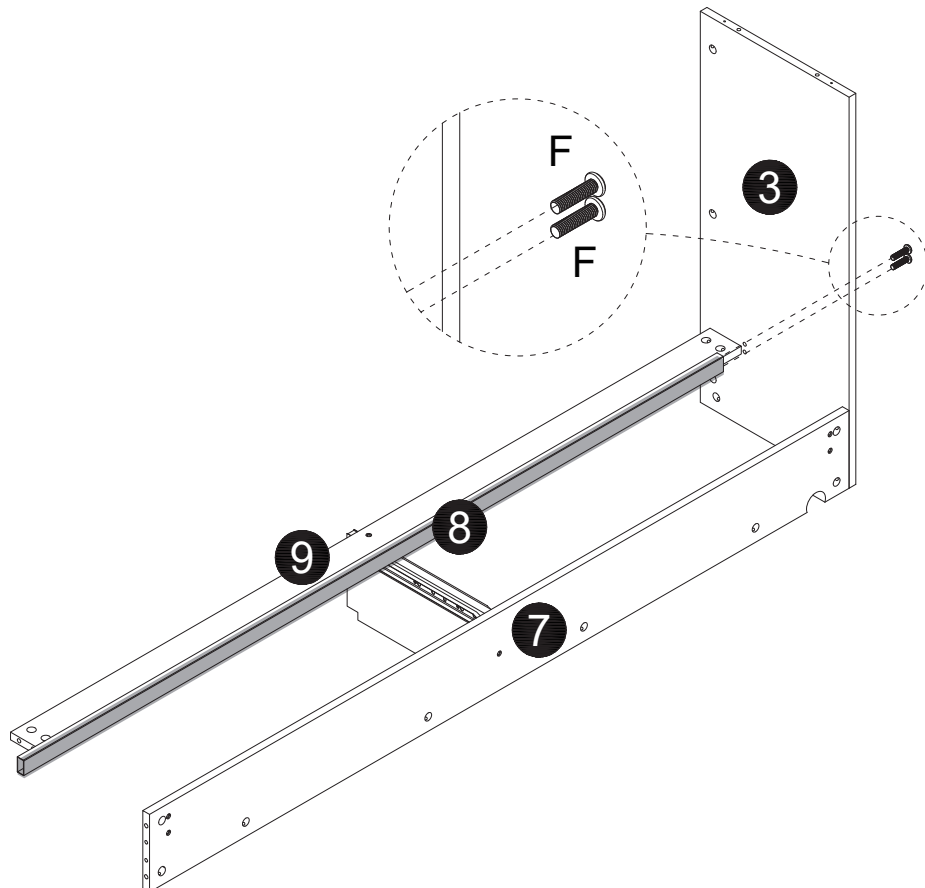

B x4

C x2

F x2

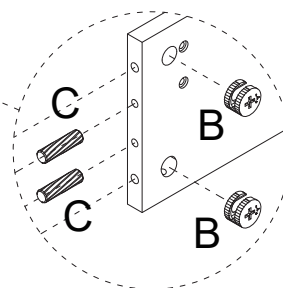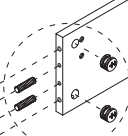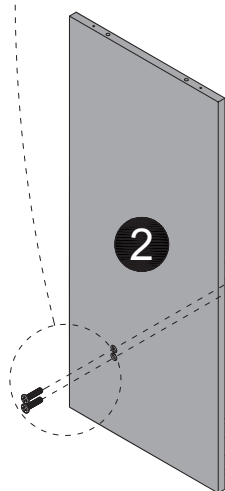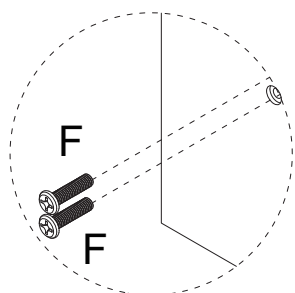

3

9

8

7




B

2

E x6

CL x1


CR x1

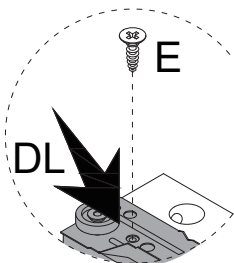

Attention
first hole

DL

4

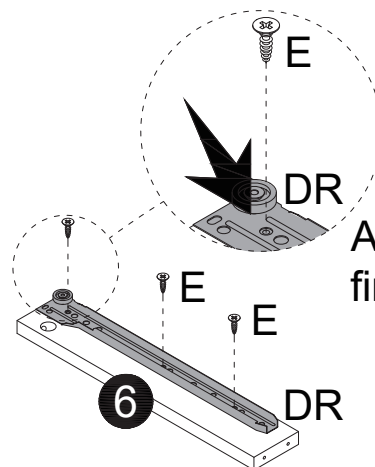


Attention
first hole


DR

6


D x4




11

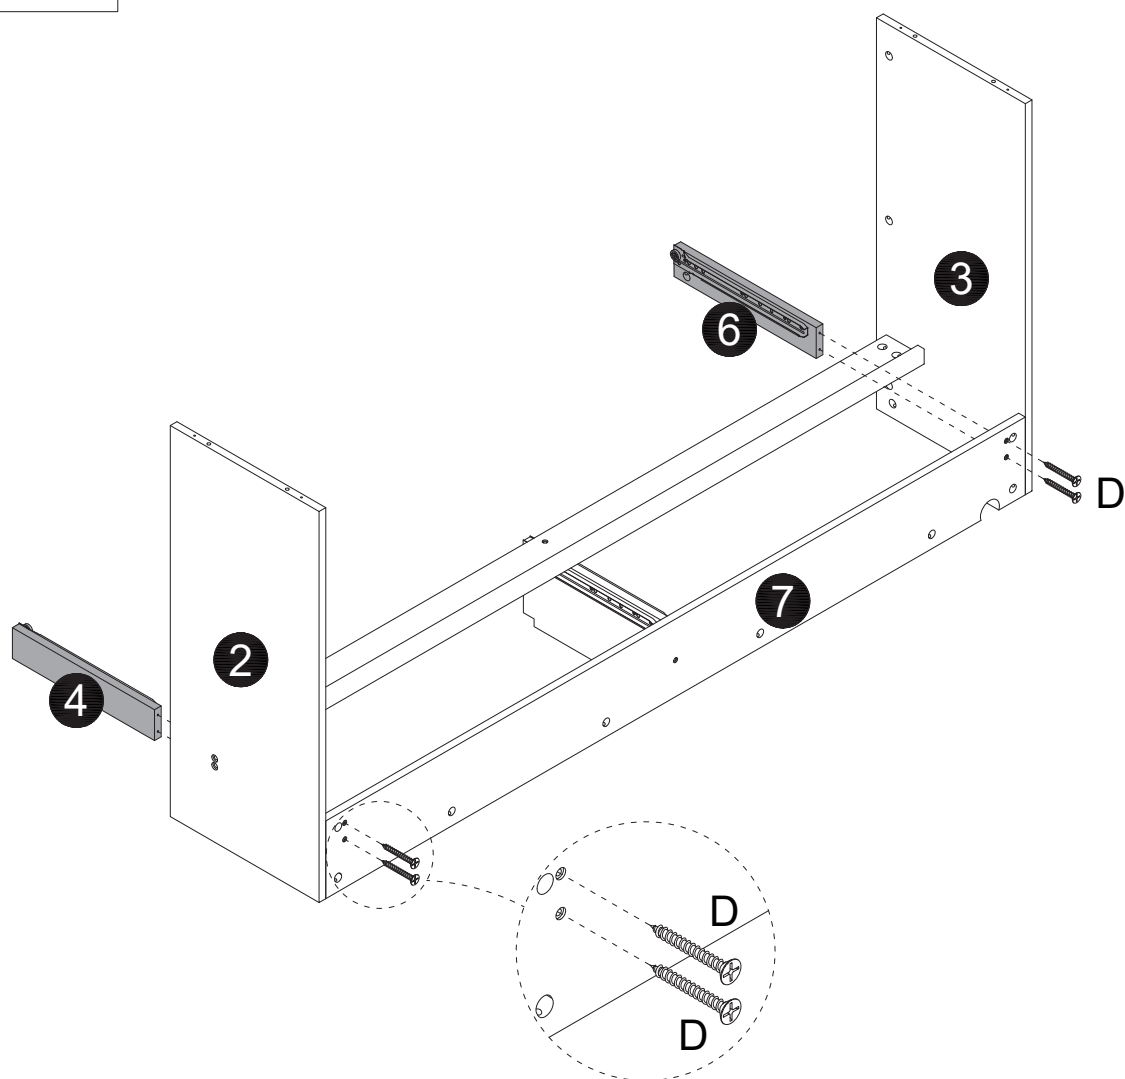

A x8





12

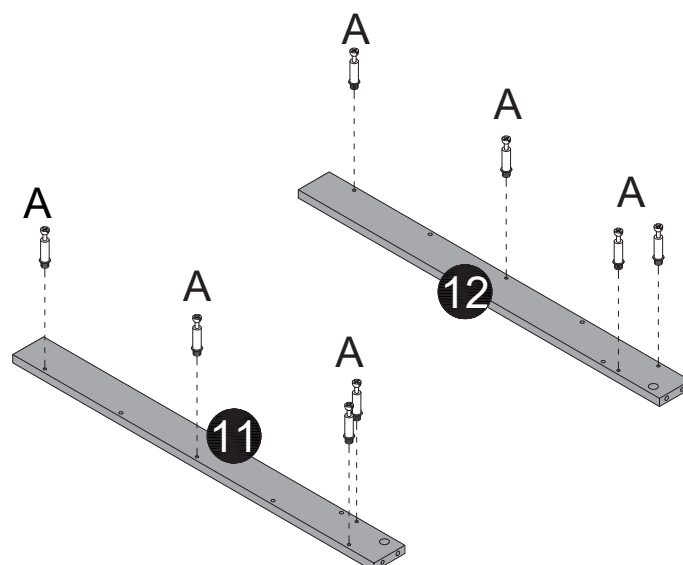

B x8






C x6

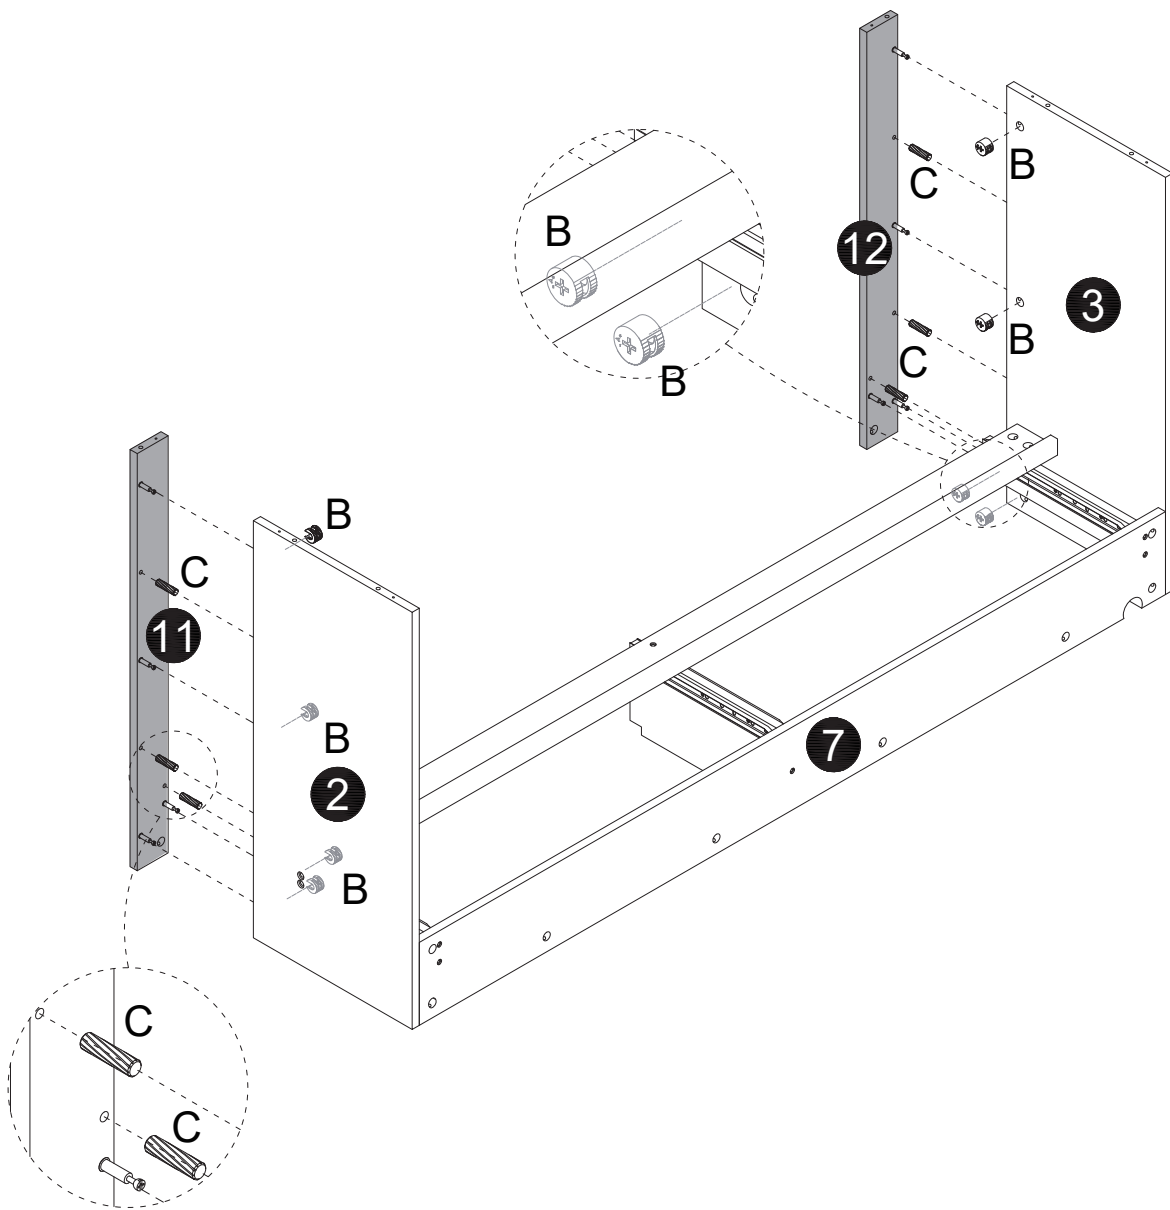


C x6


D x6

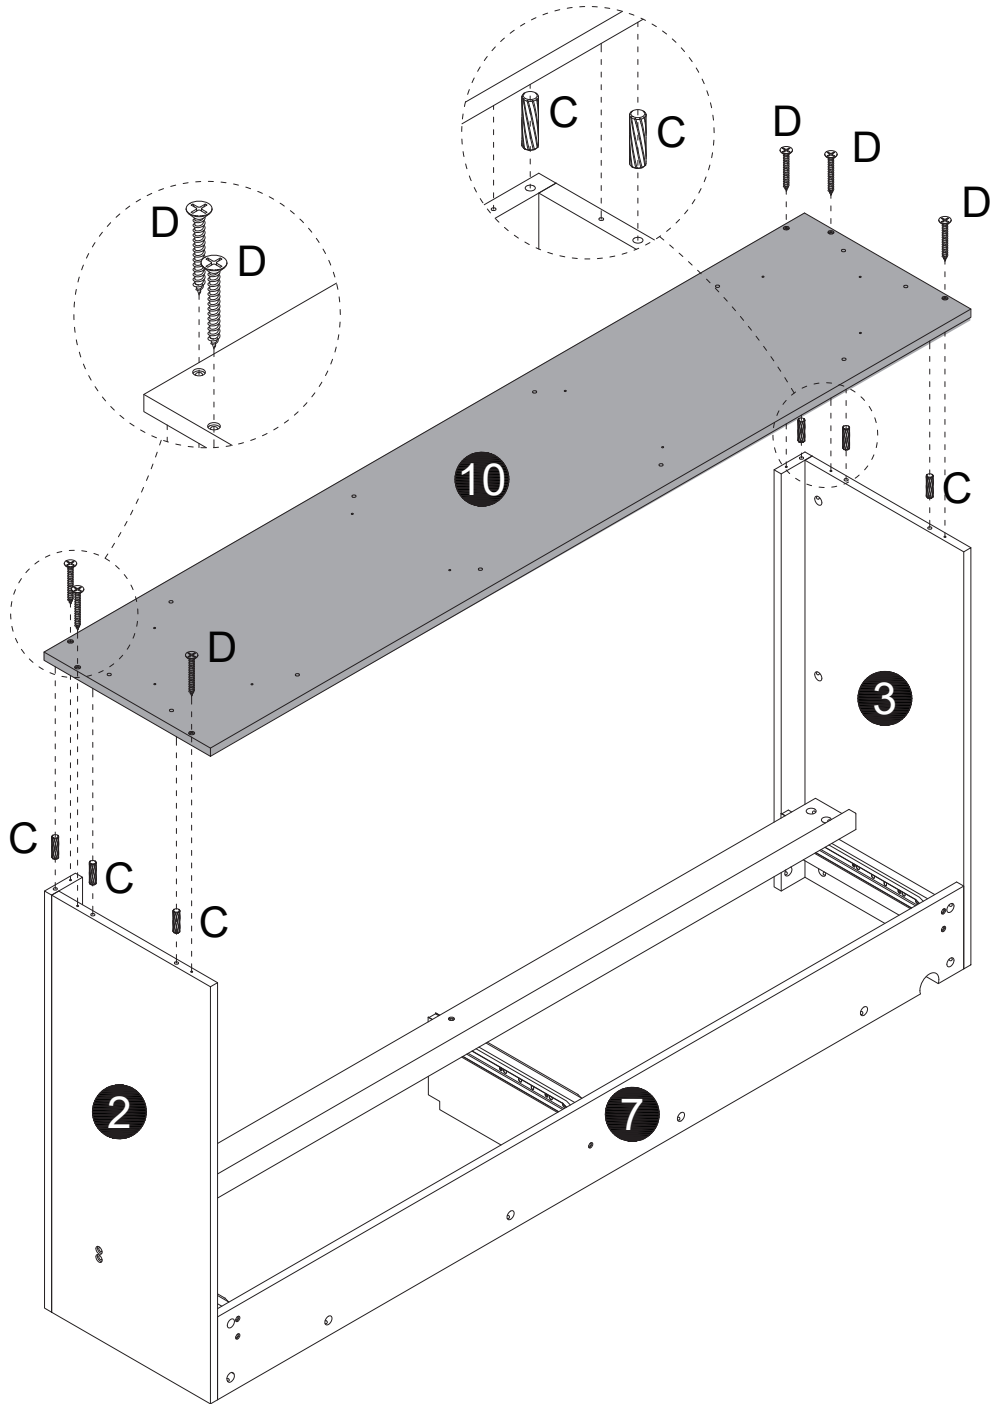

A x8




15

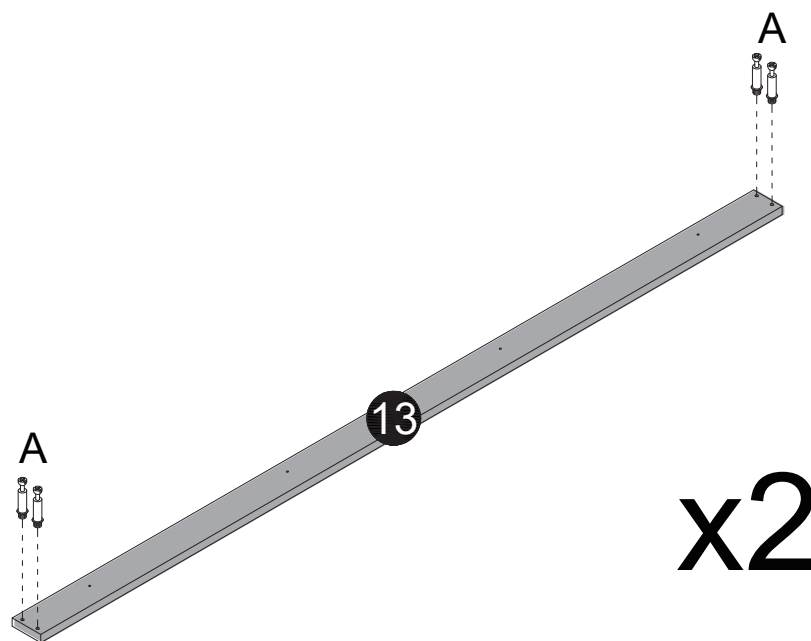


B x8



16

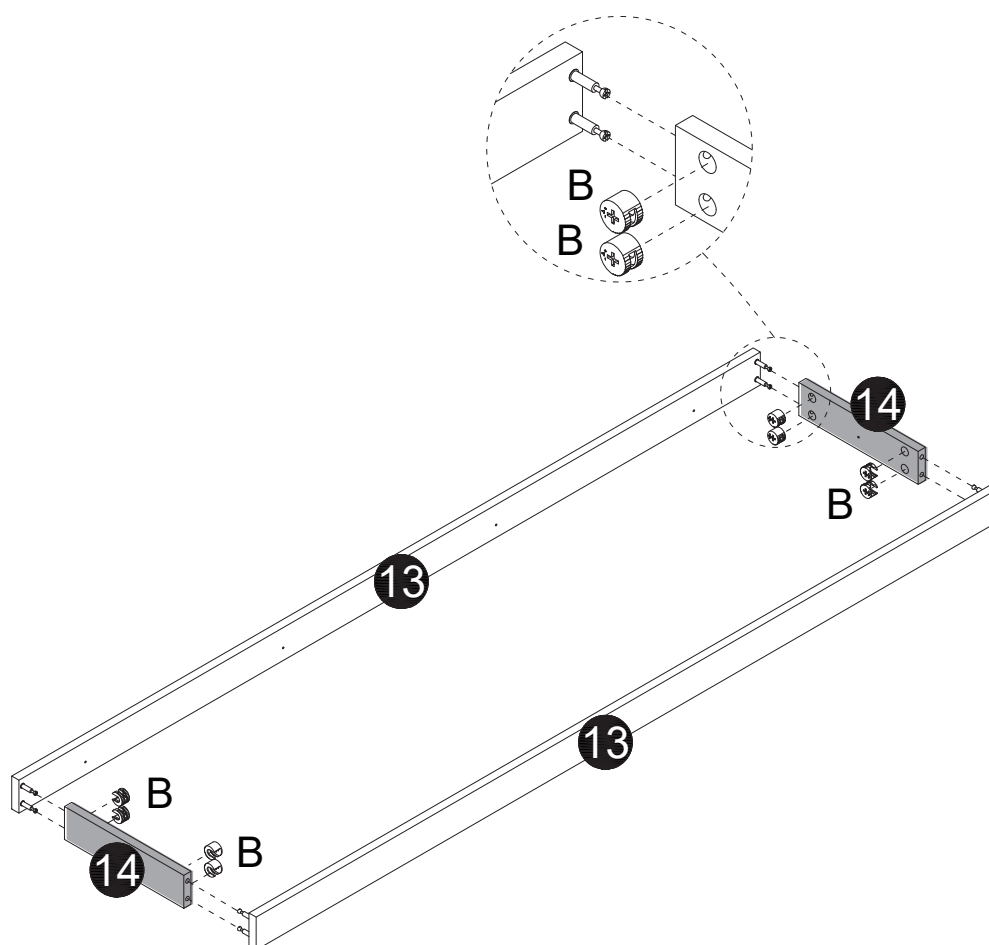


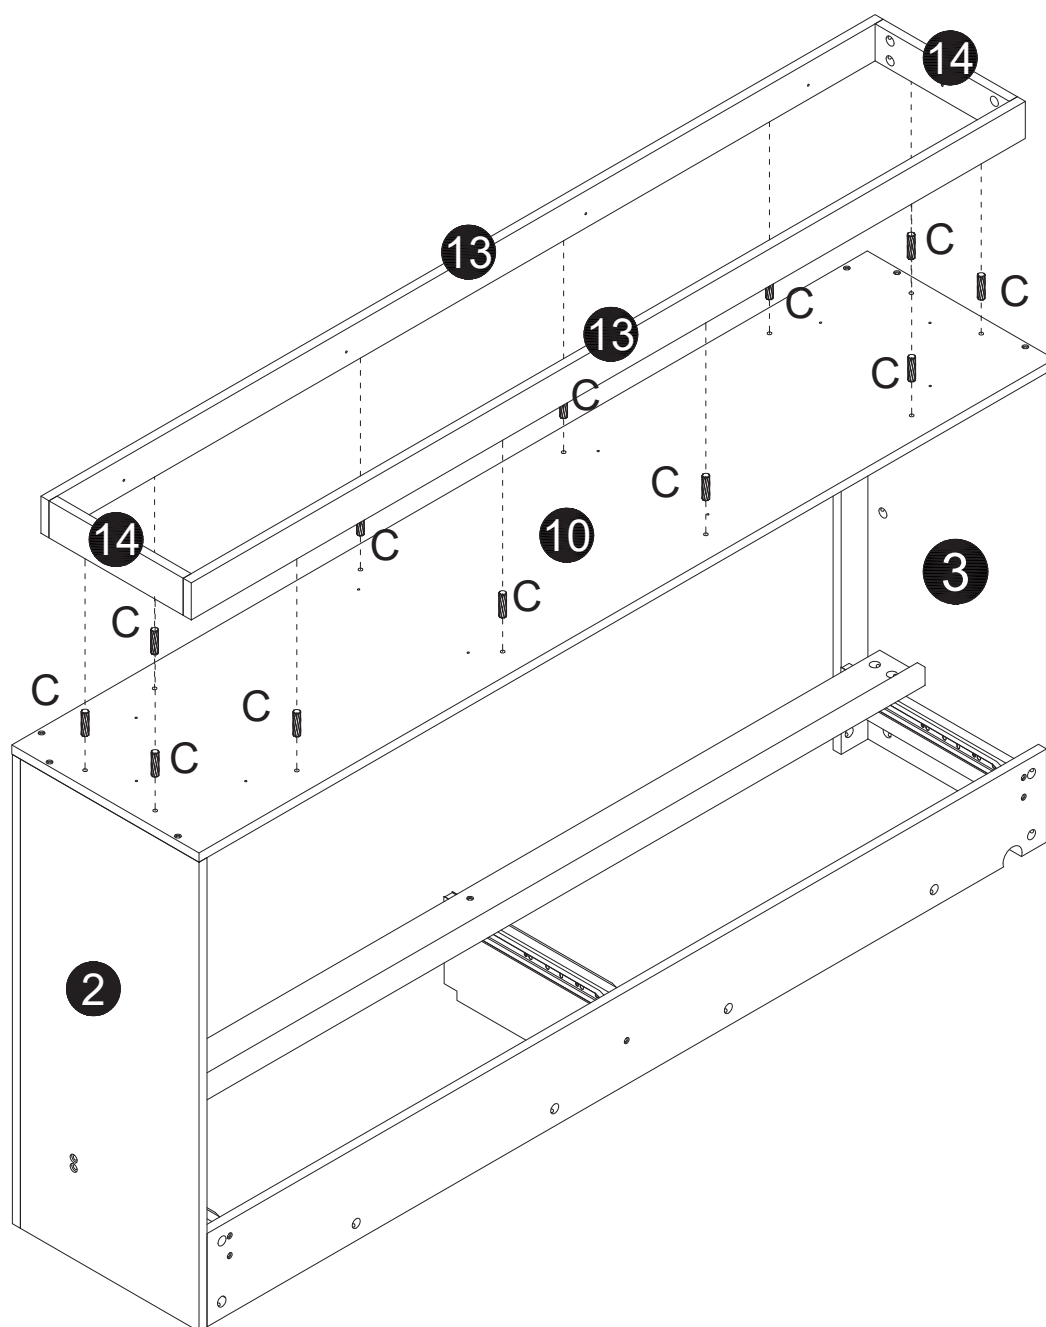

E x20

H x10




18



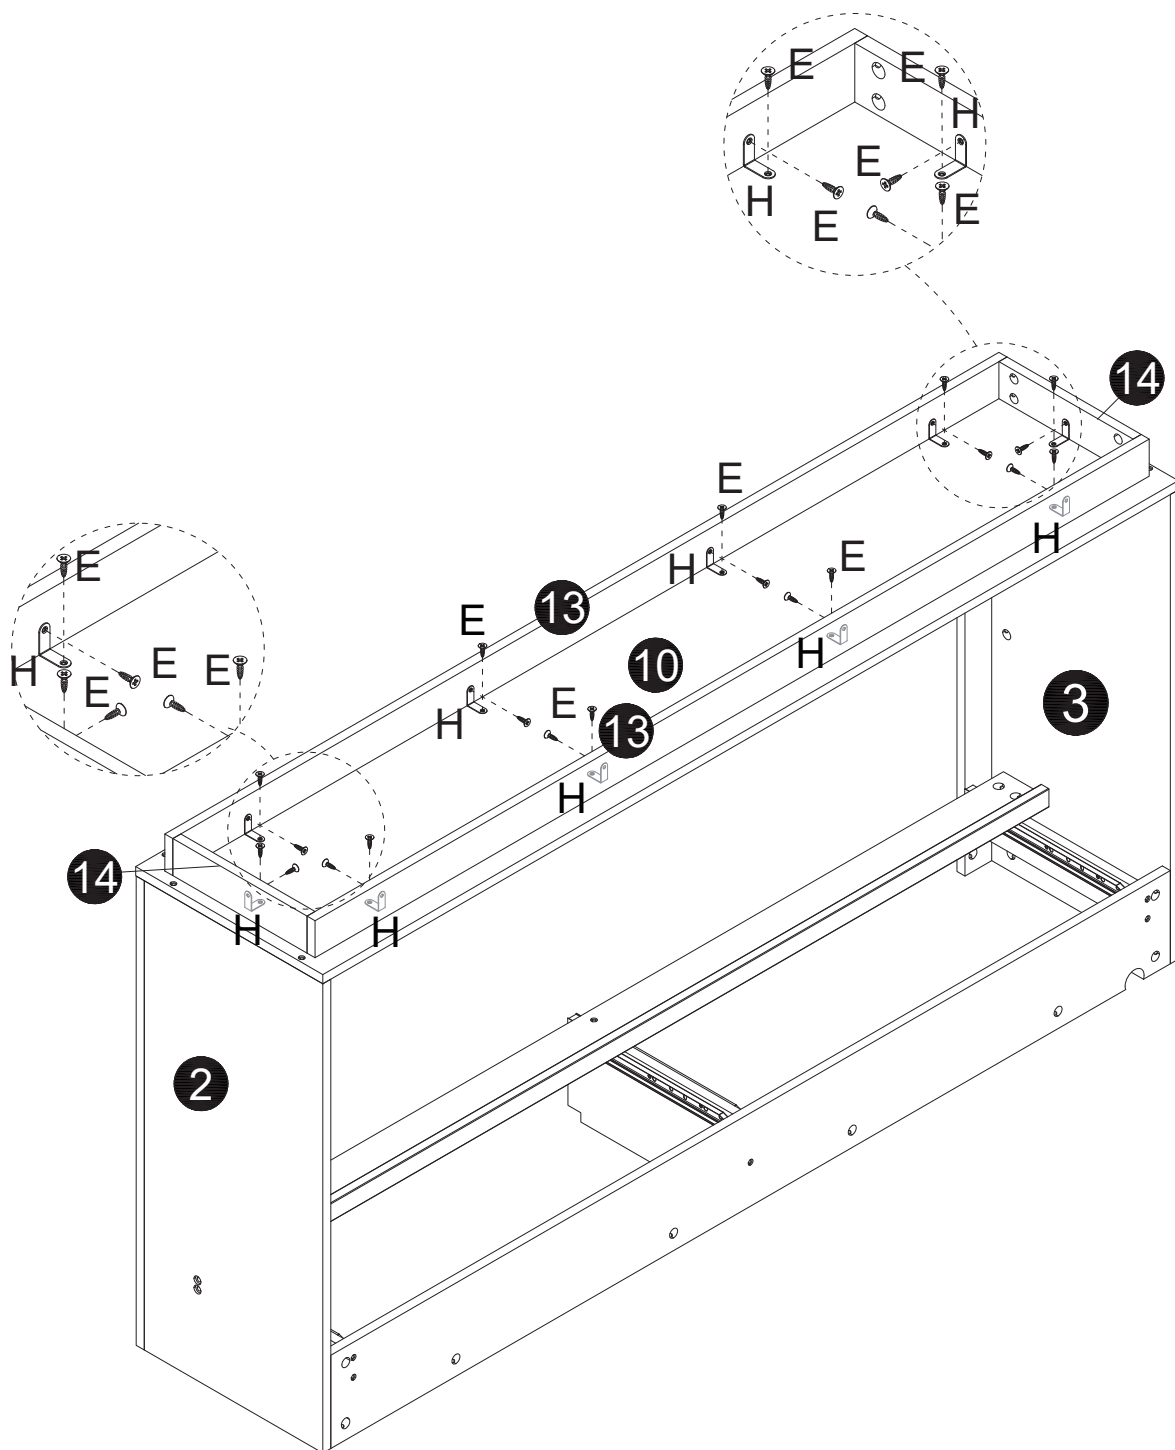


A x12


B x12

C x12

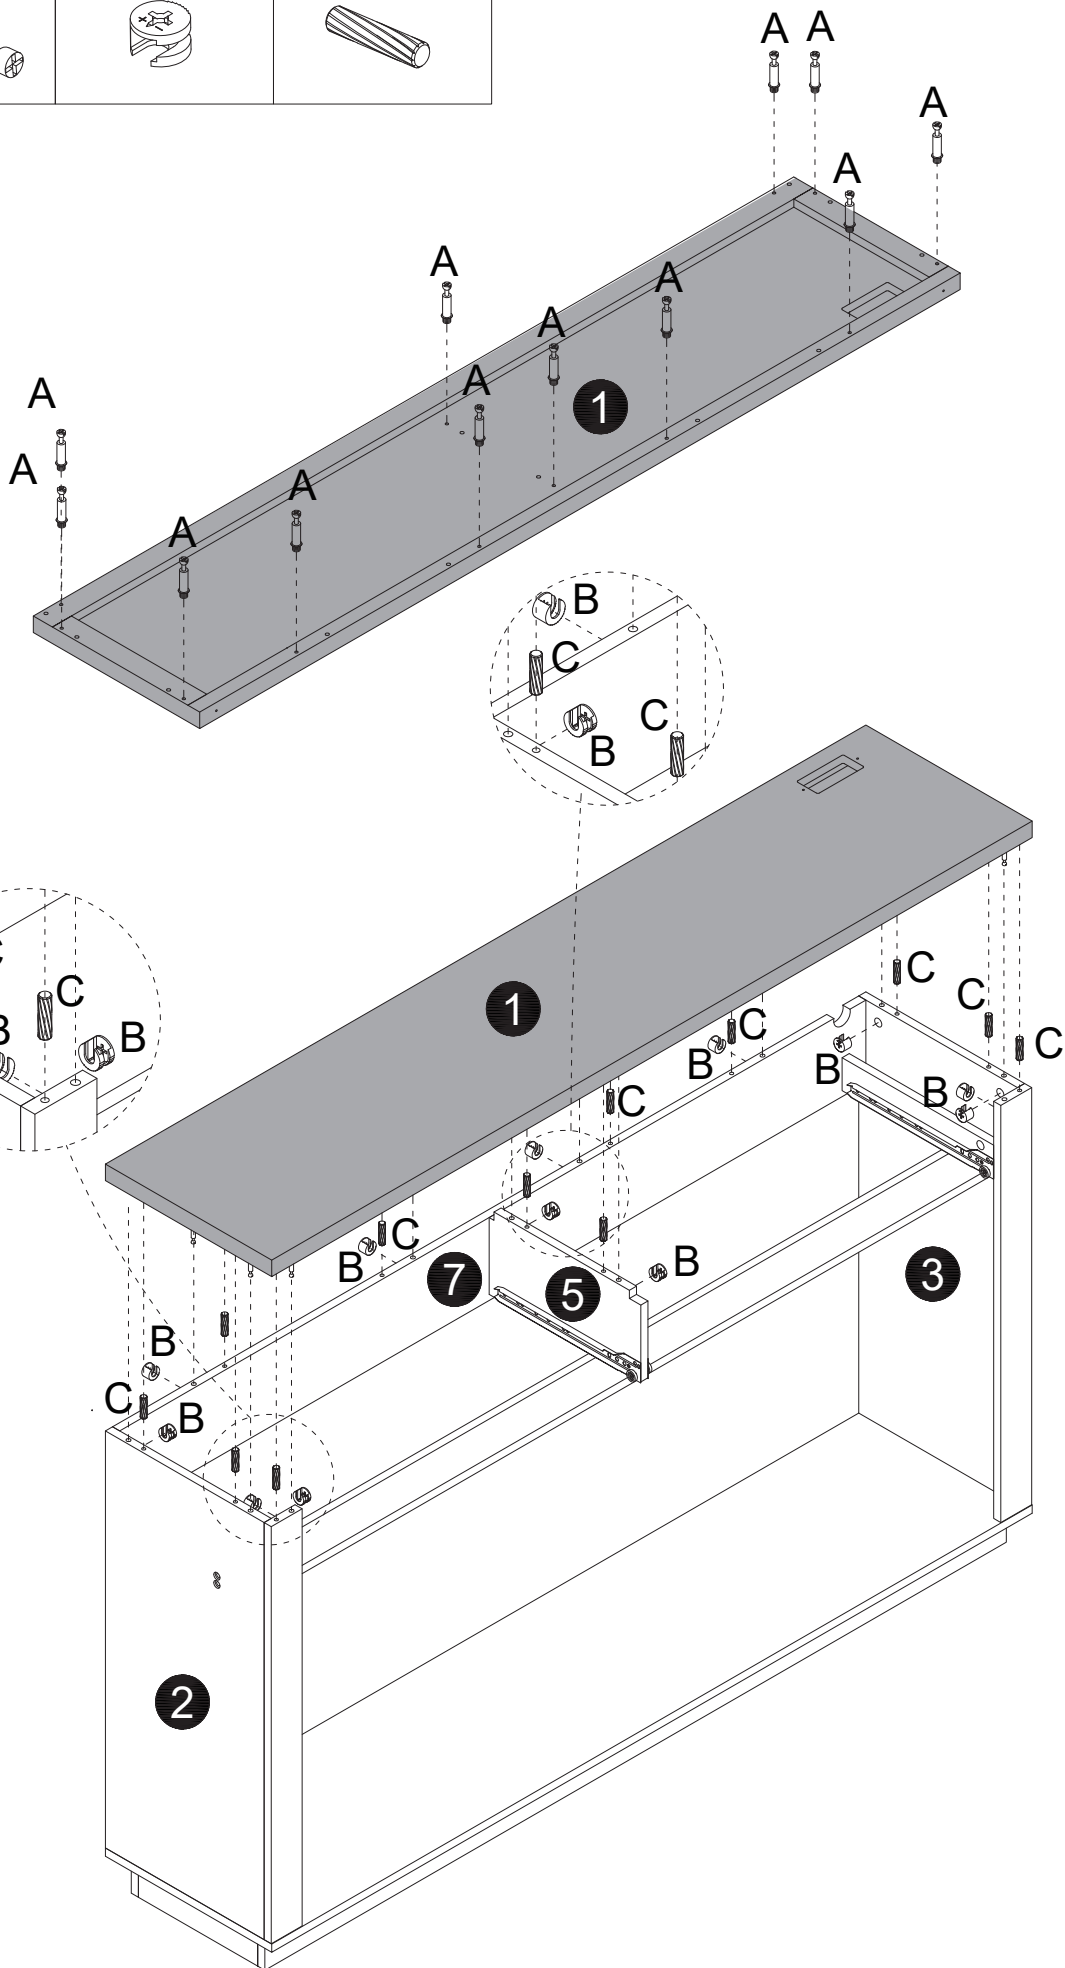




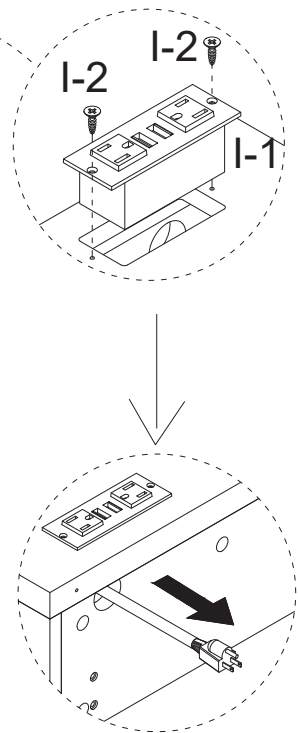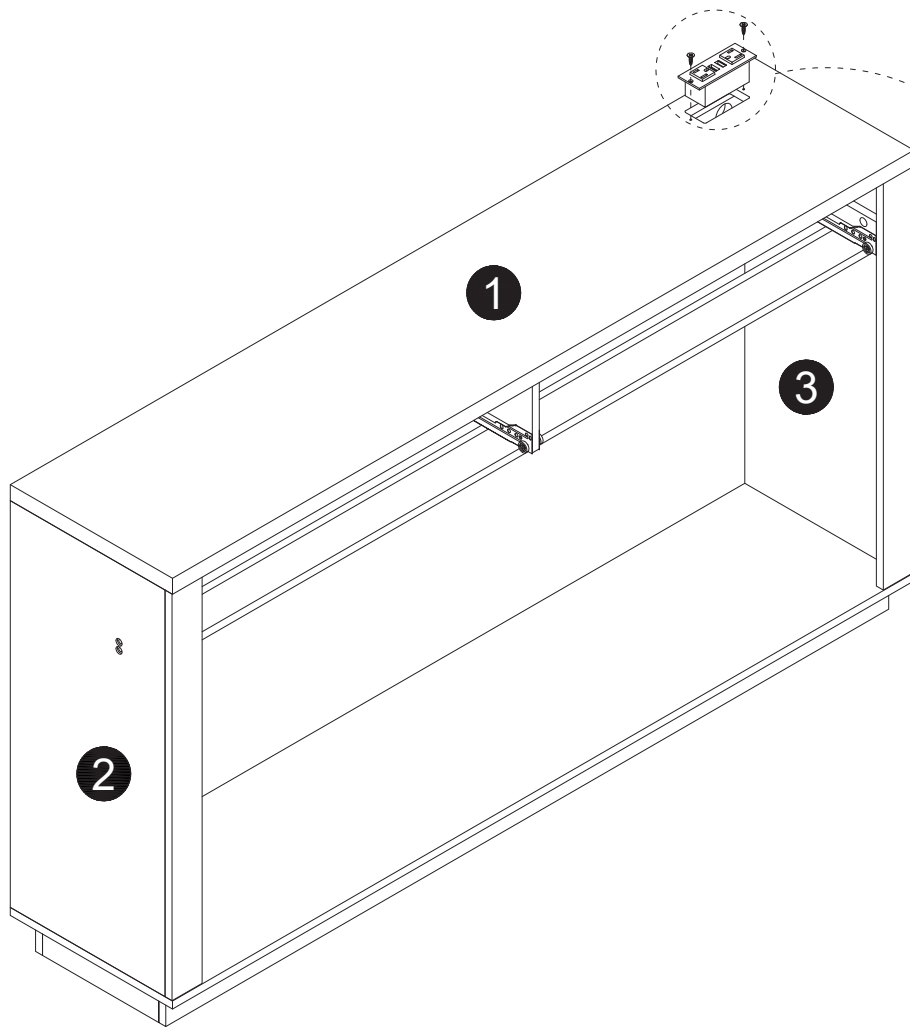
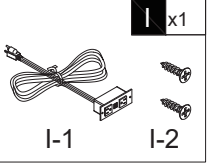


(1)

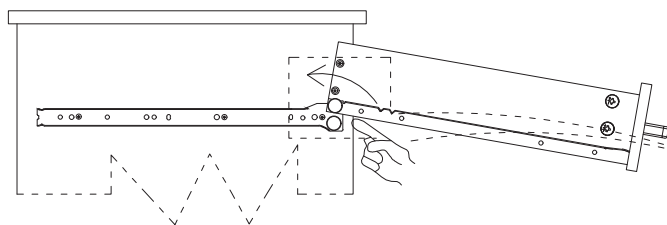


(2)

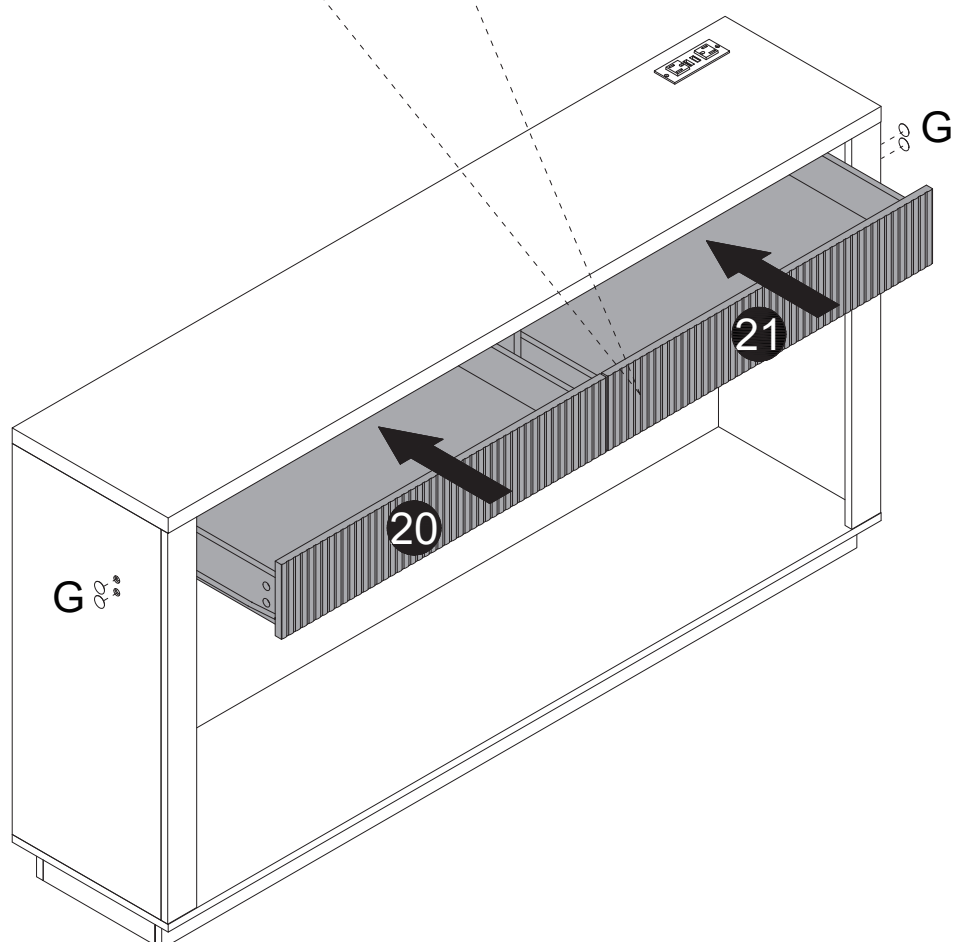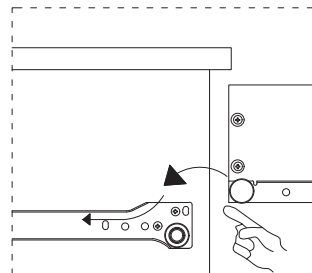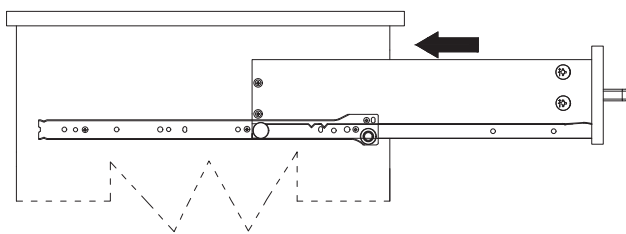


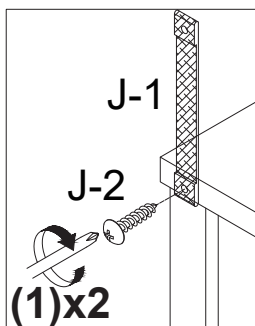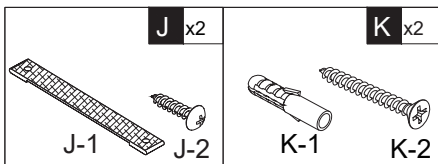


First fix the anti-rewind screw in the reserved hole of the product.

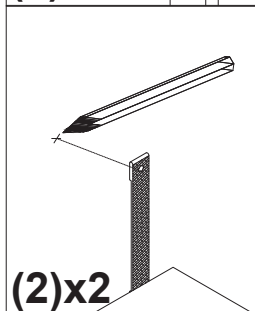


then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

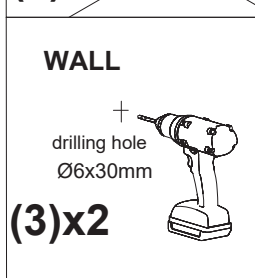

Then use a tape drill to make holes in the wall that are suitable for the product screws.

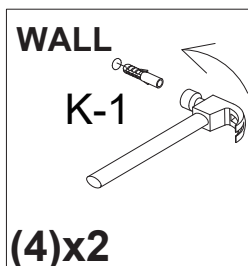

Then, put the expansion bolt into the hole

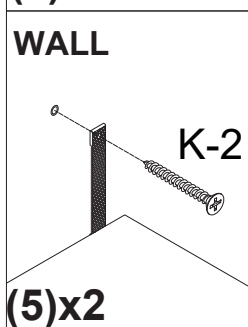

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

