


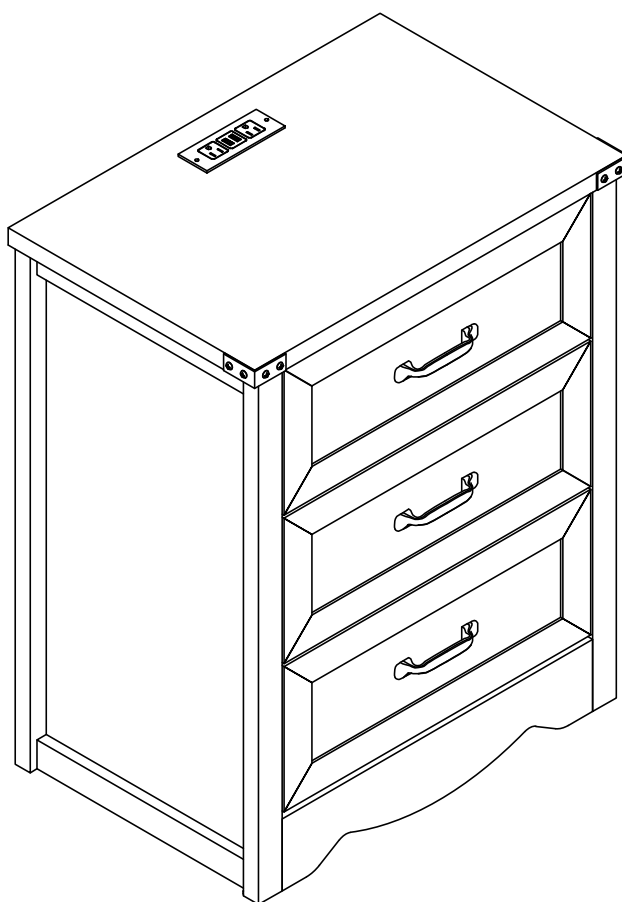




Please note: Items cannot be returned once assembled.

HLG266


Version:1.0




IT IS RECOMMENDED
TO USE POWER TOOLS

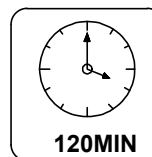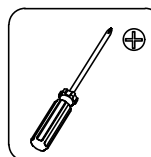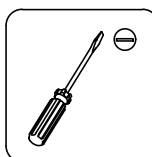


120MIN

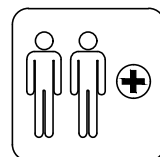


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

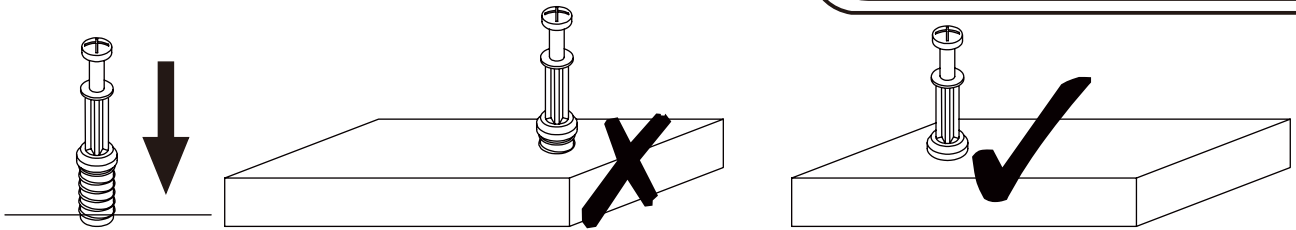


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

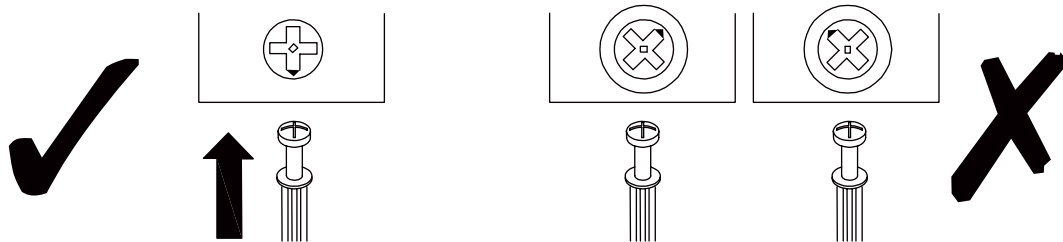











EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.




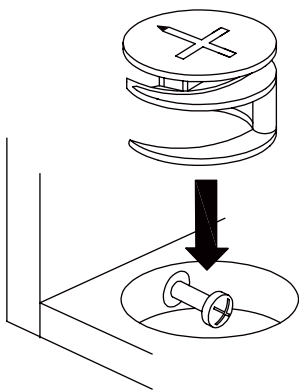




EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

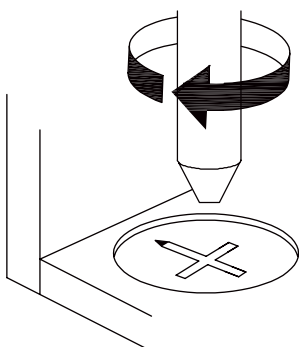


EN_Turn cam lock clockwise to tighten.

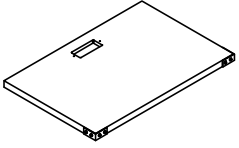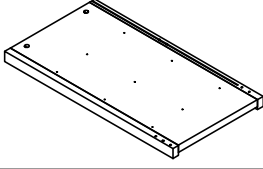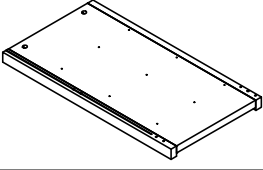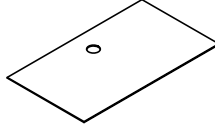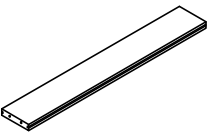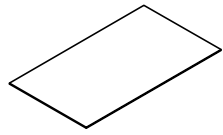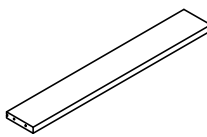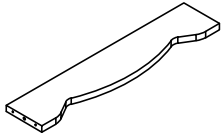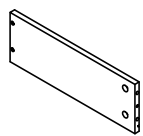
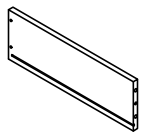
NO.	PARTS	QTY	SPARE
1		x1	
2		x1	
3		x1	
4		x1	
5		x1	
6		x1	
7		x1	
8		x1	
9		x3	
10		x3	

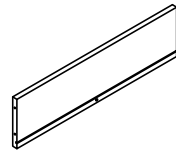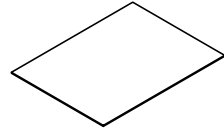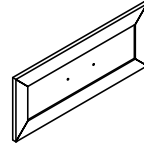NO.	PARTS	QTY	SPARE
11		x3	
12		x3	
13		x3	
14		x3	
	 Hardware Kit	x1	

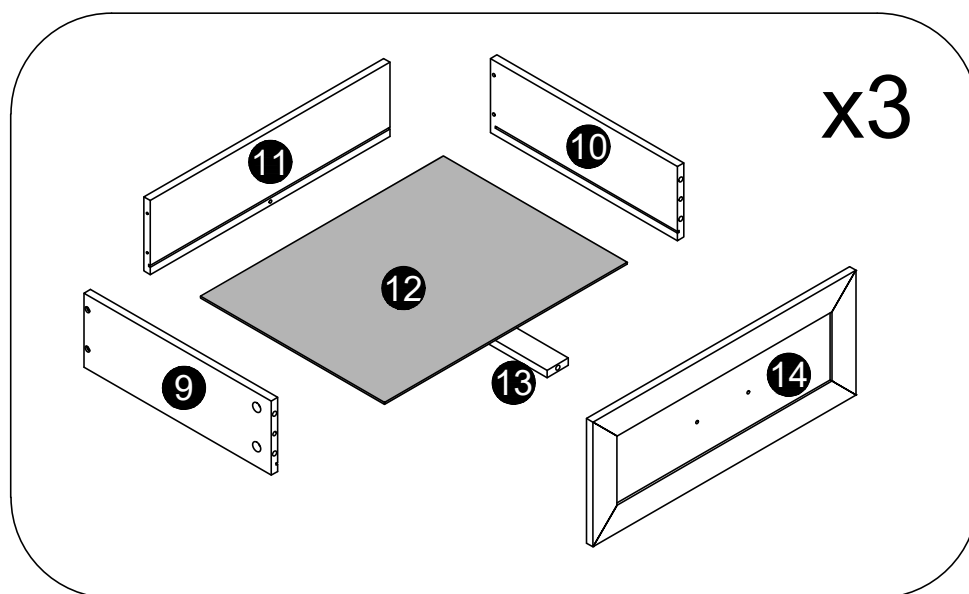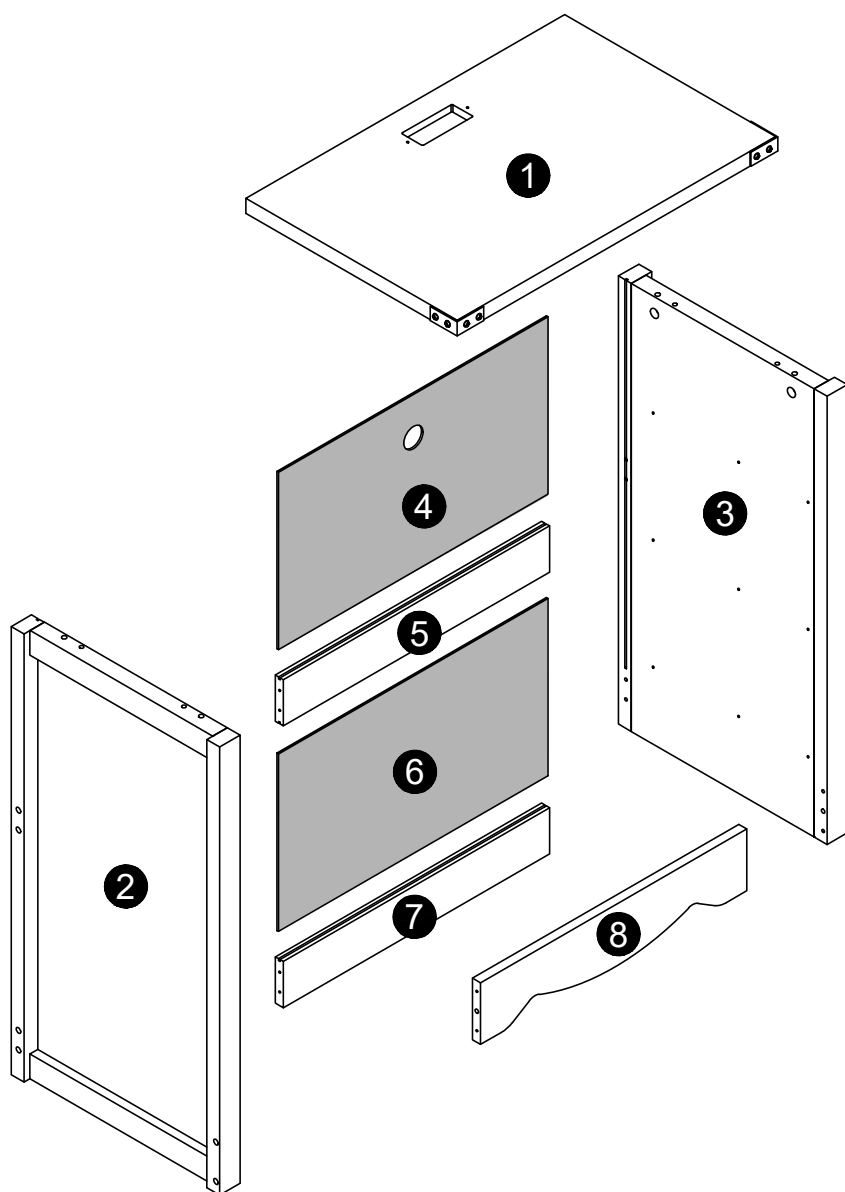



A x19 Ø6x35mm +1(spare)	B x19 Ø15x10mm +1(spare)	C x12 Ø6x30mm +1(spare)	D x17 Ø4x35mm +1(spare)	E x36 Ø3.5x12mm +3(spare)	F x3 F-1 F-2
G x12 Ø5x50mm +1(spare)	J x1	K x2 Ø3.5x12mm	L x12	M x8 Ø3x16mm +1(spare)	N x2 Ø4x14mm N-1 N-2
O x2 Ø6x30mm					
CL x3 L350mm	CR x3 L350mm	DL x3 L350mm	DR x3 L350mm		

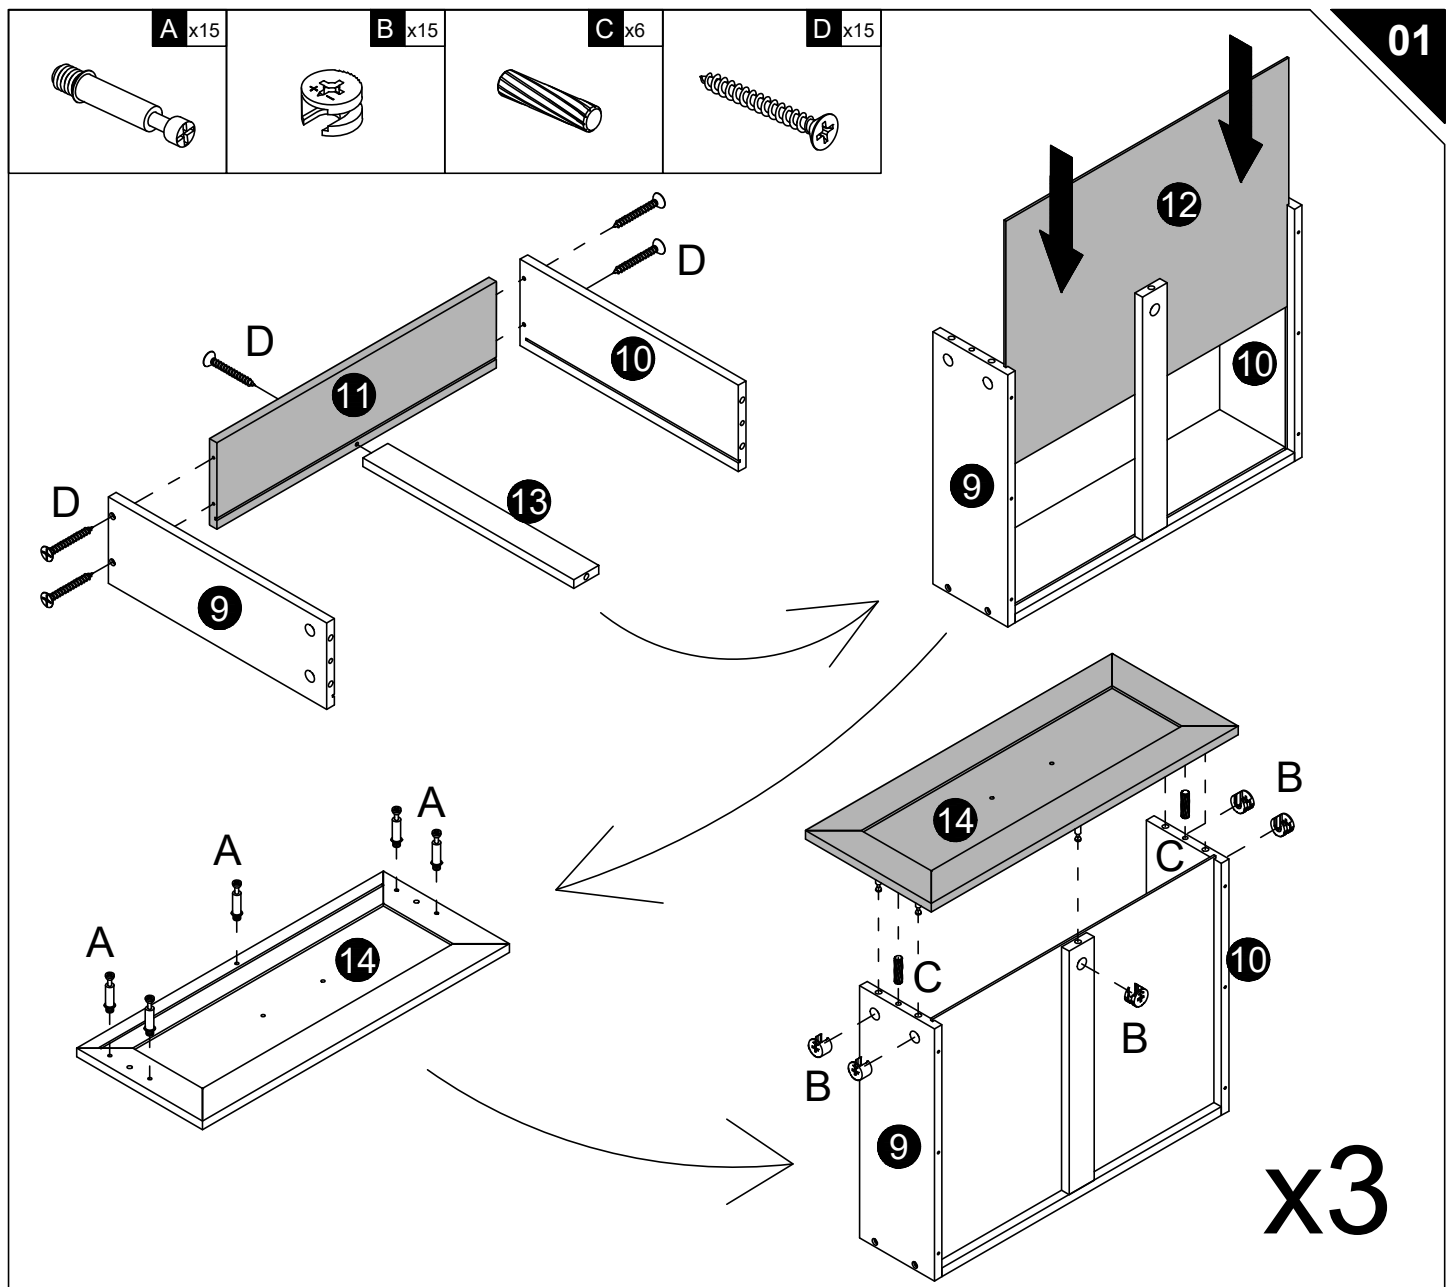

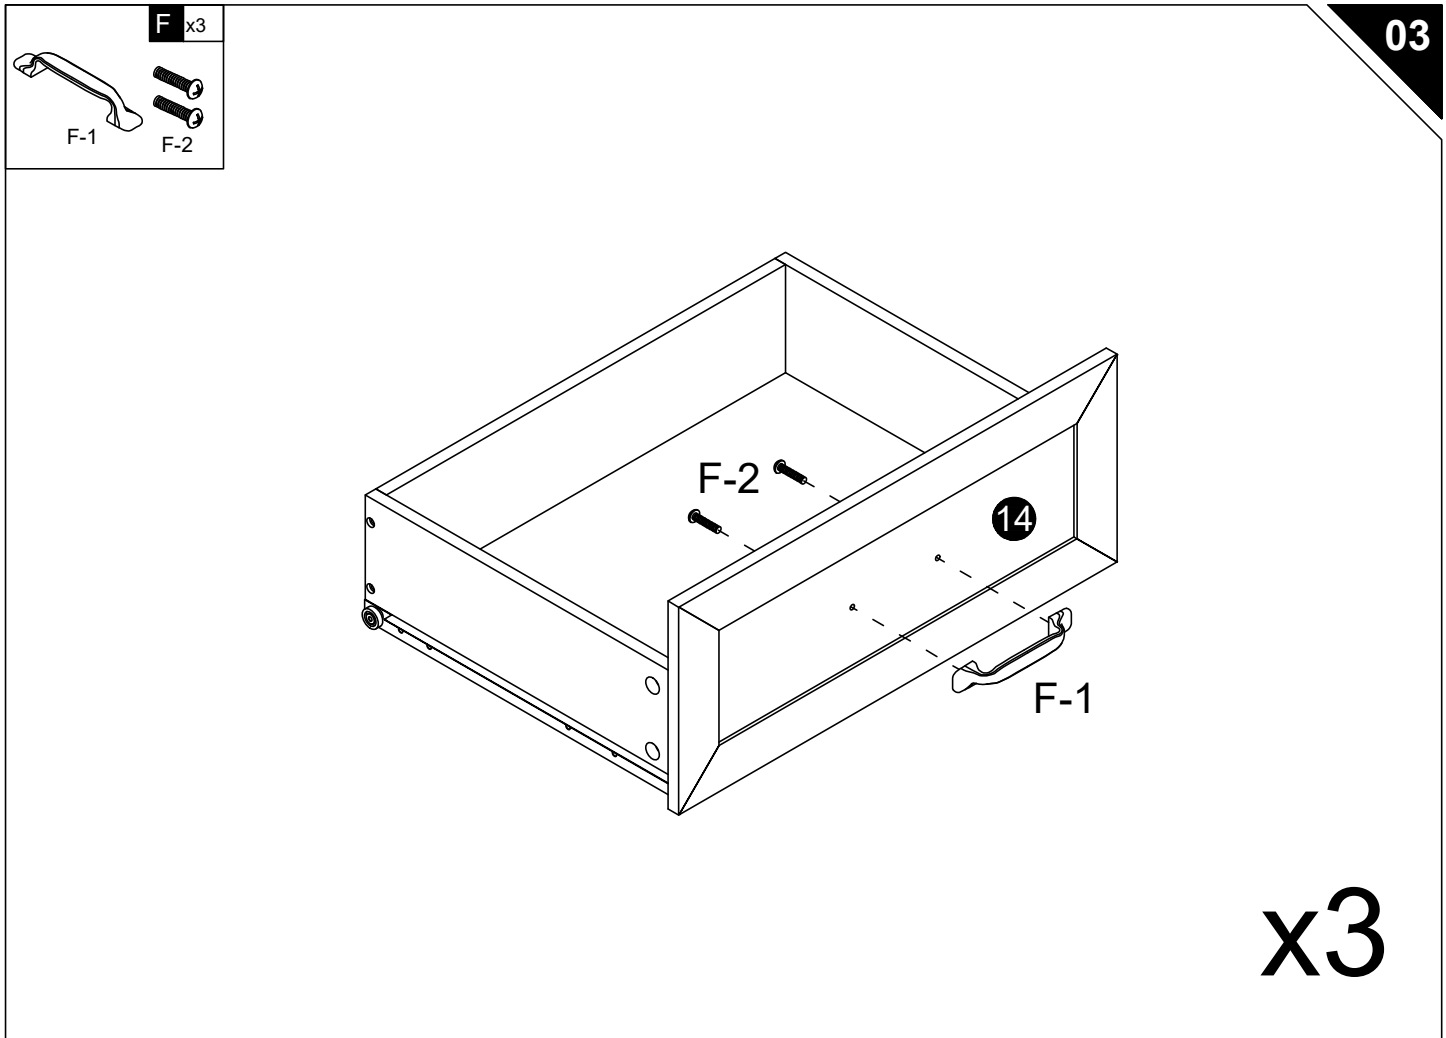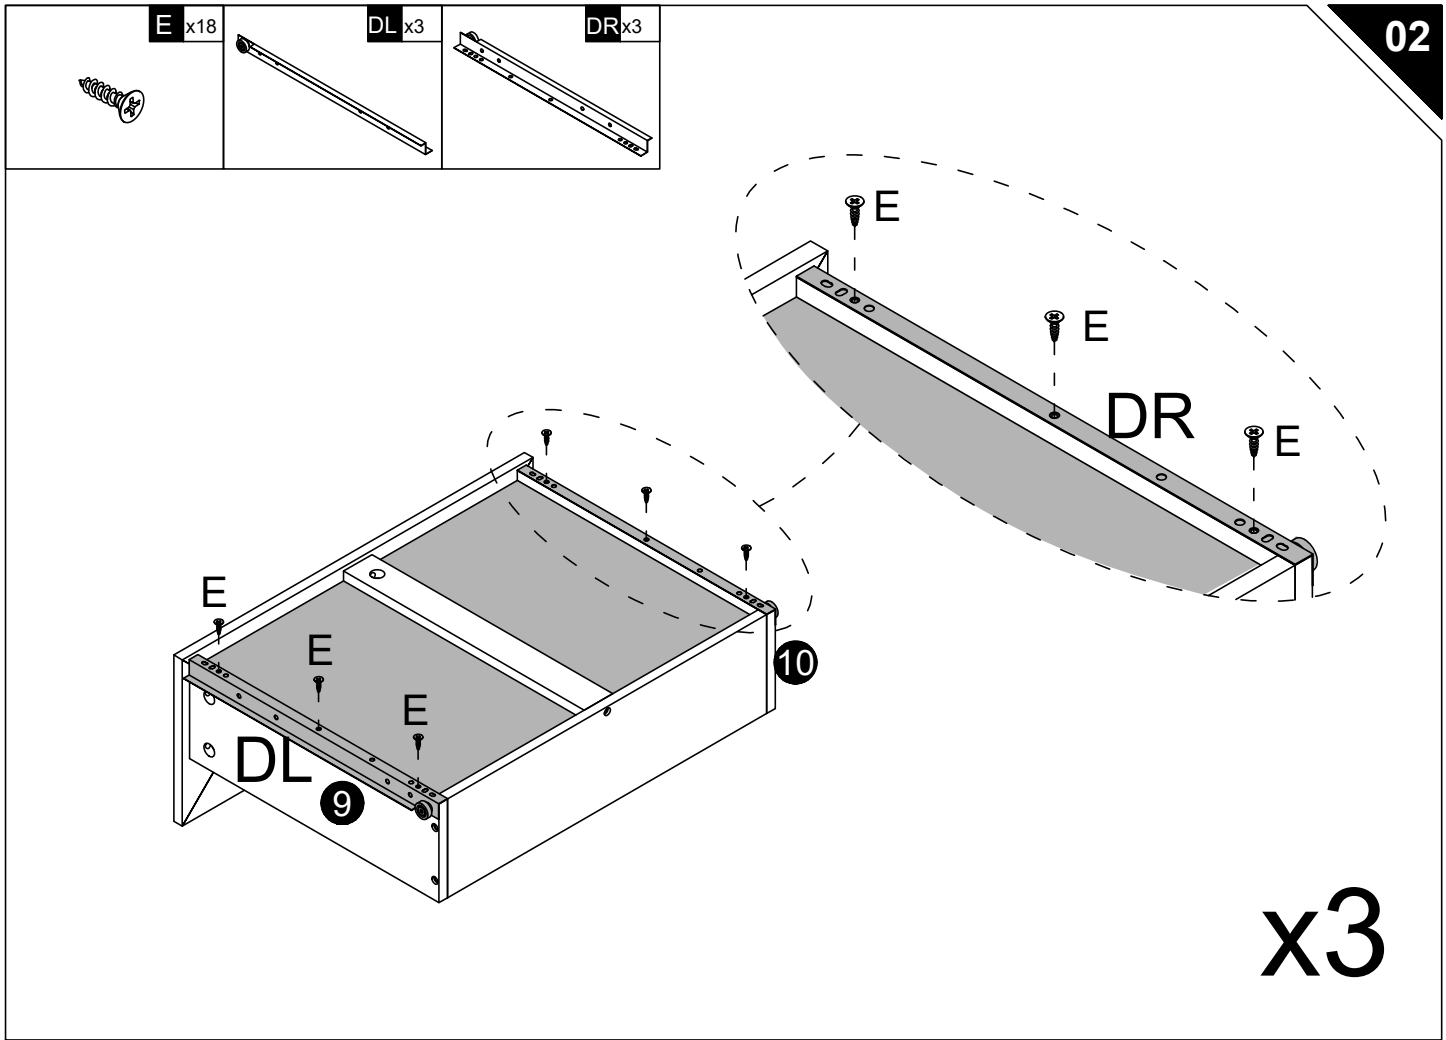


E x9

CL x3

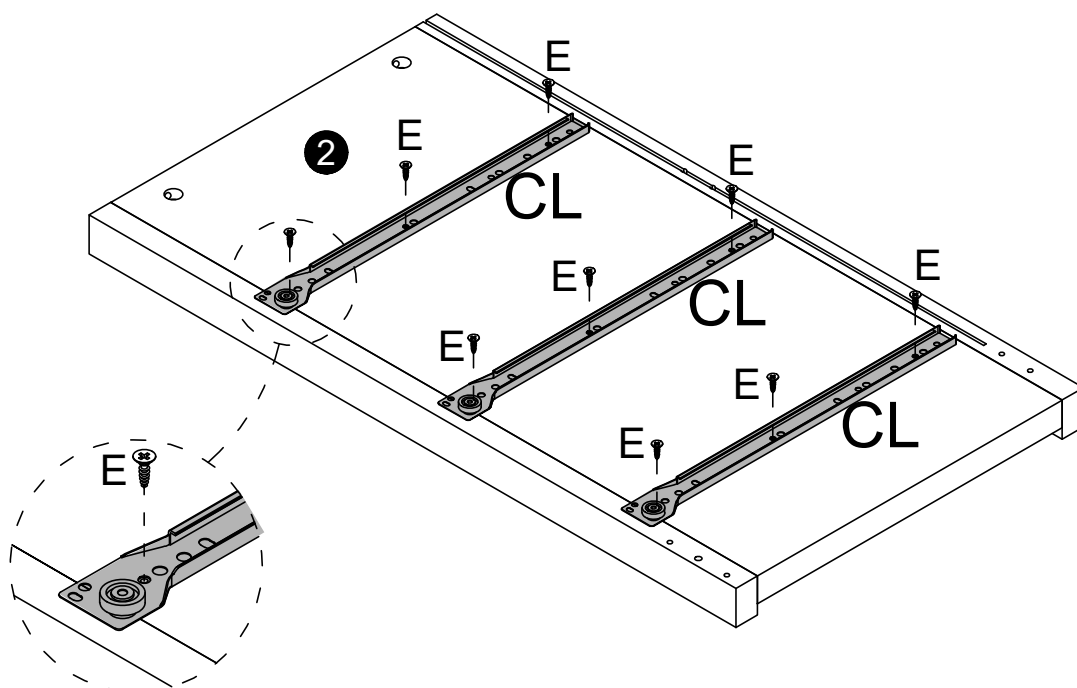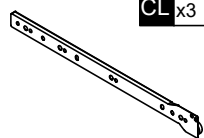



E x9

CR x3

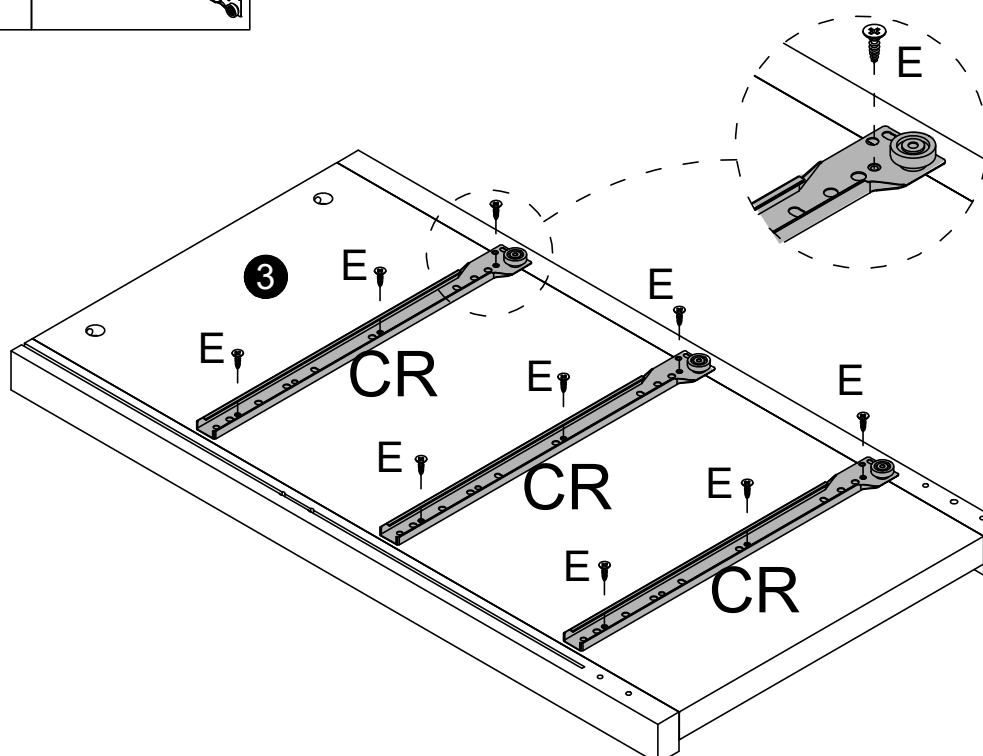


C x1


G x6

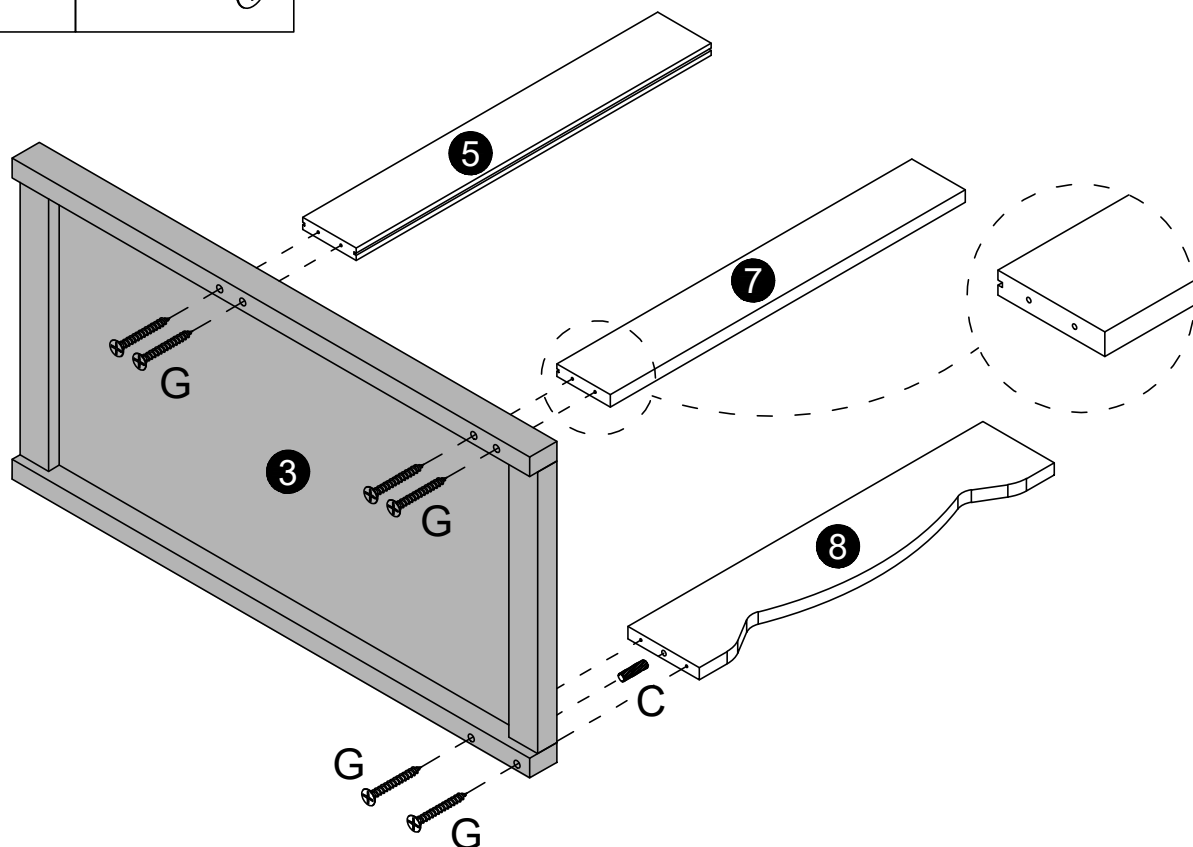


C x1

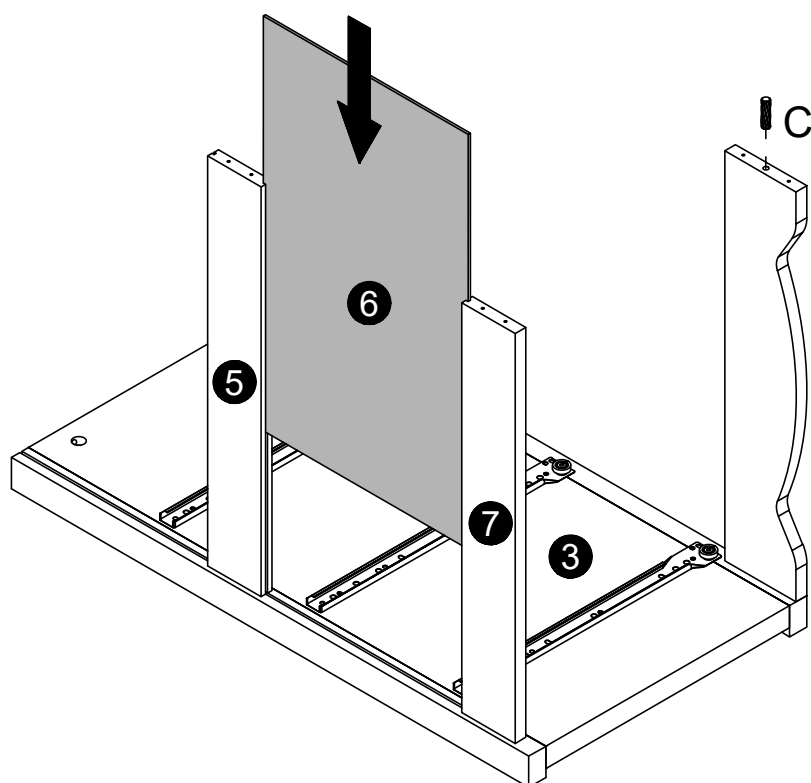

G x6




08

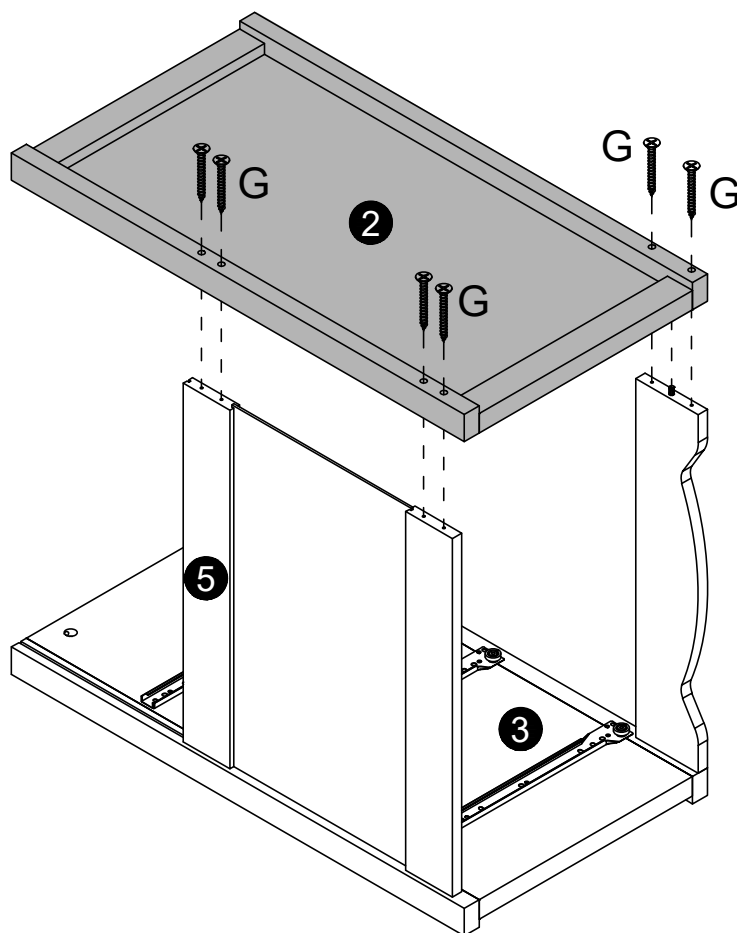


C x4




09

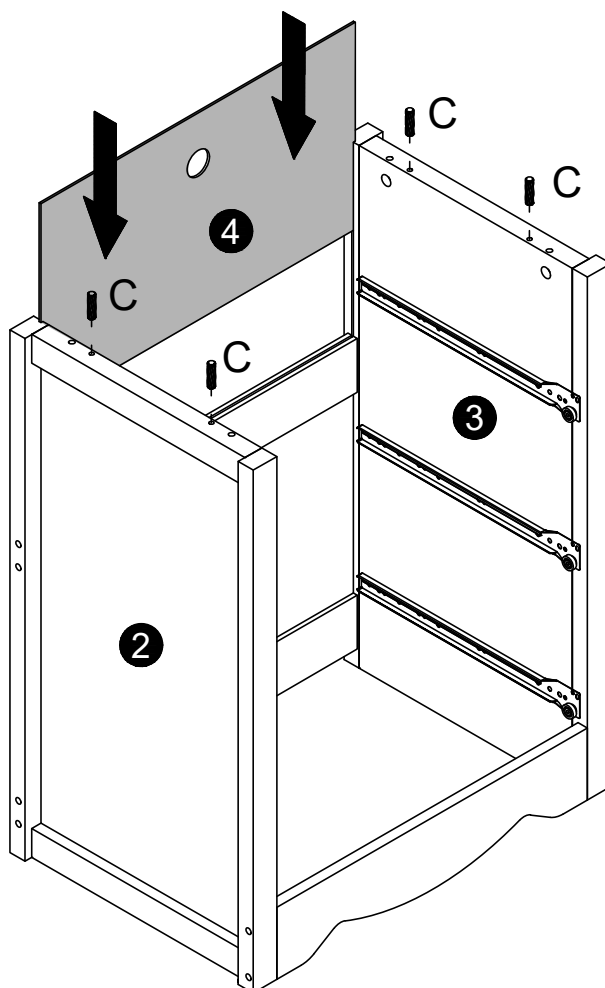

A x4




10

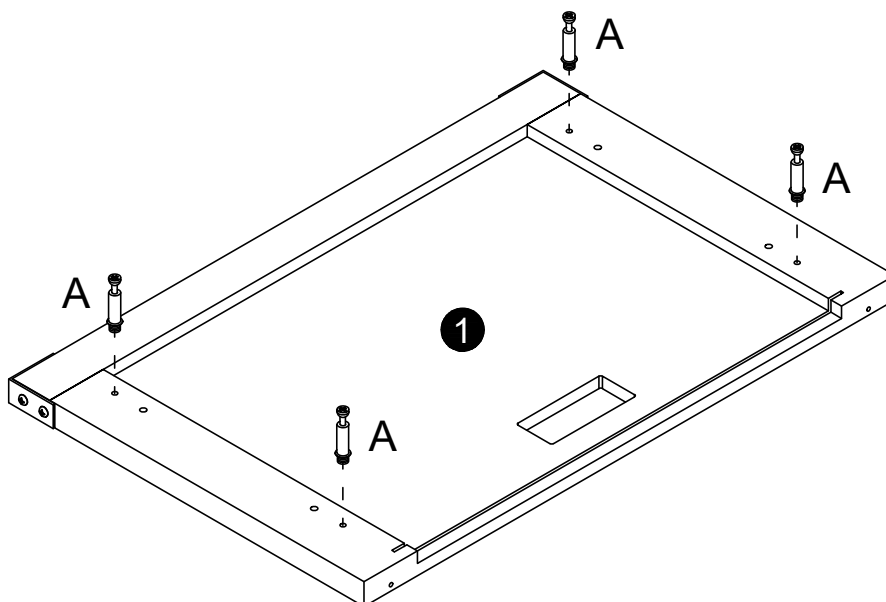

B x4



11

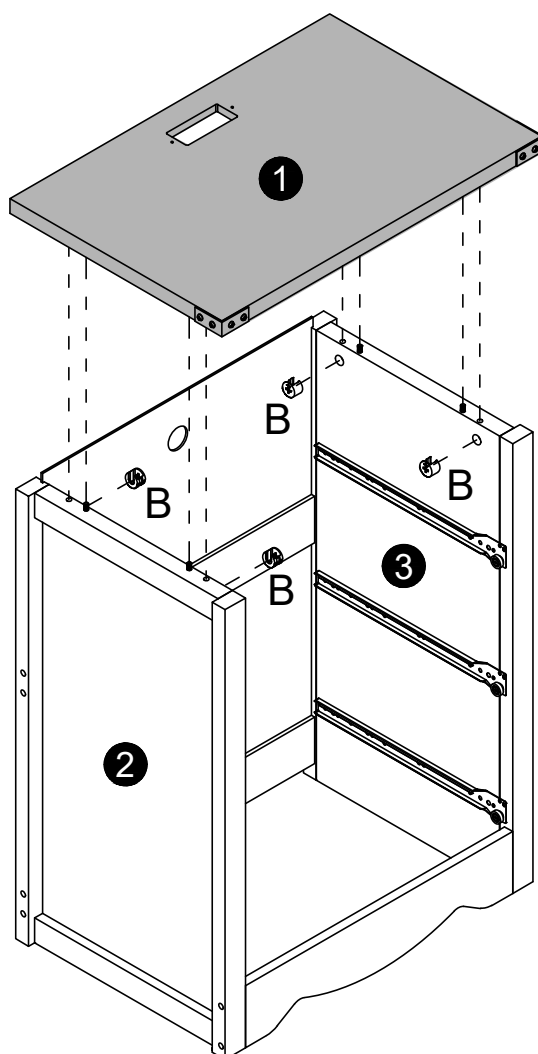

J x1



K x2




M x8



M-1




M-2



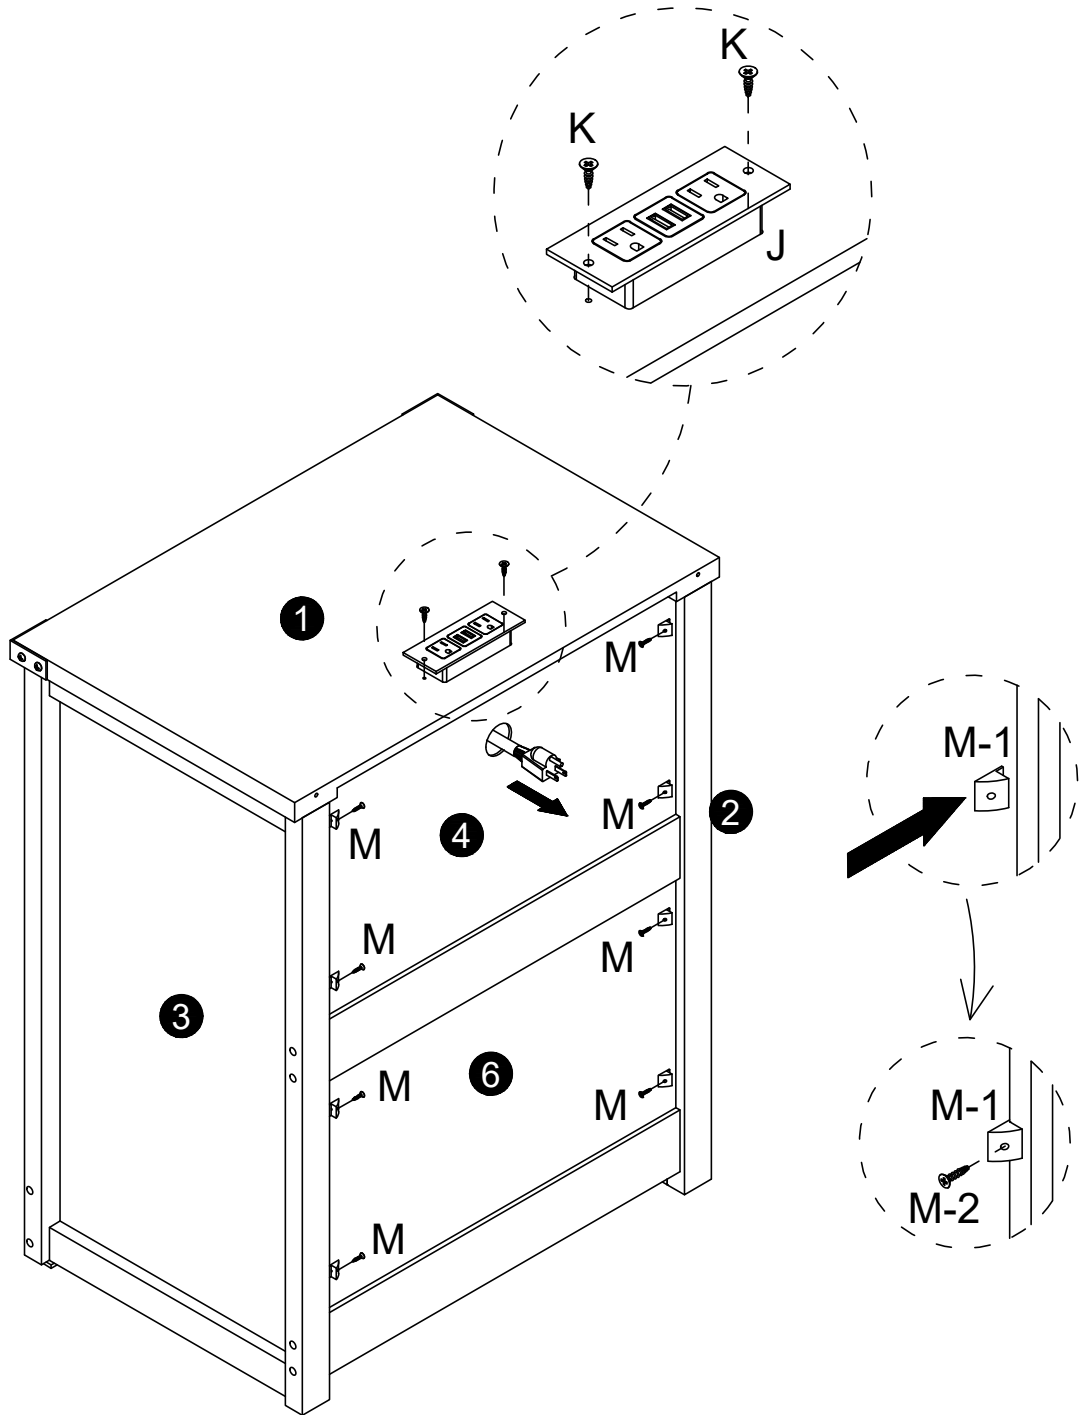





(1)

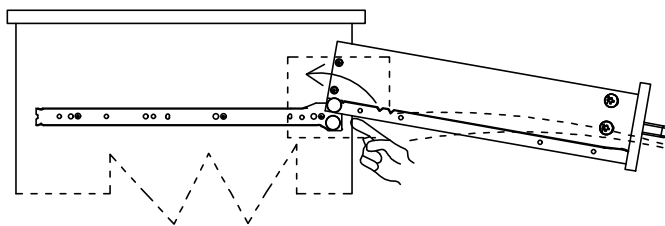


(2)

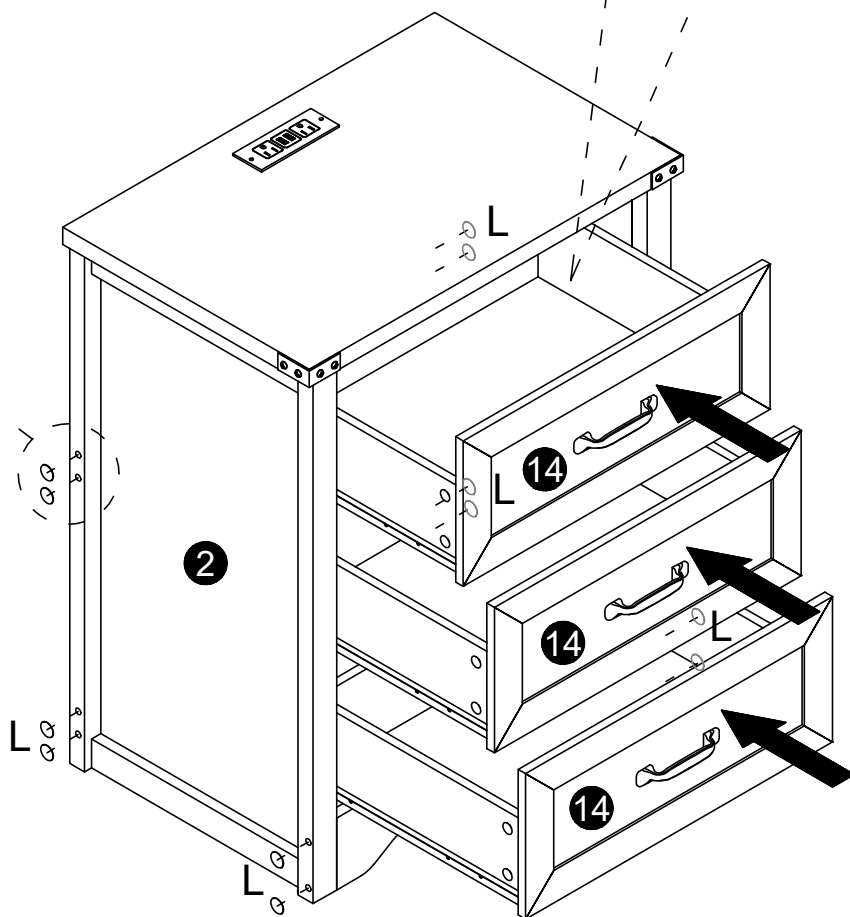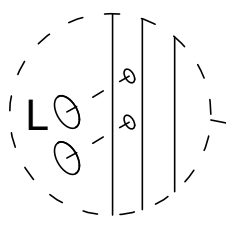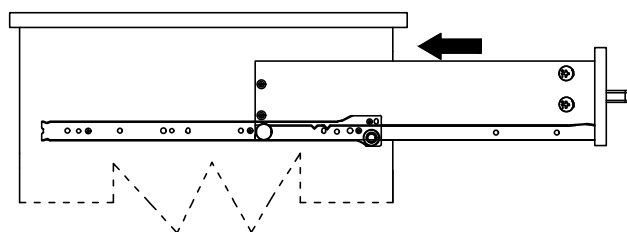


D x2



N x2



O x2



N-1

N-2

(1)x2

First fix the anti-rewind screw in the reserved hole of the product.

WALL

O

(4)x2

Then, put the expansion bolt into the hole

WALL

D

(5)x2

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

WALL

drilling hole
Ø6x30mm

(3)x2



Then use a tape drill to make holes in the wall that are suitable for the product screws.

WALL

