

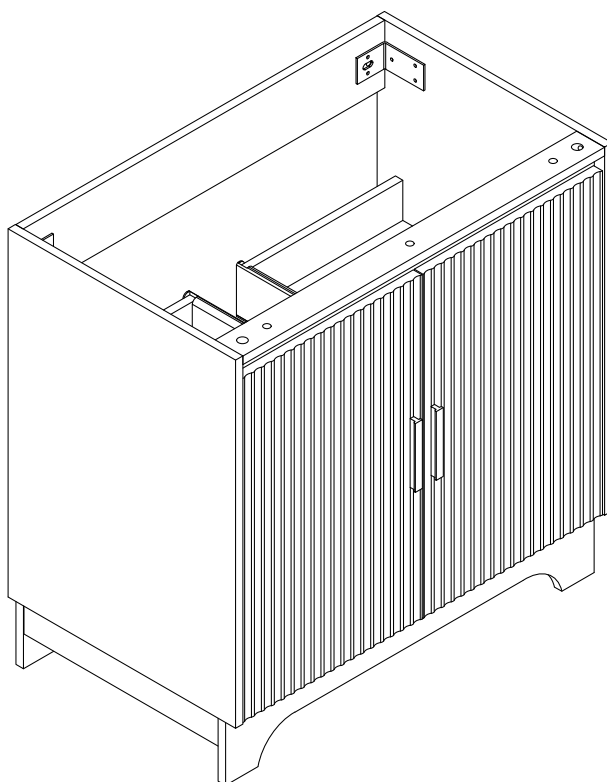
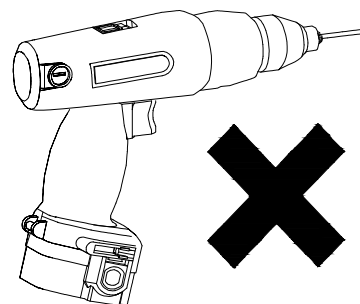


Assembly Instructions

Bathroom cabinet

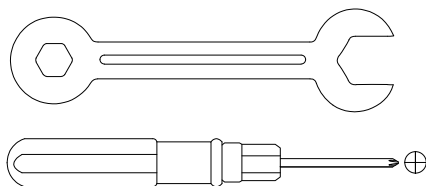


The beginning of installation may feel confusing and painful, but it will get better.

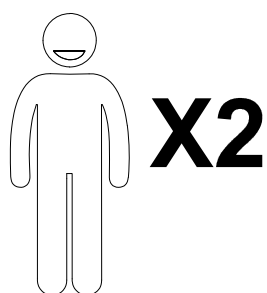



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

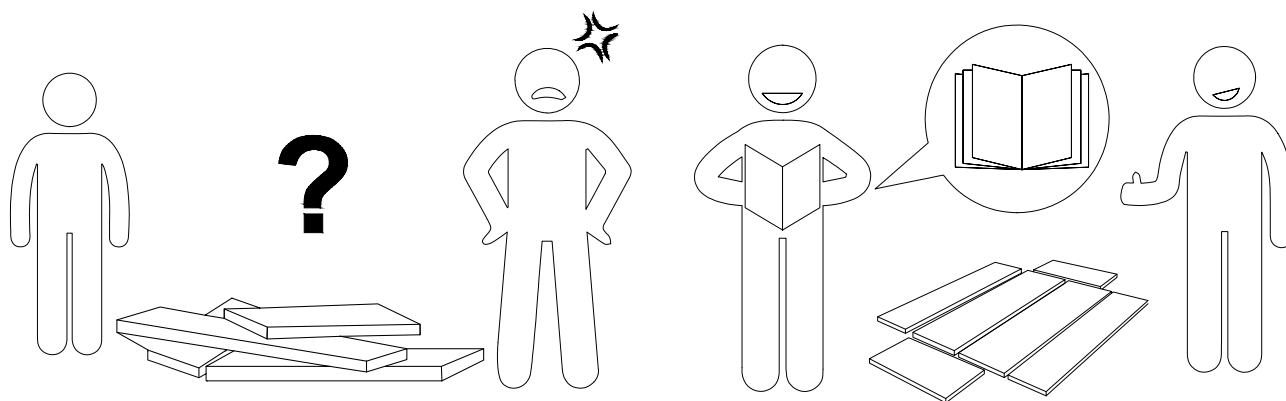

AVOID SCRATCHES

In order to avoid scratching this furniture should be assembled on a soft layer—could be a rug.












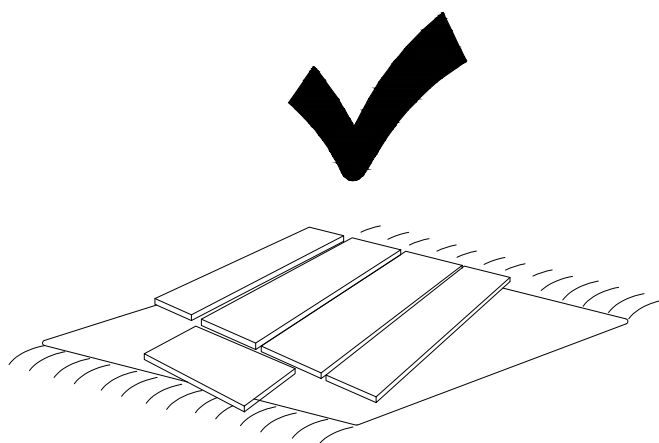
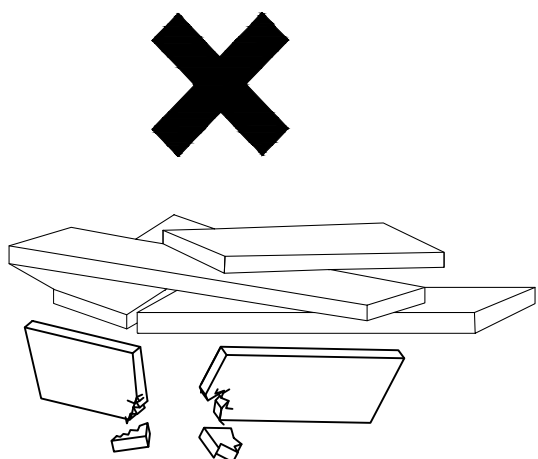


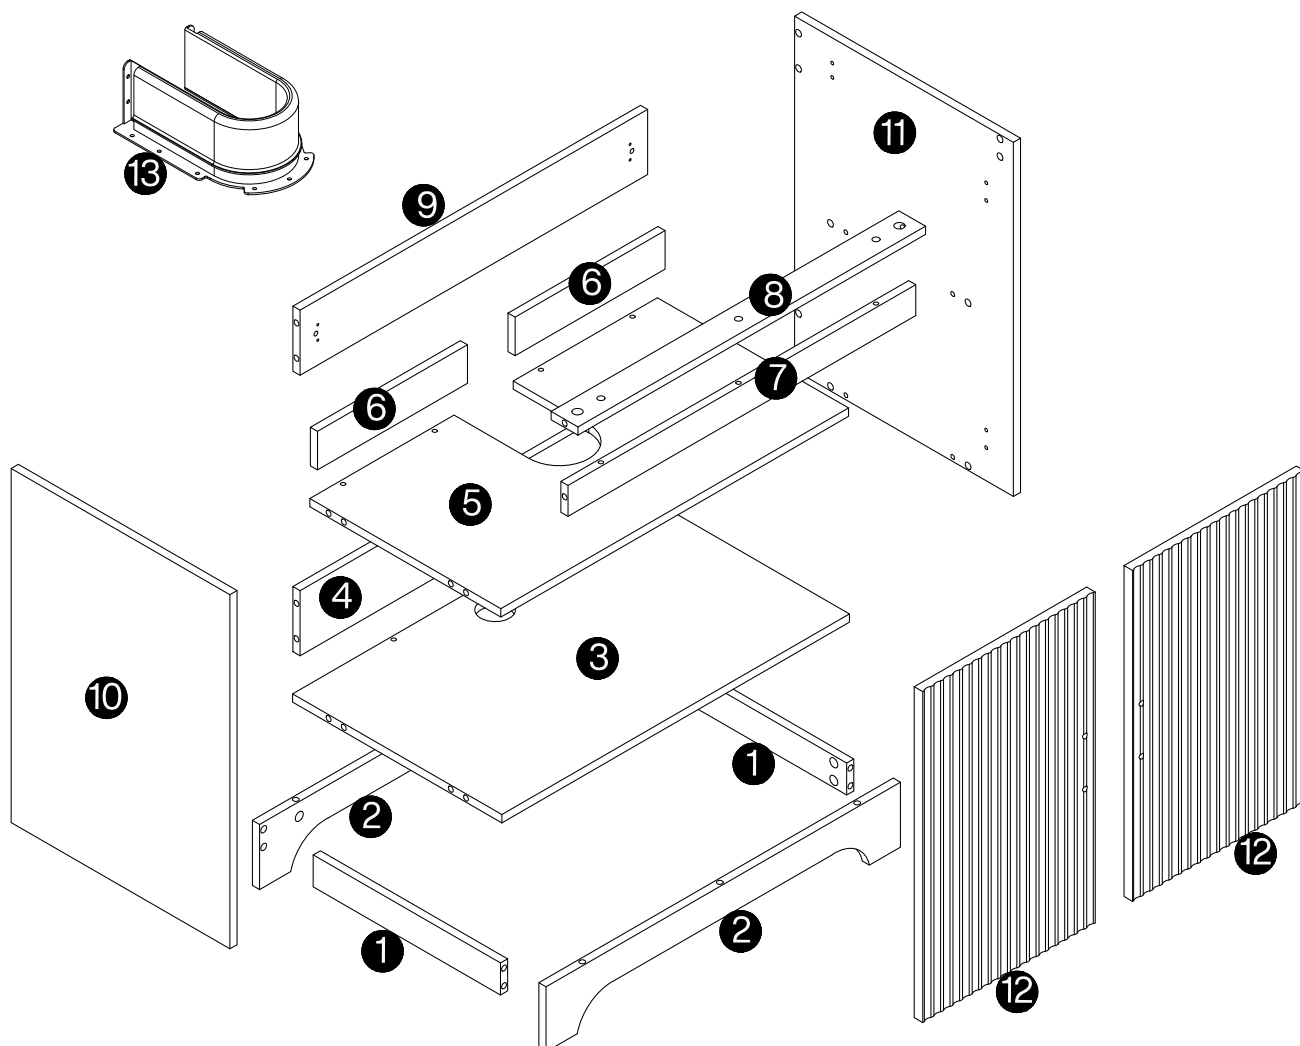






⚠ Caution





Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.

Parts List

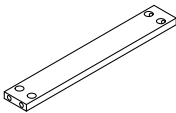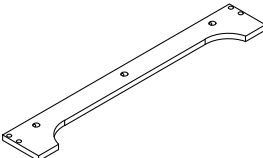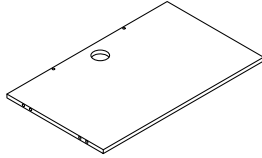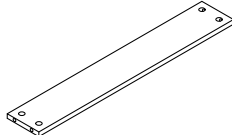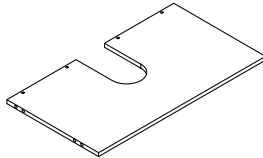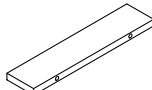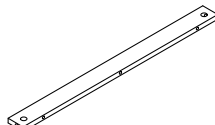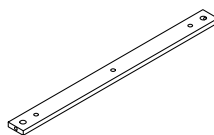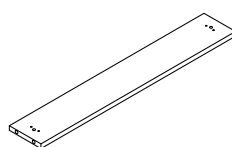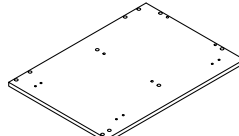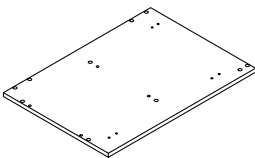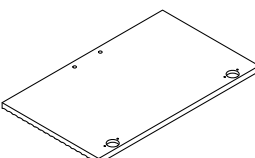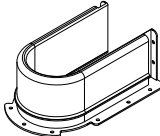1  2pcs	2  2pcs	3  1 pc	4  1 pc	5  1 pc
6  2pcs	7  1 pc	8  1 pc	9  1 pc	10  1 pc
11  1pc	12  2pcs	13  The accessory comes in a separate package 1 pc		


Hardware List

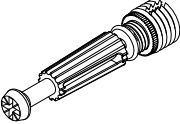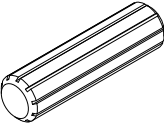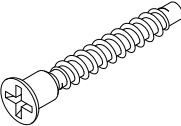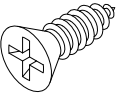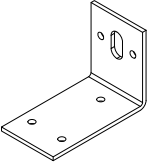A	B	C	D	E	F
					
M6x40mm	Ø15x10mm	Ø8x30mm	Ø7x38mm	Ø3.5x14mm	
34+2 pcs	34+2 pcs	8+2 pcs	9+2 pcs	47+4 pcs	2 pcs

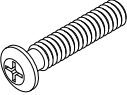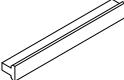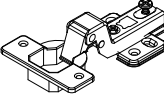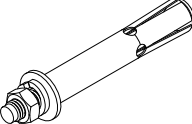
G	H	I	J	K	L
					
Ø4x22mm		Dawan Hinge	M8		M8
4+1 pcs	2 pcs	4 pcs	2 pcs	1 pc	1 pc

Installation of Cams and Pins


Step 1-2: Align the plastic part with the mounting hole and press it in. If you can't press it in, loosen the screw counter clockwise or completely remove the screw from the plastic part and try again.
Step 3-4: After pressing the plastic part into place, use a screwdriver to tighten the screw clockwise.

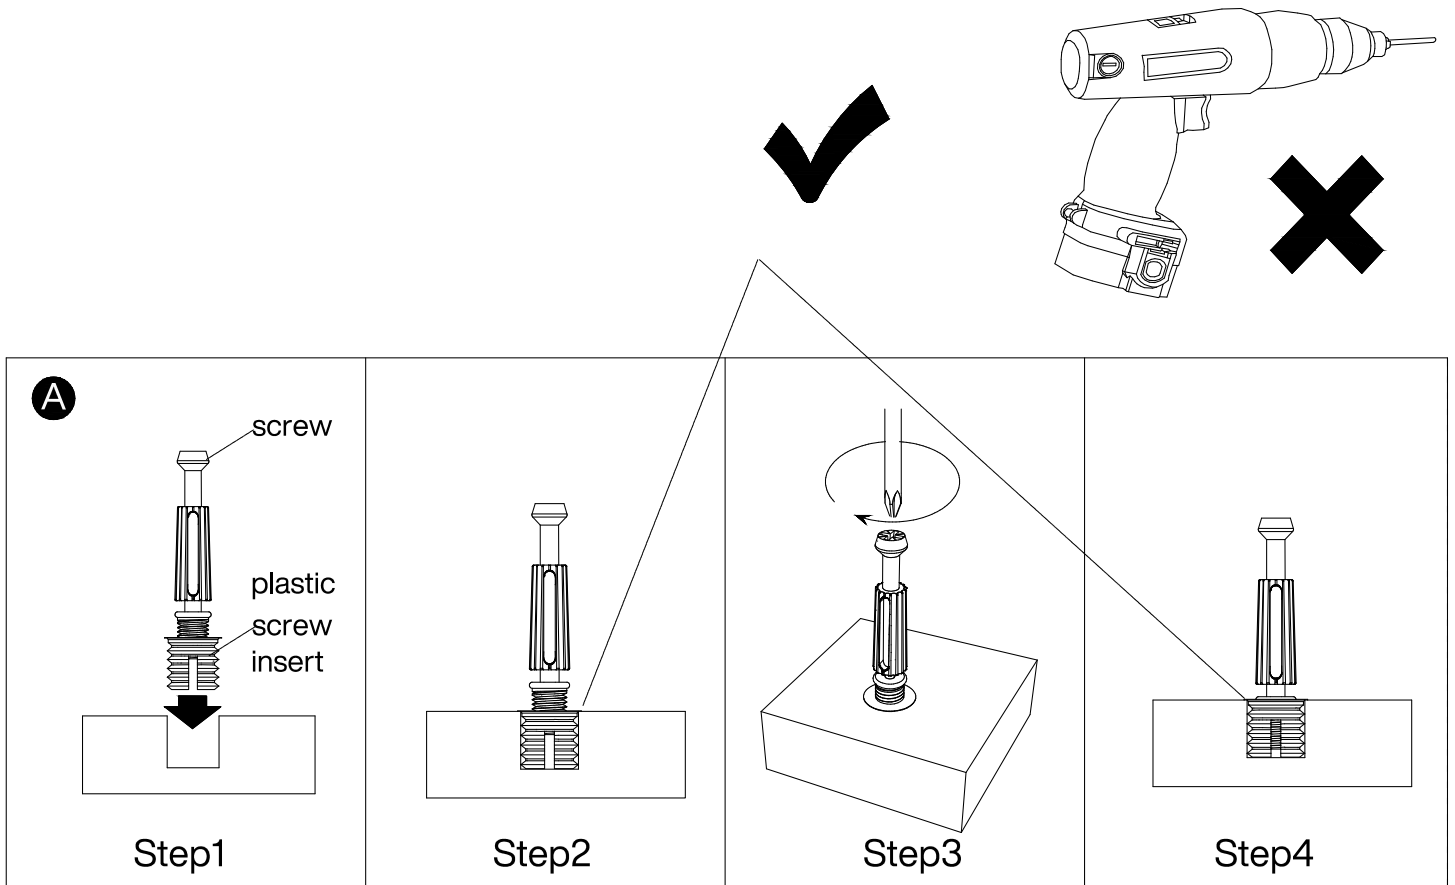

Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

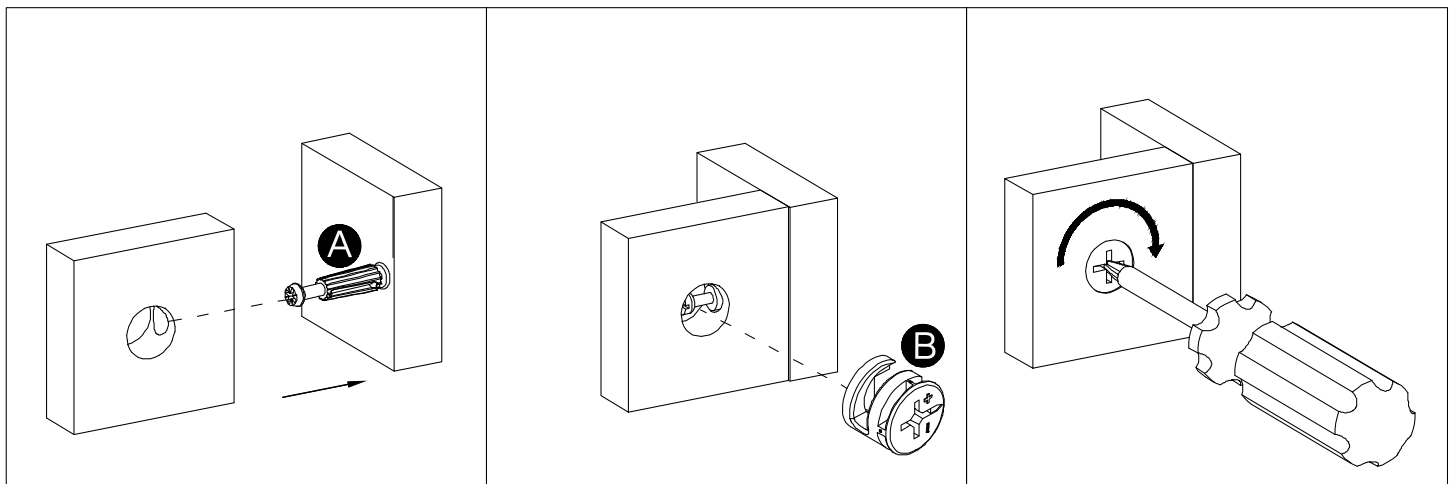


1

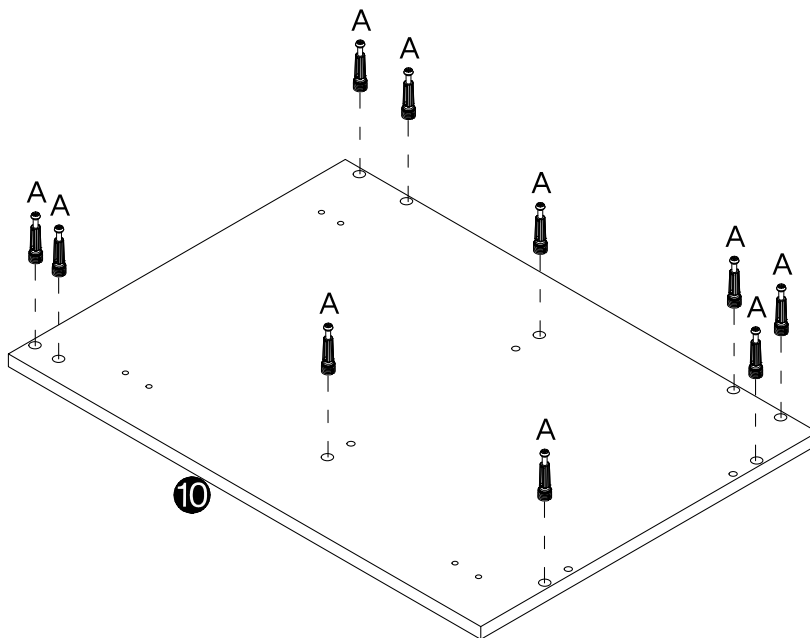


A

M6x40mm
10 pcs

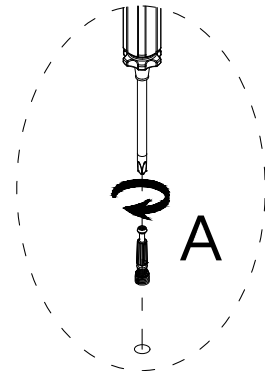


2

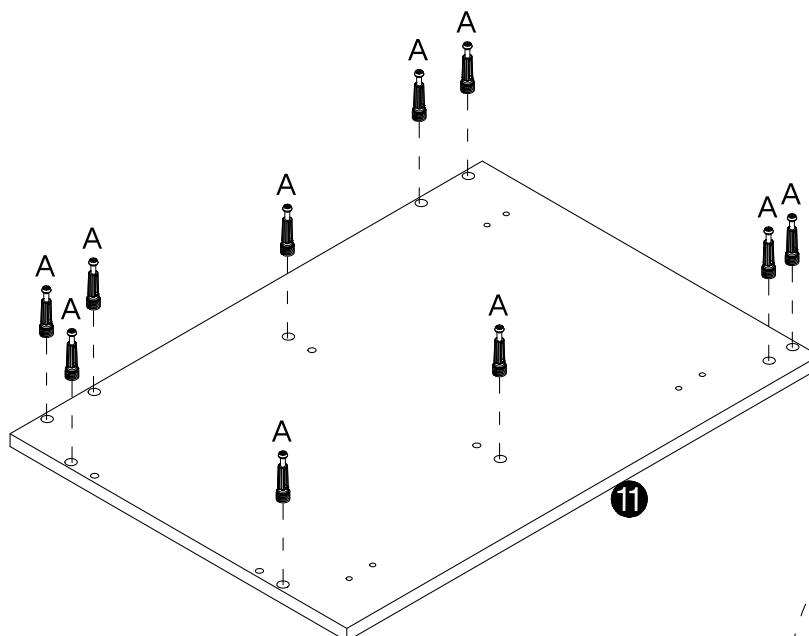


A


M6x40mm
10 pcs

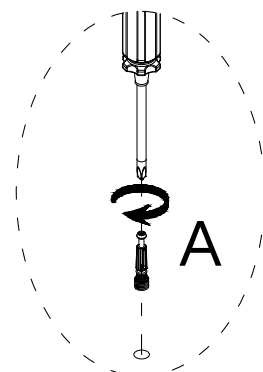

3

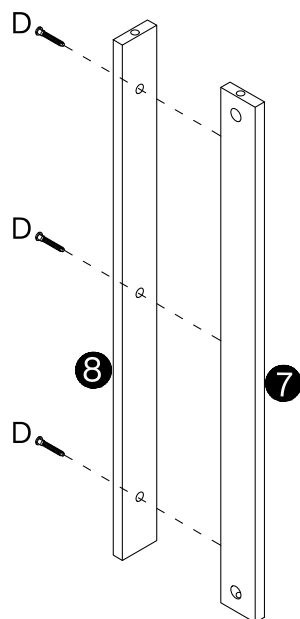


D




Ø7x38mm

3 pcs

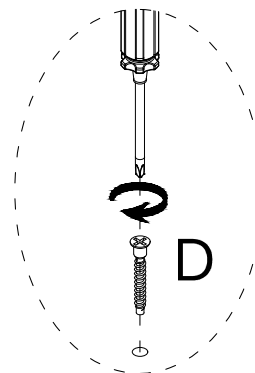

4

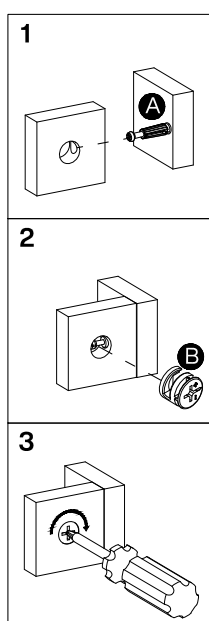


B




Ø15X10 mm


4 pcs

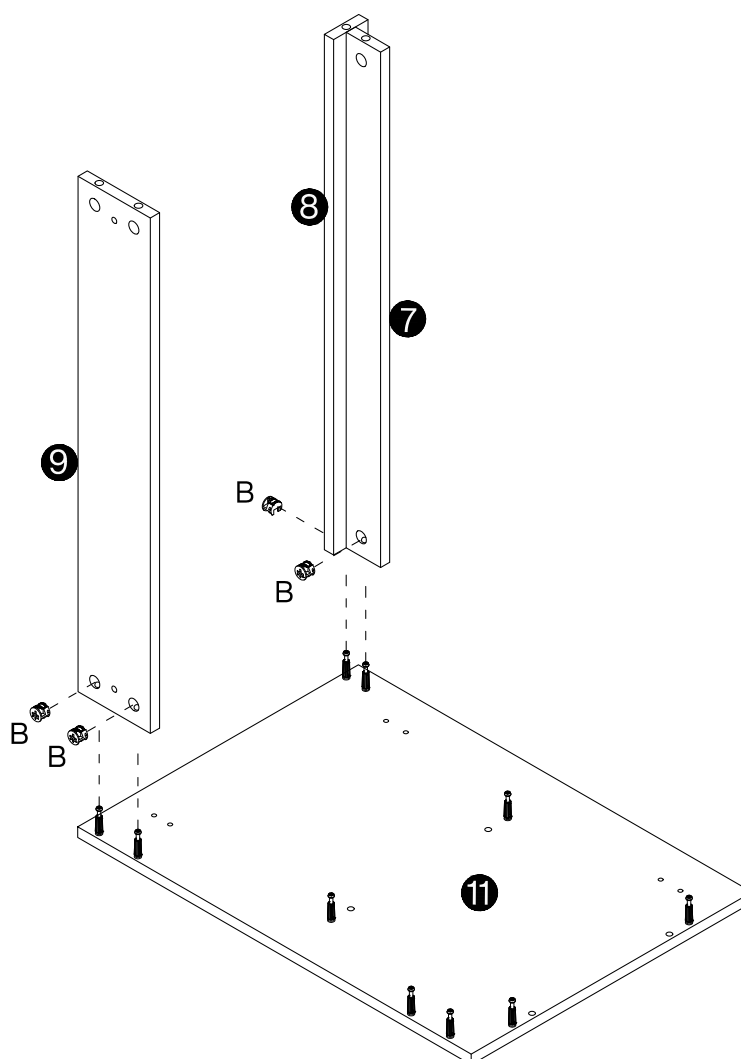


5

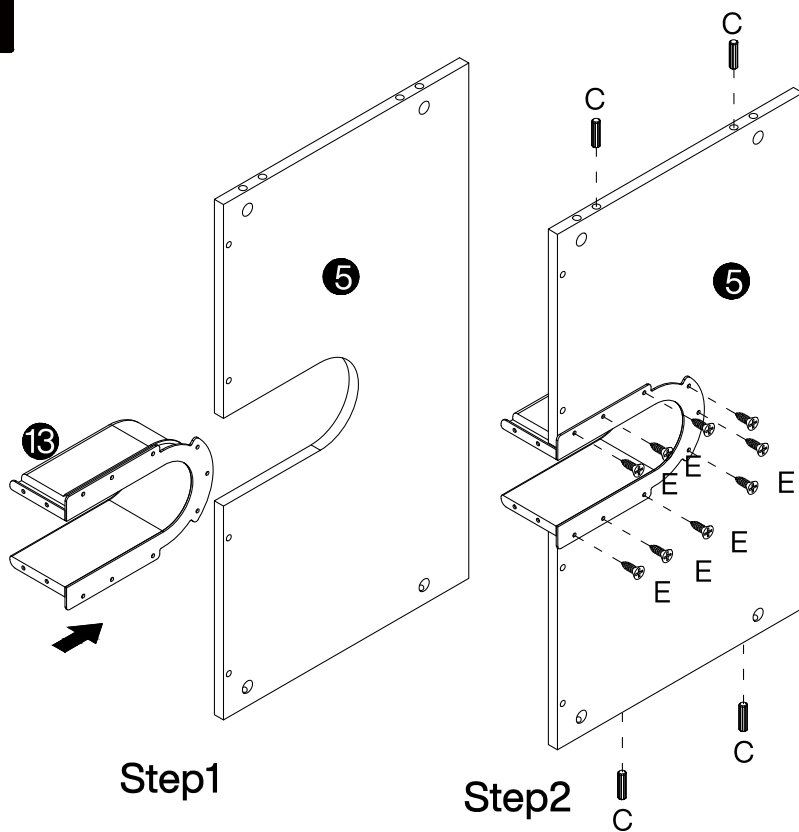




C	E
	
Ø8x30mm	Ø3.5x14mm
4 pcs	9 pcs

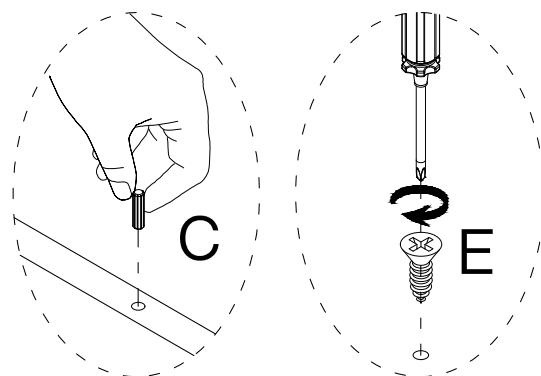



6

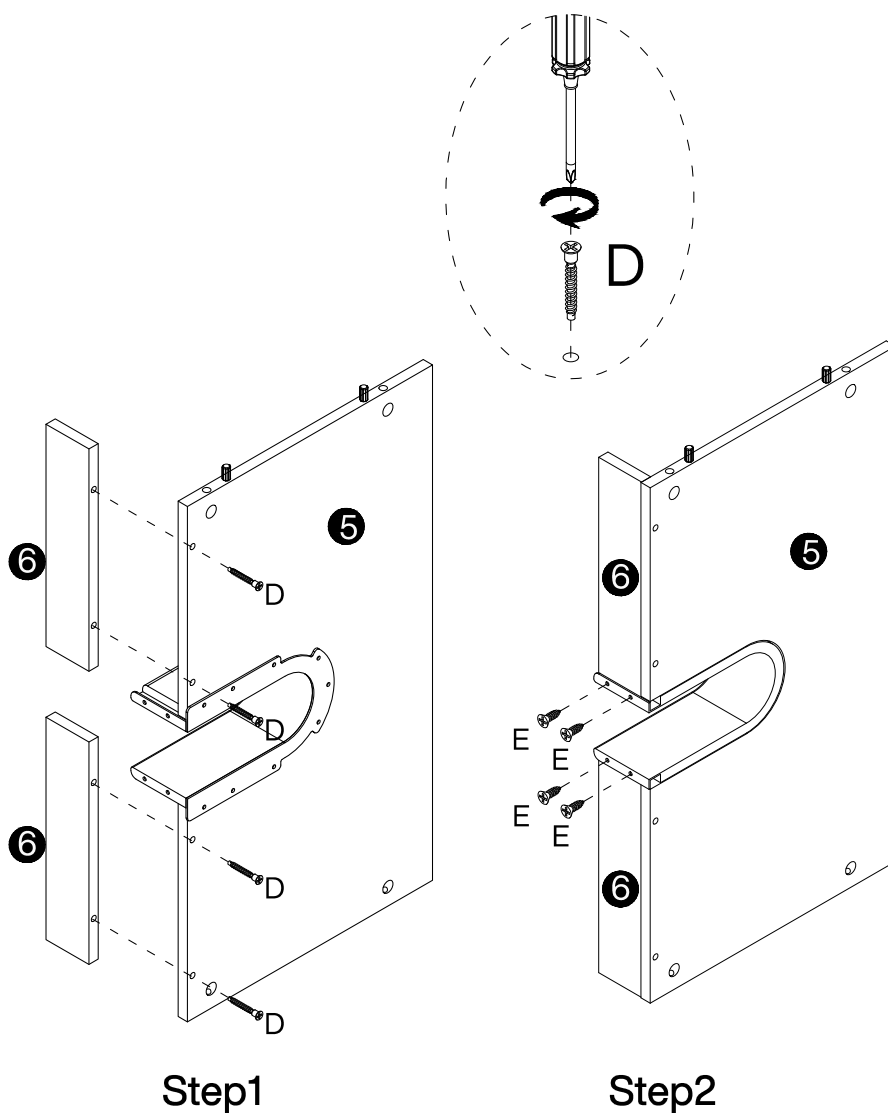

E	D
	
Ø3.5x14mm	Ø7x38mm
4 pcs	4 pcs

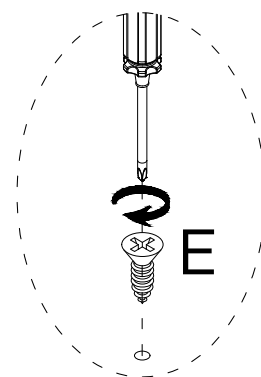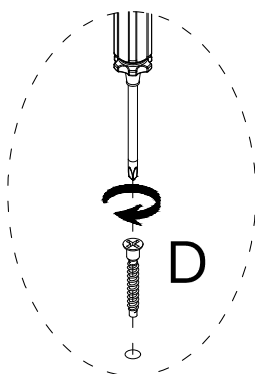




7

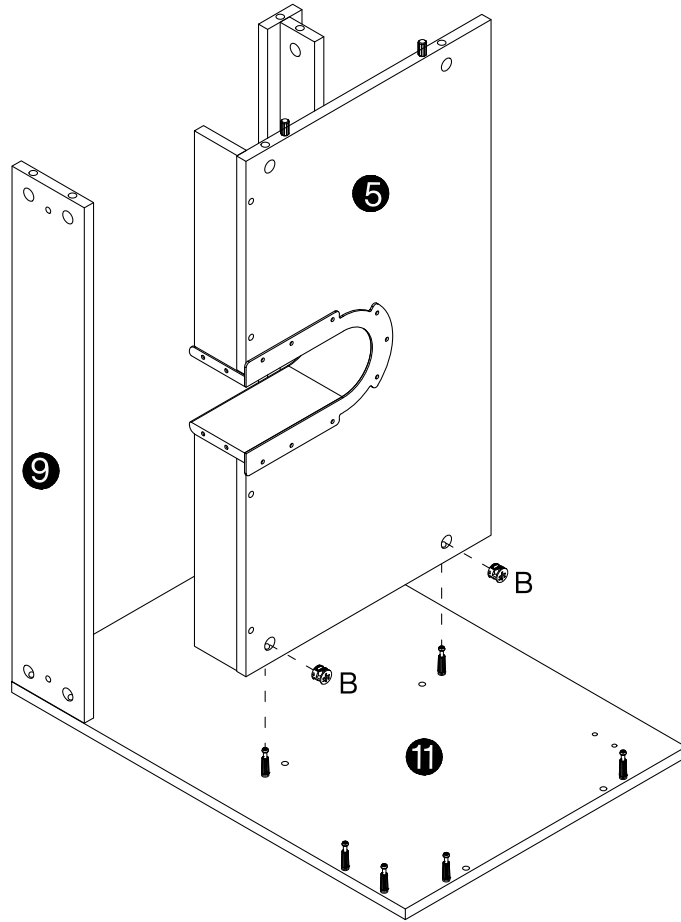
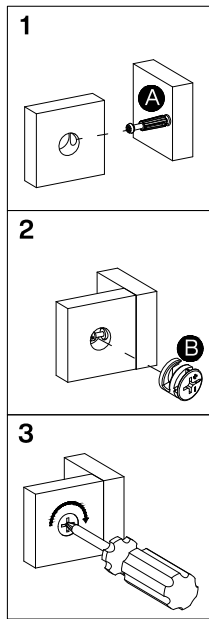


B



Ø15X10 mm
2 pcs

8

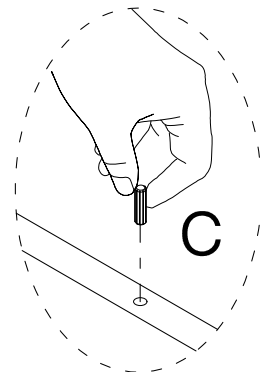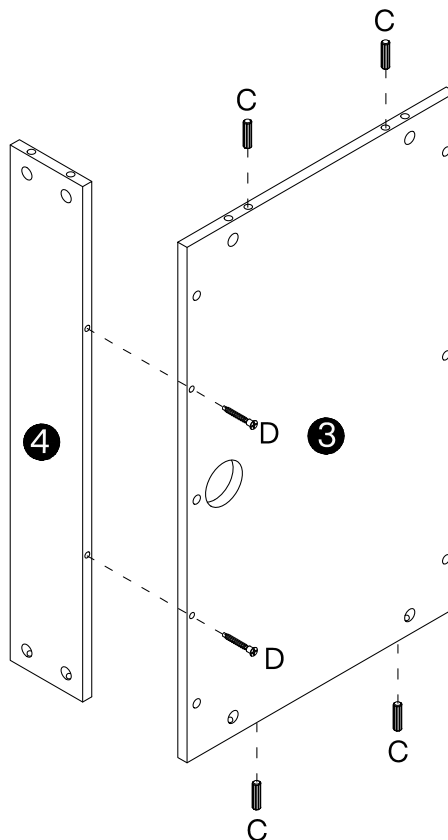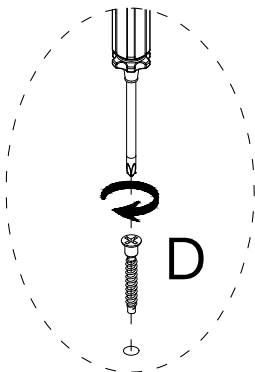

D	C
	
Ø7x38mm	Ø8x30mm
2 pcs	4 pcs



9

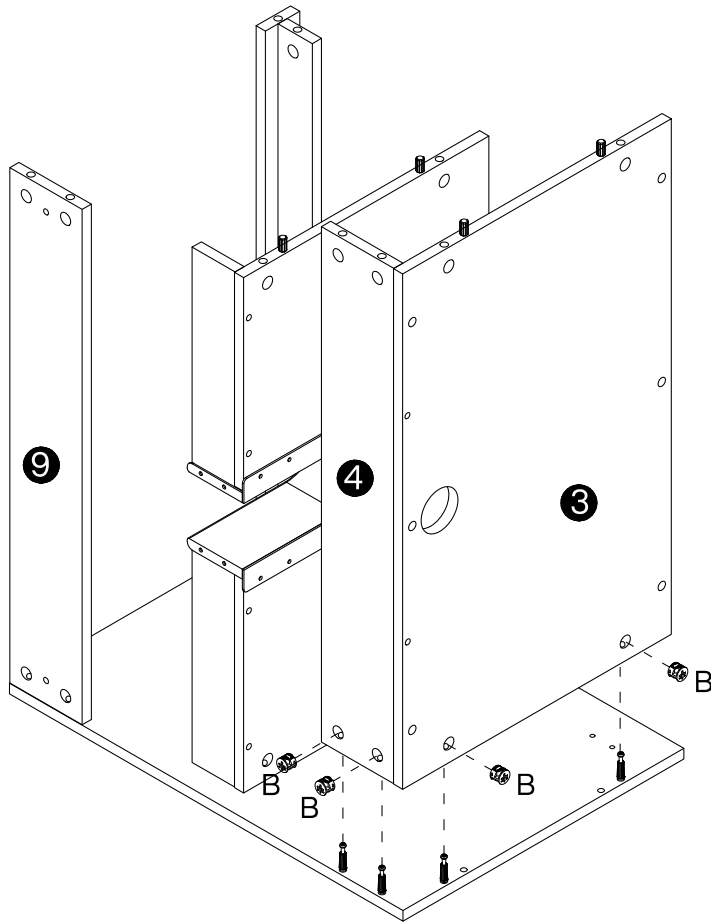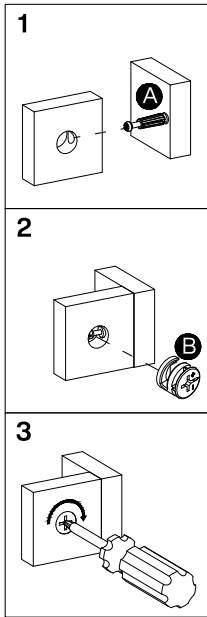

B

Ø15X10 mm
4 pcs


10

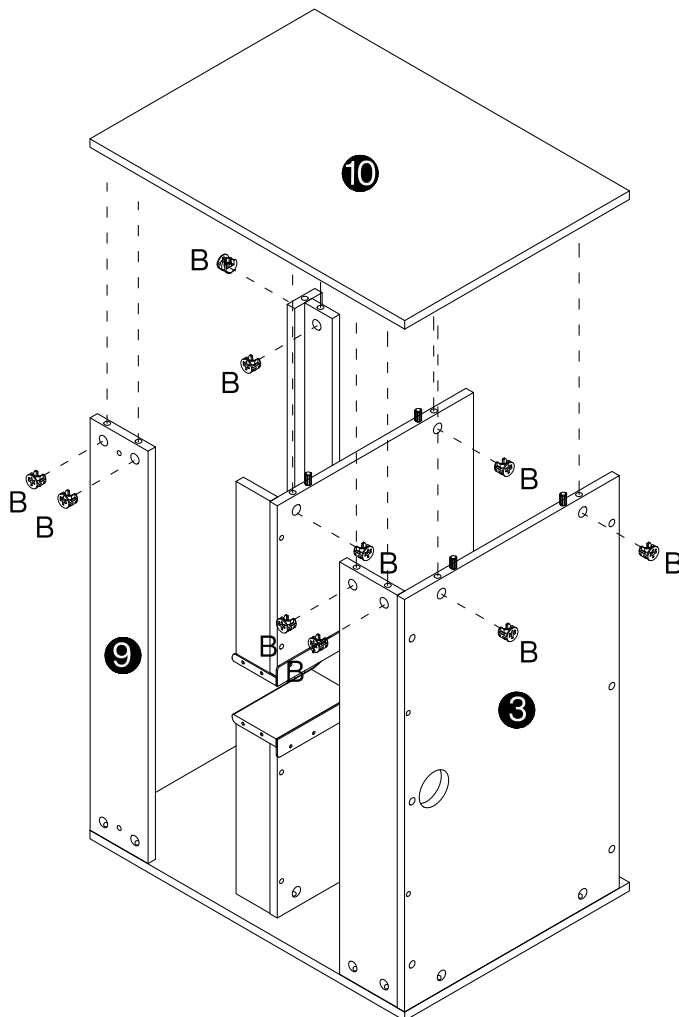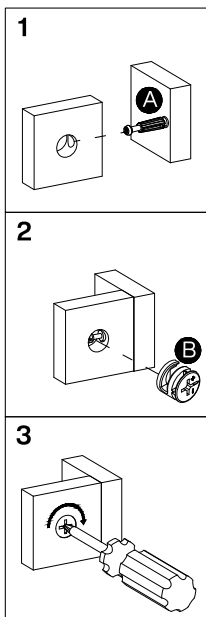

B


Ø15X10 mm
10 pcs

11

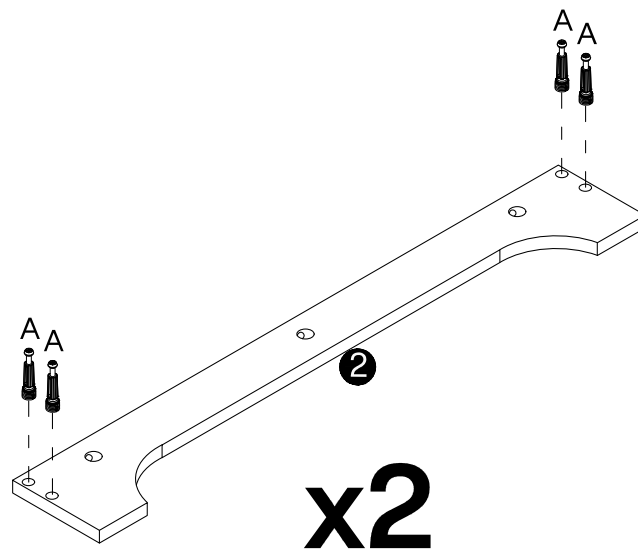


A

M6x40mm
8 pcs

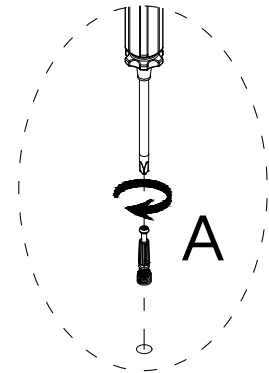


12


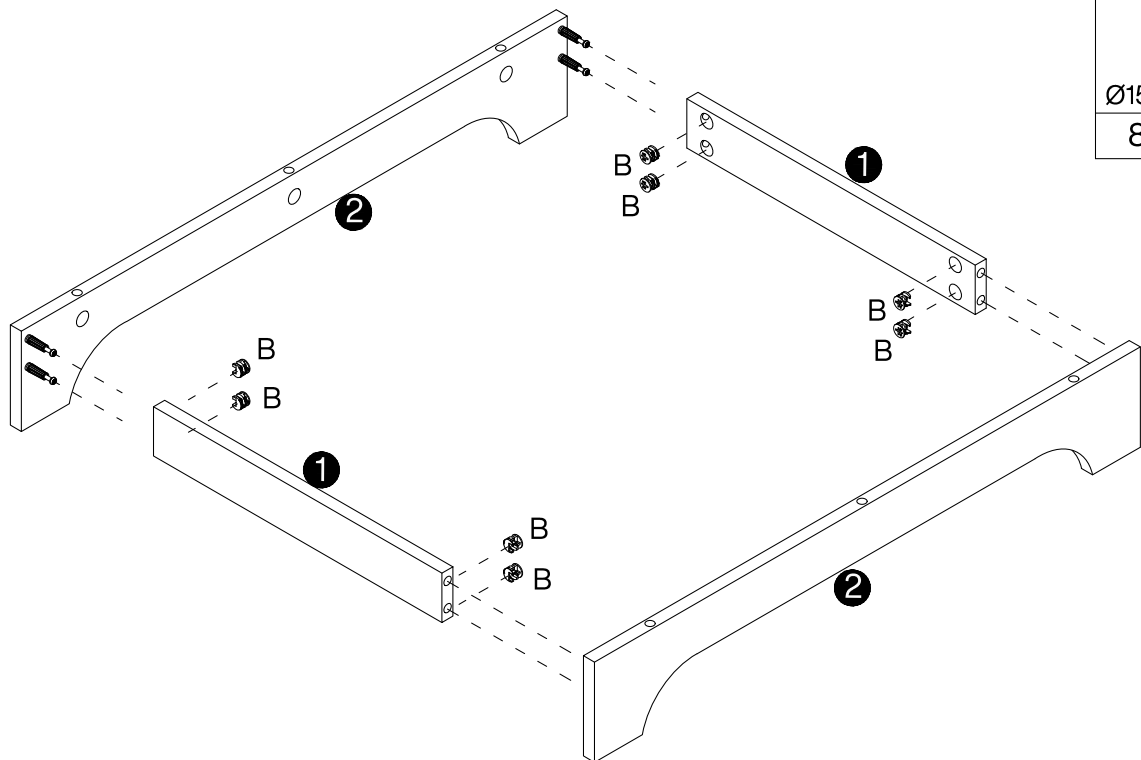


B

Ø15X10 mm
8 pcs

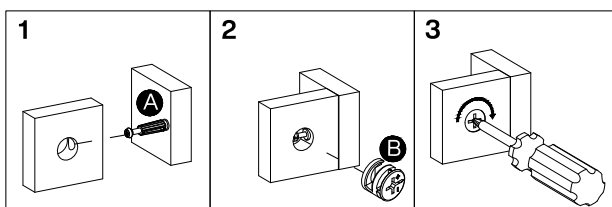

13

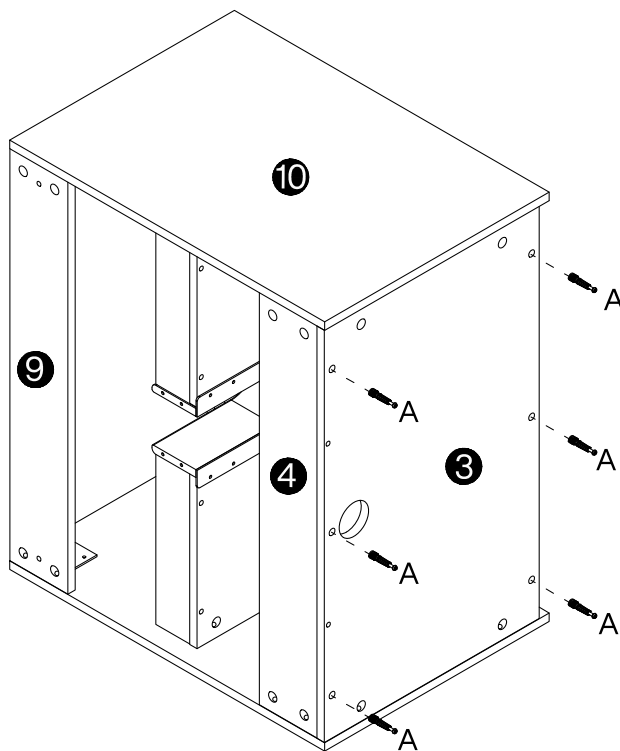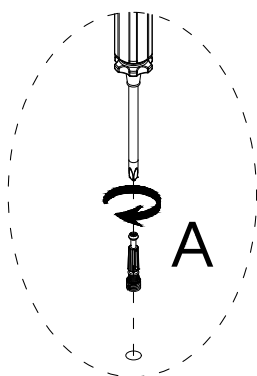



A



M6x40mm

6 pcs

14

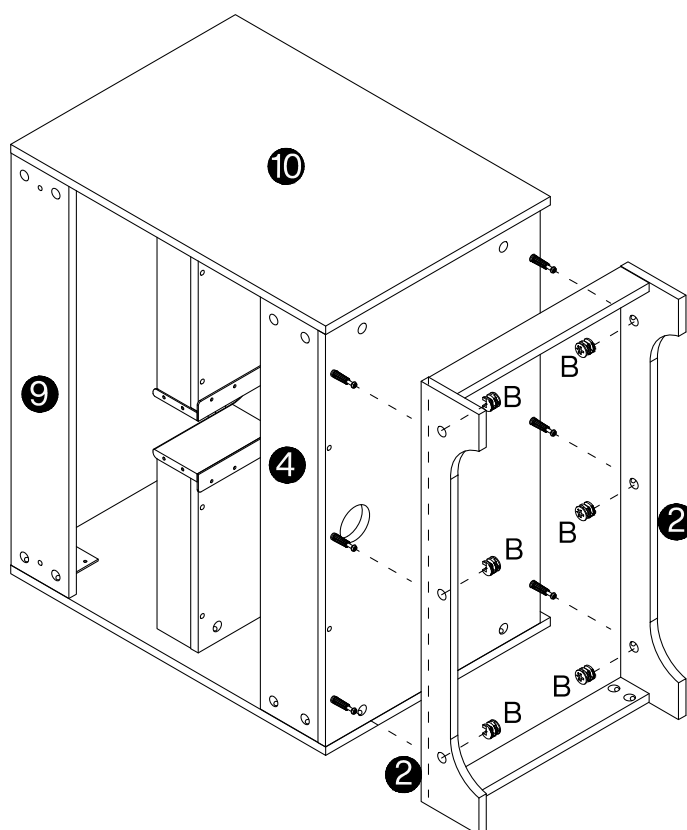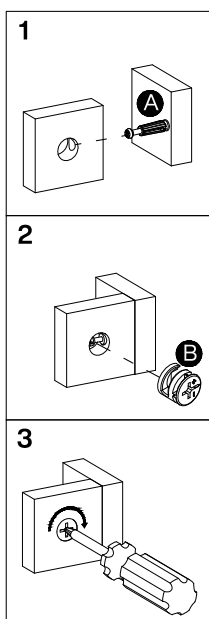



B



Ø15X10 mm

6 pcs


15

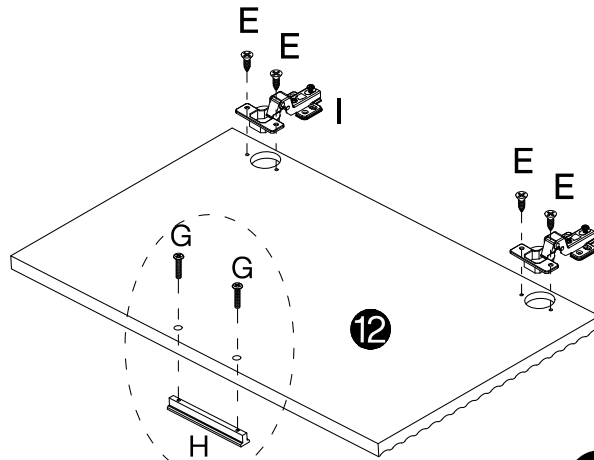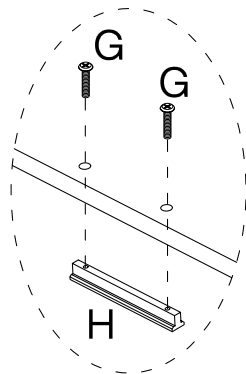

x2

G





Ø4x22mm
4 pcs

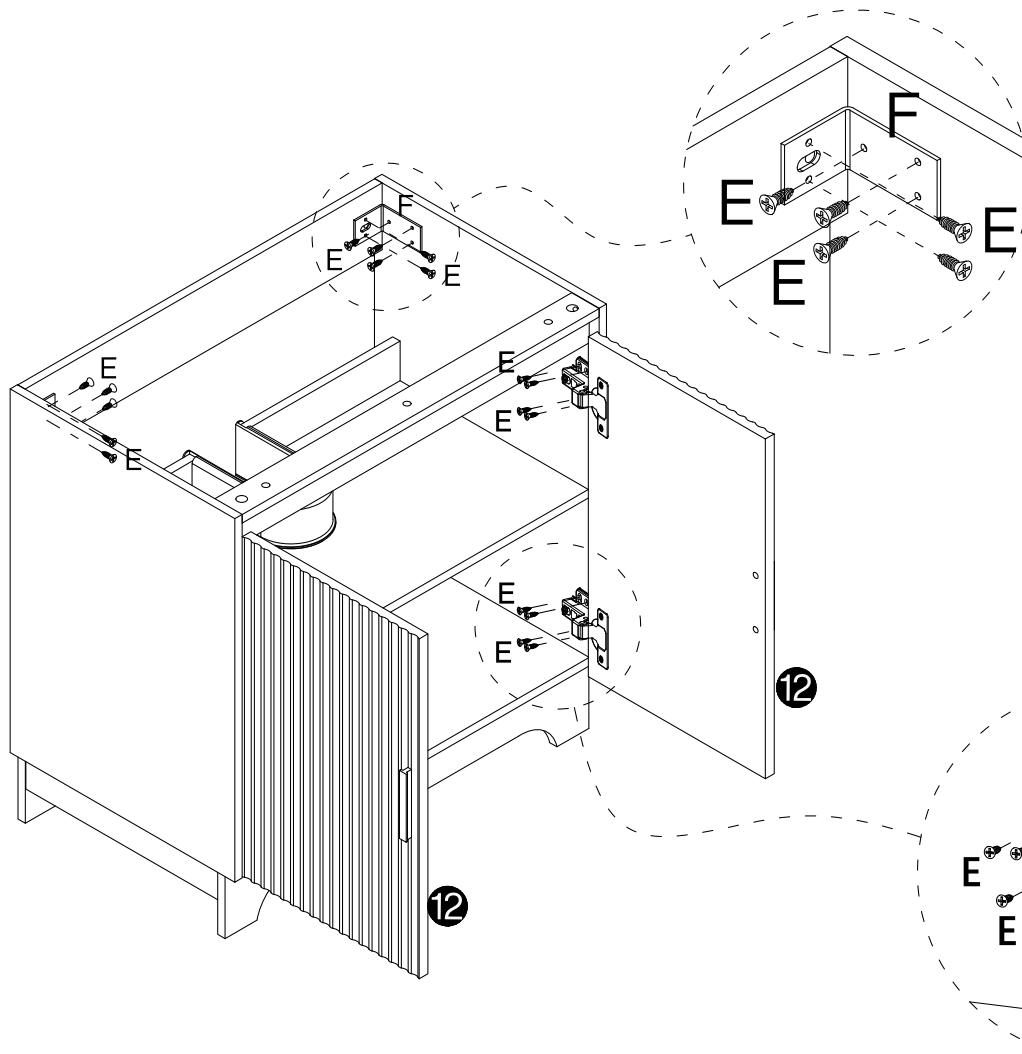

F





2 pcs

P-13

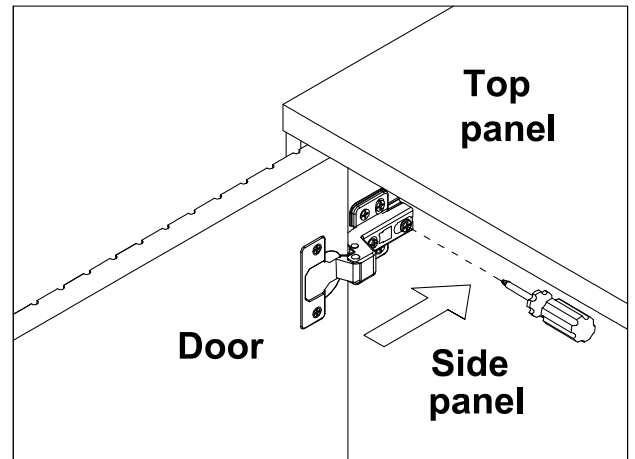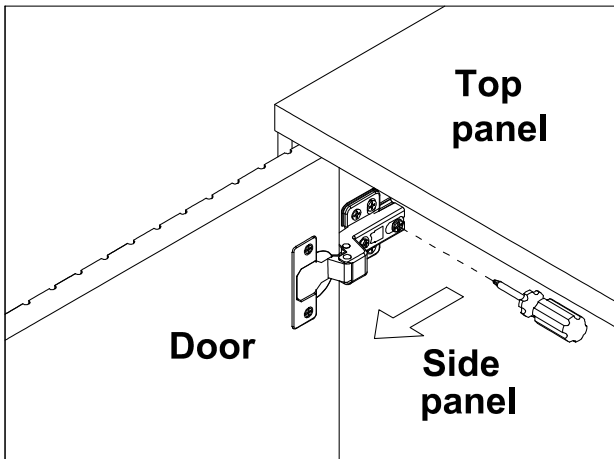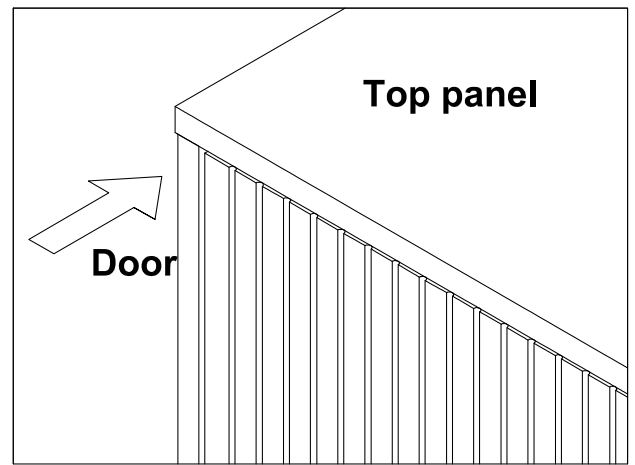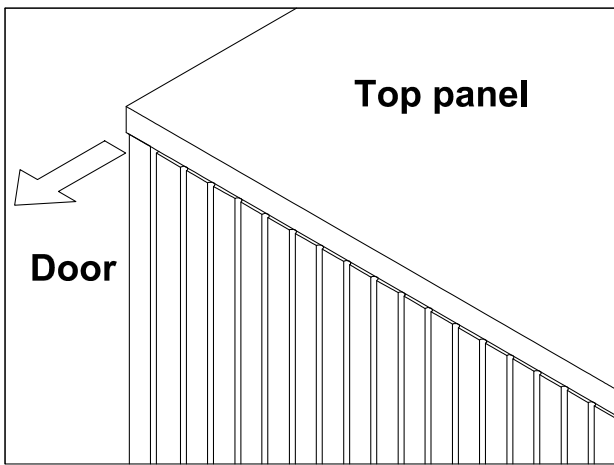


Pull the hinge forward a little.

Push the hinge back a little.

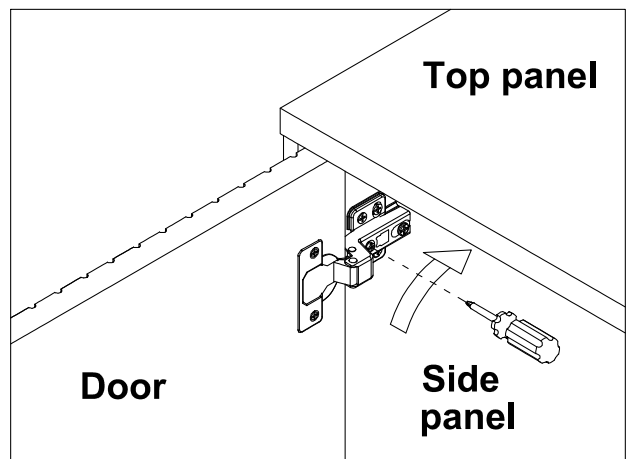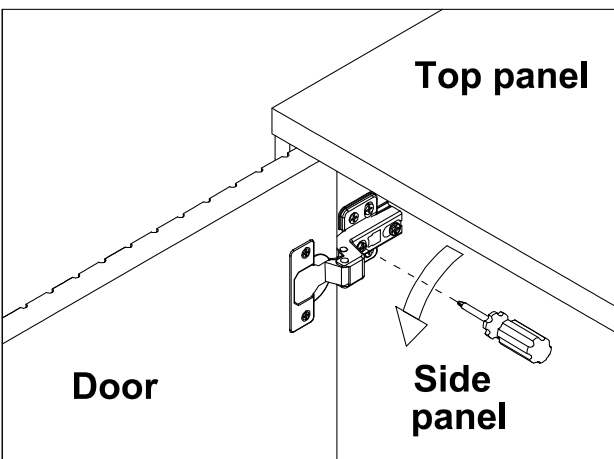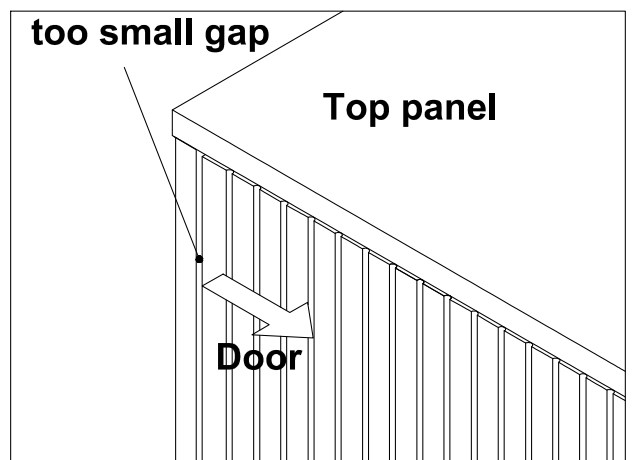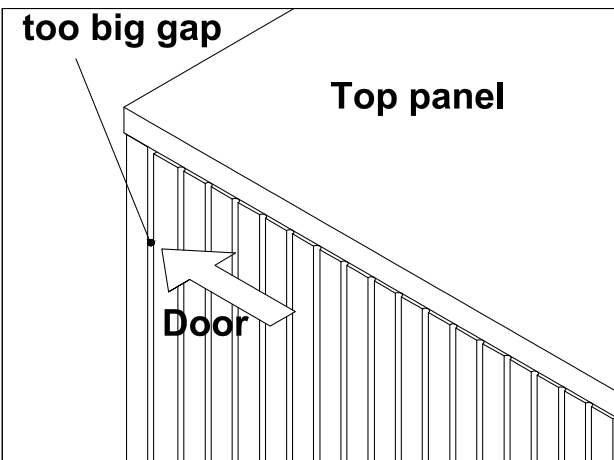


Turn the screw clockwise a little as shown to make the gap smaller


Turn the screw counterclockwise a little as shown to make the gap bigger

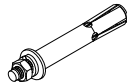J

2 pcs

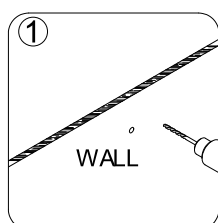
Install the tipping restraint hardware

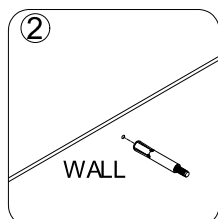

1. Drill two Ø10 holes on the wall



2. Put two anchors in the holes

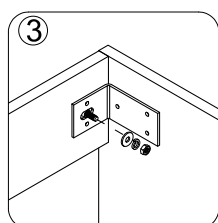

3. Fix the device on the wall by the long screws

