

ASSEMBLY INSTRUCTIONS

GROUP NO.:V509YYL20200403OF

ITEM NO.: WF194552AAE

Read instructions carefully prior to assembly.

Thank you for purchasing this quality product. Check carefully for small parts which may come loose during shipment. Remove all components from pack and place top down on soft surface such as carpet or cloth to prevent scratching the finish. Identify and count all parts as specified below.

It is recommended to use two or more person during the assembly process.

PARTS LIST:			
NO.	DESCRIPTION	SKETCH	QTY
A	Back		1 PC
B	Arm (L / R)		2 PCS
C	Front Rail		1 PC
D	Back Rail		1 PC
E	Seat Decking		1 PC
F	Back Pillow		3 PCS
G	Pillow		2 PCS
H	Seat Cushion		2 PCS
I	Long Seat Cushion		1 PC
J	Plastic Bun Foot		8 PCS
K	Ottoman Frame		1 PC


HARDWARE LIST:				
NO.	DESCRIPTION	SIZE	SKETCH	QTY
1	Bolt	#5/16" * 50 mm		10 PCS
2	Spring Washer	#5/16" * 12 mm		10 PCS
3	Flat Washer	#5/16" * 19 mm		10 PCS
4	Allen Key	100 * 23 * 4 mm		1 PC

Important note:


1. Carefully open and break seal of bag for backrest and seat cushions. Please let cushions fully expand for 24 HRs before putting seat covers on seat cushions.
2. After expansion insert seat cushion into seat cover and carefully zip closed.

M	Sofa Dust Cover		1 PC
N	Ottoman Dust Cover		1 PC

Step 1: Attach the Front Rail (C) and the Back Rail (D) to the Seat Decking (E) by using the Flat Washer (3), the Spring Washer (2), the Bolt (1) and tighten with the Allen Key (4).

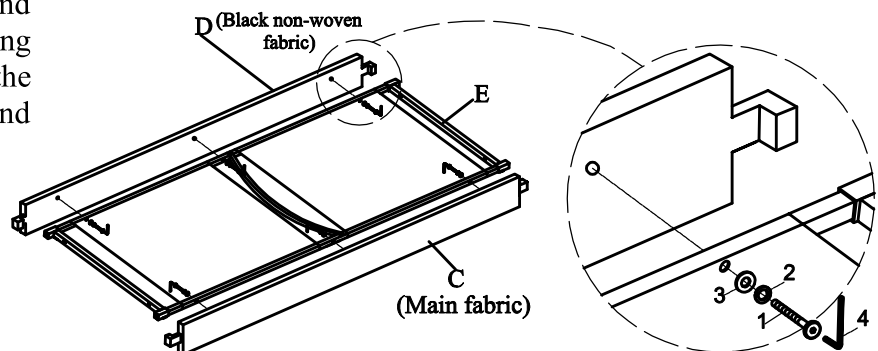

Step 2: Insert and push down the Assembly in Step 1 to the Left, Right Arm (B) at the hole on the Arms. Then securing this Assembly to the Arms by using the Flat Washer (3), Spring Washer (2), Bolt (1) and tighten with Allen Key (4).

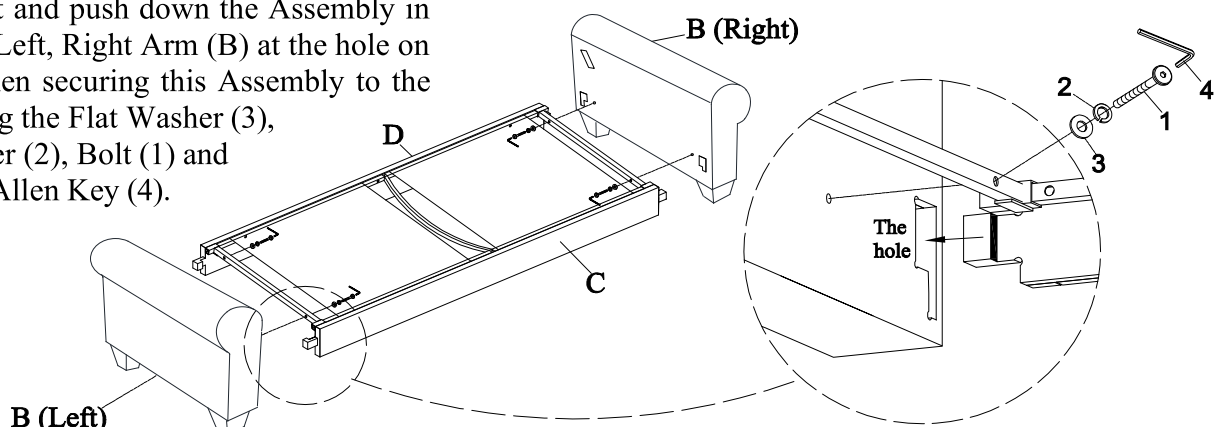


ASSEMBLY INSTRUVTIONS

GROUP NO.:V509YYL20200403OF


ITEM NO.: WF194552AAE

Step 3: - Turn up the Assembly from Step 2 and the Ottoman Frame (K), stick the Sofa Dust Cover (M), the Ottoman Dust Cover (N) to the Sofa bottom and the Ottoman Frame bottom as the picture shown.

- Then tighten the Plastic Bun Foot (J) to this Sofa & Ottoman Frame by manually turning until when it is correct position.

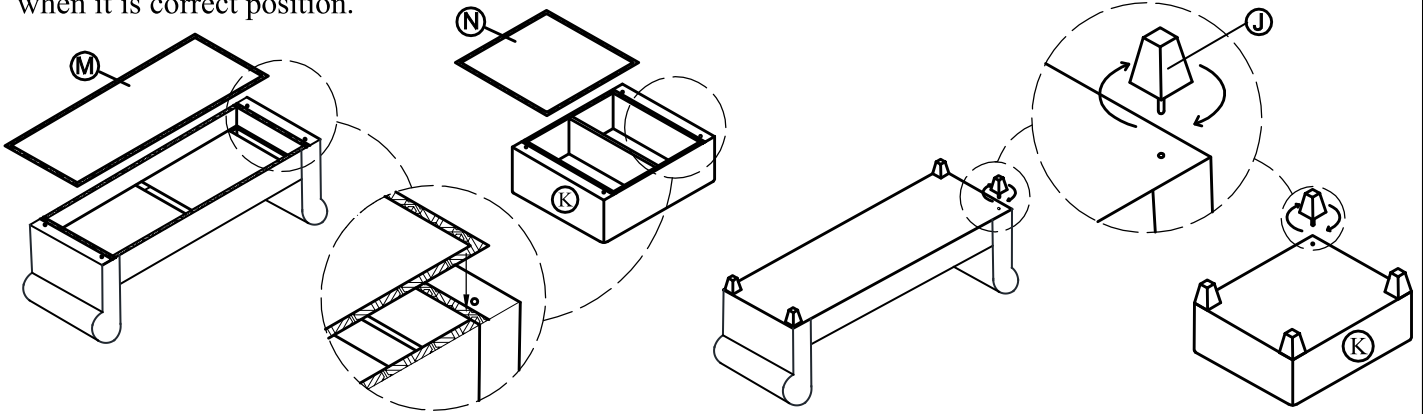

Step 4: Turn the Sofa to upright position, attach the Back (A) to 2 Arms (B) by pushing from the top down into the metal bracket position. Then push down the flap on the back to the bottom and stick the Velcro on the flap to the bottom of the Seat Frame.

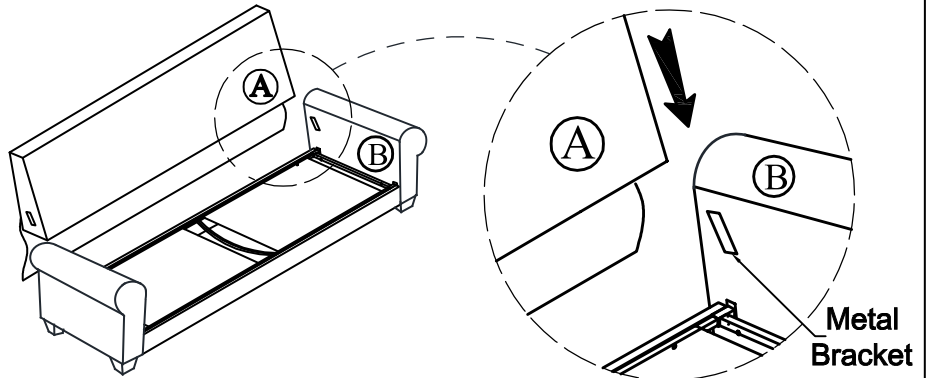

Step 5: Place the Seat Cushion (I)&(H) to the position and then place Back Pillow (F)&(G) to the position as the picture shown. Assembly product is completed.

