



ASSEMBLY INSTRUCTIONS

FULL SIZE FLOOR BED WITH SIDE STORAGE AND BOOKSHELF





















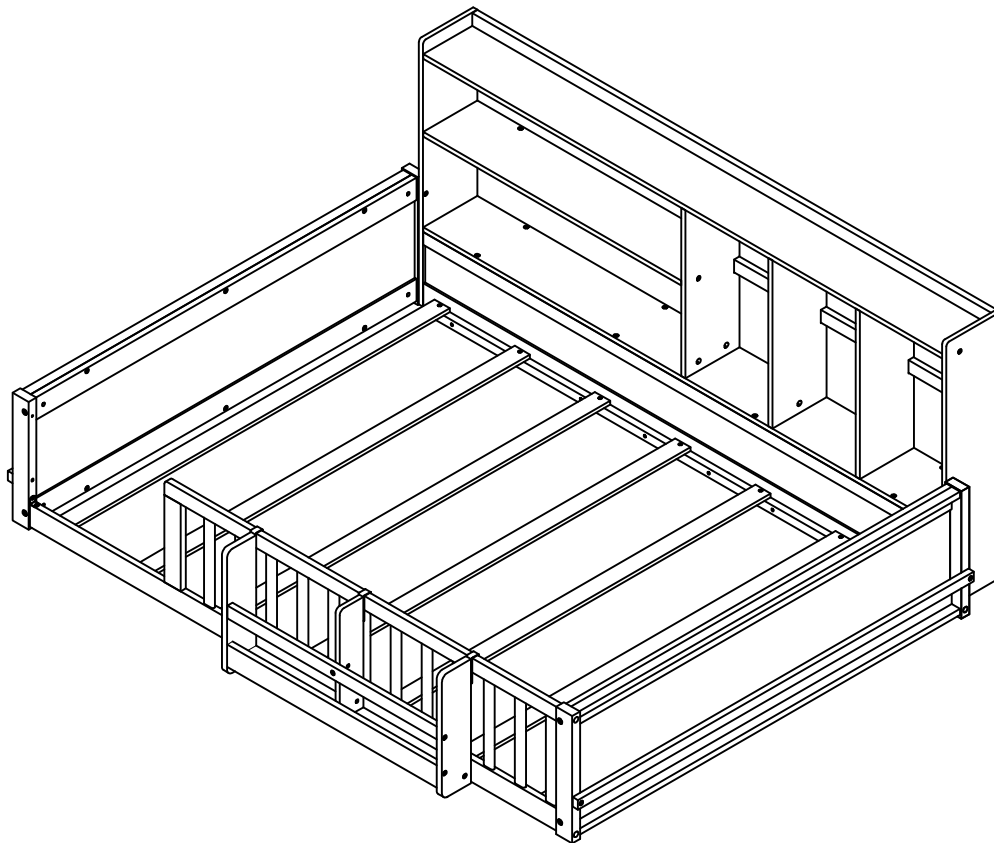


YX5553-F
(W697P495648-W697P495649-W697P495650)








Detail View

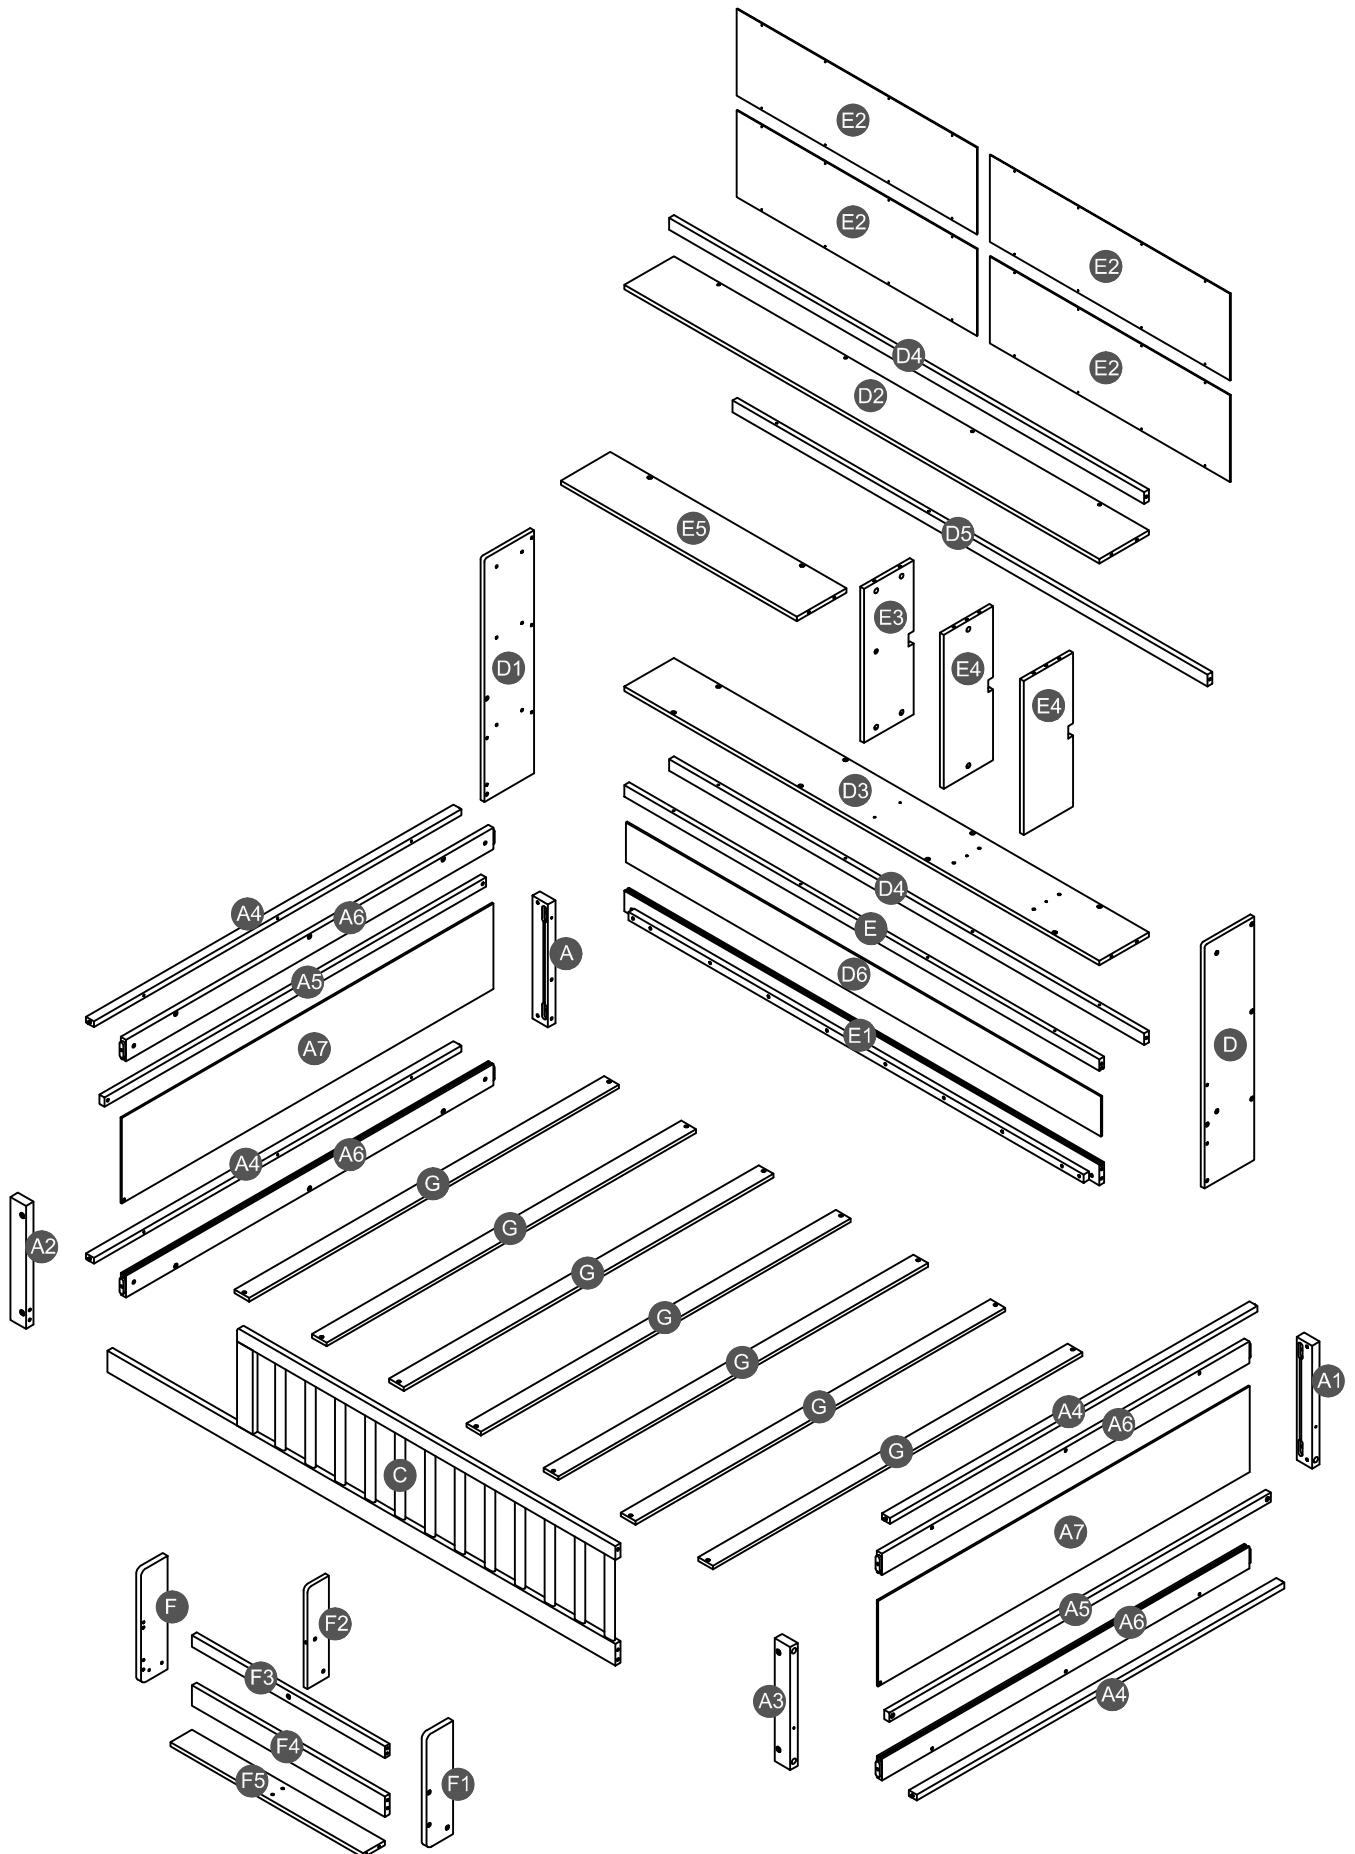



Part List

A  Leg (left back)-1pc	A1  Leg (right back)-1pc	A2  Leg (left front)-1pc
A3  Leg (right front)-1pc	A4  Horizontal bar HB/FB - 4pcs	A5  Mid horizontal bar HB/FB - 2pcs
A6  Horizontal bar HB/FB - 4pcs	A7  Side panel HB/FB - 2pcs	C  Guard rail (front)-1pc
D  Side panel (right)-1pc	D1  Side panel (left)-1pc	D2  Top panel -1pc
D3  Shelf panel -1pc	D4  Horizontal bar - 2pcs	D5  Mid horizontal bar - 1pc
D6  Side panel (front)-1pc	E  Horizontal bar (front) -1pc	E1  Side rail -1pc
E2  Back panel - 4pcs	E3  Mid panel (left) - 1pc	E4  Mid panel (right) - 2pcs
E5  Shelf panel -1pc	F  Side left -1pc	F1  Side right -1pc
F2  Mid panel -1pc	F3  Upper horizontal bar -1pc	F4  Lower horizontal bar -1pc
F5  Bottom panel -1pc	G  Slats - 7pcs	

Hardware List

1	 Ø8*30mm Wood dowel (27pcs)	2	 (Ø15)1/4"*100mm Hex-Head bolts (5pcs)	3	 (Ø12)1/4"*70mm Hex-Head bolts (8pcs)
4	 (Ø12)1/4"*60mm Hex-Head bolts (22pcs)	5	 1/4"*15 (9.5mm) Horizontal-Hole bolts(35pcs)	6	 (Ø12)1/4"*40mm Hex-Head screws (32pcs)
7	 Ø4*25mm Wood screws (14pcs)	8	 Ø3.5*15mm Wood screws (11pcs)	9	 Ø3*12mm Wood screws (32pcs)
10	 21*21*17*1.7mm Metal bracket (1pc)	11	 81*26*21 (2.5mm) Hooks (3pcs)	12	 Ø7"*35mm Cam lock (8pcs)
13	 Ø14*9mm Cam lock (8pcs)	14	 (1/4")4.5*58mm Allen key (1pc)		


OPTIONAL TOOLS FOR ASSEMBLY (NOT INCLUDED)



Electric
Screwdriver

PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !


STEP 1:

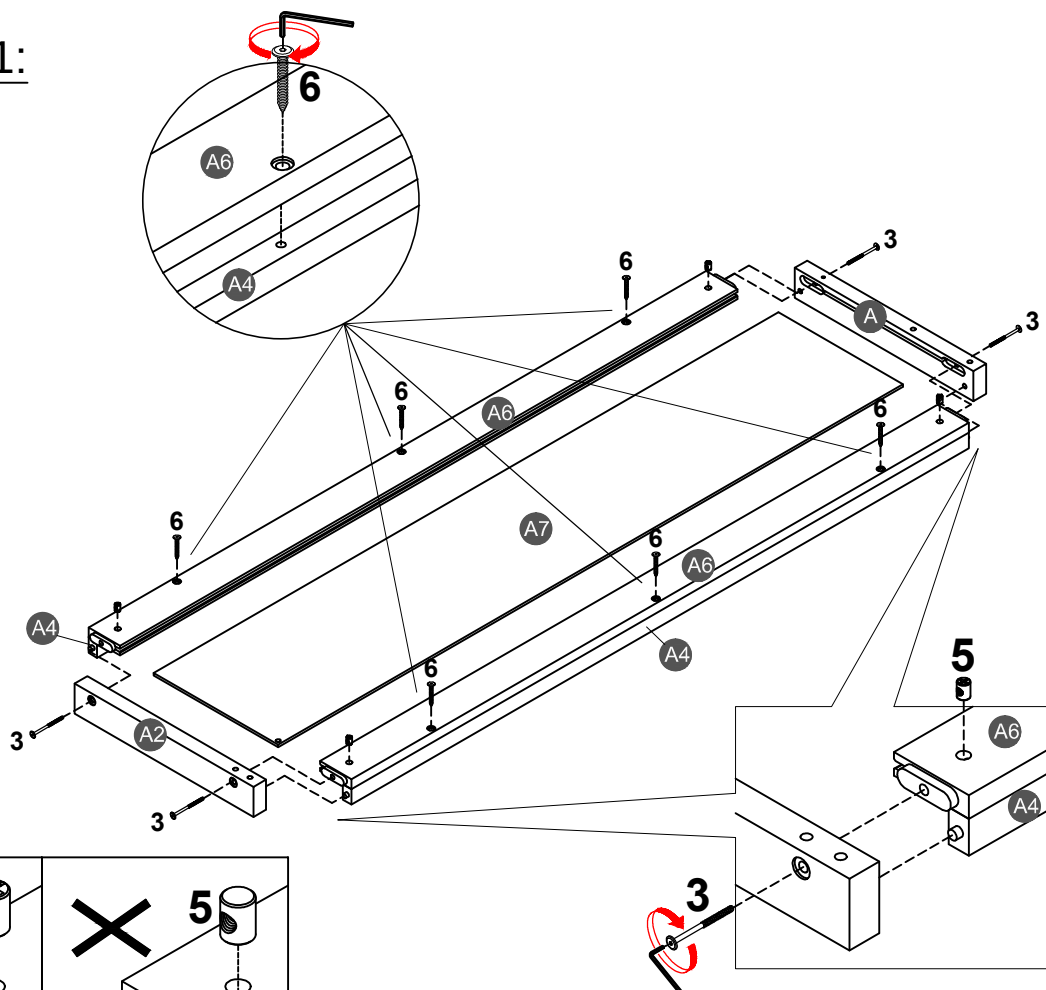

3	
4PCS	
5	
4PCS	
6	
6PCS	


Note: Part 5 will face up with the "x" mark on it, otherwise it cannot be tightened

STEP 2:

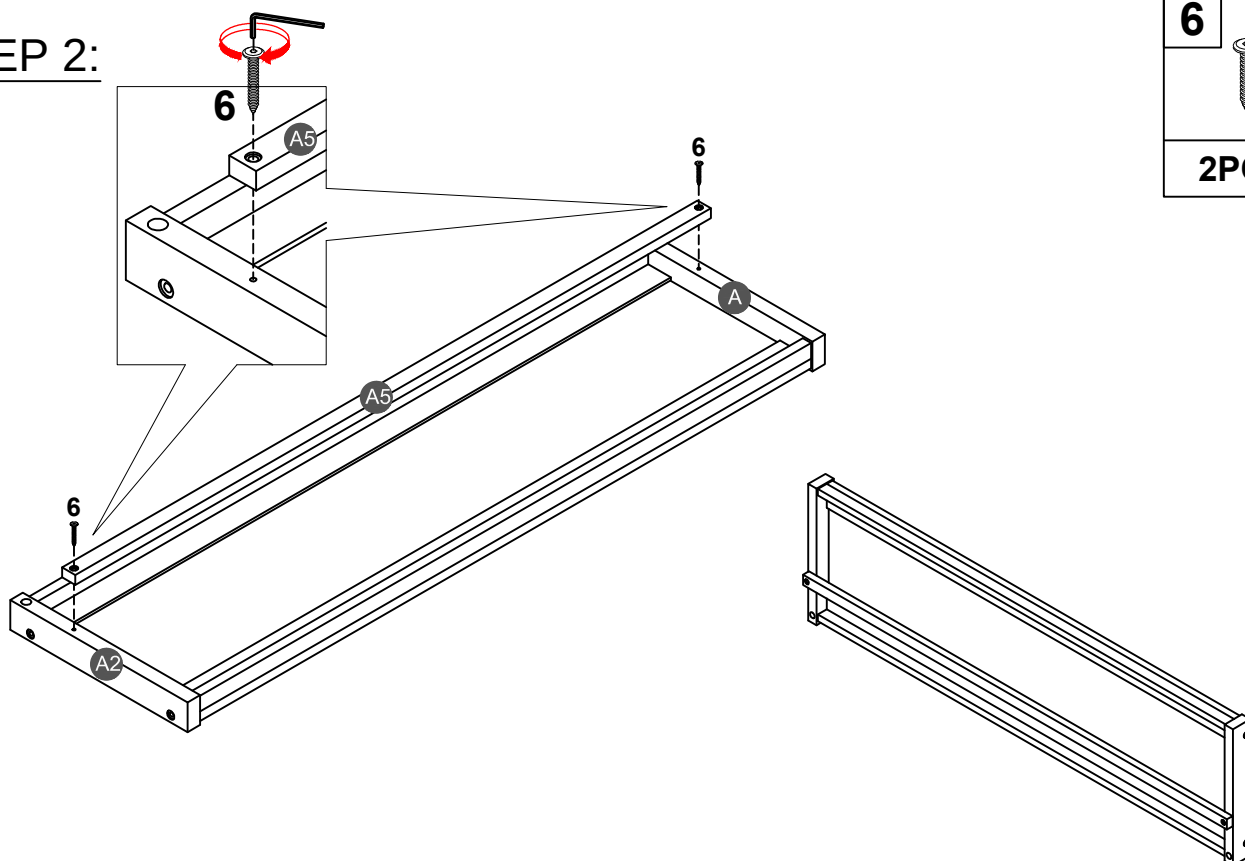

6	
2PCS	

STEP 3:

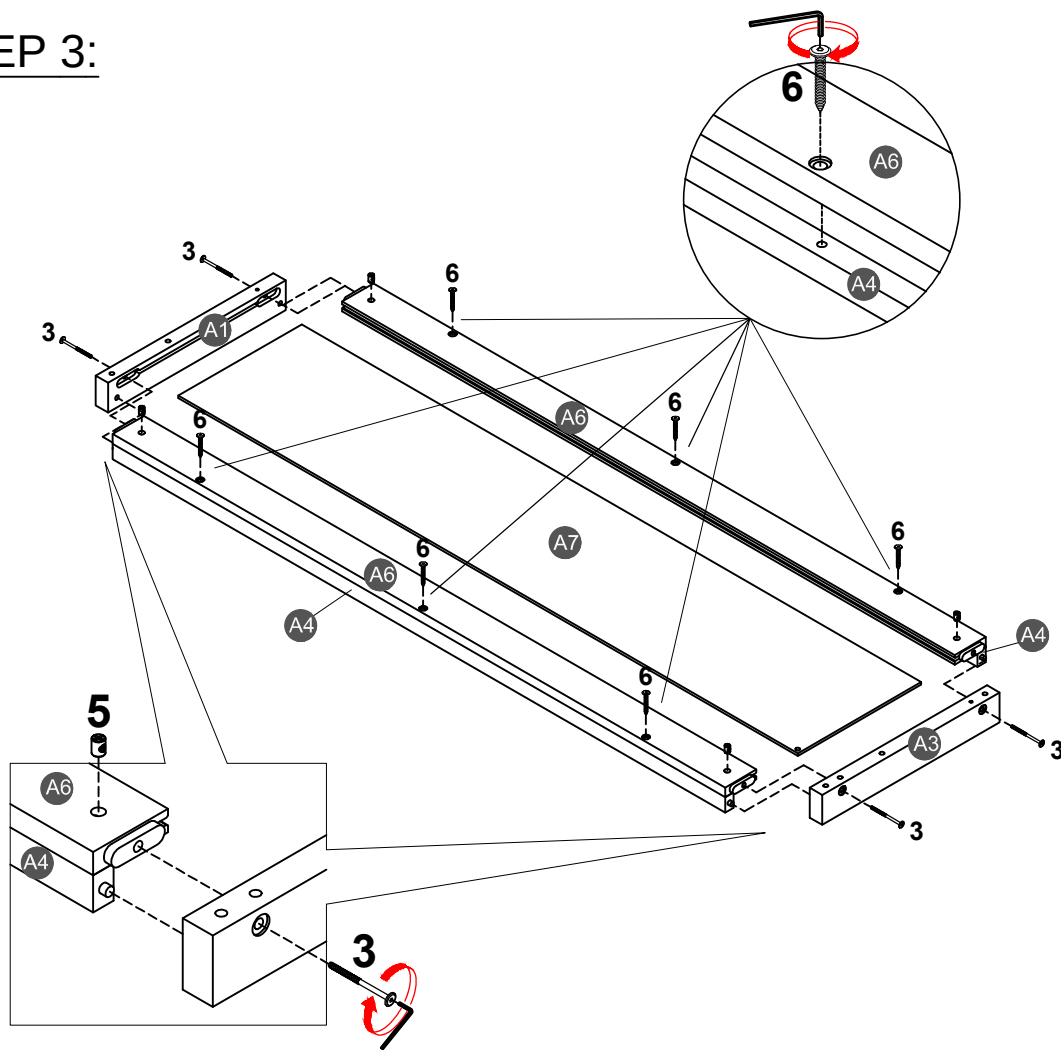

3



4PCS

5




4PCS

6



6PCS

STEP 4:

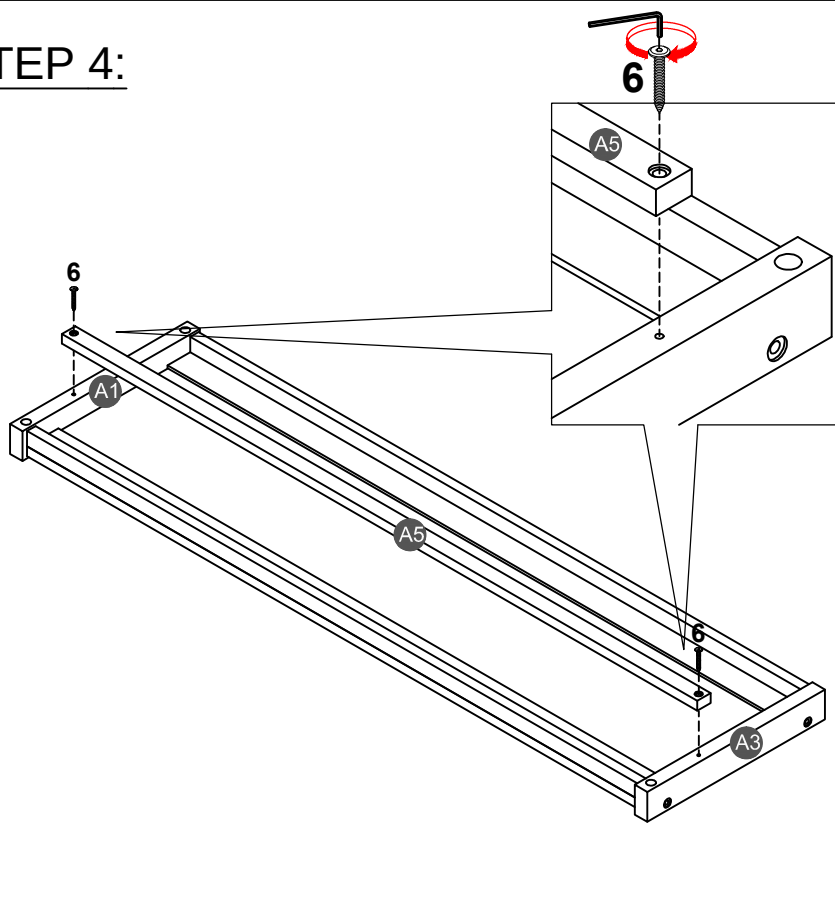

6




2PCS

STEP 5:

6




8PCS


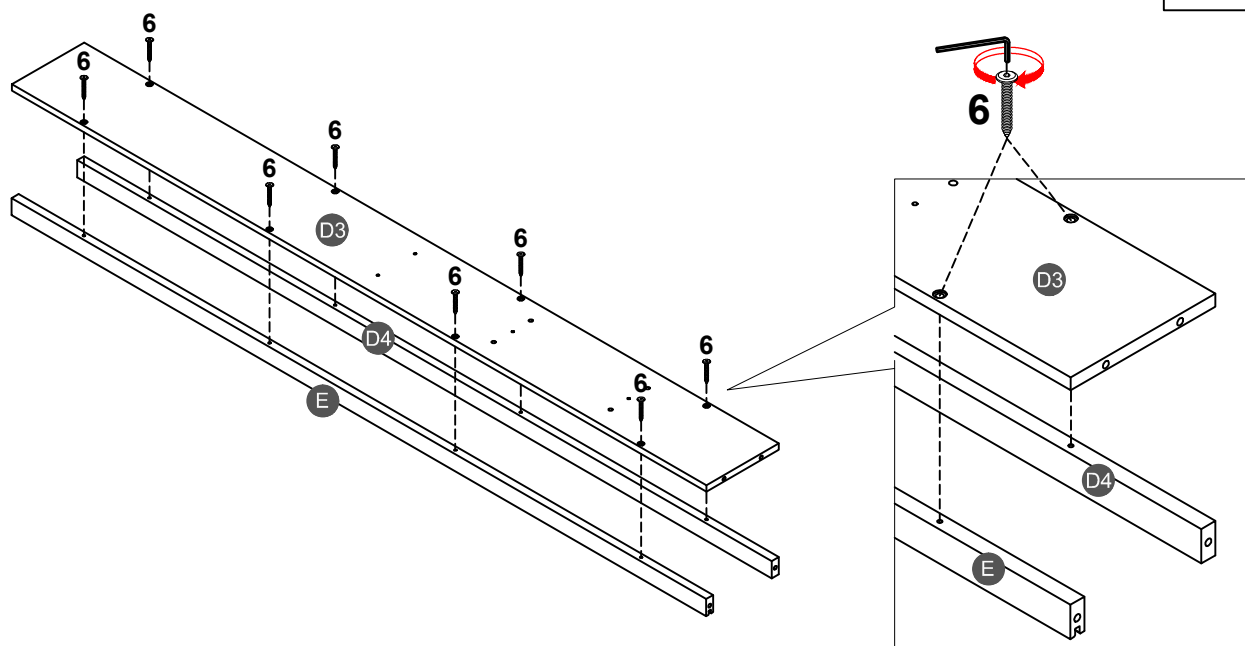


STEP 6:


12



4PCS

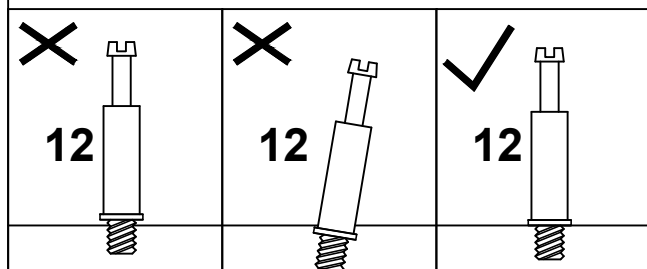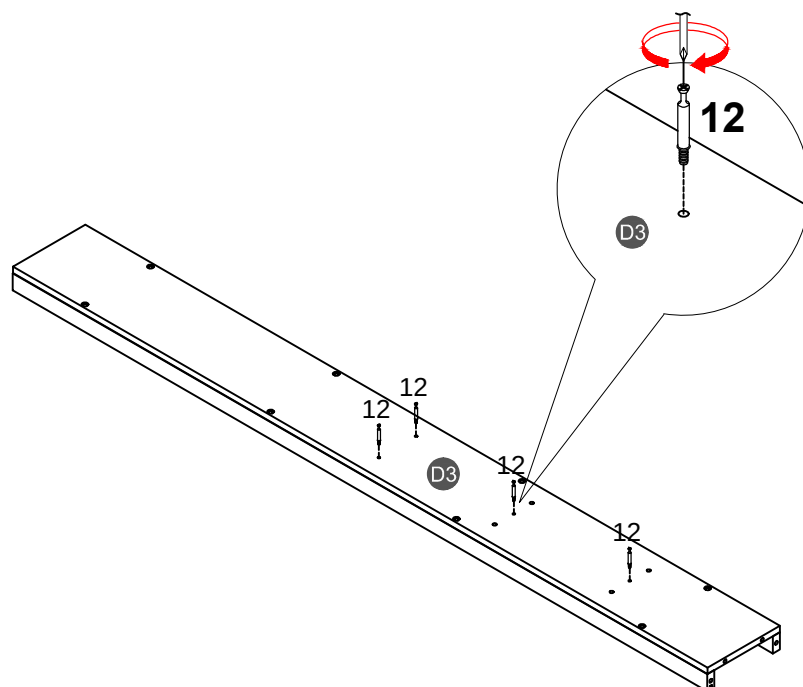

STEP 7:

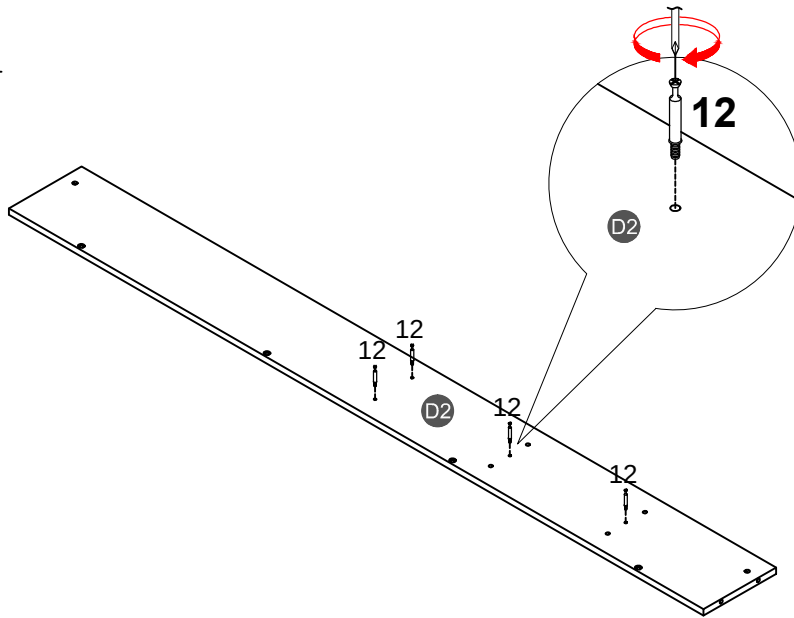


12



4PCS

STEP 8:

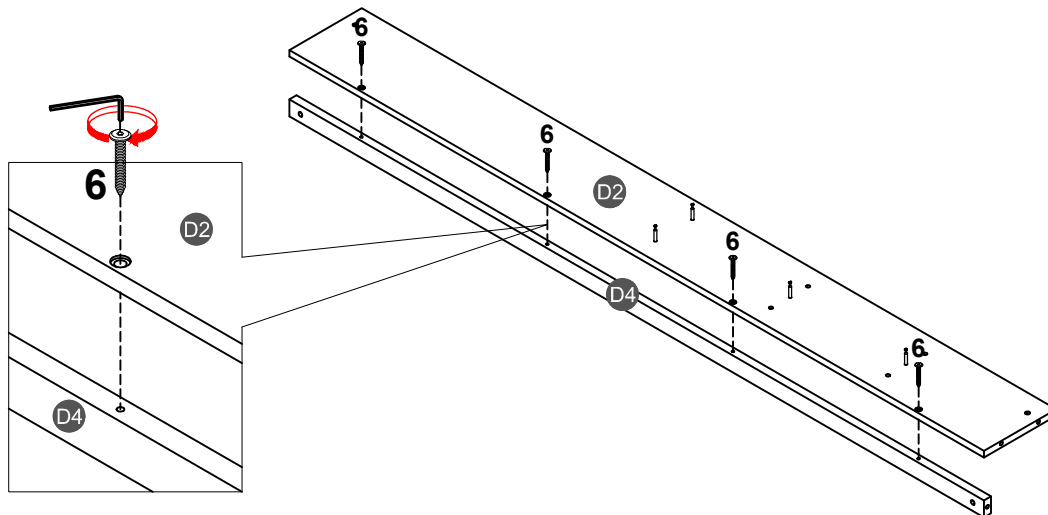


6



4PCS

STEP 9:

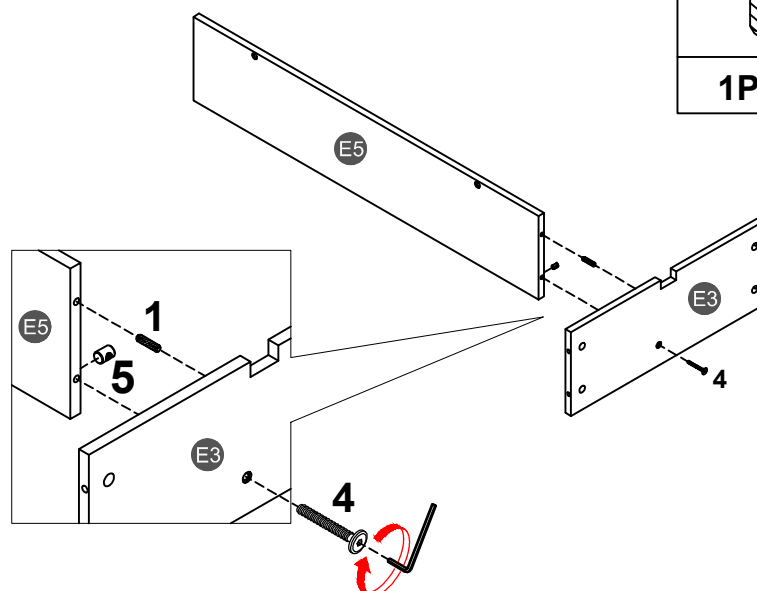

1



1PC

4



1PC


5




1PC

STEP 10:

1		13	
8PCS		8PCS	

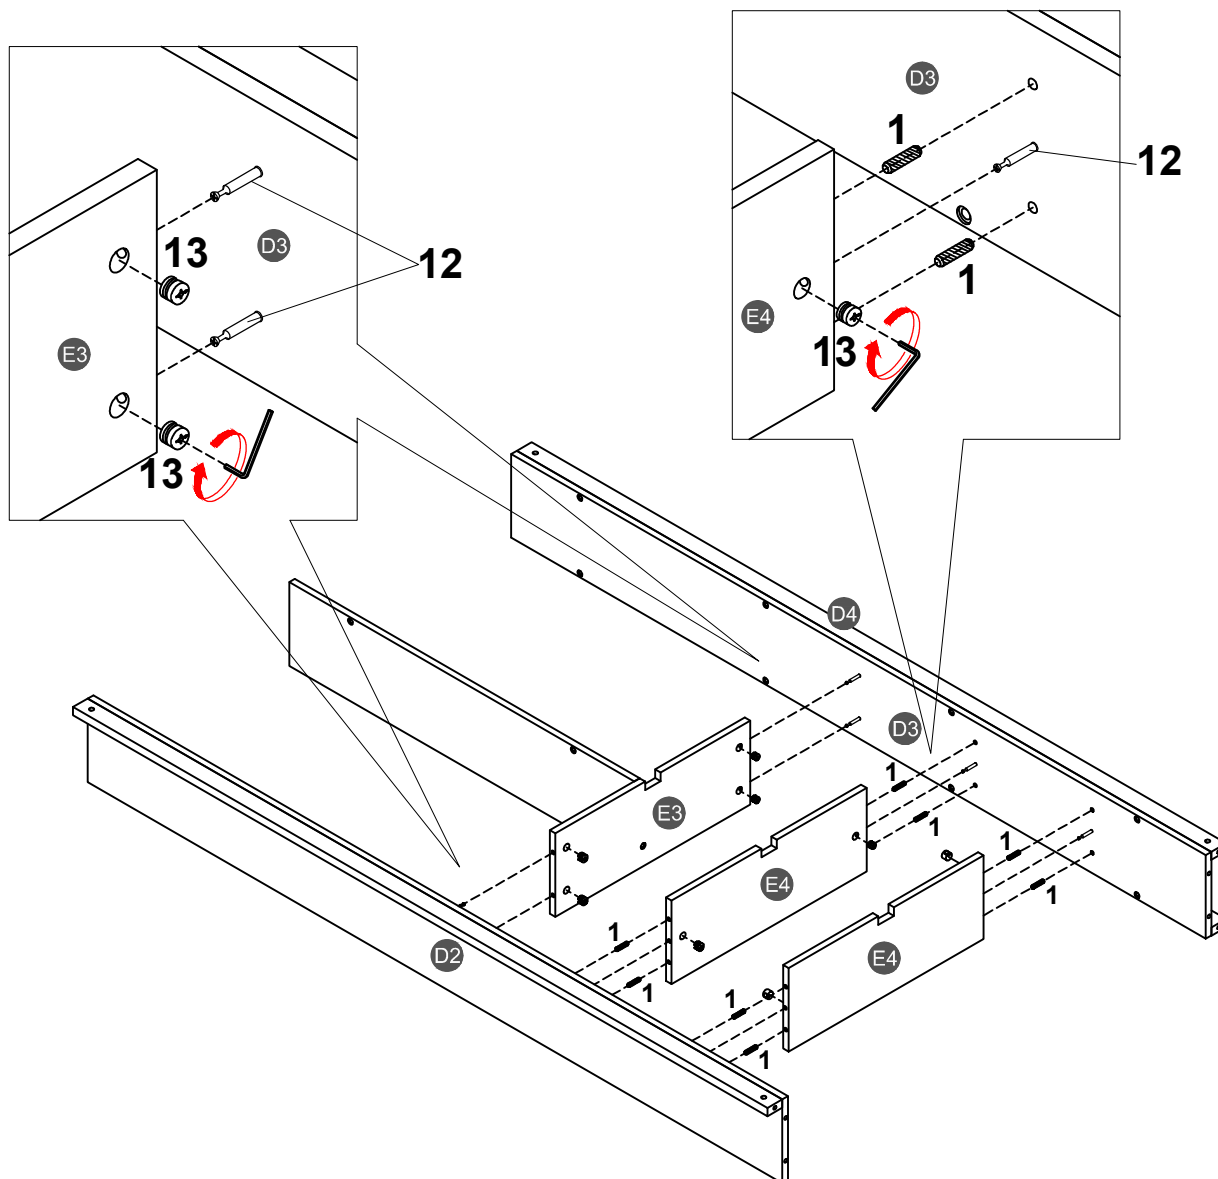


Note: Place hardware #13 with the "X" face outward, and make sure that the arrowhead is upward. Then, place hardware #13 into the hole of hardware #12 and tighten it clockwise with a hand screwdriver. (Please do NOT use an electric screwdriver.)

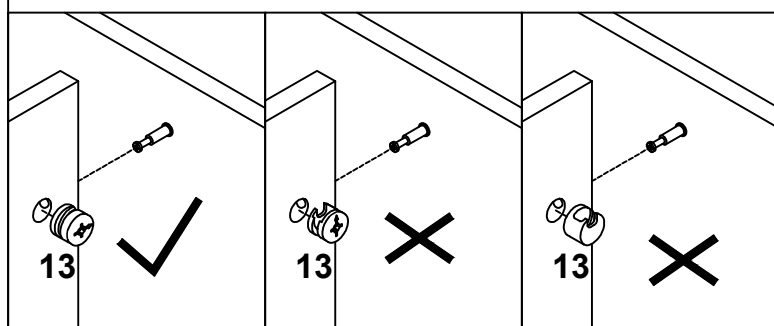

STEP 11:

1		4		5		6	
2PCS		6PCS		6PCS		2PCS	

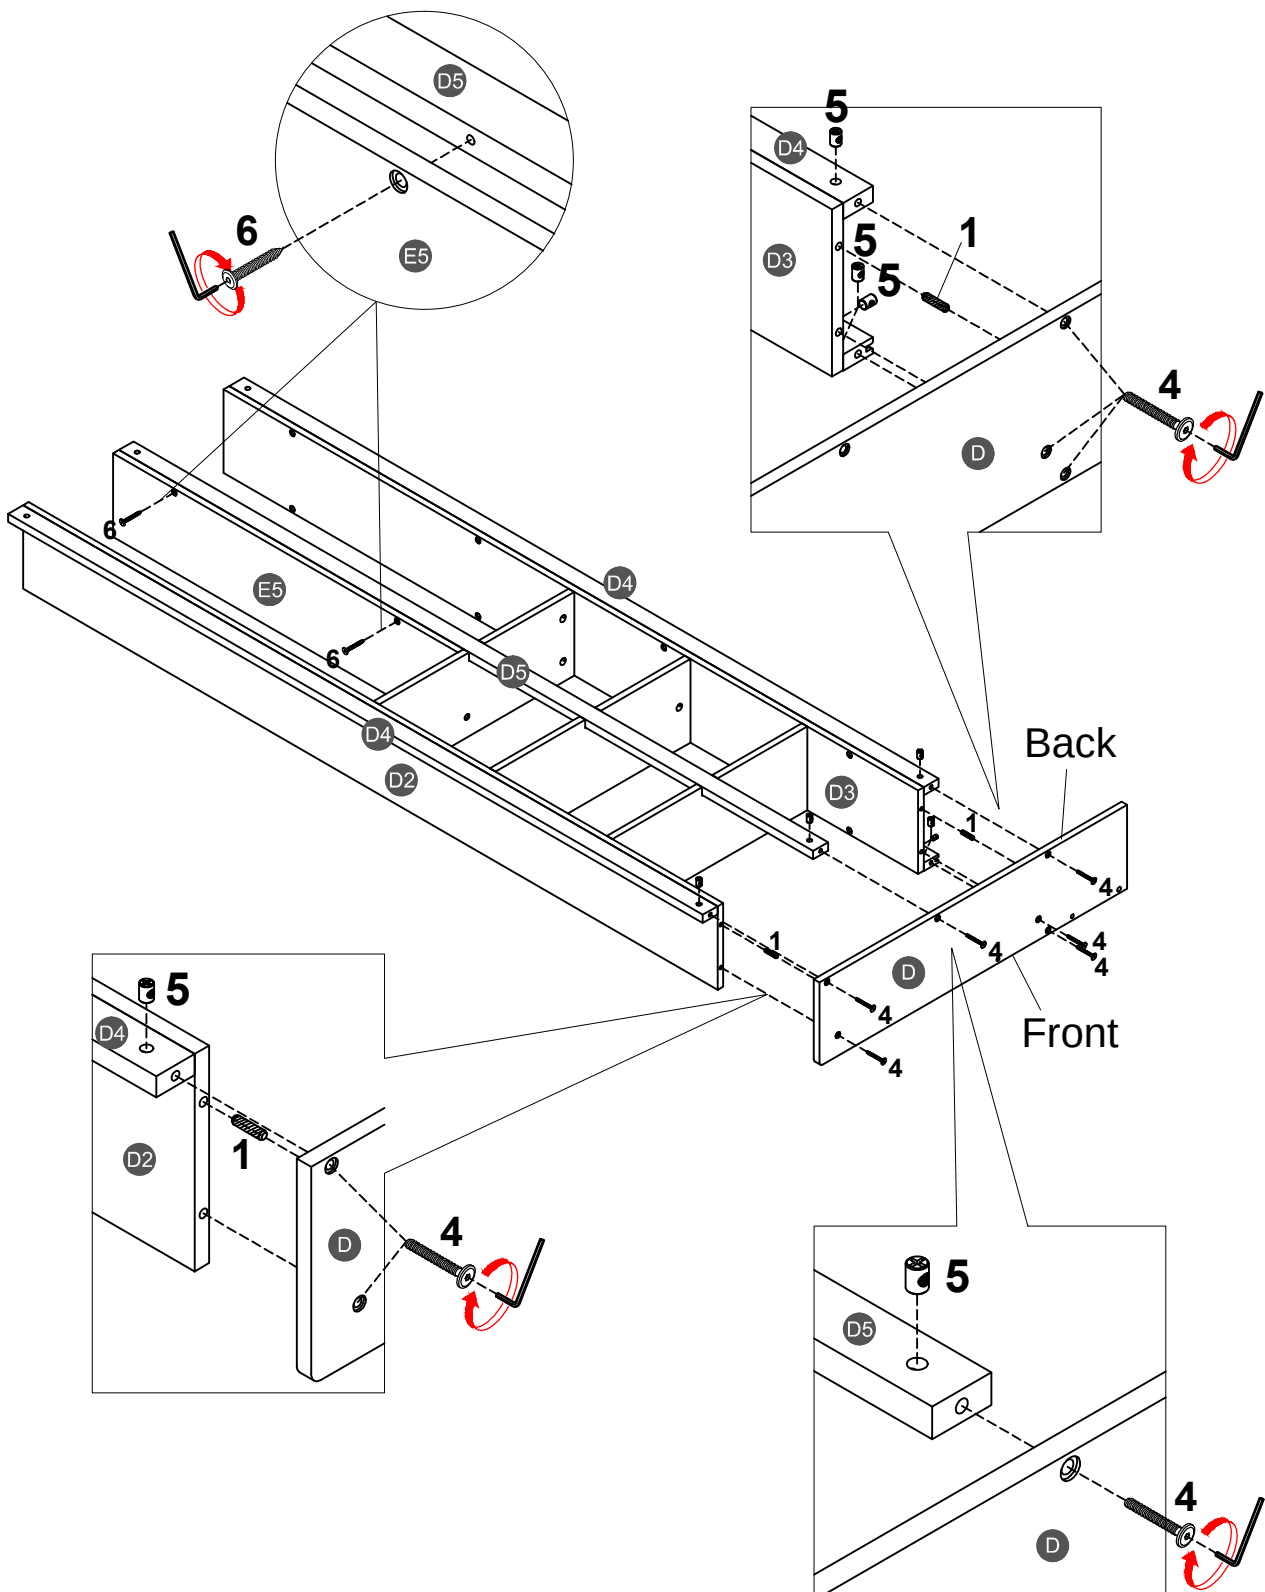


STEP 12:

1




1PC

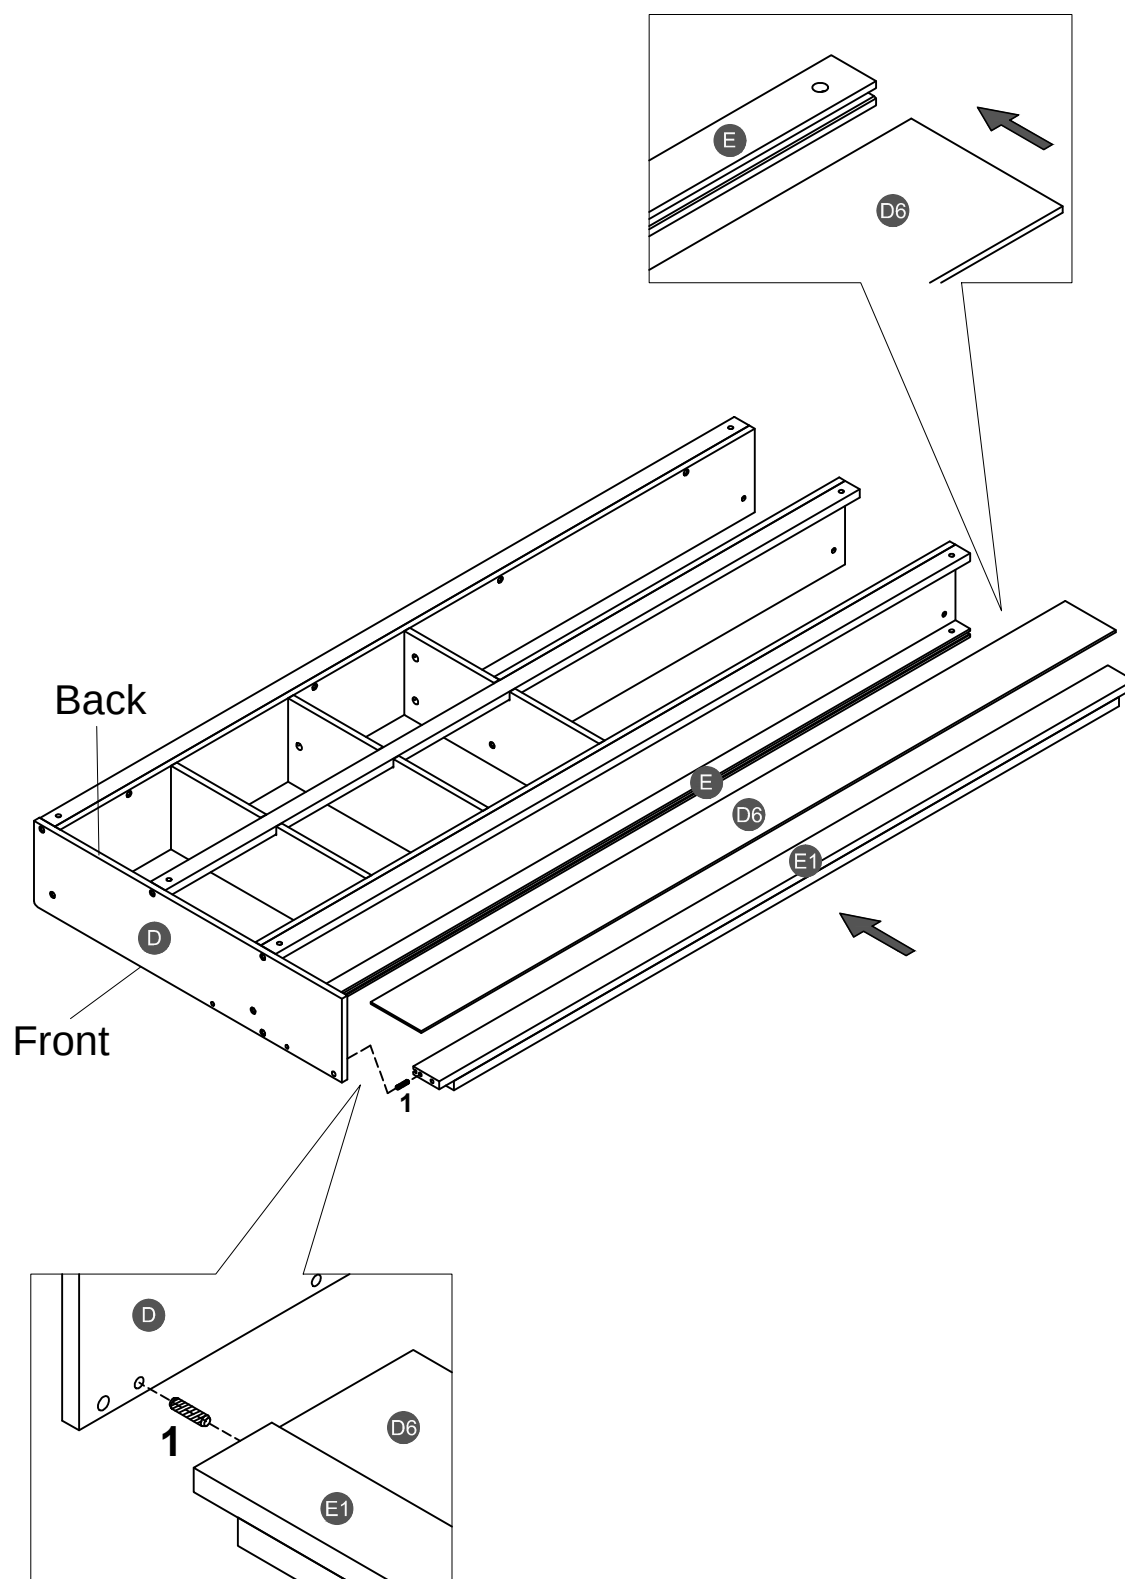

STEP 13:

1		4		5	
4PCS		7PCS		7PCS	

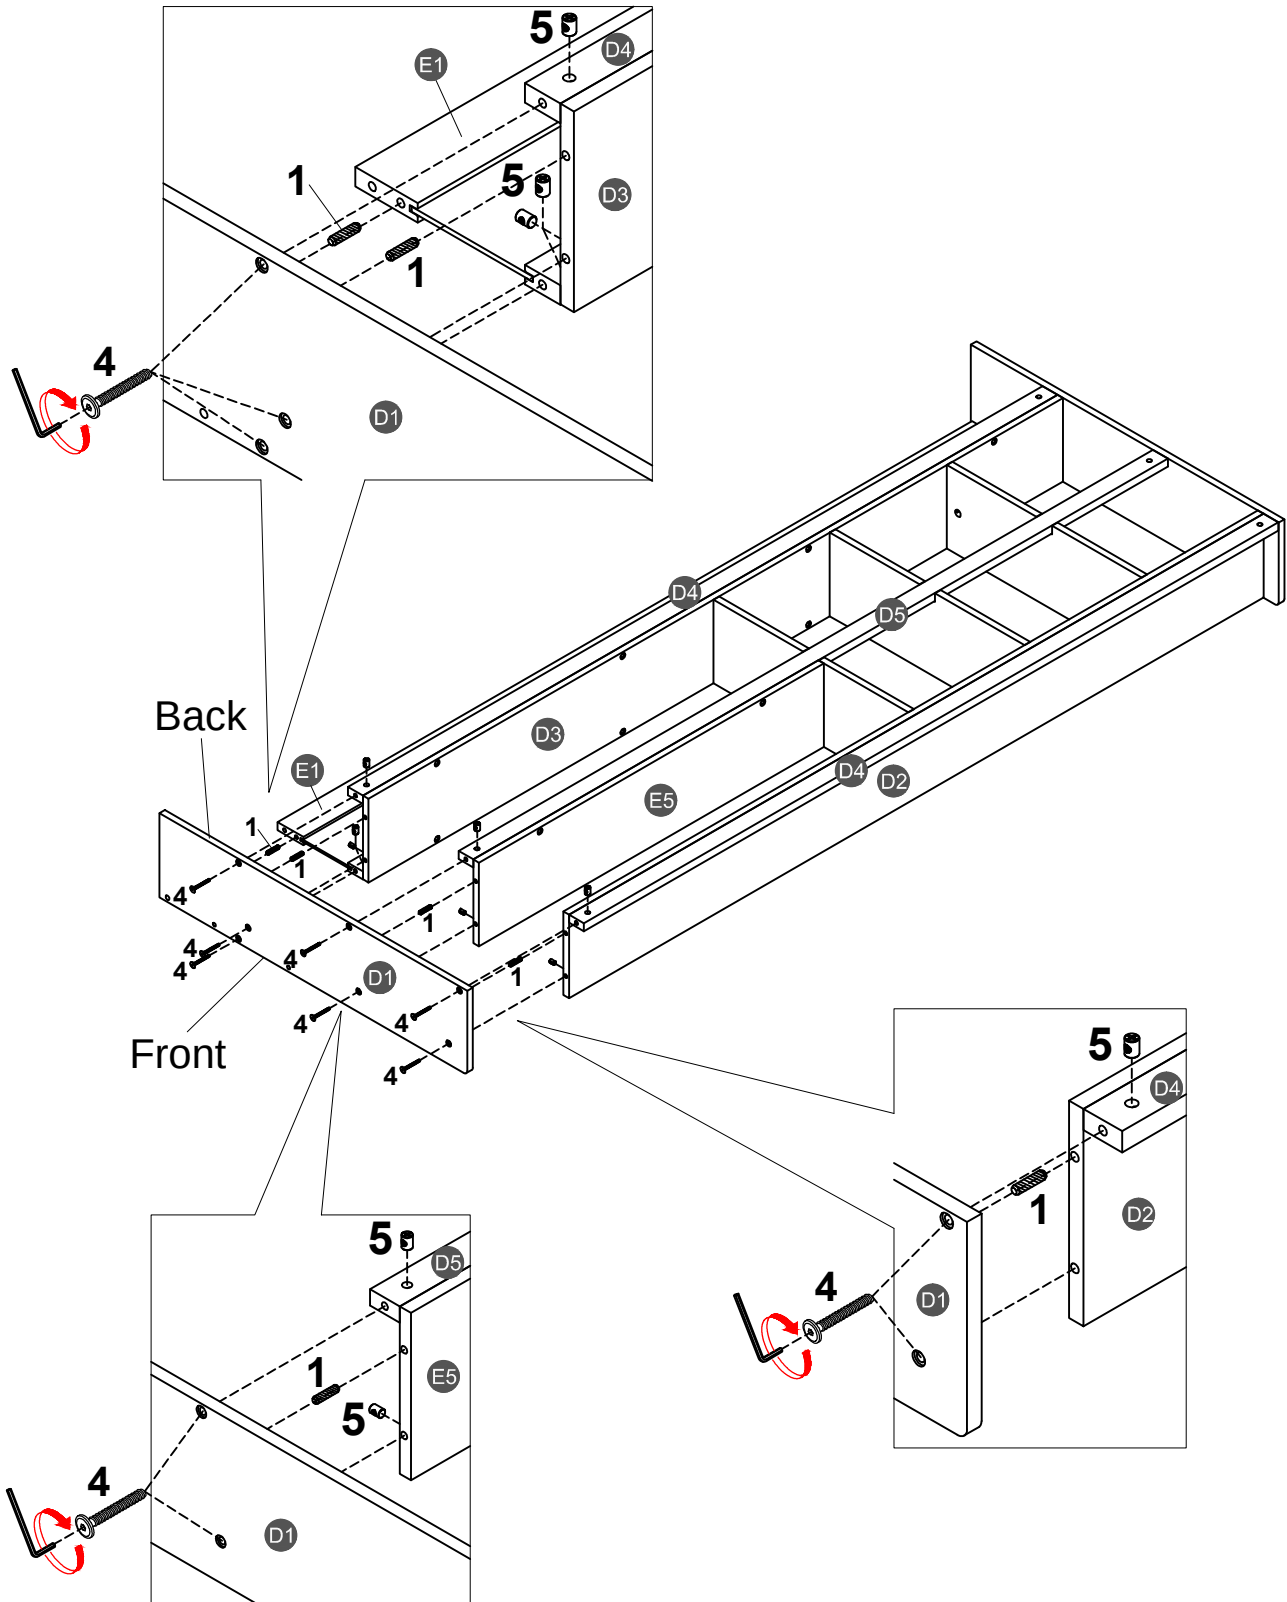


STEP 14:


9




32PCS

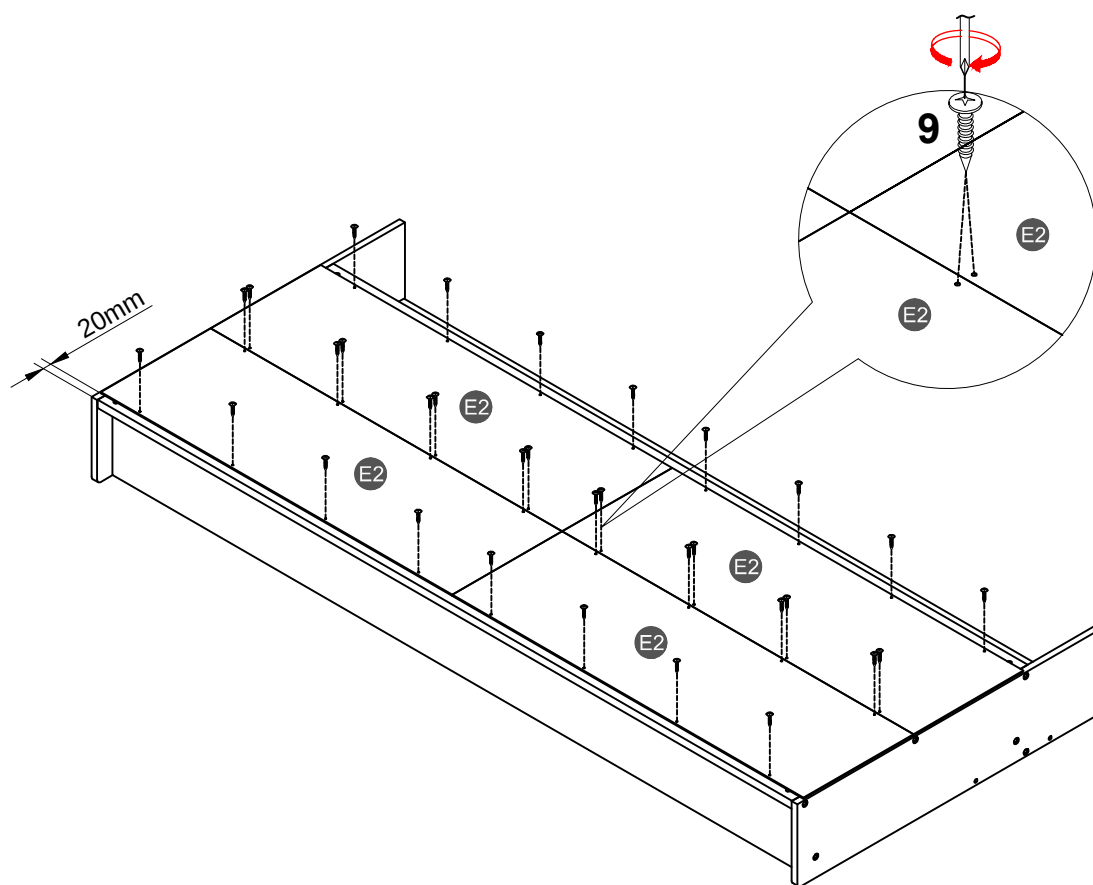

STEP 15:






1		2		5		6	
6							
4PCS		5PCS		5PCS		2PCS	

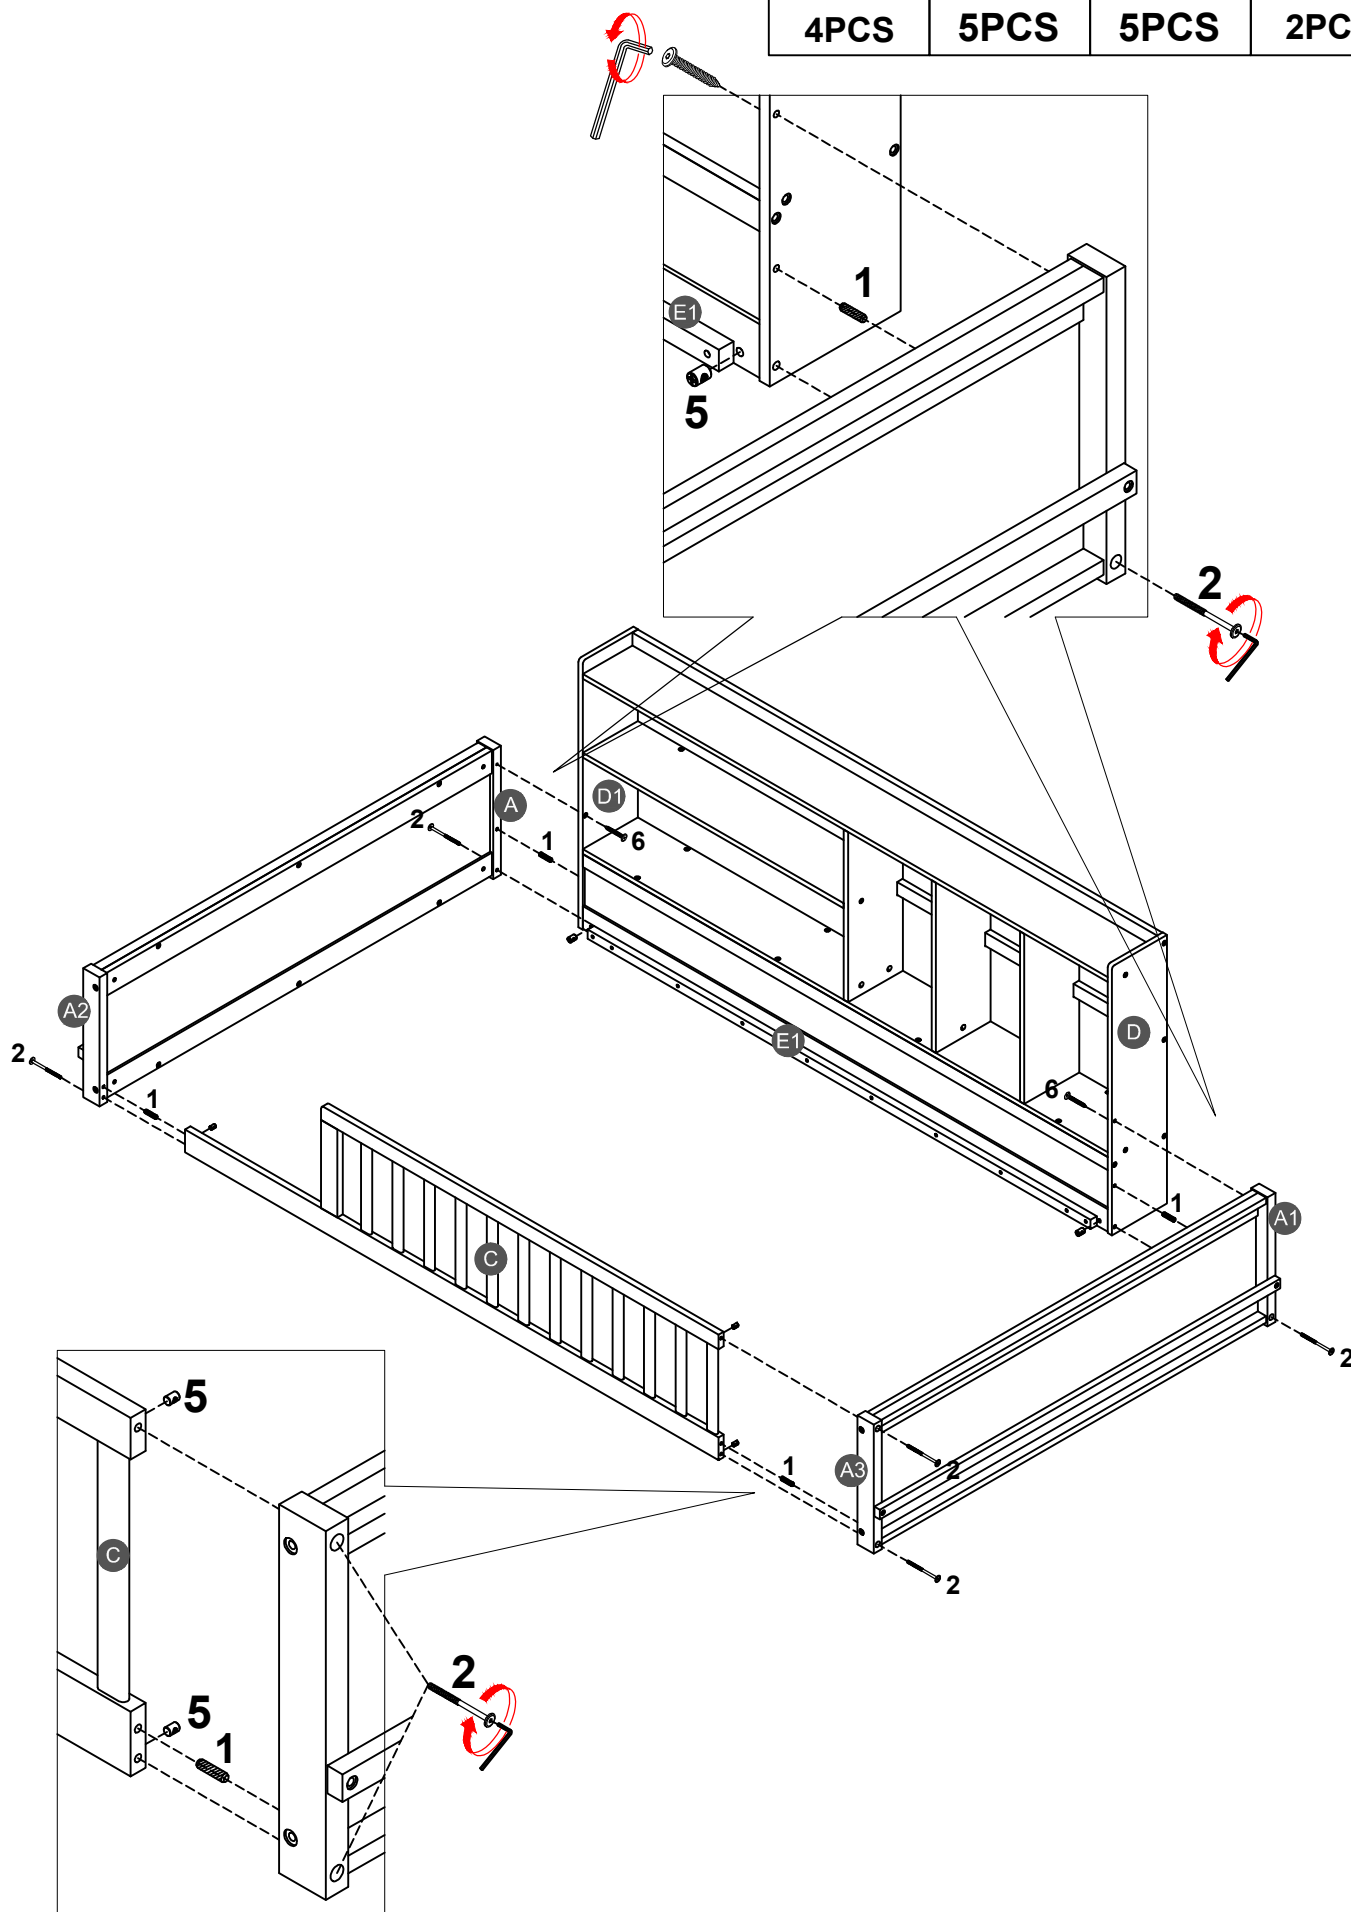

STEP 16:

For better fixing effect, there is no pre-drilled hole on the side rails. Please use self-tapping screws to fix it.


7	8	10
		
14PCS	2PCS	1PC

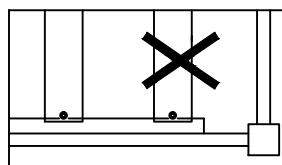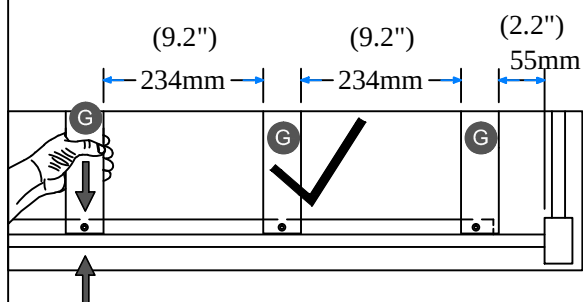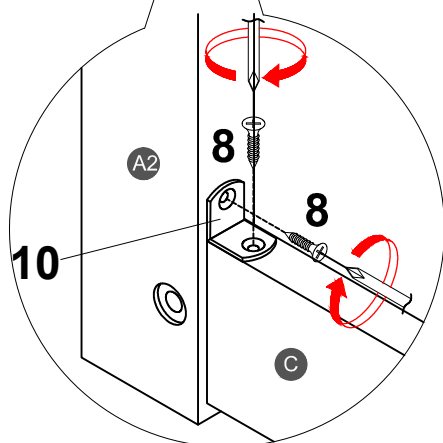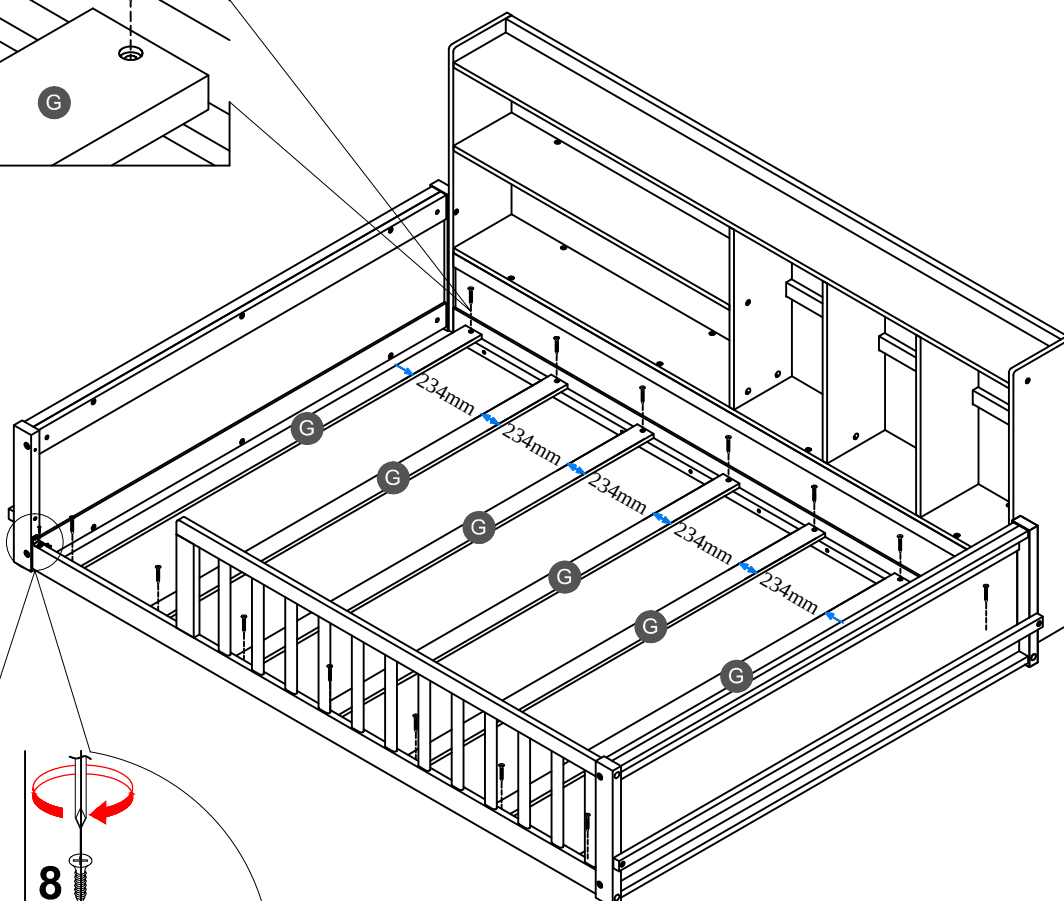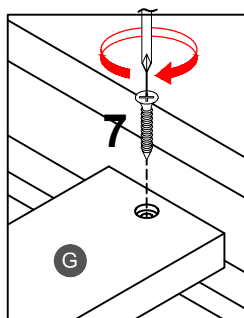

NOTE: Please make sure the bed slats close to the side rail before locking the screws to avoid breakage. This step is required for both the left and right sides. Moreover, please do not lock the screws of the bed slats at the outermost edge to avoid damaging.


STEP 17:

1		4		5	
1PC		1PC		1PC	

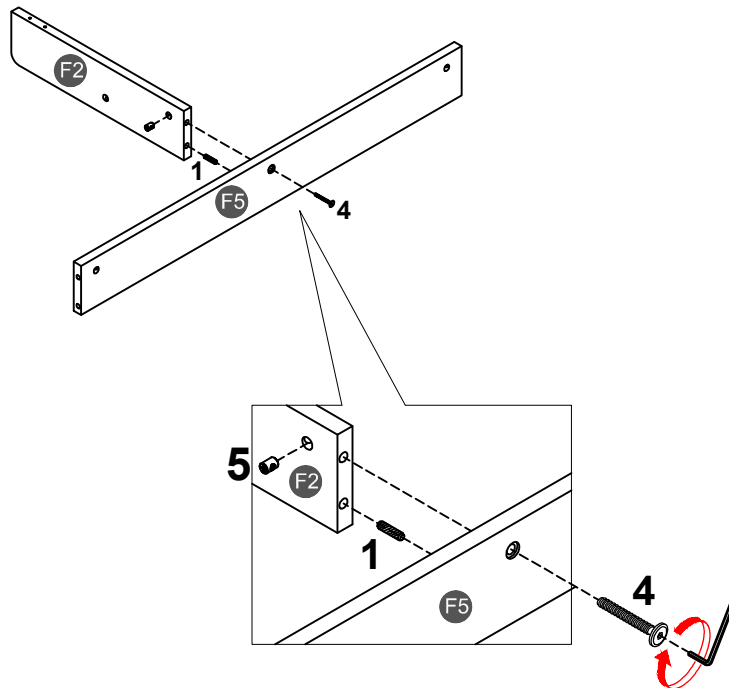



STEP 18:

1		4		5	
6PCS		6PCS		6PCS	

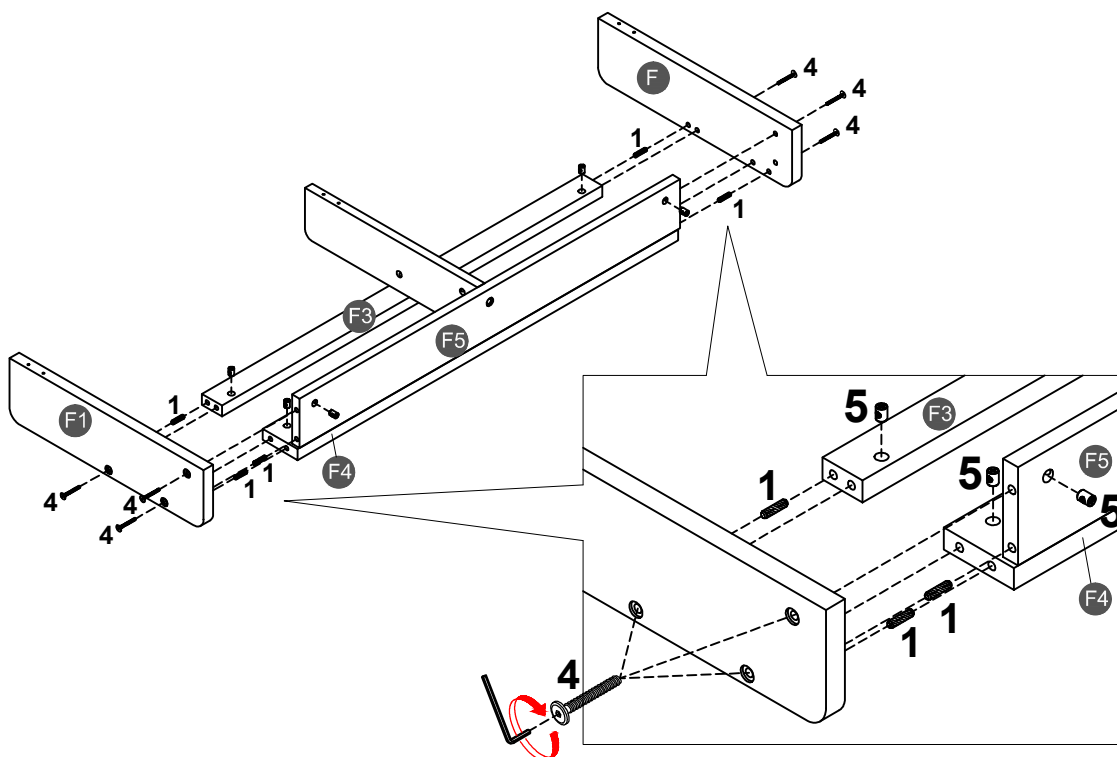


STEP 19:

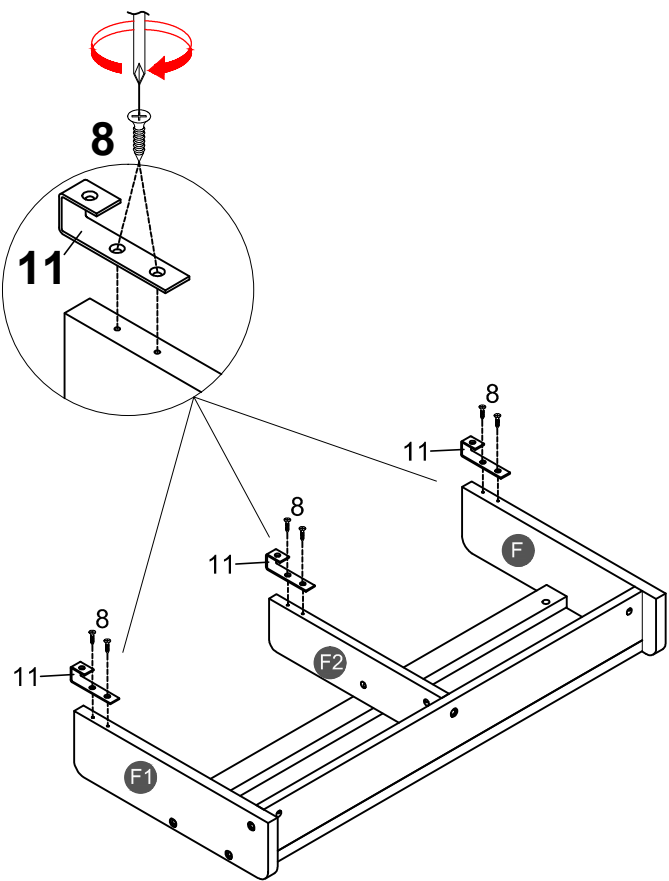

8		11	
6PCS		3PCS	

STEP 20:

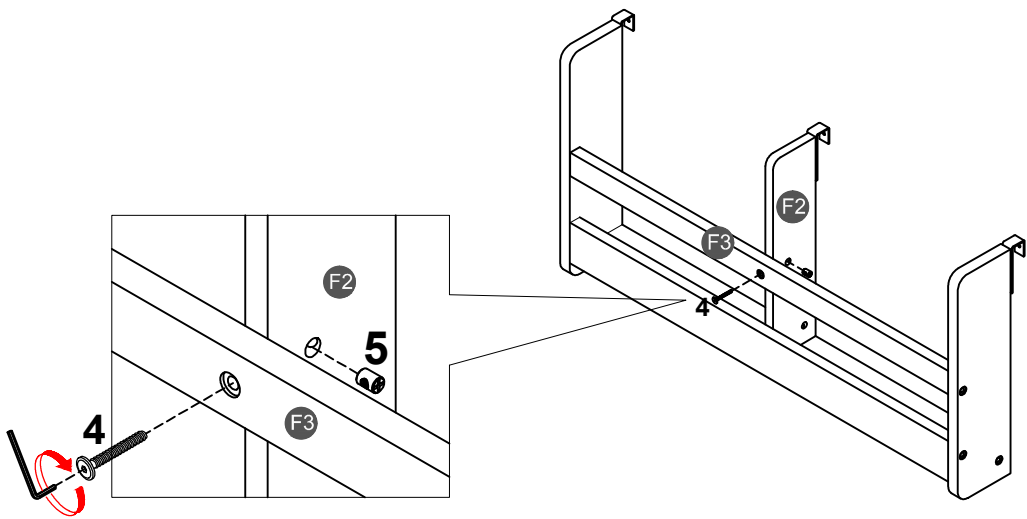

4		5	
1PC		1PC	

STEP 21:

8



3PCS

