

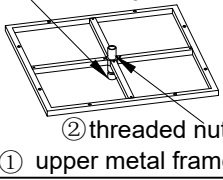


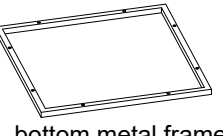




① universal joint  ② threaded nut ① upper metal frame	⑤ screw  ⑥ square metal profile 8pcs	⑧ light fixture 1pcs 	⑩ canopy 1pcs  ⑪ cap nut 2pcs 	⑬ hex key 1pcs 	 X 1pcs  X 3pcs  X 1pcs  X 3pcs
④ bottom metal frame 	⑦ hanging tube 1pcs 	⑨ cylinder tube 6pcs 	⑫ hanging tube 4pcs 	⑭ grub screw 3pcs 	 X 3pcs  X 3pcs

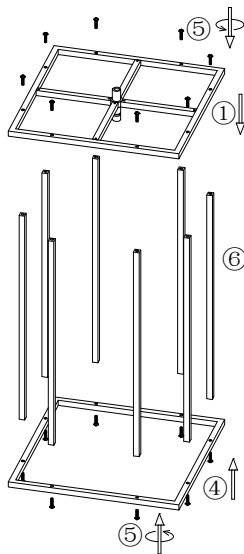

1. Loosen and remove out the screw ⑤ from profile ⑥.
2. Install the profile ⑥ between upper frame ① and bottom frame ④ with screw ⑤.

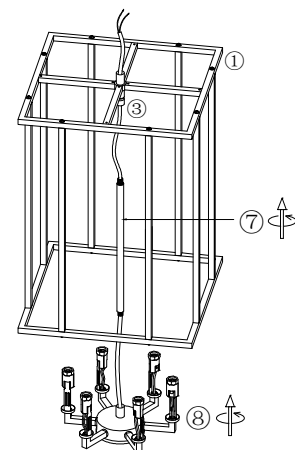


3. Let the wire of the fixture ⑧ go through the tube ⑦ and upper frame ①, rotate to fasten all parts together.

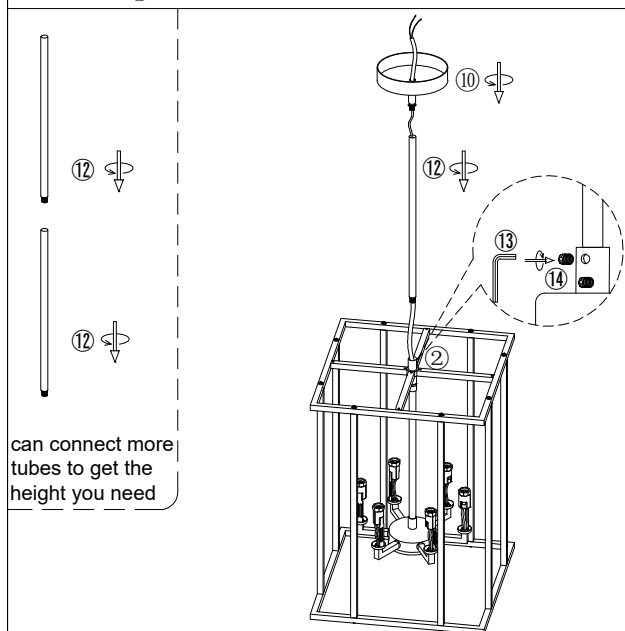

can connect more tubes to get the height you need

4. Rotate to install the tube ⑫ and canopy ⑩ to the fixture (can connect more tubes to get the height you need), fixed the tube ⑫ with grub screw ⑭ by rotate hex key ⑬.

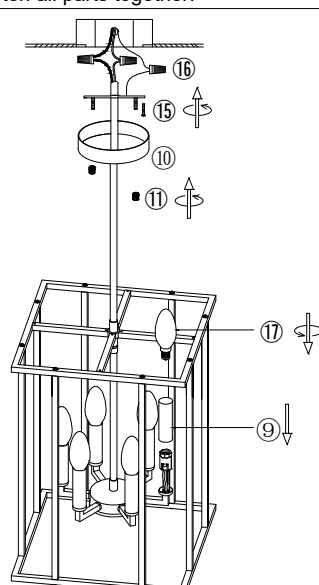

5. Install the bracket to the ceiling junction box with screw ⑮.
6. Connect the wires to your home line with cap connector ⑯.
7. Install the fixture to the bracket with cap nut ⑪.
8. Put the cylinder tube ⑨ on the bulb holder and install the bulb ⑰.

D0250M-6

Please read carefully before installation!!!

Note : Please make sure that the electricity is powered off during installation !

Only a professional electrician should install this kind of product !