
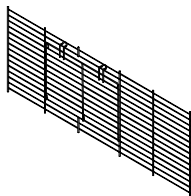
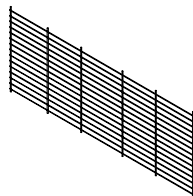
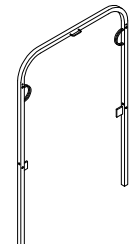
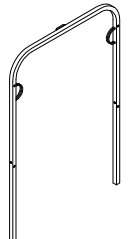
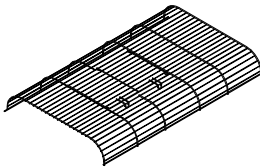


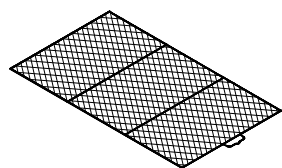


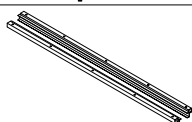



Assembly Instructions

								
A (Front Panel): 1 pc	B (Back Panel): 1 pc	C (Left Side Frame): 1 pc	D (Right Side Frame): 1 pc	E (Top Panel): 1 pc	F (Side Panel): 2 pcs	G (Plastic Base): 1 pc	H (Sliding Grille): 1 pc	
								
I (Lower Left Tubing): 1 pc	J (Lower Right Tubing): 1 pc	K (Upper Front and Back Tubing): 2 pcs	L (Lower Front and Back Tubing): 2 pcs	M (Braked Caster): 2 pcs	N (Rolling Caster): 2 pcs	O (Screw): 12 pcs	P (Wrench): 1 pc	Q (Allen Wrench): 1 pc

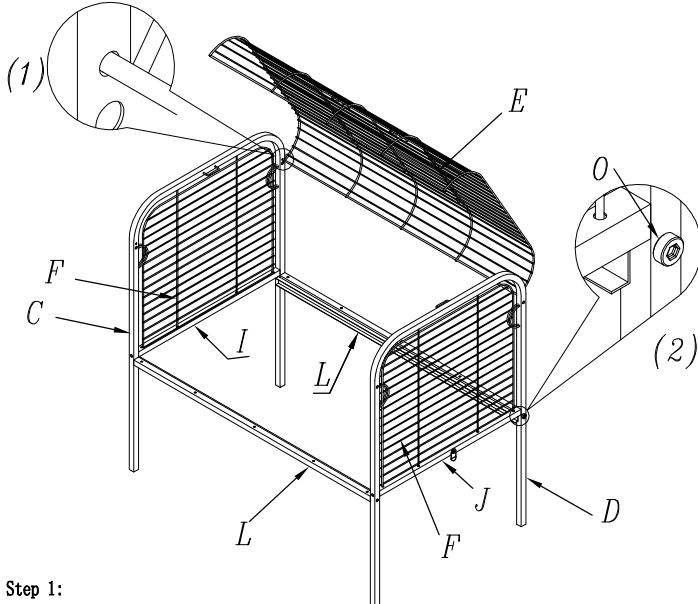


Step 1:

- (1) Insert part F into part C, and secure I and C with screws. Note: The vertical wires in part F always need to be outward.
- (2) Insert part F into part D, and secure J and D with screws. Note: The vertical wires in part F, and the Base Lock in part J always need to be outward.
- (3) Assemble part L, C and D, secure with screws. Note: The channels in part L always need to be inward as shown in picture (2).
- (4) Insert the long wire of part E into the holes of part C and D as shown in picture (1).

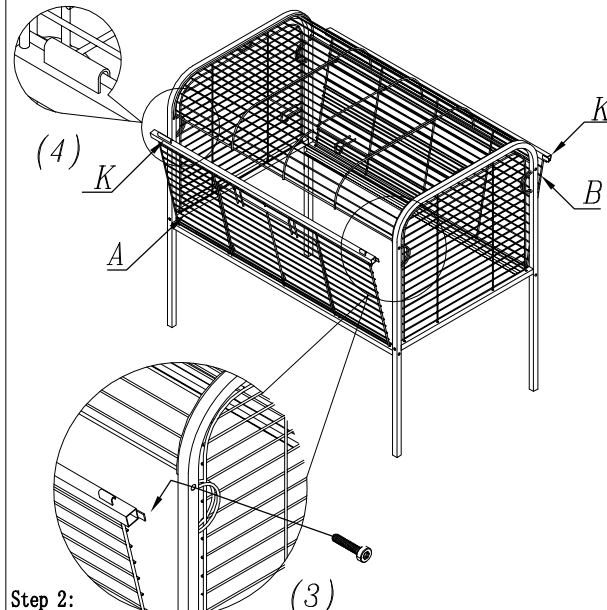

Step 2:

- (1) Insert part A and B into the holes in L, note: The Vertical wires in part F always need to be outward.
- (2) Assemble part C, D and K, secure with screws as shown in picture (3).
- (3) Attach parts A, B, and K and made sure the bottom wire of the roof panel fits securely underneath the metal tracks on the upper tubes in picture (4).

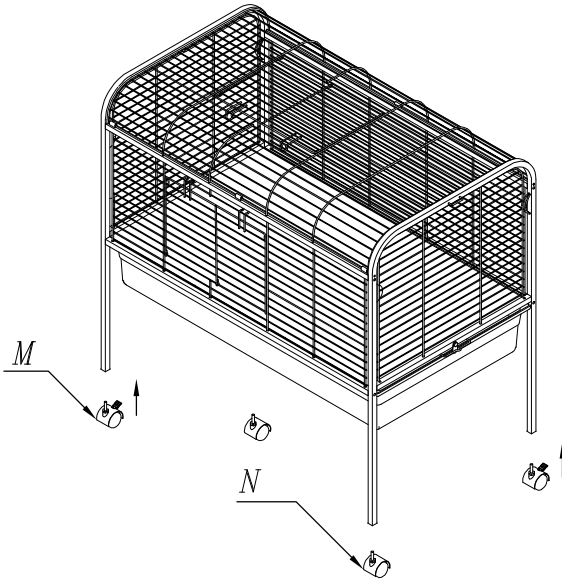

Step 3:

- (1) Slide part G into the channel provided in L, and put part H above the channel, then close Base Lock.
- (2) Attach 2 Rolling Casters and 2 Braked Casters into the legs as shown.

Now, your new cage is ready to use