

Instructions for Av cart



please read all directions carefully before installation



CAUTION

SHARP EDGES, ALWAYS WEAR GLOVES WHEN ASSEMBLING AND MOVING THE UNIT ·

00131

PARTS LIST


NO.	Description	picture	Qty.	NO.	Description	picture	Qty.
①	Lower shelf		1	⑧	Tray		1
②	Top shelf		2	⑨	Tray Guide		2
③	Rubber Ring		2	⑩	Tray Bracket		2
④	Non-slip Mat		1	⑪	Electric outlet		1
⑤	swivel casters		4	⑫	power socket Bracket		1
⑥	Lower support		4	⑬	M6 socket Round Head screw		32
⑦	upper support Leg (Angle Frame)		4	⑭	M4 Round Head		4

PARTS LIST


NO.	Description	picture	Qty.	NO.	Description	picture	Qty.
15	M4selfTapping screw		4	22	computerTray		1
16	M4 Locknut		4	23	M6 Locknut		2
17	cross Head screw Driver		1	24	M8 Flange self-Locking Nut		2
18	19#Fixed wrench		1	25	computerTray pull plate		2
19	socket wrench		1	26	13#Fixed wrench		1
20	M6 cross Head screw		2				
21	Handle		1				

ASSEMBLY INSTRUCTIONS


1, 6, 13 and 19 , put the top shelf of part 1 on flat surface, fix the bracket leg and ToP Shelf with M6 Socket round head screw 13.

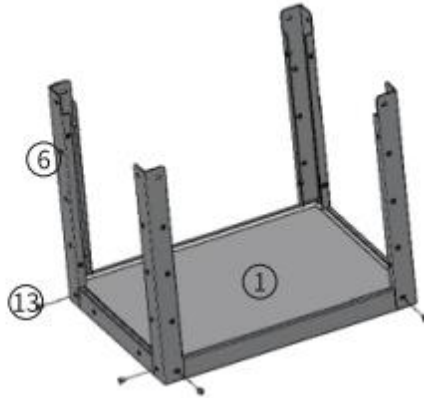


collect parts 5, 18 , Insert caster into the universal caster holes on the top shelf, then fix it with fixed wrench 18.

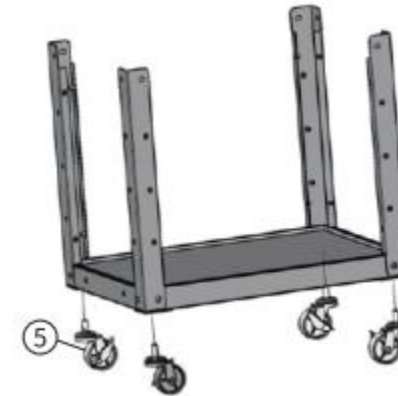


collect parts 2, 3, 7 and 13 , fix the up support legs and ToP Shelf with M6 Socket round head screw 13 , using socket wrench 19 , install rubber ring 3.

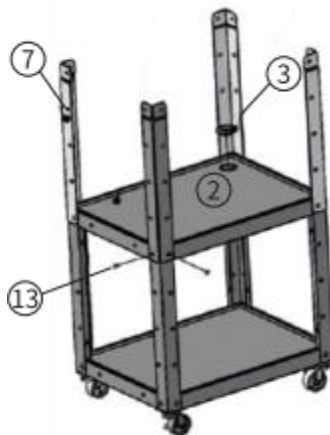

4 collect parts 8, 9, 10, 13, 14, 16, fix the tray bracket 10 with M6 screws 13 , then fix the tray guide 9 on the tray bracket , install the tray. Tool 17, 19 are needed for installation.

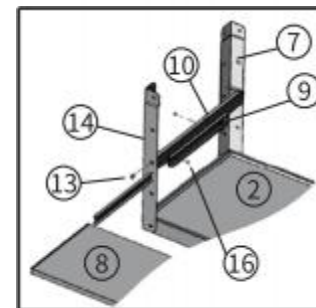


Detail on installation of keyboard shelf

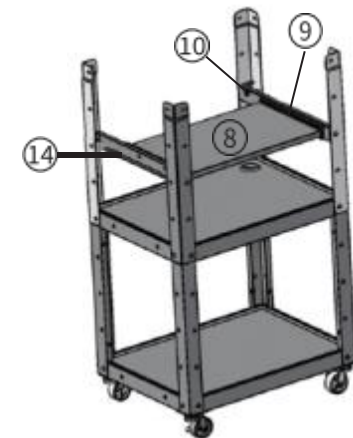


ASSEMBLY INSTRUCTIONS

- 6** collect parts 2 , 3 , 4 and 13,x the ToP Shelf with M6 socket round head screw 13 , using socket wrench 19, install rubber ring 3 , then put 4 on the top of the cart.

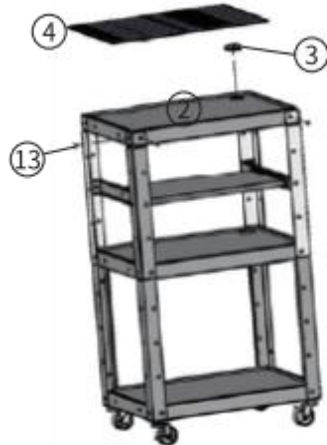


- 7** collect parts 11 , 12 , 13,x the power socket bracket and electric outlet with M6 socket round head screw 13 , using socket wrench 19.

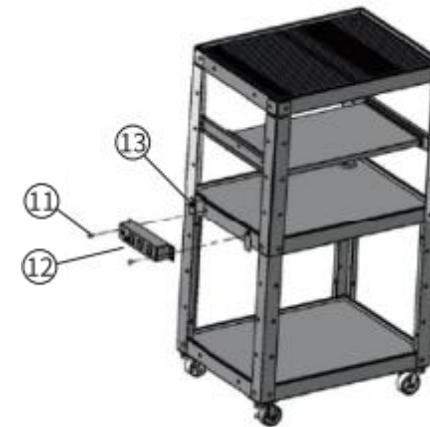

- 8** collect part 22 , ix the computer tray 22 with M6 cross head screw 20 , using cross head screw driver 17.



- 9** collect part 25 , fix the computer tray pull plate 25 with M6 cross head screw 20 and M6 locknut 23 , tool 17, 18 are needed for installation.

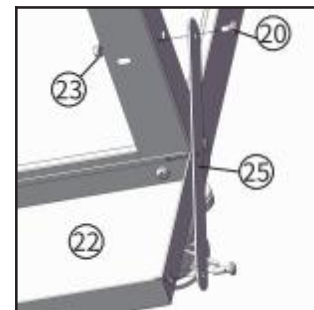

ASSEMBLY INSTRUCTIONS

- collect part 21, the handle 21 with M8 large self-Locking nut 24, using fixed wrench 18.



Now your instructions for the cart are ready for use.



Thank you for your order!
Please write to us via Amazon if you have any questions or concerns, we will reply to you within 24 hours.