
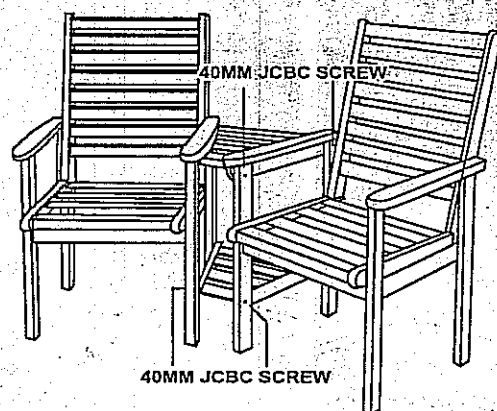


# COMPANION SET

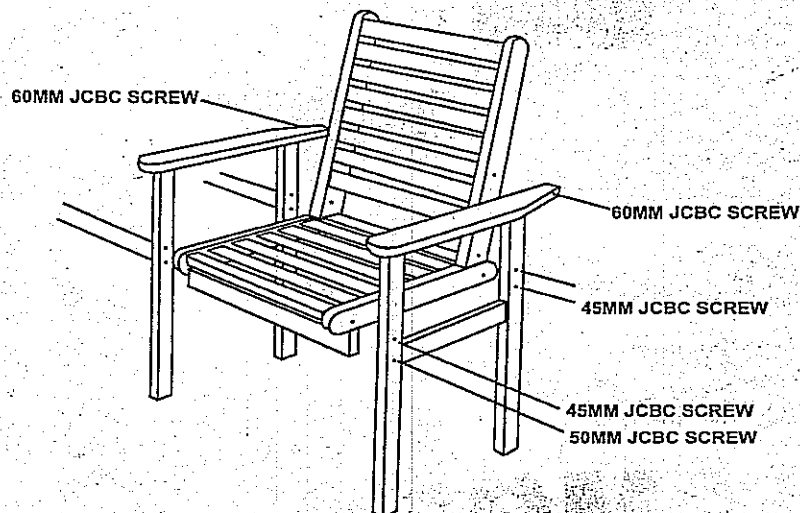

## FITTINGS

1. 40MM JCBC SCREW
2. 45MM JCBC SCREW
3. 50MM JCBC SCREW
4. 60MM JCBC SCREW
5. BARREL NUT
6. ALLEN KEY

8  
 1 NOS  
 12 NOS  
 4 NOS  
 4 NOS  
 4 NOS  
 1 NOS

## ASSEMBLY INSTRUCTIONS

1. ARRANGE THE COMPONENTS IN THEIR POSITION ACCORDING TO THE DRAWING.
2. INSERT ALL JCBC SCREWS ACCORDING TO THEIR LENGTH.
3. DO NOT TIGHTEN UNTIL ALL SCREWS ARE IN THEIR POSITION
4. AFTER FIXING BOTH CHAIRS, FIX THE SHELVES PROVIDED.

## AFTER CARE

FOR CONTINUED PROTECTION, FURNITURES SHOULD BE TREATED WITH FURNITURE OIL AT LEAST ONCE EVERY THREE MONTHS.