

Spare parts list		
H		x80
I		x80
G		x6
Standby Application		
F		x2

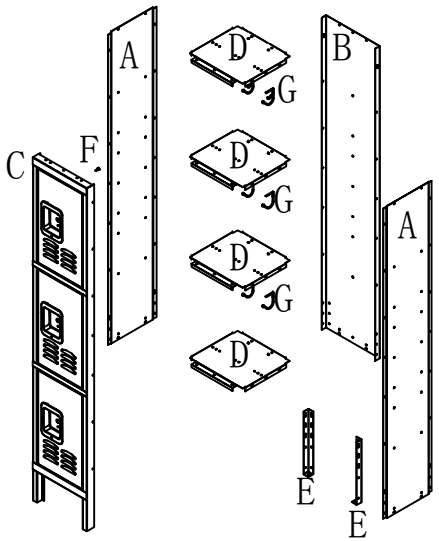


Step 1

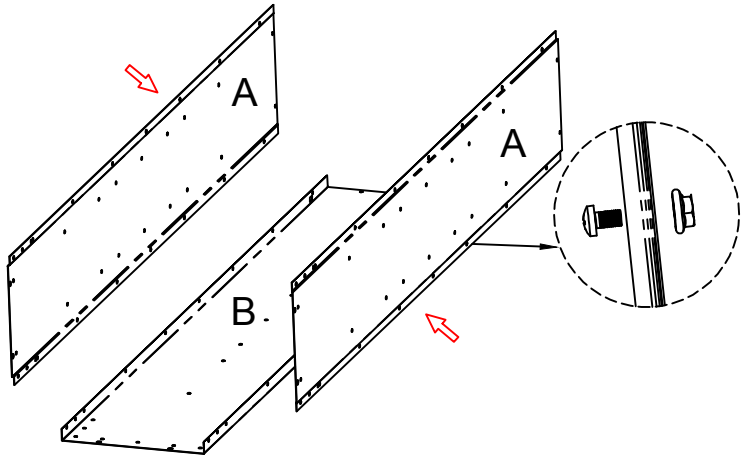


Connect 2 side plate A with H*12 bolt and I*12 nut and back plate B

Step 2

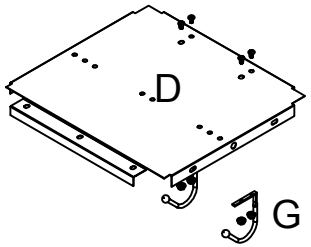


Connect hook G*6 to laminate D with bolt H*12 and nut

Step 3

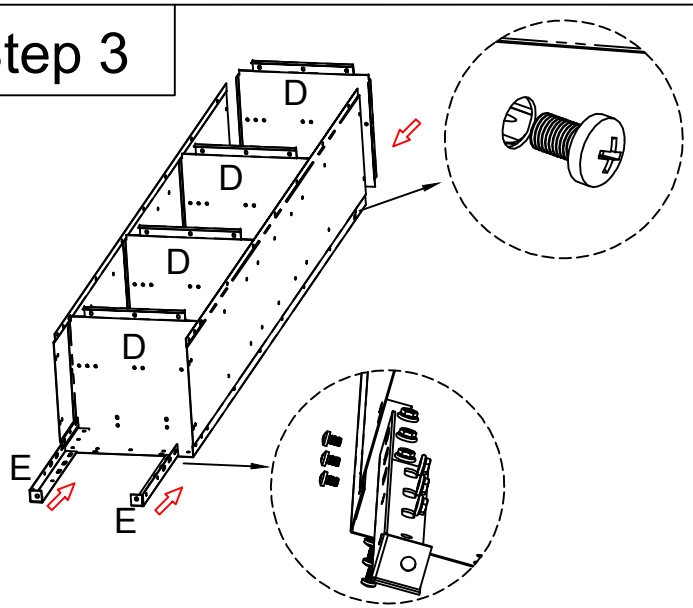


Connect 4 laminates D with back plate B and side plate A with H*42 bolts and I*42 nuts

Step 4

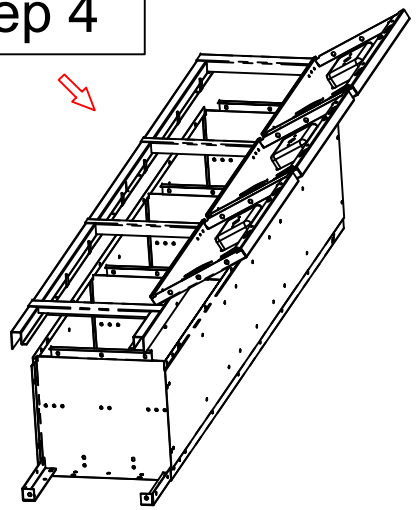

Connect front frame C with H*14 bolts and I*14 nuts and 2 side plates A

Step 5

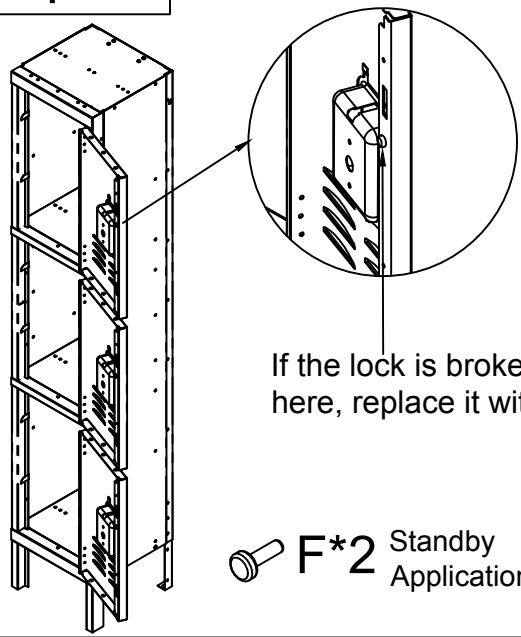

If the lock is broken here, replace it with F

 F*2 Standby Application