


Hardware Installation Manual

Any question please contact us

yoursupport@163.com

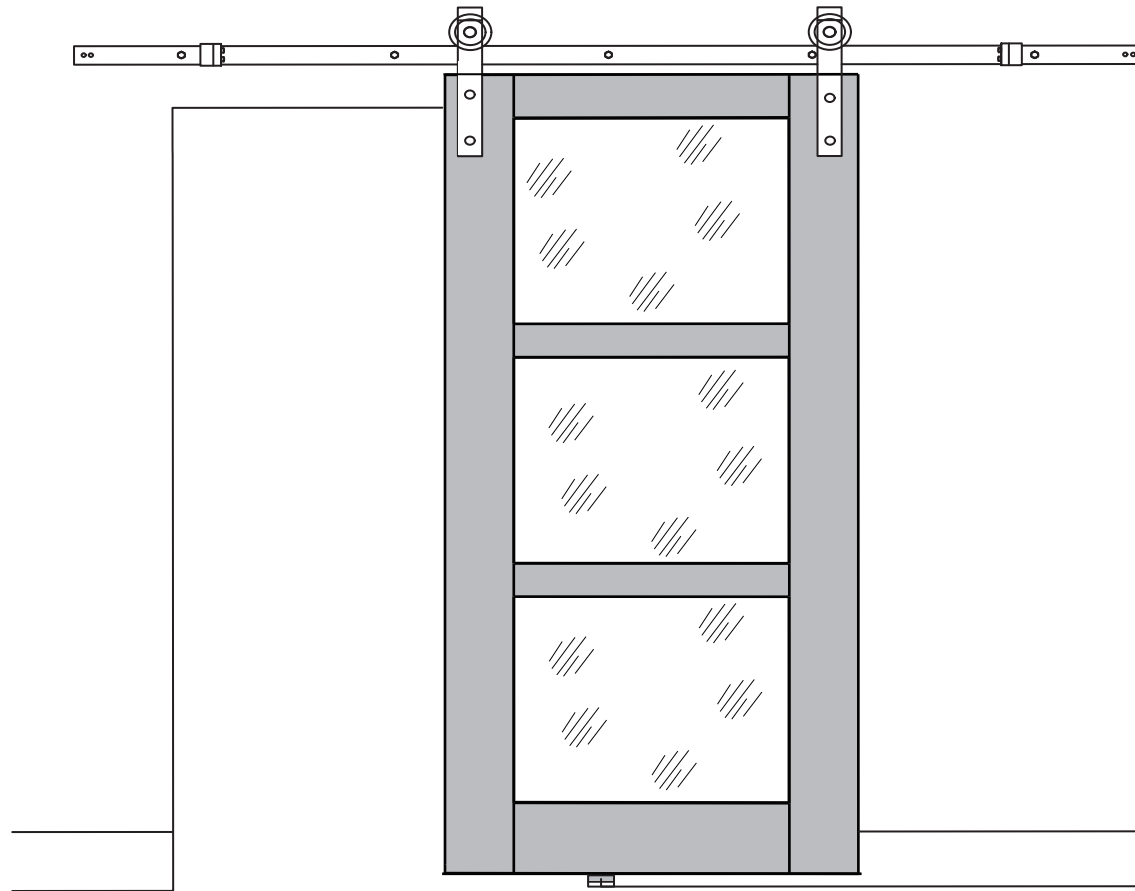


NOTICE Please retain these instructions for future reference.

- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws and knobs before use.
- Reconfirm that all bolts, screws and knobs are secure every 90 days.
- Fasten screws loosely during initial assembly. Do not firmly tighten the screws until the item is completely assembled.
- Do not use or store this item in the proximity of open flame or combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- If any parts are missing, broken, damaged, or worn, please contact us for assistance.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

Glass Barn Door Installation Instruction

contact us: yoursupport@163.com

PARTS	QTY
A1 Left Side Stile	1
A2 Right Side Stile	1
B1 Top Rail	1
B2 Bottom Rail	1
B3 Middle Rail	2
C Glass Panel	3
D Corks	16
E Screws	10
F Plastic Plugs	10
G Door Bumpers	2

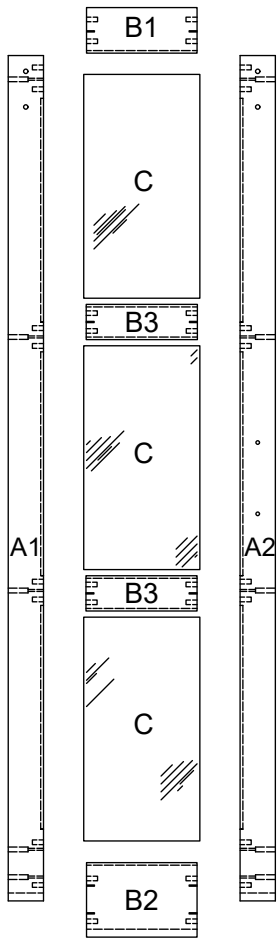


D
 (X16)

E
 (X10)


F
 (X10)

G
 (X2)


1. On the flat, lay out one side stile (A1) with the groove facing to the right. Assemble top rail (B1), middle rail (B3) and bottom rail (B2) to A1 with corks (D).

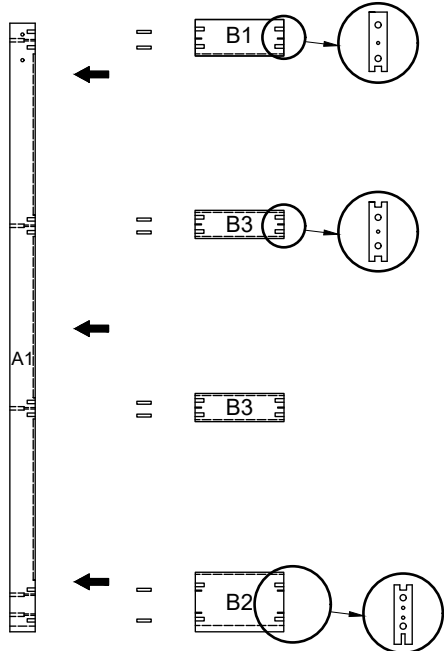


2. Assemble the glass panels (C).

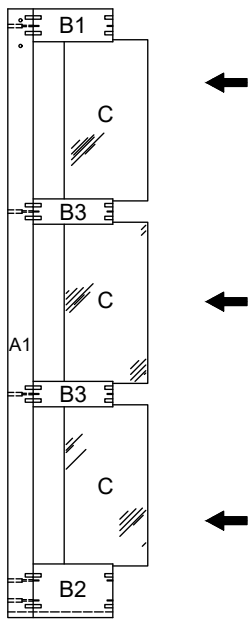


- 3.** Assemble the right side stile (A2) with corks (D) to cover the top and bottom rail and the edge of the slats assembled.

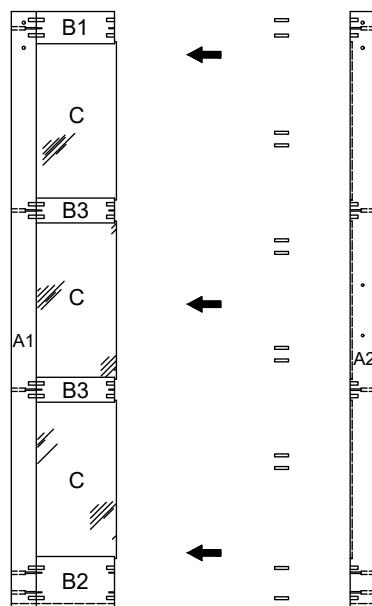


- 4.** Lock screws (E) to side stile (A1 and A2).

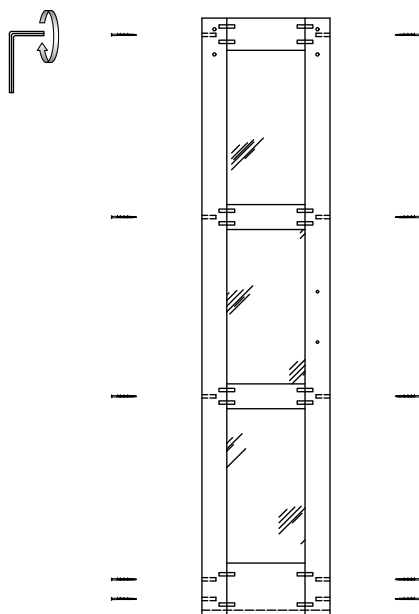

- 5.** Cover the plastic plugs (F).

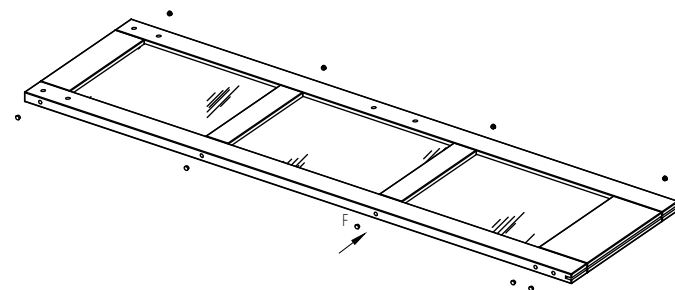








- 6.** Stick the door bumpers (option), which can prevent two doors from colliding.

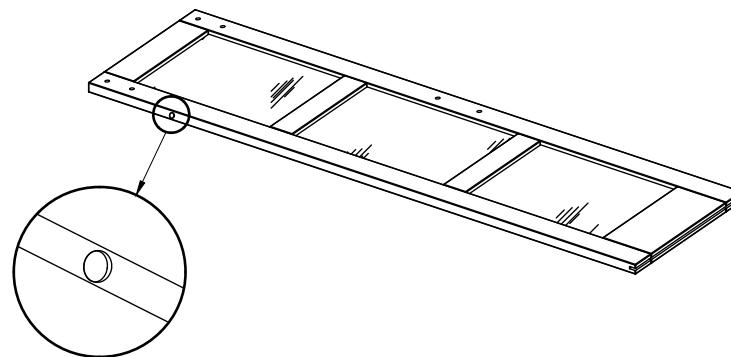



Hardware Installation Manual

Any question please turn to
yoursupport@163.com

Parts Included

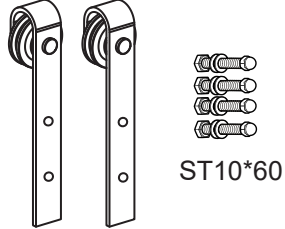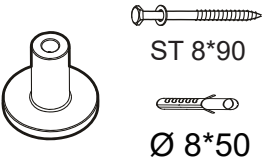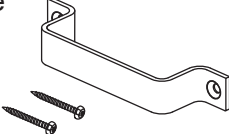1.Track 	5.Door stoppers 
2.Hangers and bolts  ST10*60	6.Floor guide  ST4.2*25 Ø 6*35
3.Spacer  ST 8*90 Ø 8*50	7.Track connector I 
4.Anti jump pads 	8.Track connector II 
	9.The handle 

Tools Needed

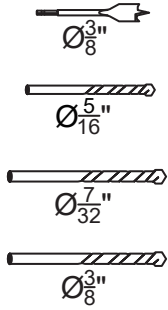1.Pencil 	5.Level 
2.Cross screwdriver 	6.Drill 
3.Wrench 	7.Drill bit 
4.Plumb line 	
5.Tape measure 	


NOTICE Please retain these instructions for future reference.

- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws and knobs before use.
- Reconfirm that all bolts, screws and knobs are secure every 90 days.
- Fasten screws loosely during initial assembly. Do not firmly tighten the screws until the item is completely assembled.

- Do not use or store this item in the proximity of open flame or combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- If any parts are missing, broken, damaged, or worn, please contact us for assistance.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

Measurements

- ① Length of rail L. Subject to the kit you purchased.
- ② The spacing between the pre-drilled holes .
- ③ The distance from the top of the door panel to the vertical height of pre-drilled hole is $1\frac{5}{16}"$.
- ④ **Door height H.**
- ⑤ **The vertical height of the rail is the door height H + $1\frac{11}{16}"$**
- ⑥ The clearance between the vertical height of door panel and the floor is $\frac{3}{8}"$.
- ⑦ Drill two holes in the door panel for mounting the wheel.
The distance from top of the door to the first hole is $1\frac{9}{16}"$.
and the distance between the two holes is $3\frac{9}{16}"$.

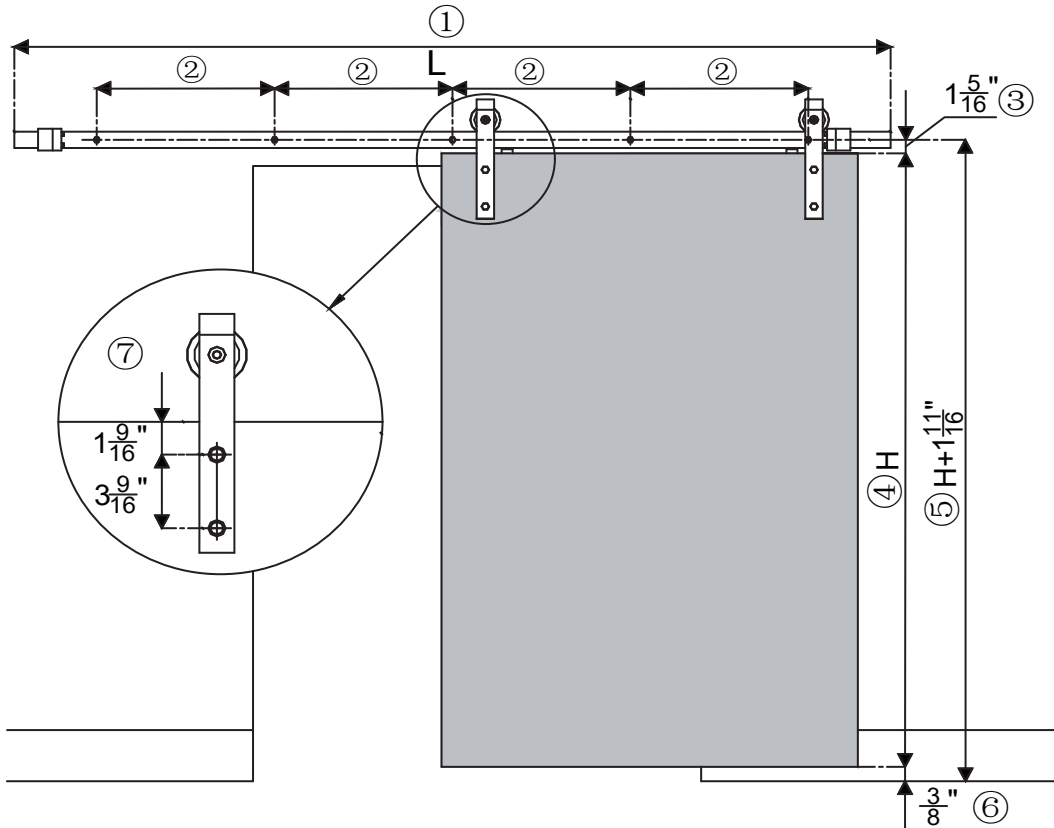


Installation Suggestions

Sometimes there will be some issues when install the track such as a mismatch between studs and pre-drilled holes on the track. To avoid that we recommend using a head board on all installation scenario.


The size of the head board should better be 1"x4" or 1"x6" and a bit longer than the track.

***Please note that the head board and matched screws are not included.**

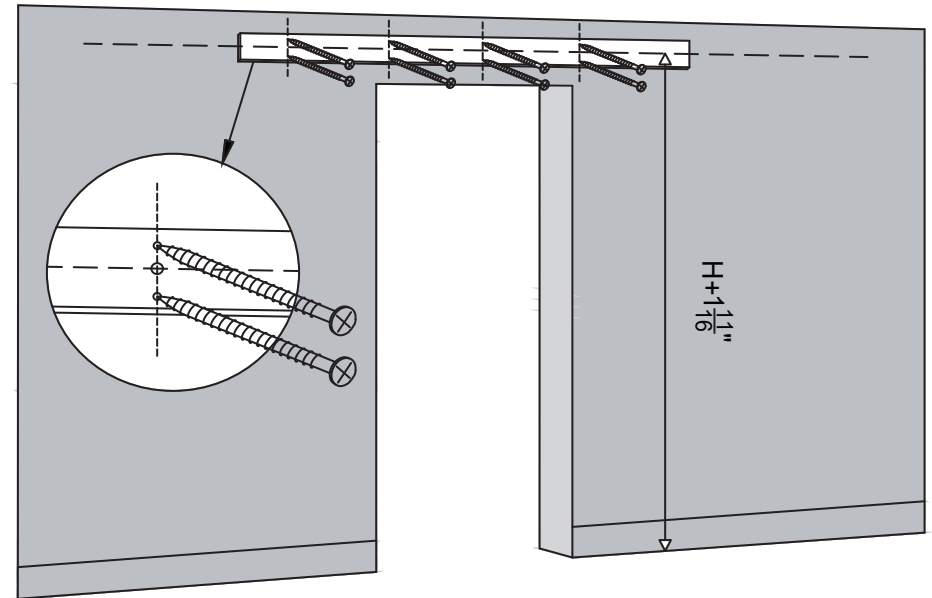


Step-1

Place the track H+ 1-11/16" above the floor and mark the position of the spacer holes.

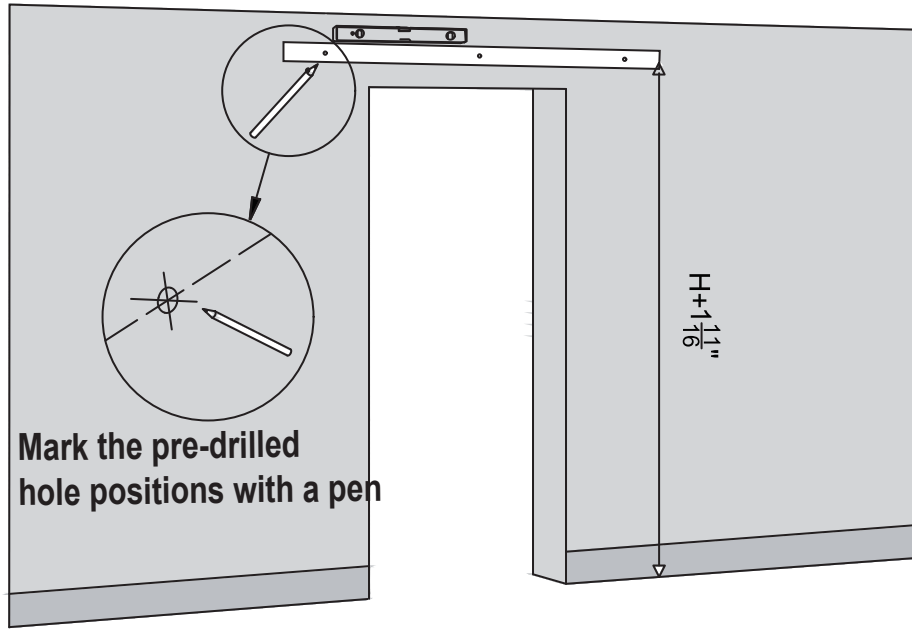


If the rail is too long, the whole rail will be combined with pieces. The joint will be connected by a track connector.

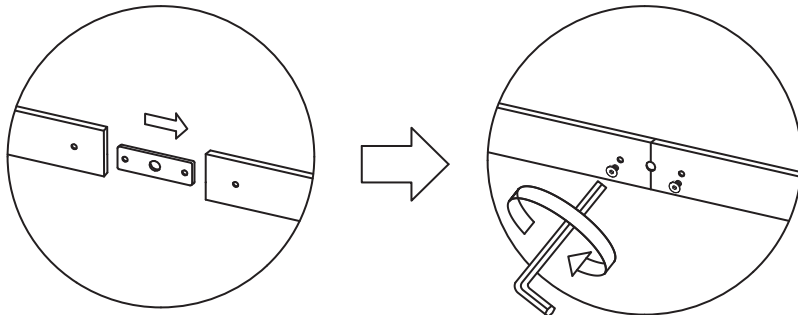

Step-2


① Drywall Installation

Install the lag bolt to wood stud or head board directly.

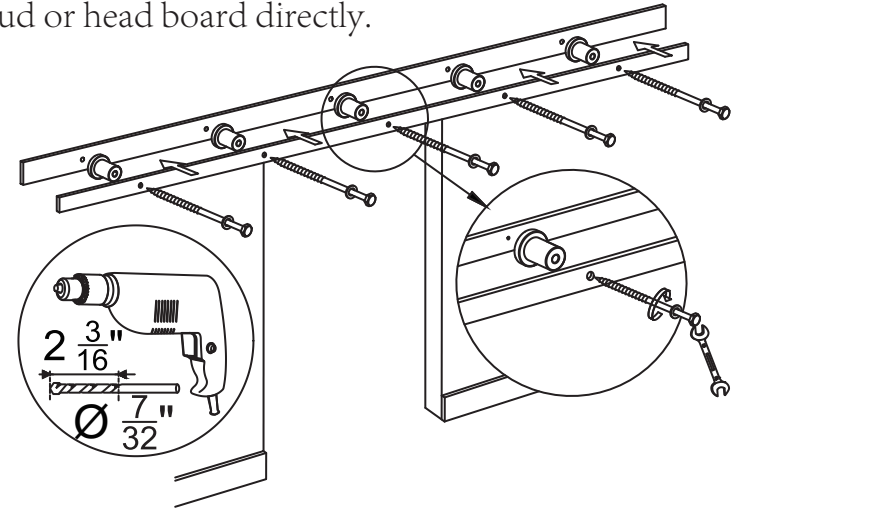


② Concrete wall Installation

Install the white plastic anchor to holes on the wall first, then install lag bolt to anchor.

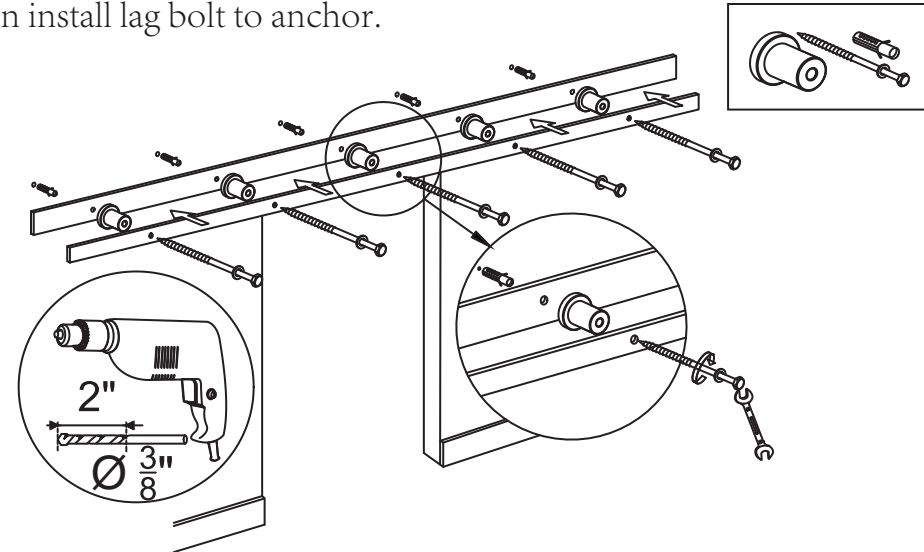


Step-3

Insert door stoppers into rail. Door stopper is used to prevent the hangers sliding off the rail.

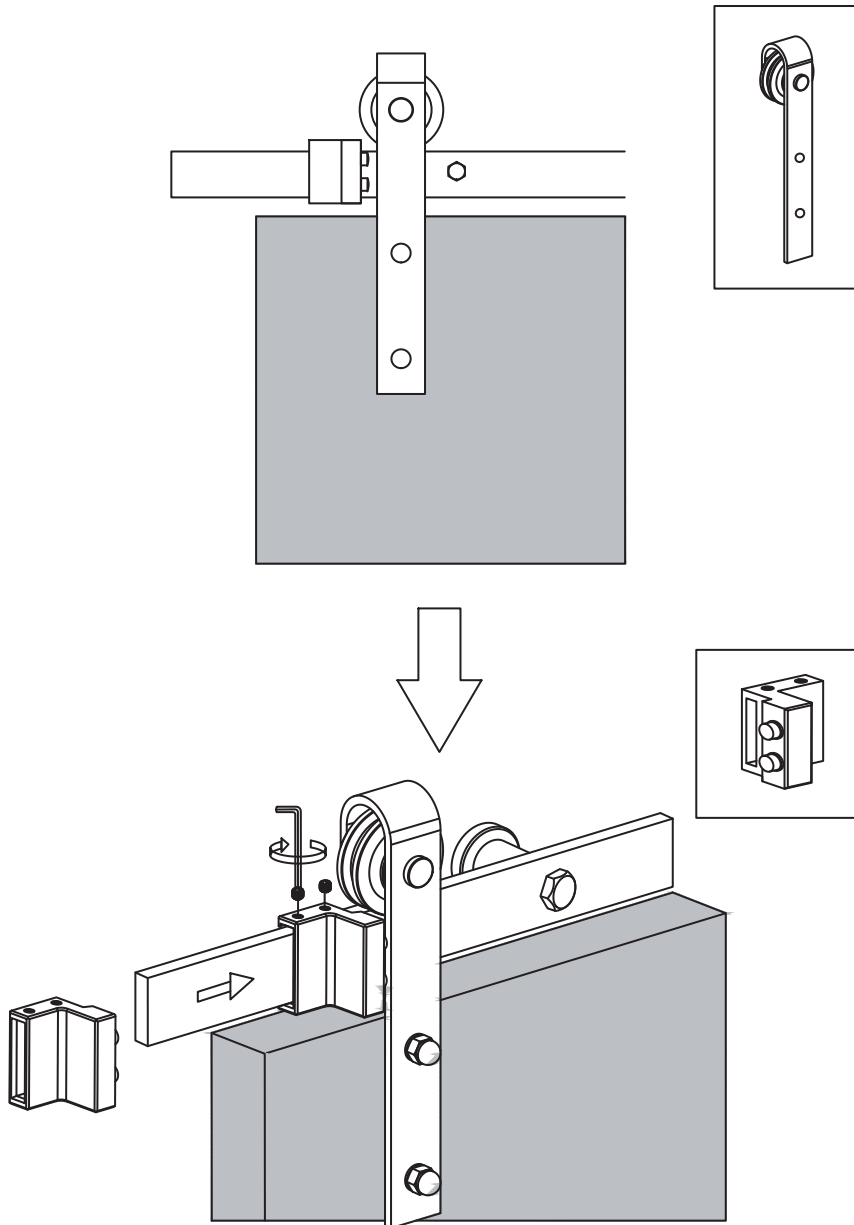


Step-4

Install the hangers into the door according to the measurement in the pictures below.

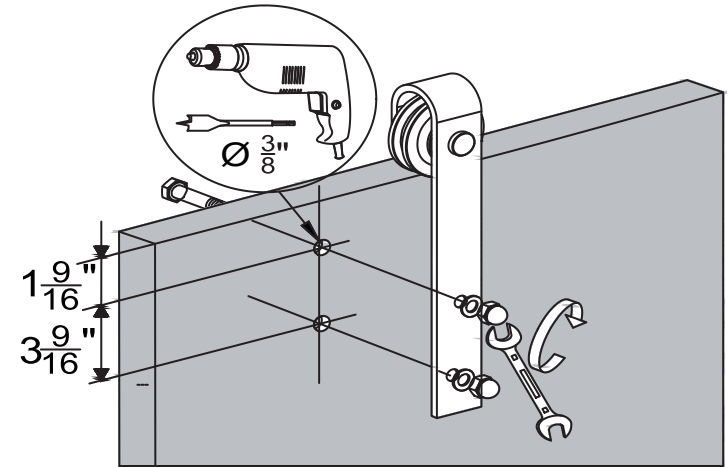

Step-5


The anti jump pads are used to prevent the door from lifted off the rail when sliding the door. Please drill the holes 12" away from the edge of the door. Then install the anti jump pads on the top of the door.

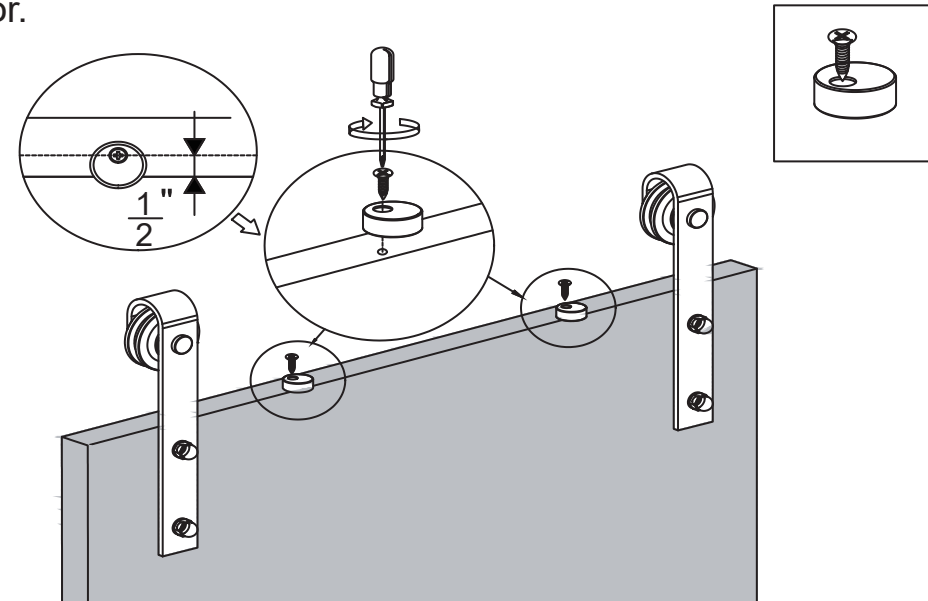

Step-6



Hang the door on the rail.

Turn the anti jump pads approximately 180 degrees so that they are stuck between the door and the rail.

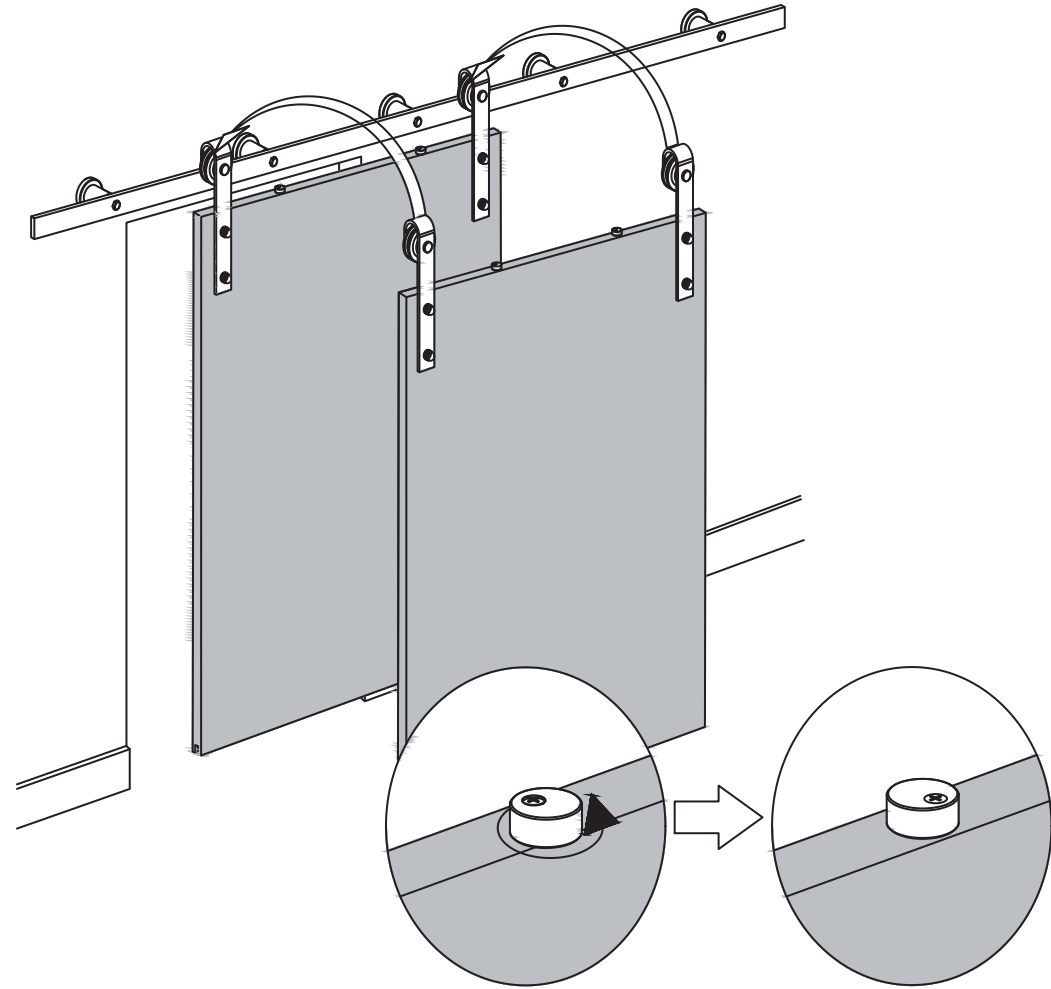




Step-7

Install the handle

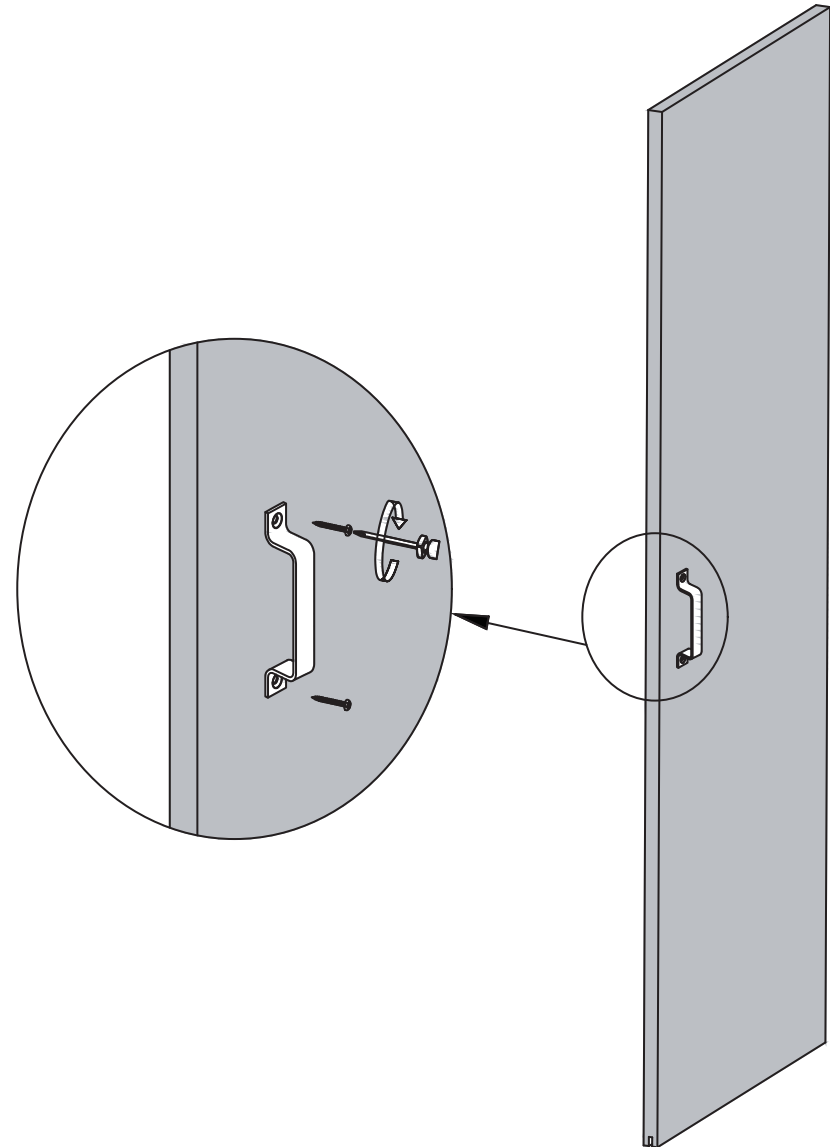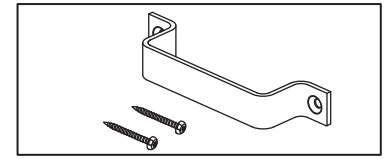


Step-8

Use router to cut groove with a width of $\frac{1}{4}$ " and a height of $\frac{3}{4}$ ".
Floor guide can keep your door stable and prevent the door bottom swinging when use.

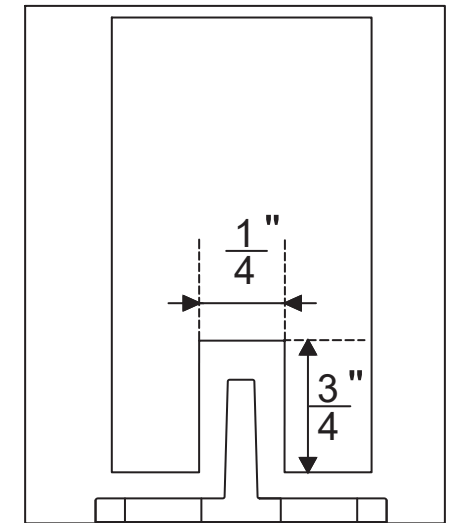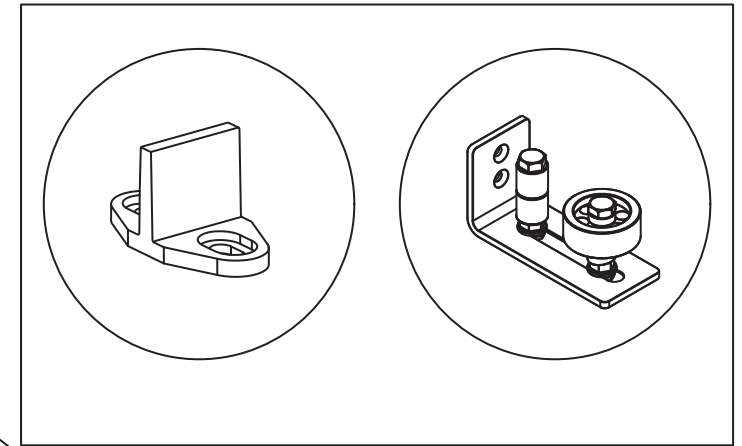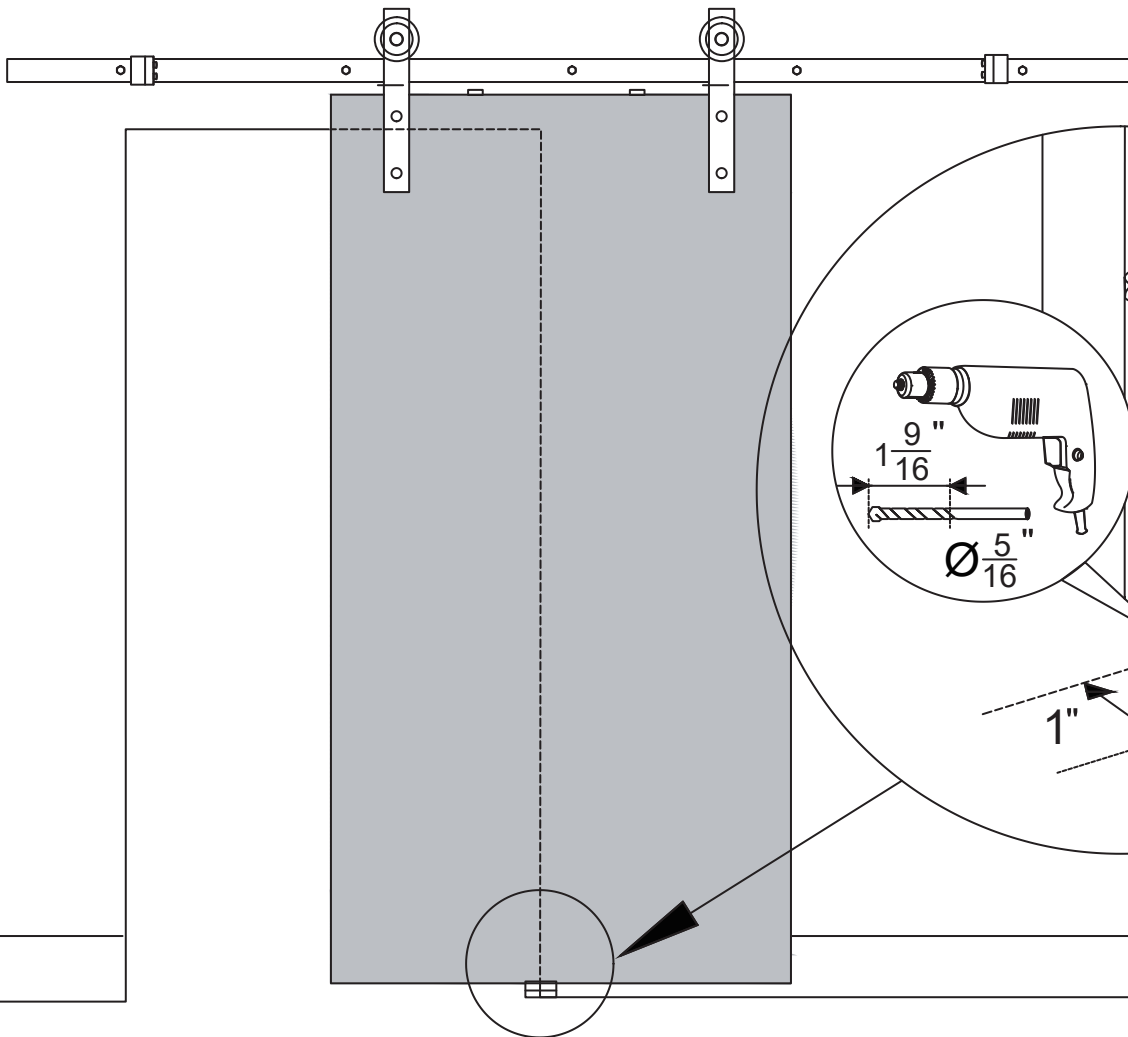


Step-9

Plug the connecting holes on the ends of the rail with rubbers.






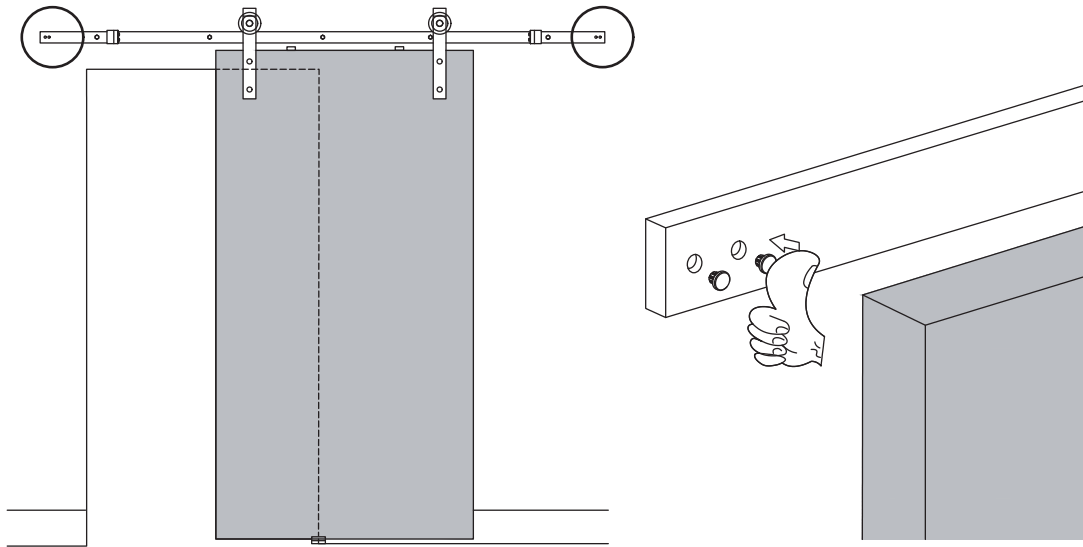


Option (Double Doors)

The rail has pre-drilled connecting holes. You can combine 2 or more kits into 1 with a **connector II** for more widely use.

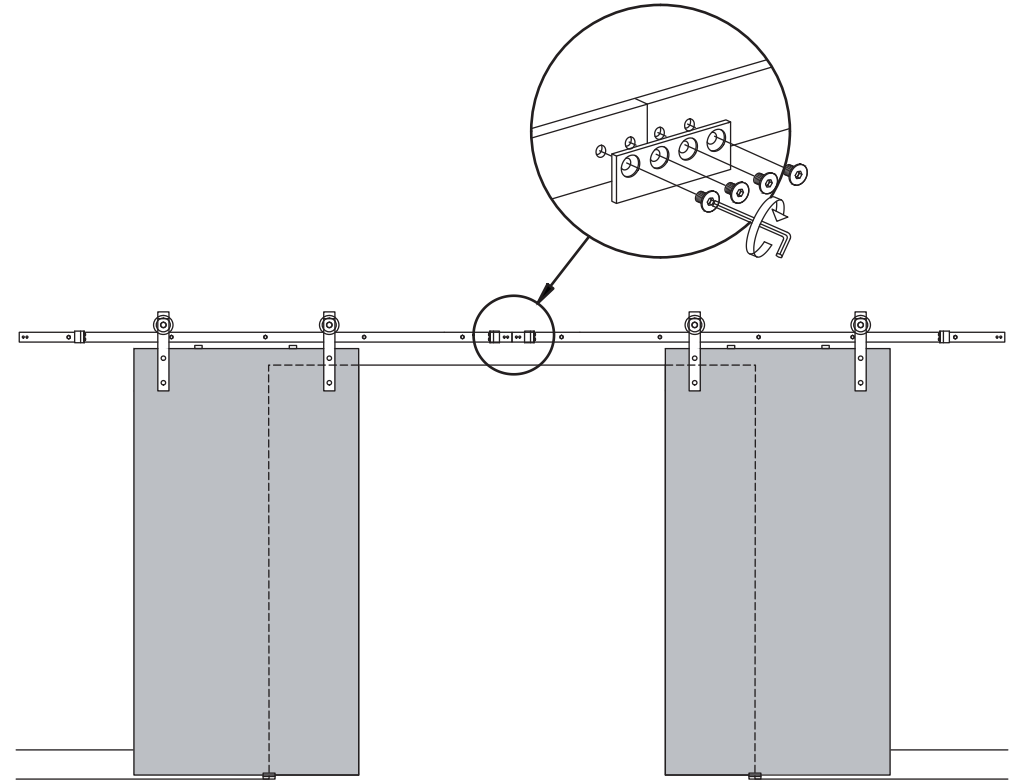

PARTS LIST

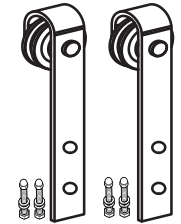	4FT Single Door Kit	5FT Single Door Kit	5.5FT Single Door Kit	6FT Single Door Kit	6.6FT Single Door Kit	7FT Single Door Kit	8FT Single Door Kit	9FT Single Door Kit	10FT Single Door Kit	12FT Single Door Kit	14FT Single Door Kit	16FT Single Door Kit	6FT Double Door Kit	6.6FT Double Door Kit	7FT Double Door Kit	8FT Double Door Kit	10FT Double Door Kit	12FT Double Door Kit	14FT Double Door Kit	16FT Double Door Kit
1.Track 	1X4FT	1X5FT	1X5.5FT	1X6FT	1X6.6FT	2X3.5FT	2X4FT	2X4.5FT	2X5FT	3X4FT	4X3.5FT	4X4FT	1X6FT	1X6.6FT	2X3.5FT	2X4FT	2X5FT	3X4FT	4X3.5FT	4X4FT
2.Hangers and bolts 	1Pair	1Pair	1Pair	1Pair	1Pair	1Pair	1Pair	1Pair	1Pair	1Pairs	1Pairs	1Pairs	2Pairs	2Pairs	2Pairs	2Pairs	2Pairs	2Pairs	2Pairs	2Pairs
3.Spacer 	3	4	4	5	5	5	6	7	8	9	10	12	5	5	5	6	8	9	10	12
4.Anti jump pads 	1Pair	1Pair	1Pair	1Pair	1Pair	1Pair	1Pair	1Pair	1Pair	1Pairs	1Pairs	1Pairs	2Pairs	2Pairs	2Pairs	2Pairs	2Pairs	2Pairs	2Pairs	2Pairs
5.Door stoppers 	1Pair	1Pair	1Pair	1Pair	1Pair	1Pair	1Pair	1Pair	1Pair	1Pair	1Pair	1Pair	1Pair	1Pair	1Pair	1Pair	1Pair	1Pair	1Pair	1Pair
6.Floor guide 	1	1	1	1	1	1	1	1	1	1	1	1	2	2	2	2	2	2	2	2
7.Track connector I 							1	1	1	2	3	3				1	1	2	3	3
8.Track connector II 	1	1	1	1	1	1	1	1	1	1	1	1								
9.Handle 	1	1	1	1	1	1	1	1	1	1	1	1	2	2	2	2	2	2	2	2