




60 MIN

Approximate assembly time



Want to see a video on how
to assemble this product?

Scan the QR code

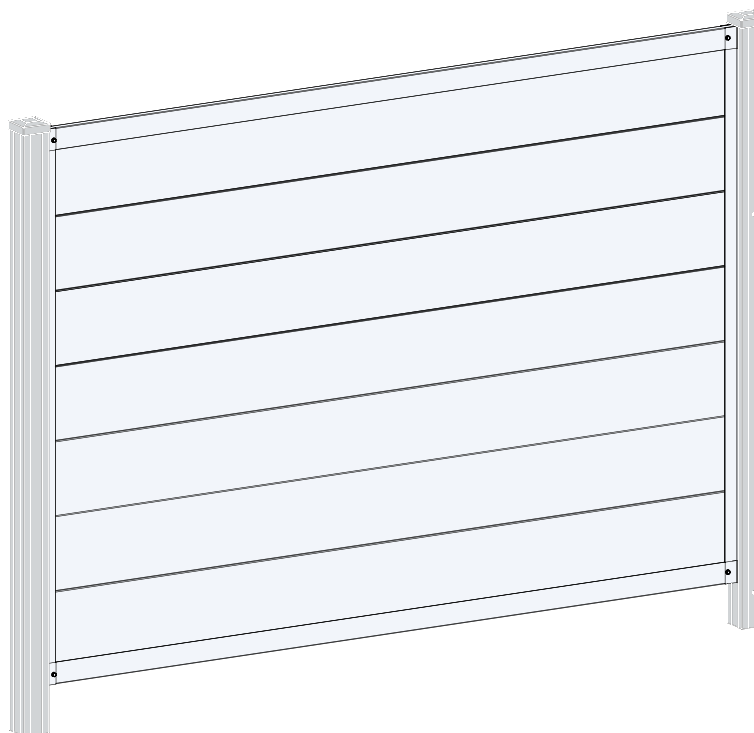

ASSEMBLY INSTRUCTIONS

BL19117/BL19118

SLATE GREY/WALNUT BROWN

EDGEWOOD

4FT RESIN
PRIVACY FENCE
(4'H X 6'W)

VER. 022426

GENERAL INFORMATION

MISSING OR DAMAGED PARTS?



► **Visit Our Website**
so we can help you right away!
parts.nychbrands.com

* You can also reach us via phone or email.

Hours of Operation - **Weekdays 9am-5pm EST**

To better help you, **please have the following**

- Your product number (**BL19117/BL19118**)
- Your affected part letters
- Your original product box

NEED ASSEMBLY HELP?

If you are having problems with assembly or installation of this product,
please contact at:

📞 **704-892-5222 / 877-234-6196** ✉ **hmmm@wambamfence.com**

NEED TO RETURN?

If for some reason you need to return this product, please allow us to help resolve your issued first. If you still decide to return this product, **you will need to initiate the return from the company you originally purchased from.**


4' H Post

BL19127/BL19128




POST PARTS

P1



Post Cap

P2



Pipe
1 5/8" Dia. x 58 3/4"


P3



Post
2 1/2" x 2 1/2" x 54 3/4"


BUYING GUIDE

4FT EDGEWOOD FENCE, GATE, AND POSTS

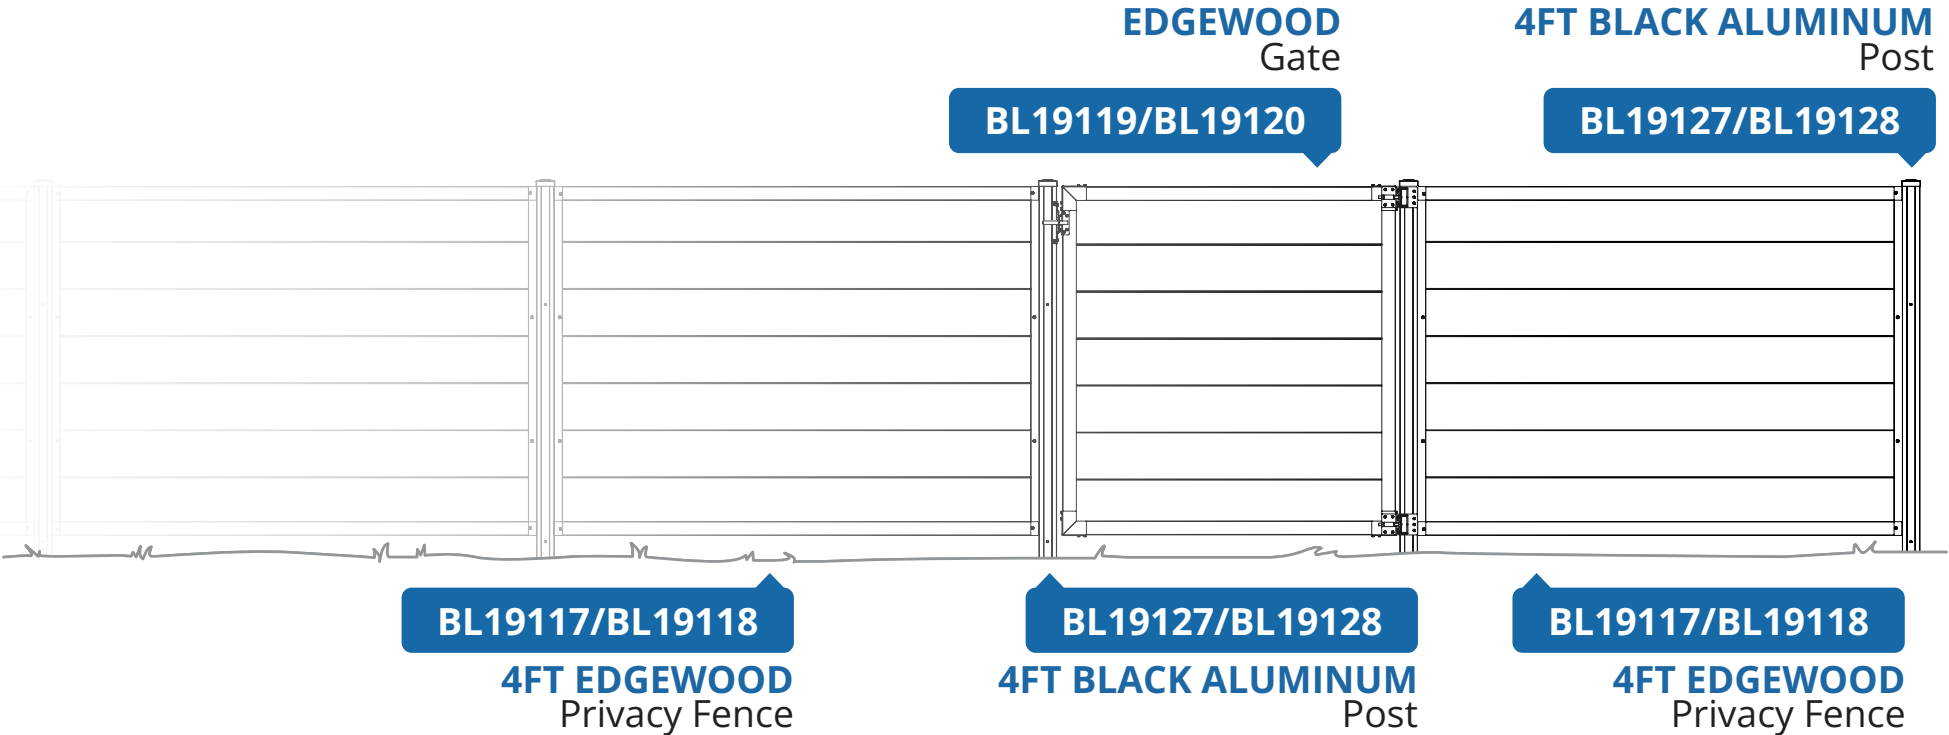


4FT EDGEWOOD

DETAILED DIMENSIONS AND SPECIFICATIONS

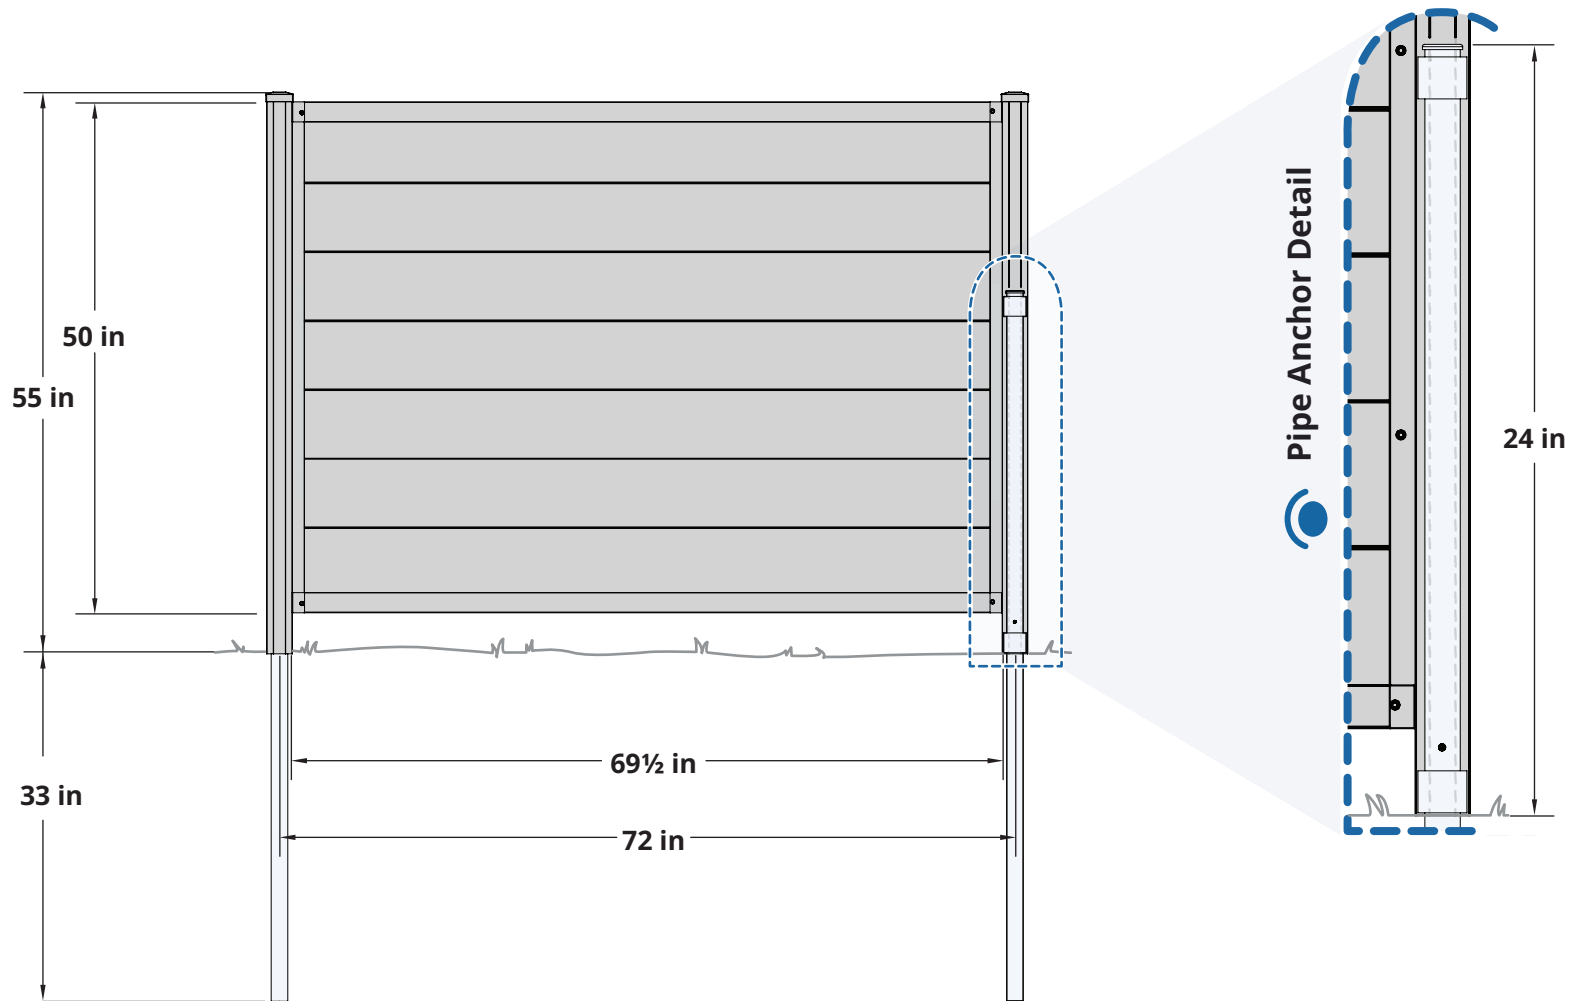


TOOLS NEEDED

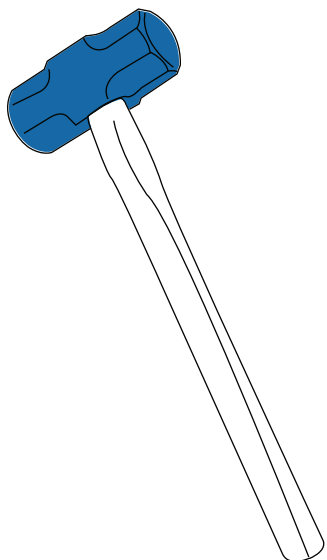

Good

Sledge Hammer (10-15 lbs)


- Recommended for small projects. Two people will be needed to maintain a level pipe installation.

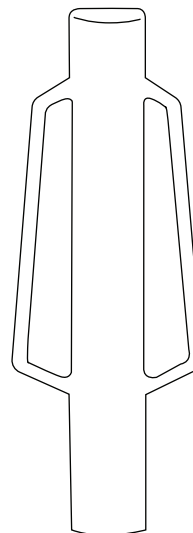

Better

Manual Post Pounder (12-18 lbs)


- Recommended for projects with less than 10 pipes. These can be purchased online from Amazon, Home Depot, or Lowes.

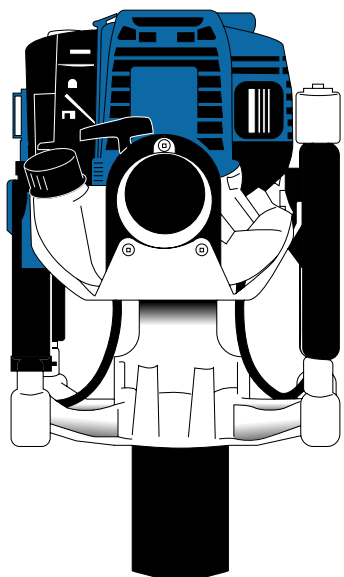

Best


Gas Powered Post Pounder

- Best for large projects as this option requires the least physical labor. Visit our website for rental information. Any comparable gas powered pounder will work as well.

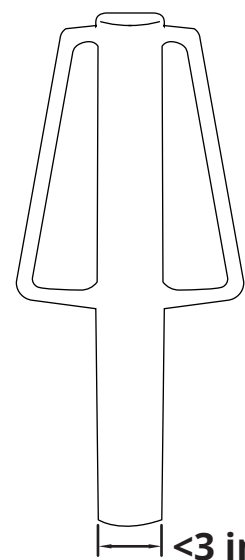


Note: Ensure whichever post pounder you choose has a barrel 3" or greater in diameter.


TOOLS NEEDED

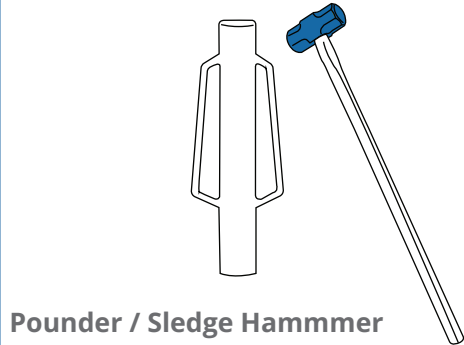


Pounder / Sledge Hammmer

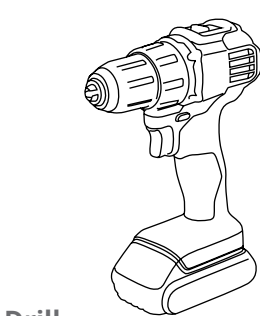


Drill

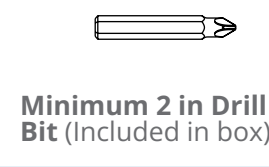


Minimum 2 in Drill Bit (Included in box)

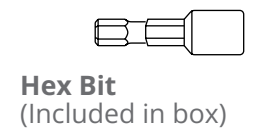

Hex Bit (Included in box)

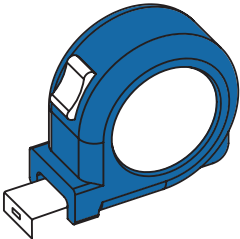


Measuring Tape

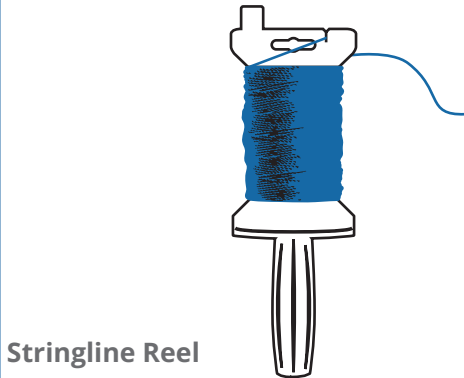


Stringline Reel



Stakes (for stringline)

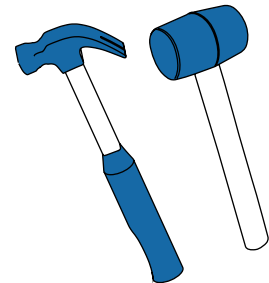


Hammer or Mallet (Optional for stakes)

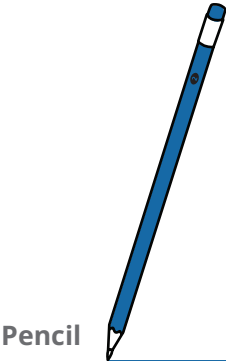


Pencil



Safety Glasses

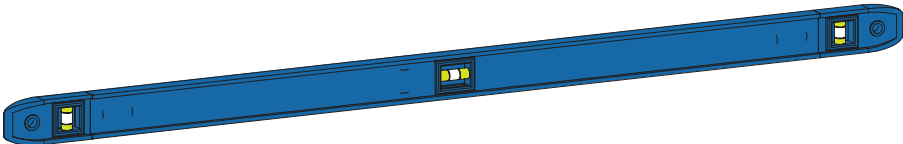


Large Level

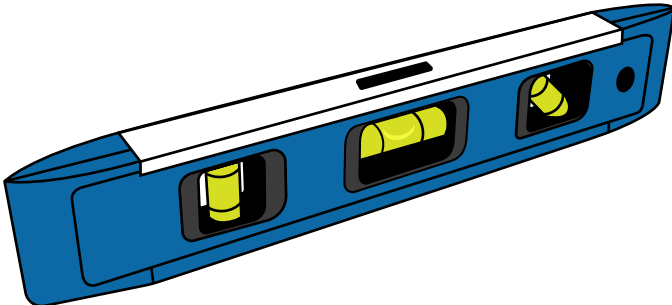

Small Level


INCLUDED MATERIALS

A

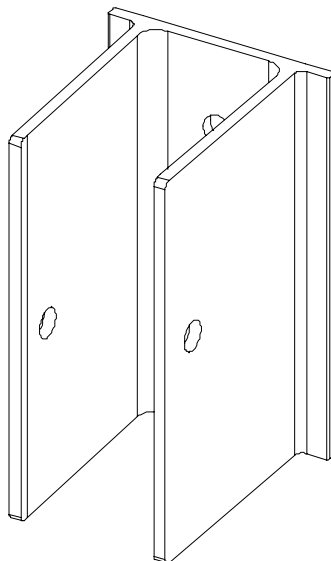

Rail Bracket (4)

B



Note: Extra
screws are
included


1/2" Hex Screw (20)
Included bit in bag B

D




C-Channel (2)
1 1/8" x 1 1/4" x 46"

C




1/2" Self-Drilling Screws (6)
Included bit in Bag C

E

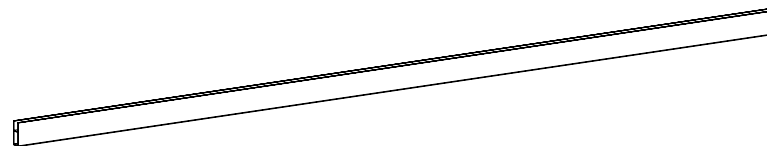

Rail (2)
3/4" x 2" x 69 1/4"


F

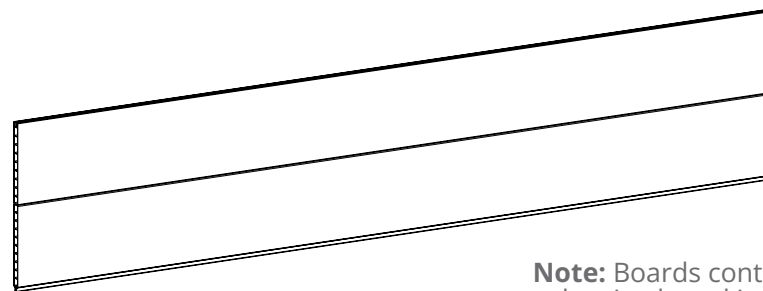

Tall Privacy Board (3)
5/8" x 13 7/8" x 69"

Note: Boards contain
galvanized steel inserts

G

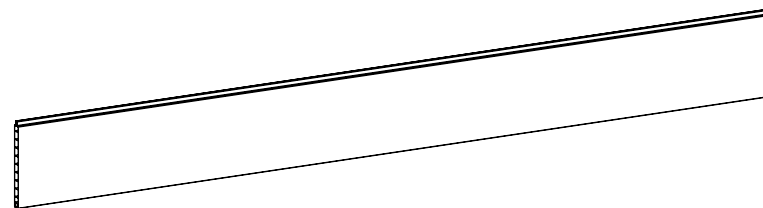

Short Privacy Board (1)
5/8" x 7 1/8" x 69"

INSTALL METHODS


OPTION **A** IN GROUND



Important: Before you begin, we highly recommend you call **811**!




Note: Build one full panel **FIRST** - there is a learning curve. After one panel is installed, it is most efficient to put all pipes in the ground, then build panels onto the post.

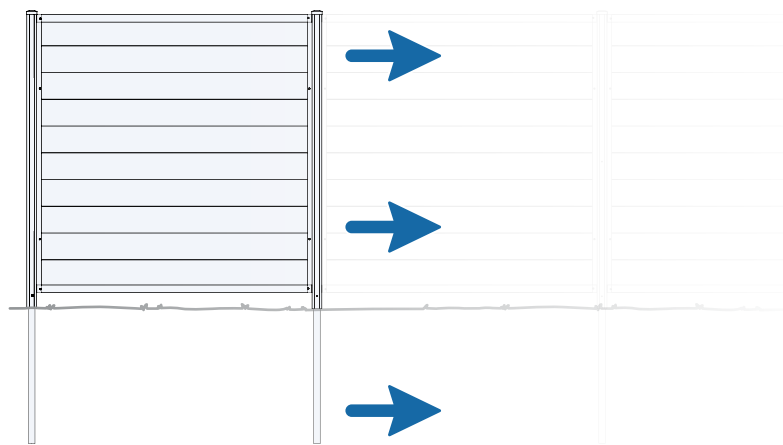

OPTION **B** SURFACE MOUNTED




Note: Before you begin, refer to your surface mount guide **BL19129/BL19130** for specific install instructions.


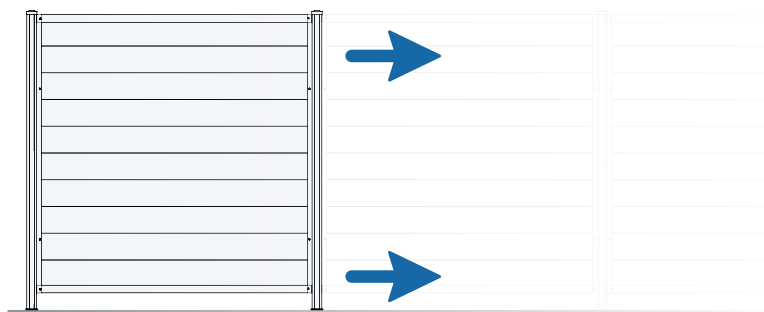


STEP 01 Determine Slope




Tools Required:

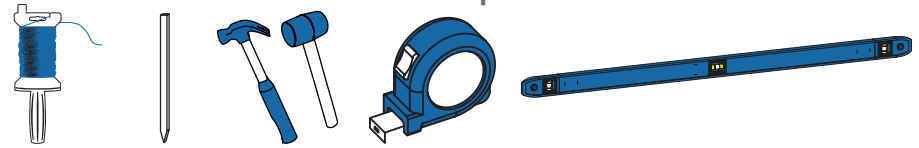

Note: If slope is greater than 3- 4" per 6', you will need to split panels and purchase an extra post & brackets.

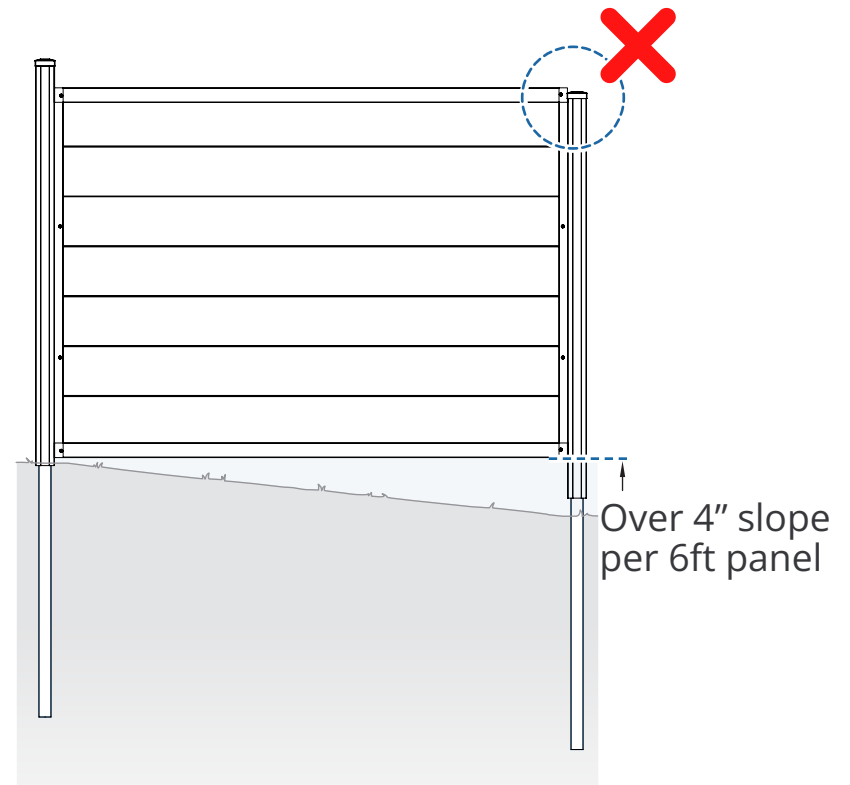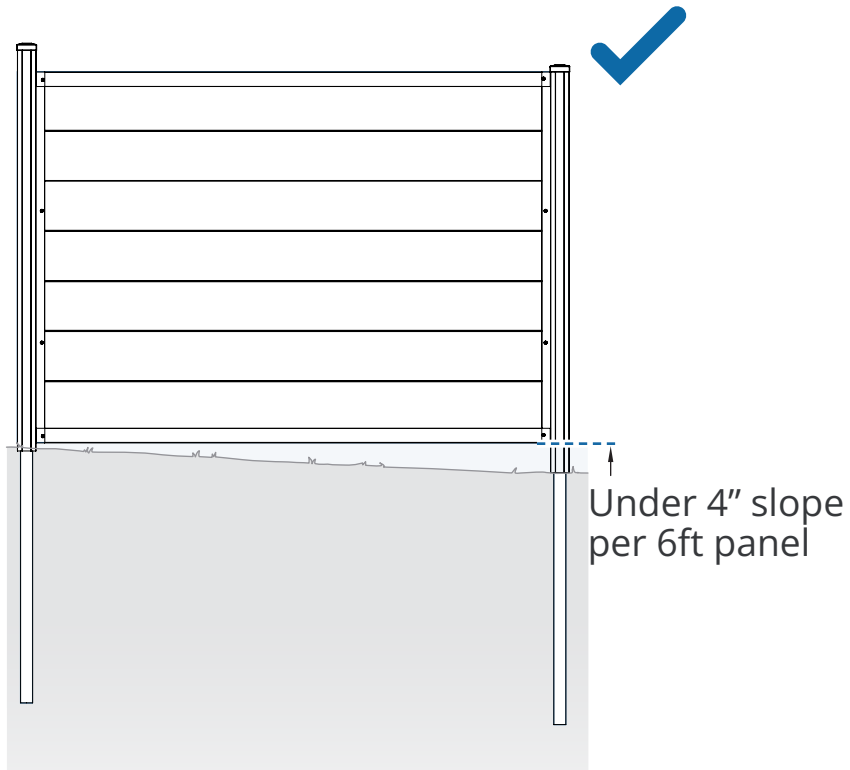


STEP 02 Set Stringline

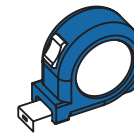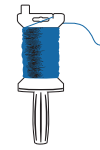

Tools Required:



Place the two stakes for each end of every fence run and tie string between the stakes. Your pipes will be driven according to this line.

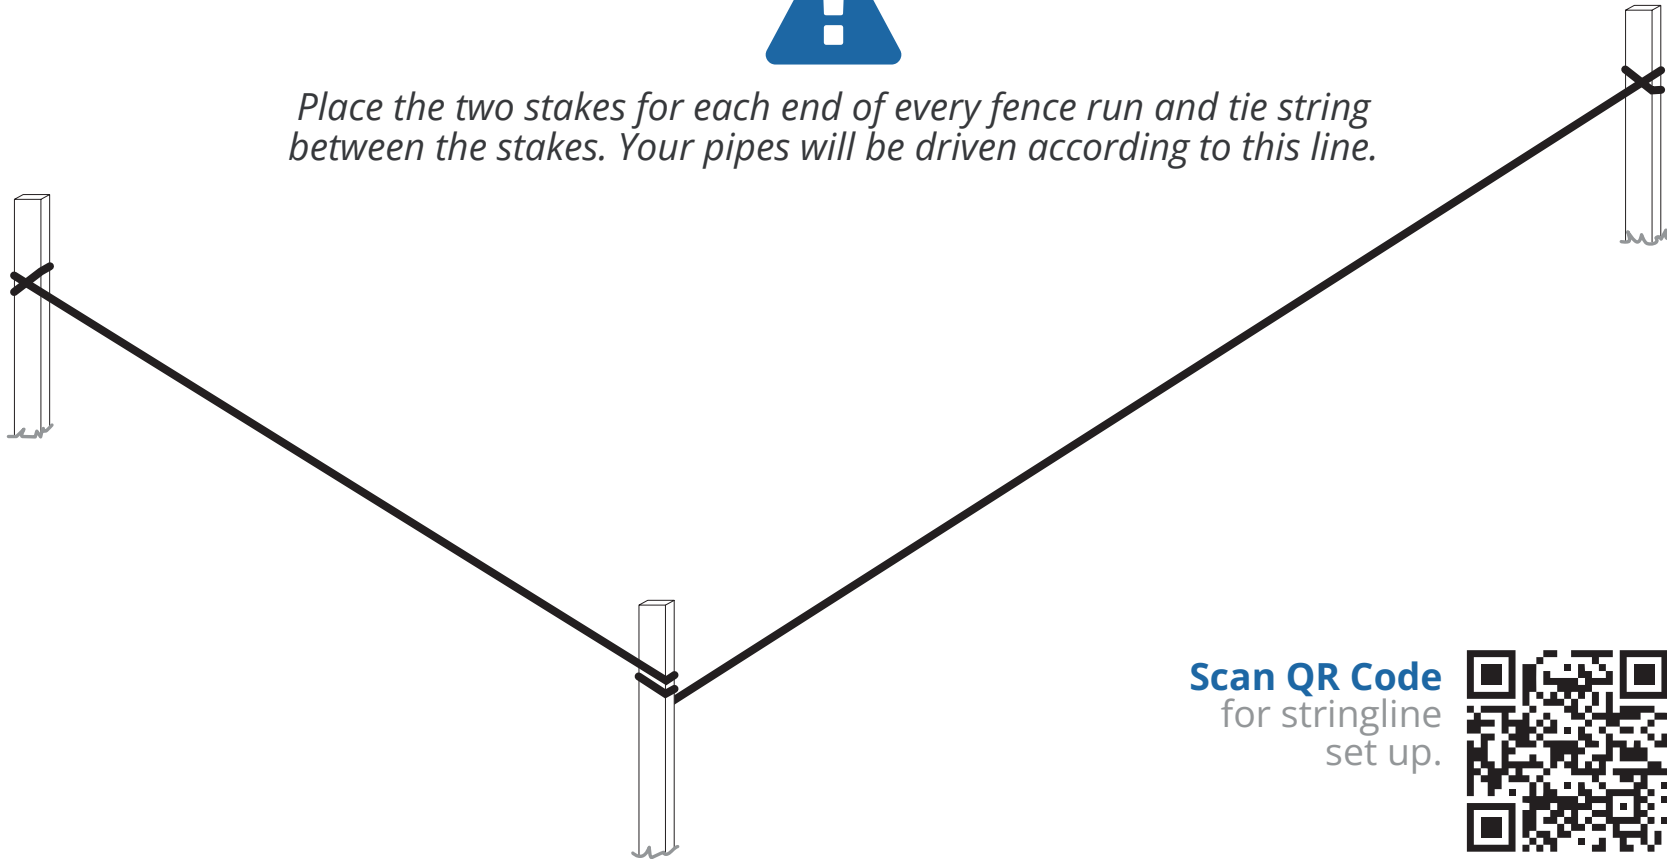


Scan QR Code
for stringline
set up.




STEP 03 Mark Pipe Locations

Tools Required:

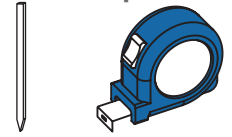


Use loose stakes or mark the ground every 72" to determine exact pipe locations.

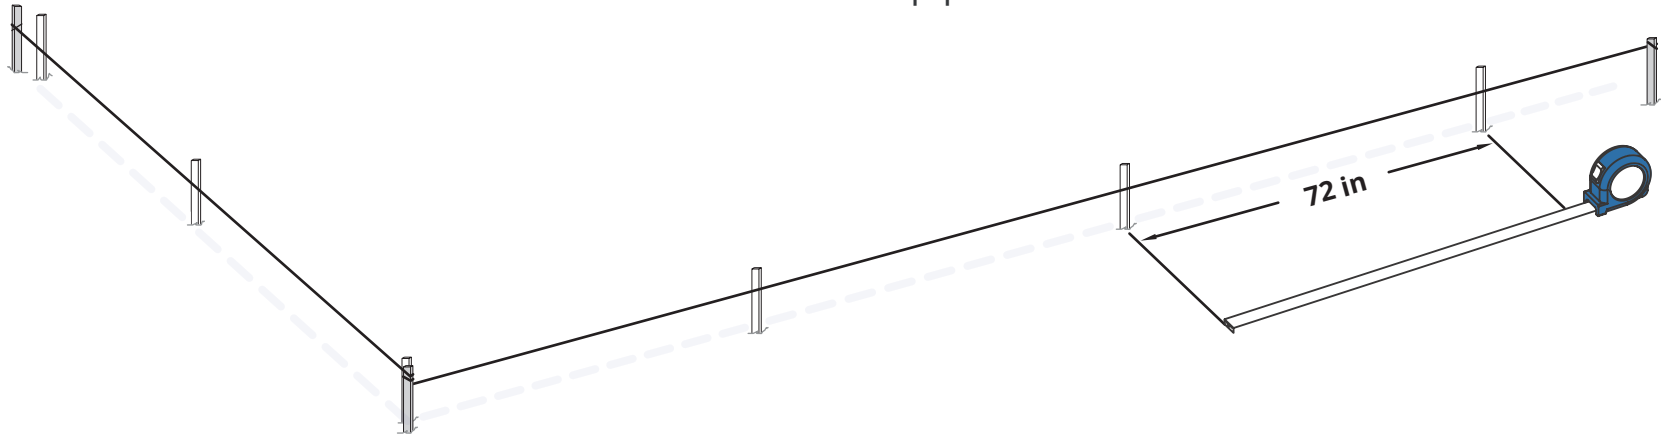


Note: Your measurement should be from center of pipe to center of pipe.

STEP
04 Tighten
Donuts

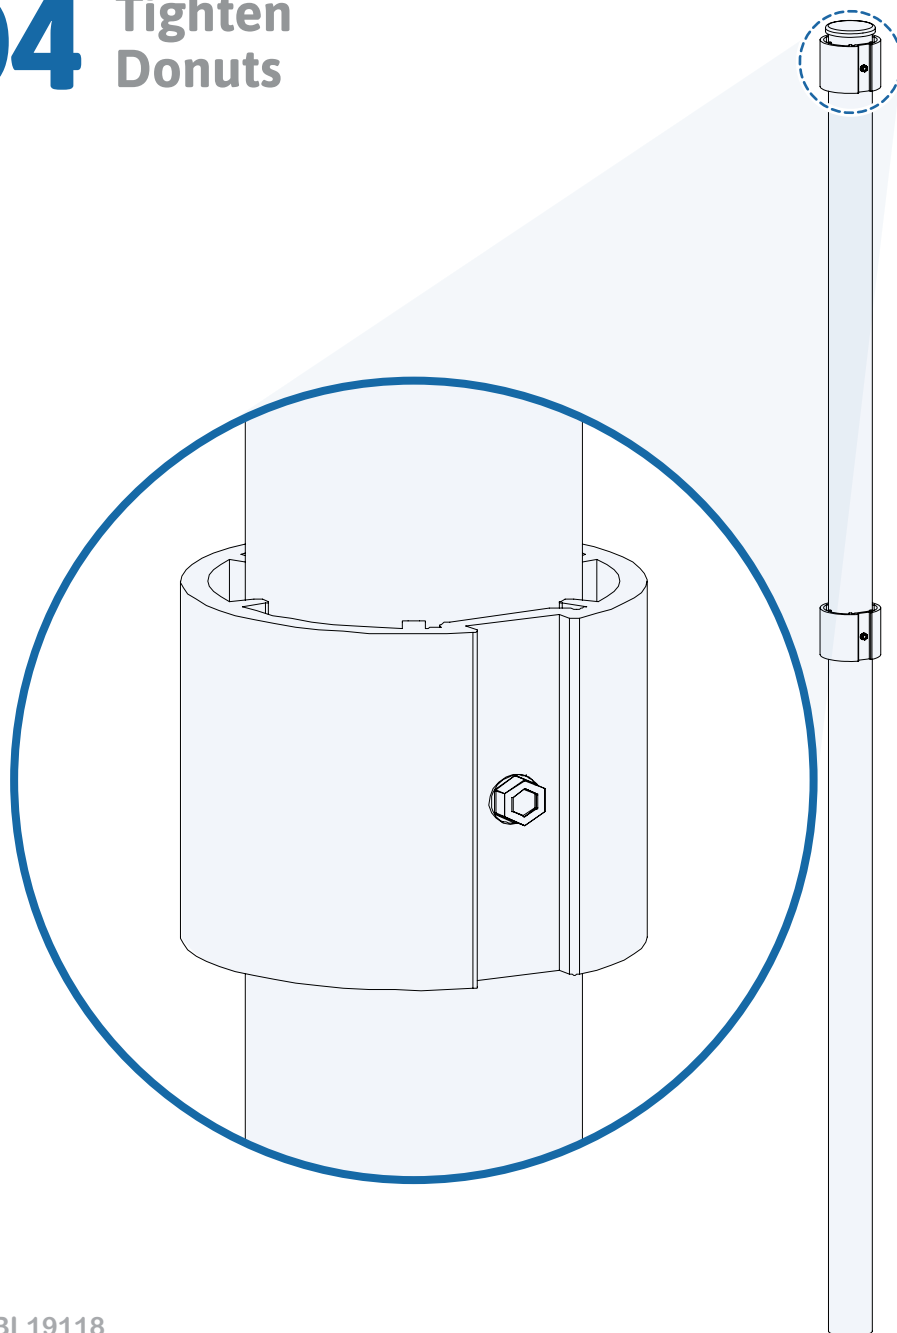




Tools Required:

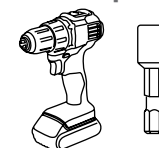


Warning: Before you install your fence, ensure your donuts are tightened. DO NOT overtighten.

STEP 05 Install Pipes

Tools Required:

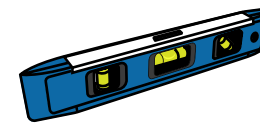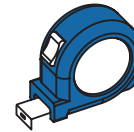

Parts:

**P2**

Drive your pipe into the ground.





Note: Check for level roughly every 6 inches. To help maintain level pound the pipe equally from all 4 sides. Pound the pipe until the lower gear is touching the ground.

Scan QR Code
to see how to
level your pipes.





Center of pipe to center of pipe - 72 in

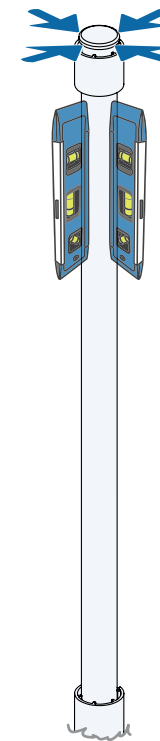

Check that the pipe is level front to back and left to right.



STEP 06 Install Posts

Place your posts over your pipes.

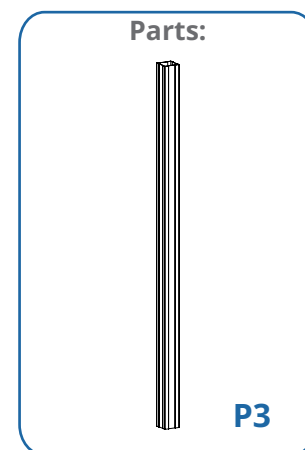
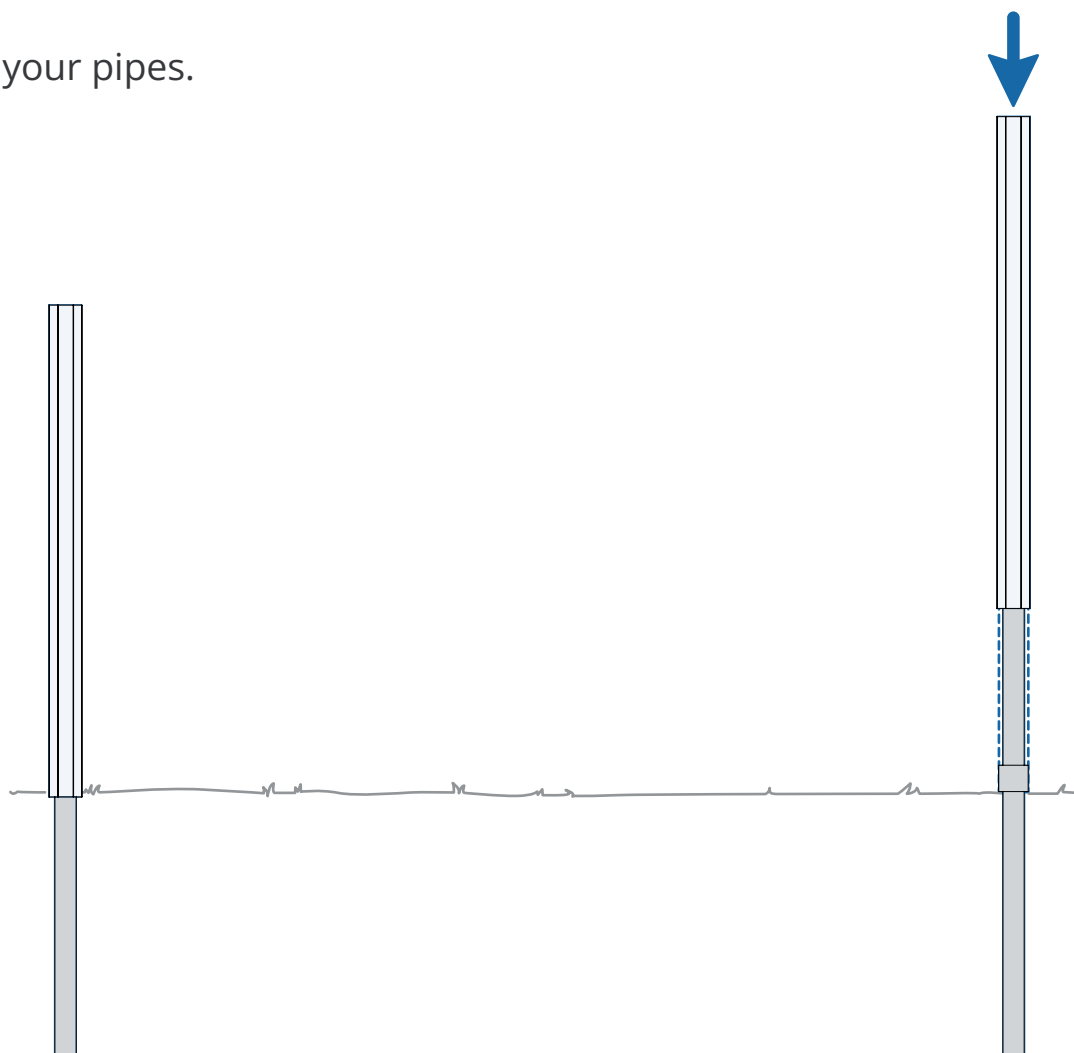


STEP 07a Sloped Ground

Tools Required:

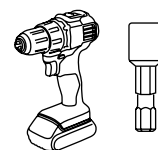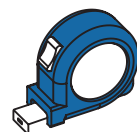


Parts:

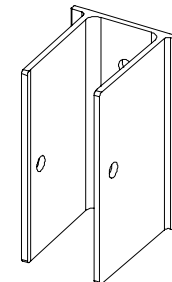**A x1****B x2**



If your posts are on flat ground, proceed to the next step.

If your ground is sloped, start by identifying the post that is on higher ground. Secure your bracket as close to the ground as possible against the higher post. Use your rail to ensure the bracket on the lower elevation post is level with the first bracket.

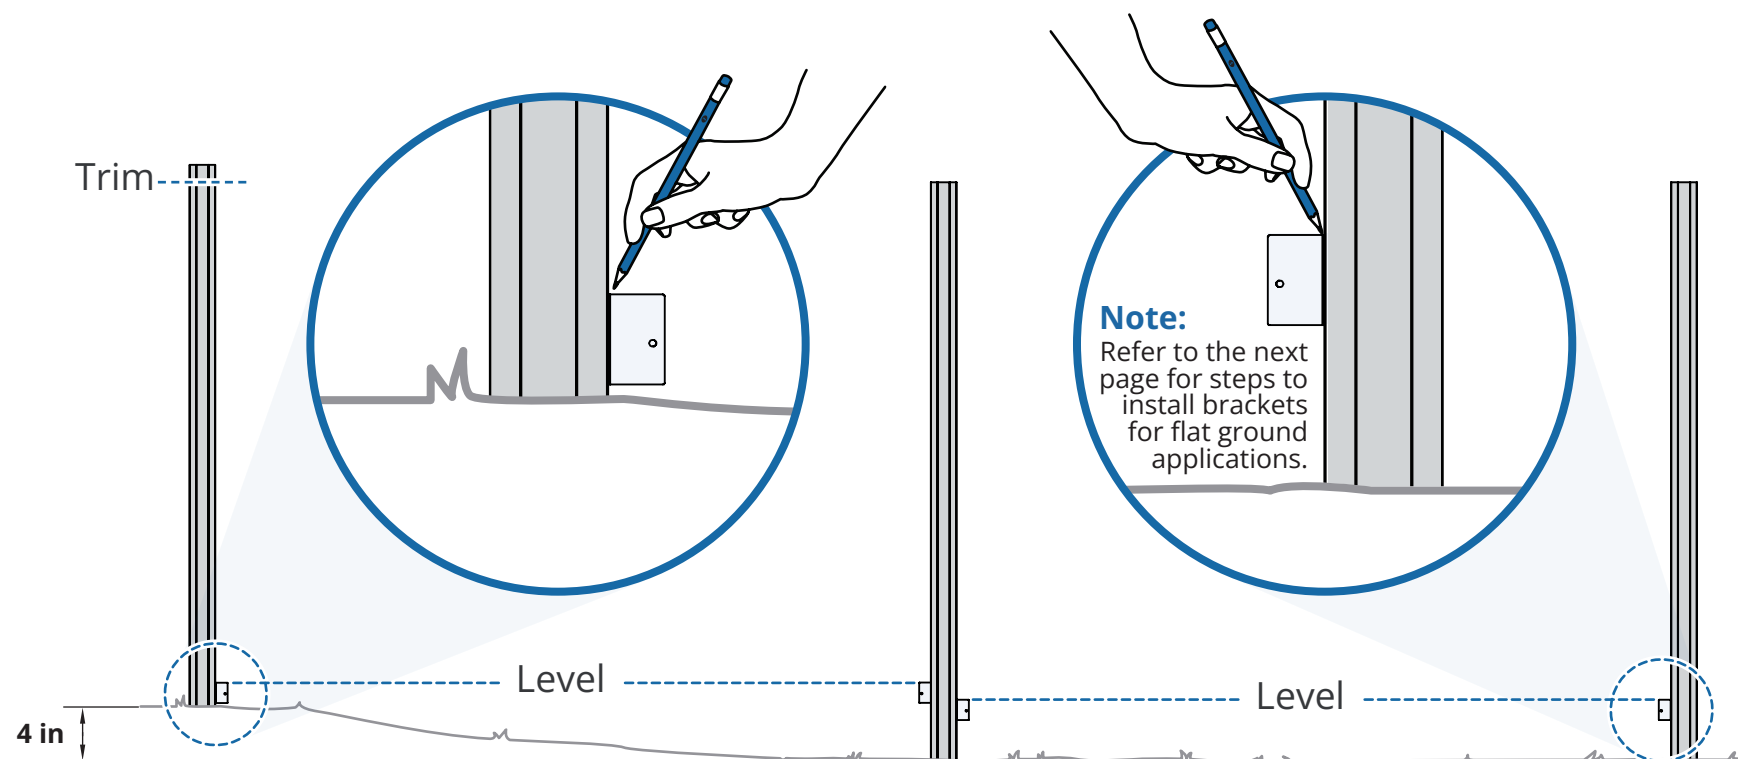


STEP 07b Bracket Installation


Tools Required:

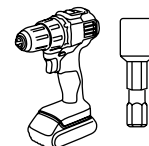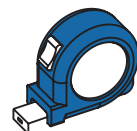

Parts:

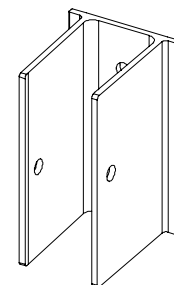

A x1






B x2

Set your brackets within the grooves on your post. Measure 2" from the ground, mark and secure bracket to your first post.

or


Stack your two brackets and mark your first post.

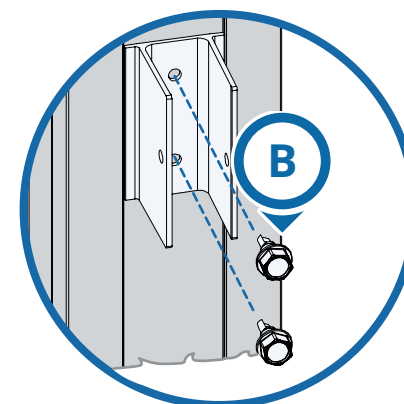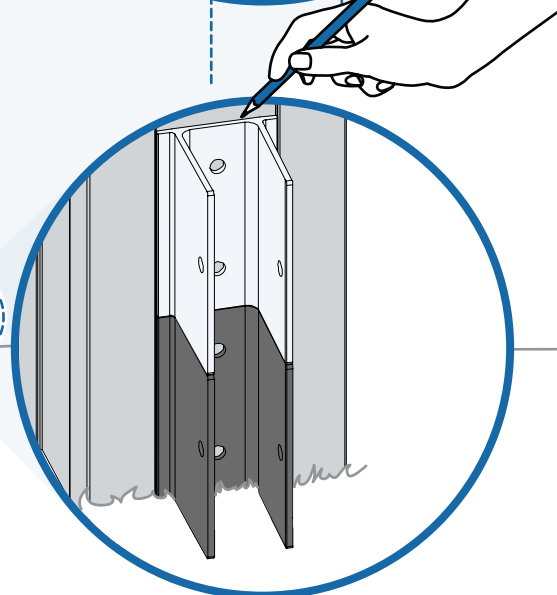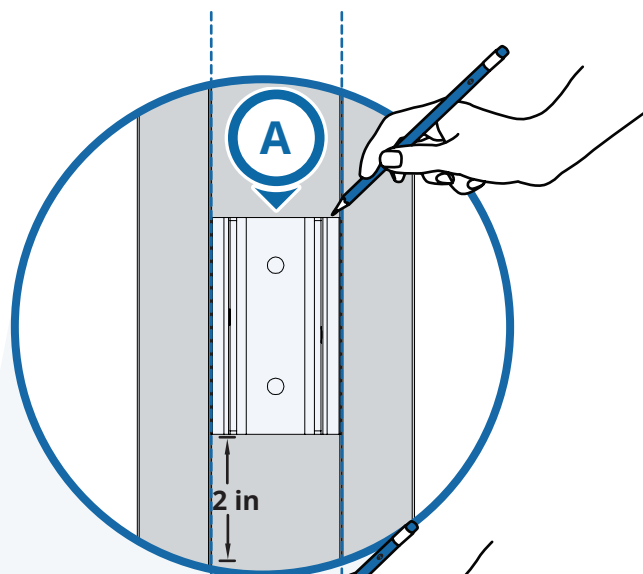



Secure with (2) ½" hex screws **(B)** from your panel box with included hex bit.

STEP 08 Bracket Alignment


Tools Required:

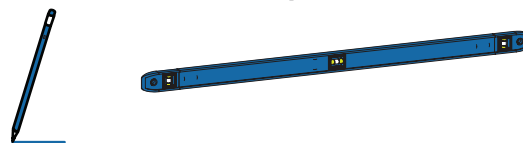

Parts:

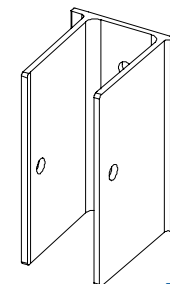**A x1****E x1**

Without driving screws, place a rail bracket over the bottom rail.
Using a level, mark the location of the second bracket and remove the rail.

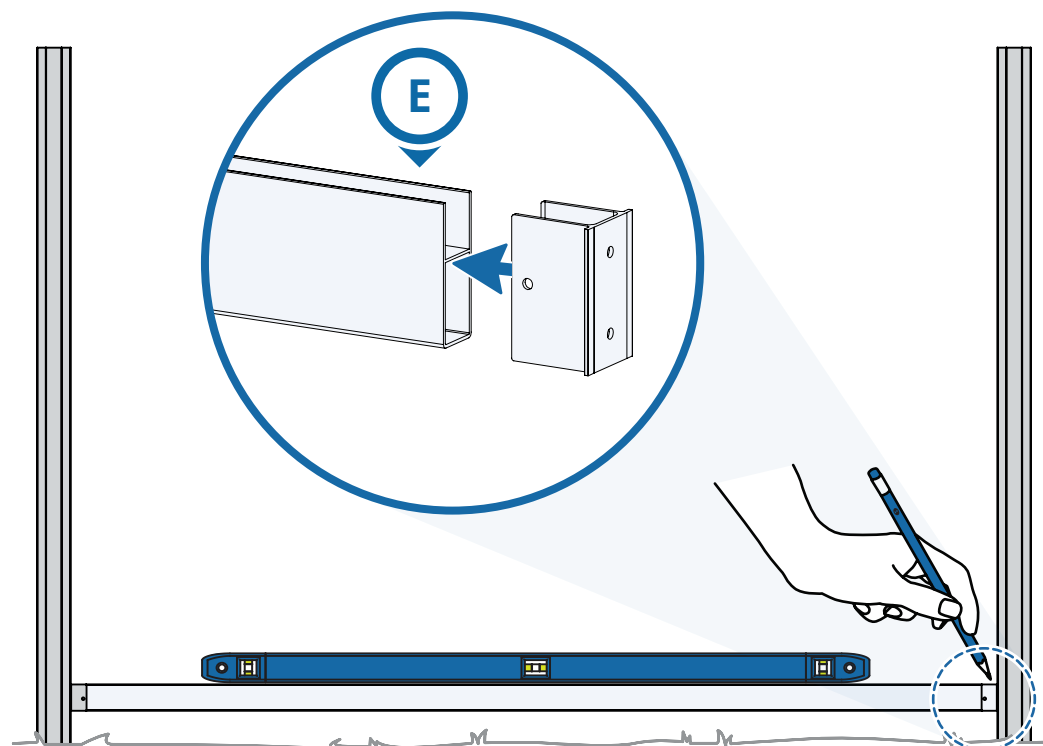


STEP 09 Bracket Installation



Remove rail after bracket location is marked.

Install bracket to post with (2) hex screws.

Tools Required:

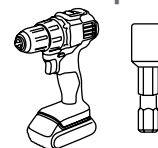

Parts:

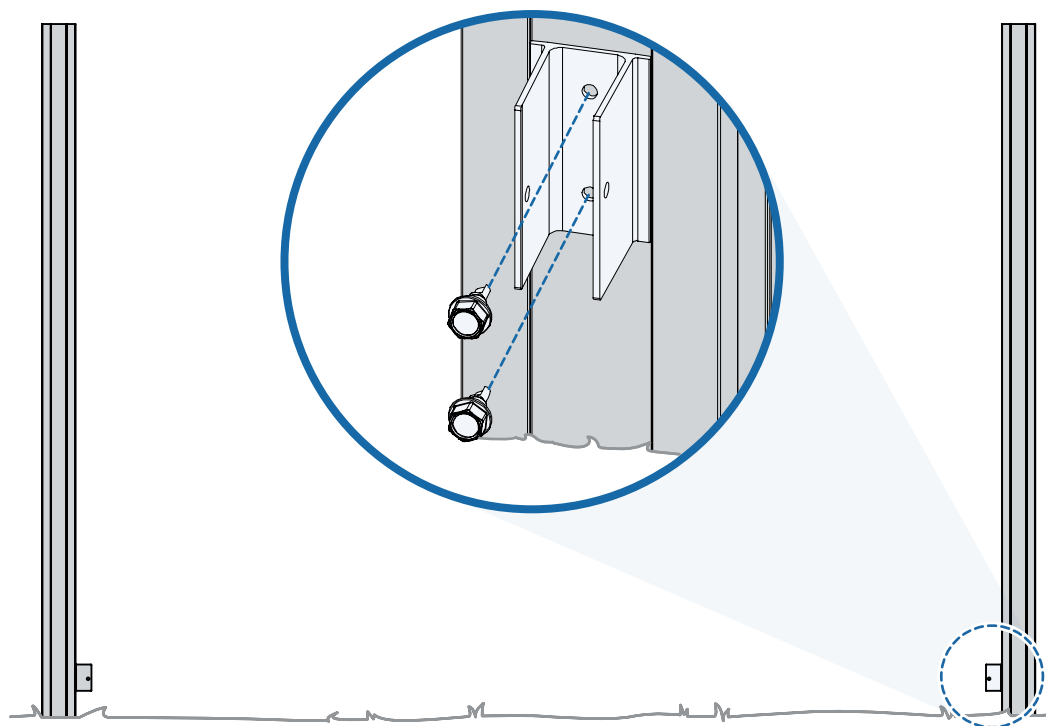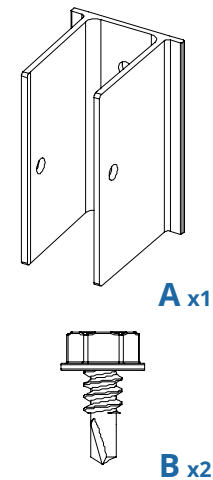


STEP
10 Bottom Rail
Install

Secure bottom rail **(E)** into brackets with (4) ½" hex screws.


Tools Required:




Parts:



E x1




B x4

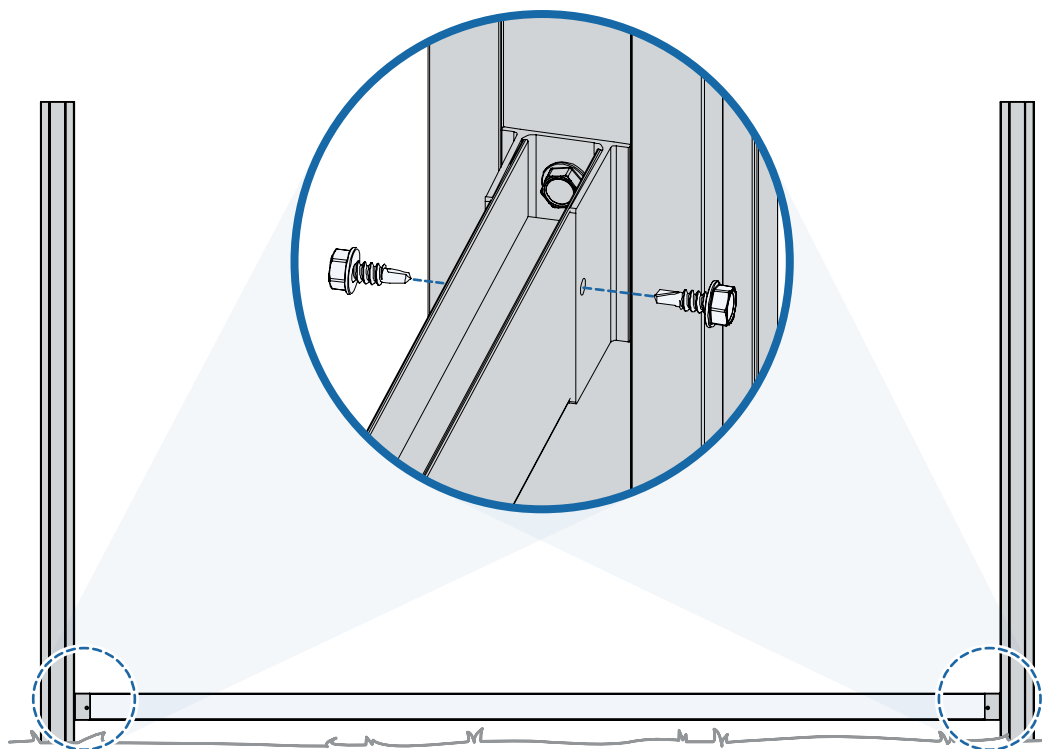



Important: Before the next step, swap out the hex head drill bit for the Phillips bit that is included in the bag for Part **F**.


Keep the hex head drill bit close as you will resume using this bit shortly.

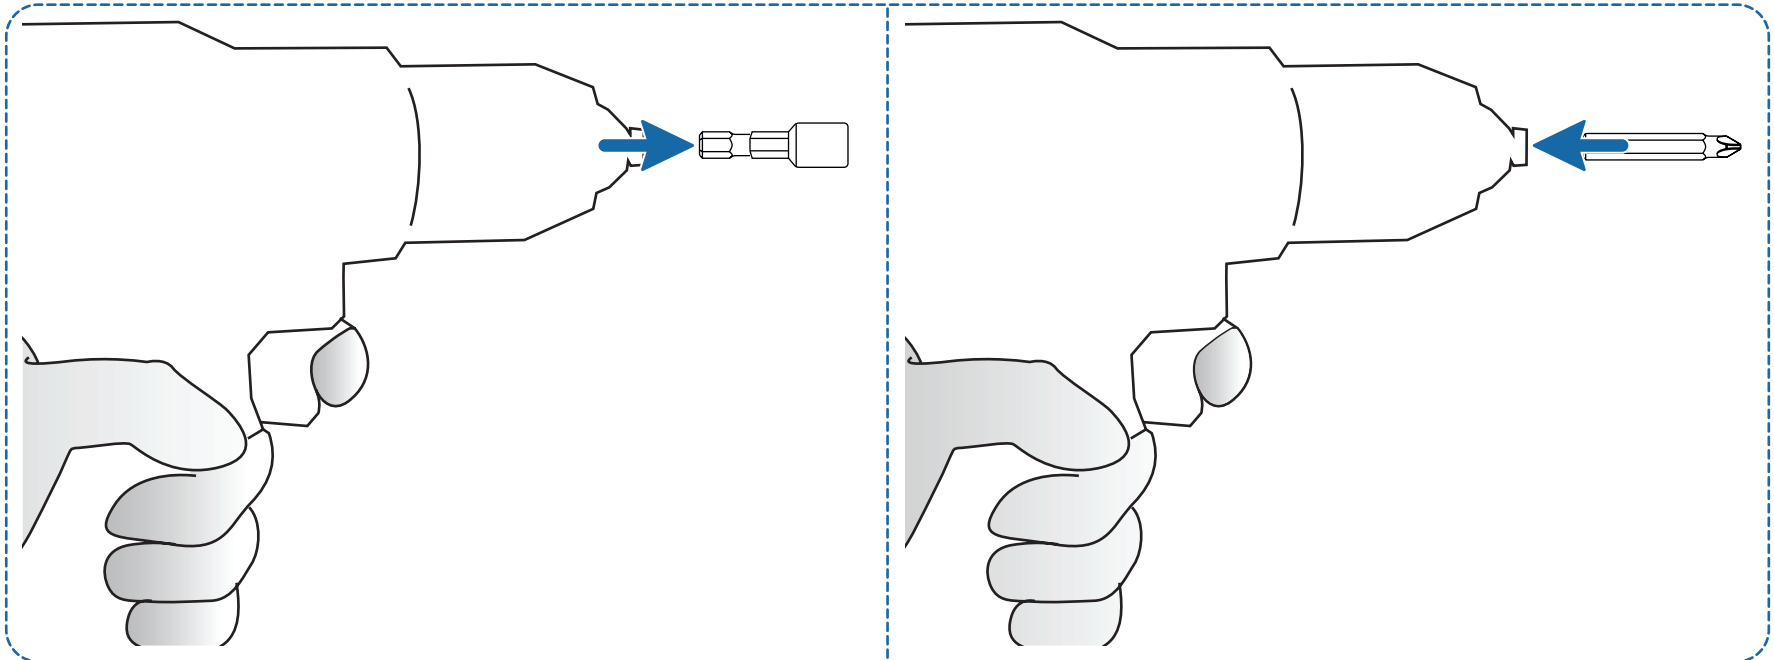

STEP 11 Top Bracket Installation

Align your C-Channel (**D**) over your bottom bracket. Secure each c-channel with (3) ½" self-drilling Phillips Screws (**C**).

Tools Required:

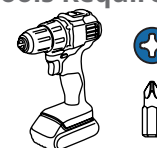

Parts:




C x6



D x2




Note: The Phillips screws are self-drilling and can drive through aluminum with light pressure. However, a drill bit is also included in the screw bag for Part **C**.

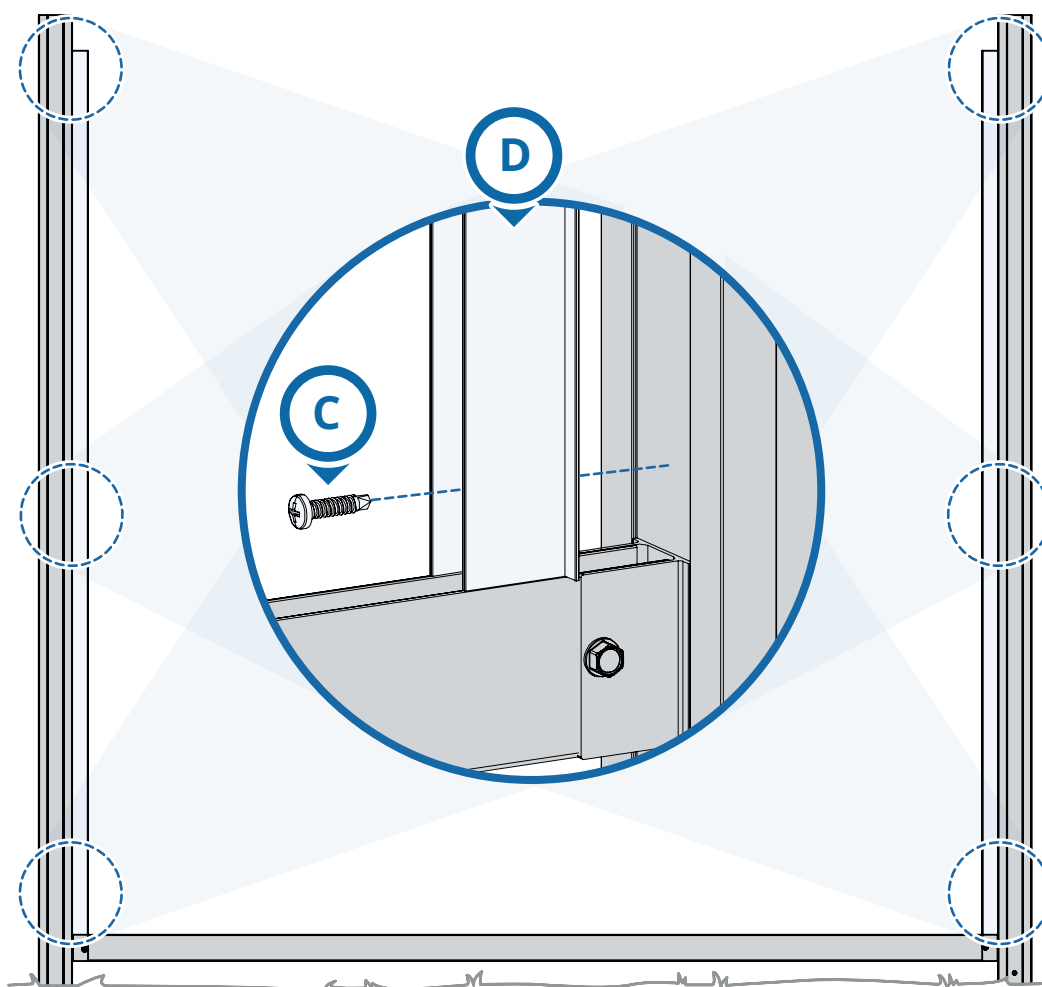



STEP 12 Top Bracket Installation

Align your top Brackets **(A)** over your C-Channels.
Secure with (4) Hex Screws **(B)**.

Tools Required:

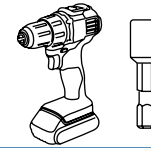


Parts:

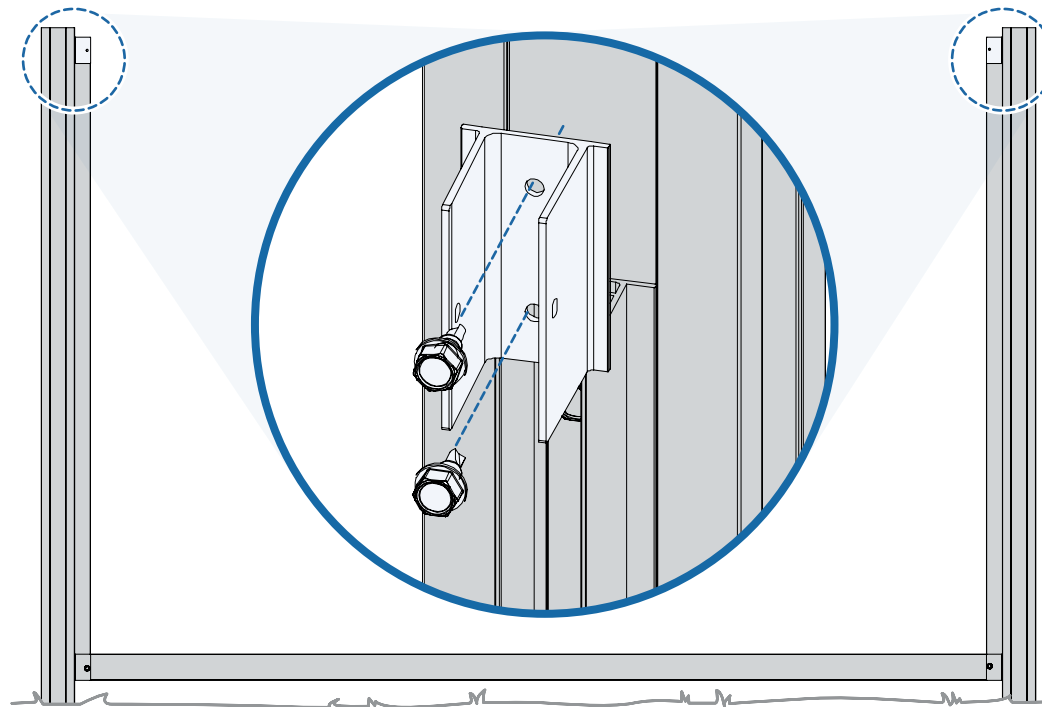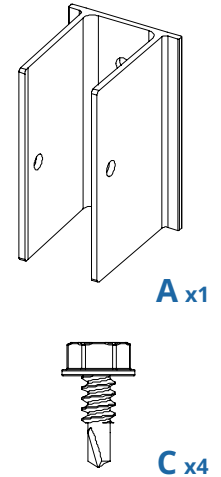



STEP 13 Board Infill Installation

Install your (3) Tall Privacy Boards (**F**) by sliding them down through your top bracket and C-Channel.

Slide the Short Privacy Board (**G**) down until it interlocks with the other privacy boards.

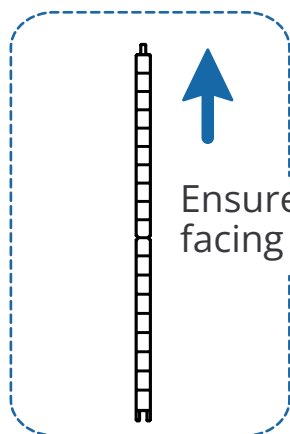


Ensure notch is facing upwards.

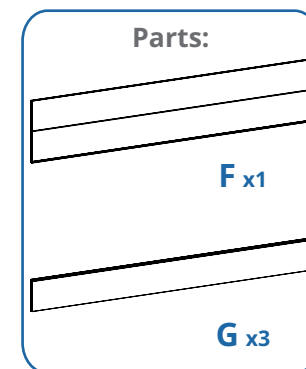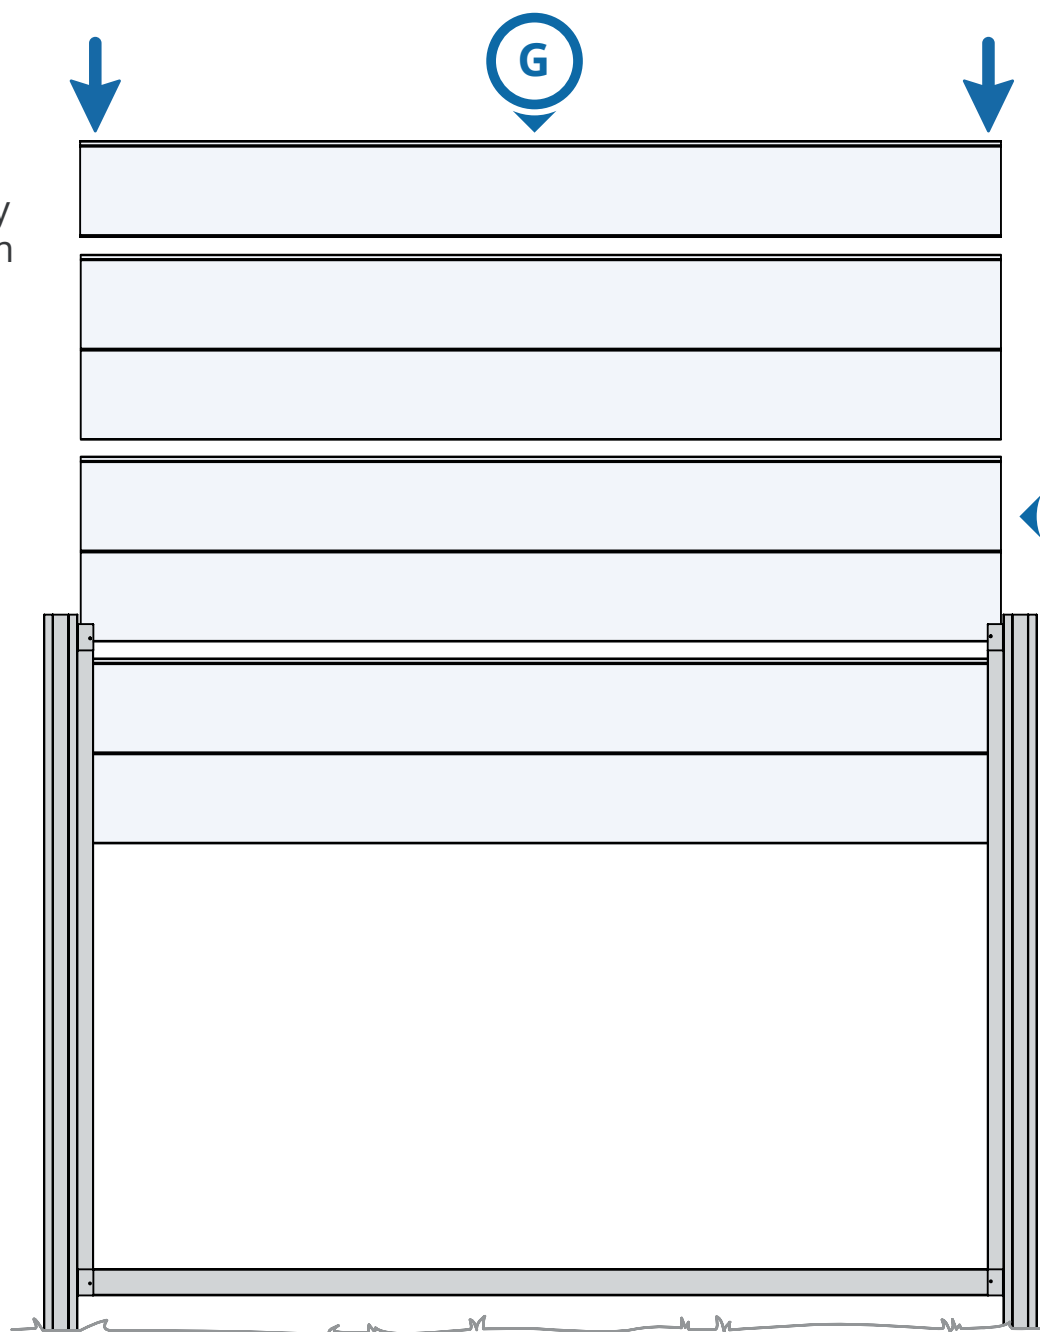


Note: Posts may need to be pushed out slightly at the top to insert the boards.

STEP
14 Top Rail
Install


Tools Required:

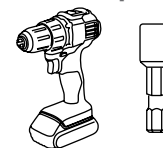



Parts:



E x1



B x4

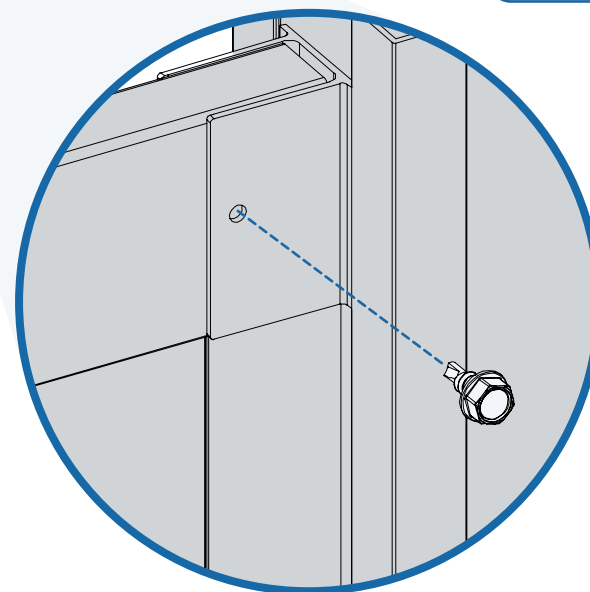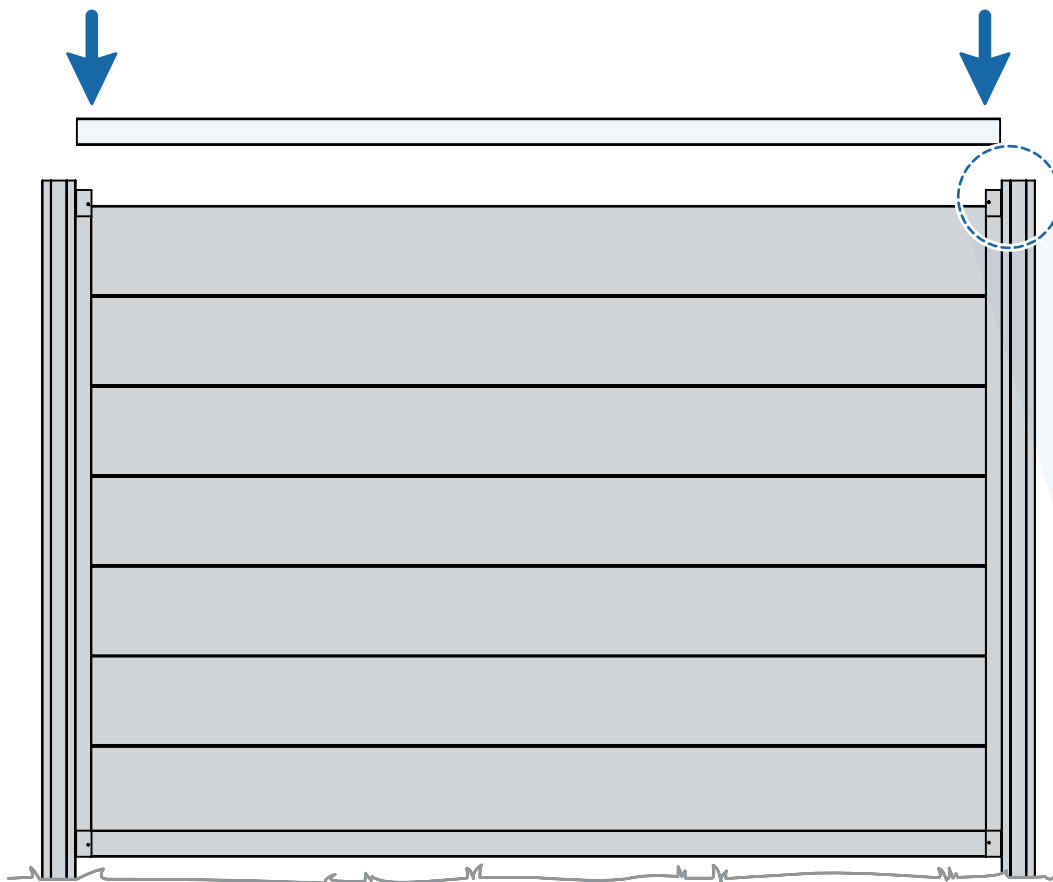


Apply downward force and
screw in (4) Hex Screws **(B)**.


STEP 15 Post Caps

If needed, trim your posts with a fine tooth blade and place caps on posts to finish your panel.

Parts:



Cap

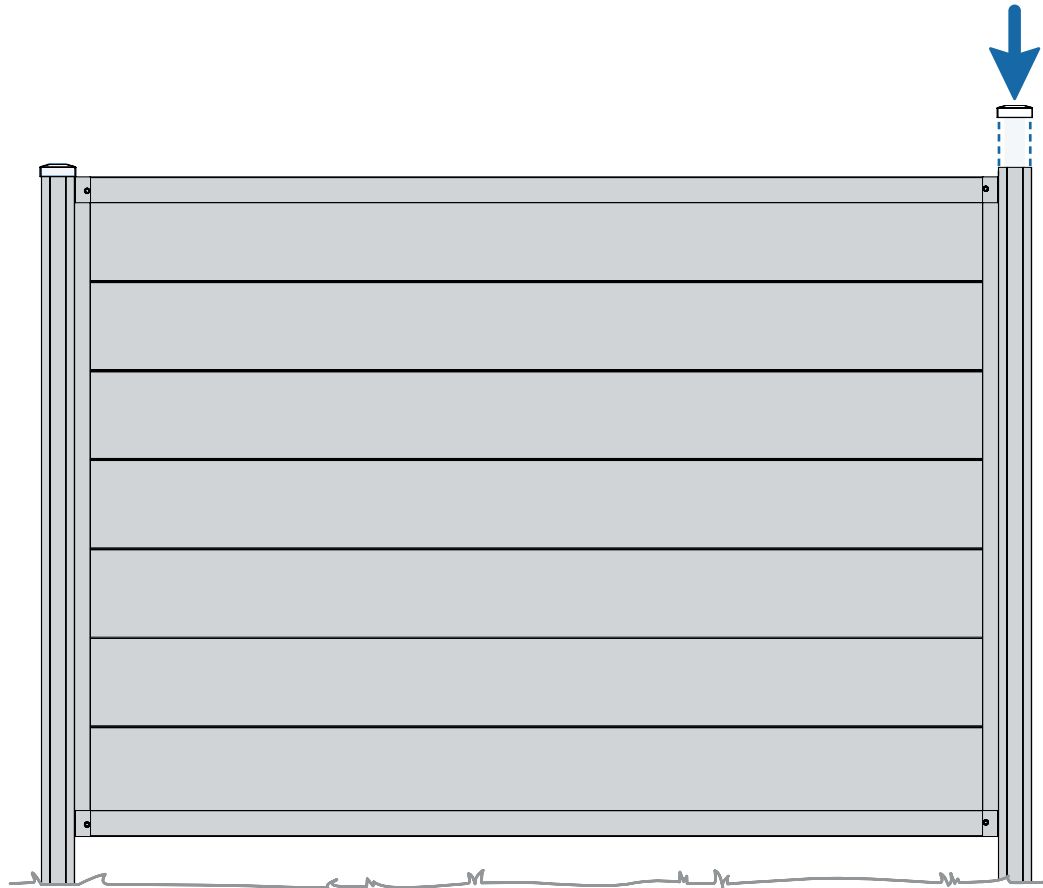



ASSEMBLY INSTRUCTIONS

BL19117/BL19118



6935 Reames Rd. Ste. K.
Charlotte, NC 28216



hmmm@wambamfence.com

704-892-5222
877-778-5733



WWW.WAMBAMFENCE.COM