



# Instruction

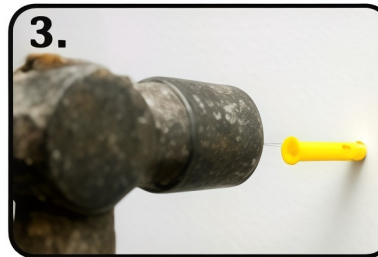

- 3.Install Anchors
- 3.Anker installieren
- 3.Installer les ancrés
- 3.Installa gli ancoraggi
- 3.Instalar anclajes

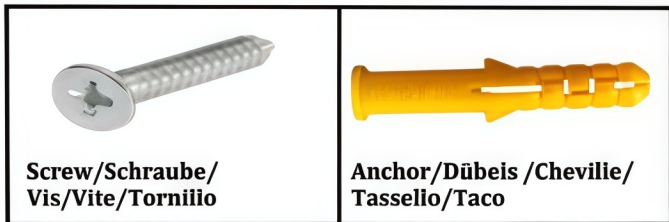


1.Measure and Mark the Holes.  
(Hole to Hole Spacing: 40.64cm/16")

1.Messen und markieren Sie die Löcher. (Abstand von Loch zu Loch: 40,64 cm/16")

1.Mesurer et Marquer les Trous. (Espace de trou à trou : 40,64 cm/16")

1.Misurare e segnare i fori. (Spaziatura tra fori: 40,64 cm/16")

1.Misurare e segnare i fori. (Espaciatura tra fori: 40,64 cm/16")

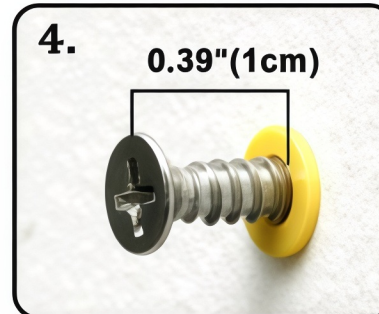

- 4.Drive Screws(Screw out 0.39"1cm)
- 4.Antriebsschrauben (1cm herausschrauben)
- 4.Vis d'entraînement (Visser 1cm)
- 4.Viti guidate (svitare 1cm)
- 4.Tornillos de accionamiento (tornillo de 1cm)



- 2.Drill the Holes
- 2.Bobren Sie die Löcher
- 2.Percez les trous
- 2.Trapanare i fori
- 2.Perfora los agujeros



- 5.Hang the coat rack
- 5.Garderobenständer aufhängen
- 5.Accrochez le porte-manteau
- 5.Appendi l'attaccapanni
- 5.Cueiga el perchero