
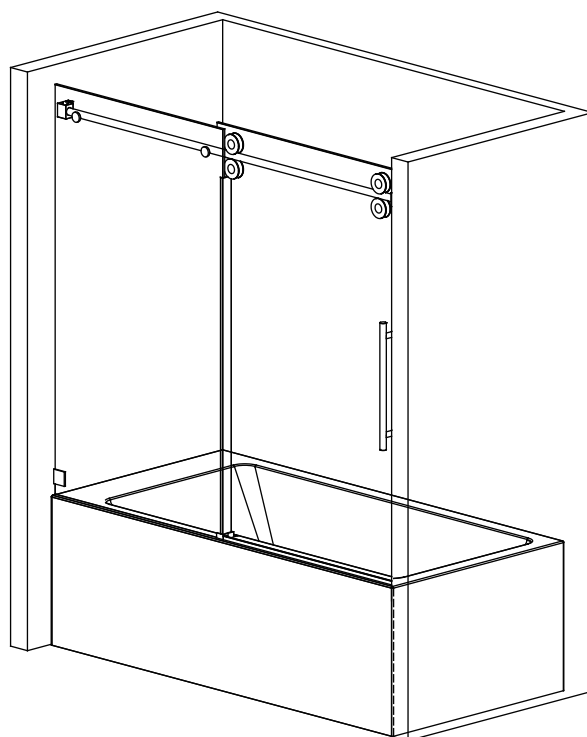


INSTALLATION INSTRUCTIONS WARRANTY INFORMATION

FOR SHOWER DOOR AND BATHTUB DOOR

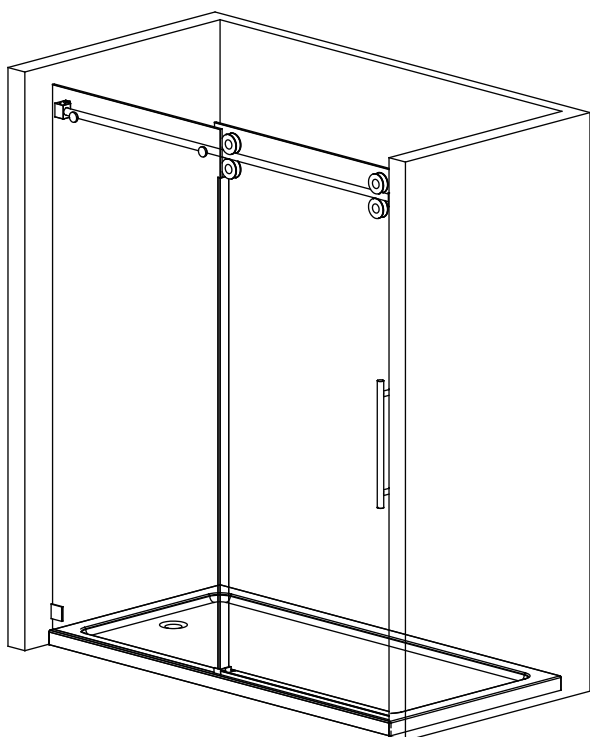

KSS-4876-CH
KSS-4876-BR
KSS-4876-BL
KSS-4876-BG
KSS-5476-CH
KSS-5476-BR
KSS-5476-BL
KSS-5476-BG
KSS-6076-CH
KSS-6076-BR
KSS-6076-BL
KSS-6076-BG

KSS-6676-CH
KSS-6676-BR
KSS-6676-BL
KSS-6676-BG
KSS-7276-CH
KSS-7276-BR
KSS-7276-BL
KSS-7276-BG

KSS-6060-CH
KSS-6060-BR
KSS-6060-BL
KSS-6060-BG
KSS-6066-CH
KSS-6066-BR
KSS-6066-BL
KSS-6066-BG

◆ General Information

Inspect the product immediately upon receipt for transit damage, missing packs/parts or manufacturing fault. Damage reported later will not be accepted. Handle the product with care avoiding knocks and shock loading to all sides and edges of the glass.

Notes: Safety glass can not be re-worked.

Read these instructions carefully before start of installation.

Special care should be taken when drilling walls to avoid hidden pipes or electrical cables.


Note: This product is heavy and may require two people to install.

Aftercare instructions

After use, your shower should be cleaned with soap and water. This is particularly important in hard water districts where insoluble lime salts maybe deposited and allowed to build up. Cleaners of a gritty or abrasive nature should not be used. Care should be taken to avoid contact with strong chemicals, they can be used but with caution, if in doubt contact the manufacturer of the cleaner in question.

Keep these instructions for aftercare and customer service details.

Tools Required

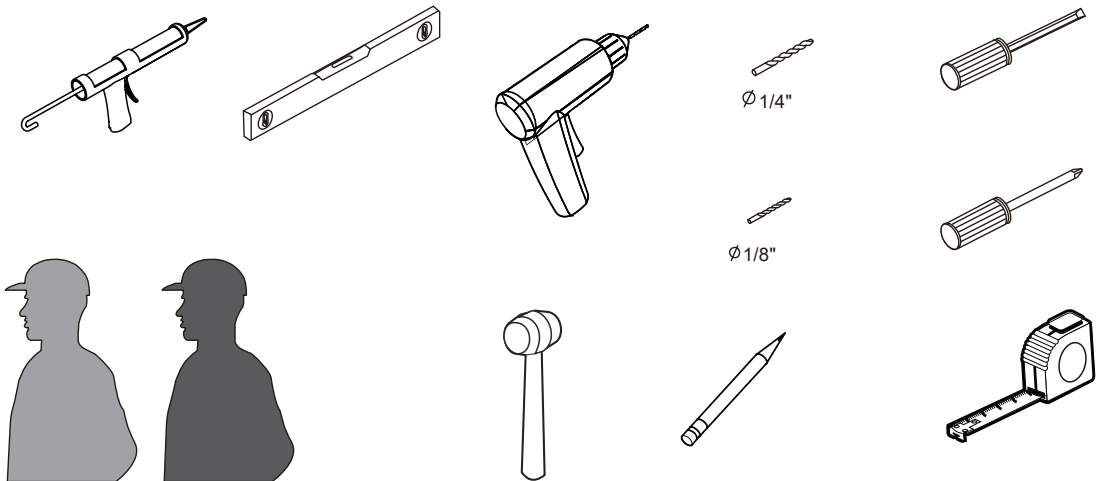


This product is heavy and may require two people to install.



PARTS LIST A

FOR SHOWER/BATHTUB DOOR


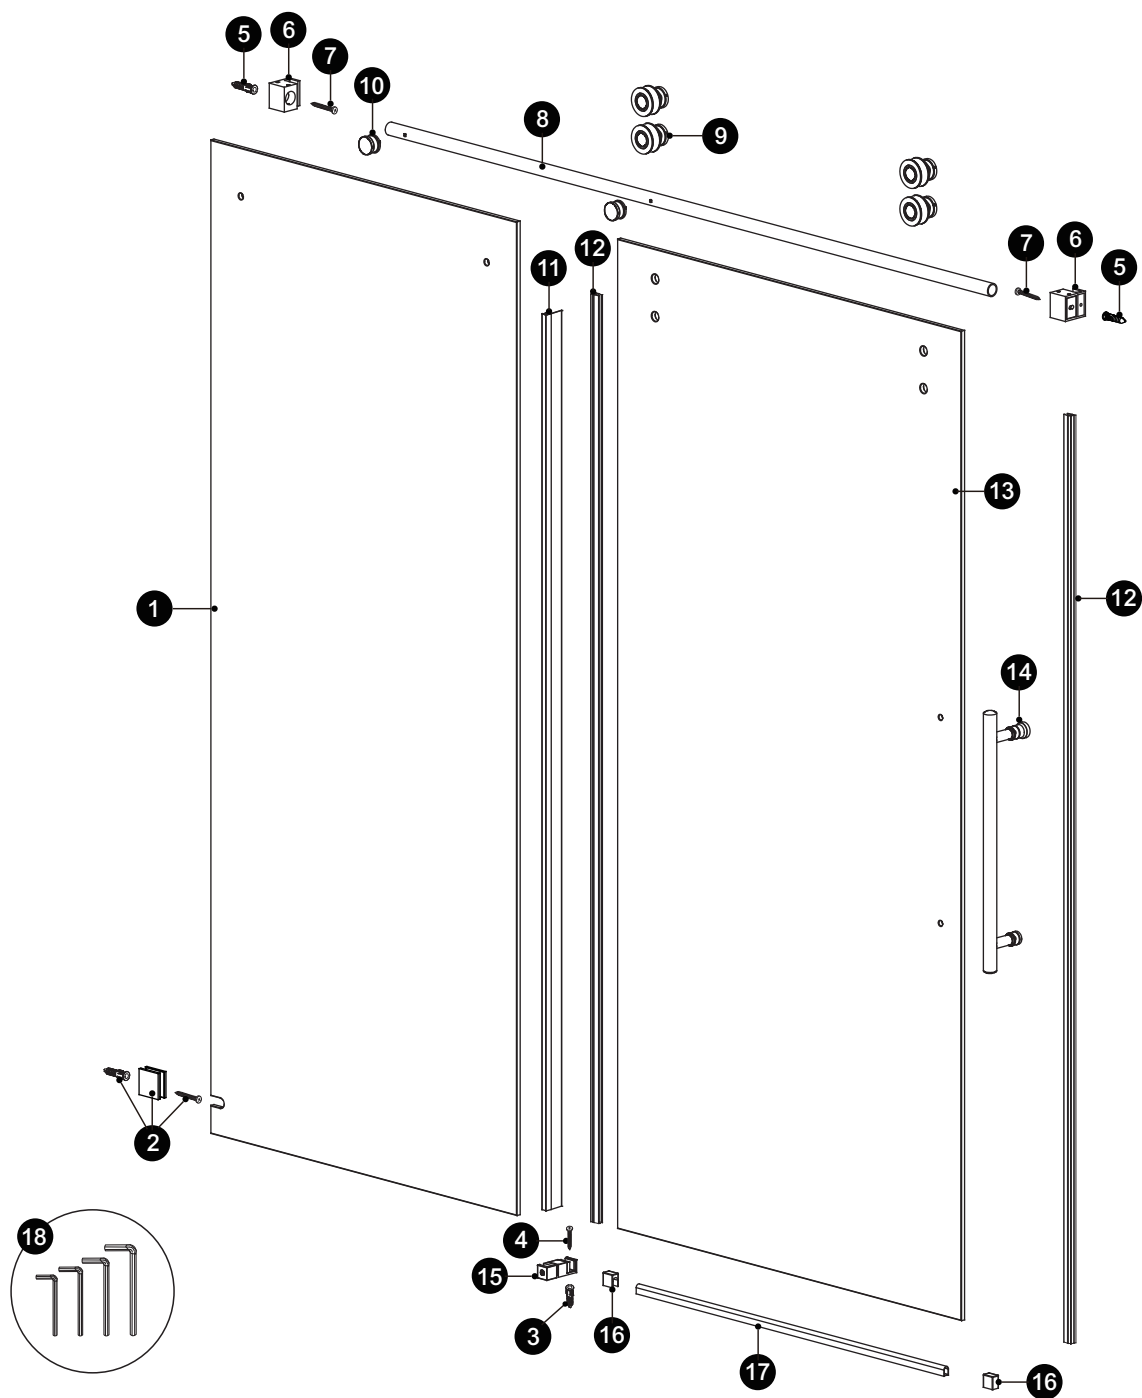


PACKING LIST


PART #	DESCRIPTION	Q' TY	PART #	DESCRIPTION	Q' TY
1	Fixed Panel	1pc	10	Fixed Panel Holders	2pcs
2	Bottom Bracket	1set	11	Gasket-A	1pc
3	Wall Plugs-A	1pc	12	Gasket-B	2pcs
4	Screws ST4x1 3/8"	1pc	13	Door Panel	1pc
5	Wall Plugs-B	2pcs	14	Handle	1pc
6	Wall Brackets	2pcs	15	Bottom Guide	1pc
7	Screws ST5x2 1/8"	2pcs	16	End Block	2pcs
8	Rail	1pc	17	Aluminium Water Guard	1pc
9	Rollers	4pcs	18	Allen Wrenches	4pcs

INSTALLATION STEPS

STEP 1

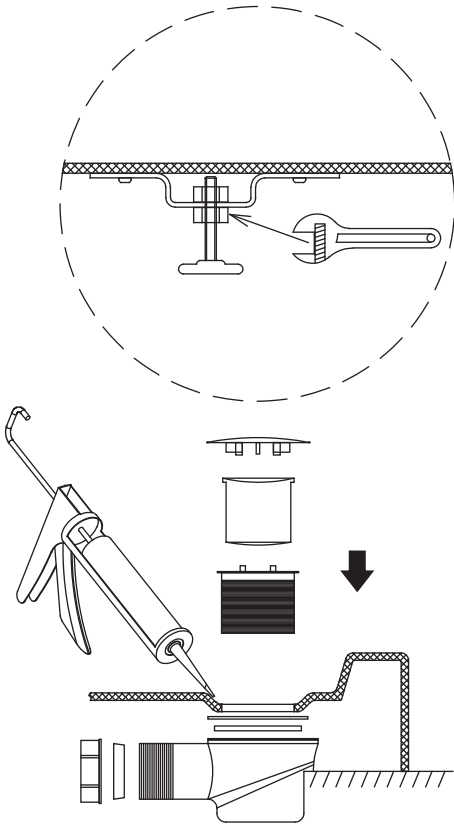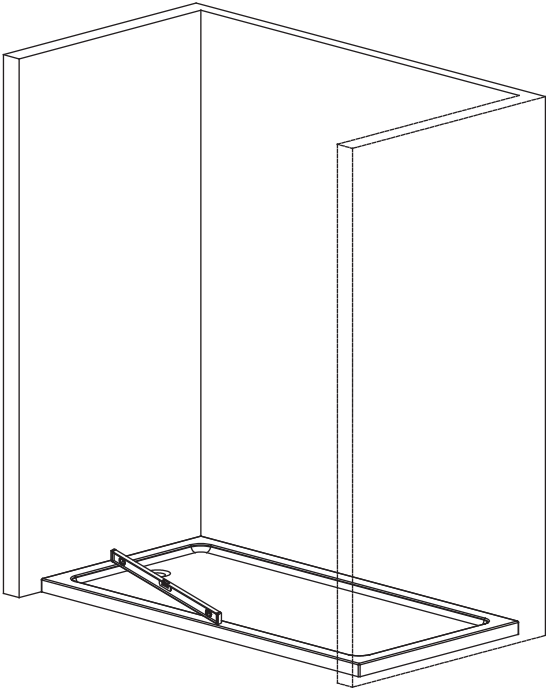


STEP 2

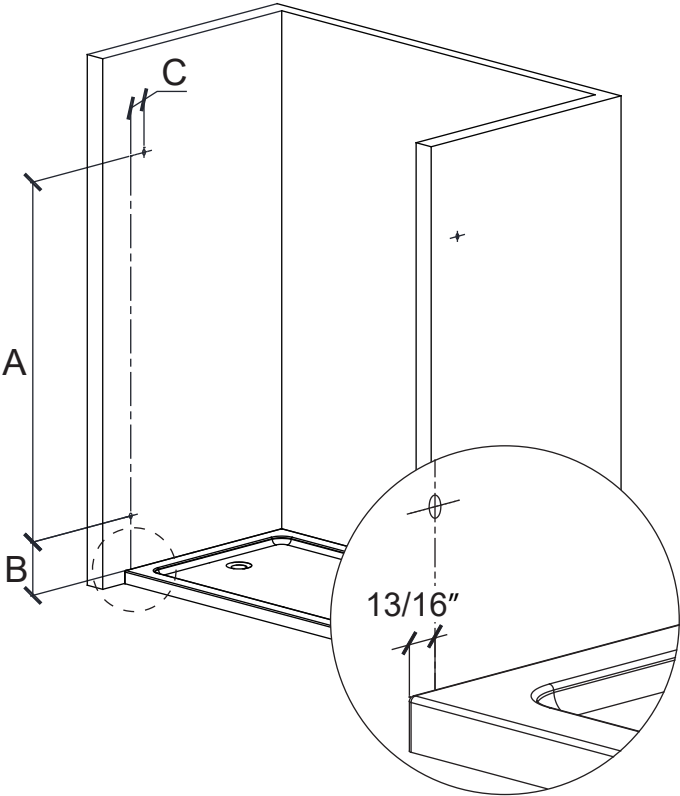


Size	A	B	C
1219×1930(48"x76")	1736mm (68 3/8")	100mm (3 15/16")	24mm (15/16")
1372×1930(54"x76")			
1524×1930(60"x76")			
1676×1930(66"x76")			
1829×1930(72"x76")			
1524×1676(60"x66")	1482mm (58 3/8")	100mm (3 15/16")	24mm (15/16")
1524×1524(60"x60")	1330mm (52 3/8")		


STEP 3

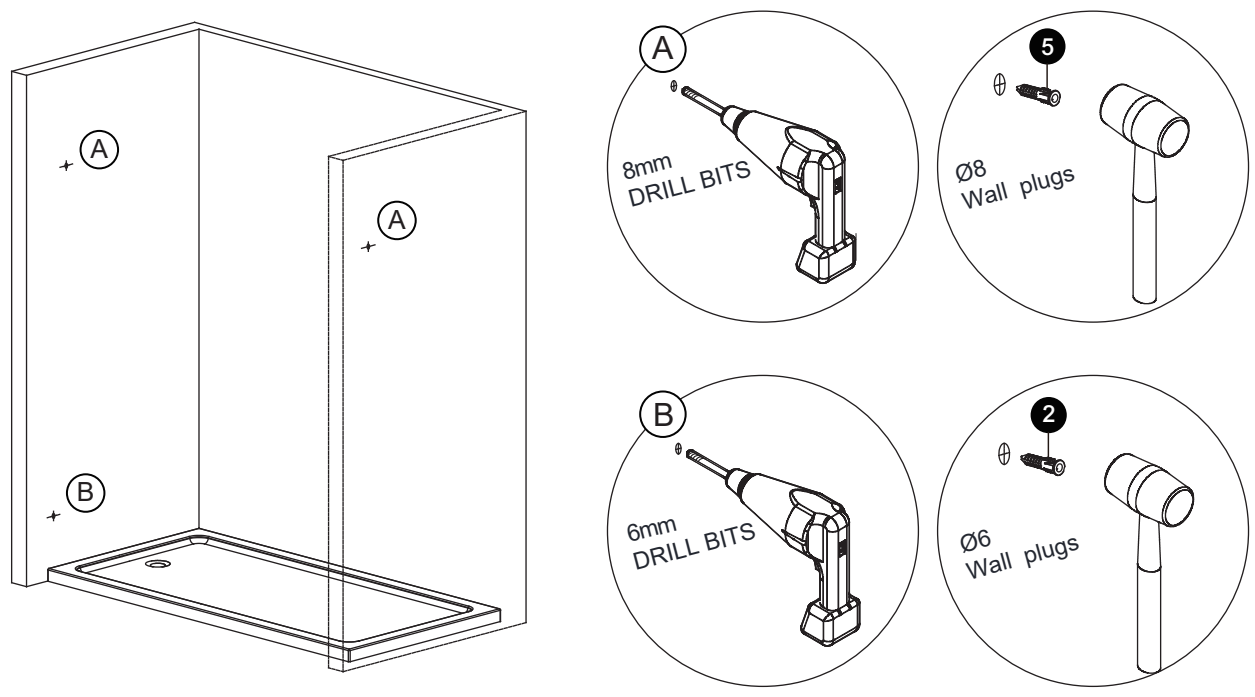


STEP 4

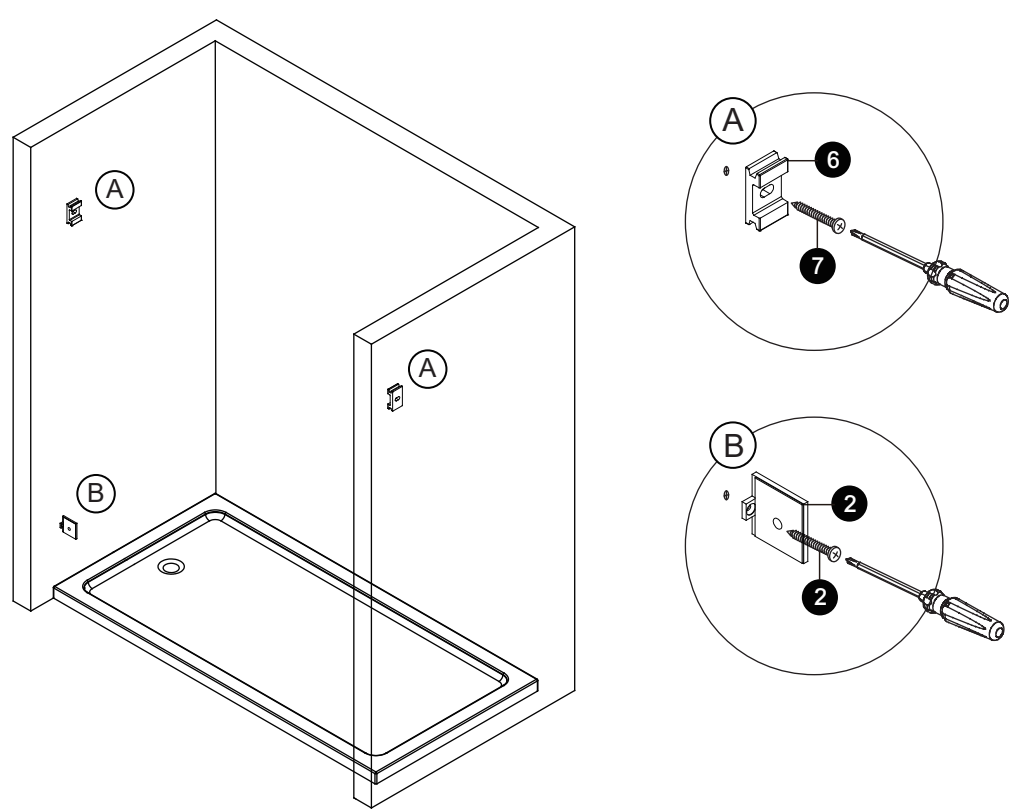




STEP 5

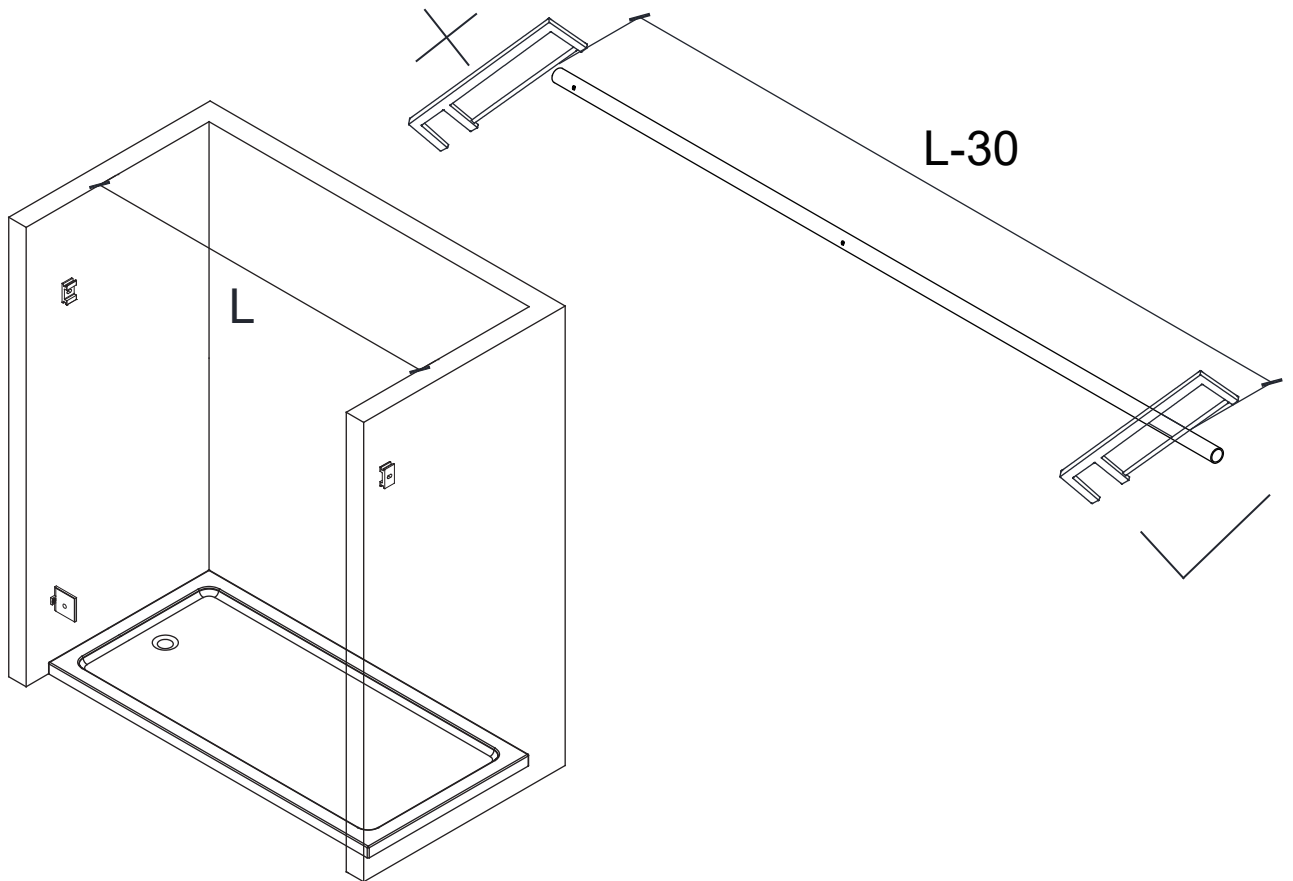






STEP 6

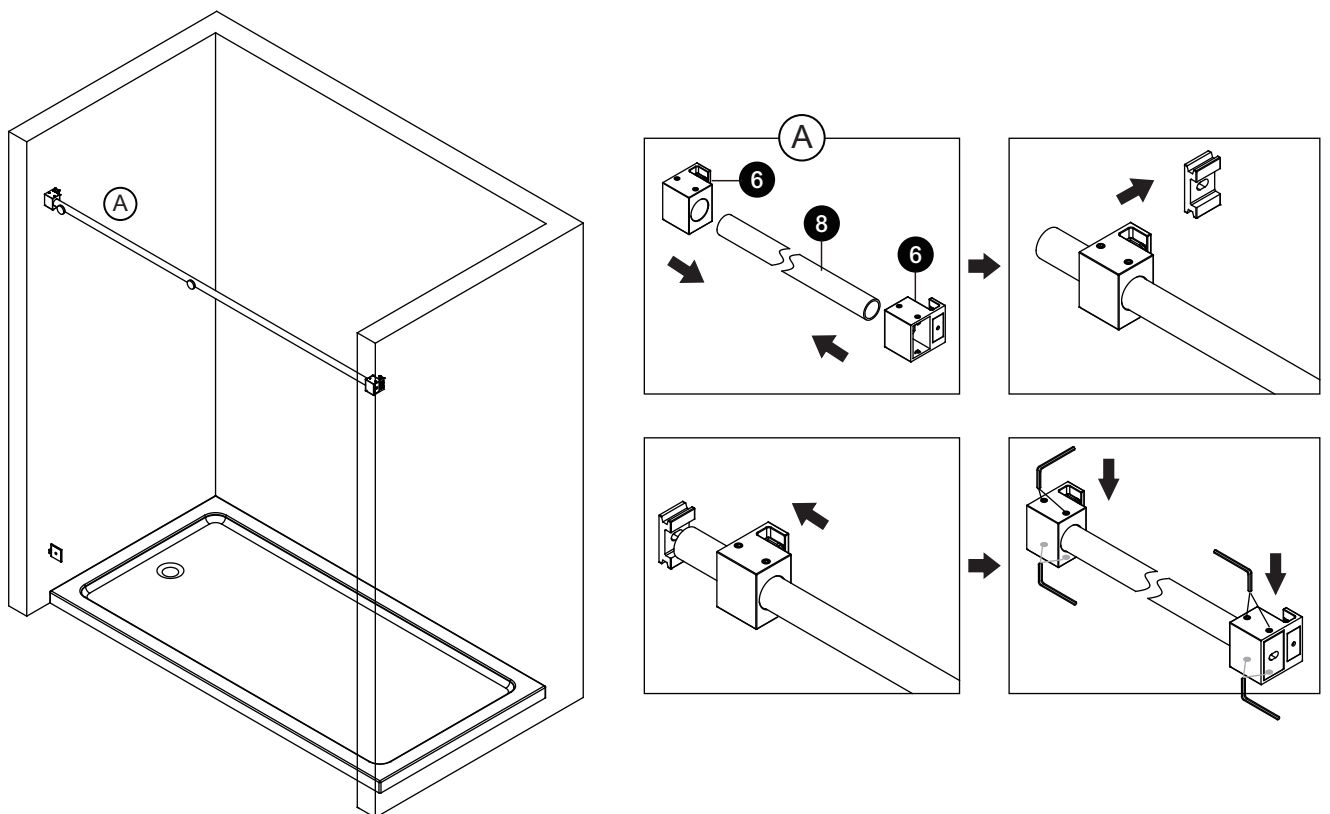





STEP 7

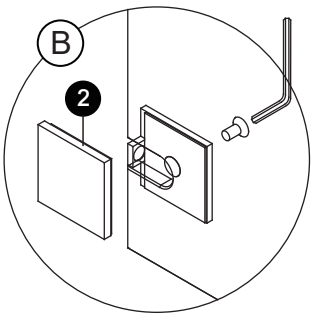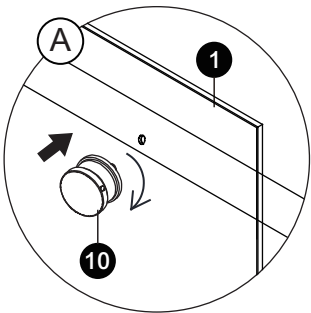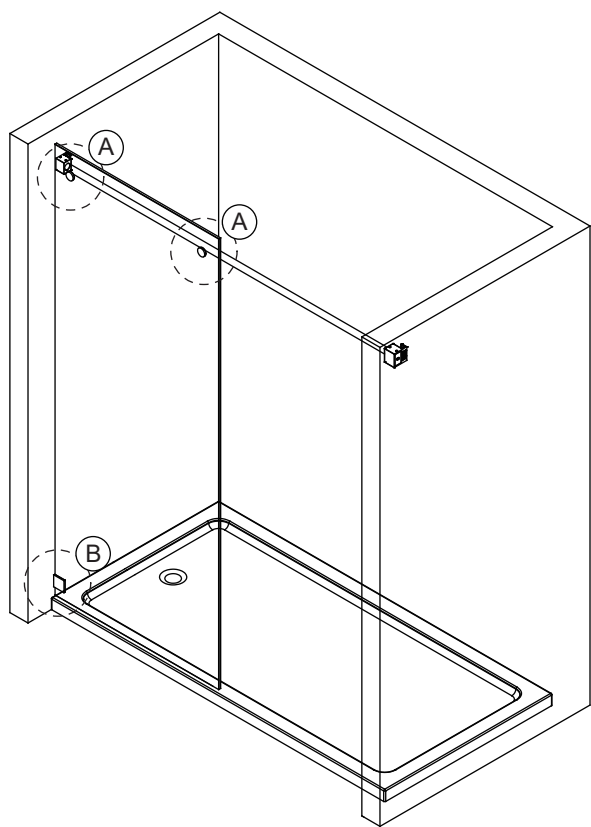






STEP 8

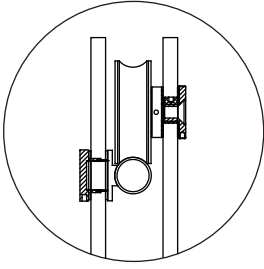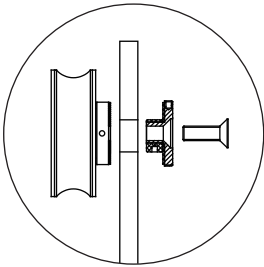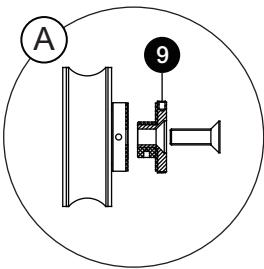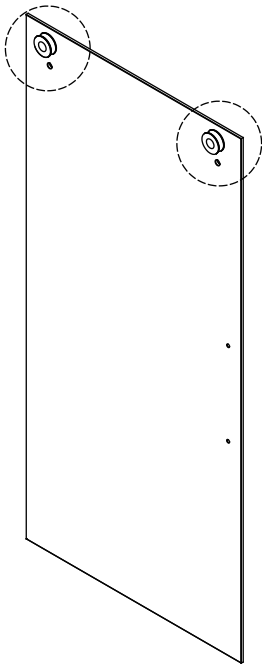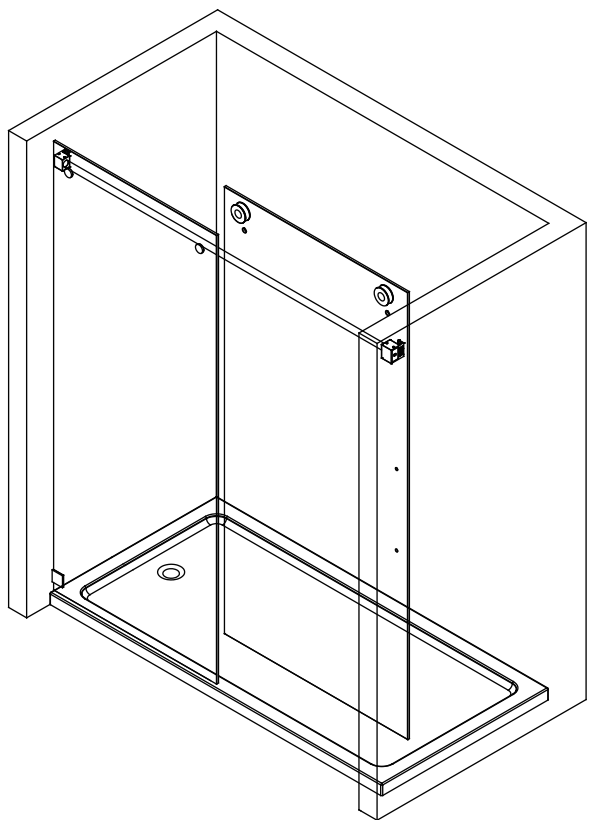




STEP 9

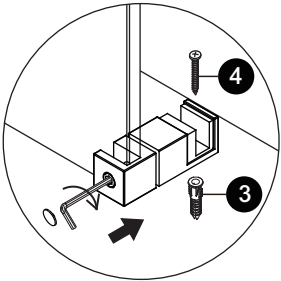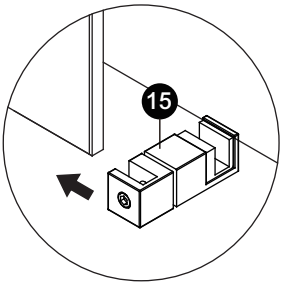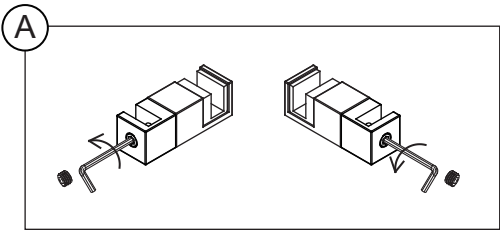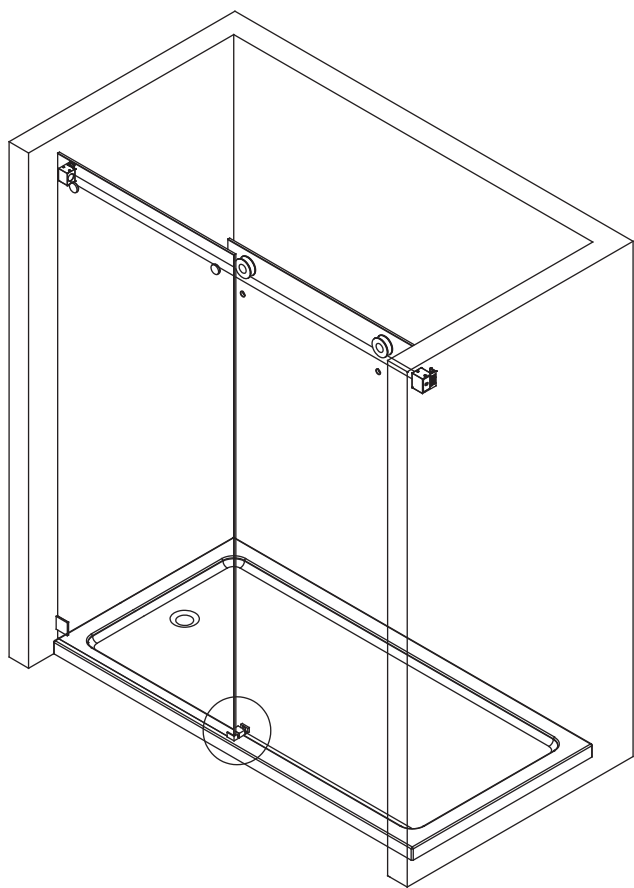



STEP 10

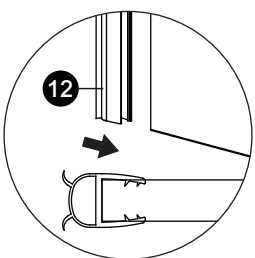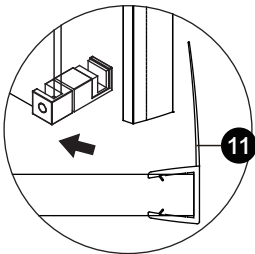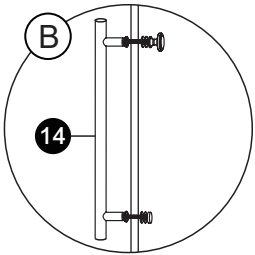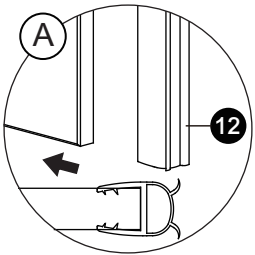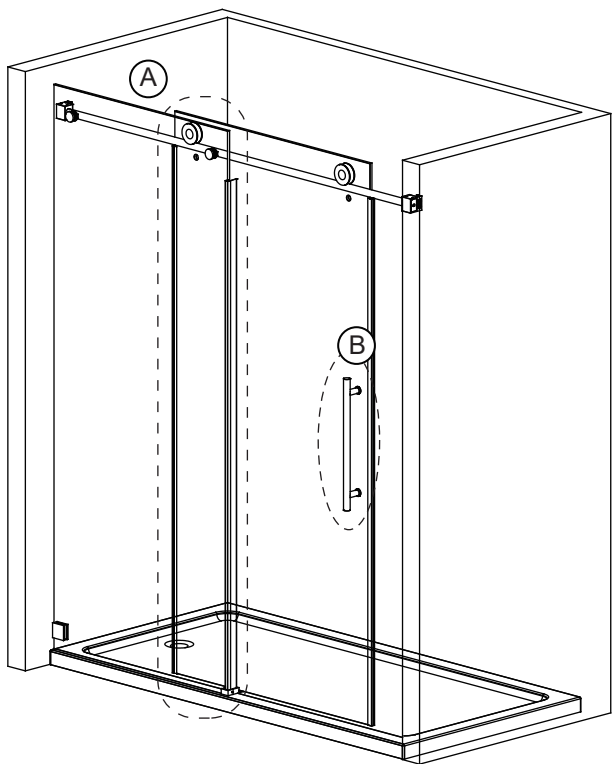


STEP 11

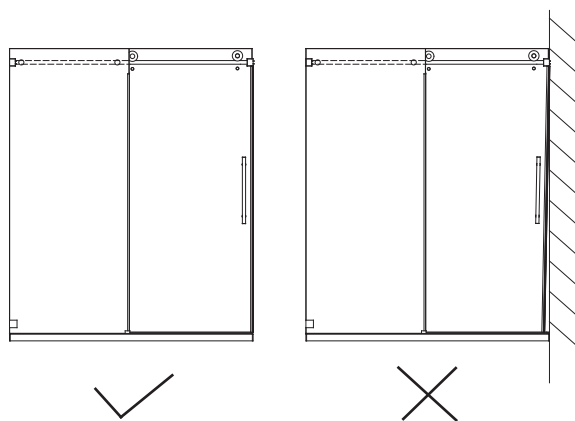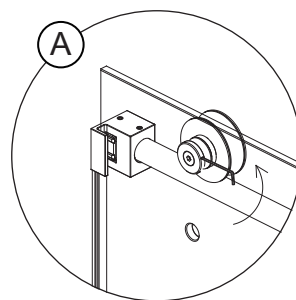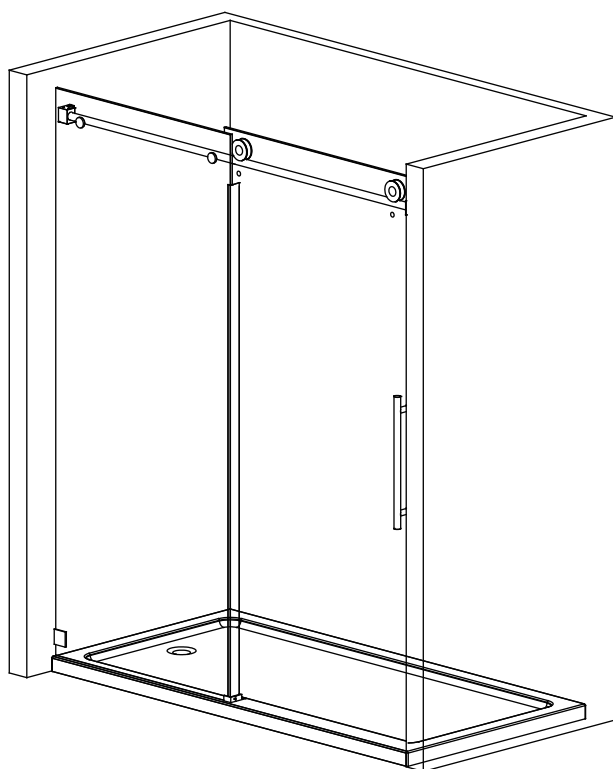



STEP 12

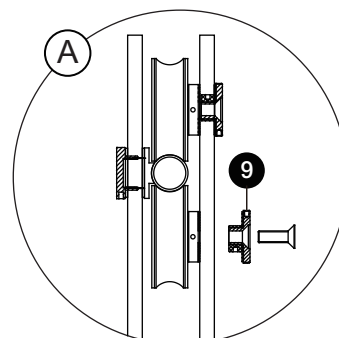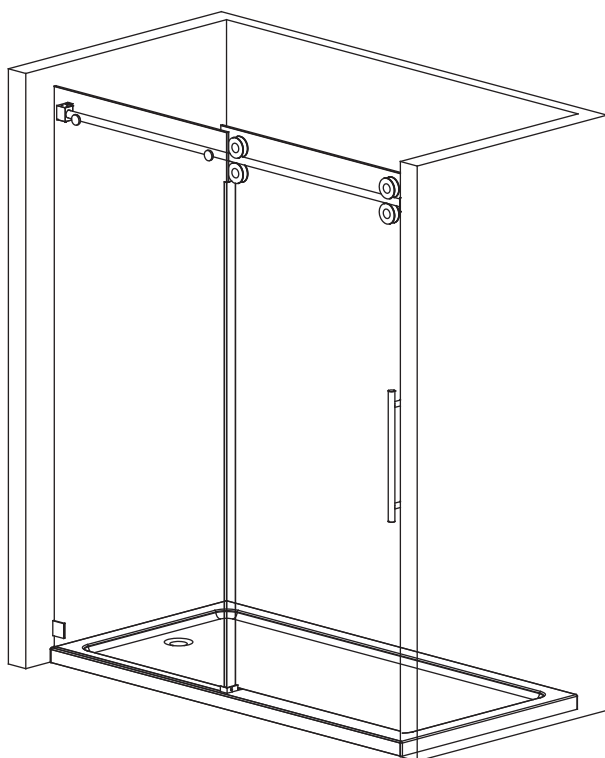

STEP 13

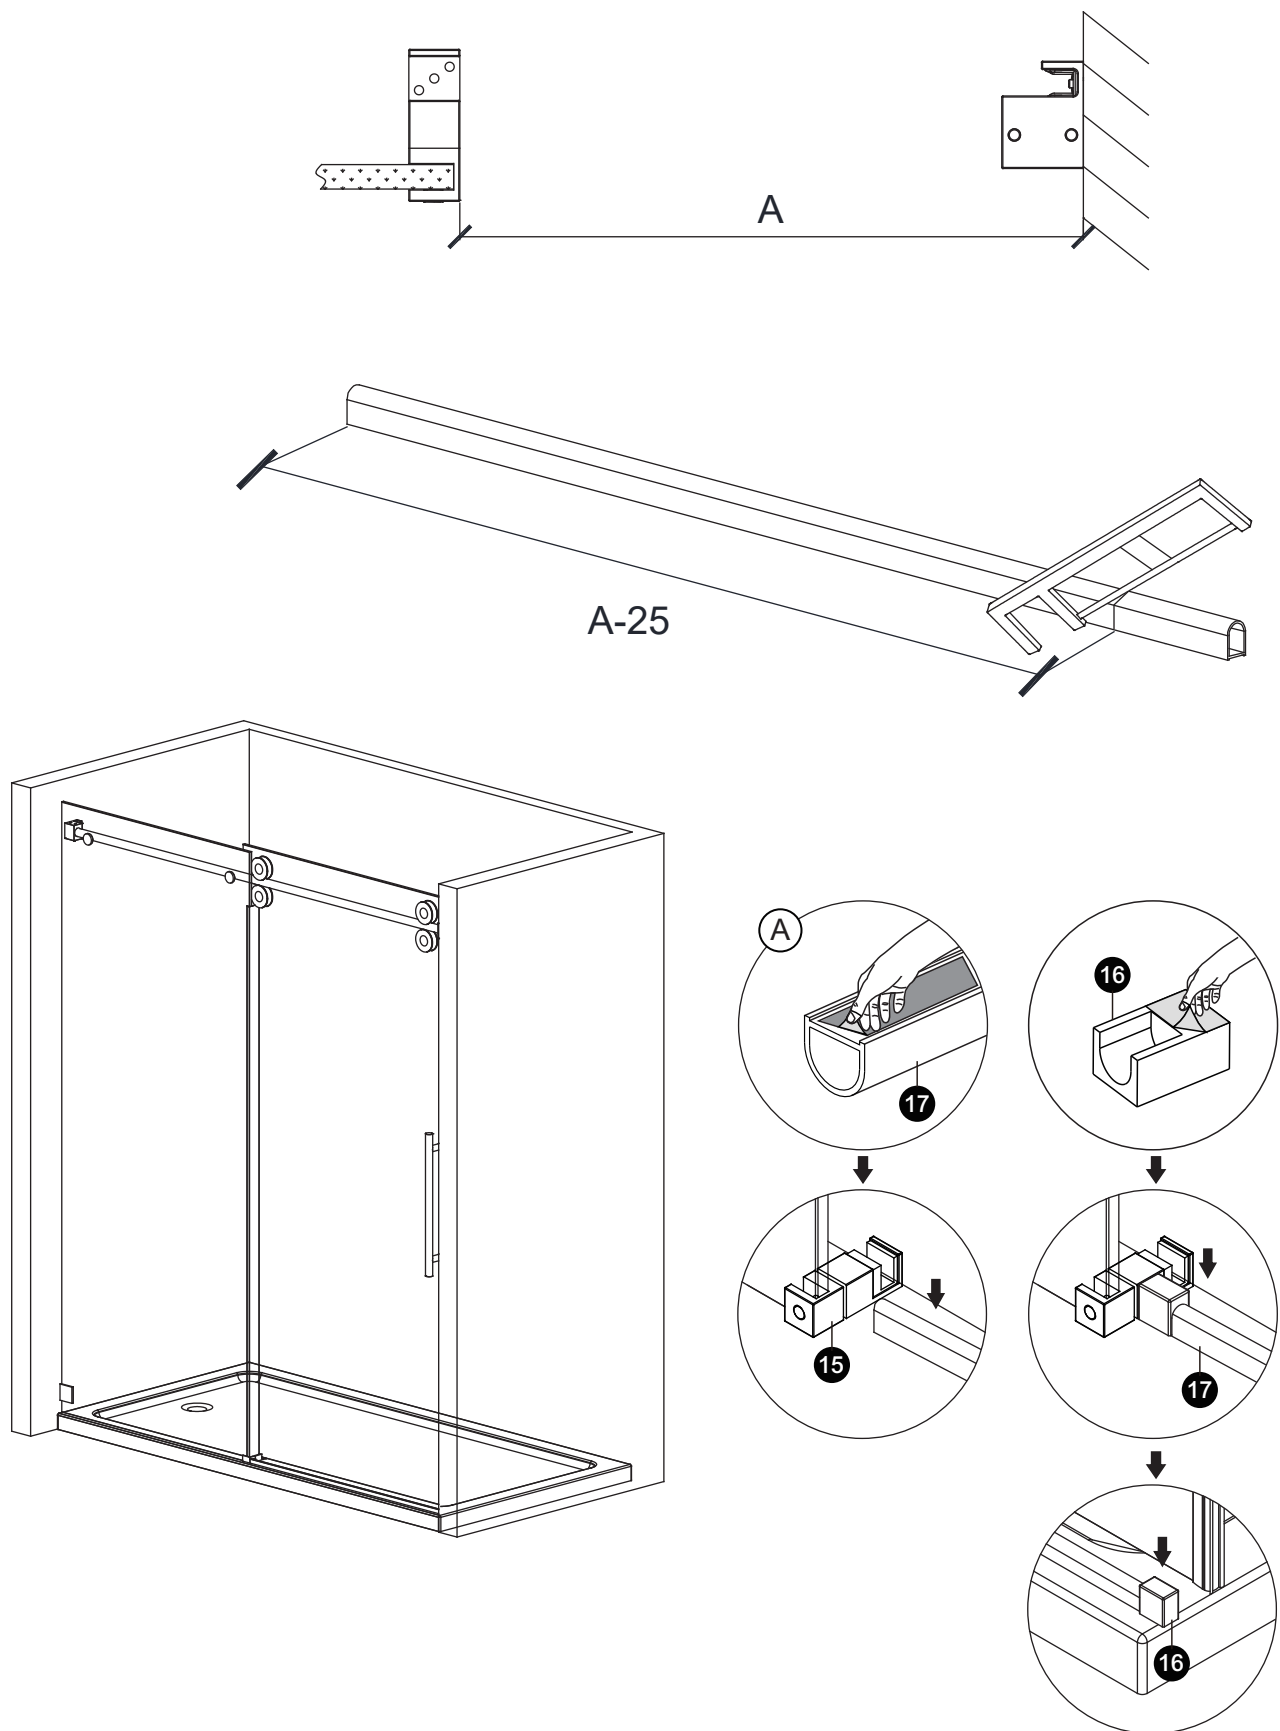

STEP 14

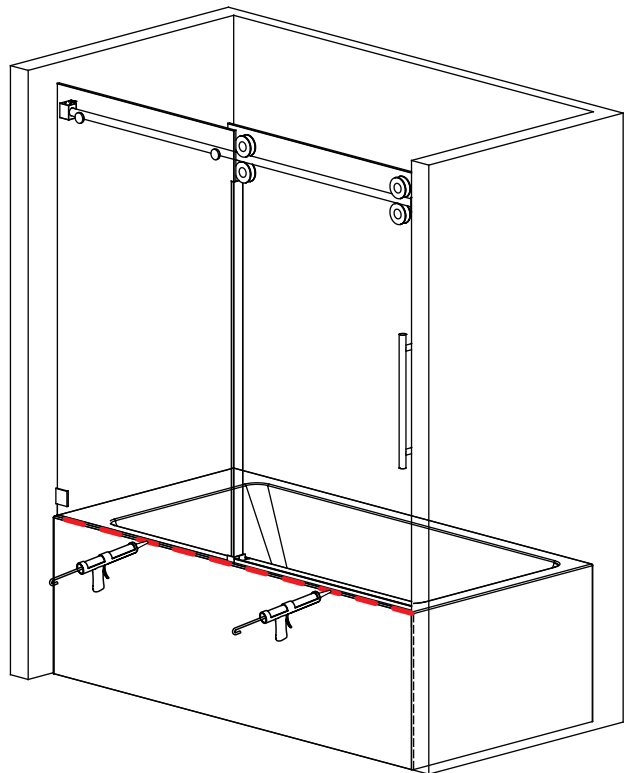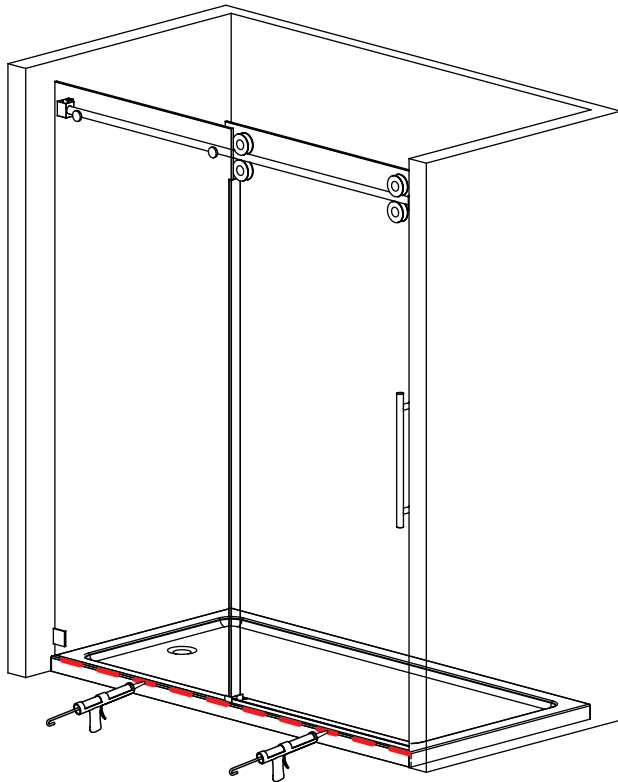

24 HOURS

Allow 24 hours for silicone to dry before use.