

EASY INSTALLATION




STEP 1: PREPARE PIPES



STEP 2: DRY FIT & ALIGN



STEP 3: APPLY SOLVENT CEMENT

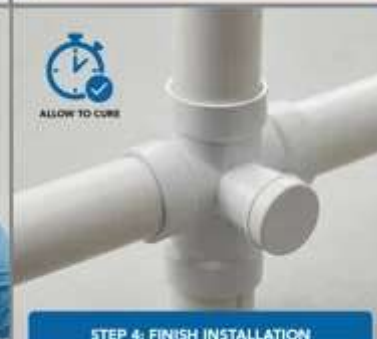

STEP 4: FINISH INSTALLATION