



Instruction Manual










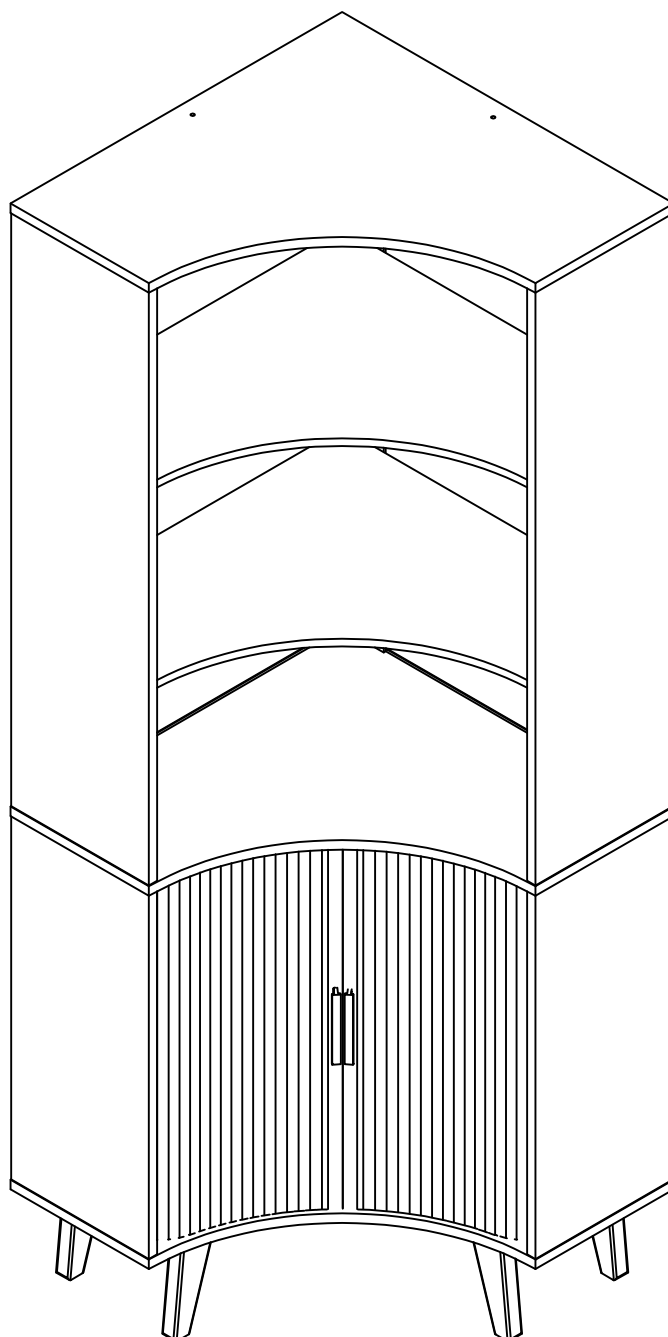


Made In China











Parts List(EN) / Teile Liste(DE)

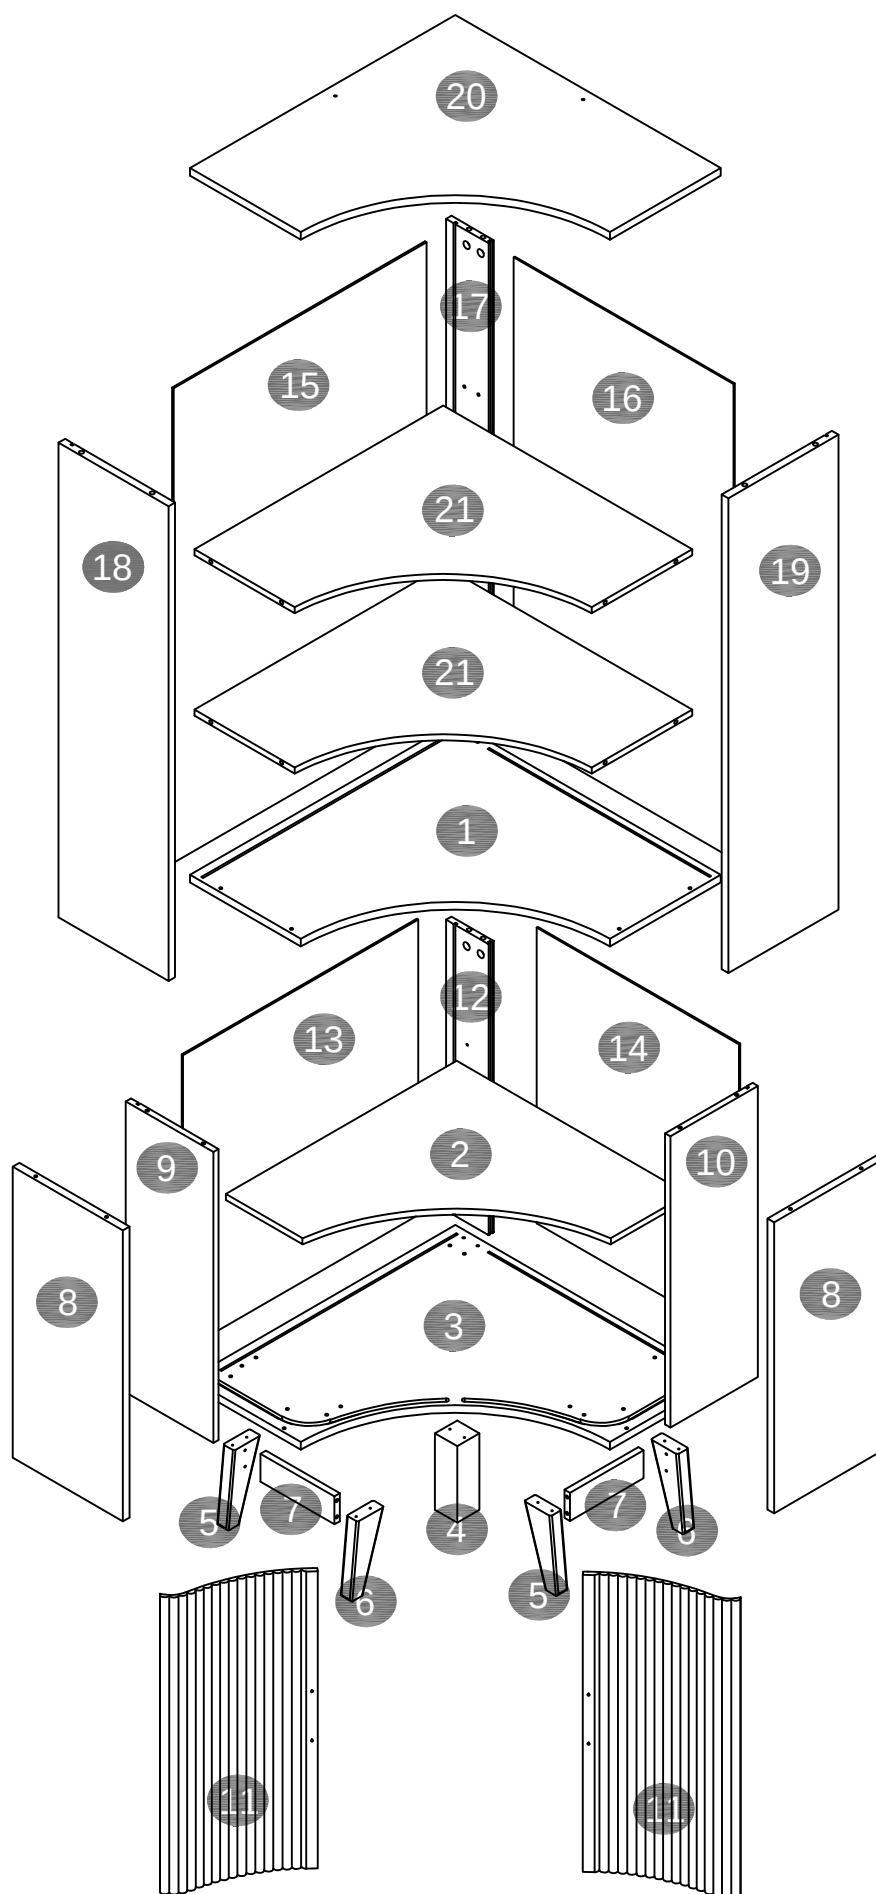

Parts List(EN) / Teile Liste(DE)

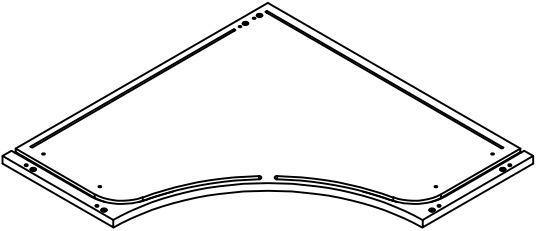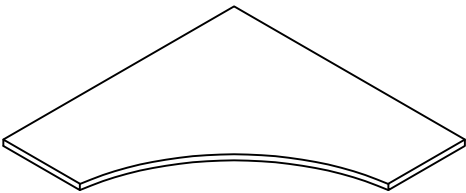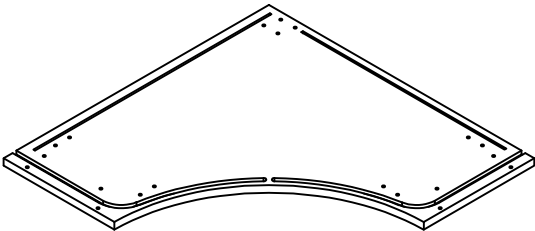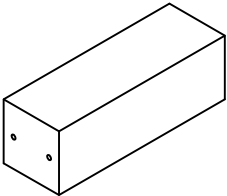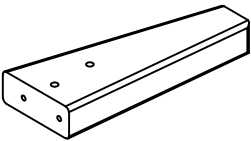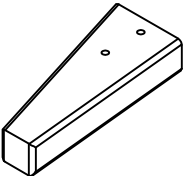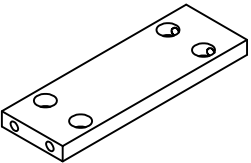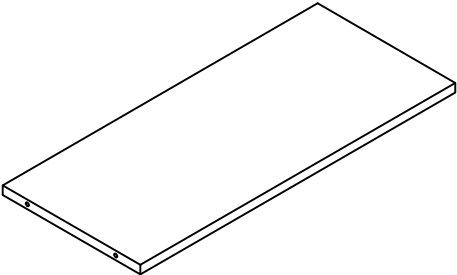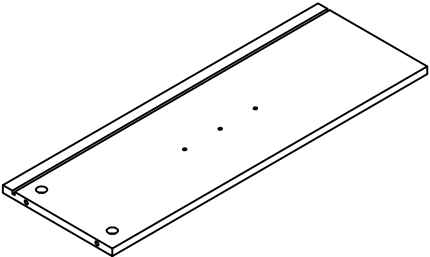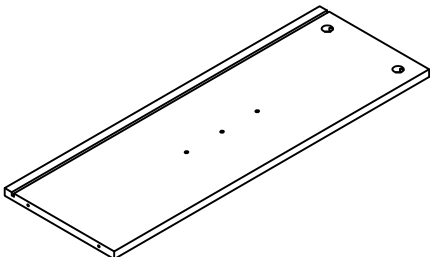
1  X 1	2  X 1
3  X 1	4  X 1
5  X 2	6  X 2
7  X 2	8  X 2
9  X 1	10  X 1

Parts List(EN) / Teile Liste(DE)

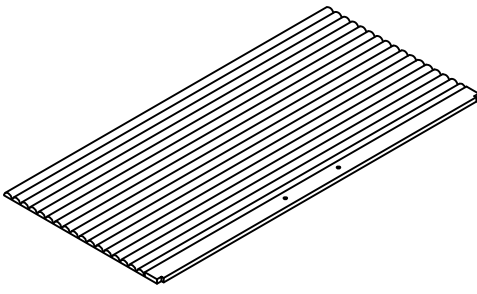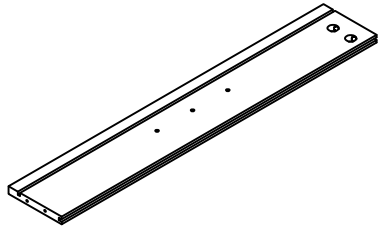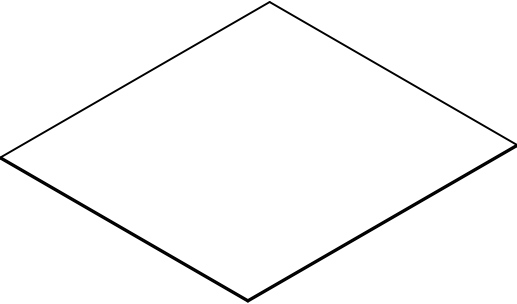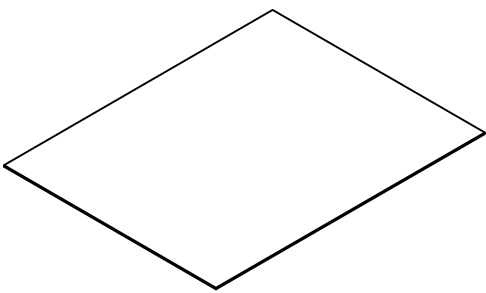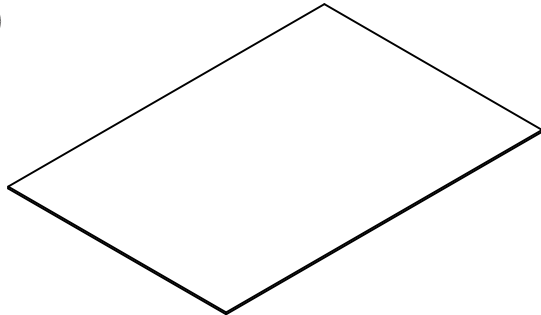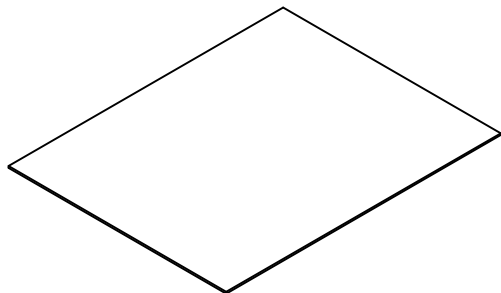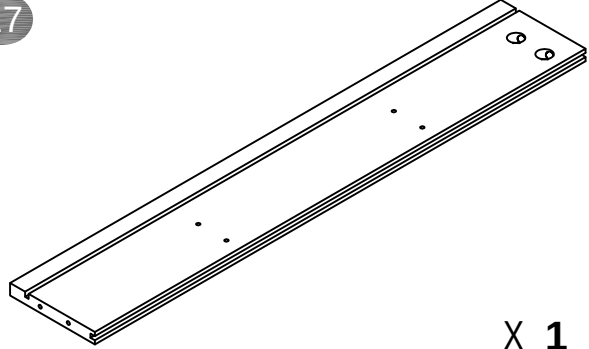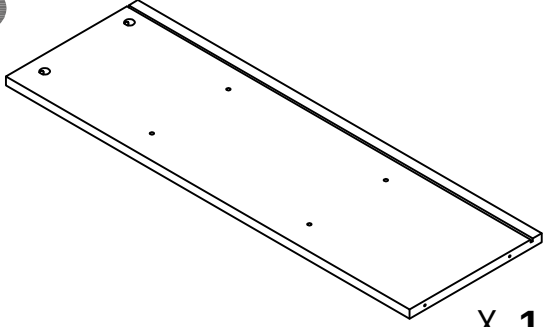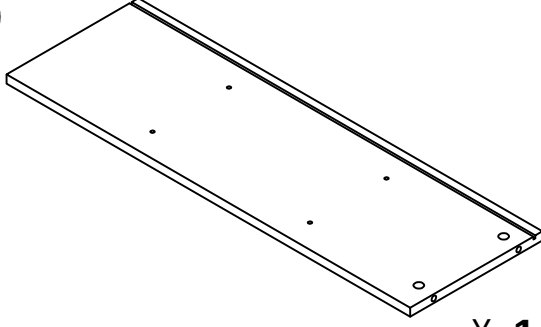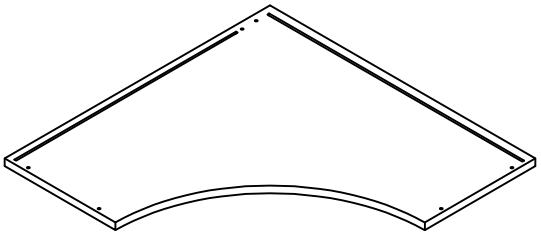11  X 2	12  X 1
13  X 1	14  X 1
15  X 1	16  X 1
17  X 1	18  X 1
19  X 1	20  X 1






Parts List(EN) / Teile Liste(DE)

21

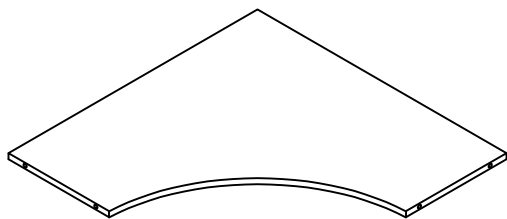



X 2

Hardware List(EN) / Teile Liste(DE)


A  ø6*36mm 28+2PCS	B  ø15*10mm 28+2PCS	C  ø6*30mm 4+1PCS
D  M5*45mm 30+2PCS	E  M4mm 1PC	F  2PCS
G  M4*10mm 4+1PCS	H  17*12*13 3+1PCS	I  M3*16mm 42+2PCS
J  13*13*11 32+2PCS	K  ø25*2mm 5+2PCS	L  44*12*1 4PCS
M  ø4*35mm 2PCS	N  2PCS	O  M8*37mm 2PCS

STEP1

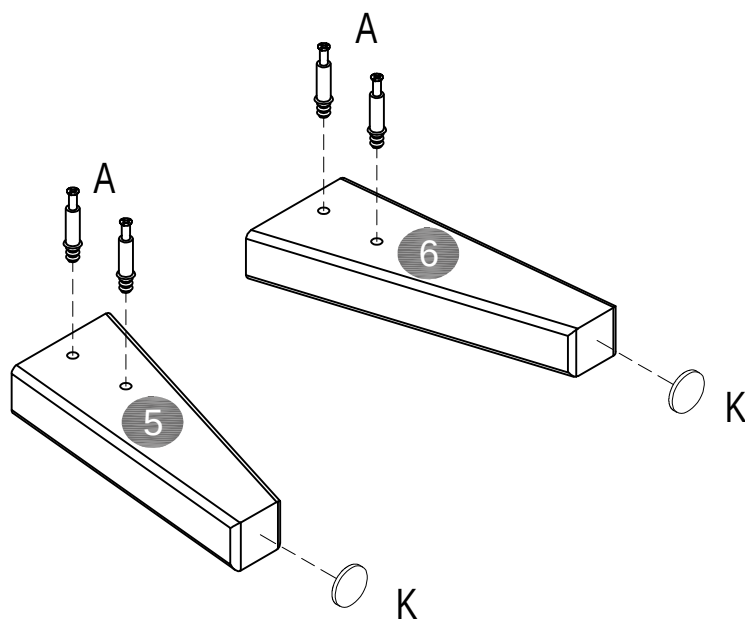


A		X 8
K		X 4

X 2

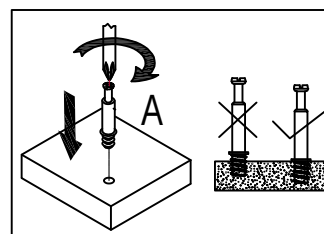


STEP2

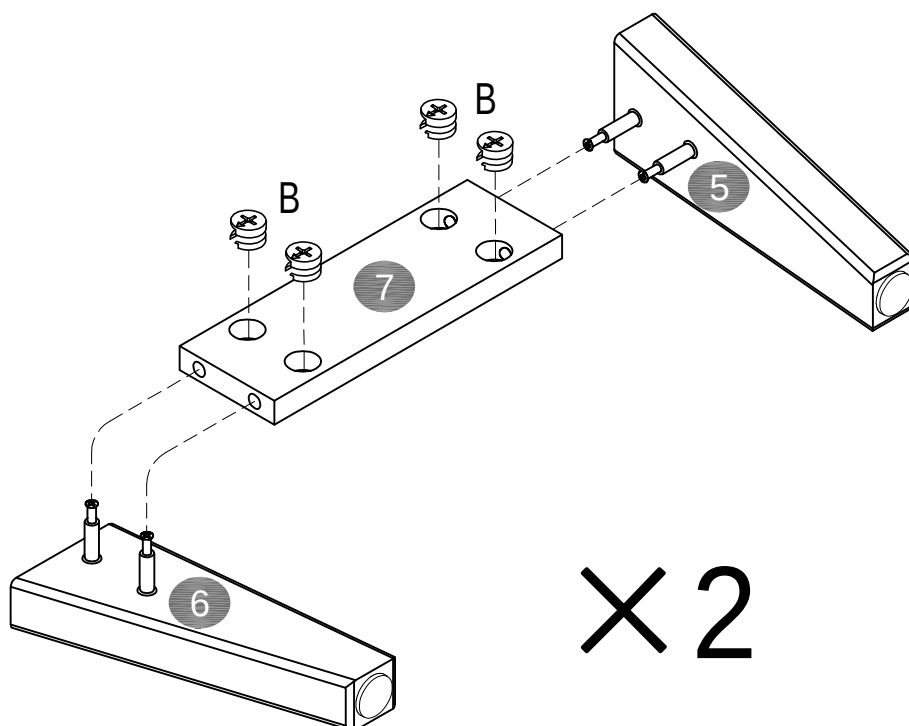


B		X 8
---	---	-----

X 2

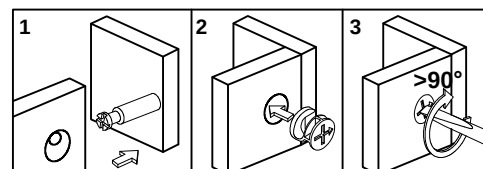

STEP3

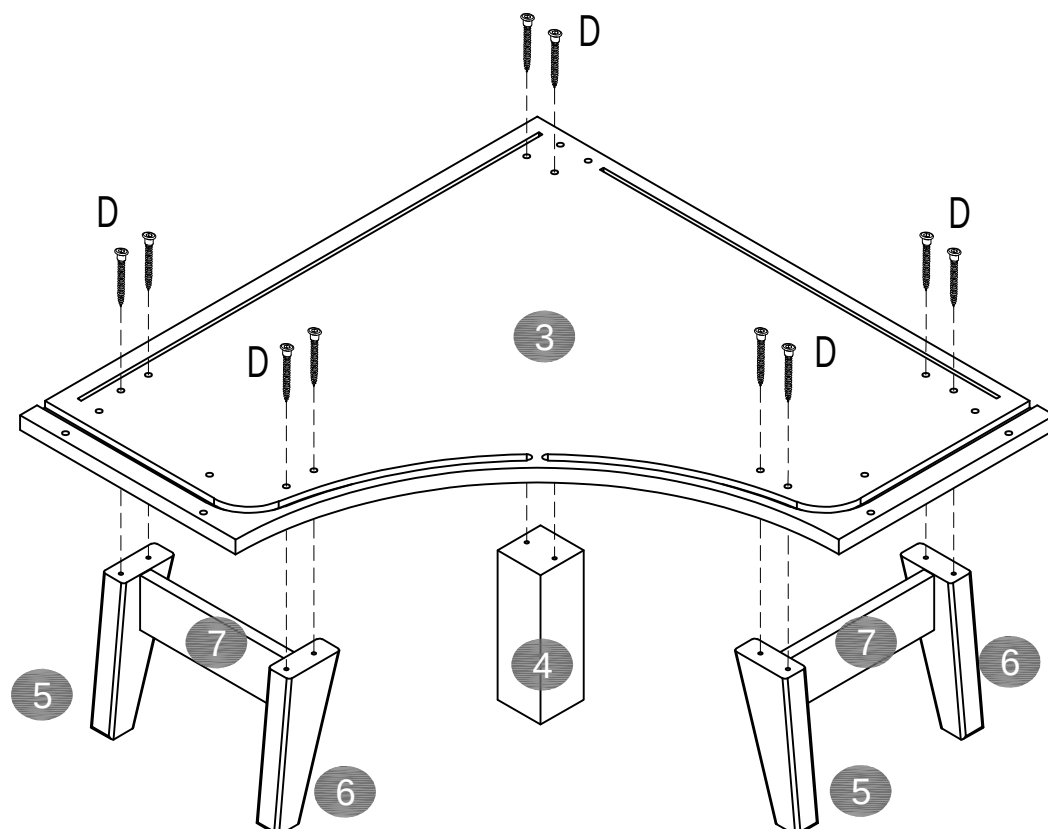


D



X 10

STEP4

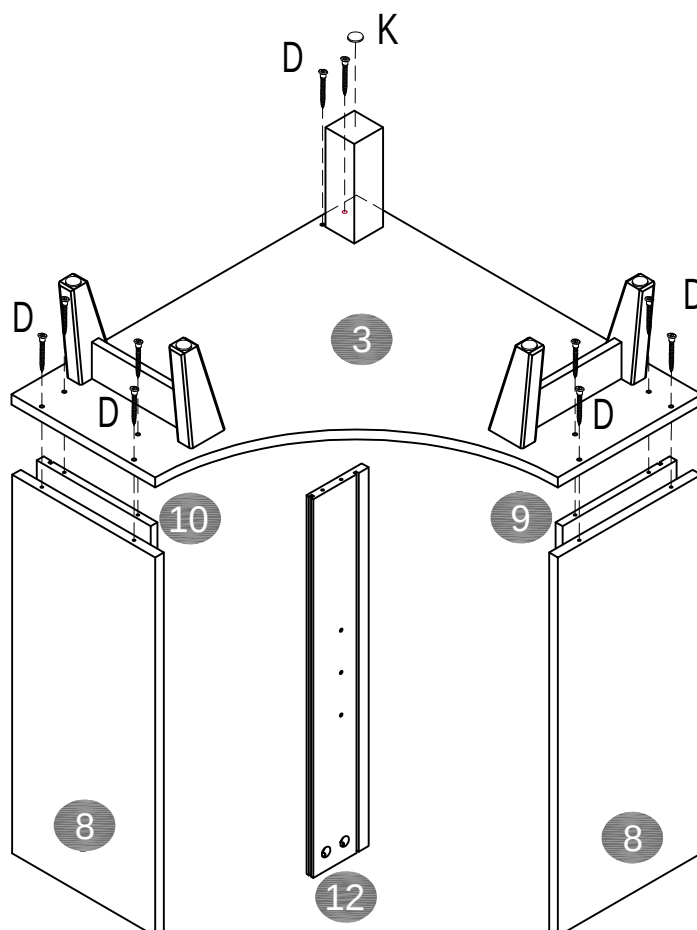

D




X 10

K




X 1


STEP5

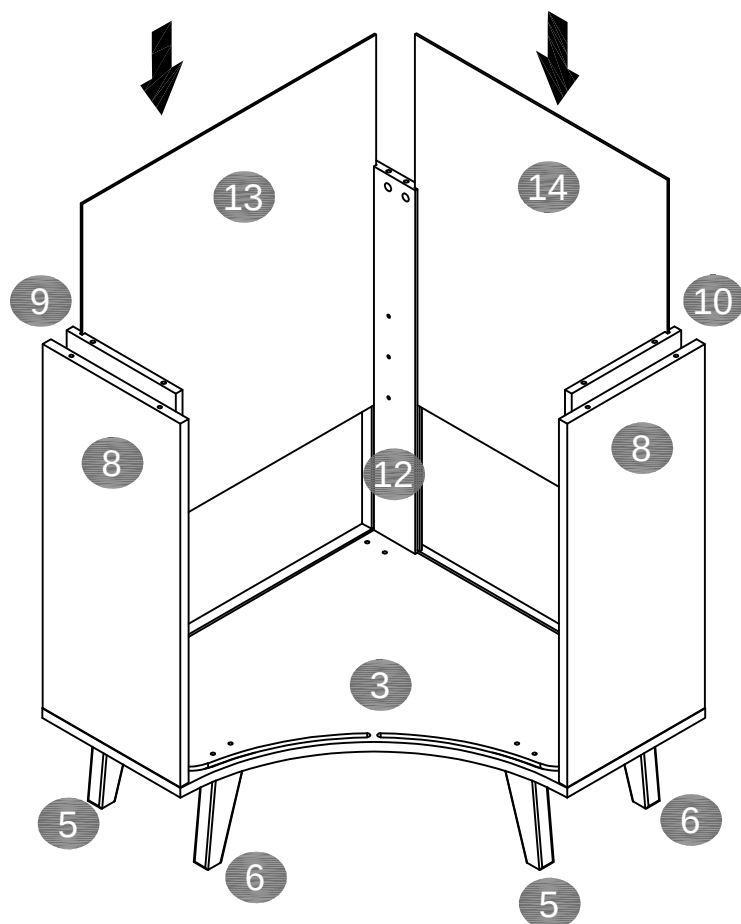


STEP6

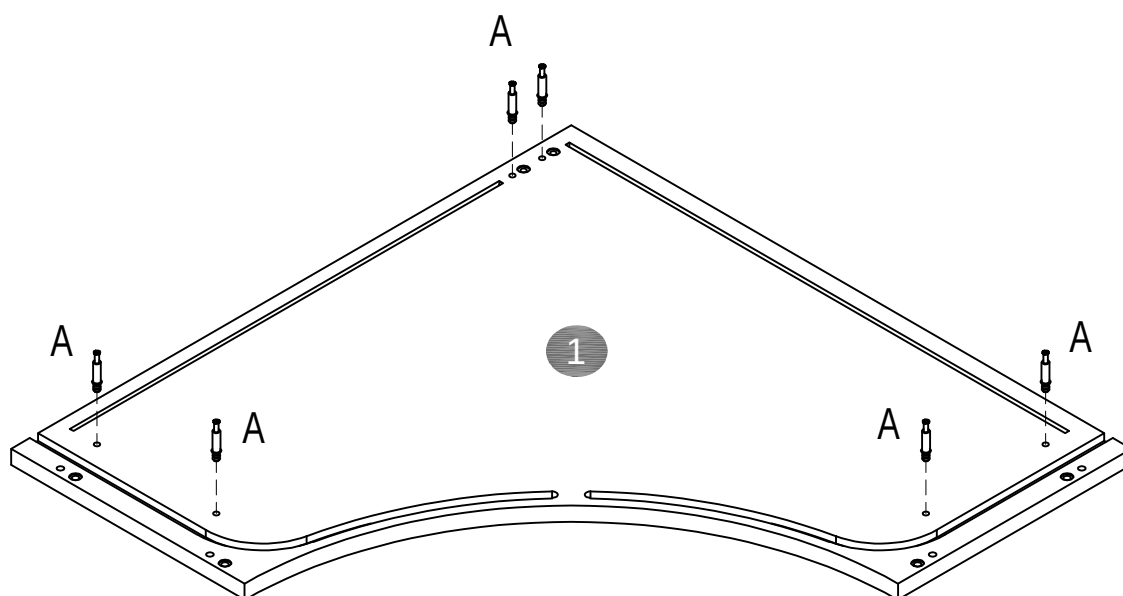


A




X 6

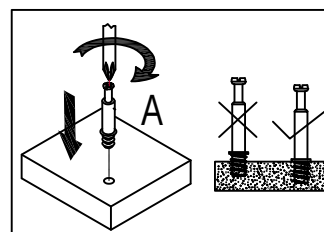


STEP7

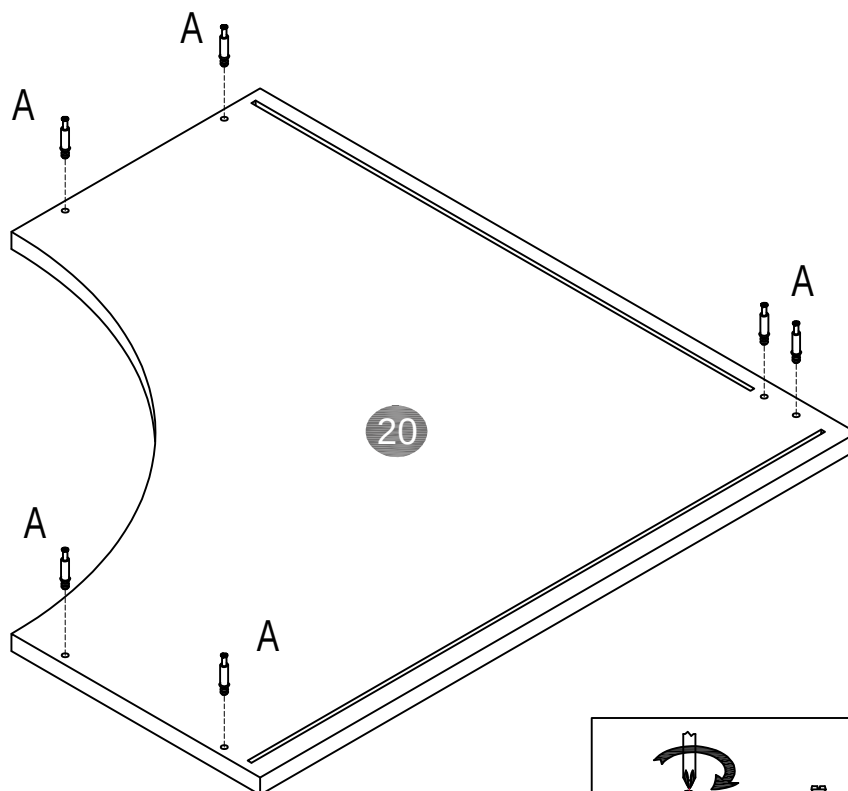


A




X 6

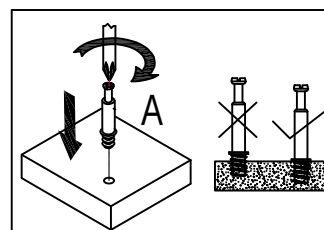


STEP8

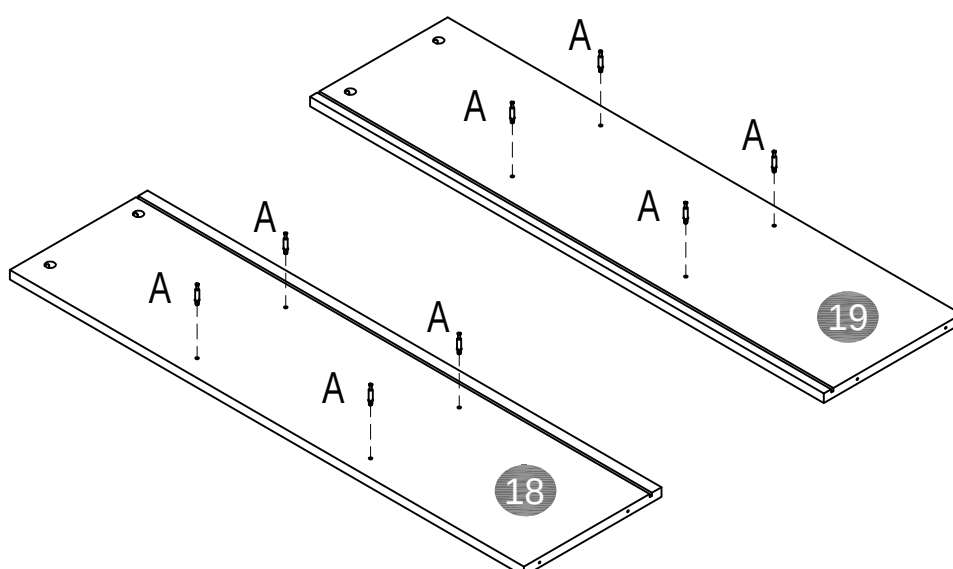


A



X 8

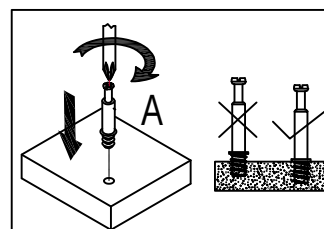


STEP9

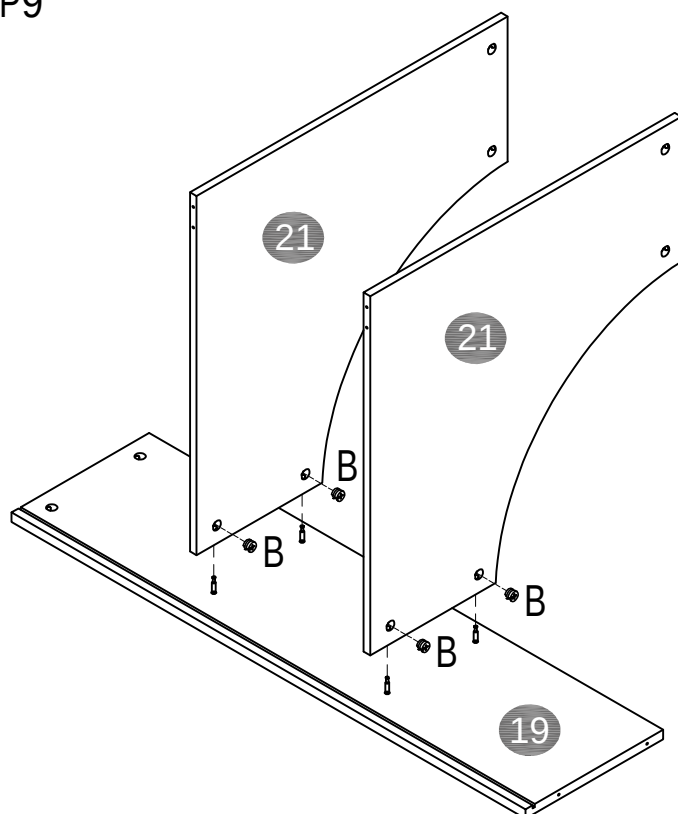


B



X 4

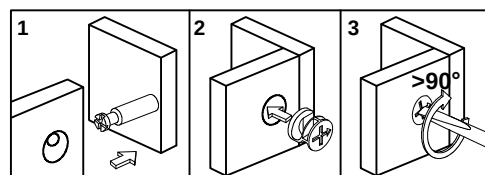

STEP10

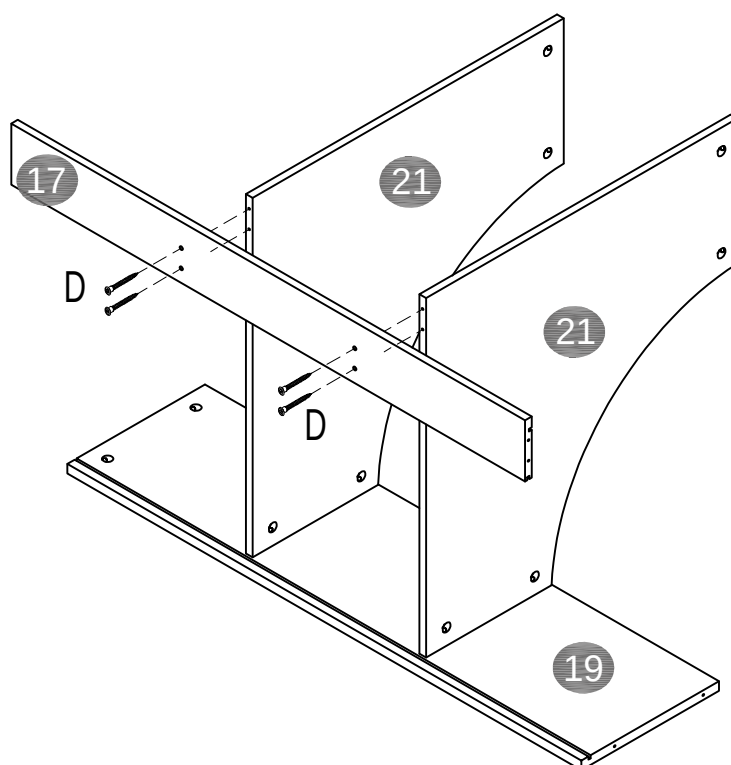


D



X 4


STEP11

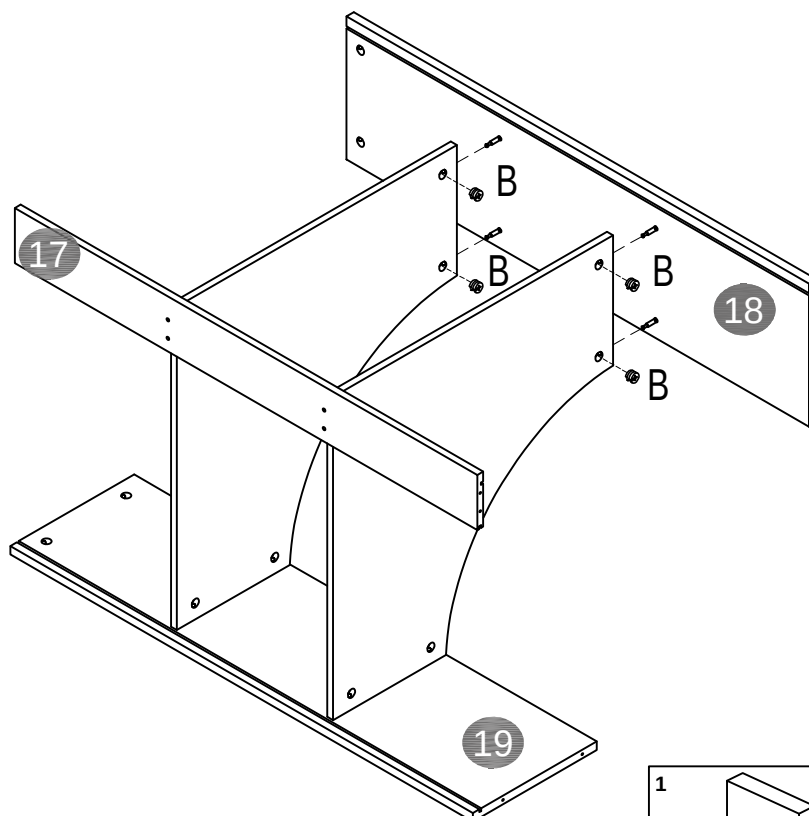


B



X 4

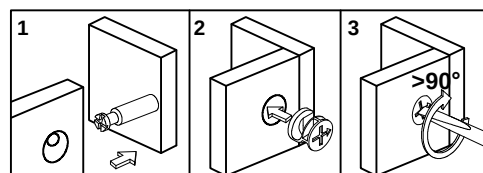


STEP12

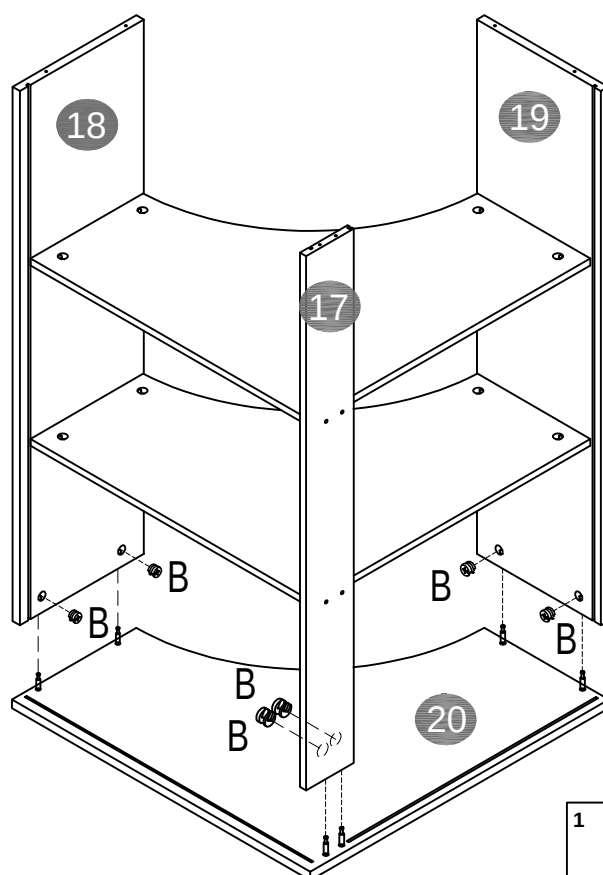


B




X 6

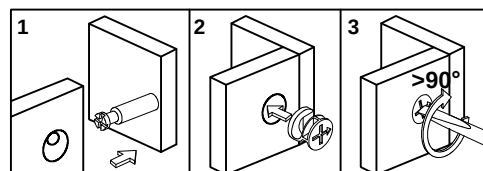

STEP13

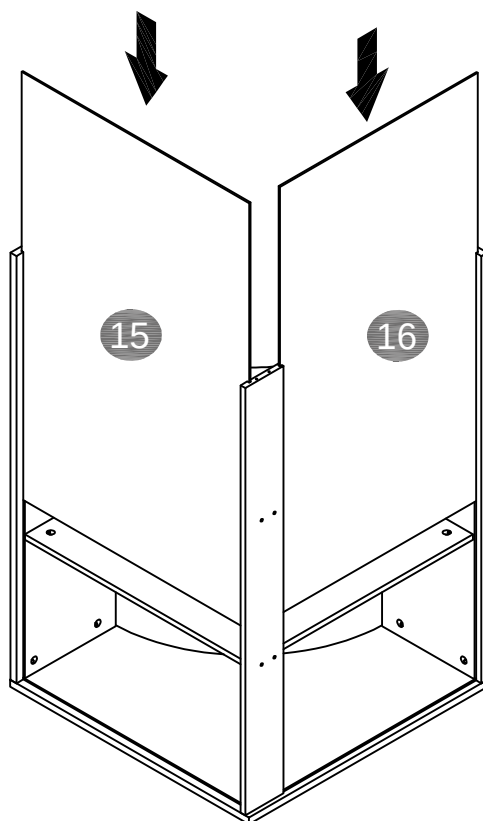


STEP14

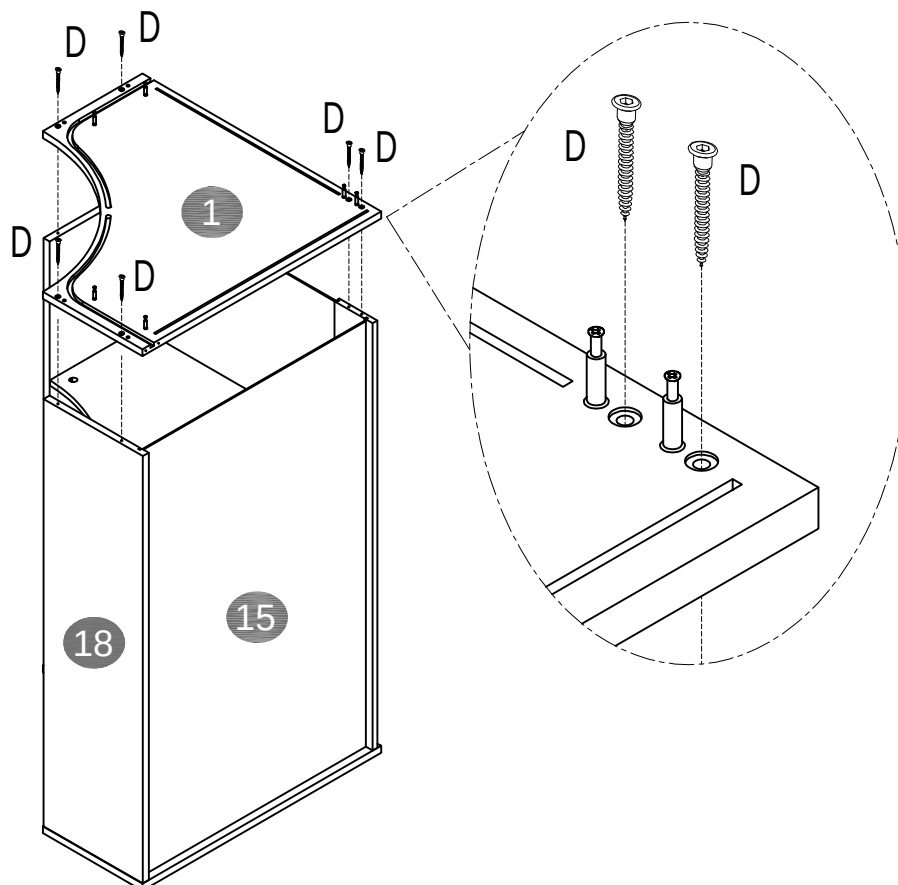


D  X 6


STEP15

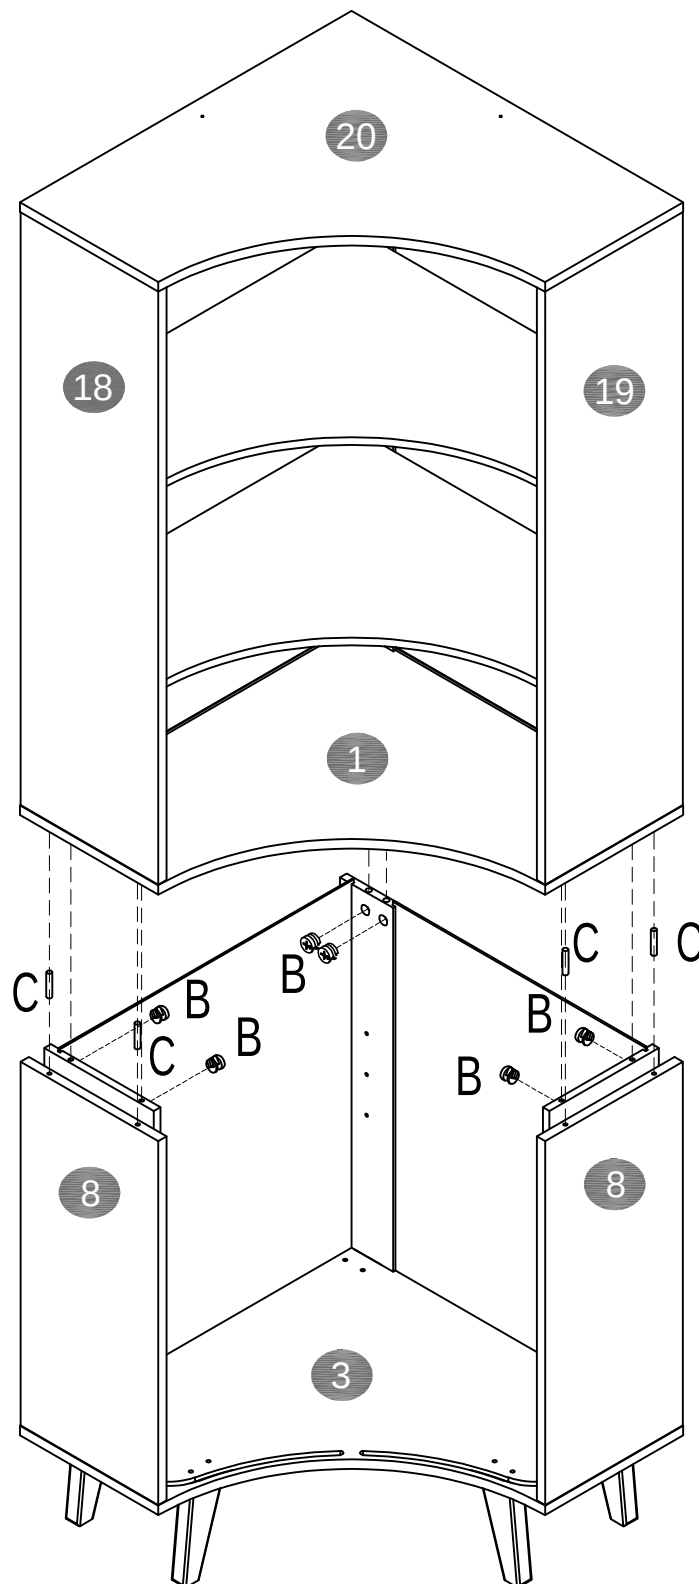


- | | | |
|---|---|-----|
| B |  | X 6 |
| C |  | X 4 |

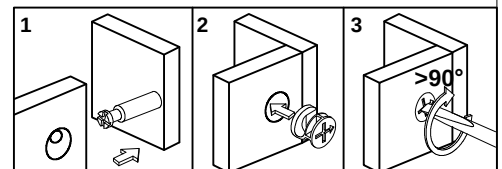

STEP16

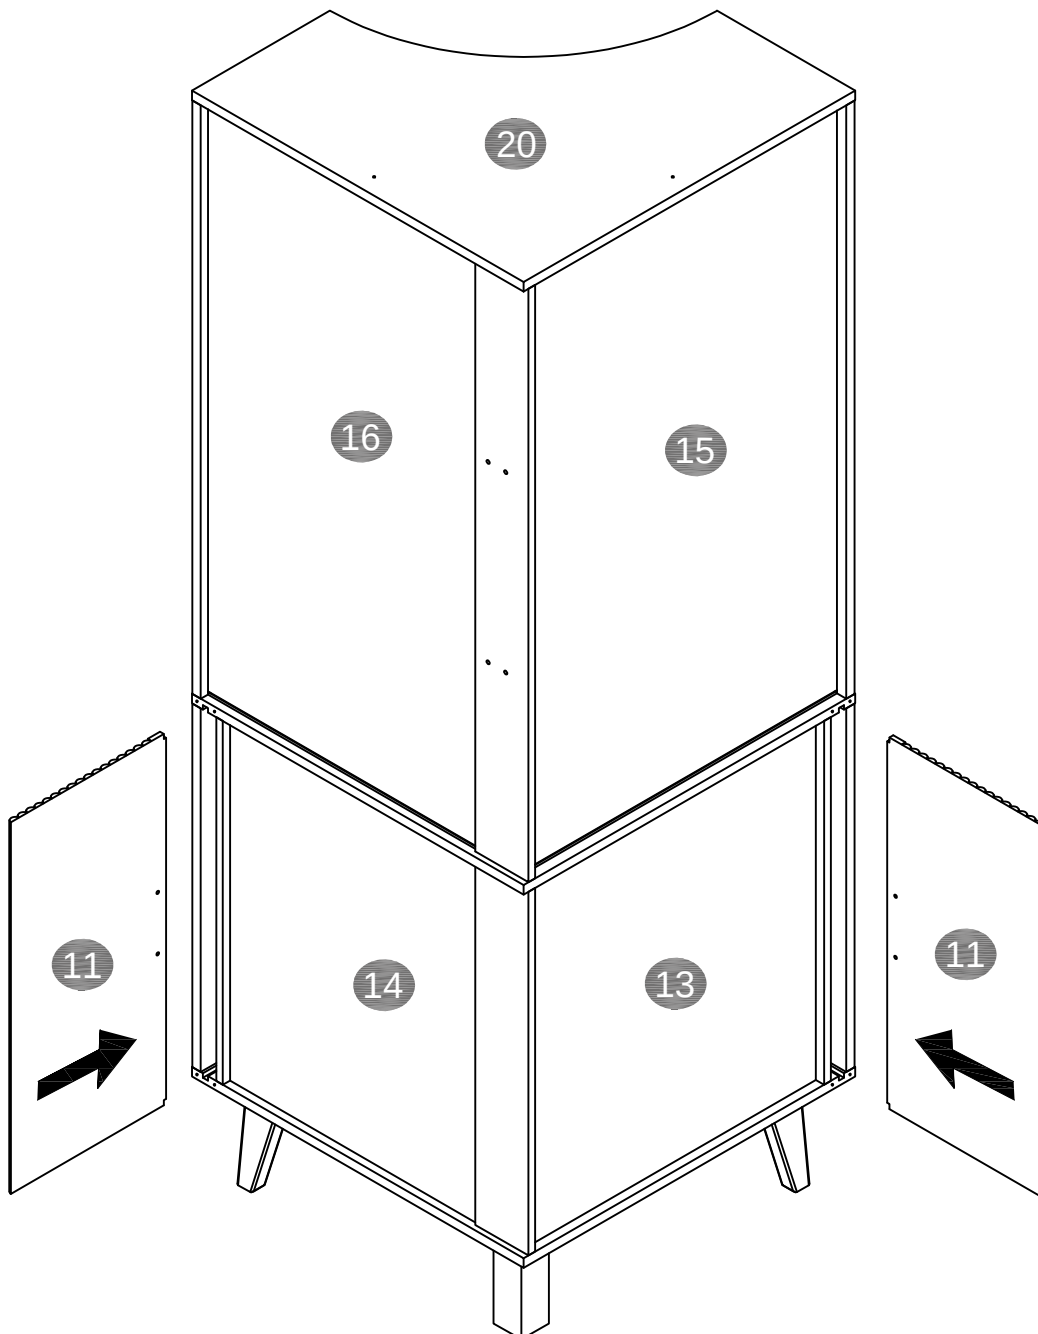


STEP17

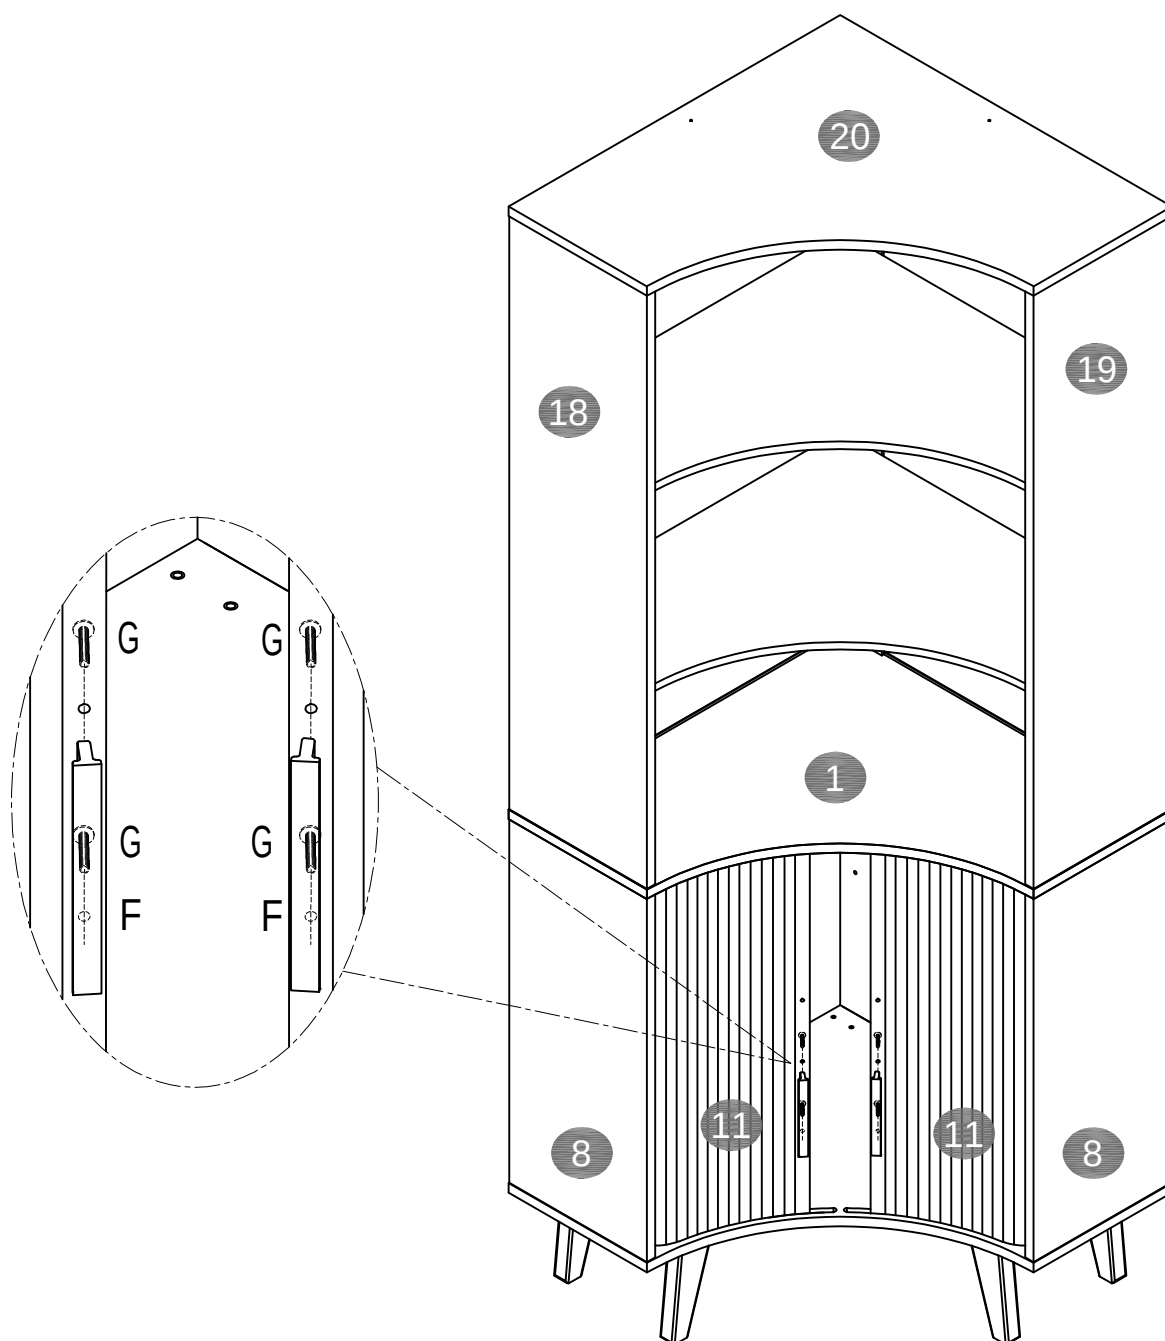

F		X 2
G		X 4

STEP18

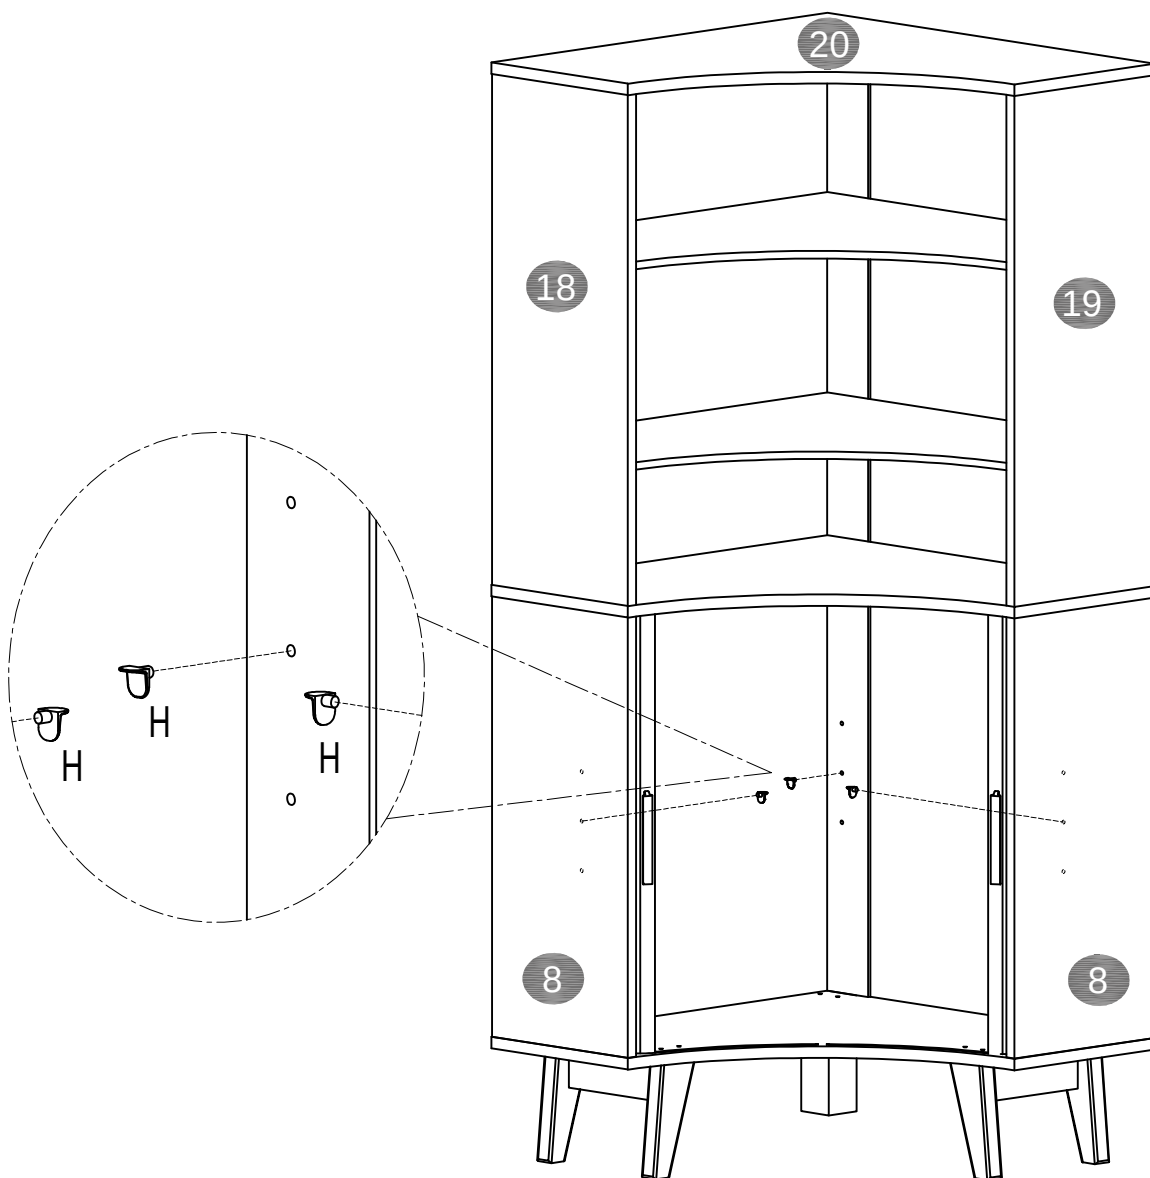


H





X 3

STEP19

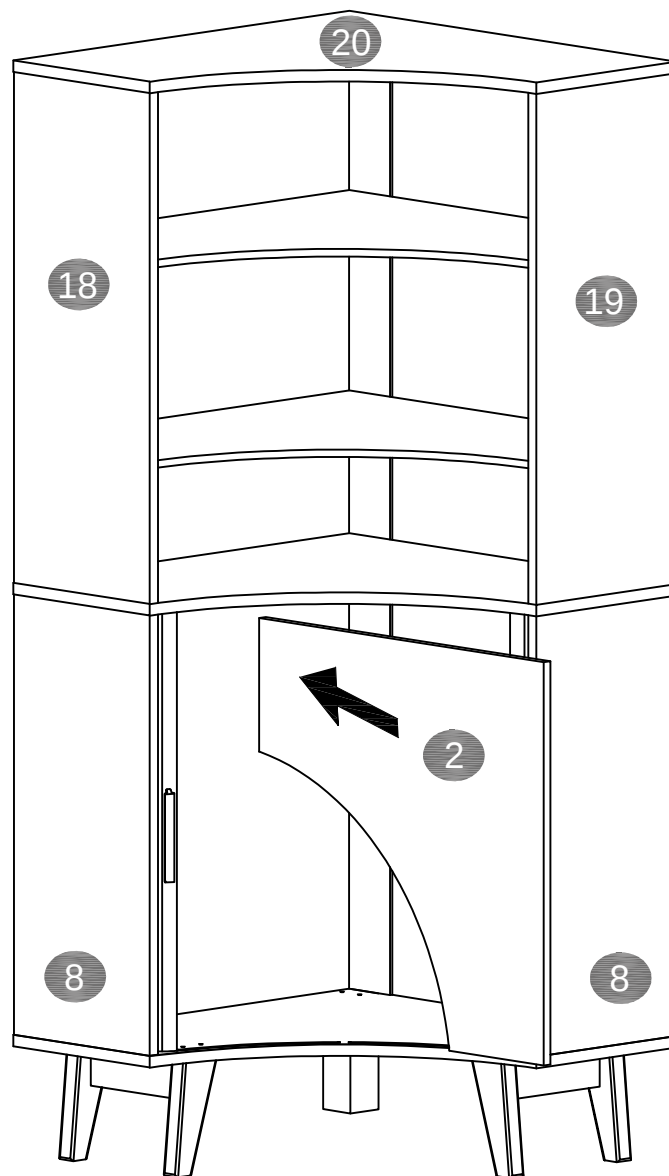

STEP20

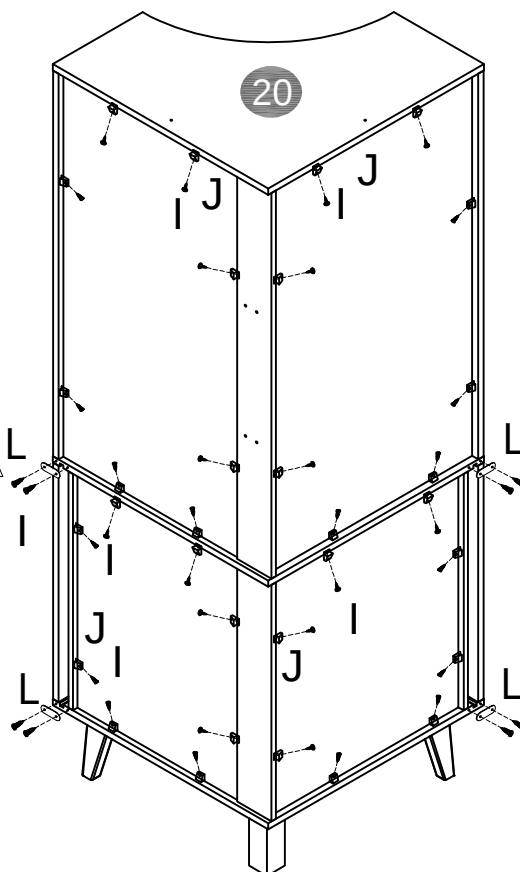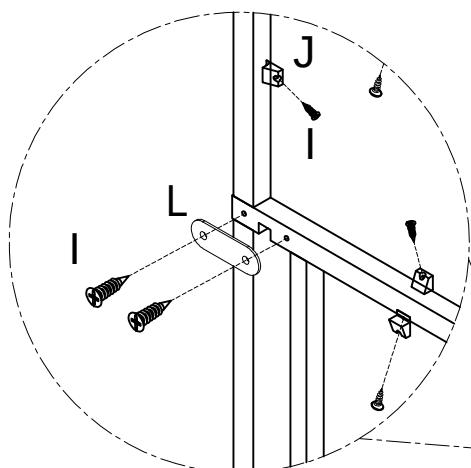


I		X 40
J		X 32
L		X 4

STEP21


Method 1: For solid or concrete wall.

0  X 2


- ① 1. Choose your desired location on the wall. Have your friend hold the product in place and use a pencil to mark where the anchor will go.

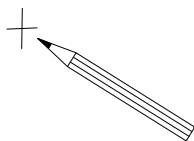


- ② 2. Pre-drill holes on the wall with a drill bit that is larger than the diameter of the wall anchors.

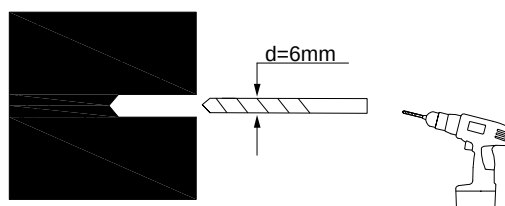


- ③ 3. Gently insert the wall anchor into the pre-drilled hole.

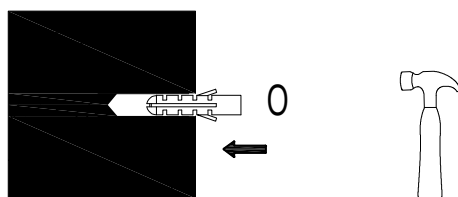


- ④ 4. Insert the screws into the wall anchor with a screwdriver to complete the installation.

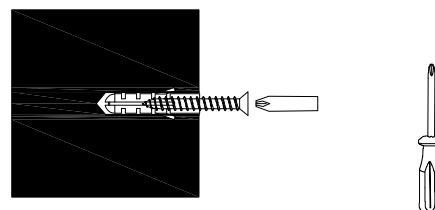

STEP22

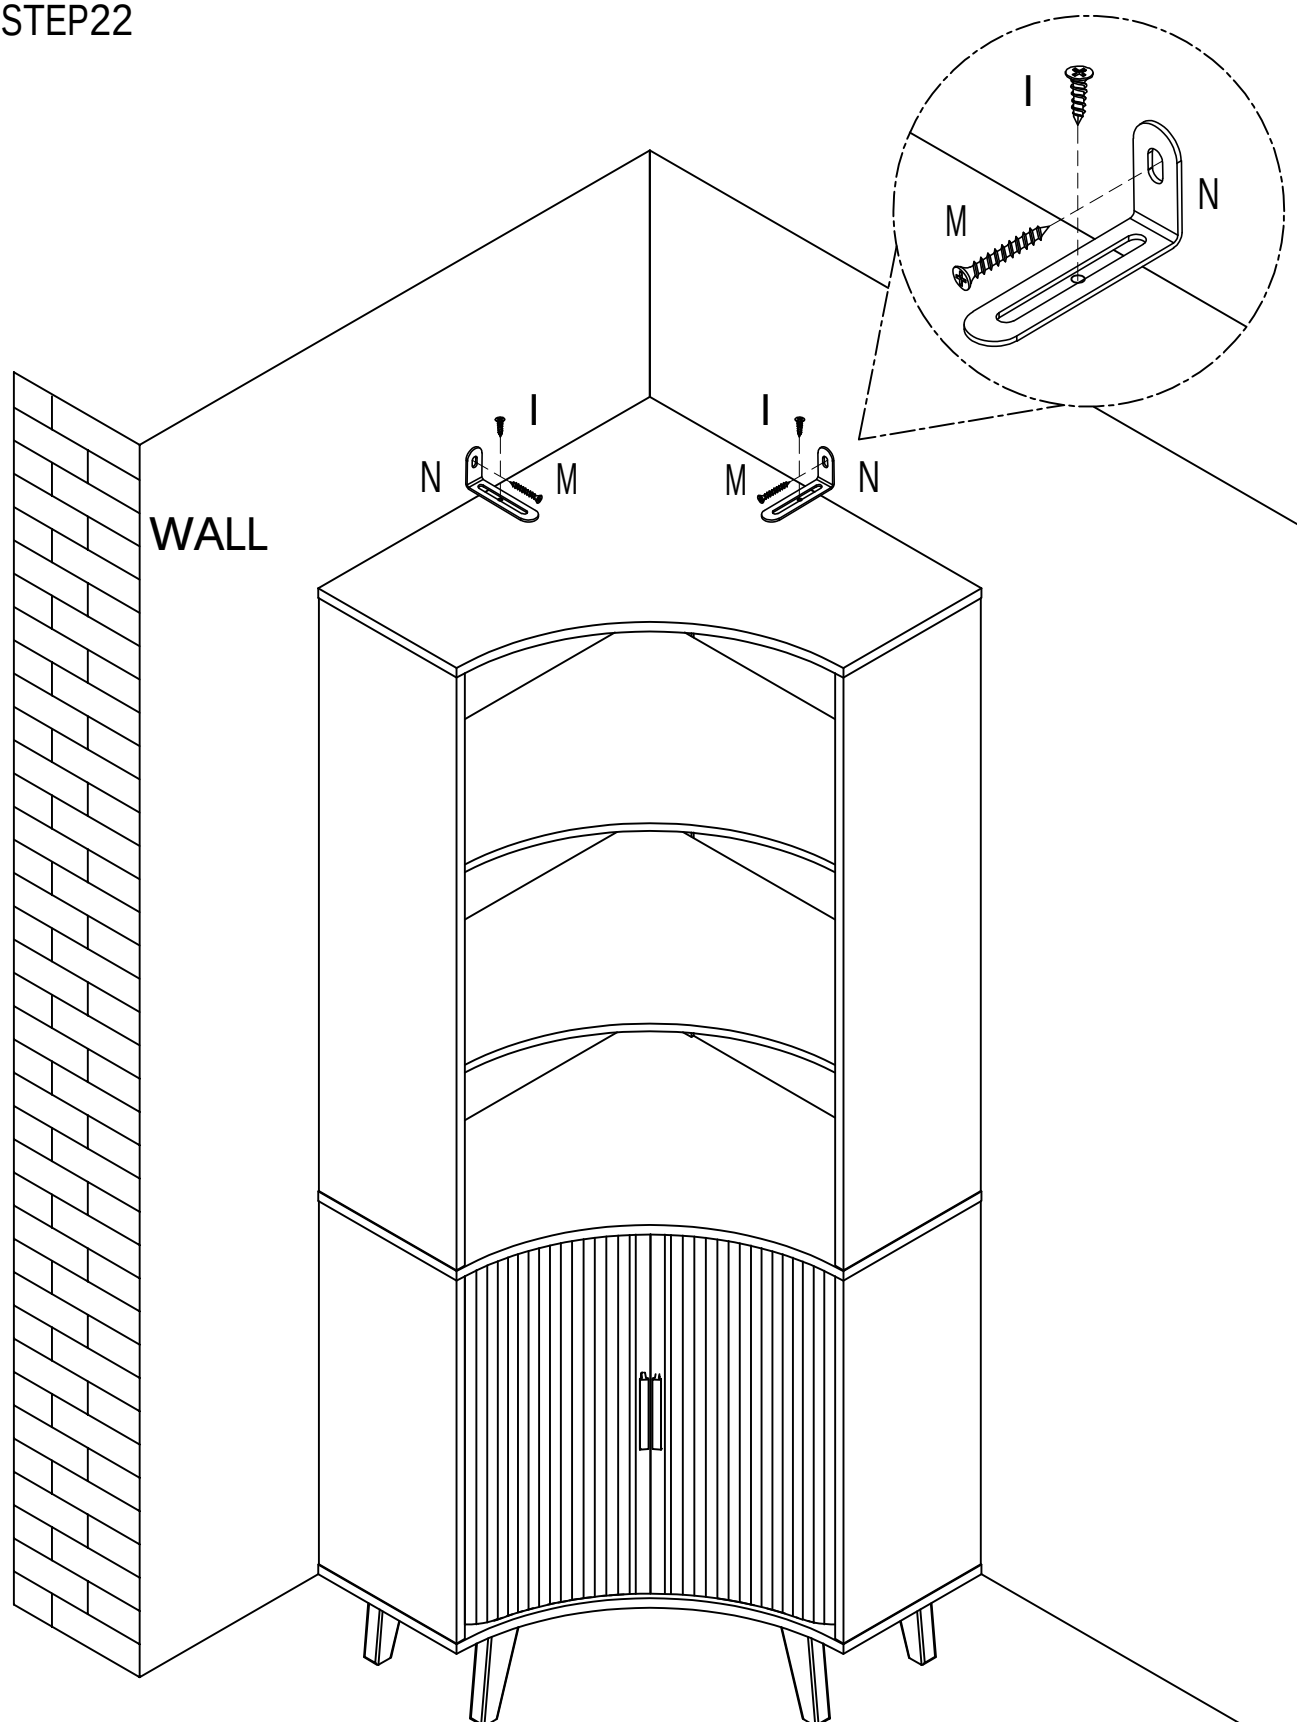

I		X 2
M		X 2
N		X 2

FINISH