


INSTALLATION INSTRUCTIONS

Model#04

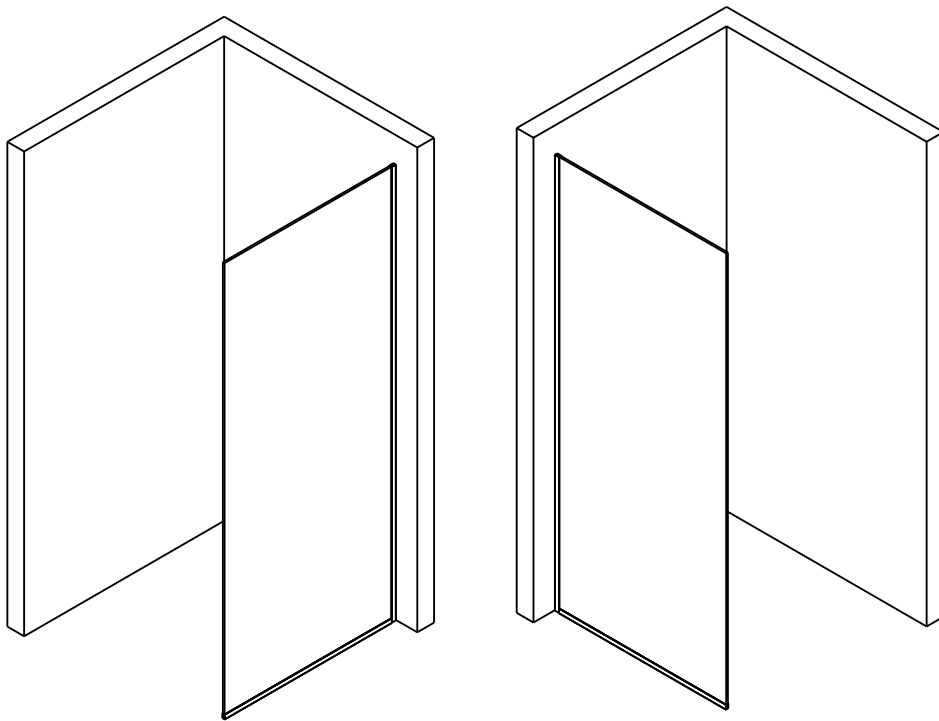

**THANK YOU FOR PURCHASING OUR PRODUCTS.
FOR IMMEDIATE ASSISTANCE WITH ASSEMBLY
OR PRODUCT INFORMATION ,PLEASE EMAIL US AT:**



SUPPORT@CUSTOMERSERVICEYIBAI.COM

Please include your order ID and the product model number in your email.

Our customer service team is available to assist you Monday to Friday
8:00 AM to 5:00 PM (PST).

▲ Important Notice Before Installation:

Please prepare Silicone Sealant in advance (not included). It is crucial to use the Silicone Sealant in the final step to prevent the risk of water leakage. Refer to Page 6 for its application location.

◆ General Information

Inspect the product immediately upon receipt for transit damage, missing packs/parts or manufacturing fault. Damage reported later will not be accepted. Handle the product with care avoiding knocks and shock loading to all sides and edges of the glass.

◆ Notes: Safety glass can not be re-worked

Read these instructions carefully before start of installation.

Special care should be taken when drilling walls to avoid hidden pipes or electrical cables.


Note: This product is heavy and may require two people to install.

◆ Aftercare instructions


After use, your shower should be cleaned with soap and water. This is particularly important in hard water districts where insoluble lime salts maybe deposited and allowed to build up. Cleaners of a gritty or abrasive nature should not be used. Care should be taken to avoid contact with strong chemicals, they can be used but with caution, if in doubt contact the manufacturer of the cleaner in question.

Keep these instructions for aftercare and customer service details.


Tools Required

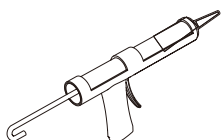


Silicone Sealant

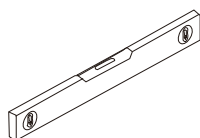


Level

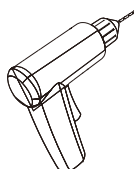


Drill



**Ø1/4"
Drill Bit**




**Screwdriver
(Phillips)**




Hammer



Pencil

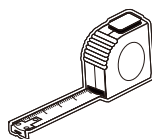

Tape Measurer




**Sealant
Finishing Tool**



**Painters
Tape**



Safety Glasses




Knife








Work Gloves


PARTS LIST

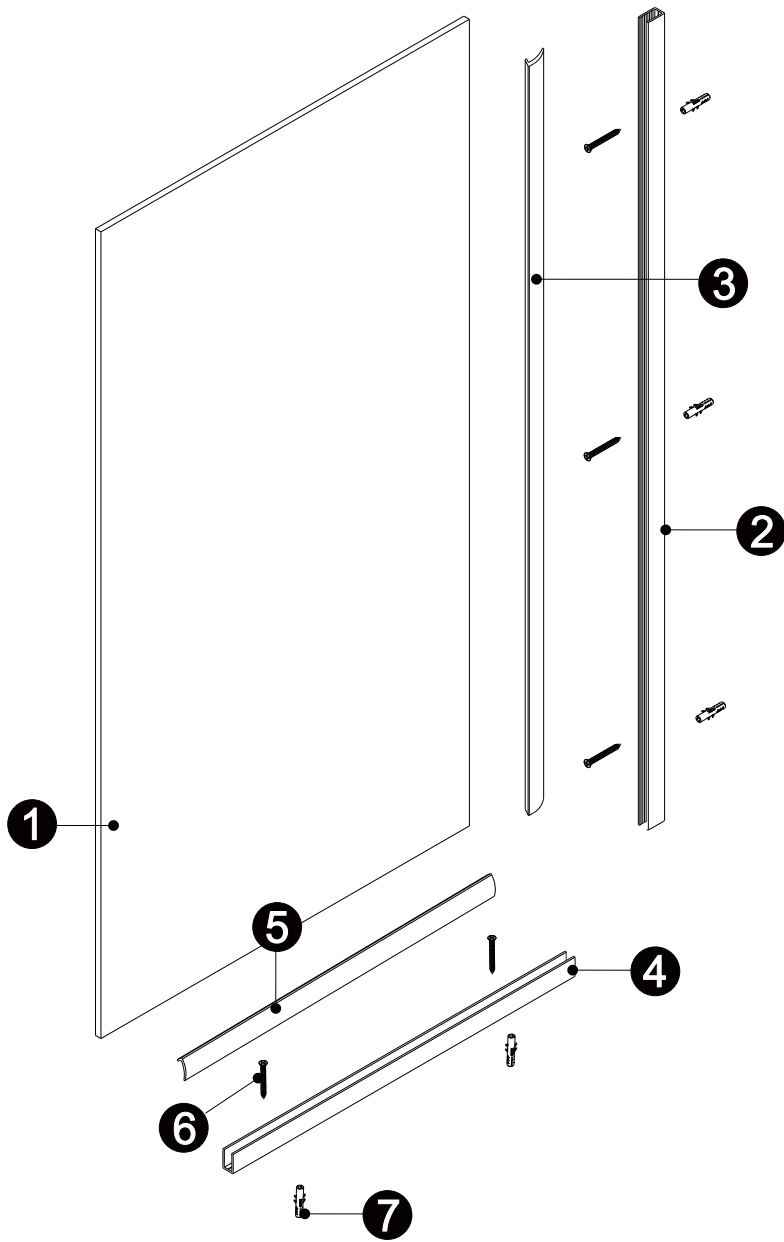

 keep small parts away from children





PACKING LIST

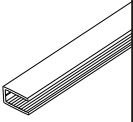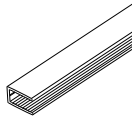 2 1 PC	 3 1 PC	 4 1 PC	 5 1 PC	 6 5 PCS	 7 5 PCS	 8 1 PC
--	--	--	--	--	---	--

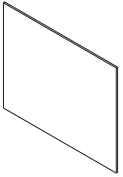Glass Door  1 1 PC


INSTALLATION STEPS

STEP 1-Wall Jamb Installation

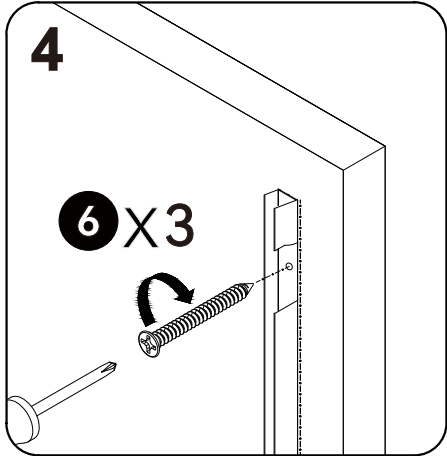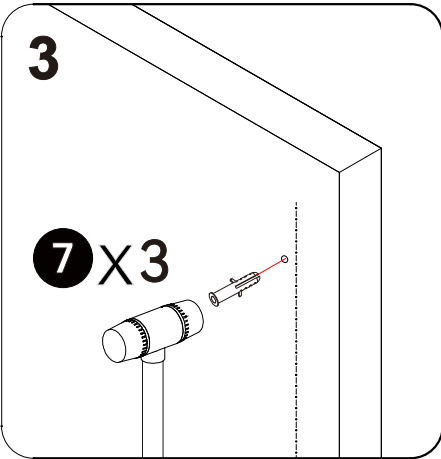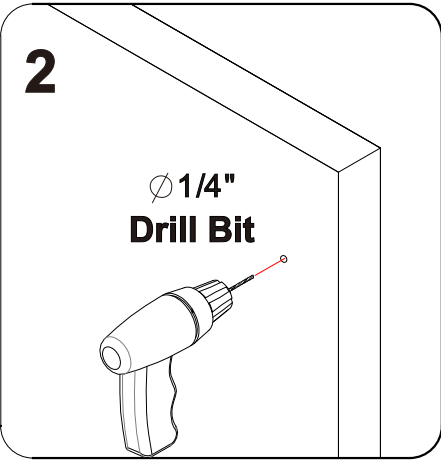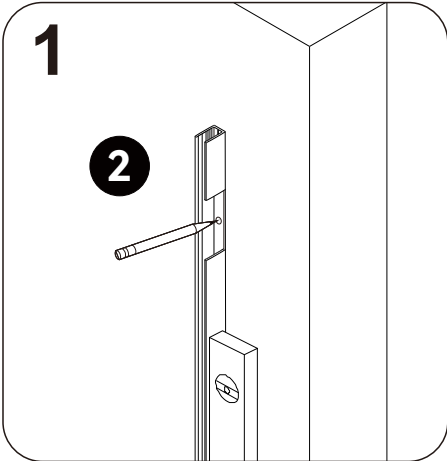

Parts Required:





Part No.	Description	Qty
2	Wall Jamb	1
7	Drywall Anchor	3
6	ST4x32 Self-Tapping	3

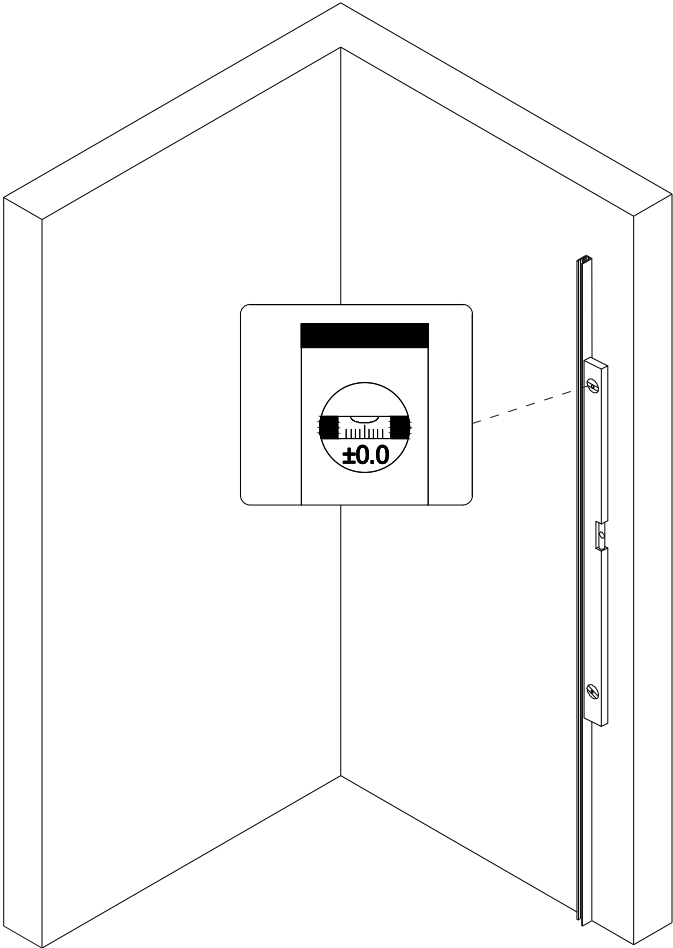

- 1.Place the wall jamb (#2) in position. Check vertical alignment with a level and mark pilot holes through the jamb onto the wall.
- 2.Drill holes at the marked points using a 1/4" drill bit.
- 3.Insert wall anchors (#7) into the drilled holes by tapping them gently with a hammer.
- 4.Fasten the wall jamb (#2) to the wall using ST4x32 self-tapping screws (#6) and a Phillips screwdriver.


INSTALLATION STEPS

STEP 2-Door Bottom Track Installation

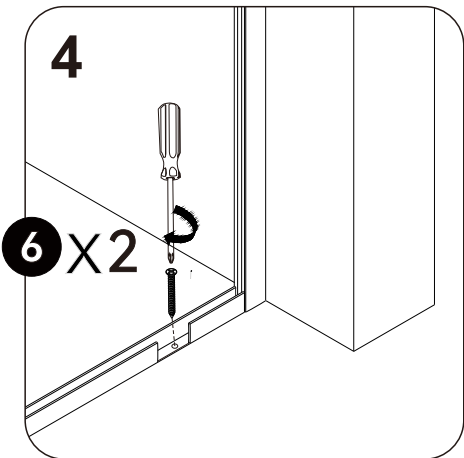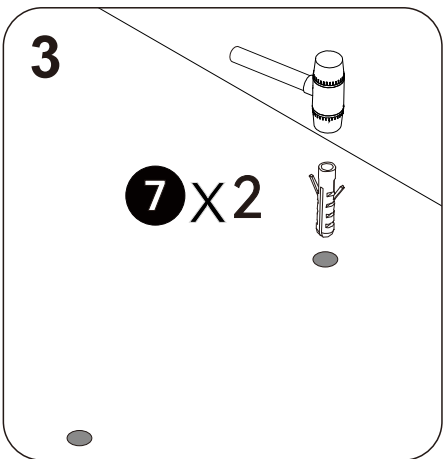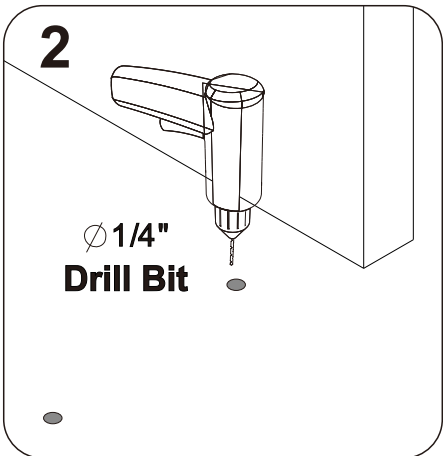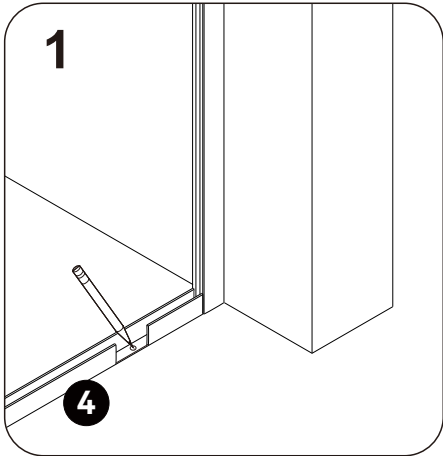

Parts Required:

Part No.	Description	Qty
4	Bottom Track	1
7	Drywall Anchor	2
6	ST4 x32 Self Tapping	2

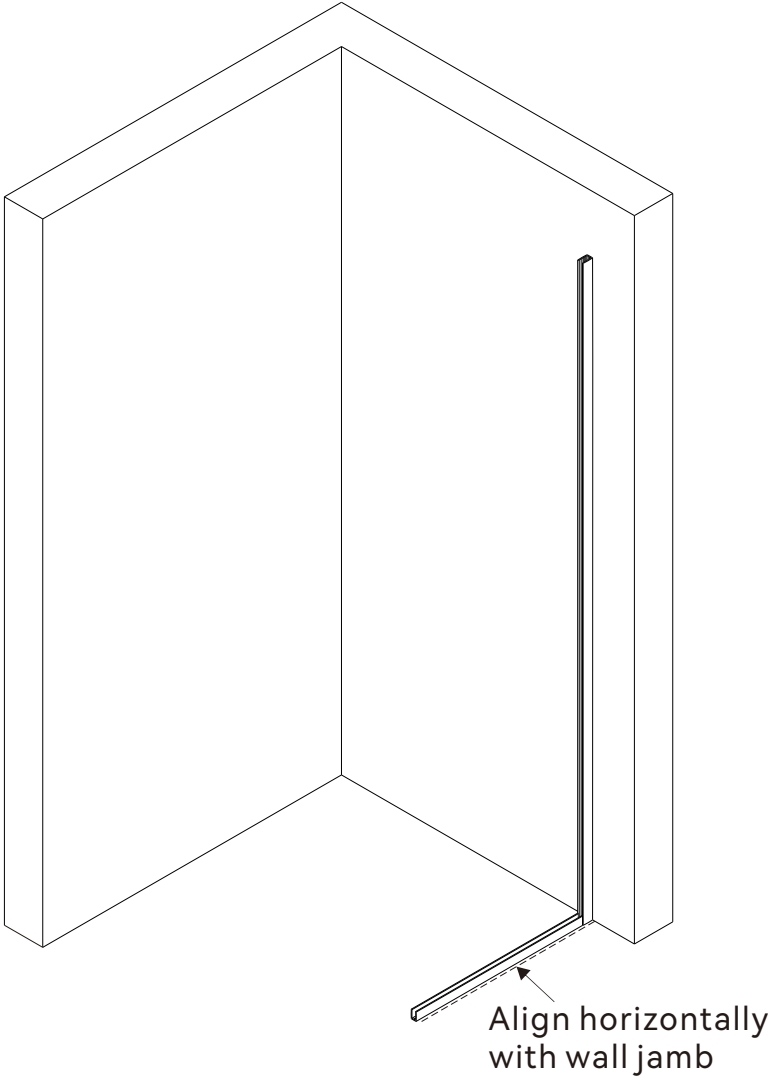


- 1.Place the bottom track (#4) in position, aligning it with the wall jamb (#2). Mark drilling points through the track's pre-drilled holes.
- 2.Drill at the marked points using a 1/4" drill bit.
- 3.Insert wall anchors (#7) into the drilled holes by tapping them gently with a hammer.
- 4.Fasten the bottom track (#4) using ST4.2x32 self-tapping screws (#6) and a Phillips screwdriver.

INSTALLATION STEPS



STEP 3-Door Side Seal and Bottom Seal Installation

Parts Required:

Part No.	Description	Qty
1	Glass Door	1
8	Support Panel	1
3	Door Side Seal	1
5	Bottom Seal	1

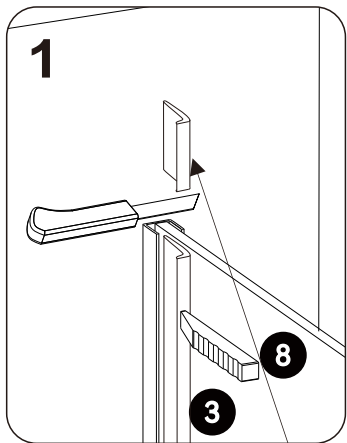

Cut the seal to match the length of the wall jamb and door.

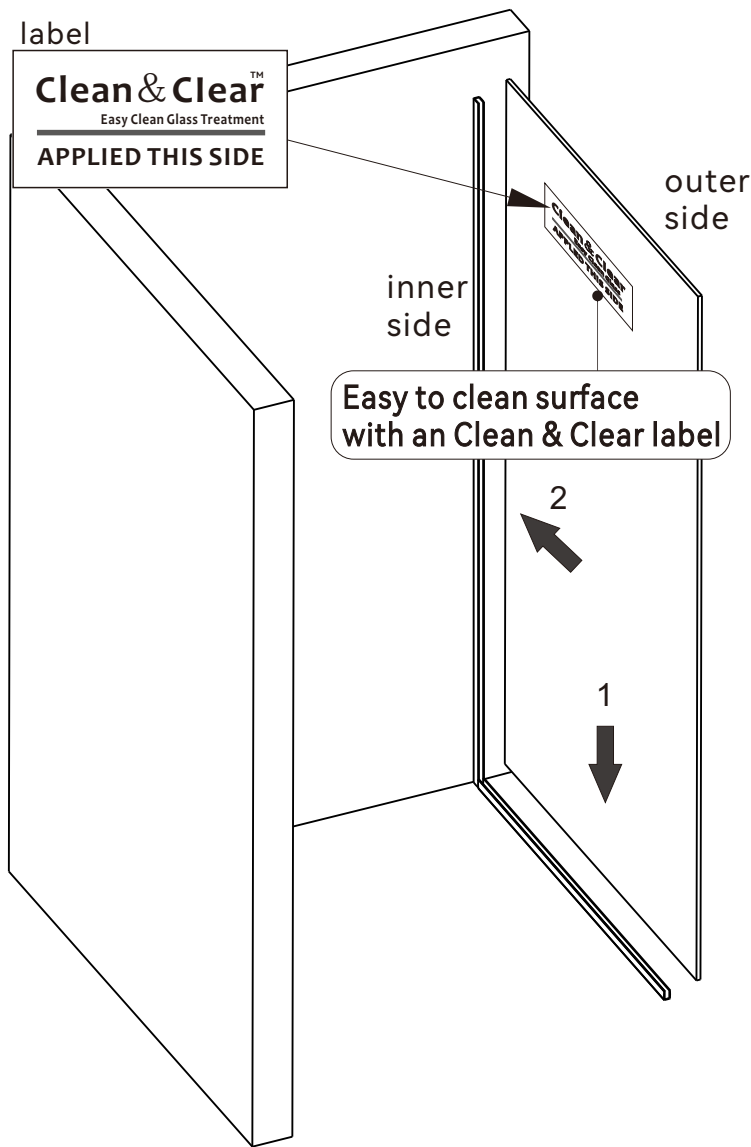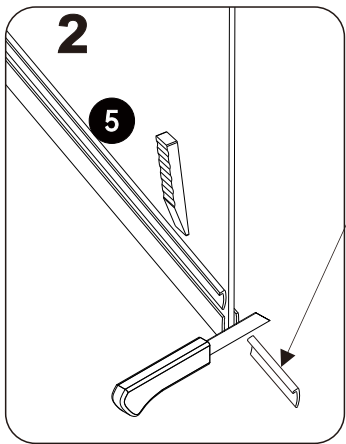

1. Place the glass door (#1) into the bottom track (#4) and slide it against the wall jamb (#2).
2. Install the door side seal (#3) onto the edge of the glass door that meets the wall jamb.
3. Fit the bottom seal (#5) between the glass door and the bottom track.

INSTALLATION STEPS

STEP 4-Sealing

NOTE


The surfaces need to be clean and free of debris before applying silicone

NOTE

Apply a good quality silicone sealant along the wall jamb ,door side seal and bottom seal.



Allow 24 hours for the silicone to cure before using the shower.

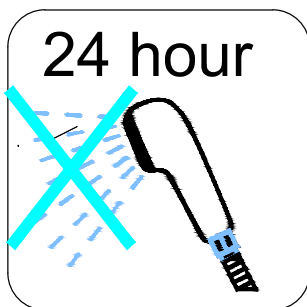

Apply Silicone
Sealant,(not supplied)

