
ASSEMBLY INSTRUCTIONS

Sideboard Buffet Cabinet

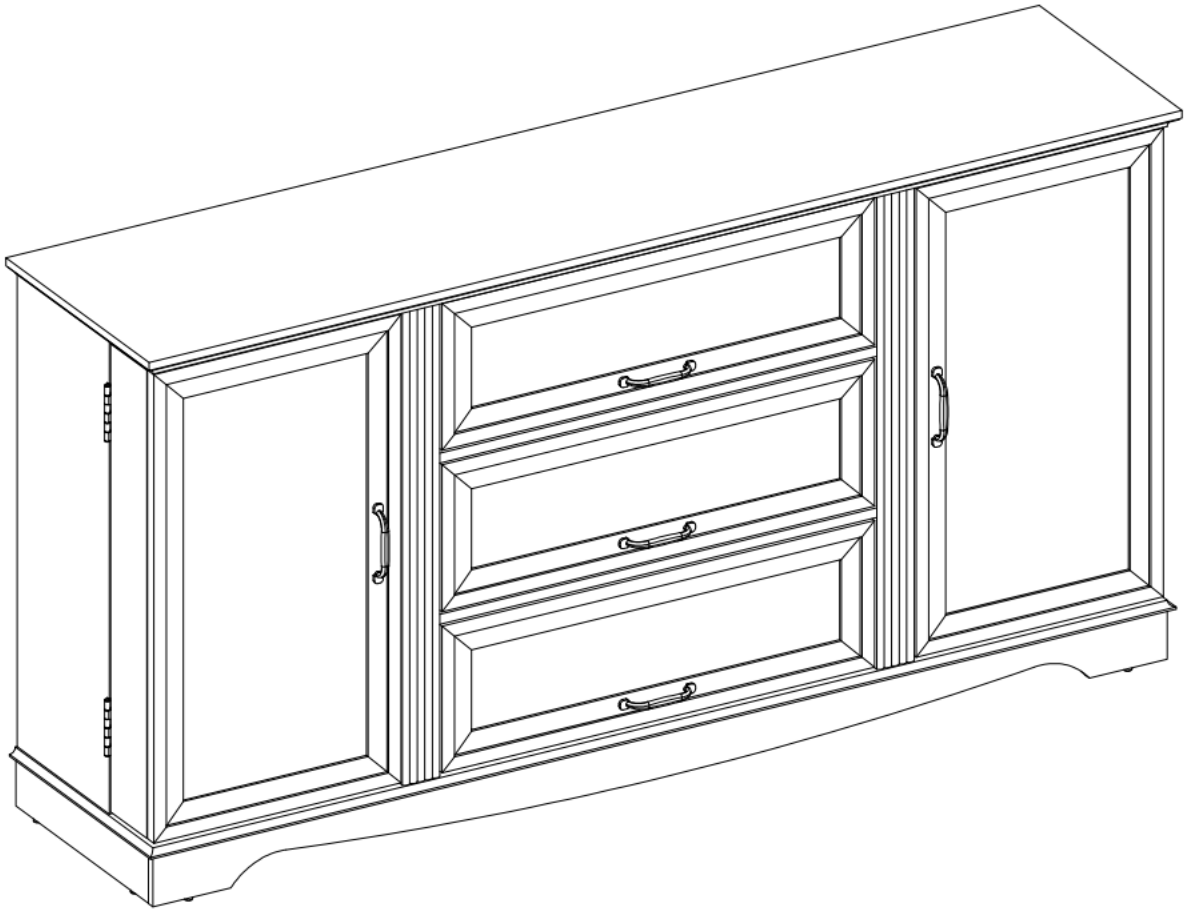

Notice:




1. Please unbox the item from the side with an open label and put a carpet on the floor to avoid scratching it.
2. Follow the installation instructions carefully. before installation, please ensure that all accessories are present. For large items, we advise you to install them with 2 or more people for faster and safer installation.
3. Do not fully tighten the screws during initial assembly.Fully tighten the screws only once all pieces are correctly assembled.
4. Do not stand, climb, or swing on the product.
5. If you encounter any problems during installation, please contact our customer service.












Recommended installers:2













Put a carpet on the floor before unpcking



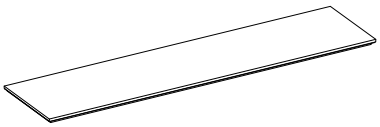
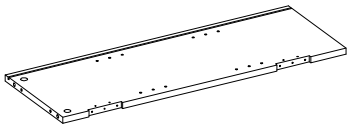
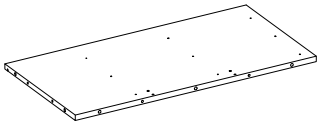
Item no.	Reference Image	Qty.
1		×1
3		×1
5		×1




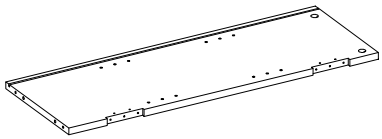
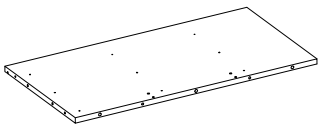
Item no.	Reference Image	Qty.
2		×1
4		×1
6		×1

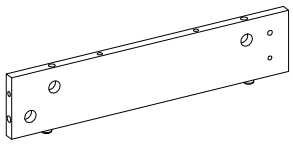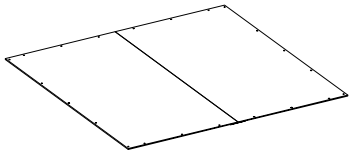
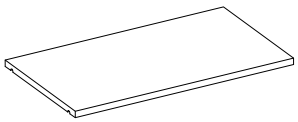


Item no.	Reference Image	Qty.
7		×1
9		×1
11		×1
13		×4
15		×2
17		×1

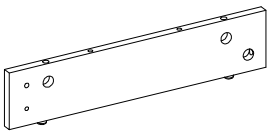
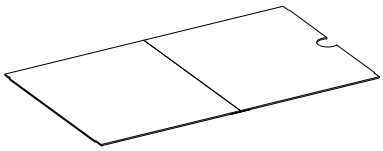



Item no.	Reference Image	Qty.
8		×1
10		×1
12		×2
14		×2
16		×1
18		×6

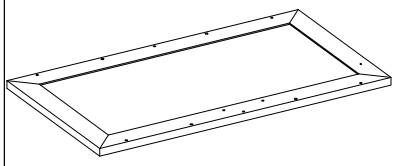
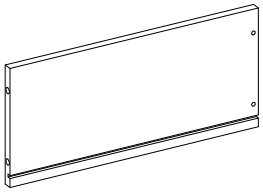
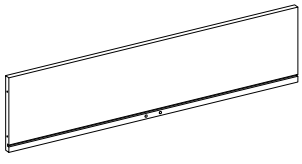

Item no.	Reference Image	Qty.
19		×6
21		×1
23		×1
25		×3
27		×3
29		×3

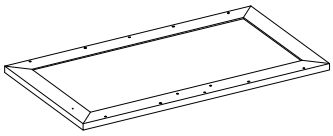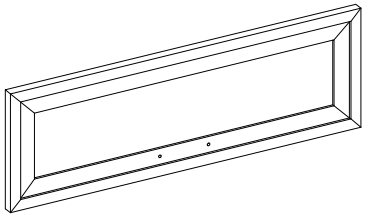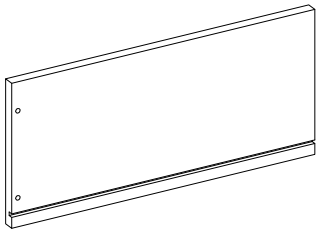Item no.	Reference Image	Qty.
20		×1
22		×1
24		×3
26		×3
28		×3

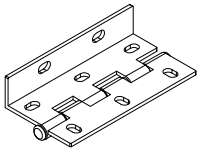Item no.	Reference Image	Qty.
A		×75+3
C	 ϕ30mm	×75+3
E		×4
G	 ϕ4x15mm	×8+1
I	 ϕ3.5x14mm	×4
K		×5
M	 ϕ4x38mm	×18+1

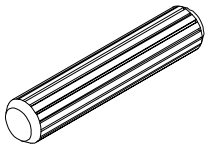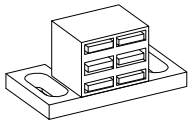
Item no.	Reference Image	Qty.
B	 ϕ15x9.5mm	×75+3
D	 ϕ6x30mm	×60+3
F	 ϕ4x20mm	×24+2
H		×2
J		×2
L	 ϕ4x19mm	×10+1
N		×16+1

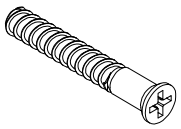Item no.	Reference Image	Qty.
O	 ϕ5*50mm	×8+1
Q		×2
S		×2
U		×16+1
W	 ϕ3.5x12mm	×38+2
CL		×3
DL		×3

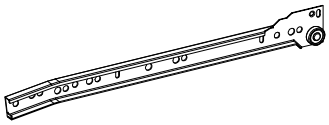
Item no.	Reference Image	Qty.
P	 ϕ3.5x12mm	×22+2
R	 ϕ4x12mm	×2
T	 ϕ4x35mm	×2
V	 ϕ3x17mm	×16+1
CR		×3
DR		×3

⚠ Tips: The number after "+" represents the spare hardware.


Explosion Diagram

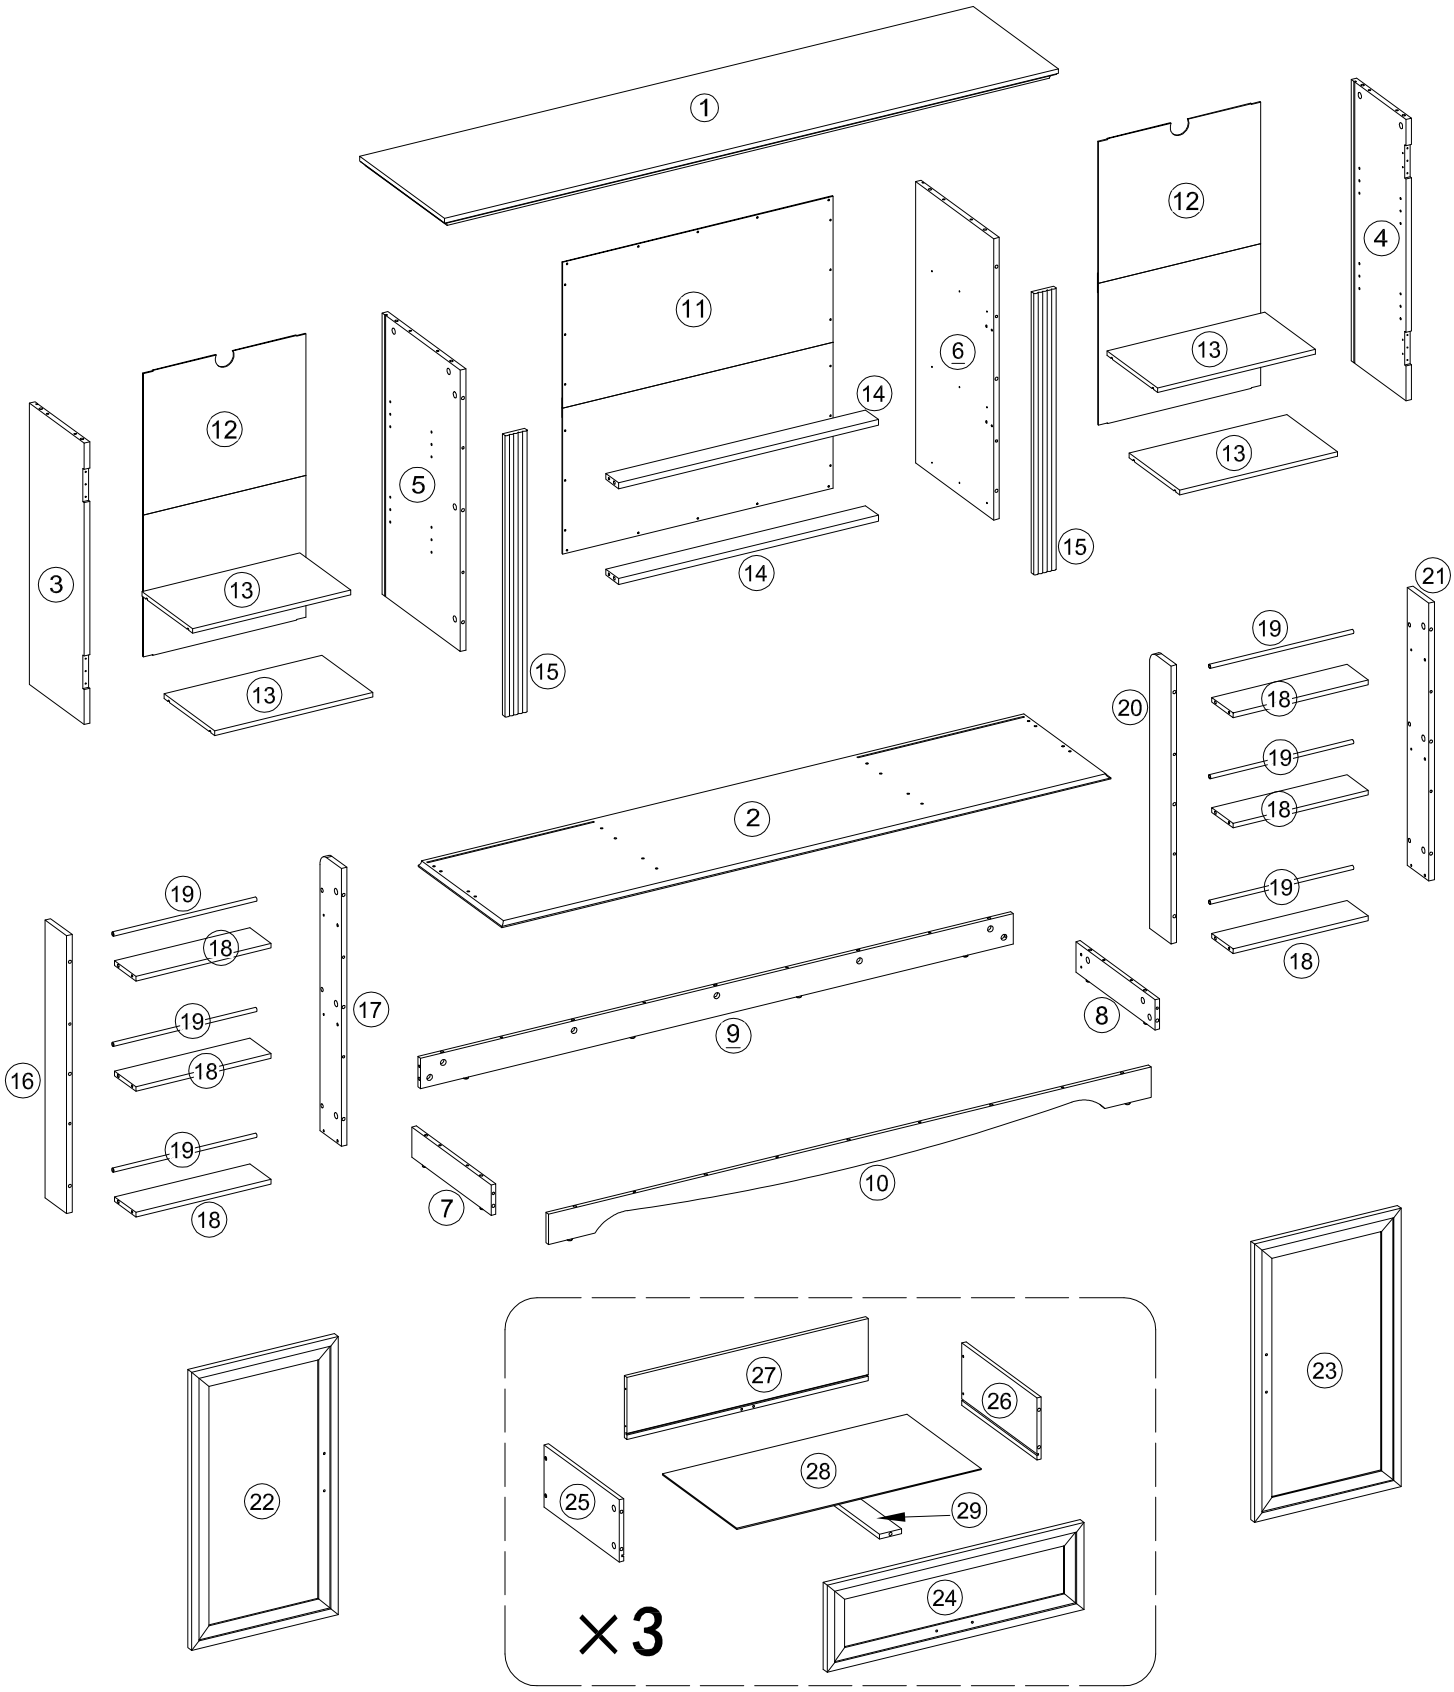


1

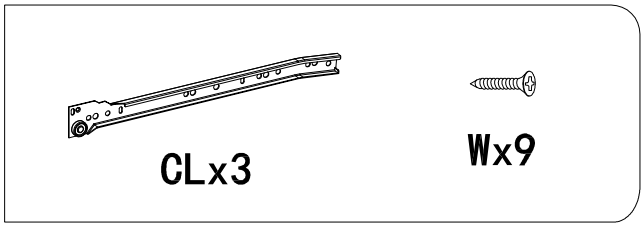


CL

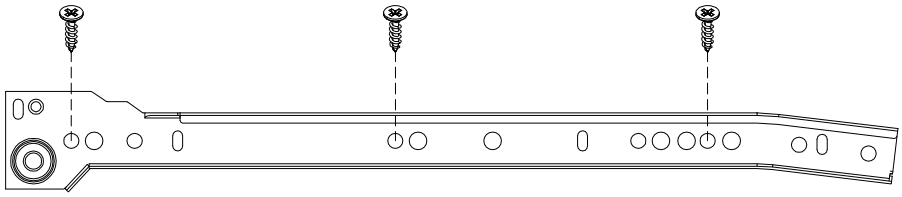

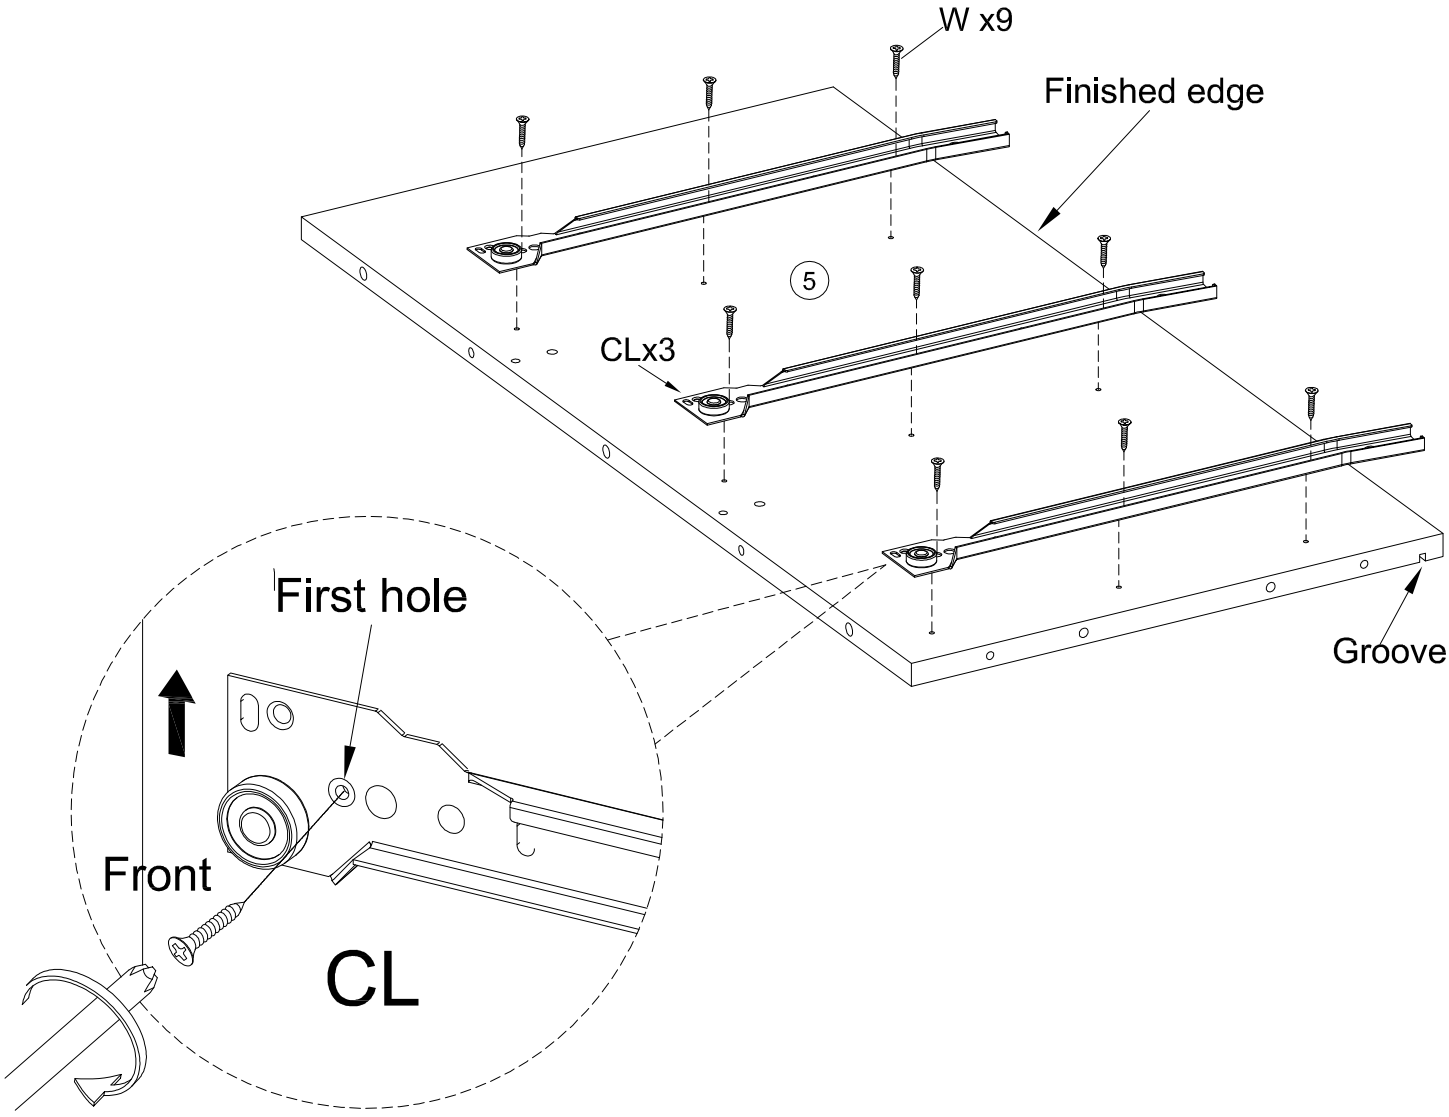


2




CRx3




Wx9

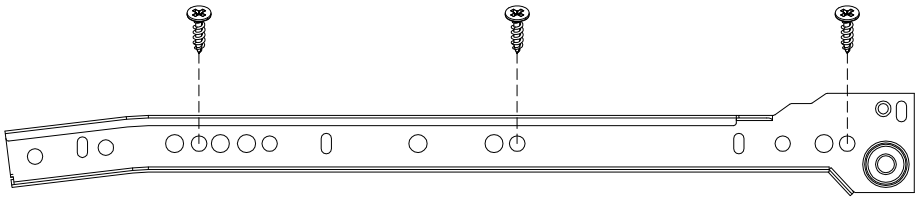


CR

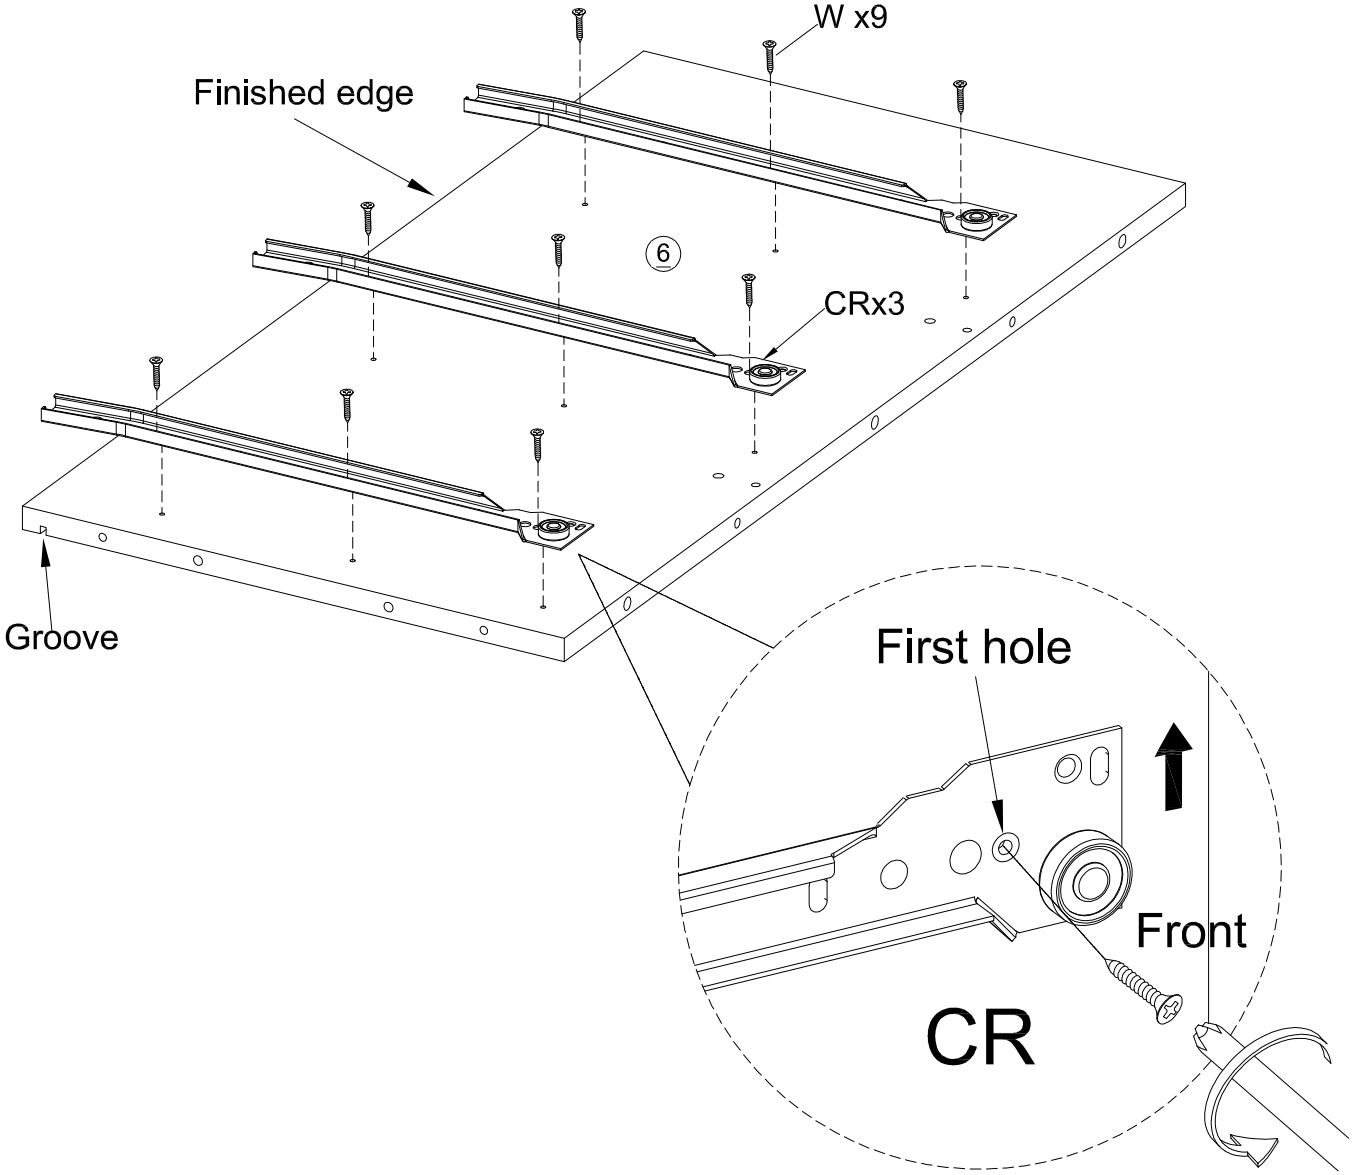


3





Ax4

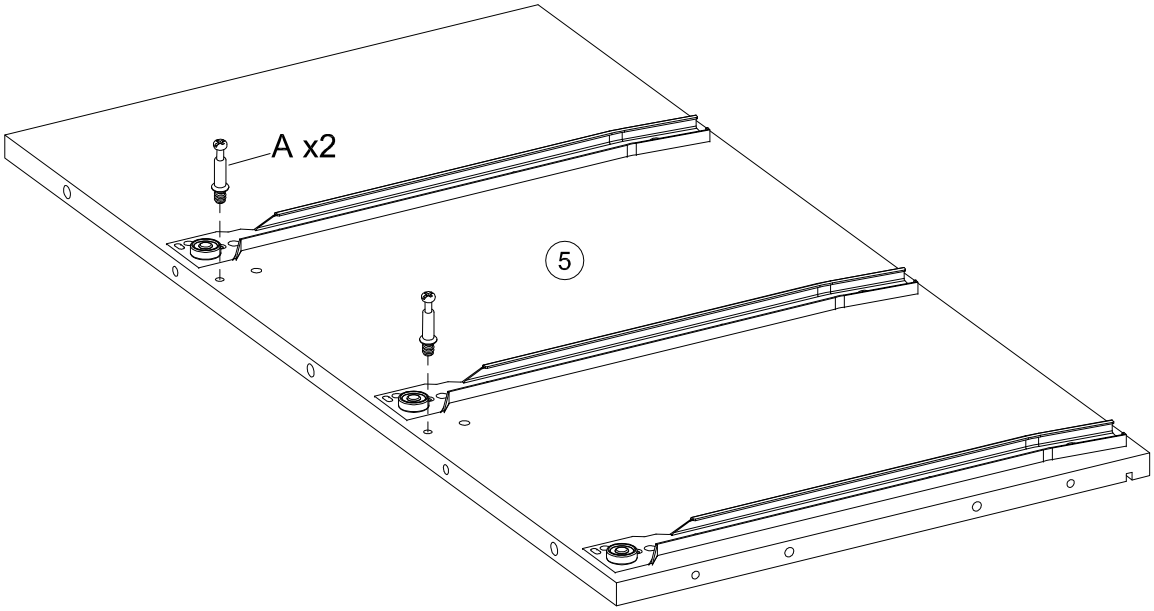


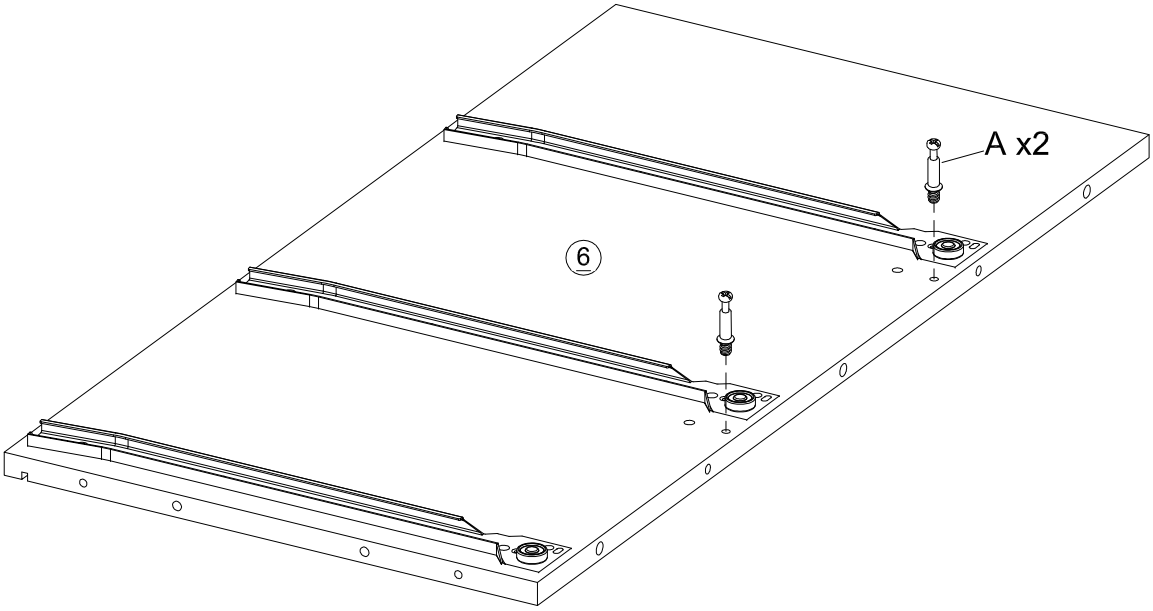


4

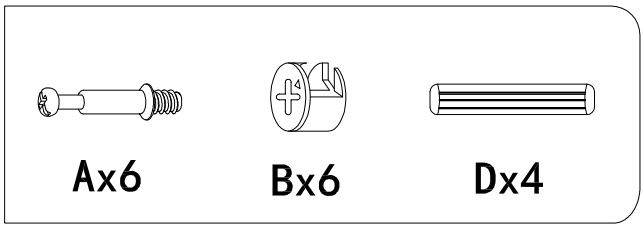

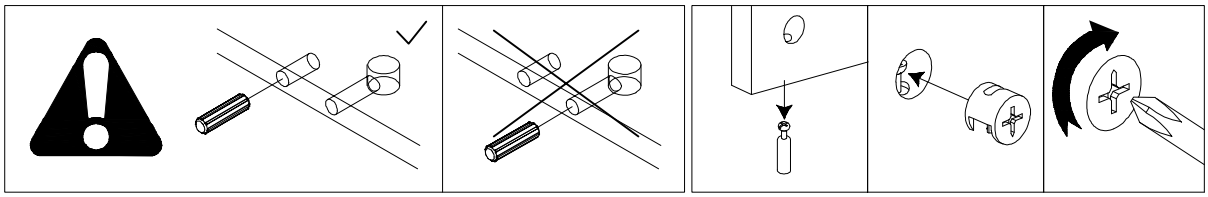

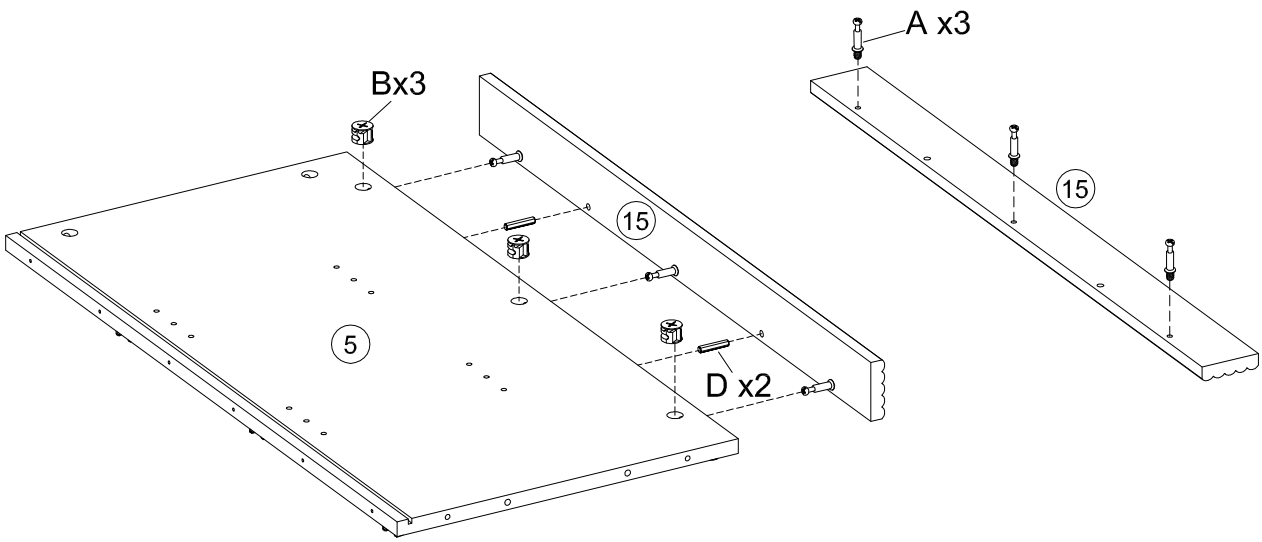

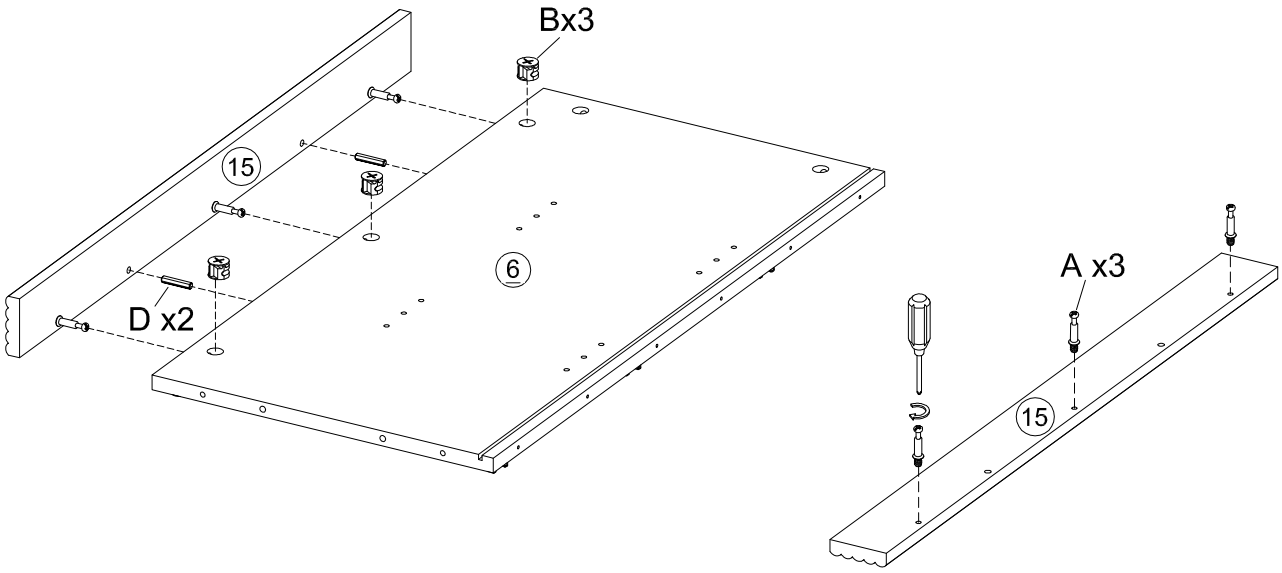


5




Bx4





Dx4

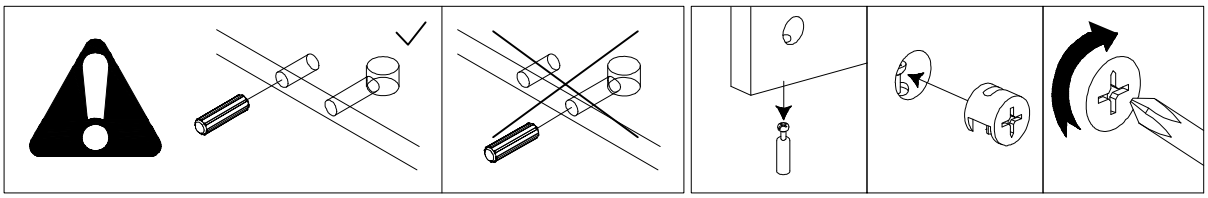

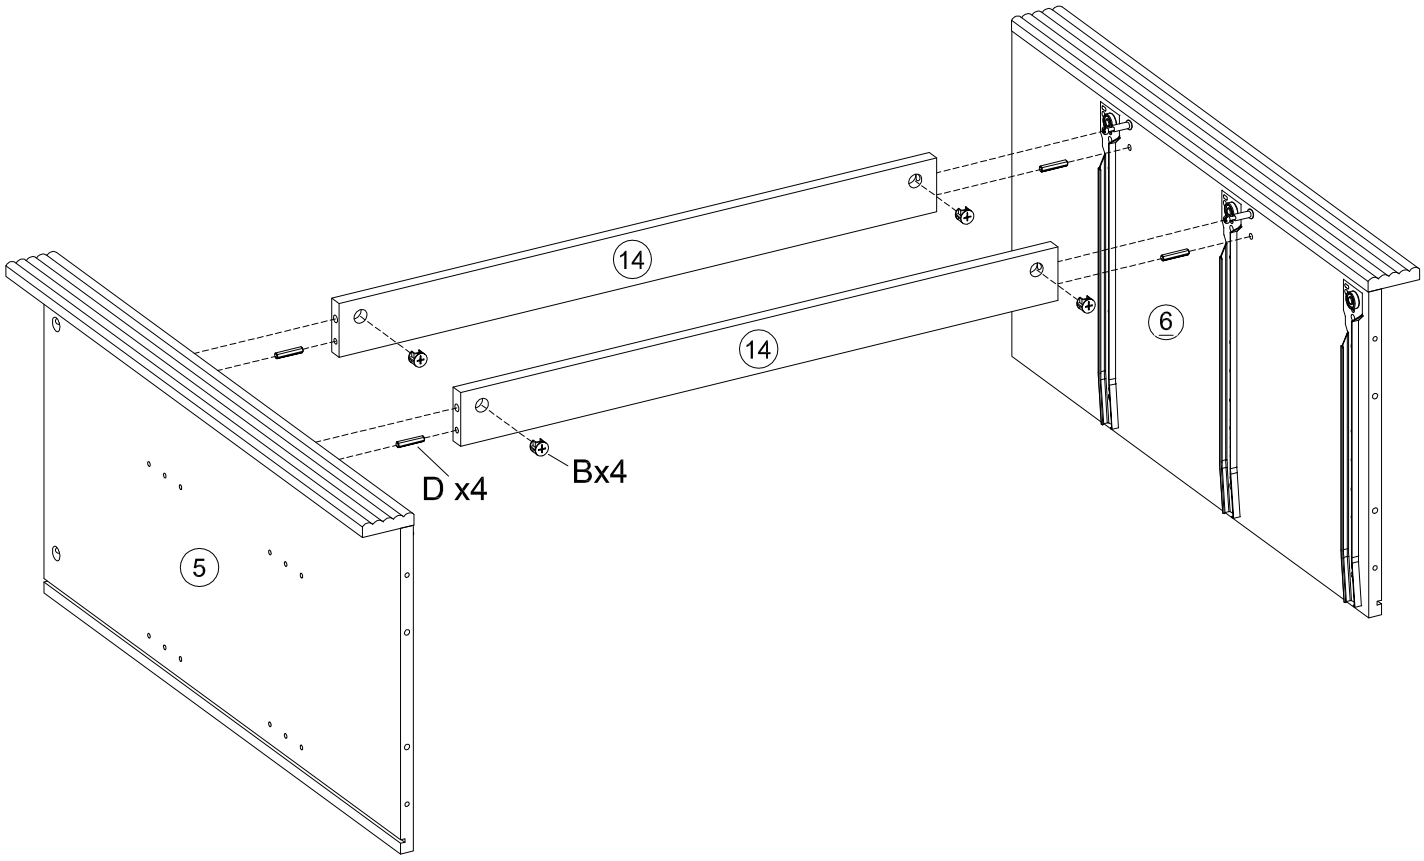


6

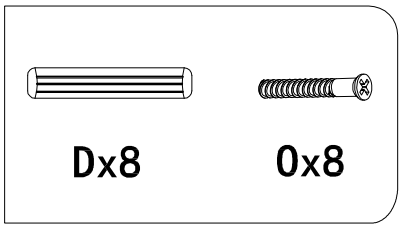


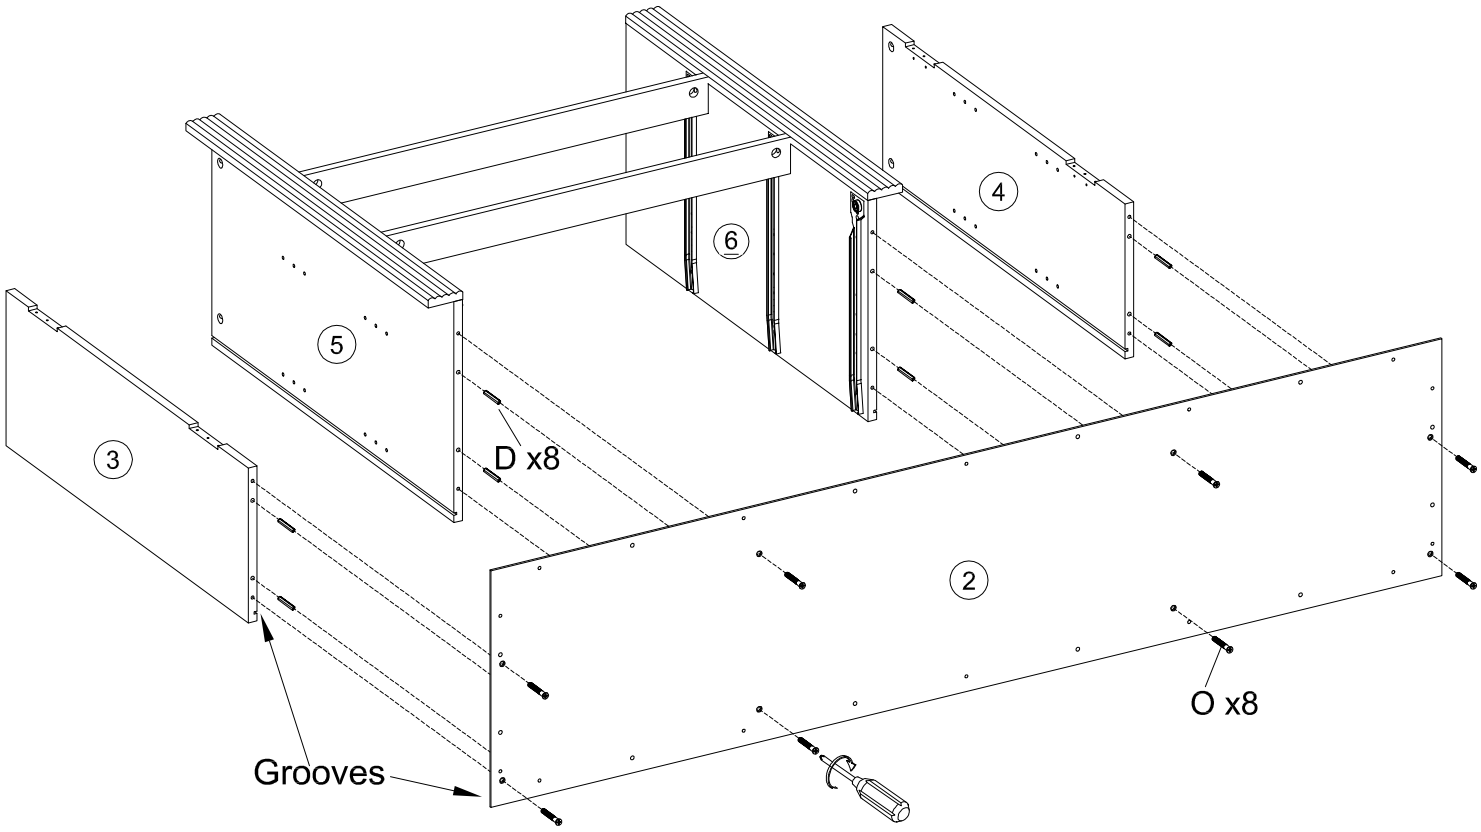


7





Ax18

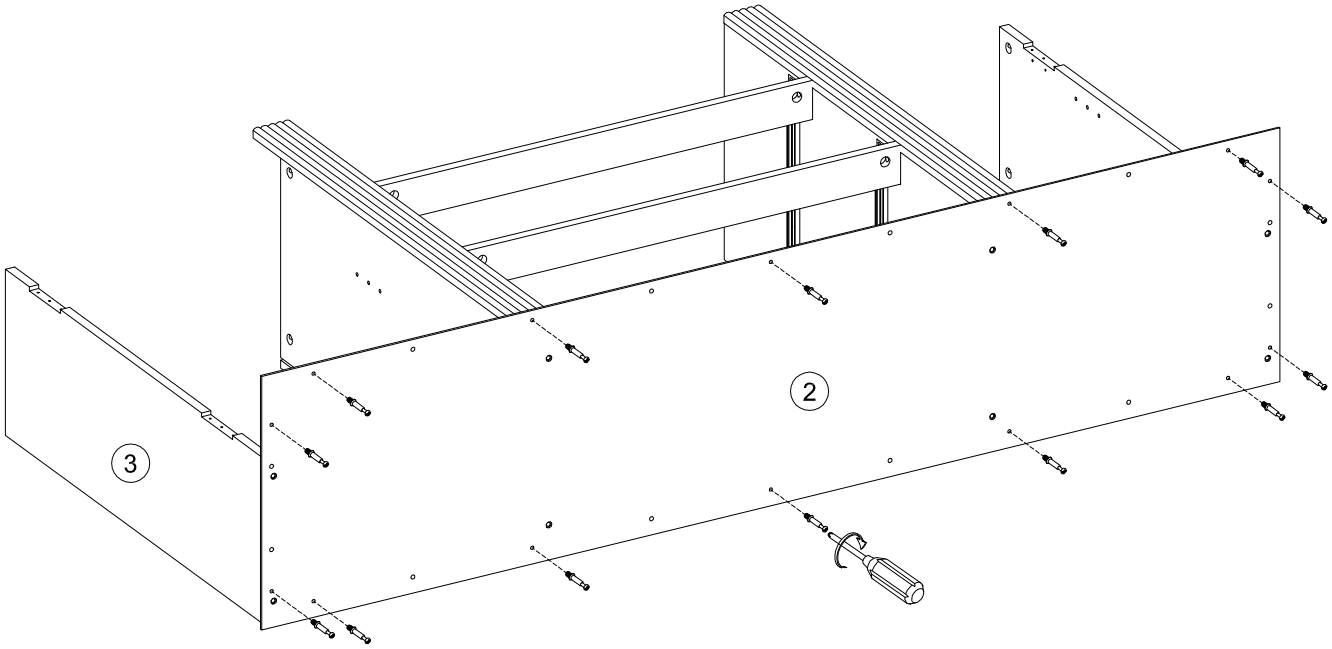


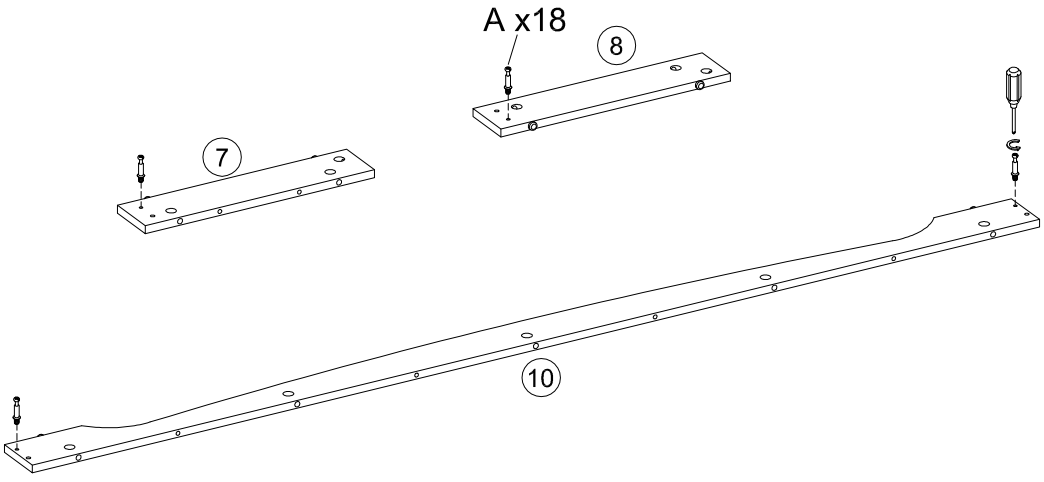


8

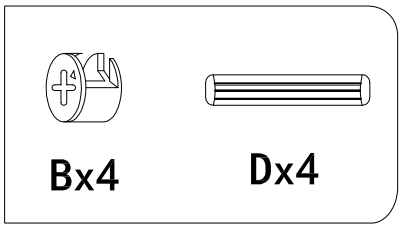


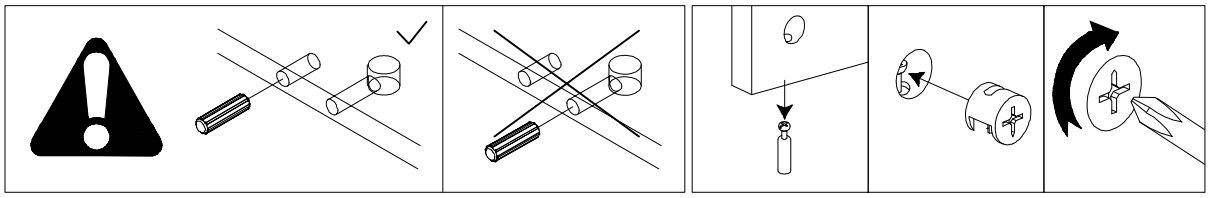


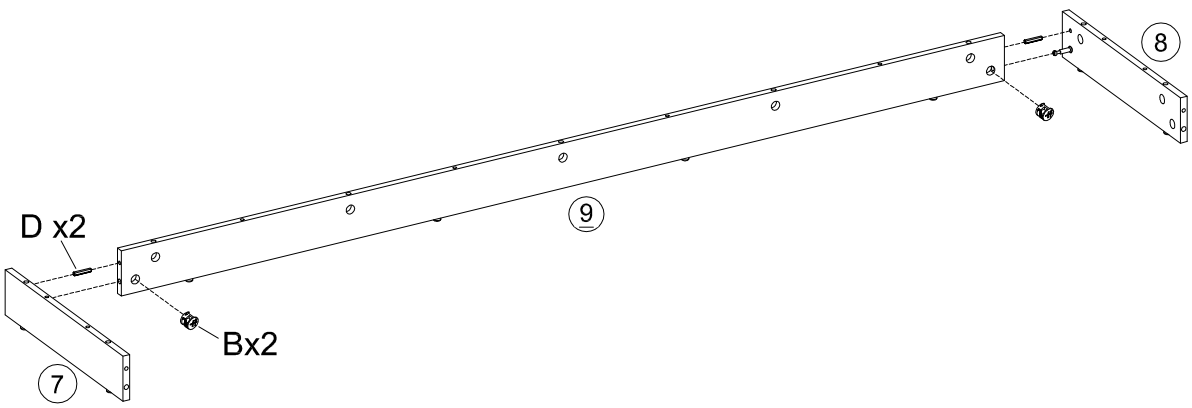

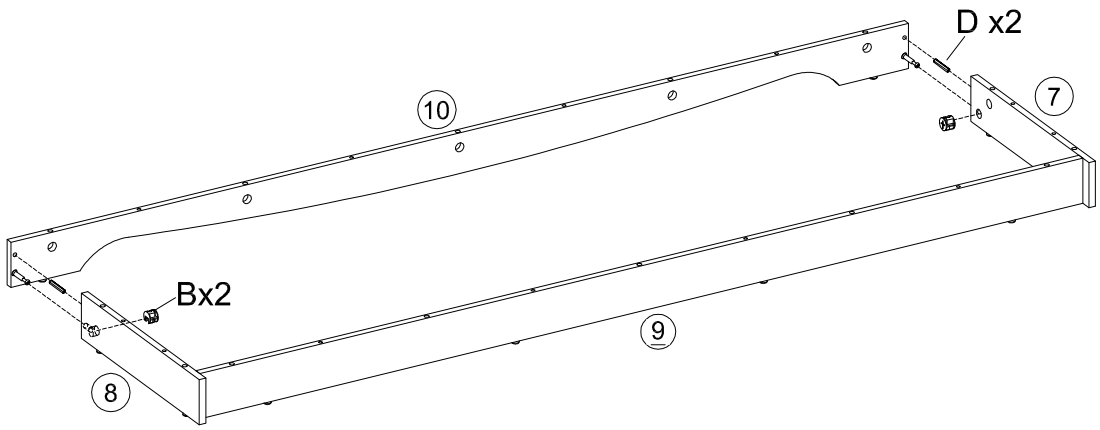


9




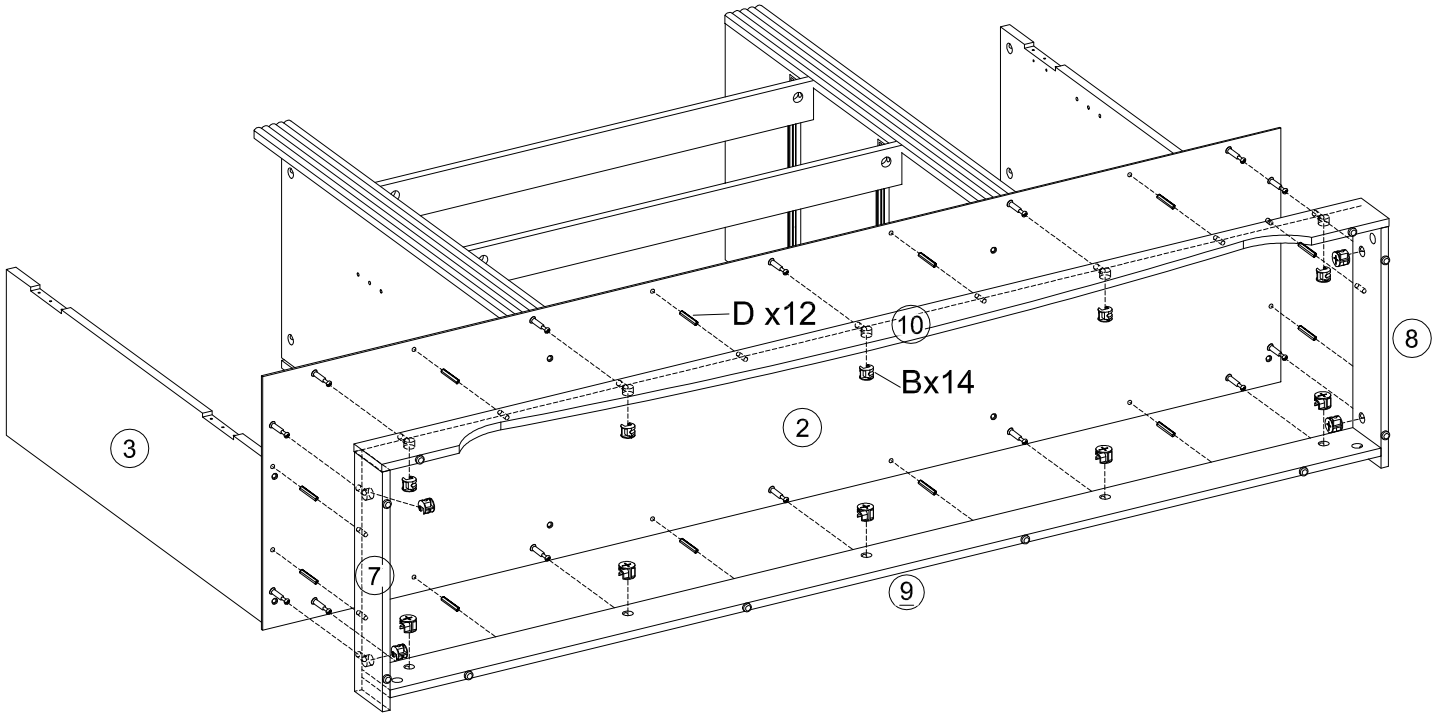

10



Ax8



Ix4


Jx2


Rx2



Sx2

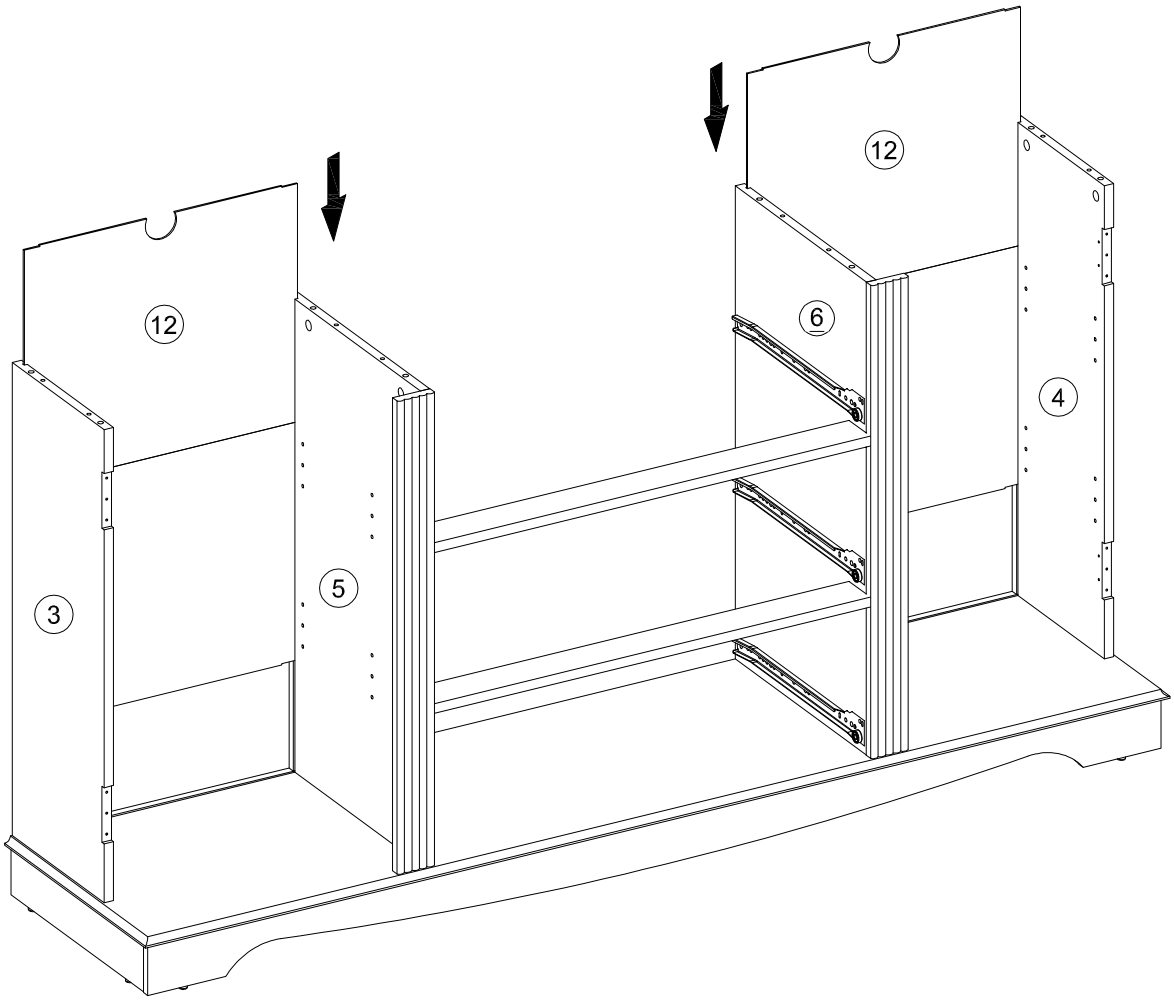


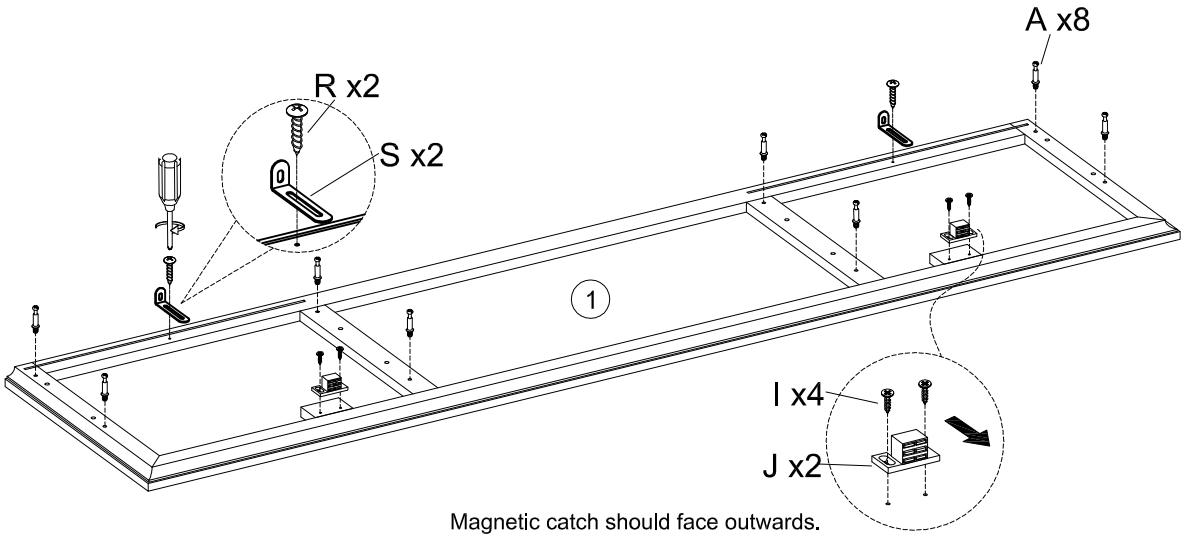


Magnetic catch should face outwards.


11

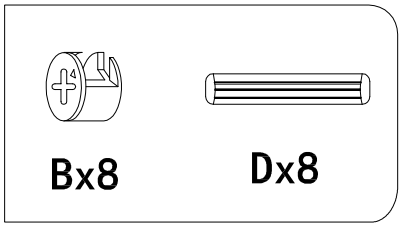

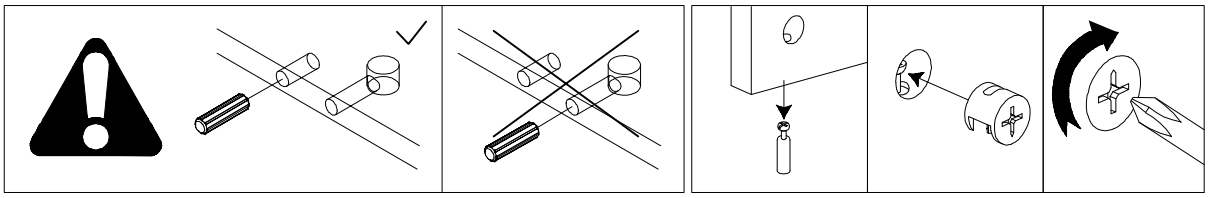


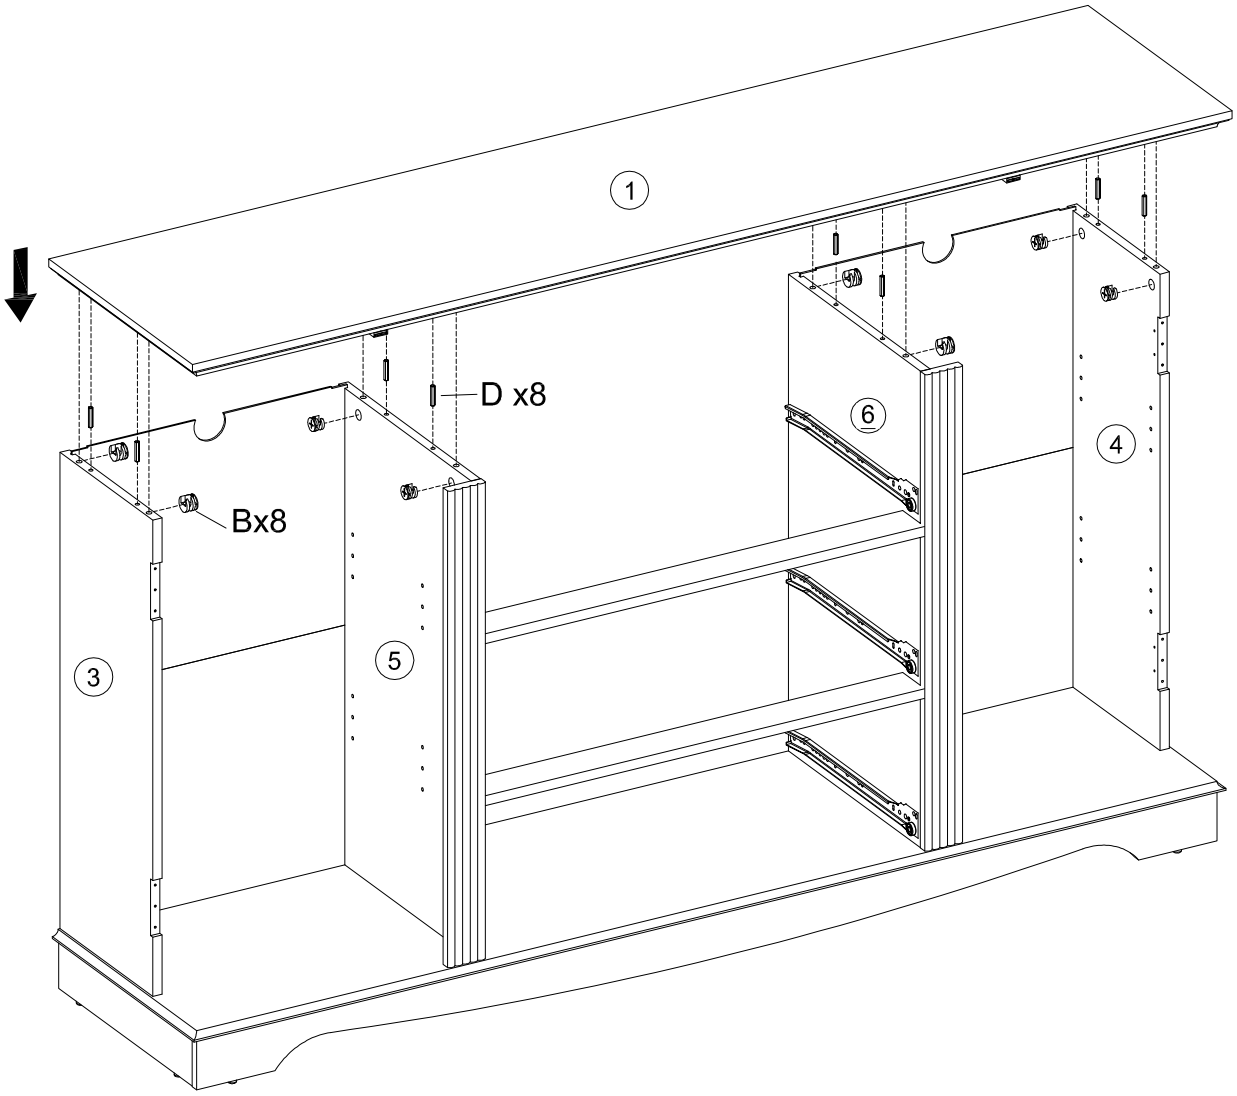


12



Px22

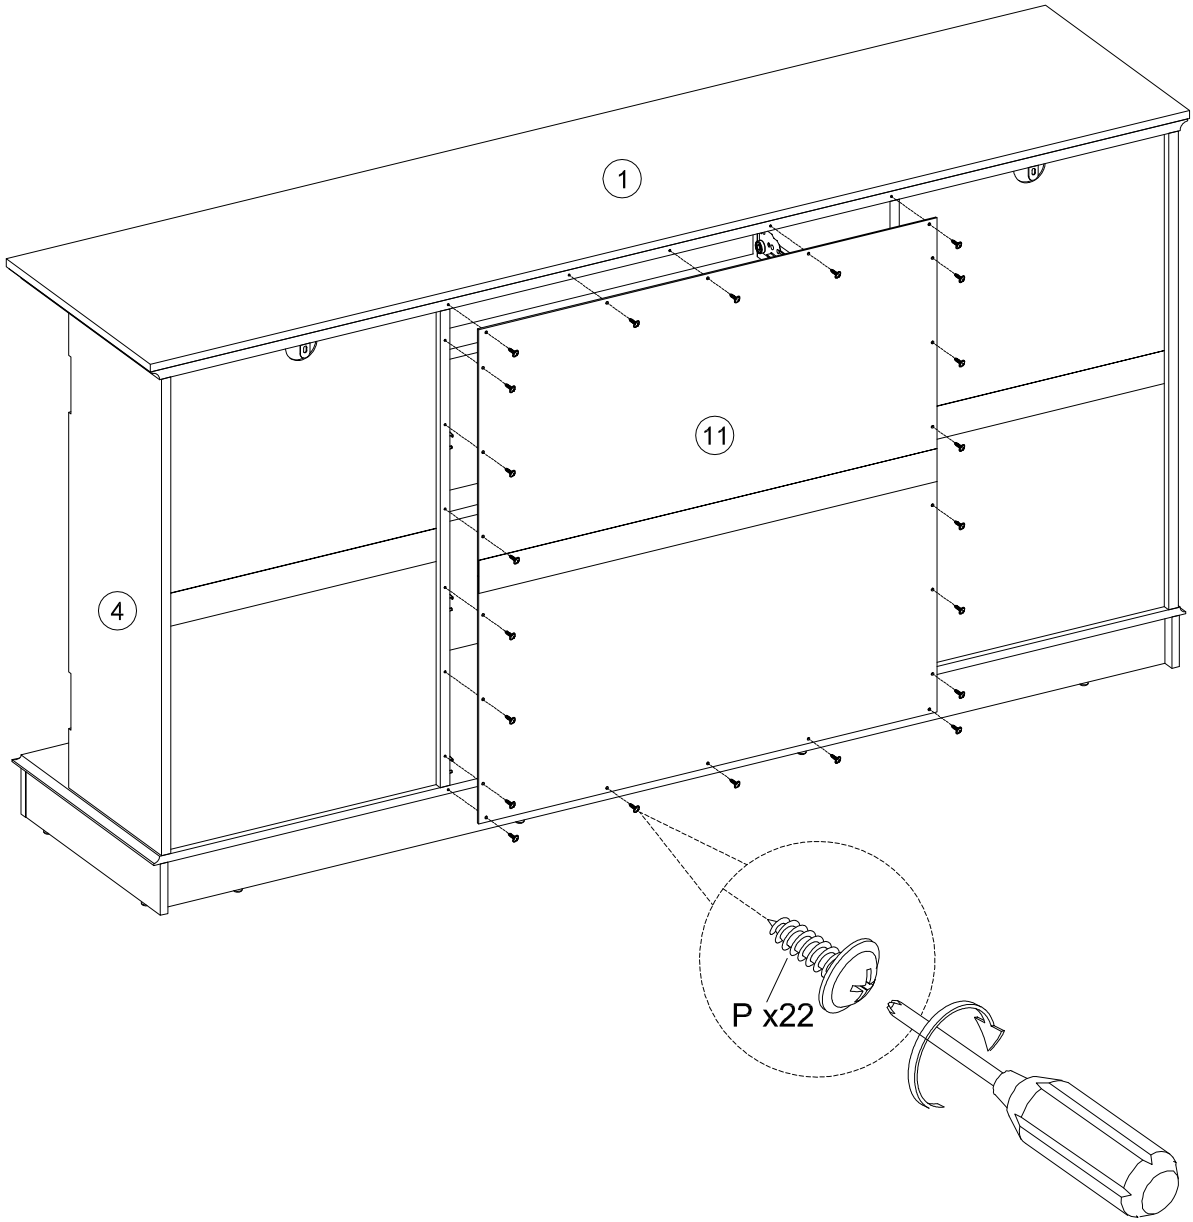


13




Ux16



Vx16

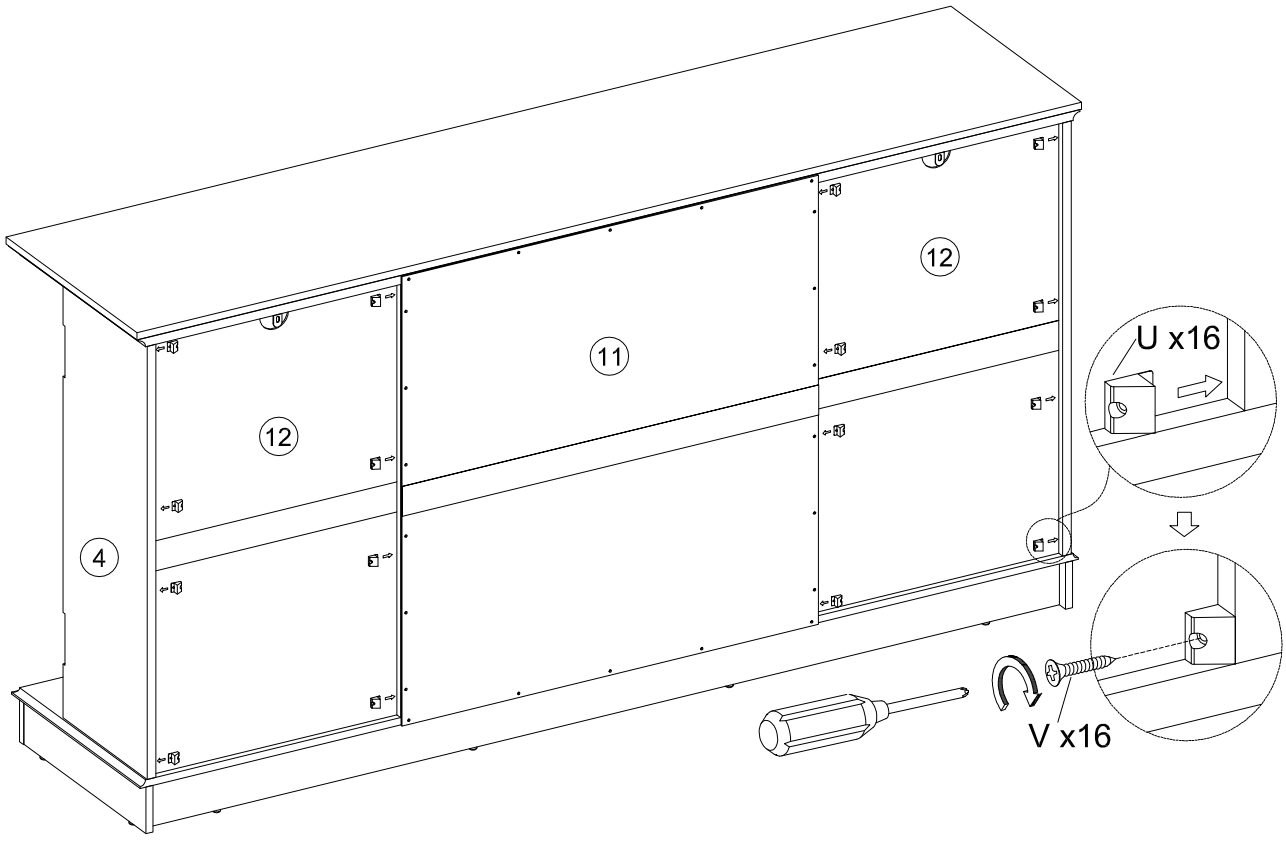



14

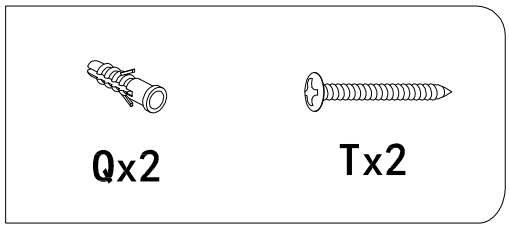

WARNING


Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

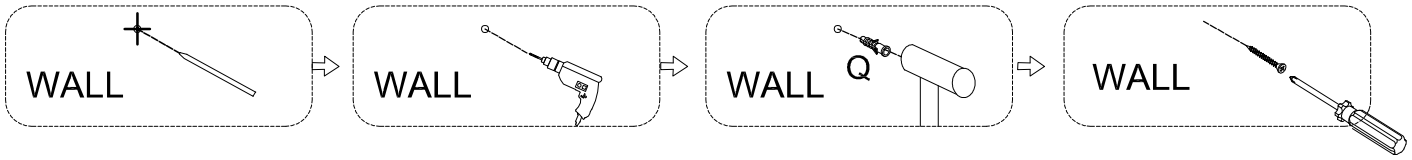

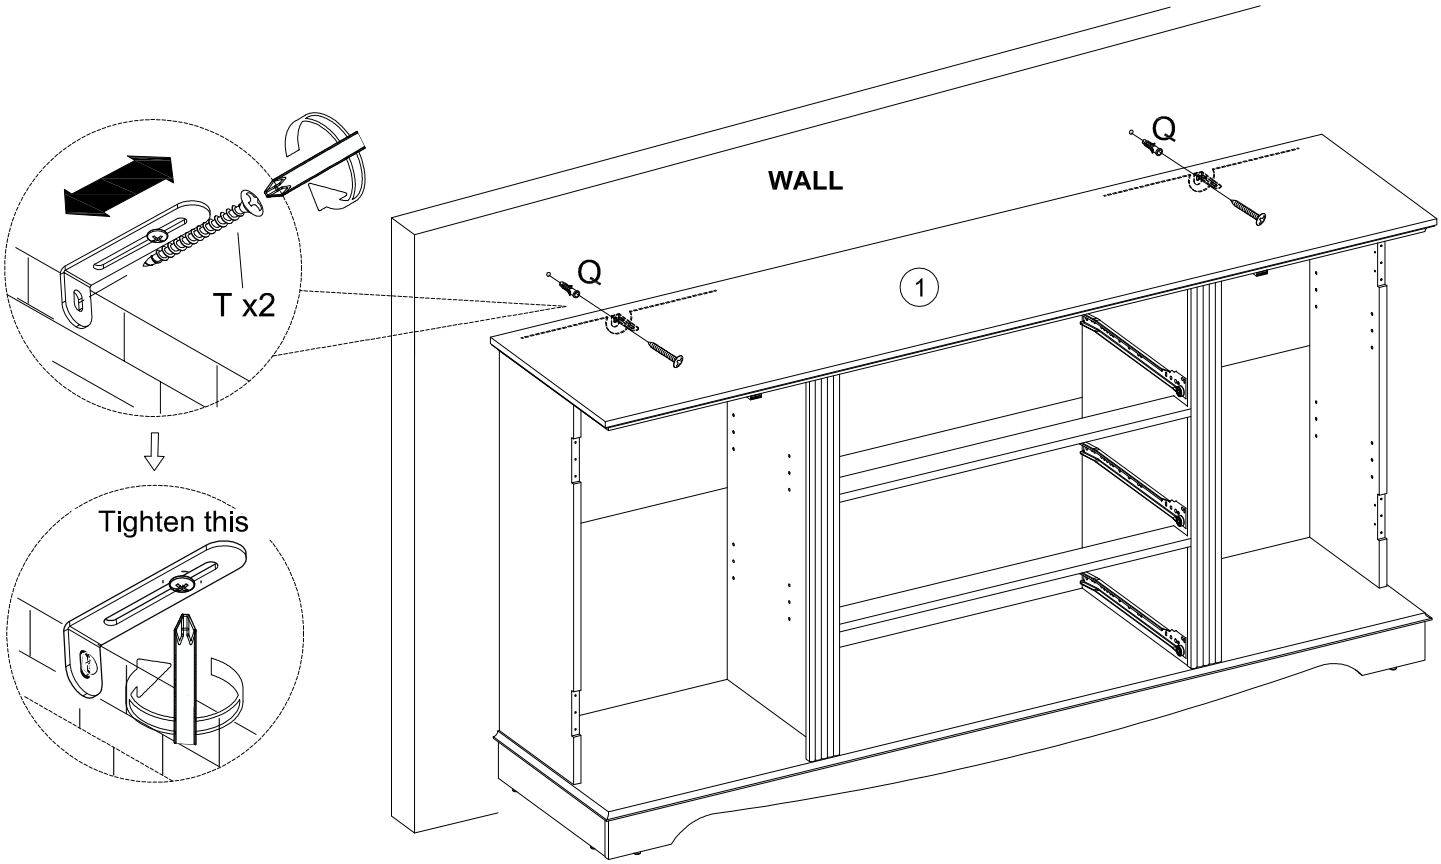


15

Mx18

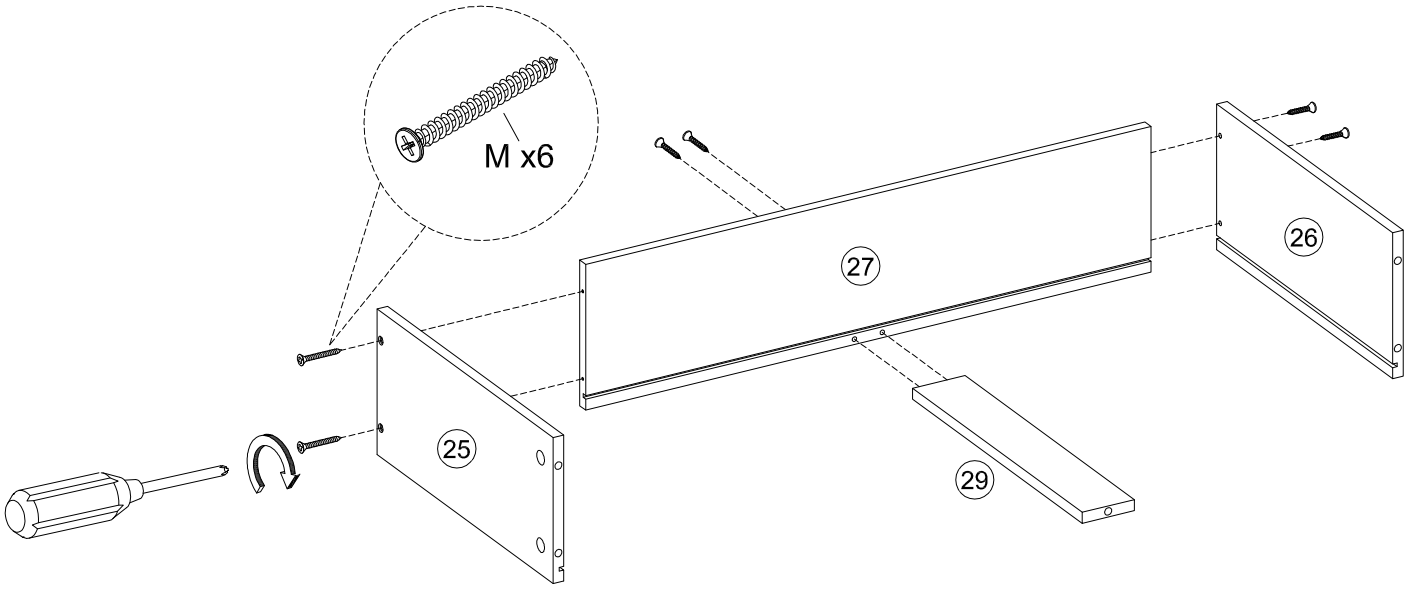


×3

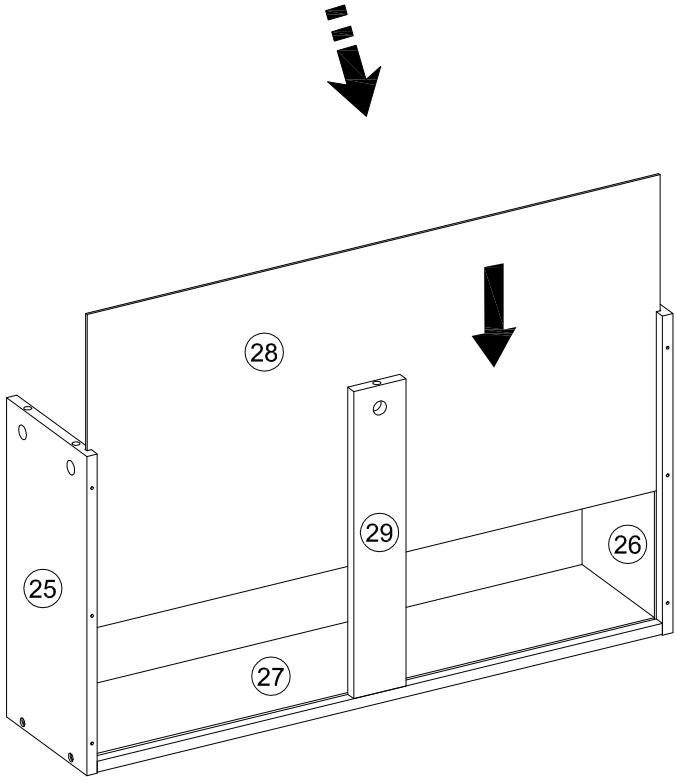



16



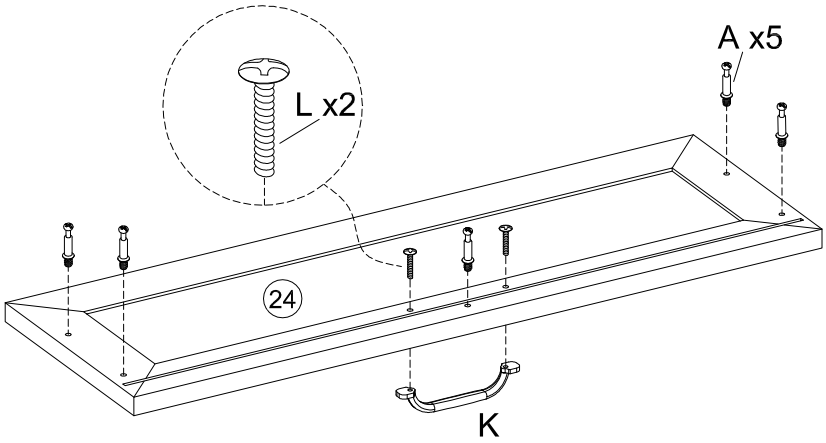



×3

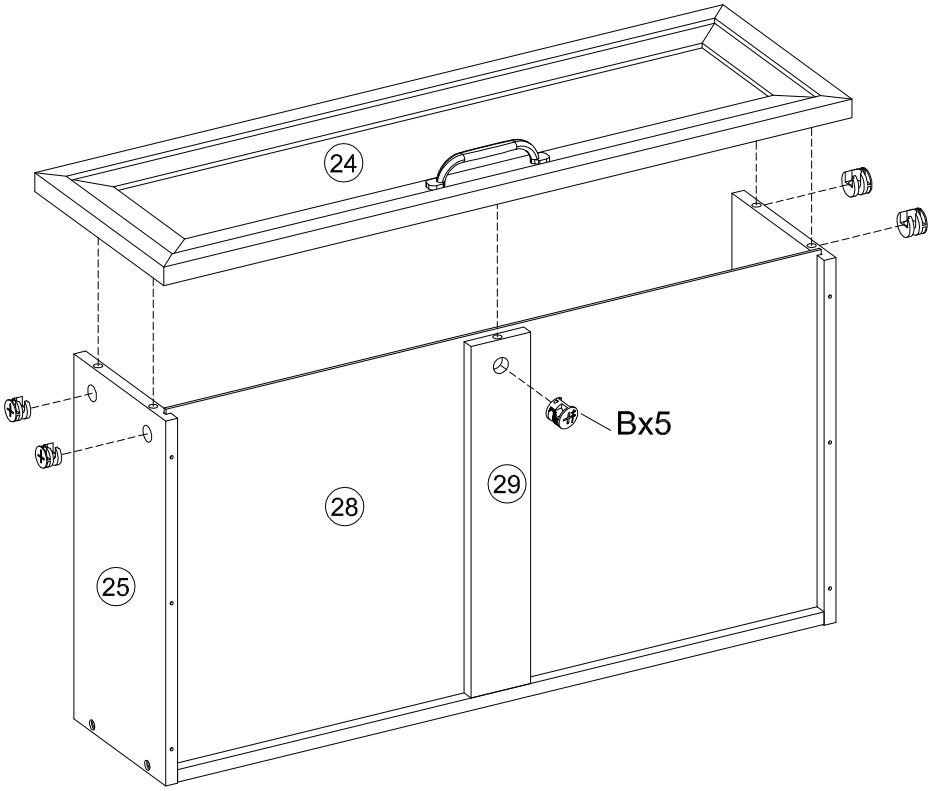

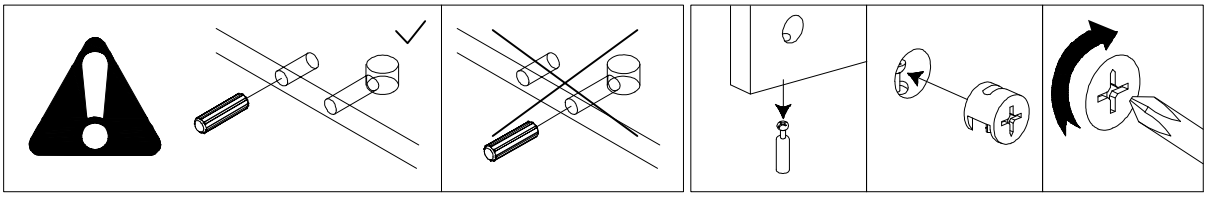



17


DLx3


DRx3


Wx18

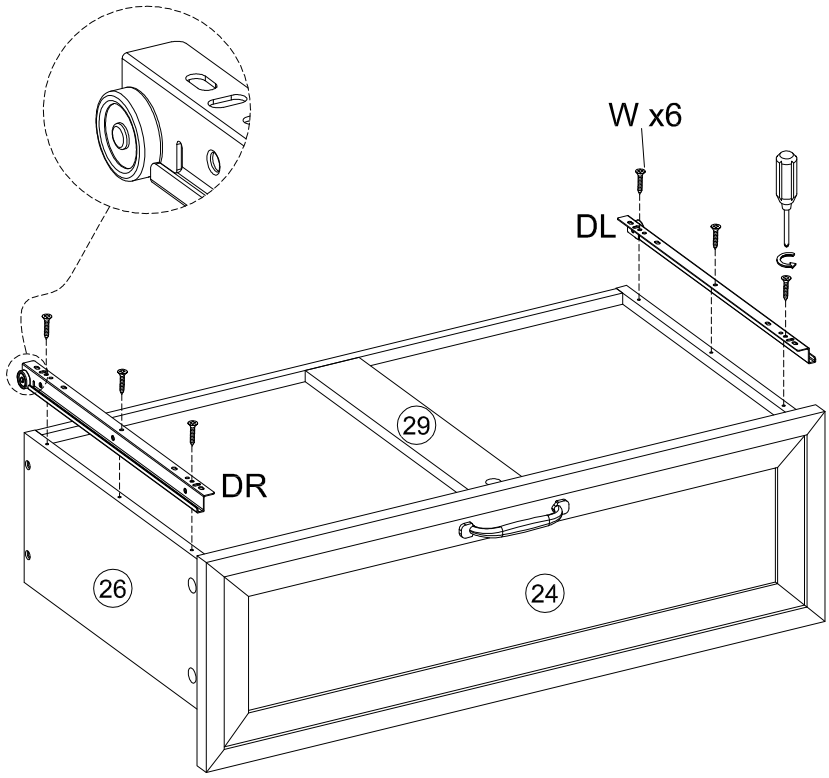


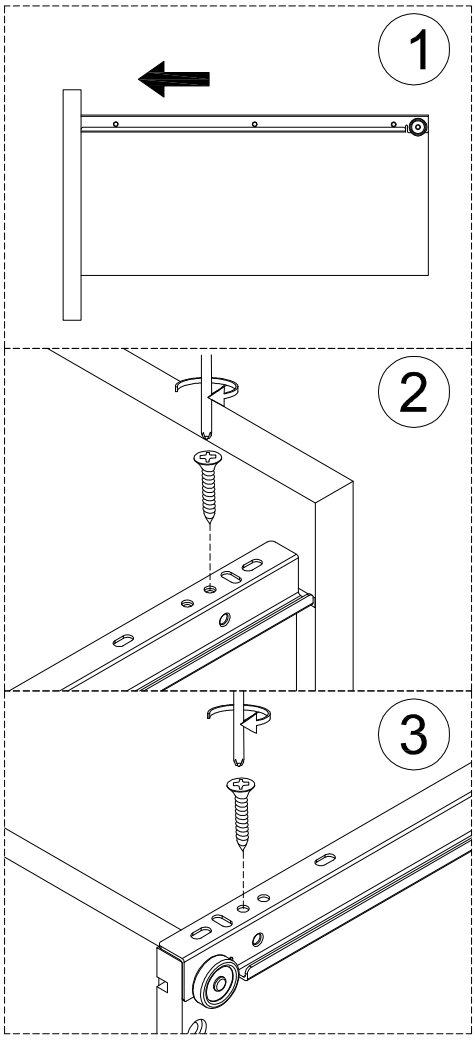



Note the DL or DR stamped label on the track !


×3


18

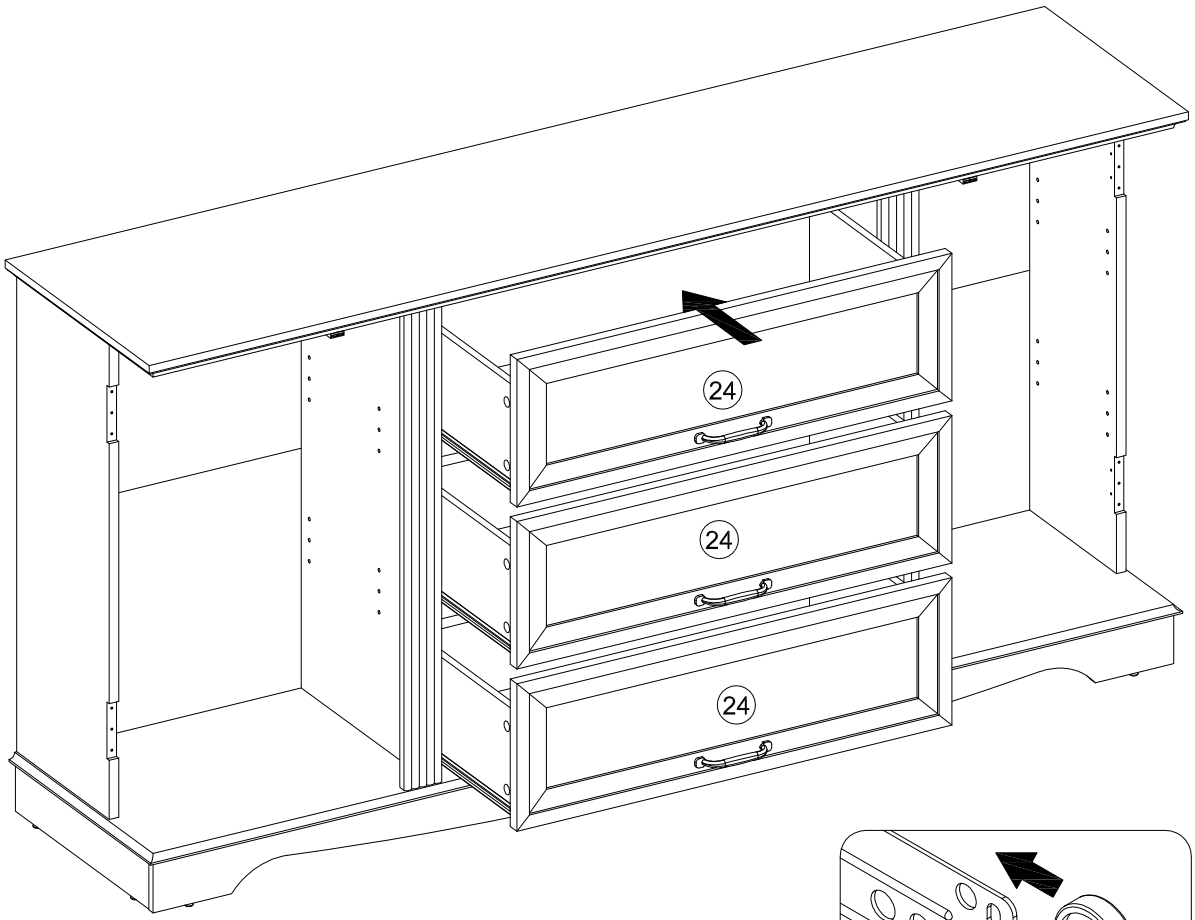

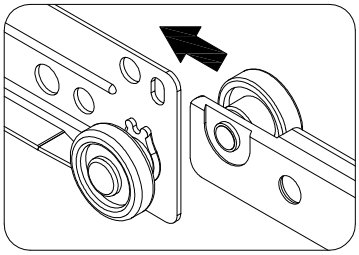


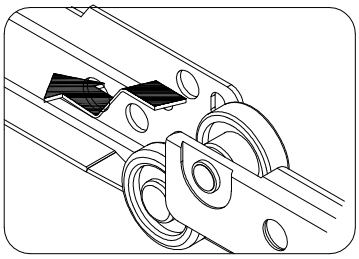

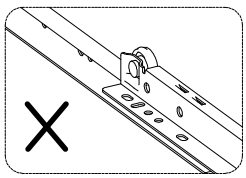


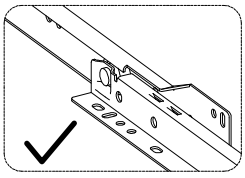


19





Ax12

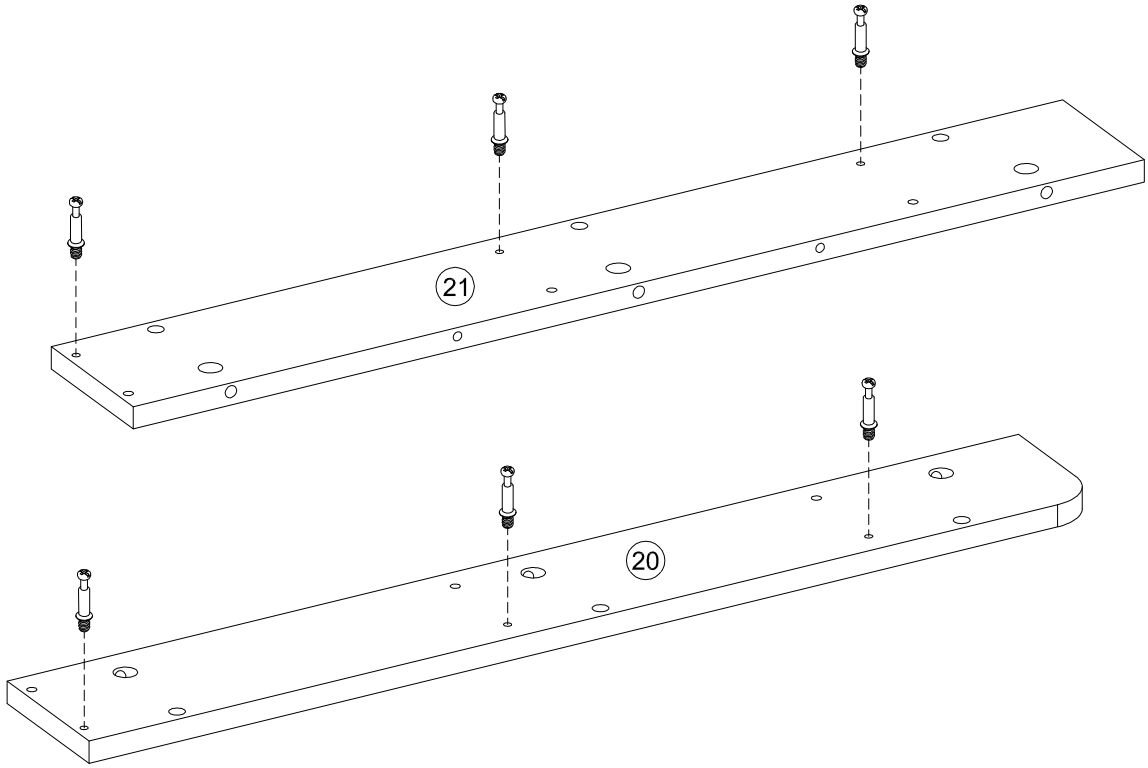


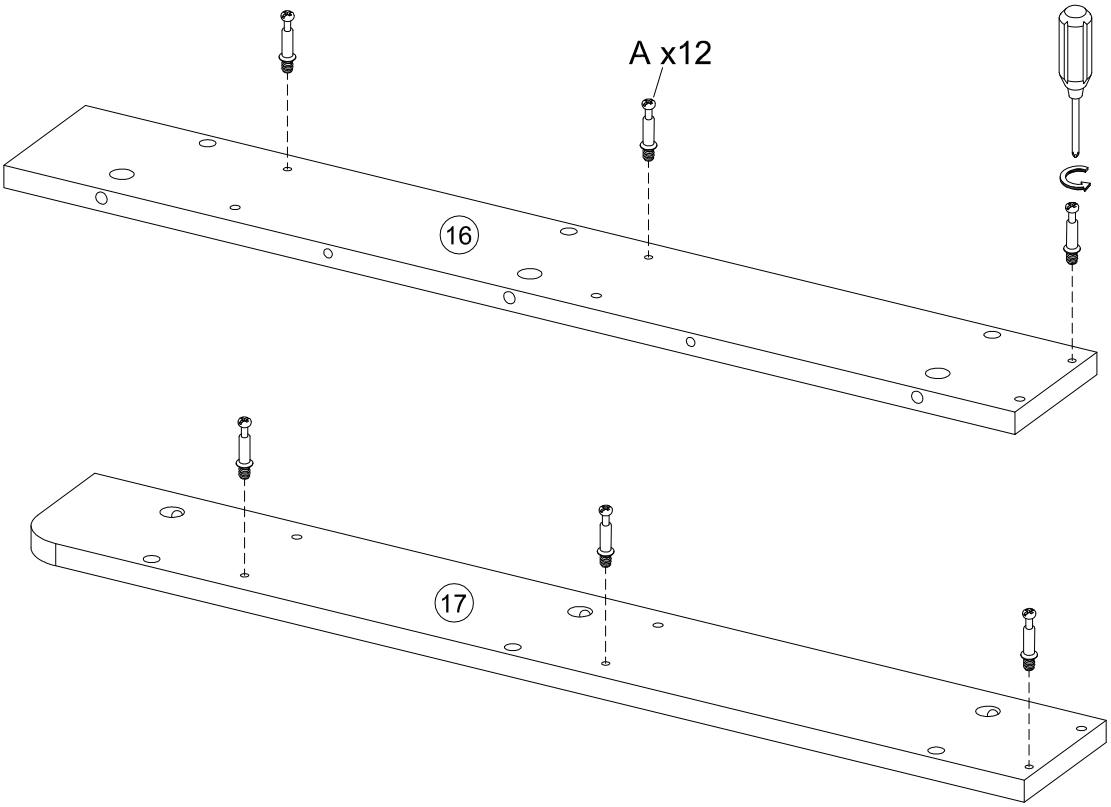


20

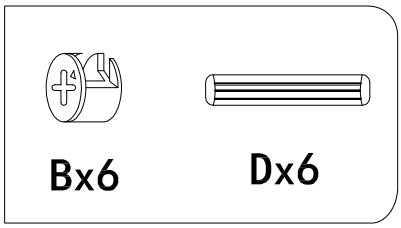

Bx6
Dx6

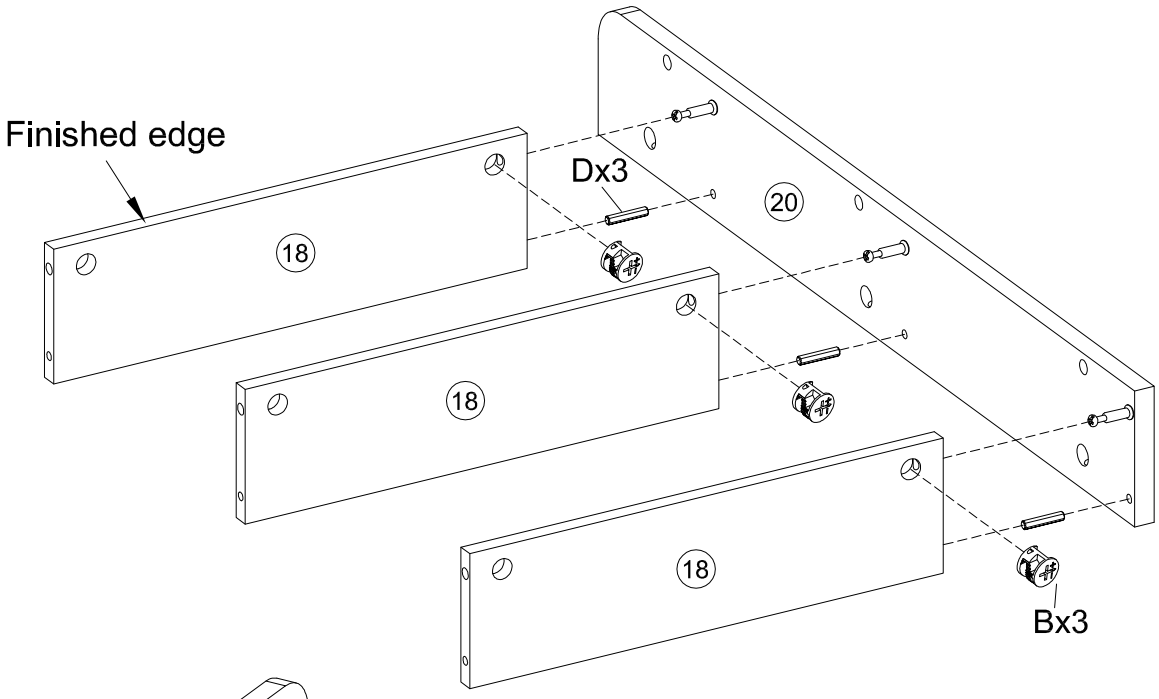

Finished edge
Dx3
20
18
18
18
Bx3

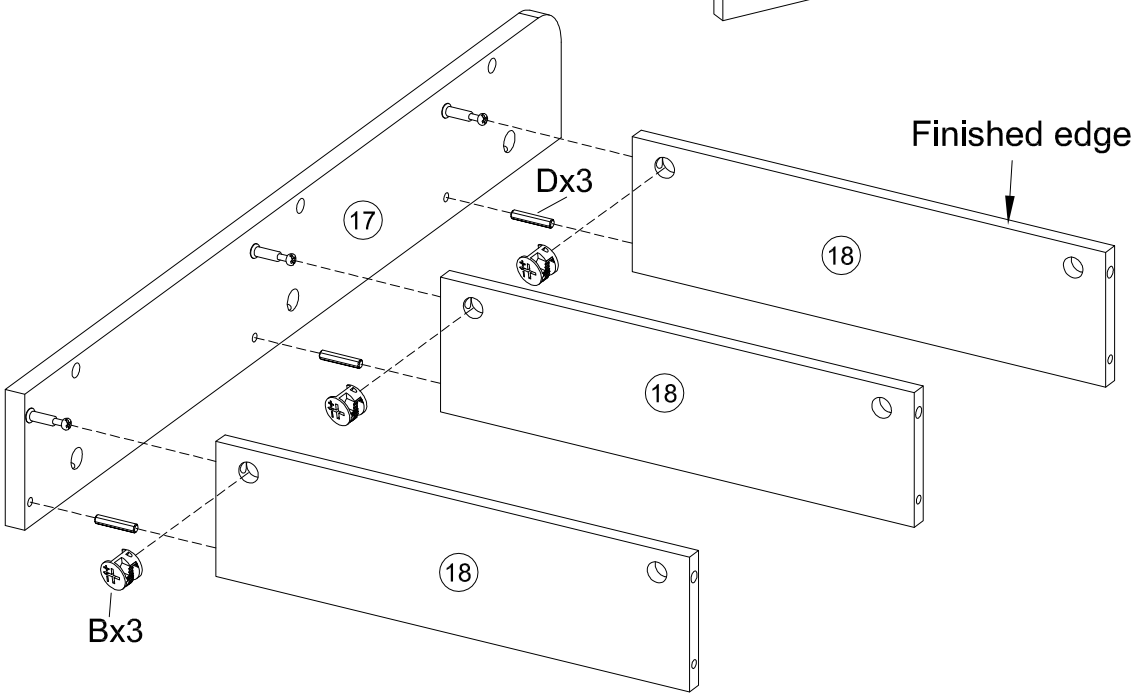
Finished edge
Dx3
17
18
18
18
Bx3

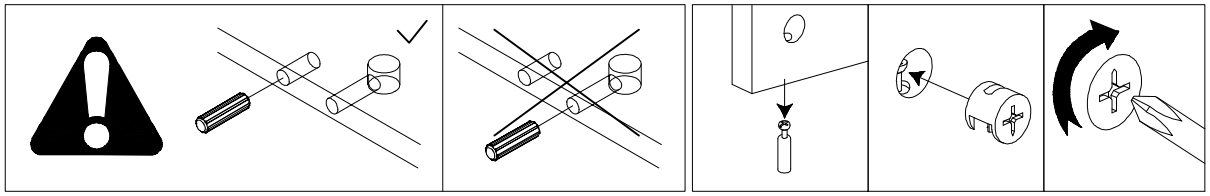



21

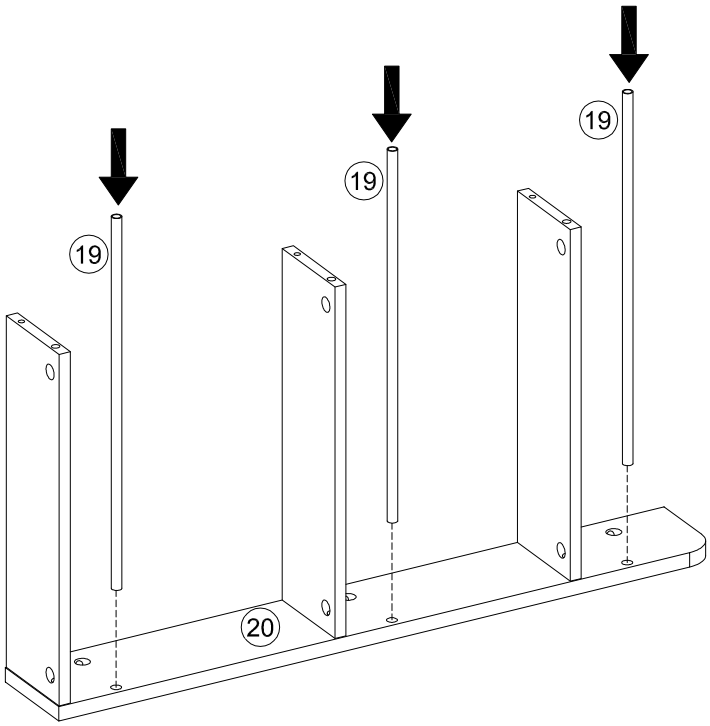


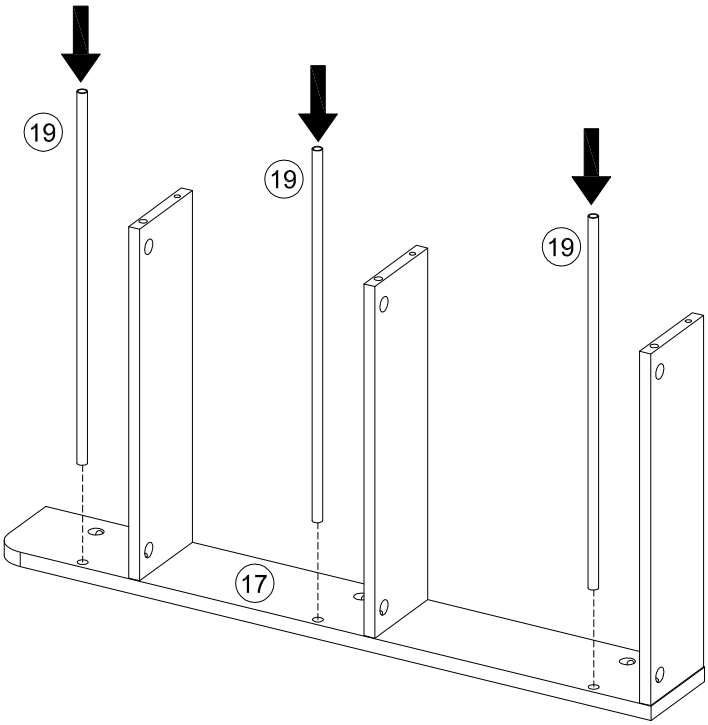


22

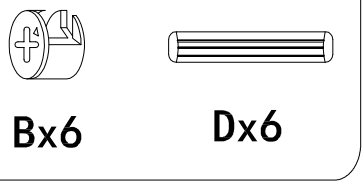

Bx6
Dx6

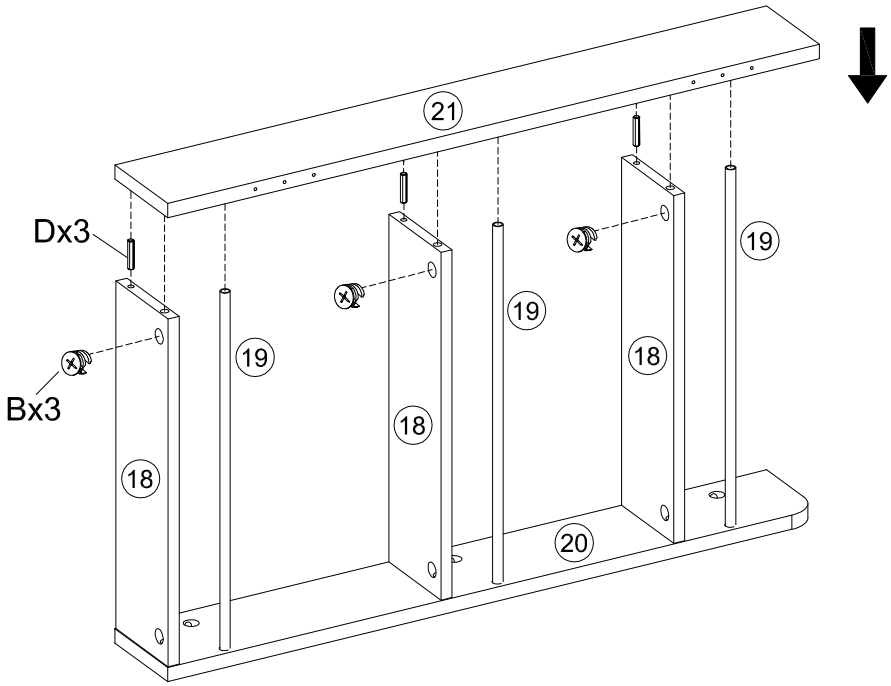

21
Dx3
Bx3
19
19
19
18
18
18
20

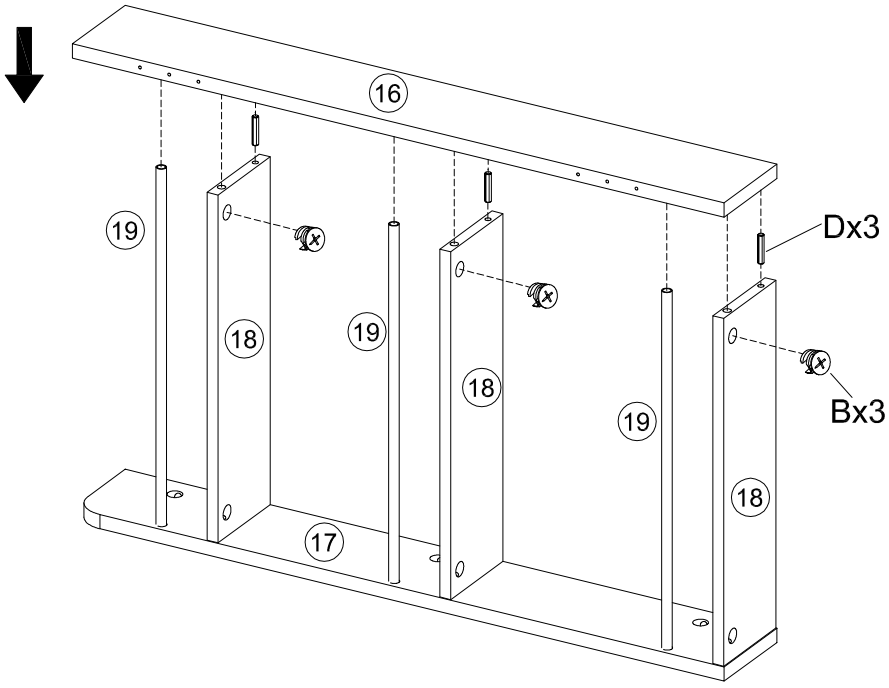
16
19
18
19
18
19
18
17
Dx3
Bx3

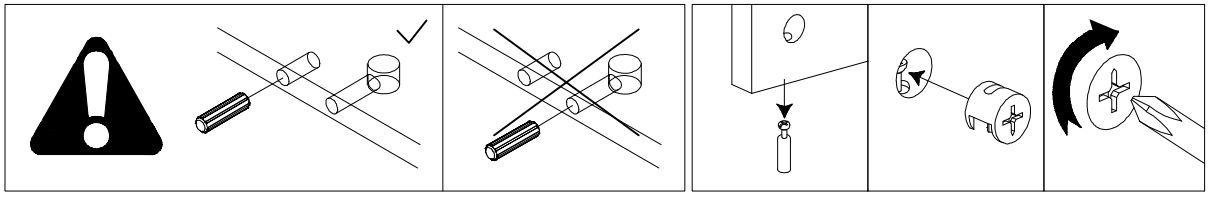



23



Ax12



Hx2


Wx2

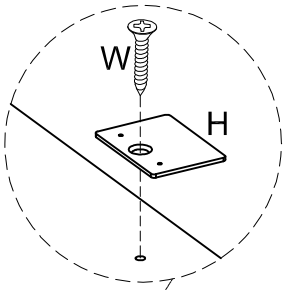


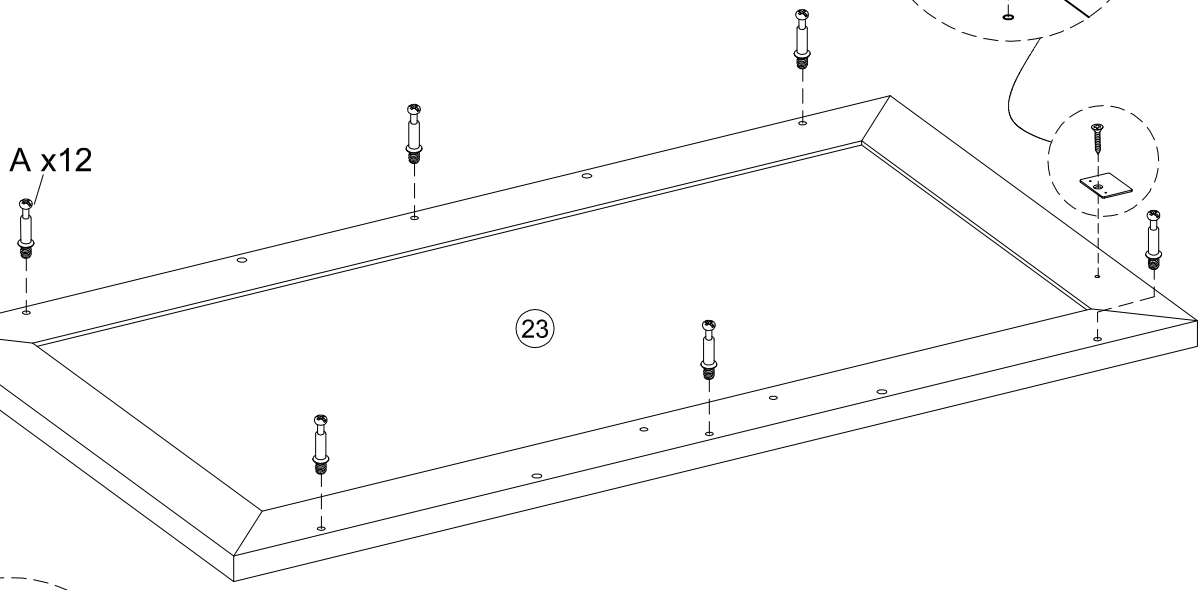


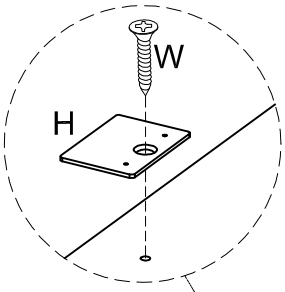


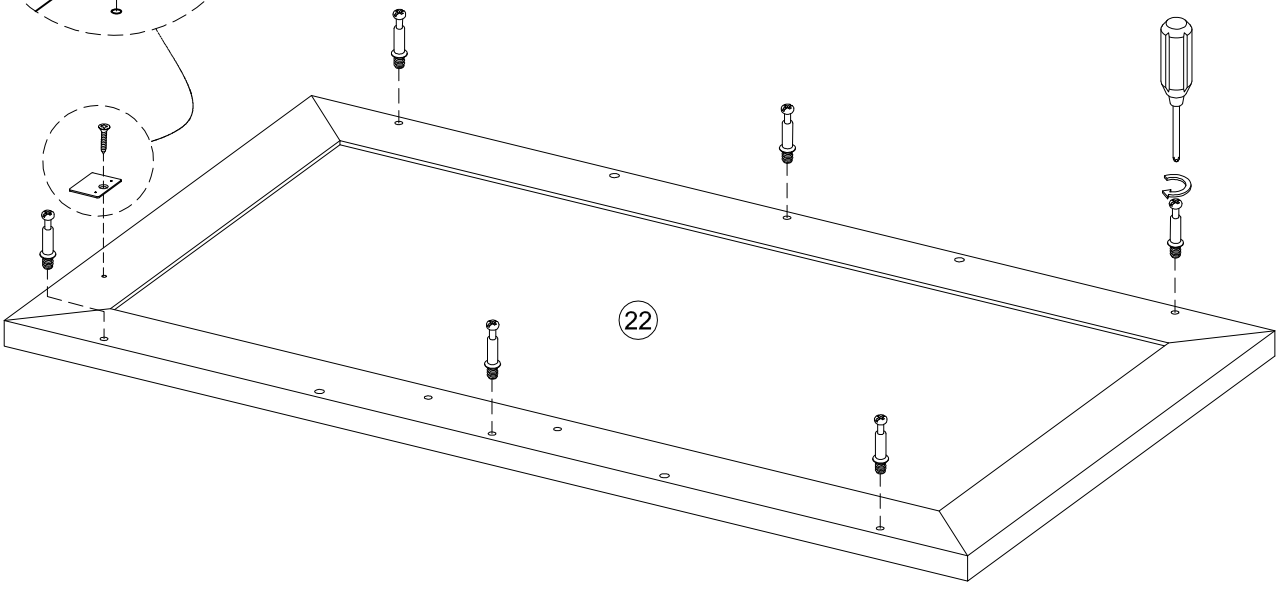


24

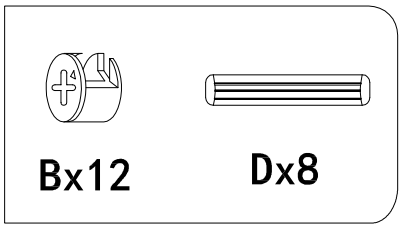


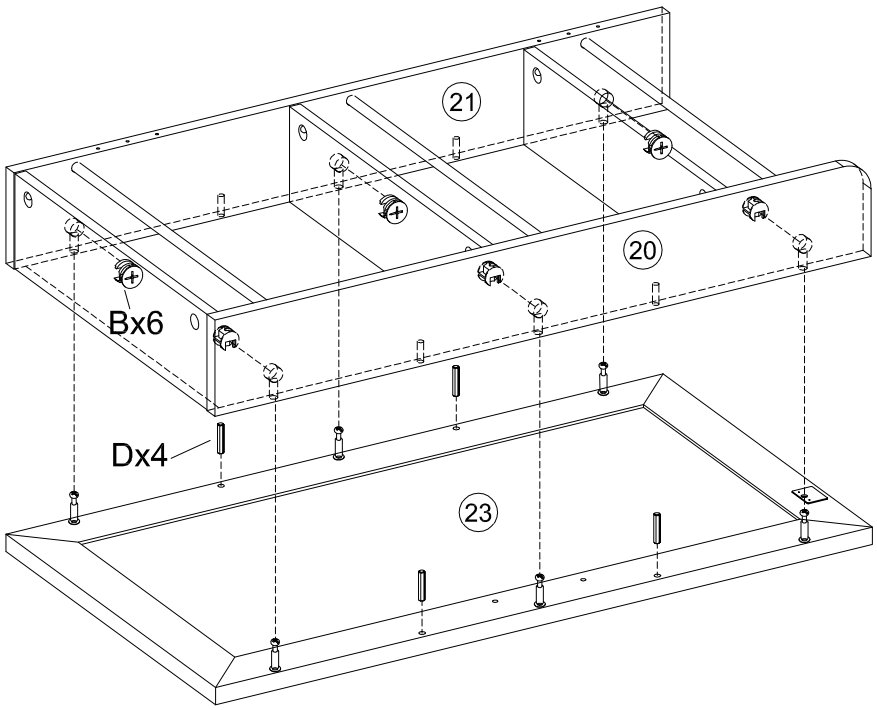

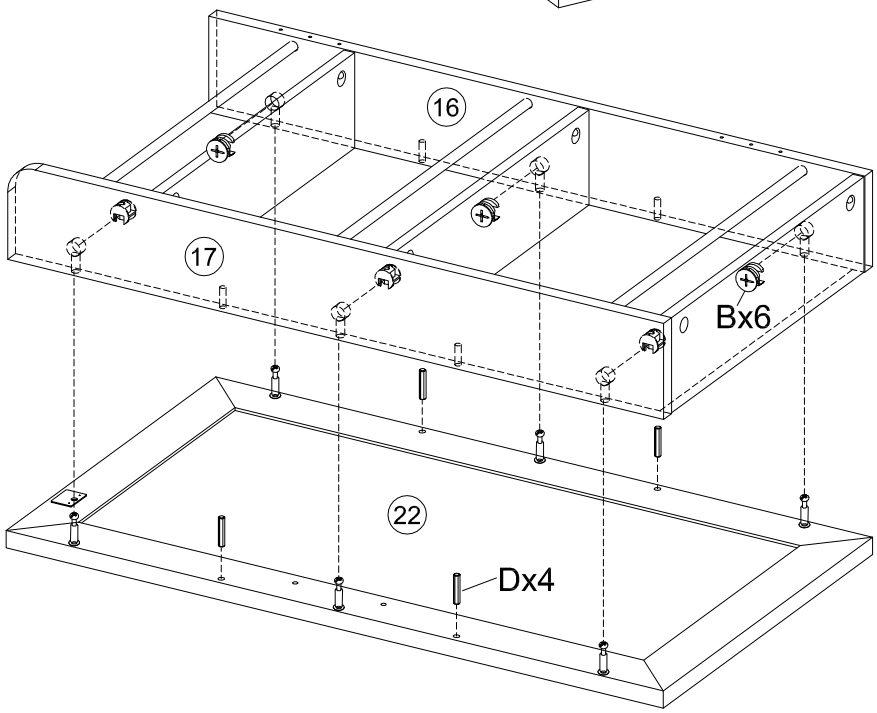

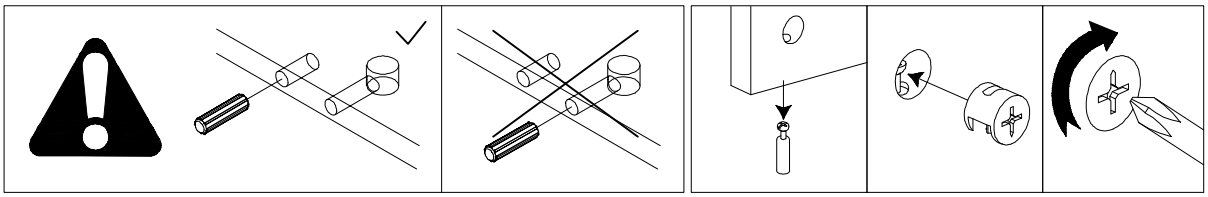


25




Ex4



Fx12

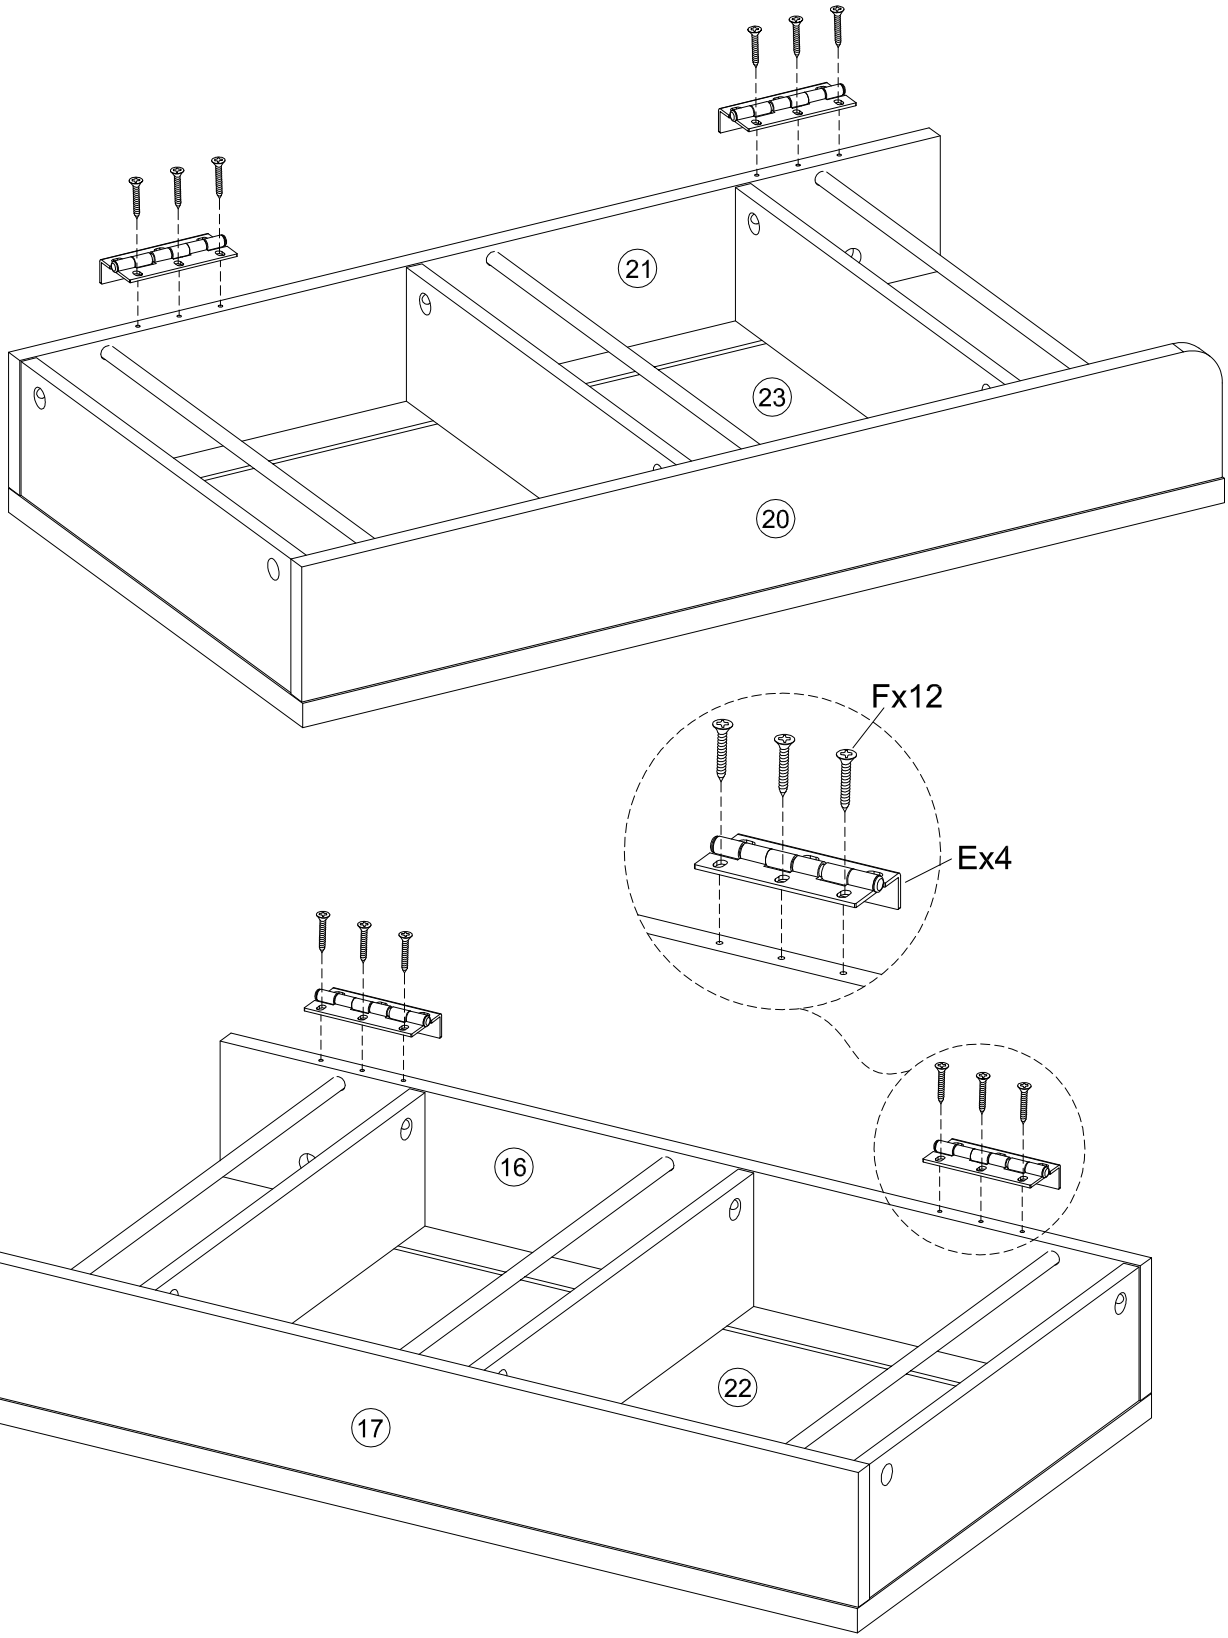


26




Kx2



Lx4

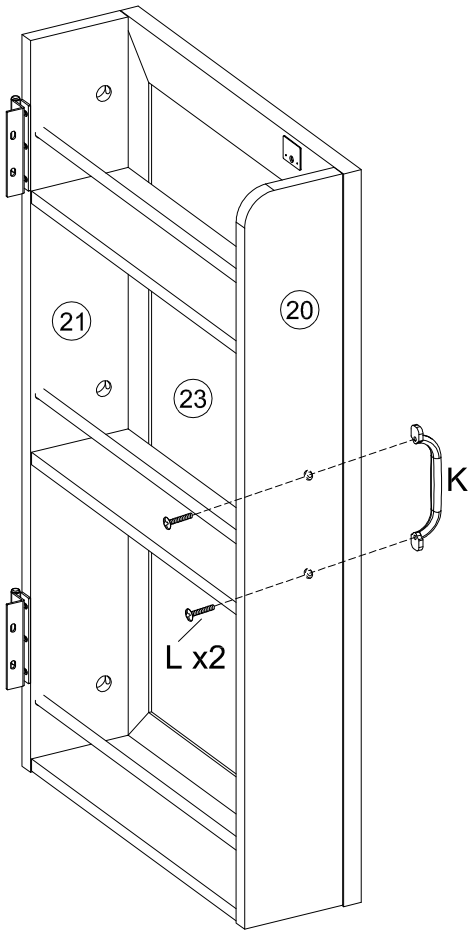

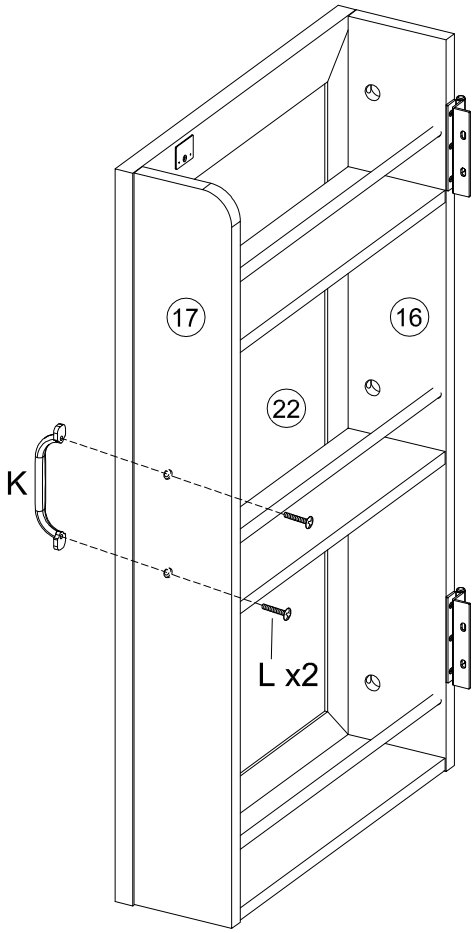


27





Gx8




Fx12

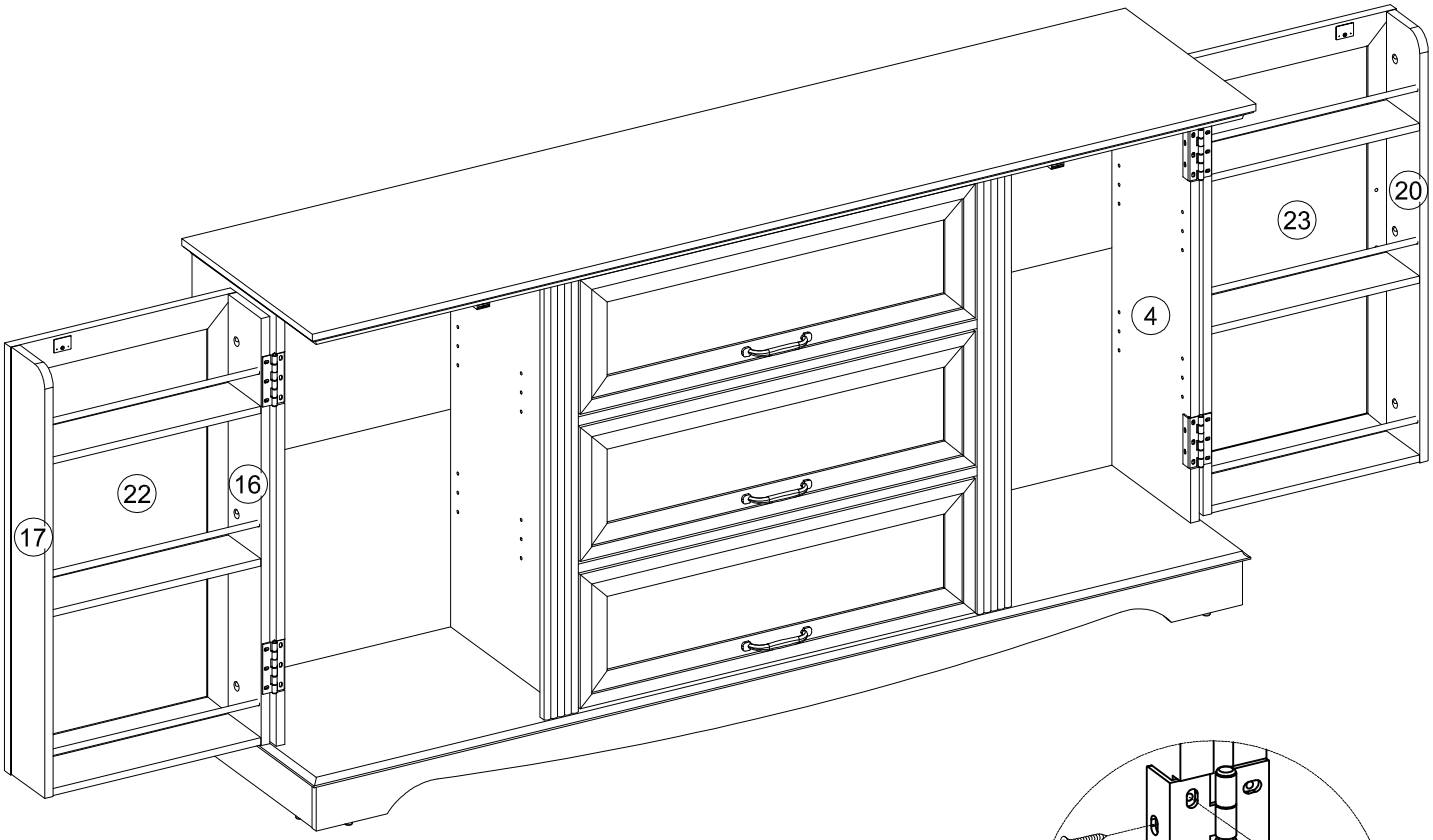

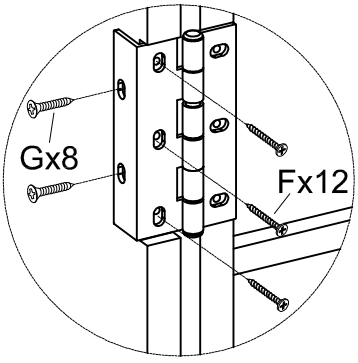

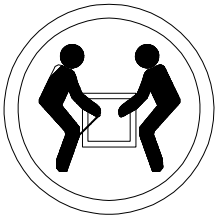


CAUTION: Heavy! You may need assistance with this step.

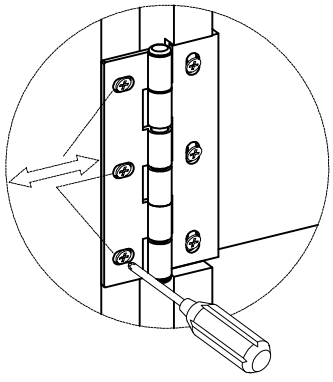

Note：The Side gap can be adjusted as shown


28


Nx16

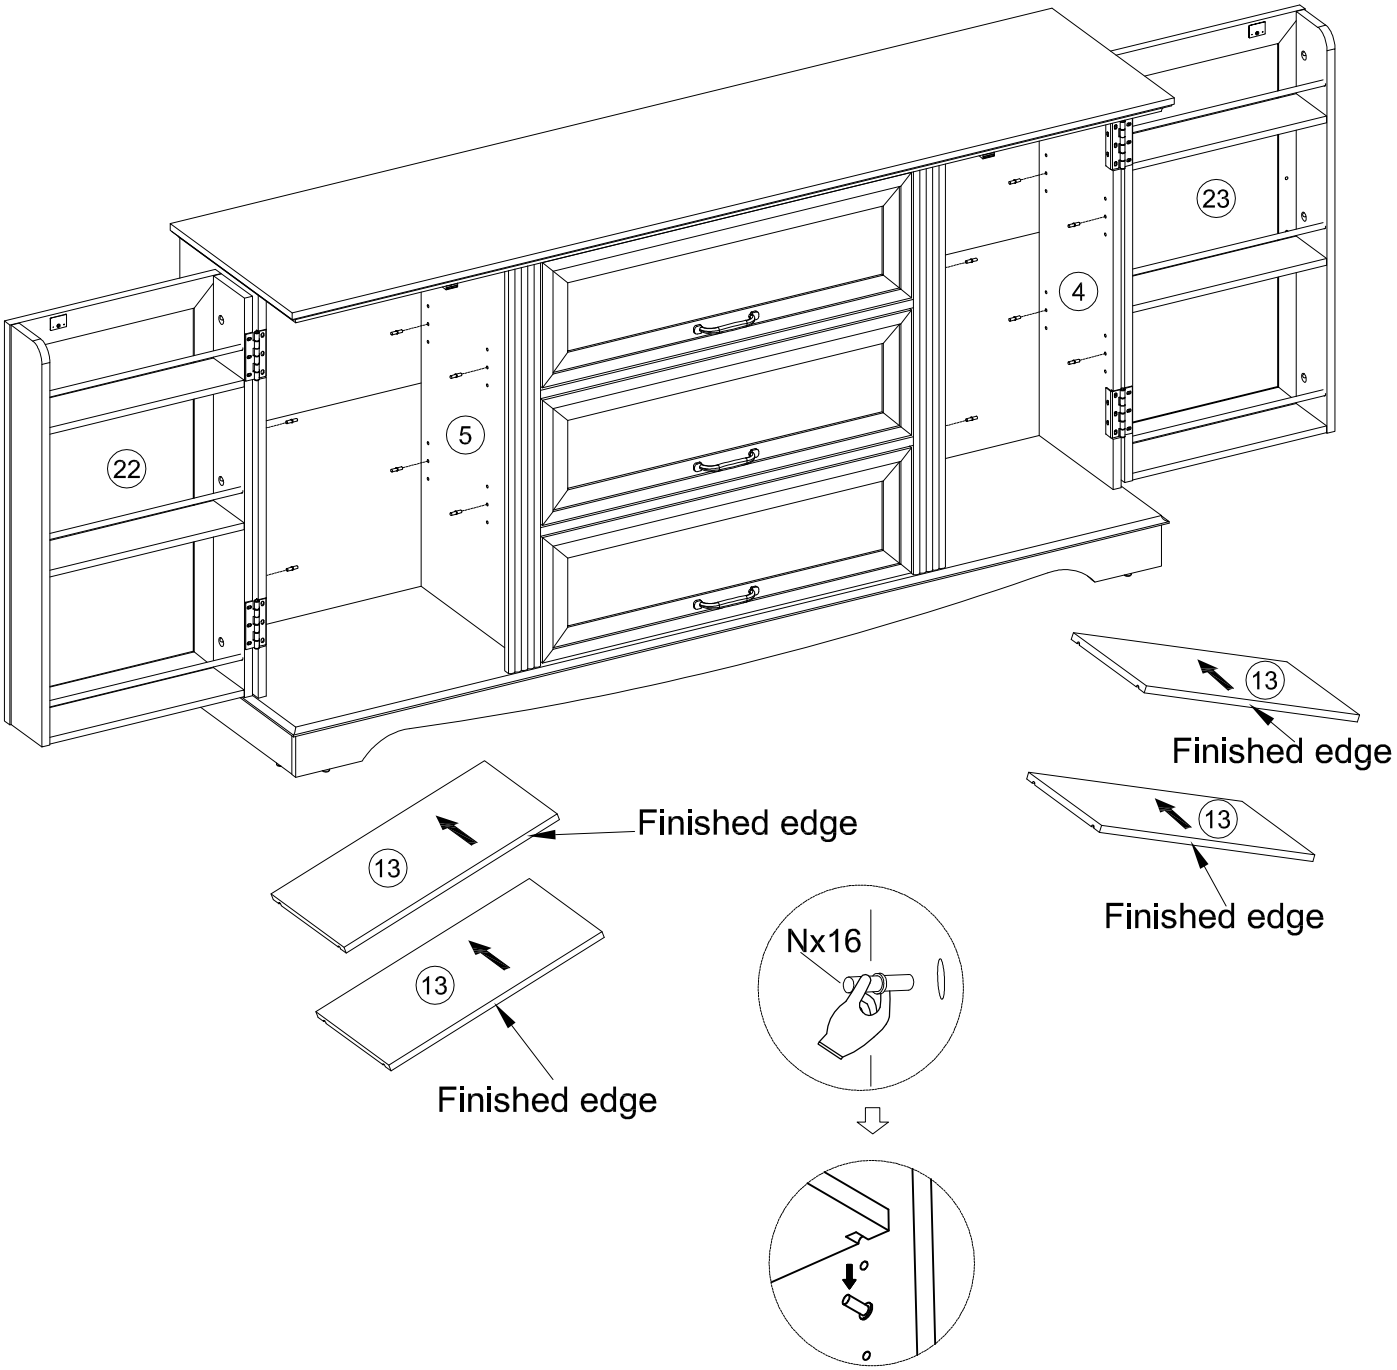
23
4
5
22
13
Finished edge
13
Finished edge
13
Finished edge
13
Finished edge
Nx16

29

Cx75

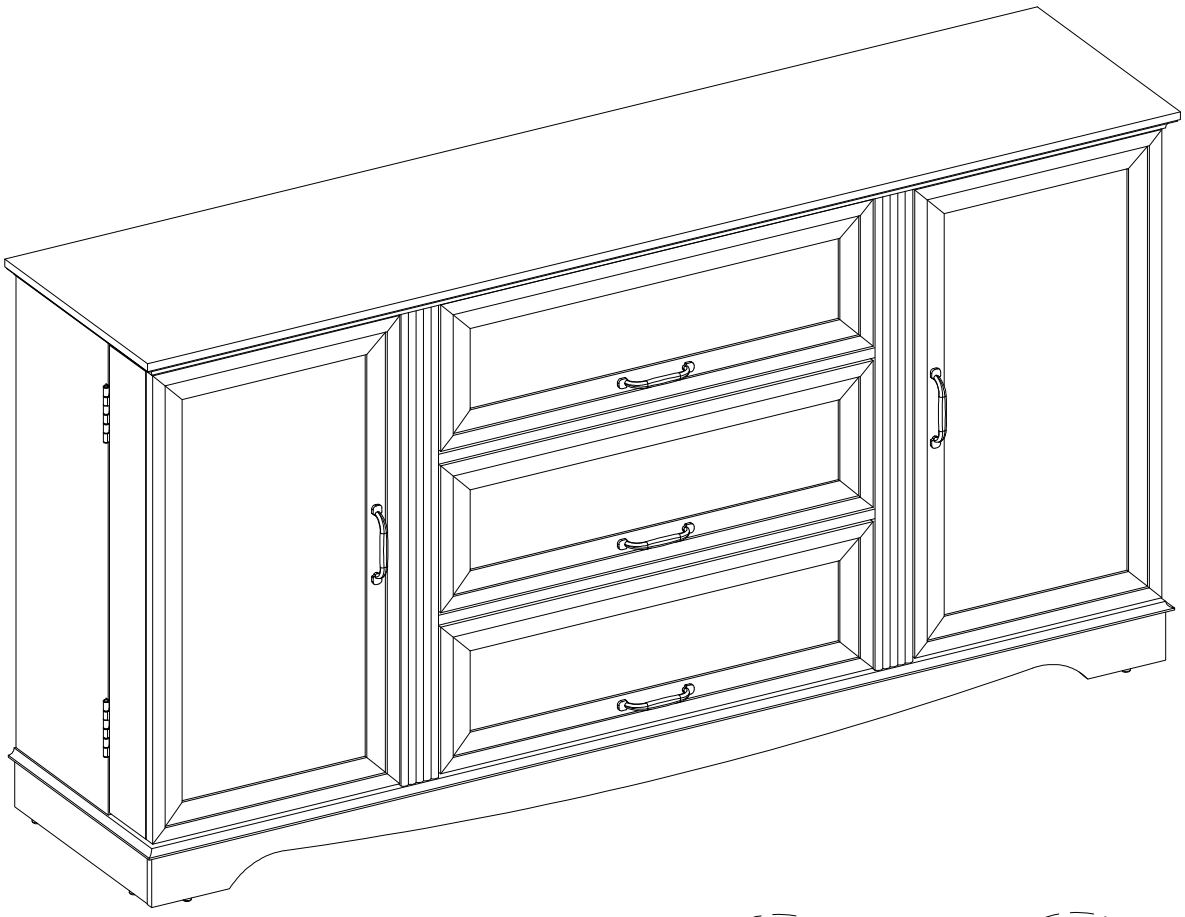

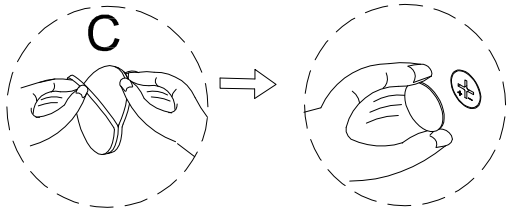

· Stick stickers (C) on cam locks (B).

Installation Completed