80210 CH ASSEMBLY INSTRUCTION

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware. Compare with the parts list to be sure all parts are present.

IMPORTANT : PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

"DO NOT OVERTIGHT ANY HARDWARE"

WARNING : SMALL PARTS AND HARDWARE NOT FOR CHILDREN UNDER 3 YEARS. ADULT ASSEMBLY REQUIRED.

PLEASE TAKE NOTE


****This product requires assembly by two adults.**
****Some assembly steps require additional support from a second person.**

TABLE OF CONTENTS


HARDWARES LIST	PAGE 2
PARTS LIST	PAGE 3 - 4
PARTS' LOCATION	PAGE 5
ASSEMBLY STEPS	PAGE 6 - 18
ASSEMBLY COMPLETED	PAGE 19
ANTI-TIPPING INSTALLMENT INSTRUCTIONS	PAGE 20
PAY ATTENTION ITEMS	PAGE 21

ASSEMBLY TOOLS REQUIRED


1. Screwdriver (not provide)



2. Hammer (not provide)







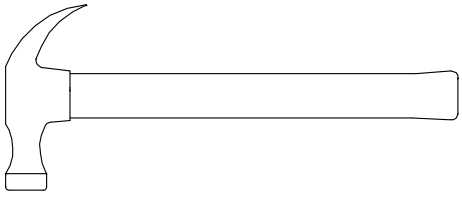


Skip the power trip this time.

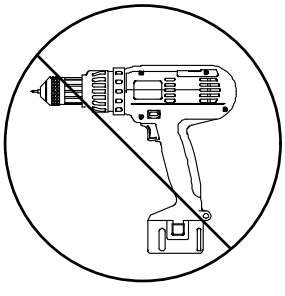










80210 CH ASSEMBLY INSTRUCTION

HARDWARES LIST

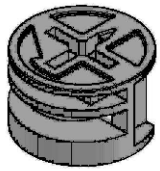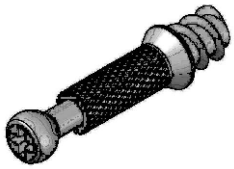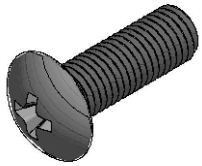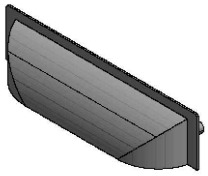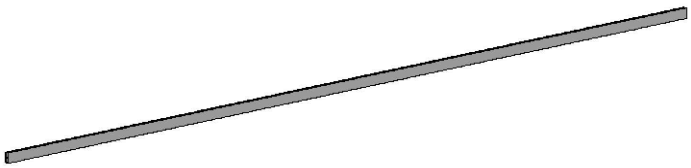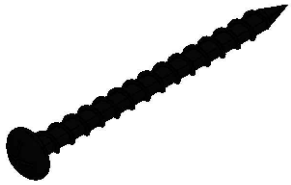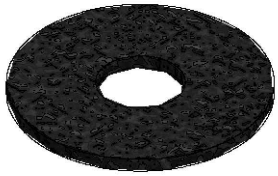ITEM	DESCRIPTION	DRAWING	QTY
A	MINIFIX CAM LOCK		53 PCS
B	MINIFIX CAM BOLT		53 PCS
C	WOOD DOWEL (M6 x 25MM)		56 PCS
D	TRUSS M-SCREW (12MM)		10 PCS
E	6/8" NAIL		18 PCS
F	HANDLE		5 PCS
G	PLASTIC STRIP (H SHAPE)		1 PC
H	PAN HEAD SCREW M4 x 50mm		1 PC
I	FLAT WASHER M6 x 19mm		1 PC

80210 CH ASSEMBLY INSTRUCTION







PARTS LIST

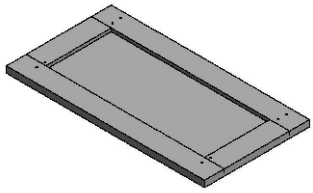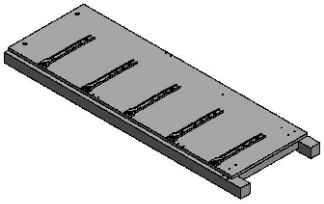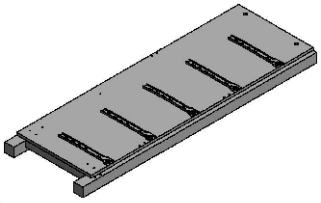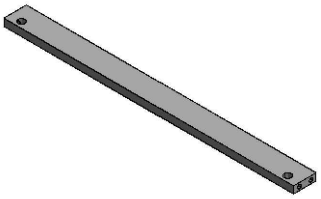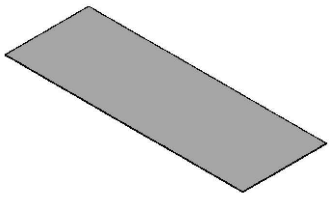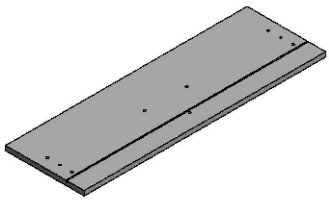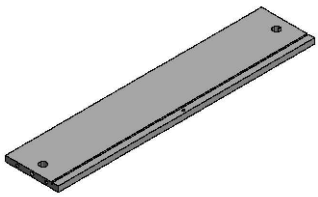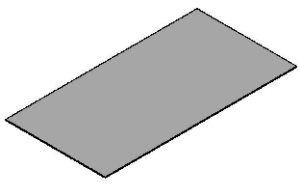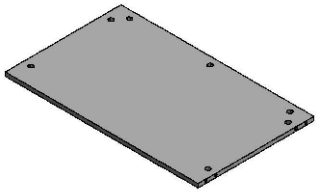ITEM	DESCRIPTION	DRAWING	QTY
C1	TOP PANEL		1 PC
C2	LEFT PANEL		1 PC
C3	RIGHT PANEL		1 PC
C4	SUPPORT RAIL		3 PCS
C5	BACK PANEL		2 PCS
C6	DRAWER HEAD		5 PCS
C7	DRAWER BACK PANEL		5 PCS
C8	DRAWER BOTTOM PANEL		5 PCS
C9	BOTTOM PANEL		1 PC

MORE PARTS DETAIL IN NEXT PAGE...


80210 CH ASSEMBLY INSTRUCTION

PARTS LIST

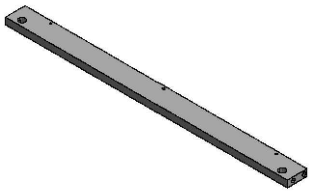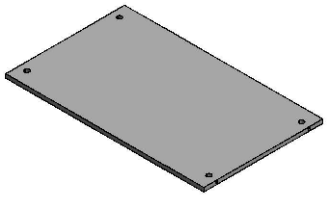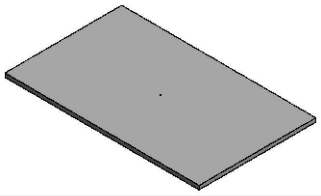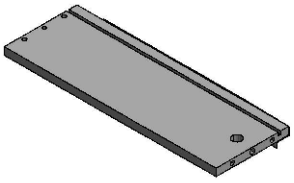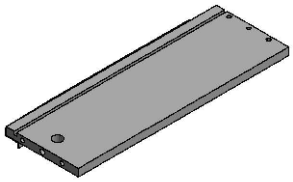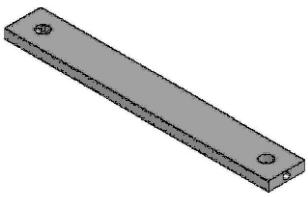
ITEM	DESCRIPTION	DRAWING	QTY
C10	BOTTOM SUPPORT RAIL		1 PC
C11	FRONT TIPPING PANEL		1 PC
C12	BACK TIPPING PANEL		3 PCS
19	DRAWER LEFT PANEL		5 PCS
20	DRAWER RIGHT PANEL		5 PCS
21	DRAWER BOTTOM SUPPORT RAIL		5 PCS

PARTS ' LOCATION

CHEST x 1 PC

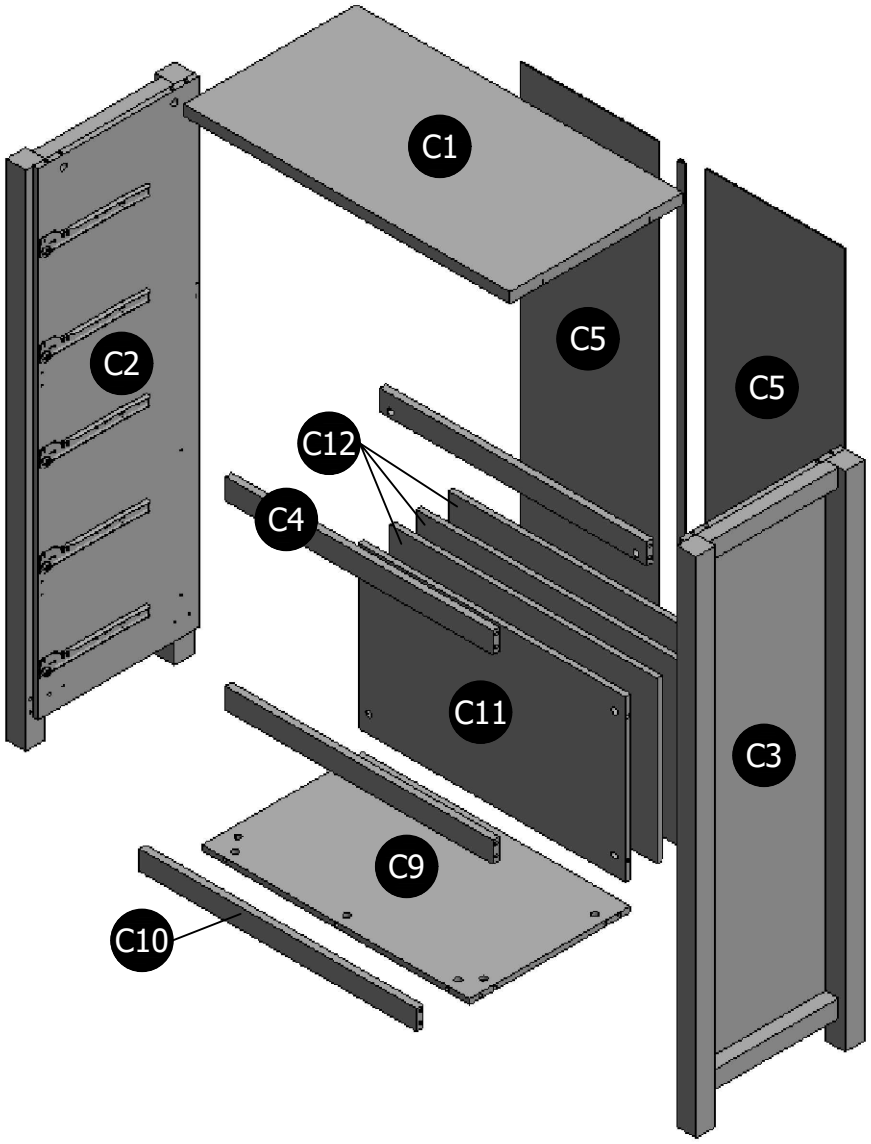


DRAWER x 5 PCS

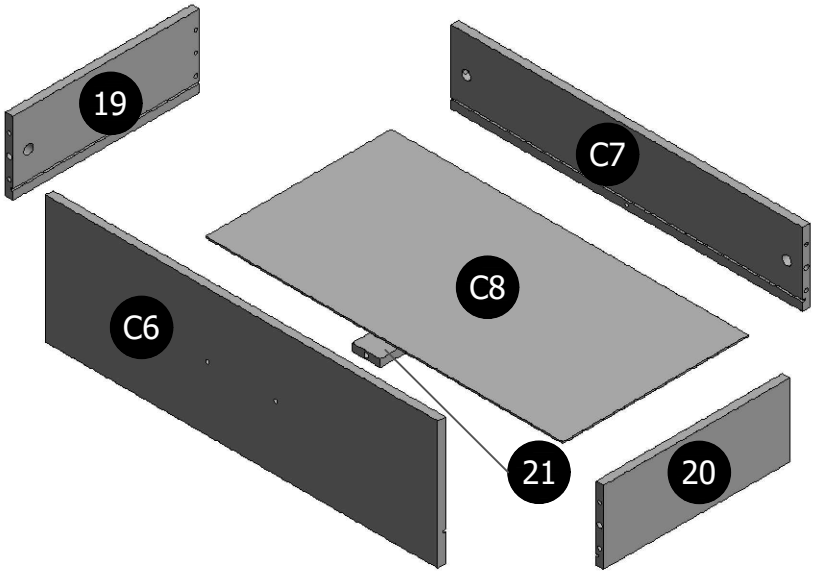

ASSEMBLY STEPS


STEP 1

Insert 2pcs (A) and screw in 8pcs (B) into the (C2) as shown.

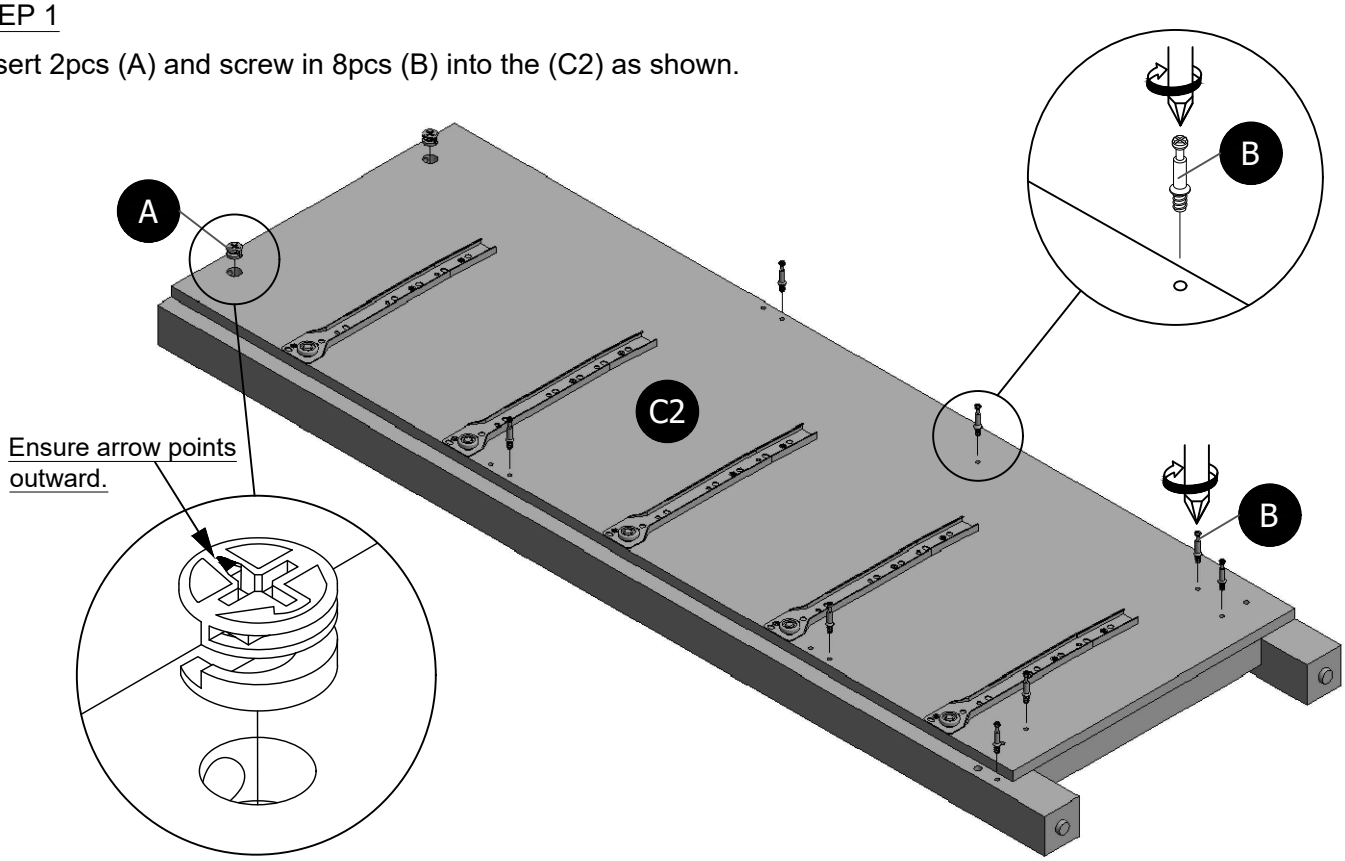

STEP 2


Insert 2pcs (A) and screw in 8pcs (B) into the (C3) as shown .

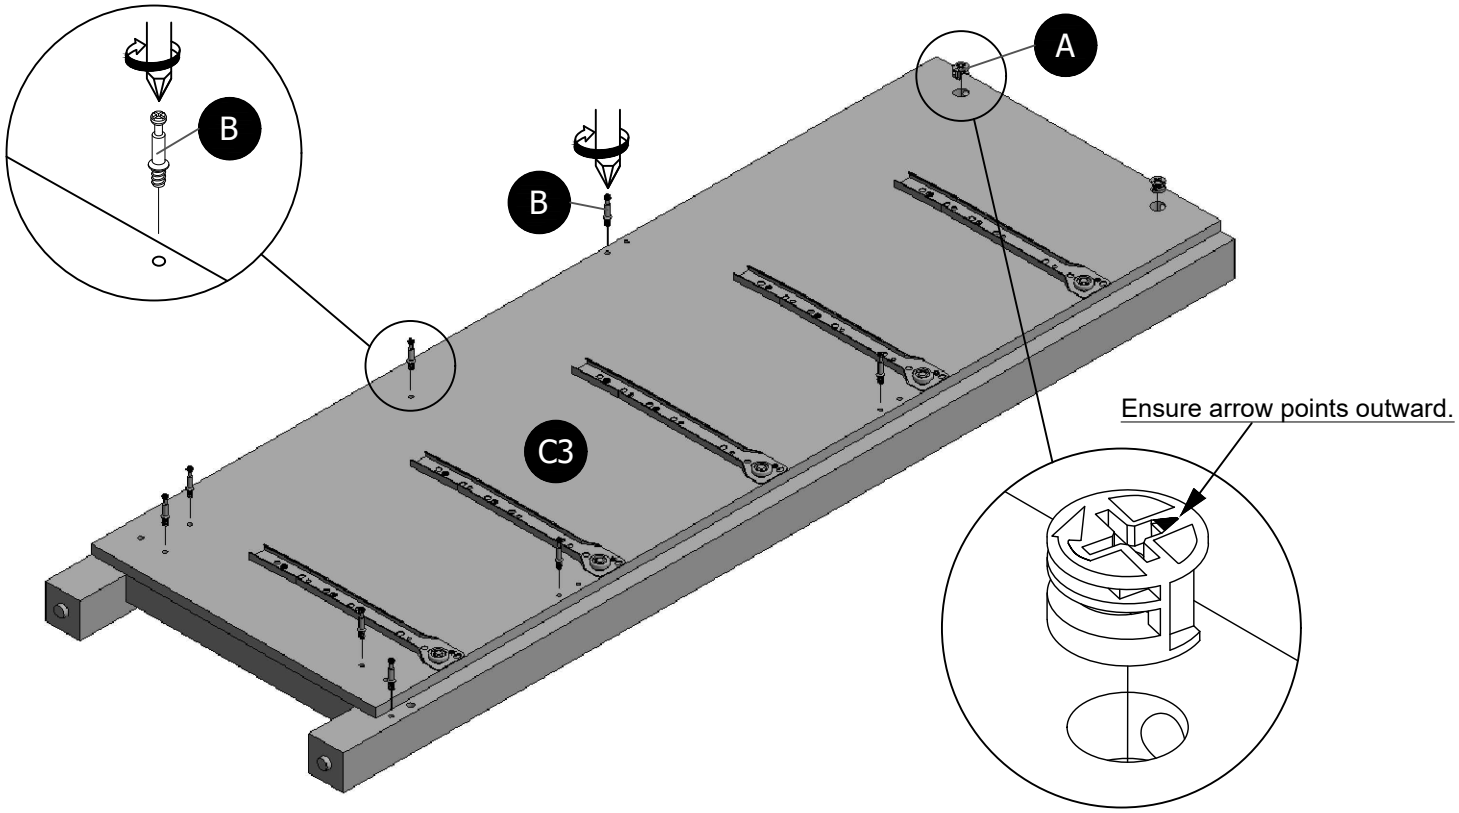

STEP 3


Insert 2pcs (A) & (C) into the (C4) as shown .

x 3

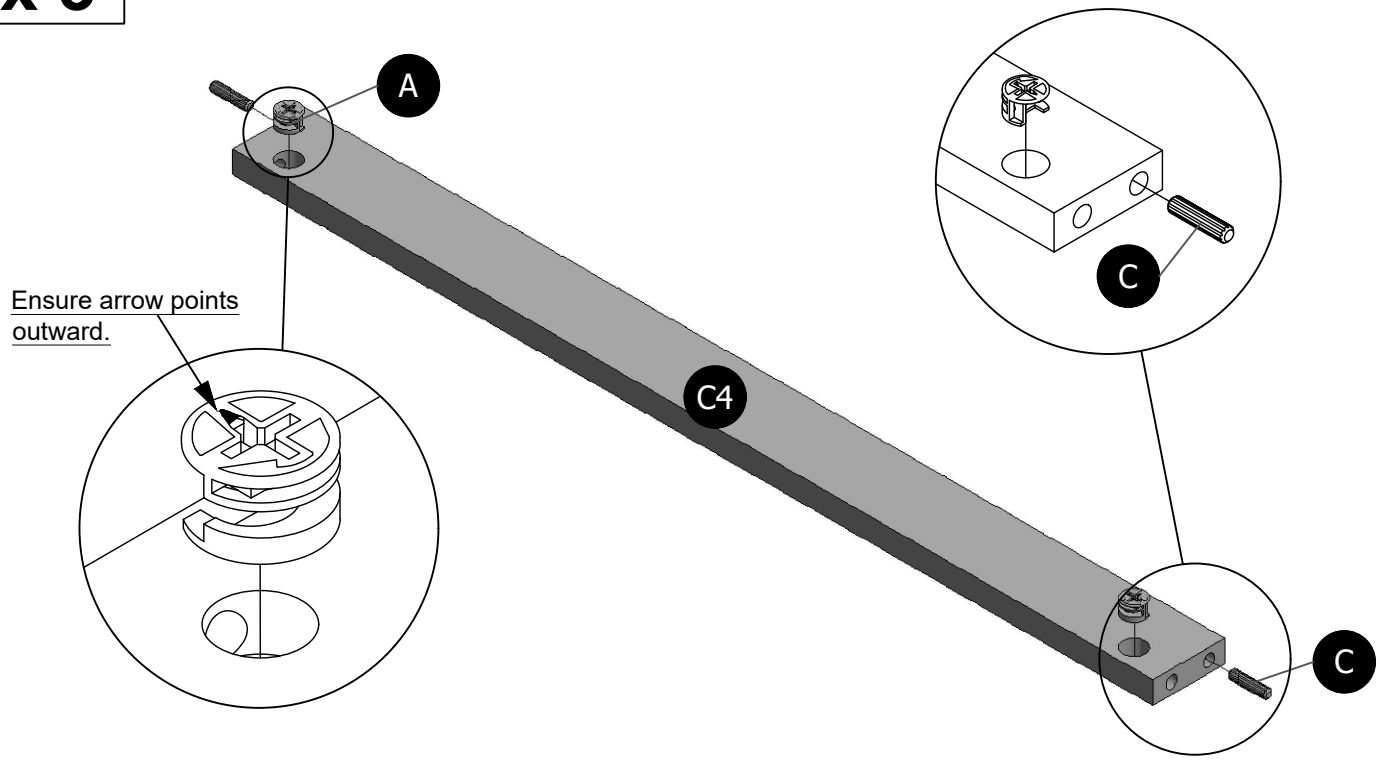


STEP 4

Insert 2pcs (A) & (C) into the (C10), then screw in 3pcs (B) as shown.

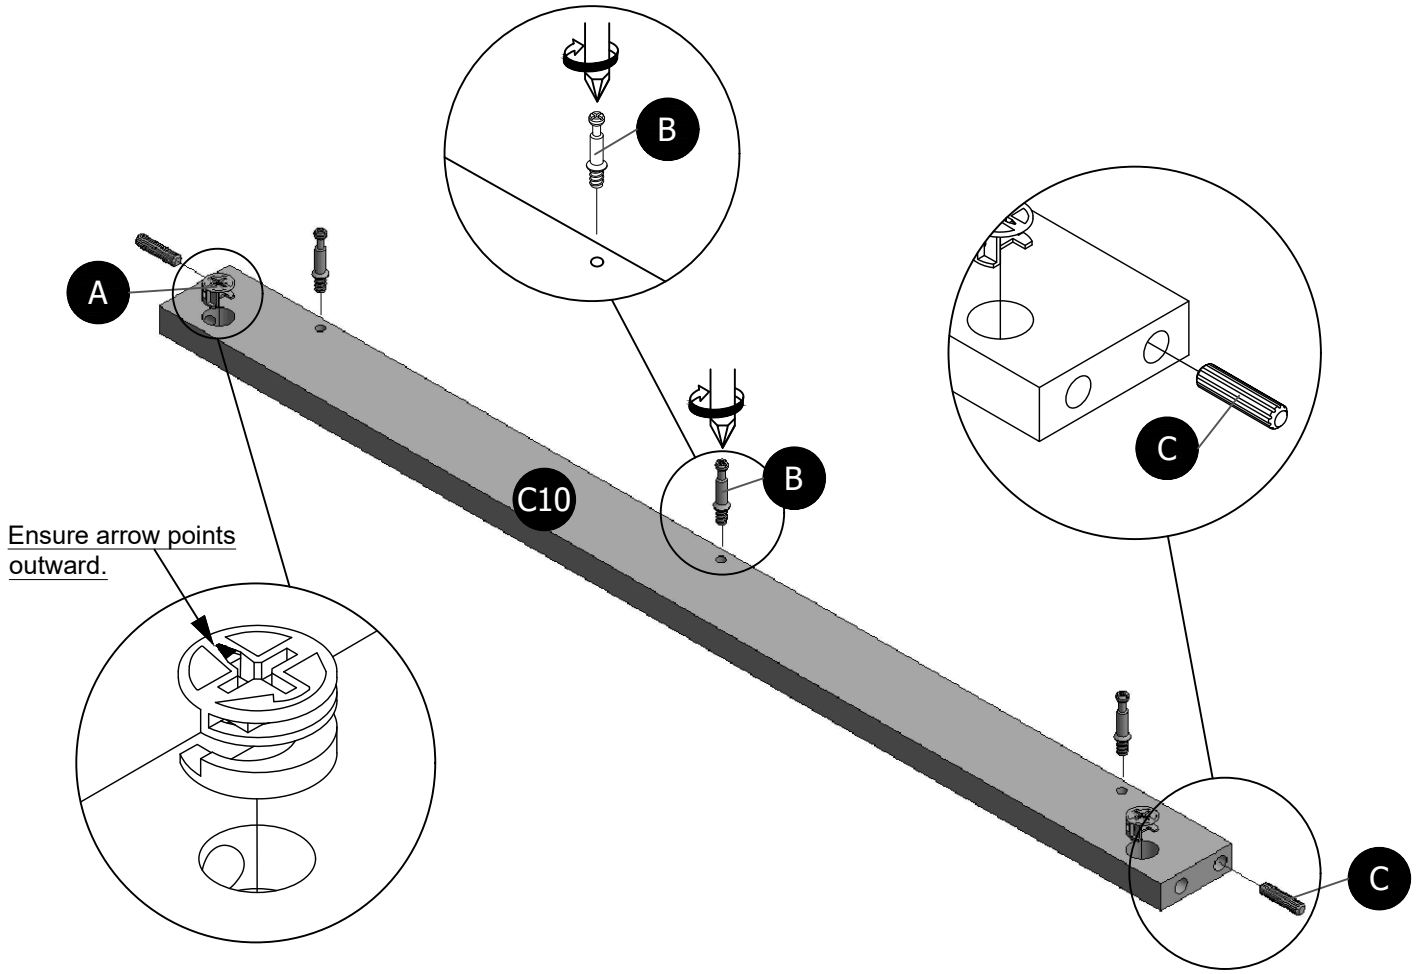


STEP 5

Insert 7pcs (A) & 4pcs (C) into the (C9) as shown.

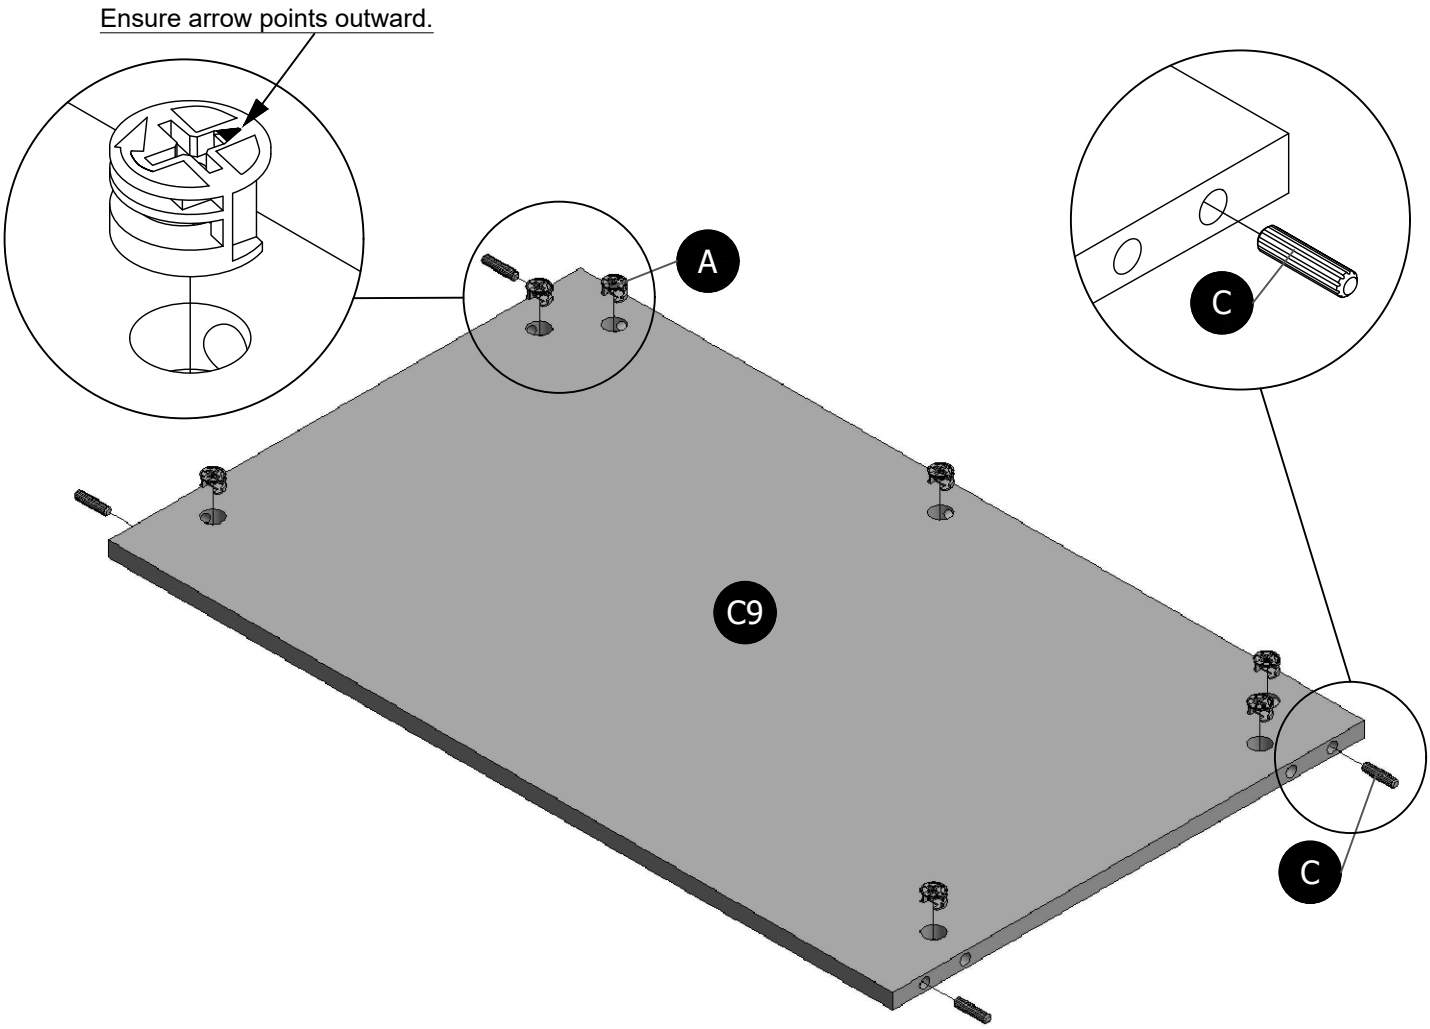


STEP 6

Combine (C10) into (C9), then tighten 3pcs (A) as shown.

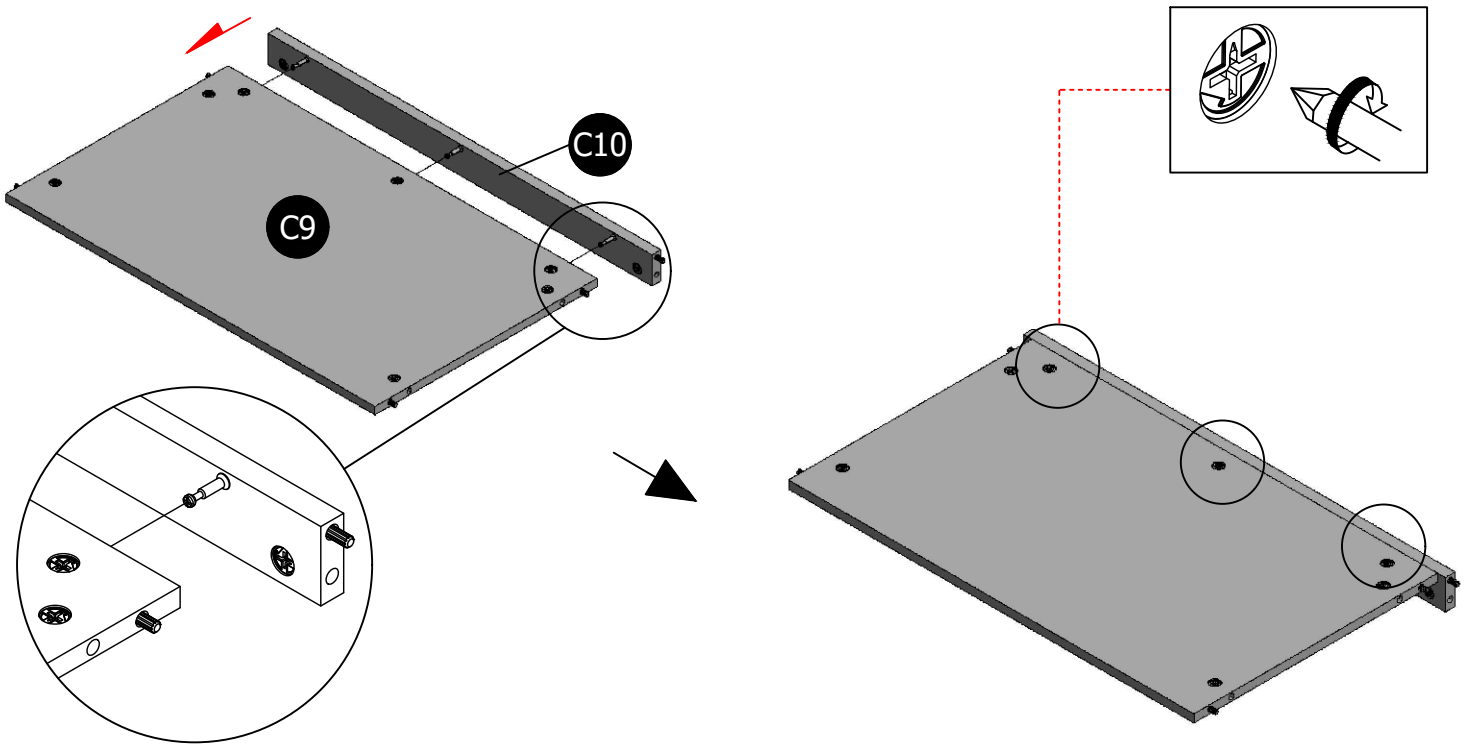

STEP 7


Insert 4pcs (A) into the (C11) as shown.

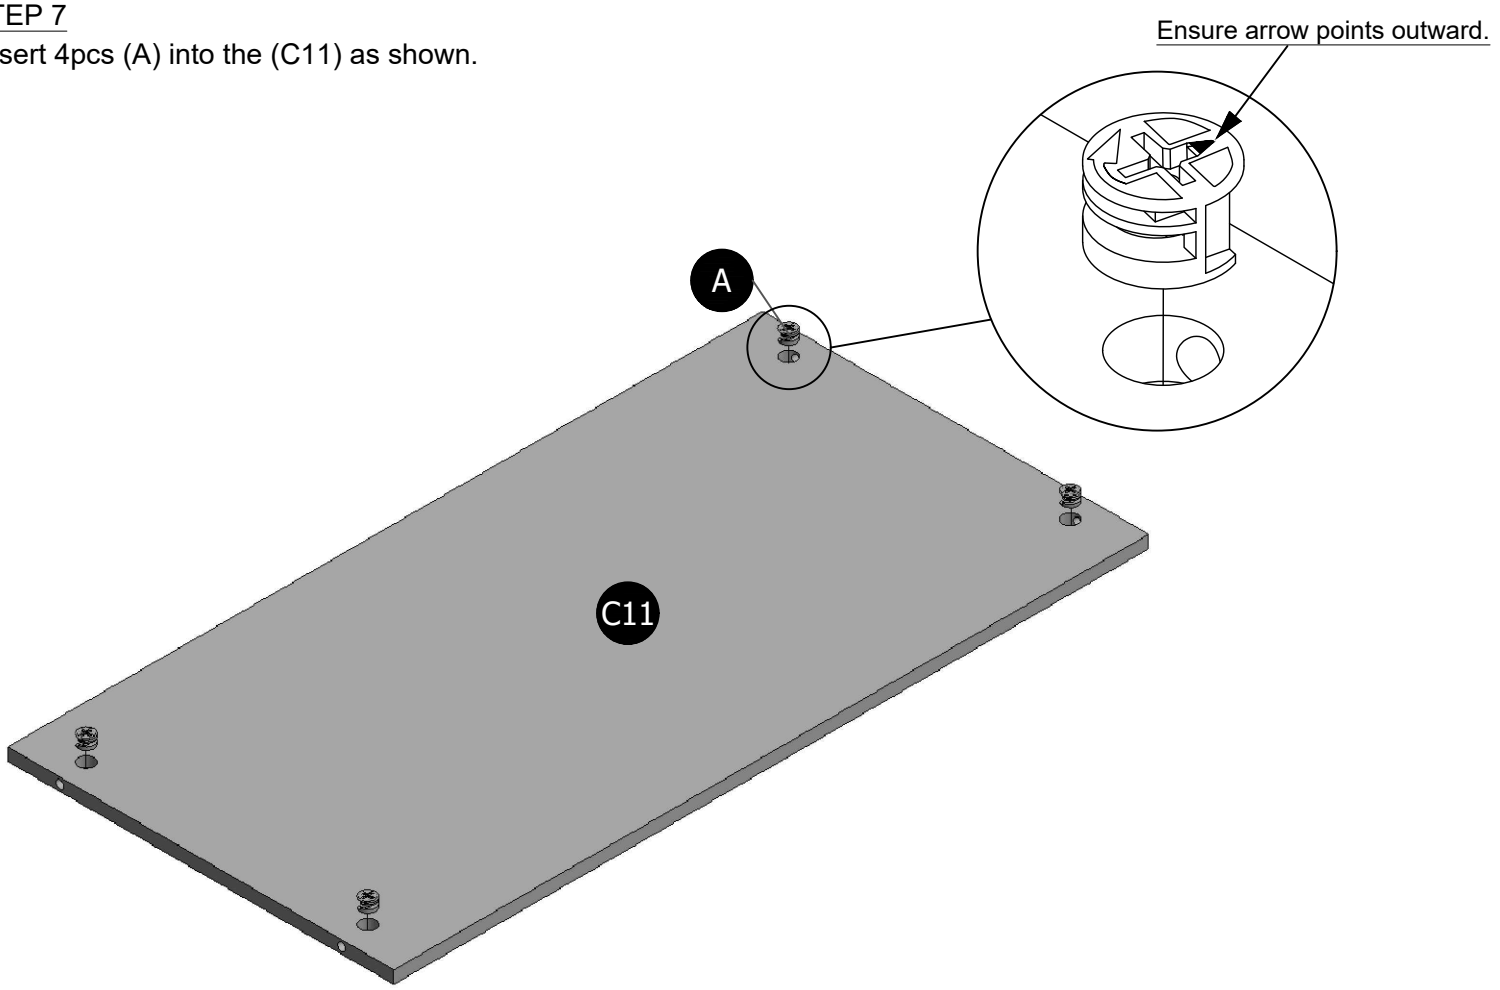

STEP 8

Combine (C4) & (C11) into (C2), then tighten 5pcs (A) as shown.


****This step require additional support from a second person.**

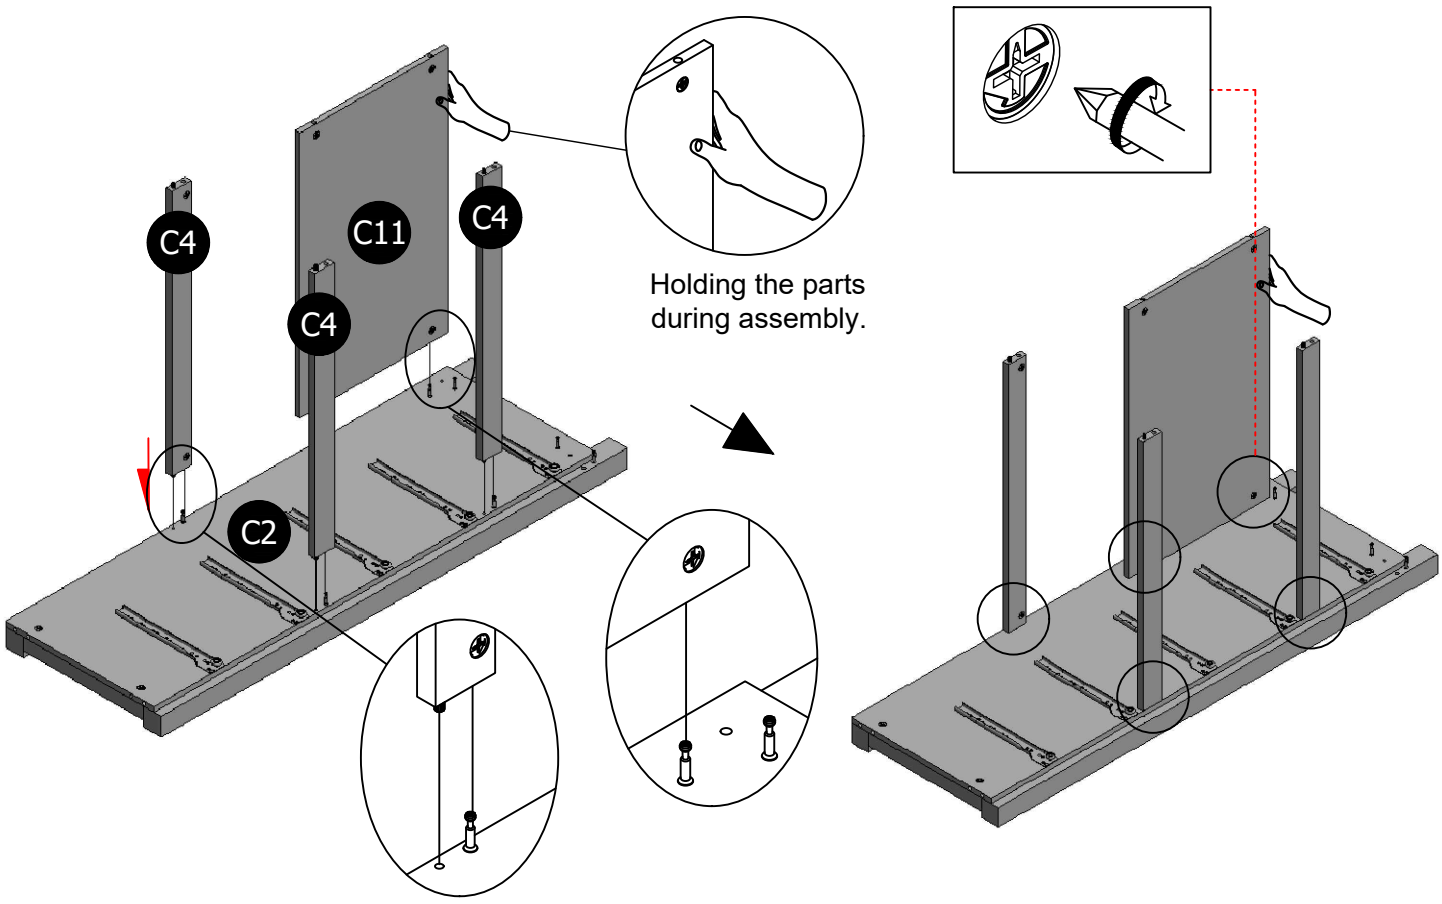

STEP 9

Combine (C9) & (C10) into (C2), then tighten 3pcs (A) as shown.


****This step require additional support from a second person.**

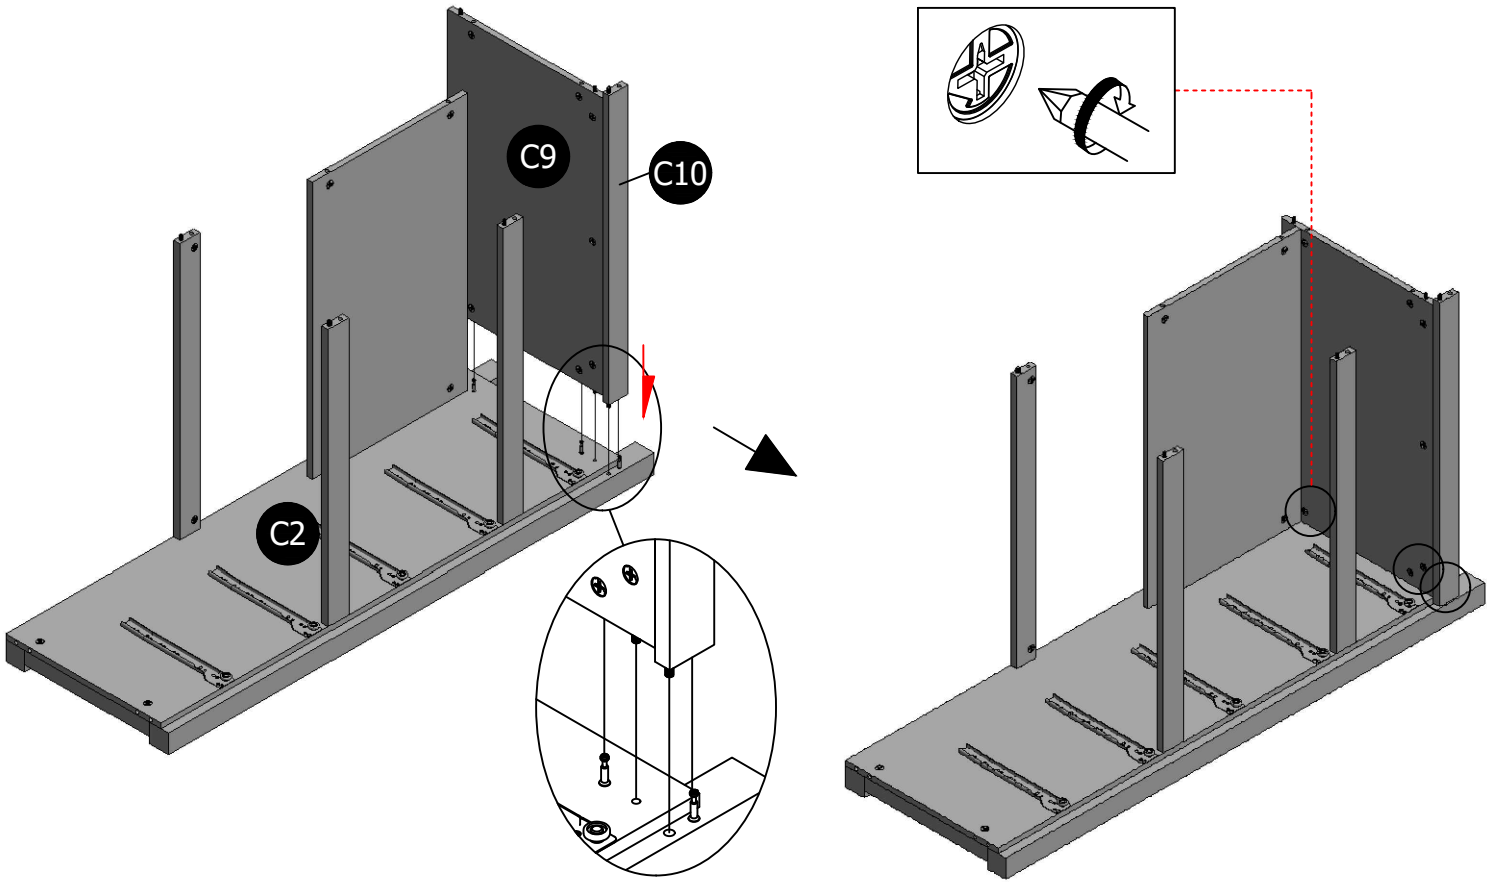

STEP 10

Combine (C3) into (C4),(C9),(C10) & (C11), then tighten 8pcs (A) as shown.


****This step require additional support from a second person.**

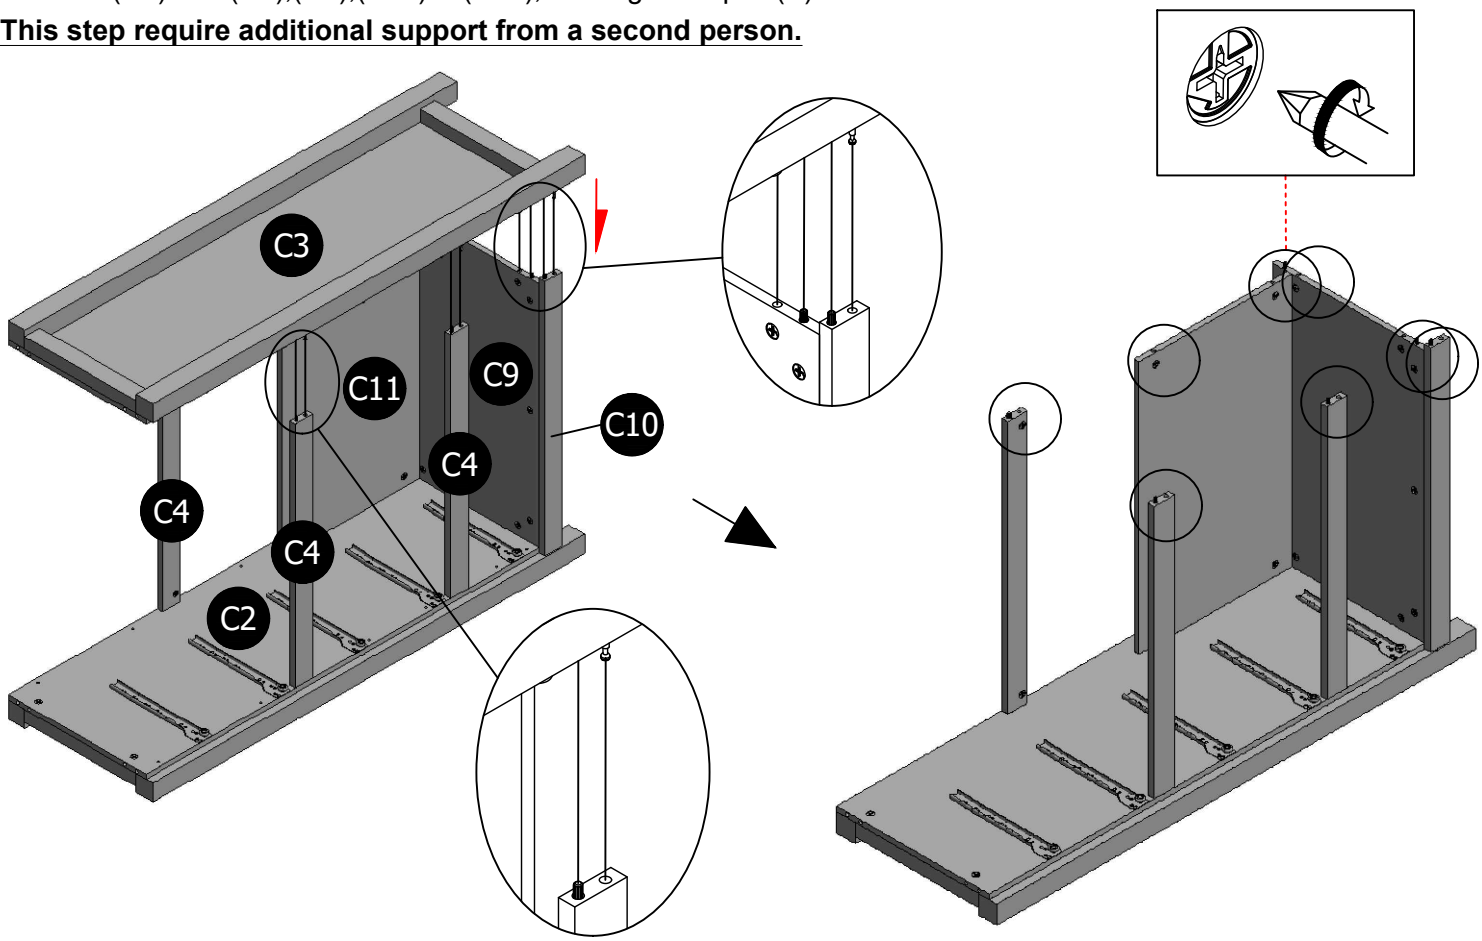

80210 CH ASSEMBLY INSTRUCTION


STEP 11

Insert 4pcs (C) and screw in 4pcs (B) into the (C1) as shown.

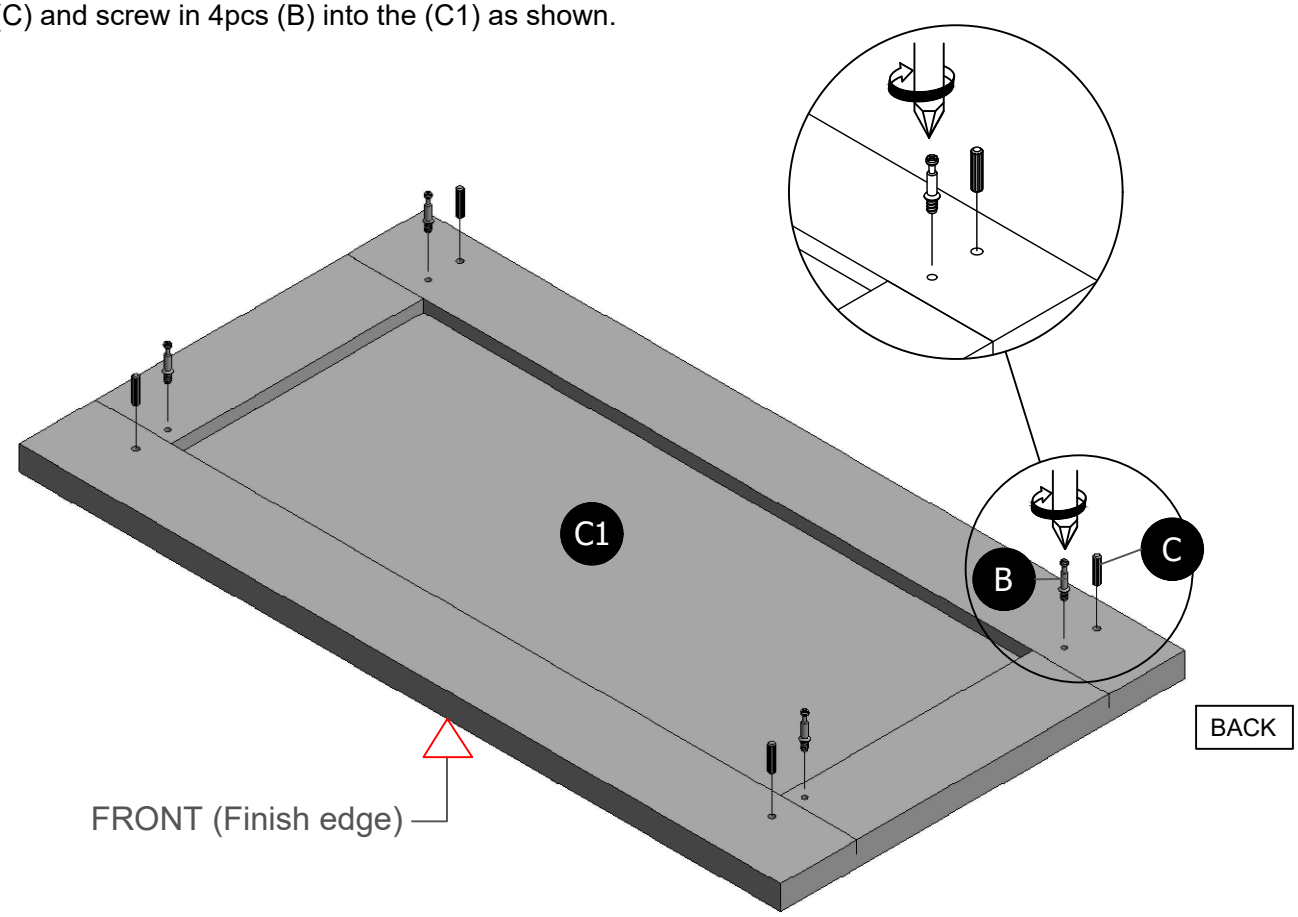


STEP 12

Combine (C1) into (C2) & (C3), then tighten 4pcs (A) as shown.

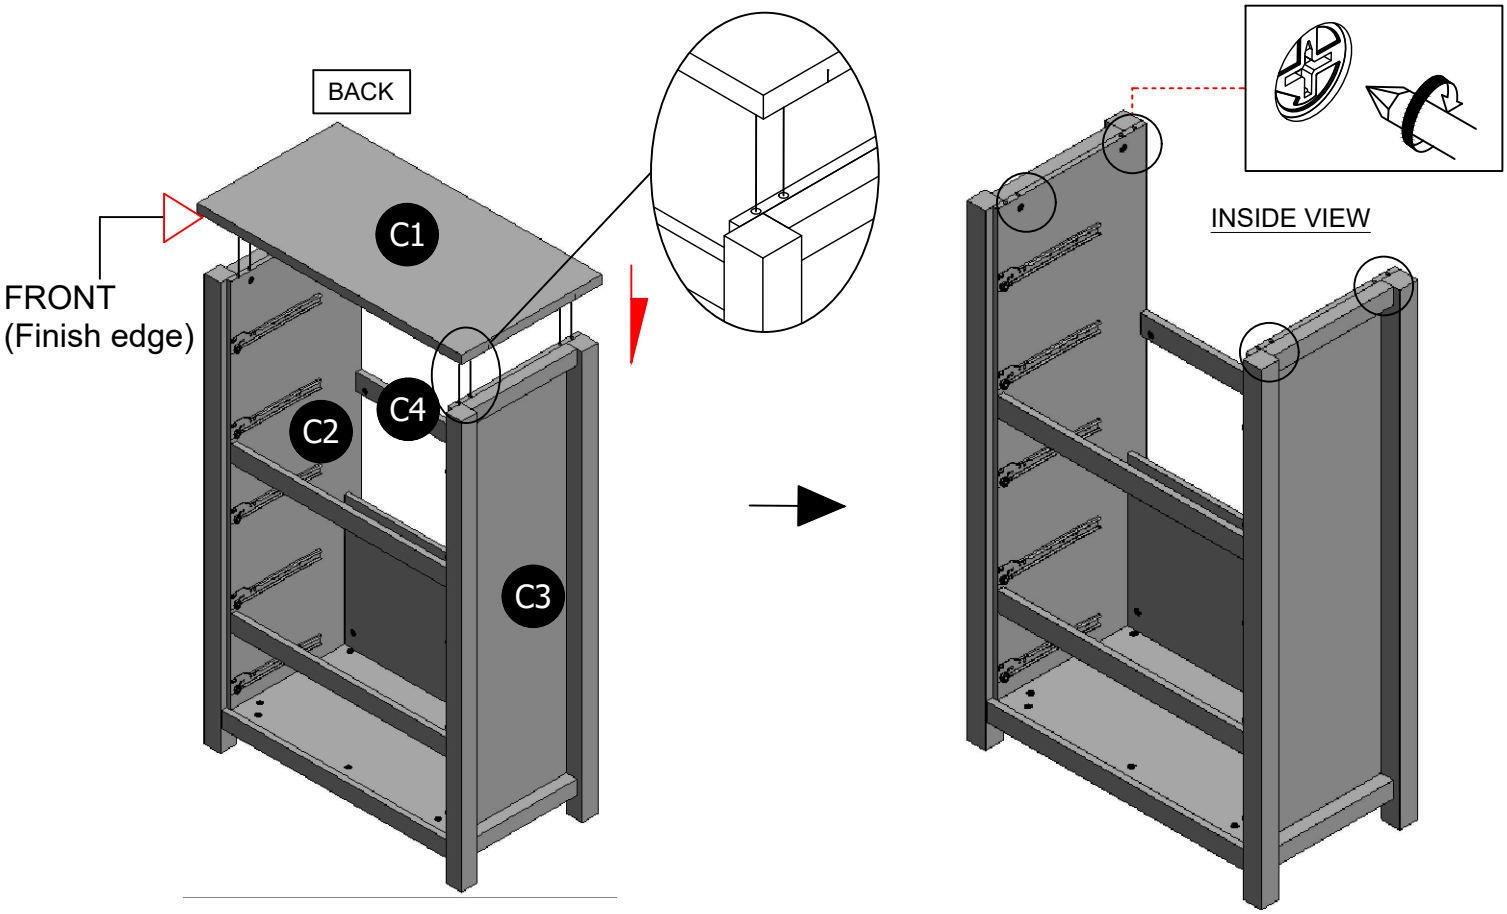


STEP 13

Insert the (I) into the (H), then screw in the (H) to secure (C11) & (C12) as shown.

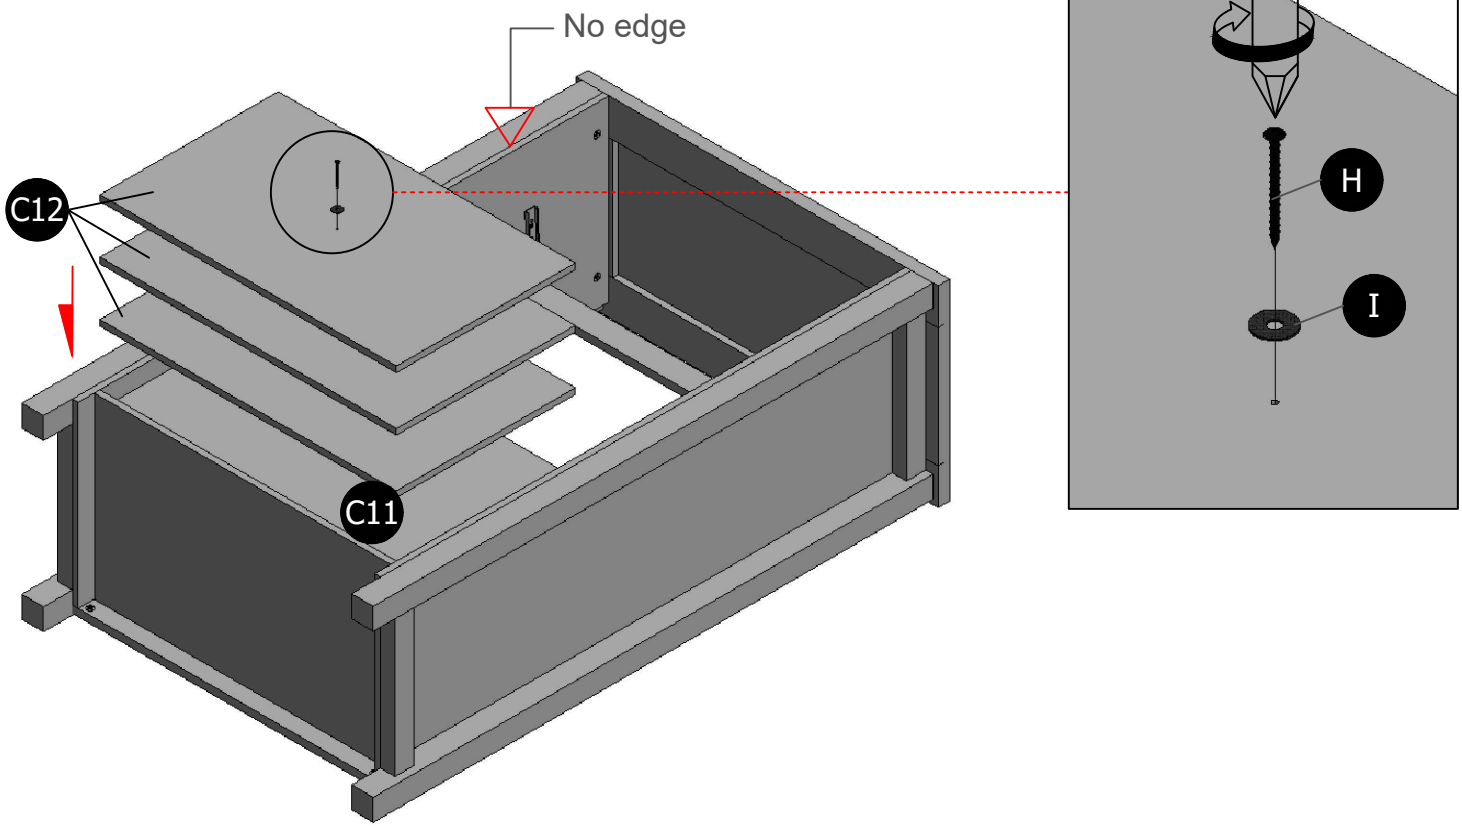

STEP 14


Insert the (C5) into the (G) as shown.Direction of the side with colored paper must be the same.

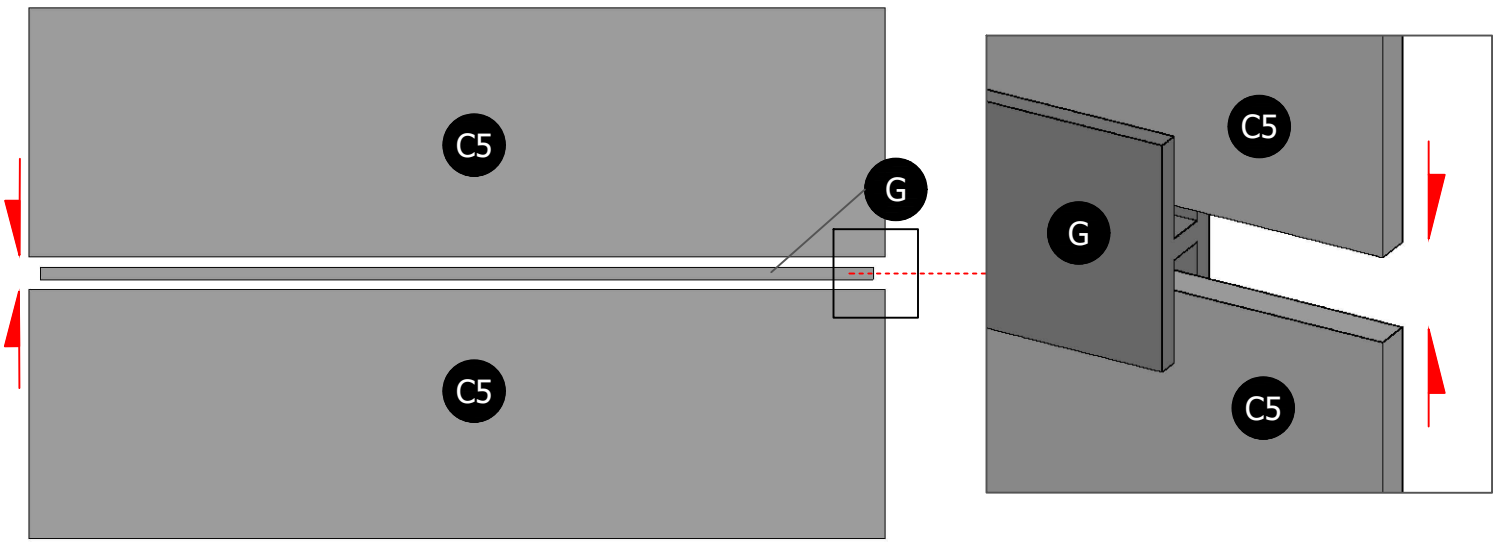

STEP 15

Secure the (C5) to the frame using 18pcs (E) as shown. Colored paper face to outside.


****This step require additional support from a second person.**

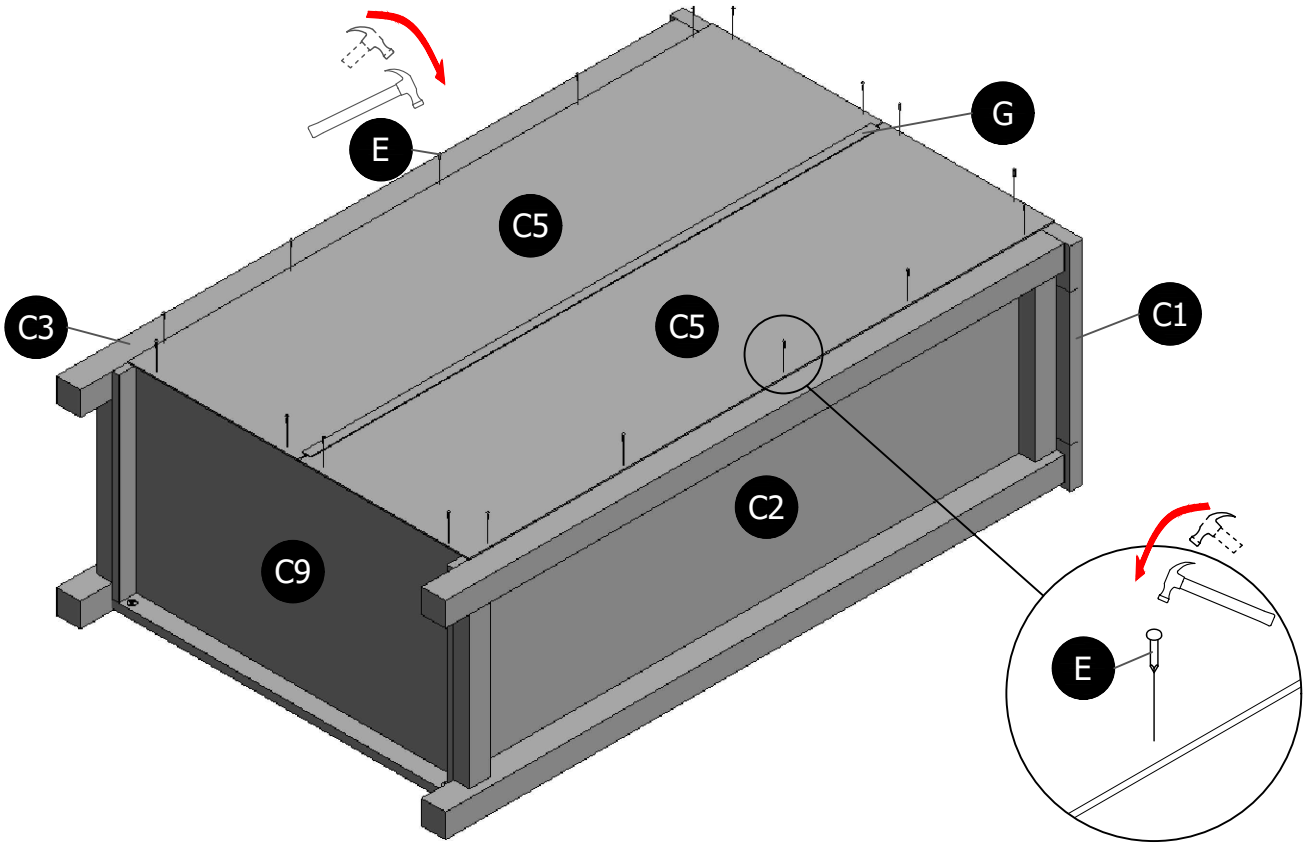

STEP 16

Screw in 3pcs (B) to the (C6) as shown.


x 5

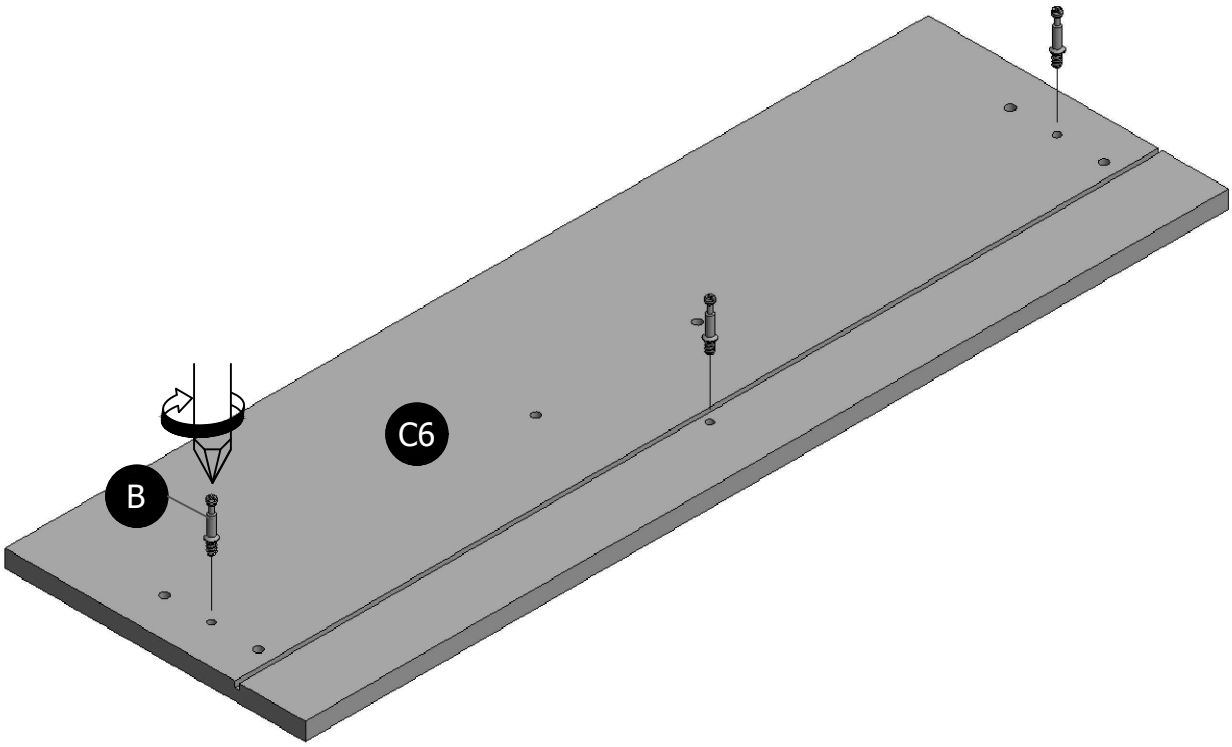

STEP 17

Insert 1pc (A) & 2pcs (C) into the (19), then screw in 1pc (B) as shown.


x 5

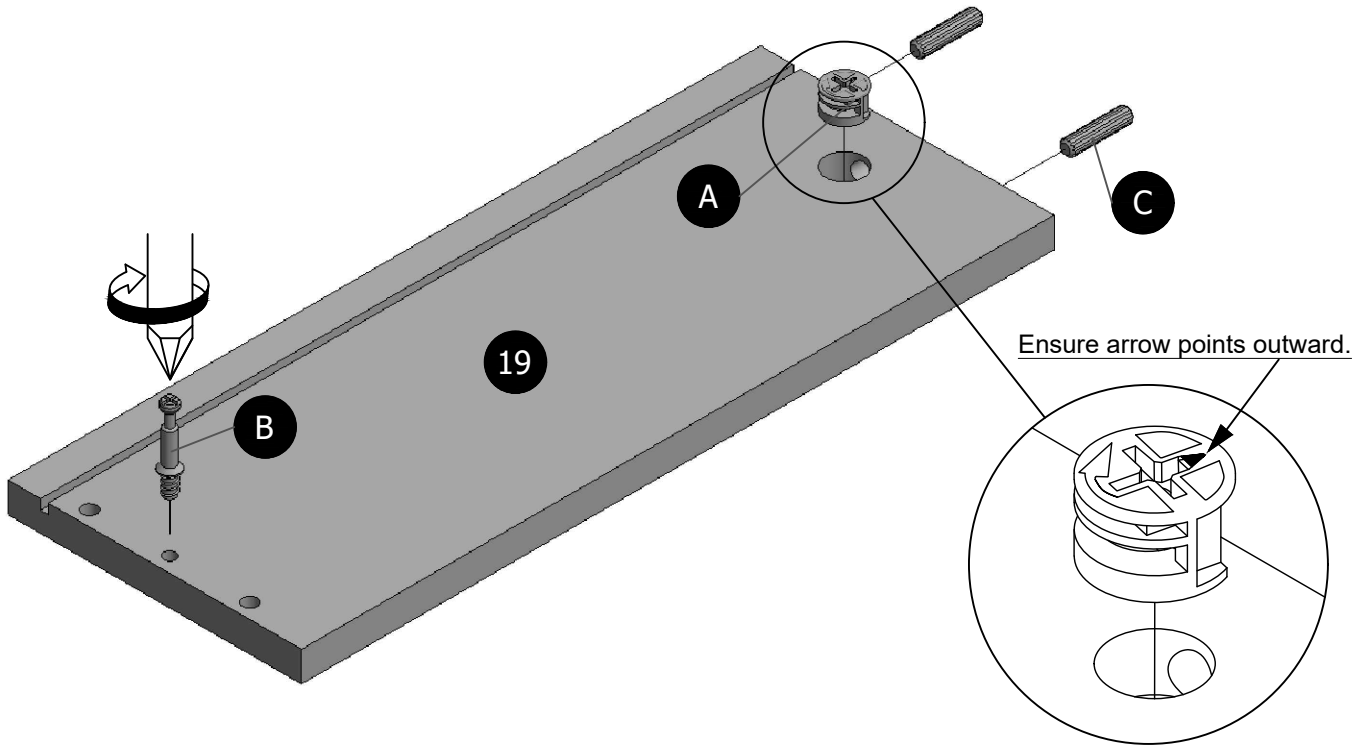

STEP 18

Insert 1pc (A) & 2pcs (C) into the (20), then screw in 1pc (B) as shown.


x 5

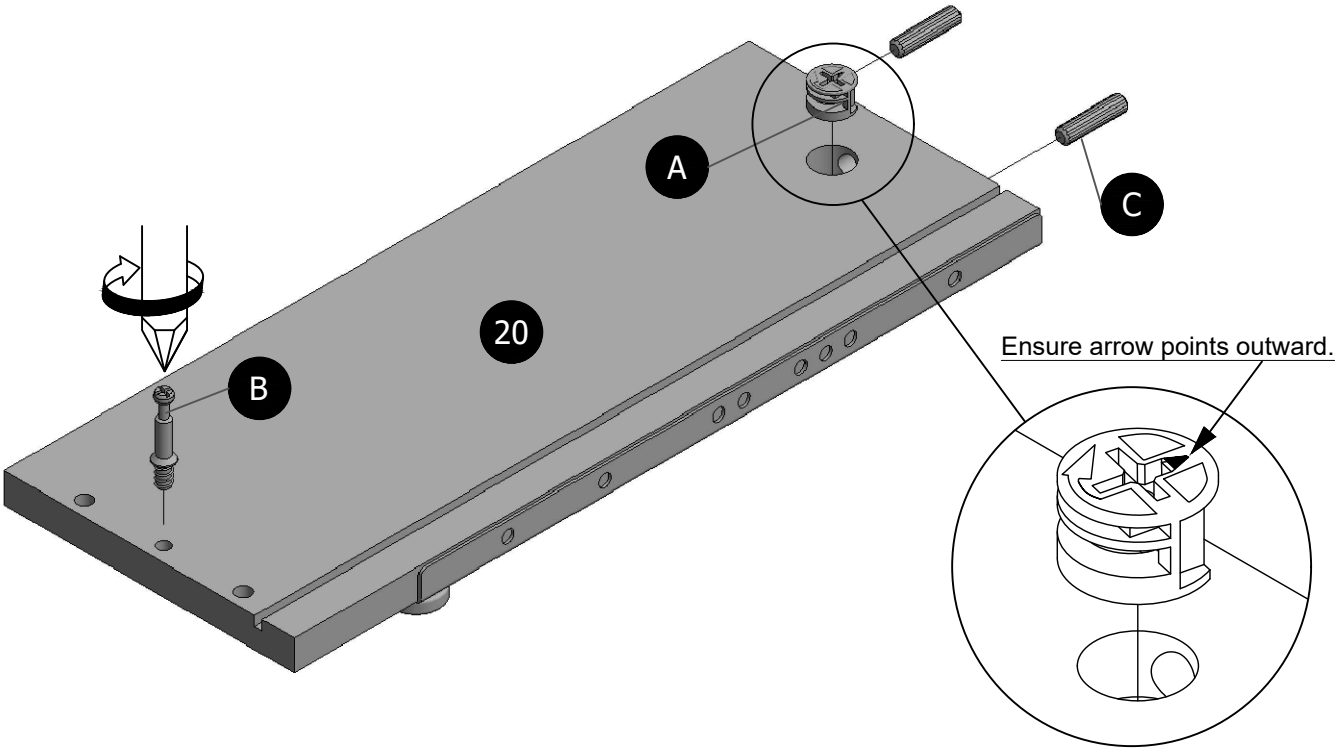

STEP 19

Insert 2pcs (A) & 4pcs (C) into the (C7), then screw in 1pc (B) as shown.


x 5

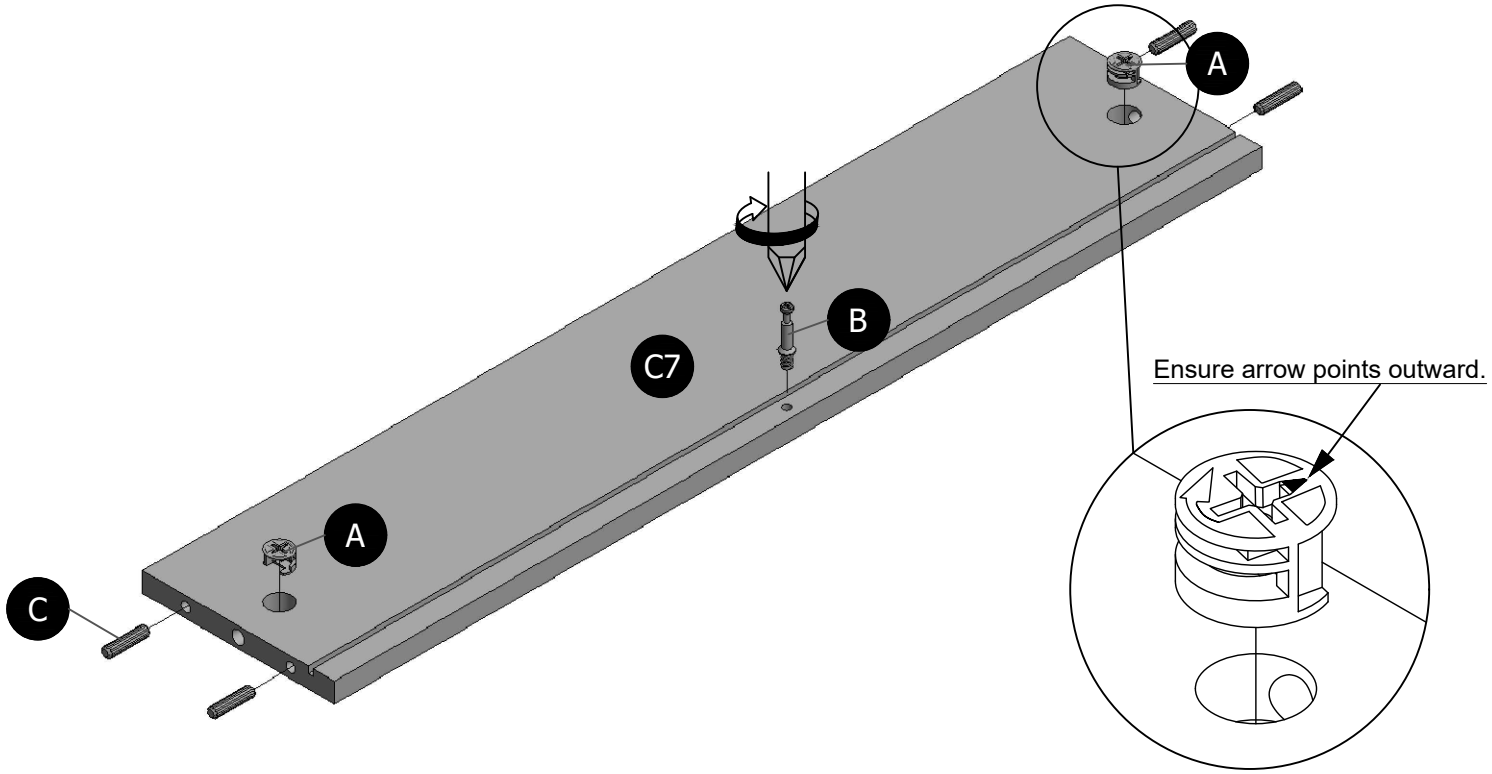

STEP 20

Insert 2pcs (A) into the (21) as shown.


x 5

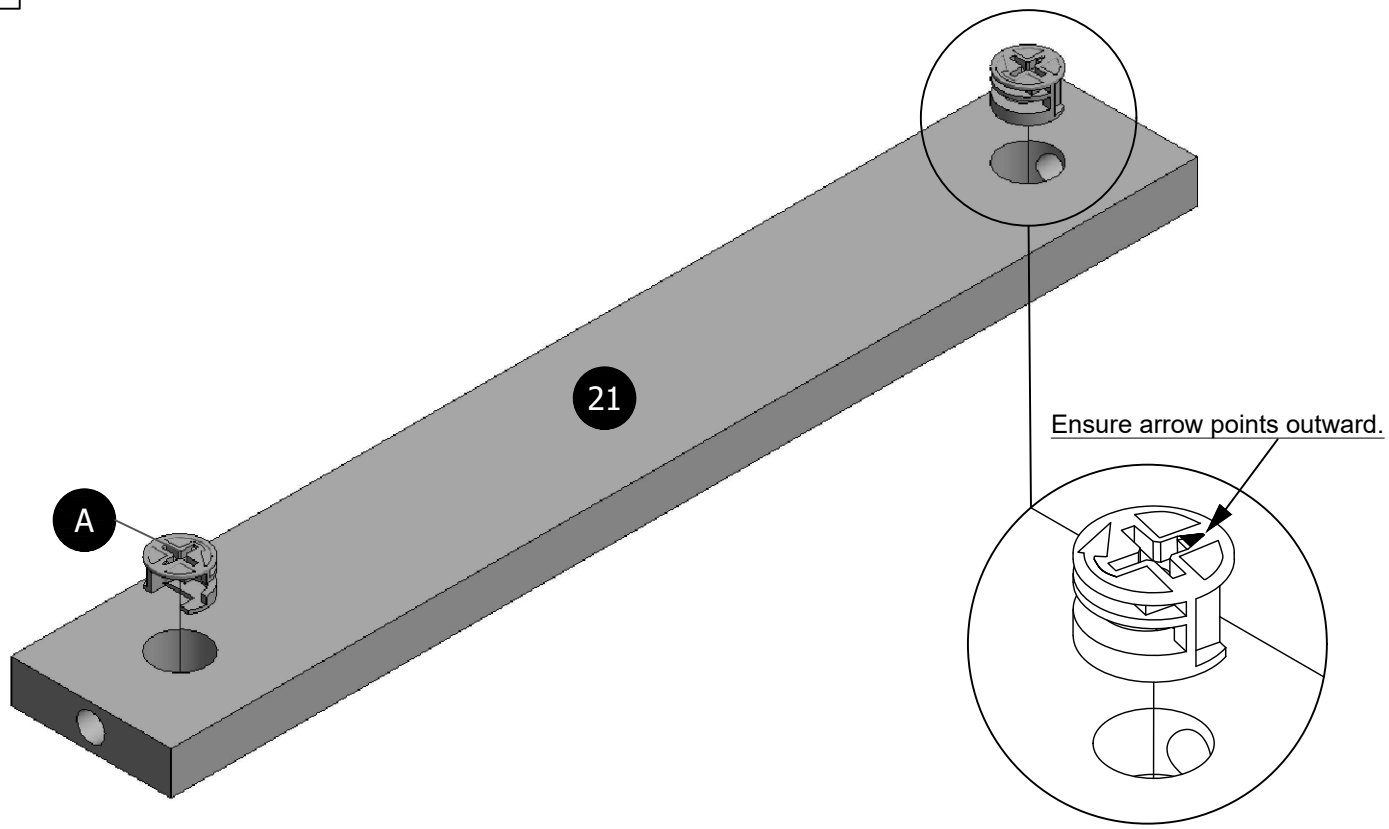

STEP 21

Combine (19) & (20) into (C7), then tighten 2pcs (A) as shown.


x 5

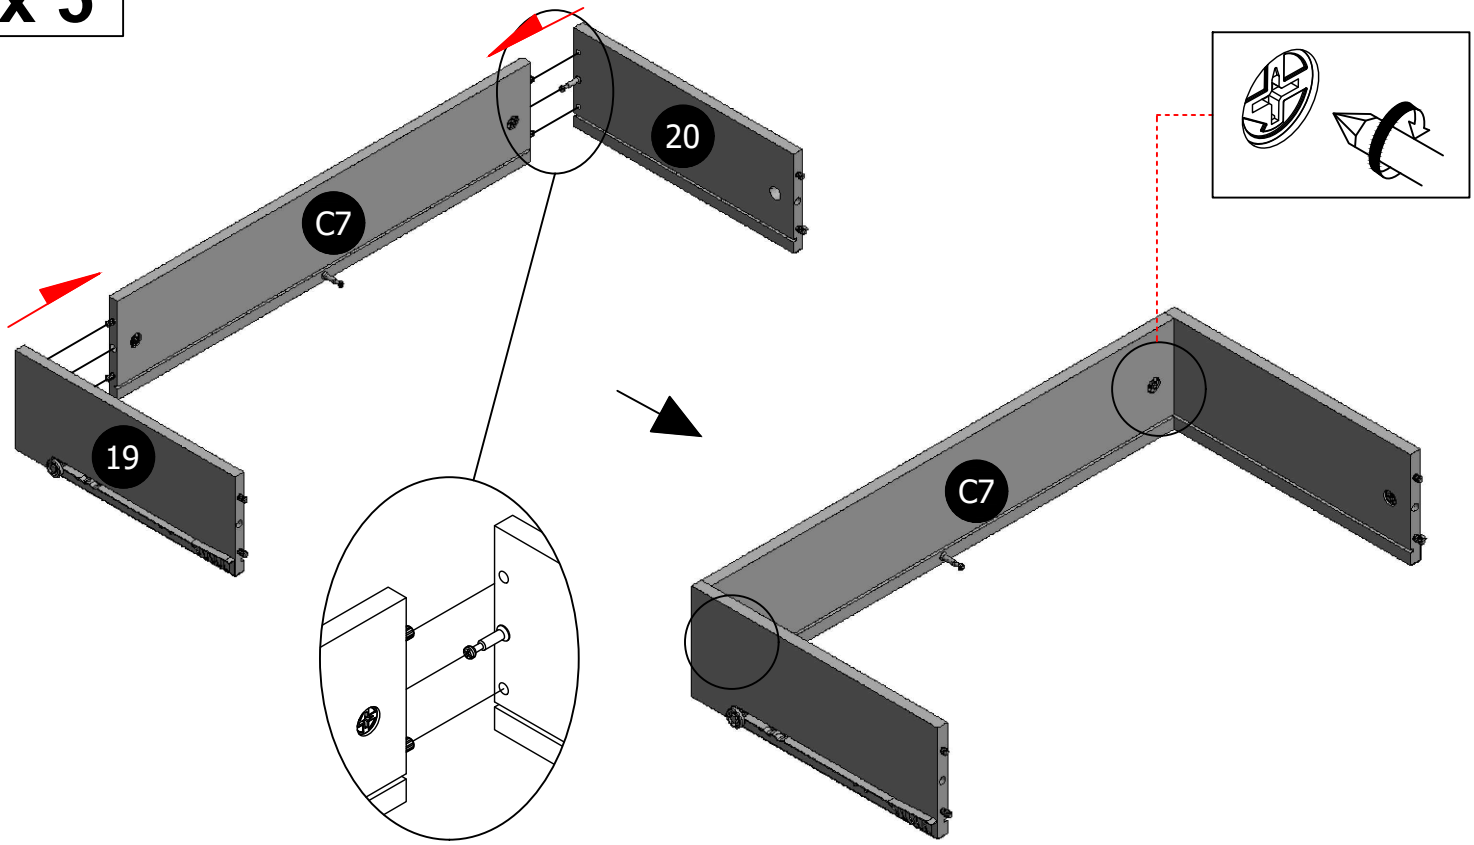

STEP 22

Insert (C8) into the drawer groove as shown.


x 5

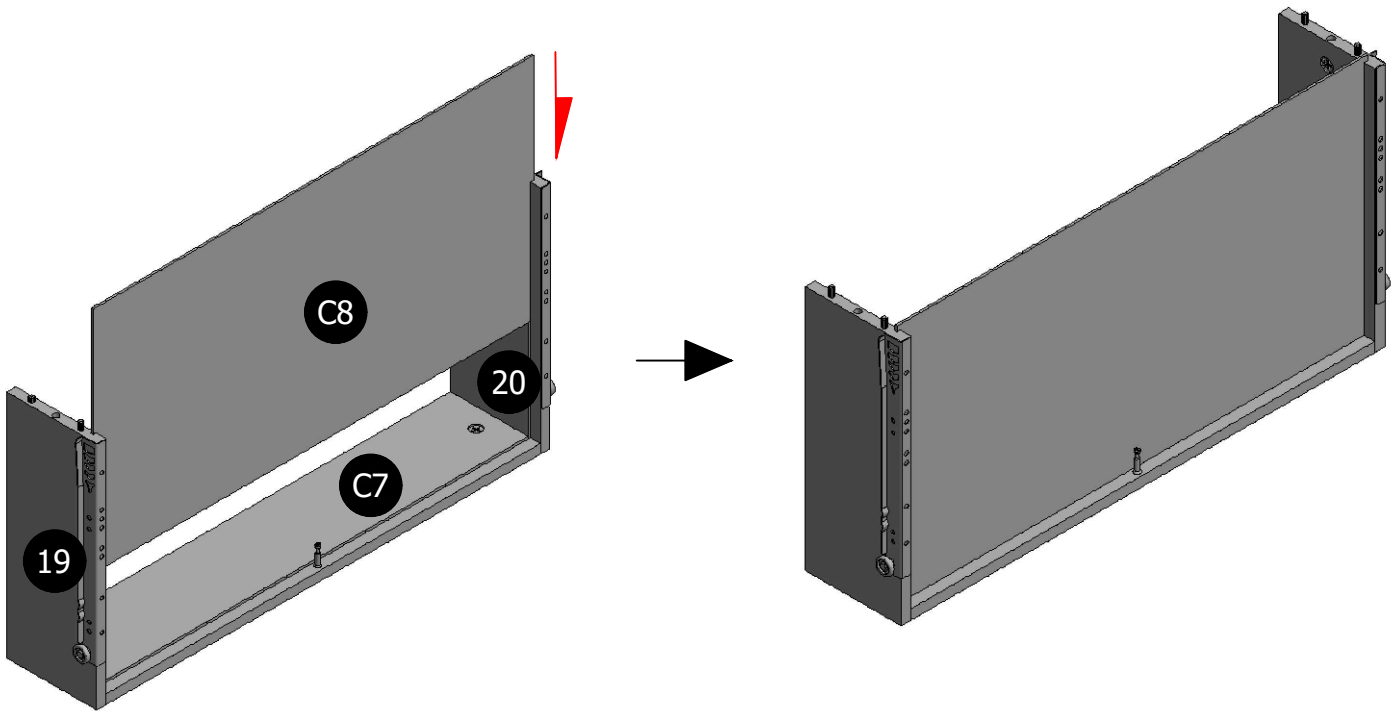

STEP 23

Combine the (21) onto the (C7), then tighten 1pc (A) as shown.


x 5

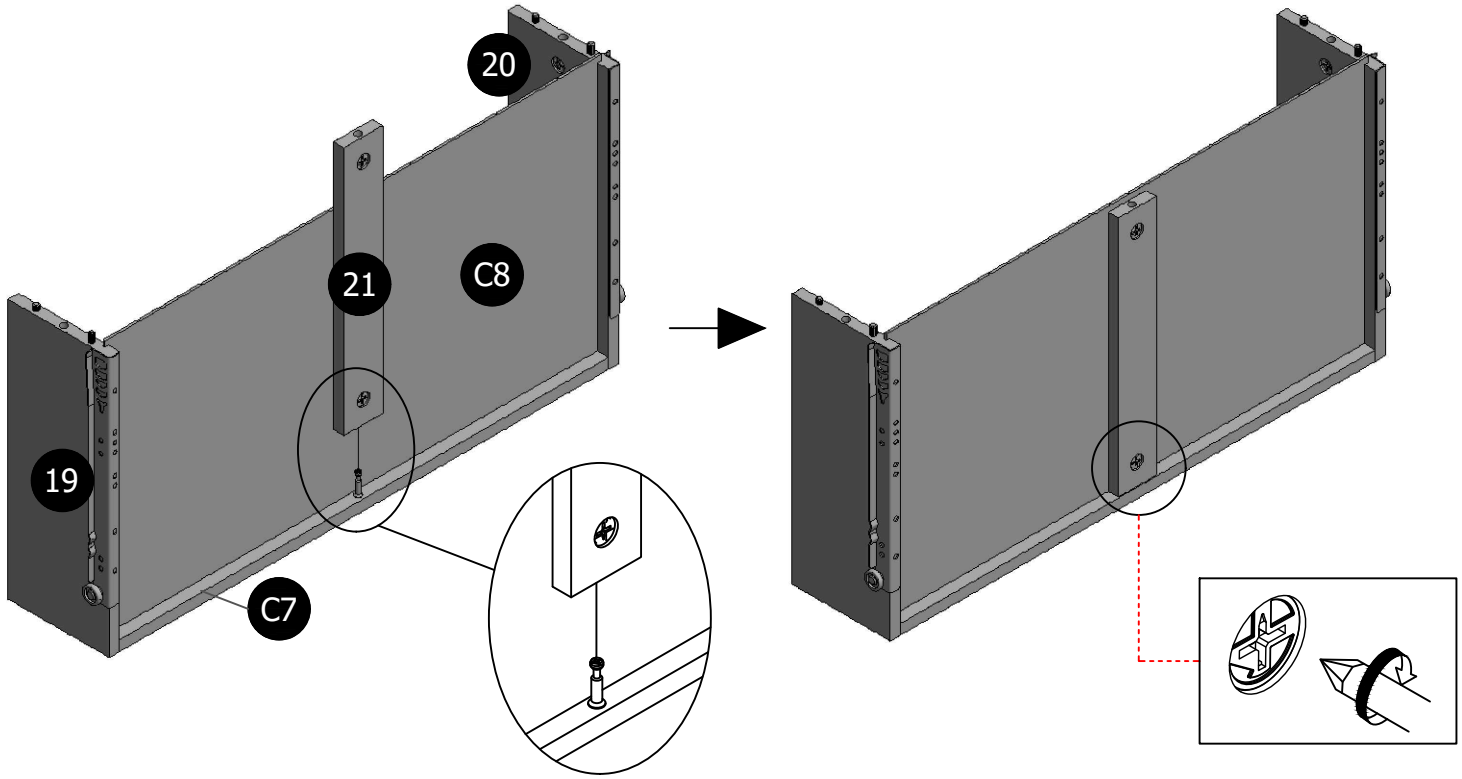

STEP 24

Combine the (C6) to the drawer frame, then tighten 3pcs (A) as shown.


x 5

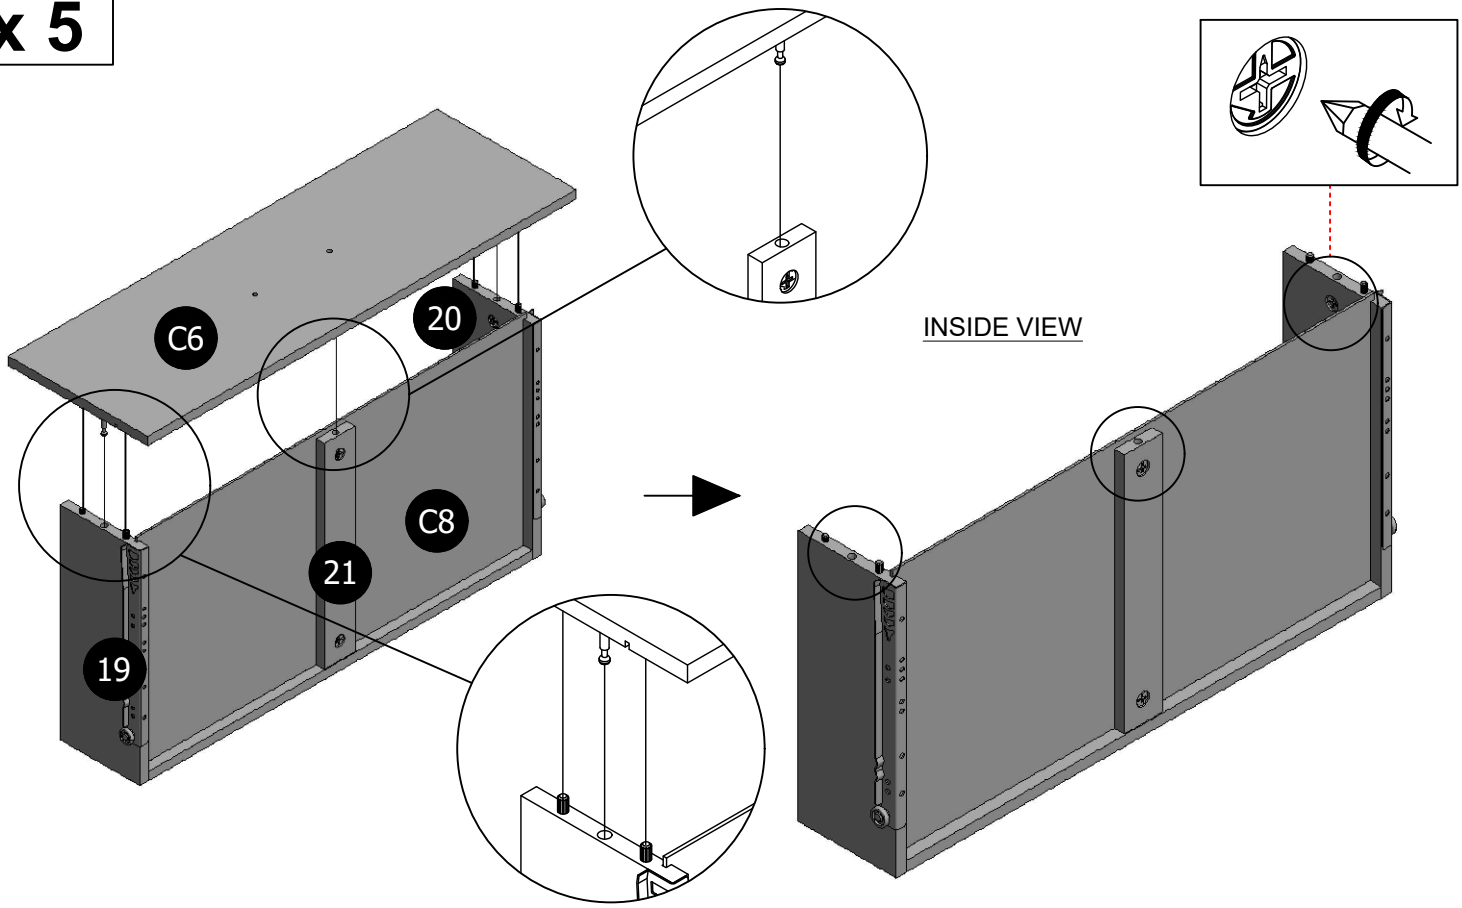

STEP 25


Screw 2pcs (D) into the (F), as shown.

x 5

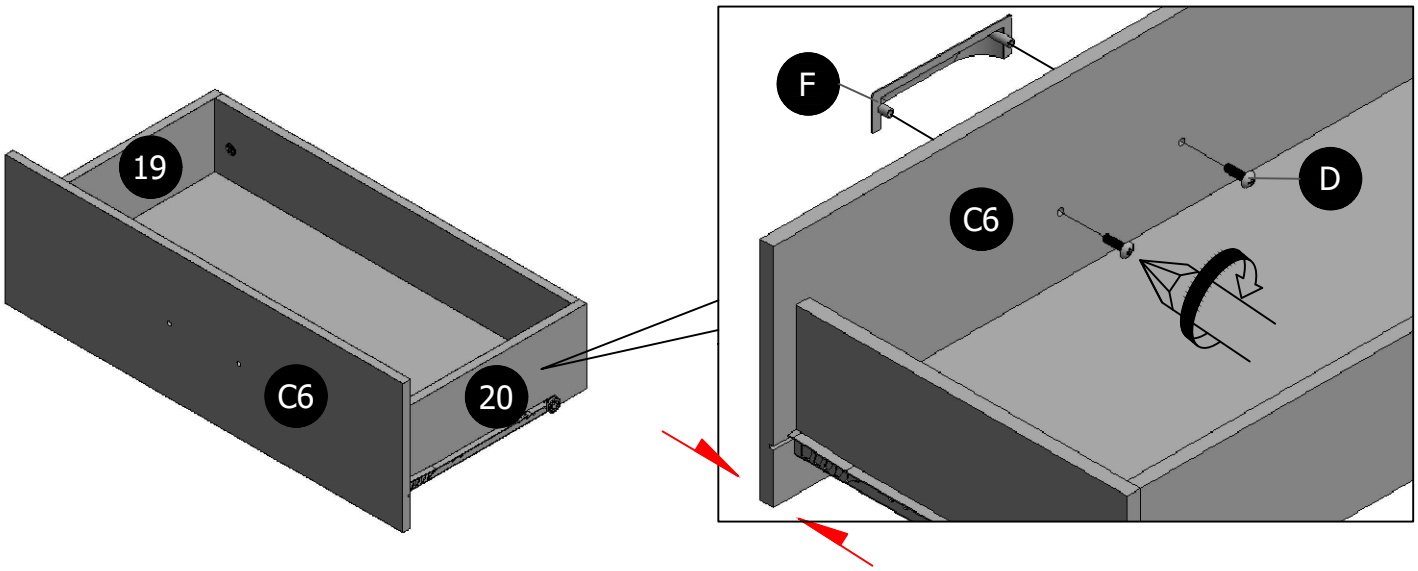

STEP 26

Align the position then push the 5pcs drawer to inside exactly by your hand.

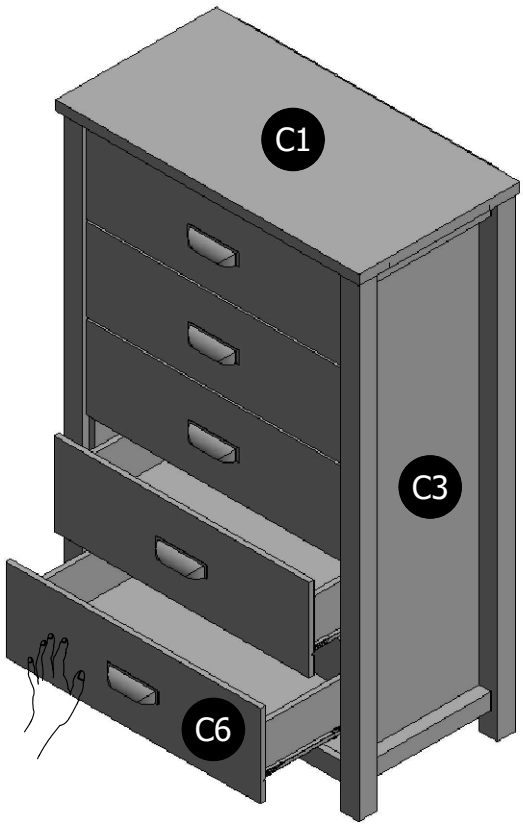

80210 CH ASSEMBLY INSTRUCTION

STEP 27






ASSEMBLY COMPLETED

WALL STUD

SAFETY BRACKET INSTRUCTIONS

Part Enclosed

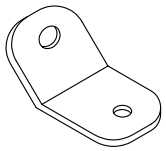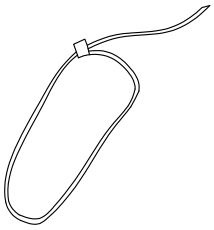A) Bracket	B) Safety Strap	C) 50mm Pan Head Screw	D) 17mm Pan Head Screw
			
2x	1x	1x	1x

IMPORTANT Tipping can injure young children. Use of this safety hardware is highly recommended. This safety hardware, when properly installed, can provide furniture protection against unexpected accidental tipping of furniture due to improper use.

Step 1


Attach a bracket to the wall board with the 2" screw provided.

It is recommended that you locate a wall stud behind the furniture unit. If the wall stud is not used, a suitable "Hollow-Wall Anchor Bolt" (not provided) should be used in lieu of the wall stud.

Position the wall bracket on the stud about 1" below the top of furniture piece.

Mark the position for the bracket placement on the wall and drill a pilot hole into the stud.

Attach the bracket to the back of the furniture with the 2" screws provided.

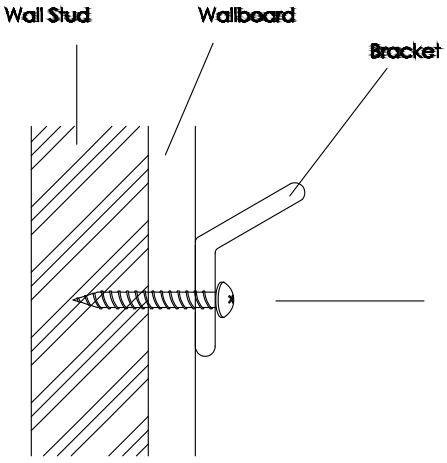

Step 2

To attach a bracket to the Furniture Frame below to top with the short screws provided.

Move the furniture piece temporaily to its final position to the wall.


Mark the location of the bracket on the back of the furniture in relation to the previously mounted wall bracket.

Move the furniture piece away from the wall mounted bracket and place the other bracket on the mark position on the back of the furniture piece.

Drill a pilot hole as shown in the figure or into the back furniture frame.

Caution: Mark sure you do not drill completely through the back of the furniture.

Attach the bracket to the back of the furniture with the 5/8" screws provided.

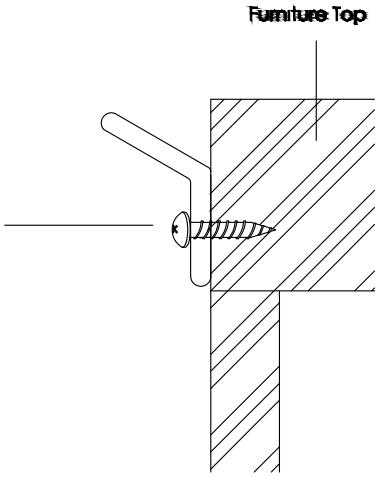

Step 3


To Attach the safety strap

Move the furniture back to its final position.

Thread the safety strap through both of the mounted brackets as shown in the illustration.

Tighten the strap unit snug.

Do not over tighten.

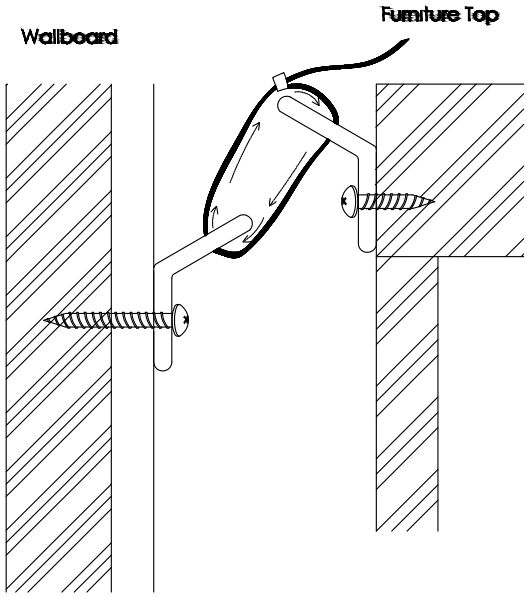

IMPORTANT Make sure the brackets are firmly attached to the wall stud and furniture frame and the safety strap is snug.

Warning: This product is not be a subsitute for proper parental supervision which is the only proper deterrent to prevent improper use of this unit. The manufacturer assumes no liability for improper installation or excessive loads placed on the safety straps, bracket or mounting screws. This hardware will not insure against tipping.

Note: For taller or heavie pieces of furniture, two safety brackets may be installed.

This sticker was sticked at one of the DRAWER LEFT PANEL(20).



Place the drawer which sticked a warning label in the top as shown.

