ASSEMBLING & INSTALLATION INSTRUCTIONS

The drawing shown may not exactly match the product enclosed. However, the installation instructions do apply to this product.

Plug-in type mounted

- **WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.**
- **ATTENTION! COUPER LE COURANT AU FUSIBLE OU UN DISJONCTEUR.**

ASSEMBLING THE FIXTURE (Fig.1)


1. Shut off the power at the circuit breaker box. Remove old fixture and the hardware from Junction Box. Carefully unpack your new fixture and lay out all the parts on a clear area. Take care not to lose any small parts necessary for installation.
2. Determine the fixture mounted position. Hold mounting plate(F) up against to the wall, while the mounting plate(F) is leveled horizontally, use a pencil to mark the holes located of mounting plate on the wall for drilling.
3. Drilling four holes in the wall, then loaded plastic anchors(E). Mounted the back plate(F) to the wall with the four wood screws(G). The side of the mounting plate marked **"GND**" must face out.
4. Follow wiring instructions carefully (**see fig.2**).
5. Attach the fixture body(C) onto the mounting plate, lock it securely with the mounting screw(D).
6. Determine the cord slot mounted position. Mounted the plastic anchors and inside cord slot(H,1PC) to the wall, lock them with the wood screws. Slide the fixture cord into the inside cord slot, then attach the outside cord slot(I,2PCS) snap onto the inside cord slot.
7. Raise the shade(A) to the lamp holder，then lock it securely with check ring (B) until tight.
8. Install the light bulb(not included) in accordance with the fixture's specifications. **NOTE: DO NOT EXCEED THE MAXIMUM WATTAGE RATING!**

FIG.2 IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug. As a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted. Do not alter the plug.

Your installation is now complete. Return power and test the fixture.

FIG.1

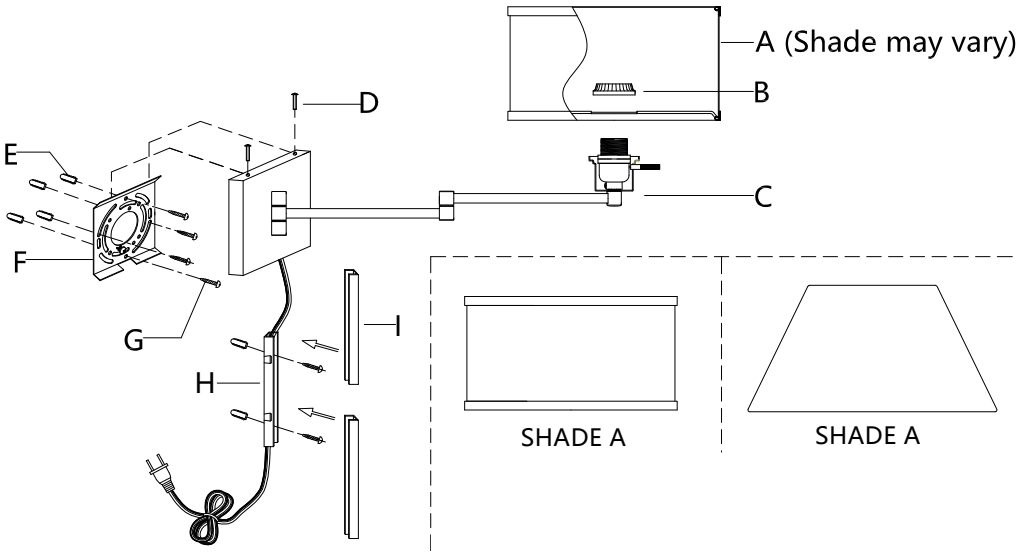

ASSEMBLING & INSTALLATION INSTRUCTIONS

The drawing shown may not exactly match the product enclosed. However, the installation instructions do apply to this product.

Hard wired mounted

- **WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.**
- **ATTENTION! COUPER LE COURANT AU FUSIBLE OU UN DISJONCTEUR.**

ASSEMBLING THE FIXTURE (Fig.1)

1. Shut off the power at the circuit breaker box. Remove old fixture and the hardware from Junction Box.
2. Carefully unpack your new fixture and lay out all the parts on a clear area. Take care not to lose any small parts necessary for installation.
3. Attach the mounting plate to the junction box, while the mounting plate is leveled horizontally, then using two box screws until tight as shown. The side of the mounting plate marked “GND” must face out. The junction box is not included.
4. Guide supply wires through hole in center of mounting plate.
5. **IF YOU NOT NEED LAMP’S POLARIZED PLUG, PLEASE RESERVE 8-INCH CORD AND CUT THE REST OF POWER CORD, THEN FOLLOW WIRING INSTRUCTIONS CAREFULLY. Fig.2.**
6. Attach the fixture body(C) onto the mounting plate, lock it securely with the mounting screw(D).
7. Raise the shade(A) to the lamp holder, then lock it securely with check ring (B) until tight.
8. Install the light bulb(not included) in accordance with the fixture’s specifications. **NOTE: DO NOT EXCEED THE MAXIMUM WATTAGE RATING!**

CONNECTING THE WIRES (Fig.2)

1. Connect the electrical wires as follows. Connect the Black wire from the fixture to the black house (hot) Wire. Connect the white wire from the fixture to the white (neutral) house wire. Make sure all wire nuts are secured. You may wrap the connections with electrical tape. If your junction box has a ground wires (green or bare copper) connect fixture’s ground wire to it. Otherwise attach the bare copper fixture wire to the green ground screw on the mounting plate.
2. Tuck the wire connections neatly into the wall junction box.

Your installation is now complete. Return power to the junction box and test the fixture.

FIG.1

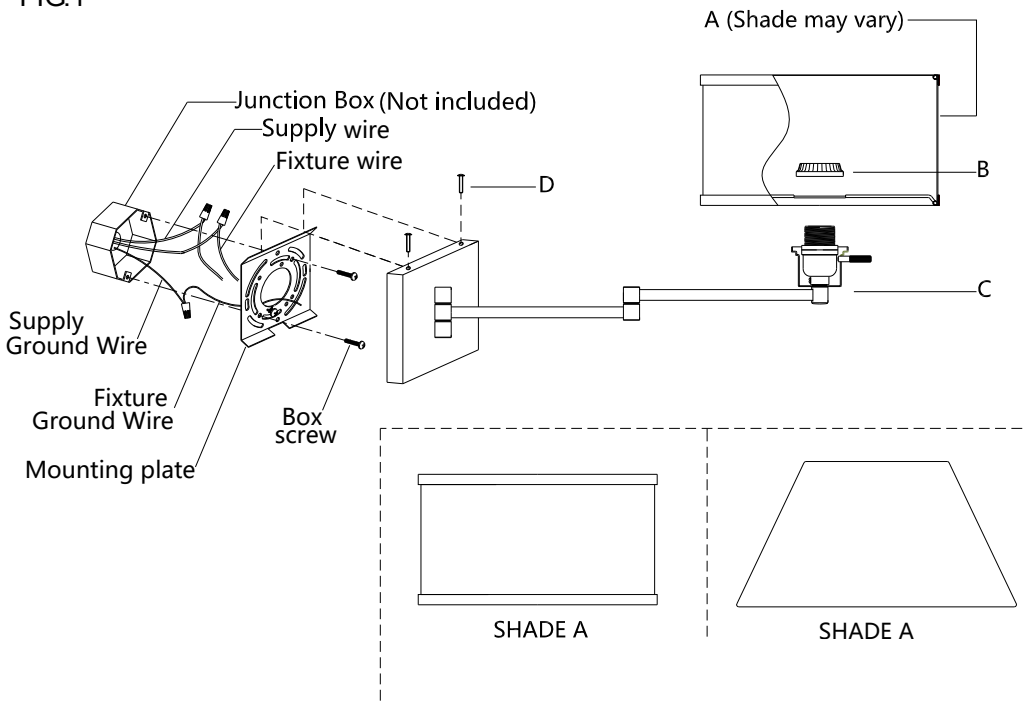


FIG.2

