

Product Name :	2-Door and Open Storage 59.1-Inch Wide Sideboard Server Cabinet with Rubberwood Legs
SKU # :	WHIF2144

Thank you for purchasing this LuxenHöme product.










This product has been manufactured with the highest standards of safety and quality.

PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY.

Unpack all parts from the packaging inside the carton to ensure there are no missing or damaged parts. Do not attempt to assemble or use the product if any parts are missing or damaged.






CARTON CONTENTS:

Hardware -

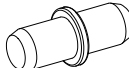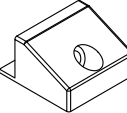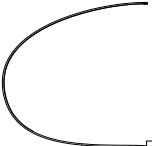(A1) x 10 + 2	(A2) x 10 + 2	(A3) x 10 + 2	(B) x 24 + 3	(C) x 16 + 2
				
(D) x 1	(E1) x 4	(E2) x 4	(F) x 16 + 2	(G) x 7 + 2
				
(H) x 4 + 2	(I) x 2	(J) x 8 + 2	(K1) x 8 + 2	(K2) x 8 + 2
				
(L) x 90 + 7	(M1) x 4	(M2) x 2	(M3) x 2	(M4) x 2
				
(M5) x 2				
				



Product Name :	2-Door and Open Storage 59.1-Inch Wide Sideboard Server Cabinet with Rubberwood Legs
SKU # :	WHIF2144

Panels -

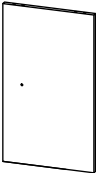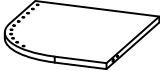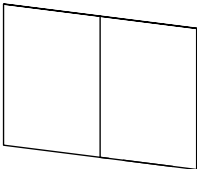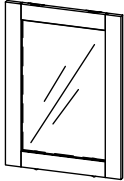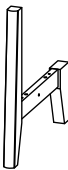① x 1	② x 1	③ x 1	④ x 1	⑤ x 1
				
⑥ x 4	⑦ x 1	⑧ x 1	⑨ x 1	⑩ x 1
				
⑪ x 2	⑫ x 44	⑬ x 2	⑭ x 1	⑮ x 2
				

Product Name :	2-Door and Open Storage 59.1-Inch Wide Sideboard Server Cabinet with Rubberwood Legs
SKU # :	WHIF2144

Panels -

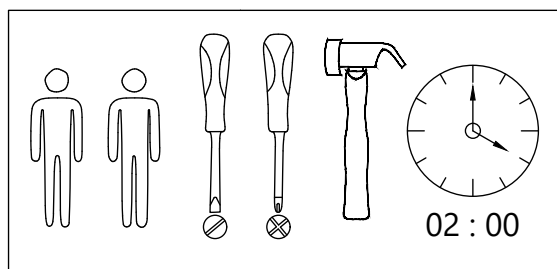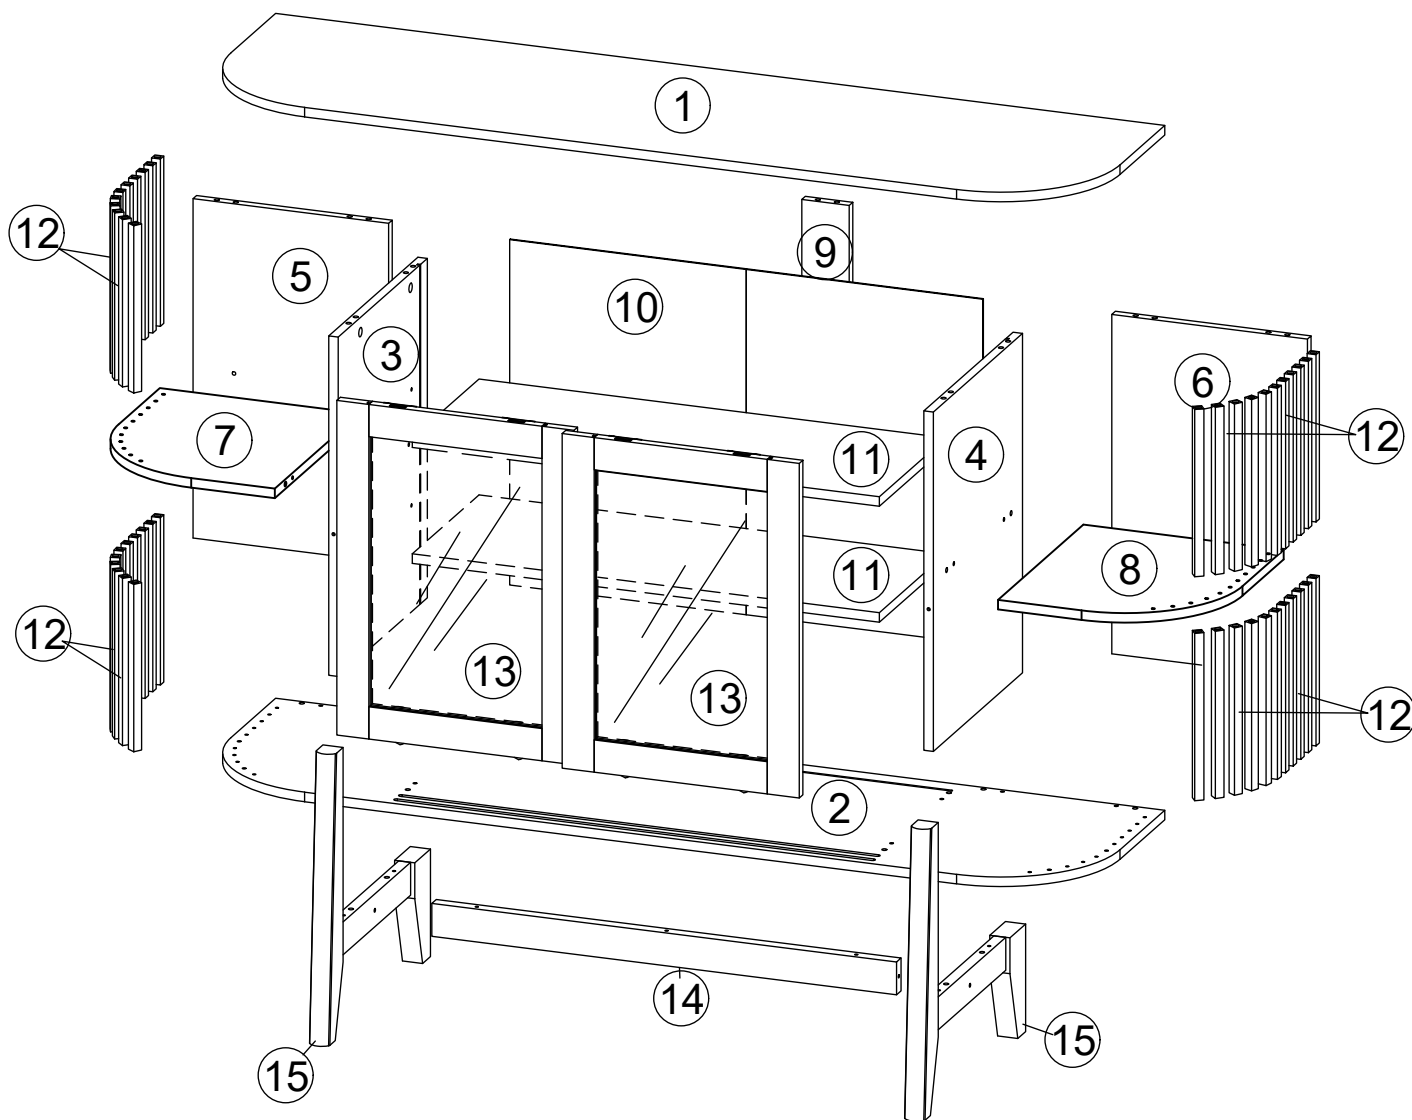


Tools required for assembly: Philips screwdriver, flathead screwdriver, and hammer (if using power tools, use with care).

Product Name :	2-Door and Open Storage 59.1-Inch Wide Sideboard Server Cabinet with Rubberwood Legs
SKU # :	WHIF2144

ASSEMBLY INSTRUCTIONS:

Step 1: Install and tighten hardware A2 until the shoulder is flush with panels 1.


Insert hardware B to panels 3, 4, 5 and 6.




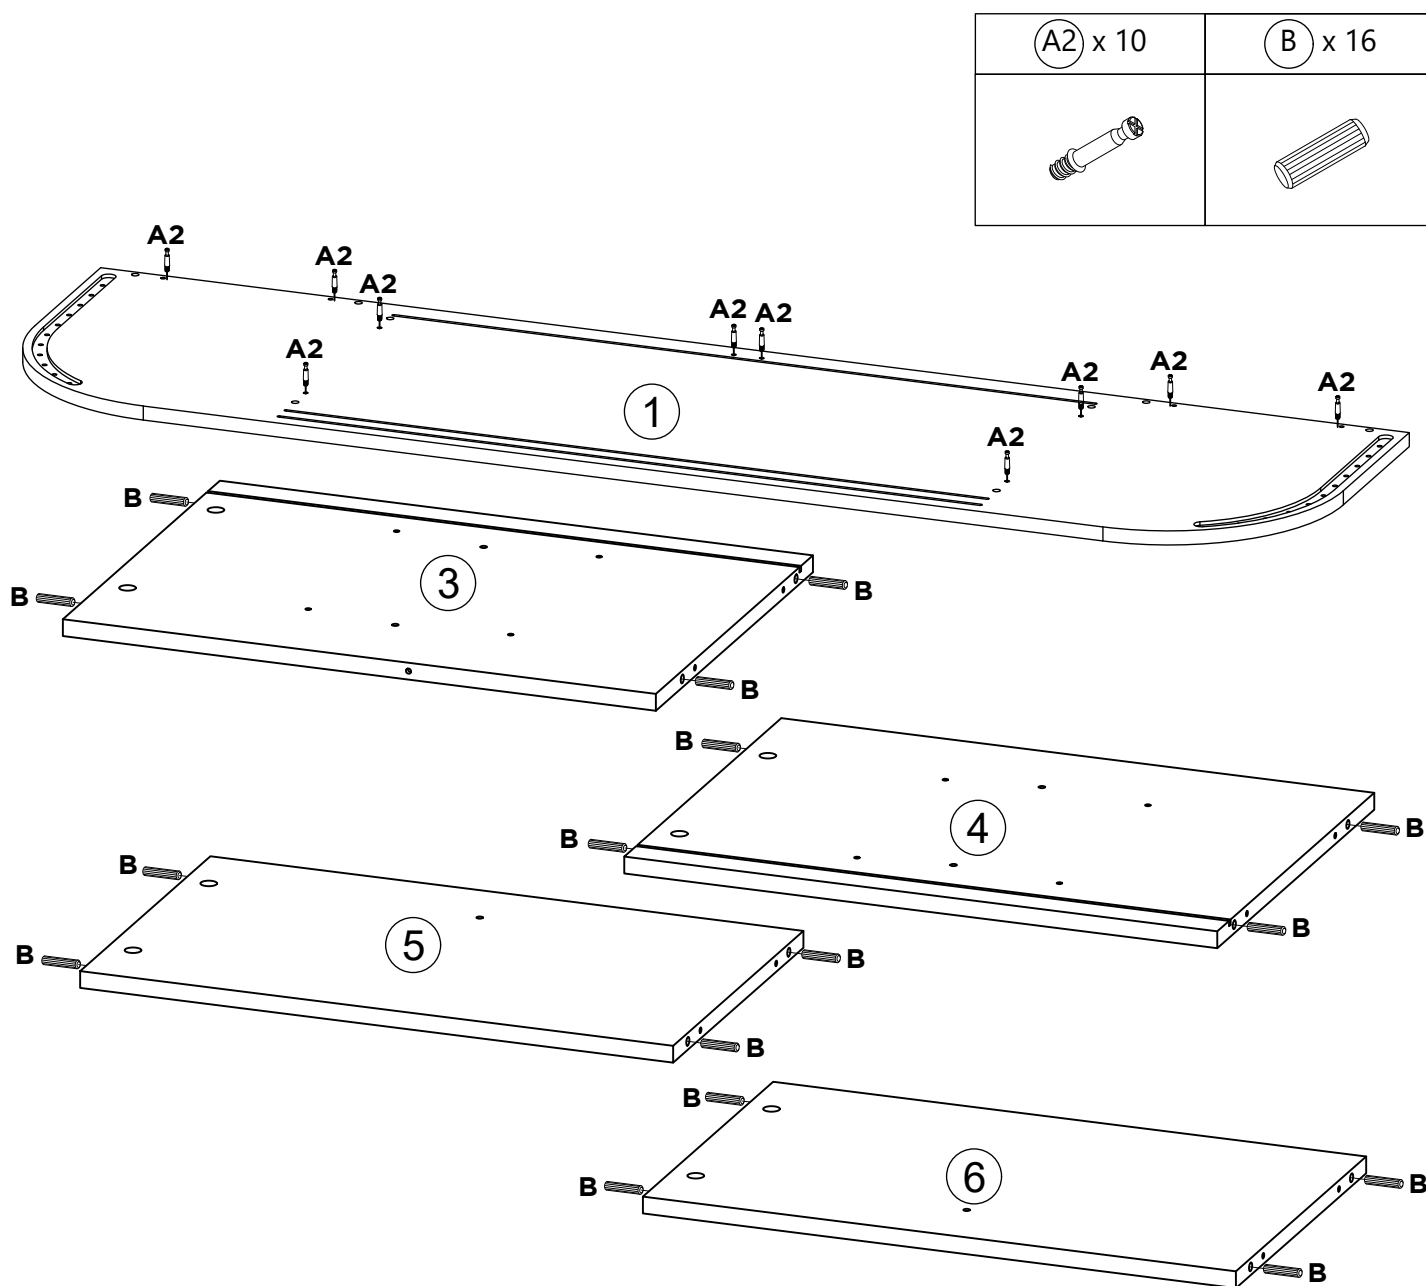


Warning: To avoid scratch, make sure to put the panel on clean and soft surface.

Product Name :	2-Door and Open Storage 59.1-Inch Wide Sideboard Server Cabinet with Rubberwood Legs
SKU # :	WHIF2144

Step 2: Insert hardware B to panels 7, 8 and 15.
Insert hardware L to panels 12 and 15.



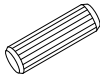
(B) x 8	(L) x 90
	

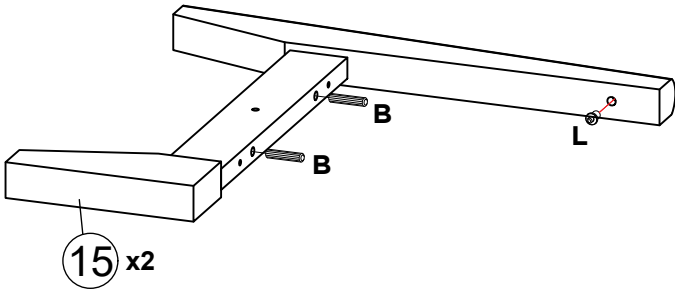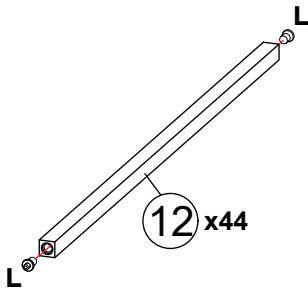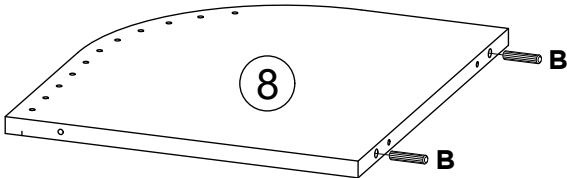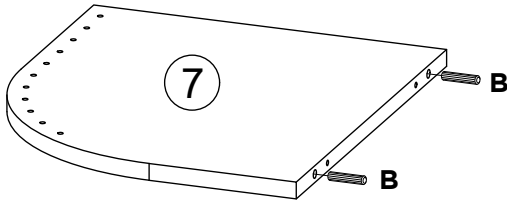

Warning: To avoid scratch, make sure to put the panel on clean and soft surface.

Product Name :	2-Door and Open Storage 59.1-Inch Wide Sideboard Server Cabinet with Rubberwood Legs
SKU # :	WHIF2144



Step 3: Connect panel 7 to panel 3 and panel 8 to panel 4 by using hardware C.

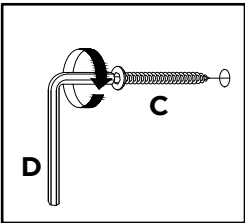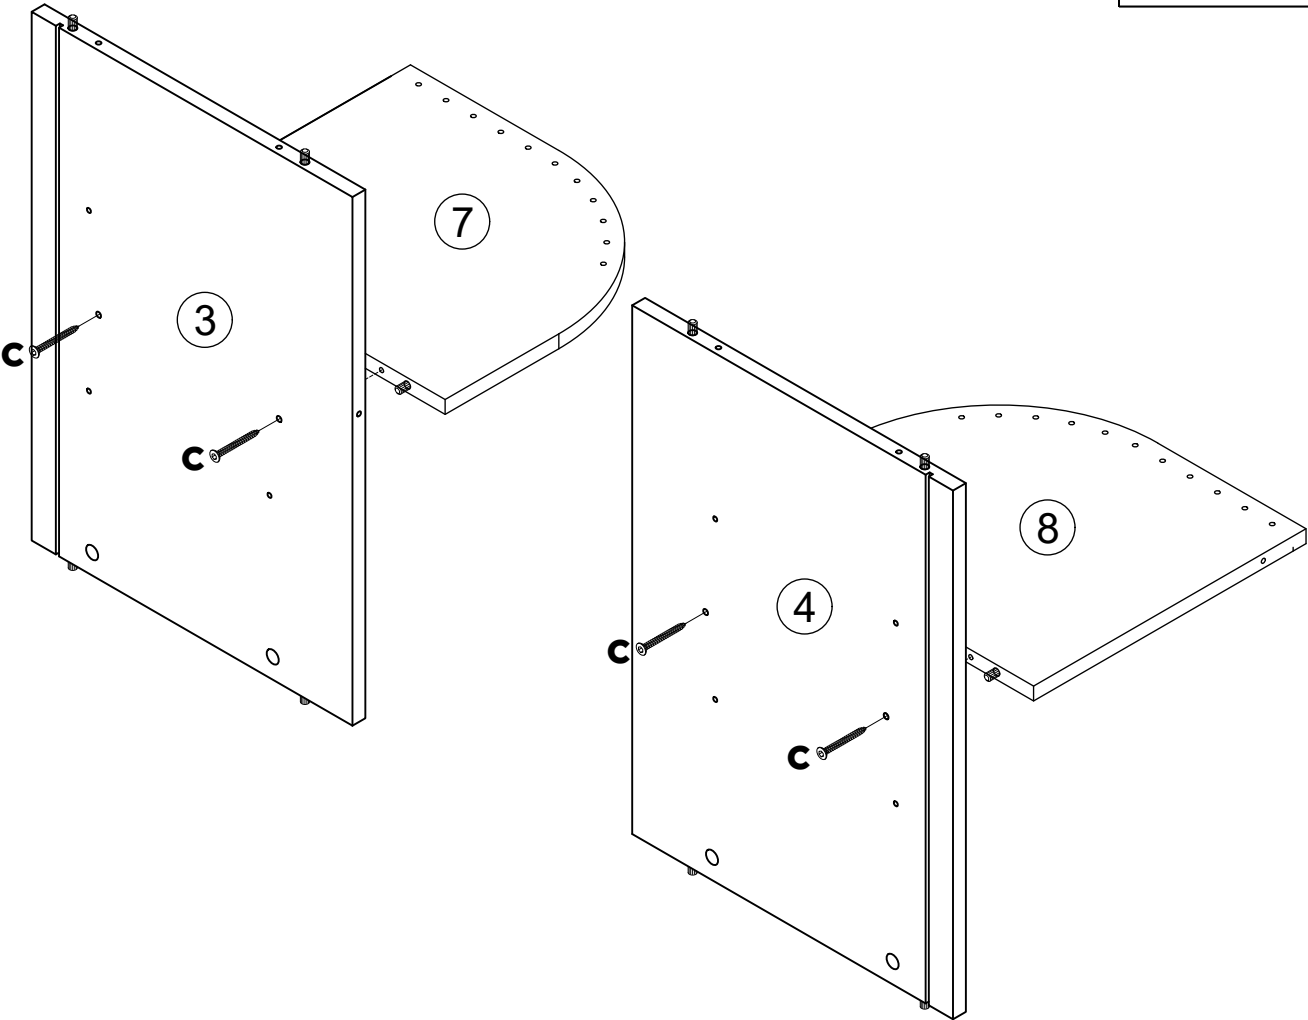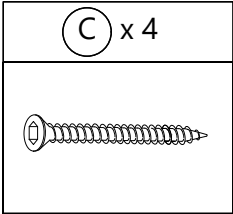

Product Name :	2-Door and Open Storage 59.1-Inch Wide Sideboard Server Cabinet with Rubberwood Legs
SKU # :	WHIF2144


Step 4: Connect panel 3, 4, 5, 6 and 9 to panel 1 by using hardware A1.

Attach hardware A3 on top of hardware A1.

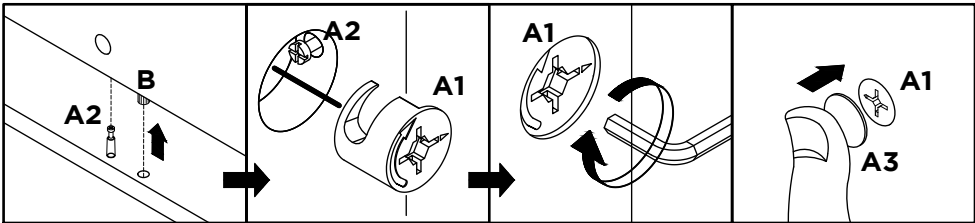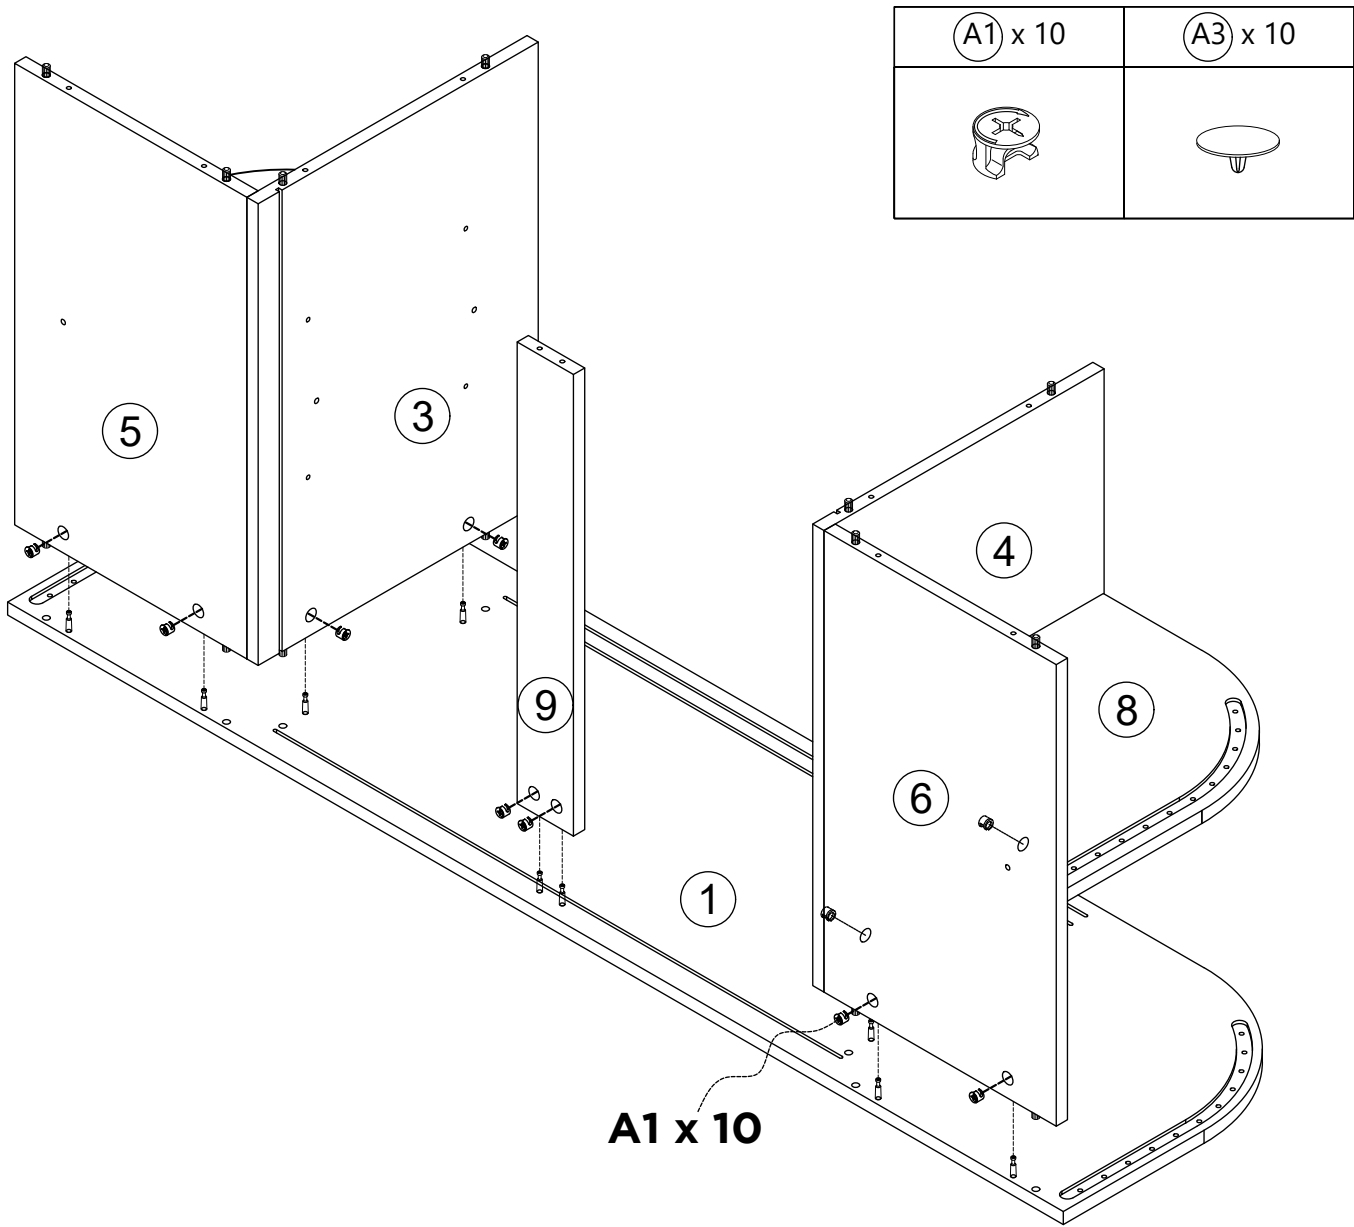


Product Name :	2-Door and Open Storage 59.1-Inch Wide Sideboard Server Cabinet with Rubberwood Legs
SKU # :	WHIF2144

Step 5: Connect panel 7 to panel 5 and panel 8 to panel 6 by using hardware C.

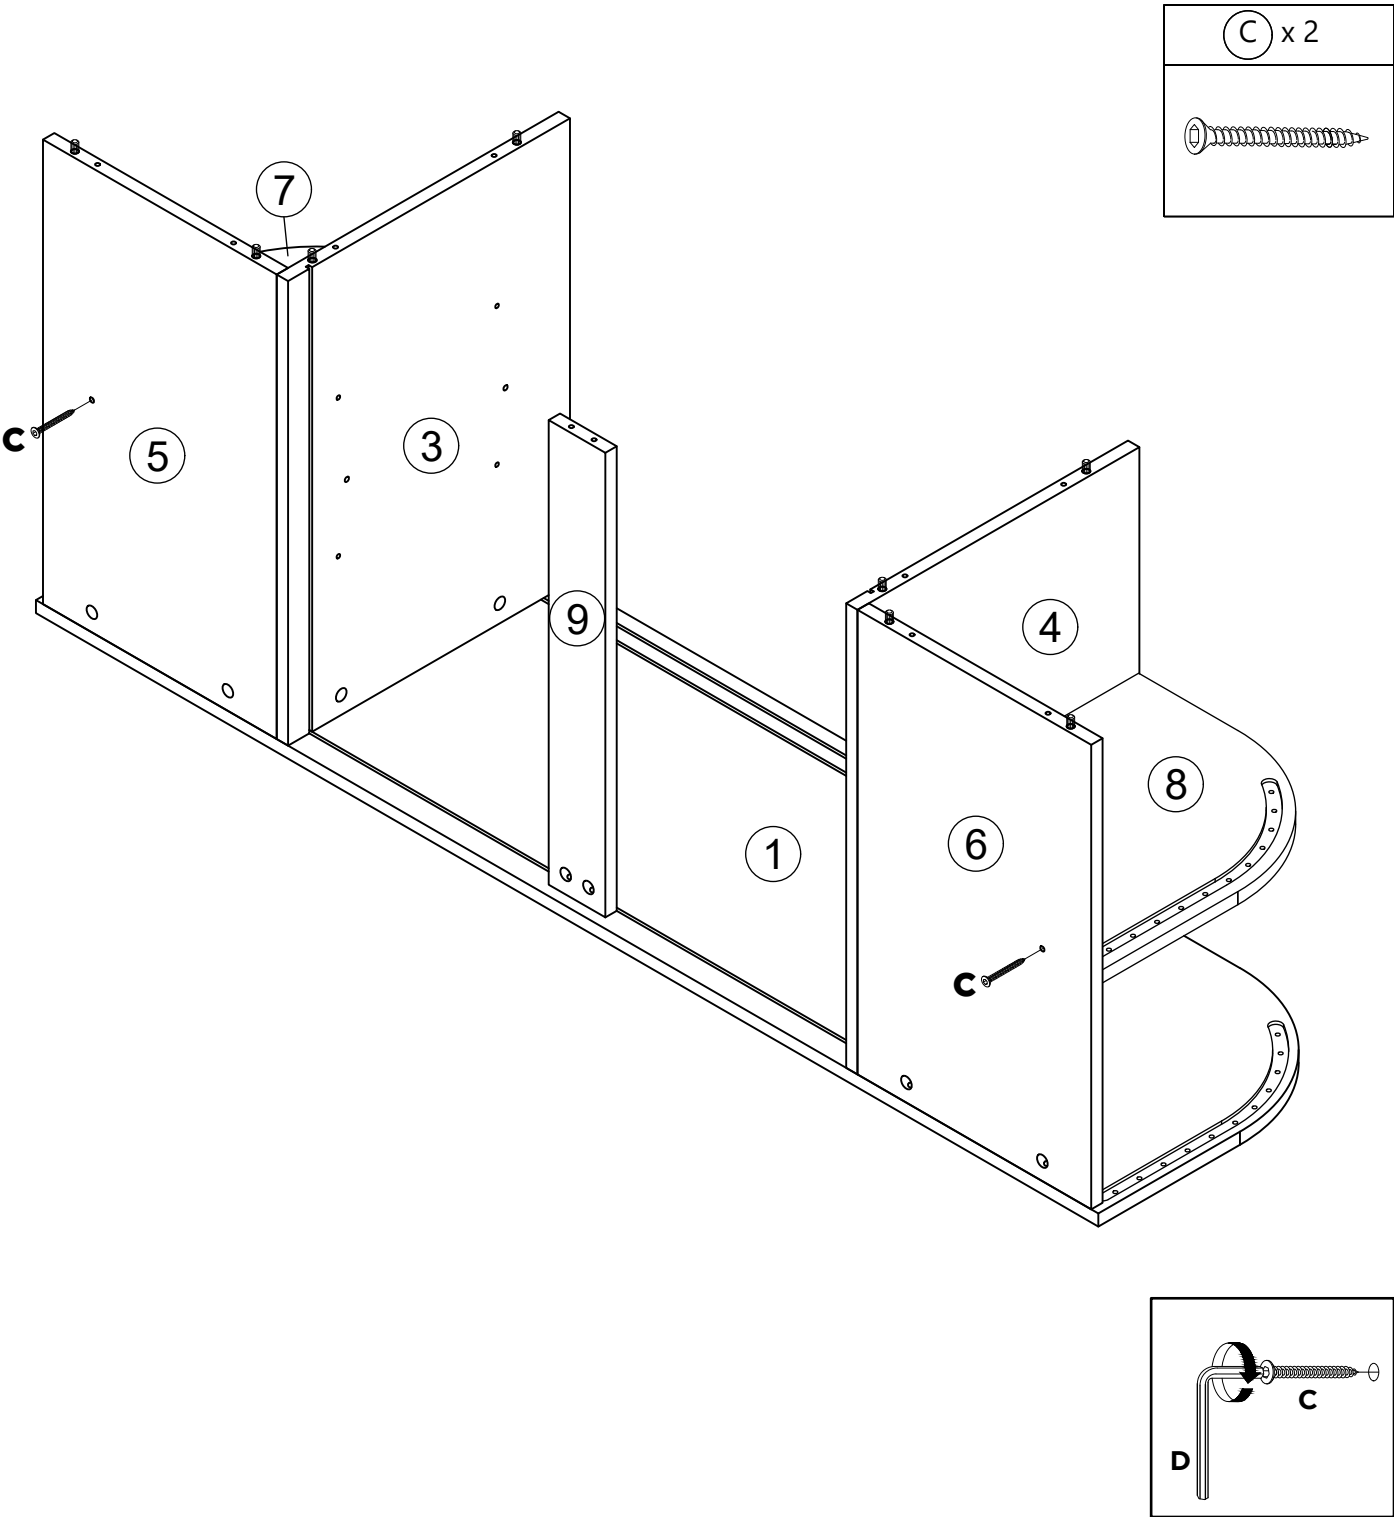



Product Name :	2-Door and Open Storage 59.1-Inch Wide Sideboard Server Cabinet with Rubberwood Legs
SKU # :	WHIF2144

Step 6: Insert panel 10 along the slot at panel 1, 3 and 4.

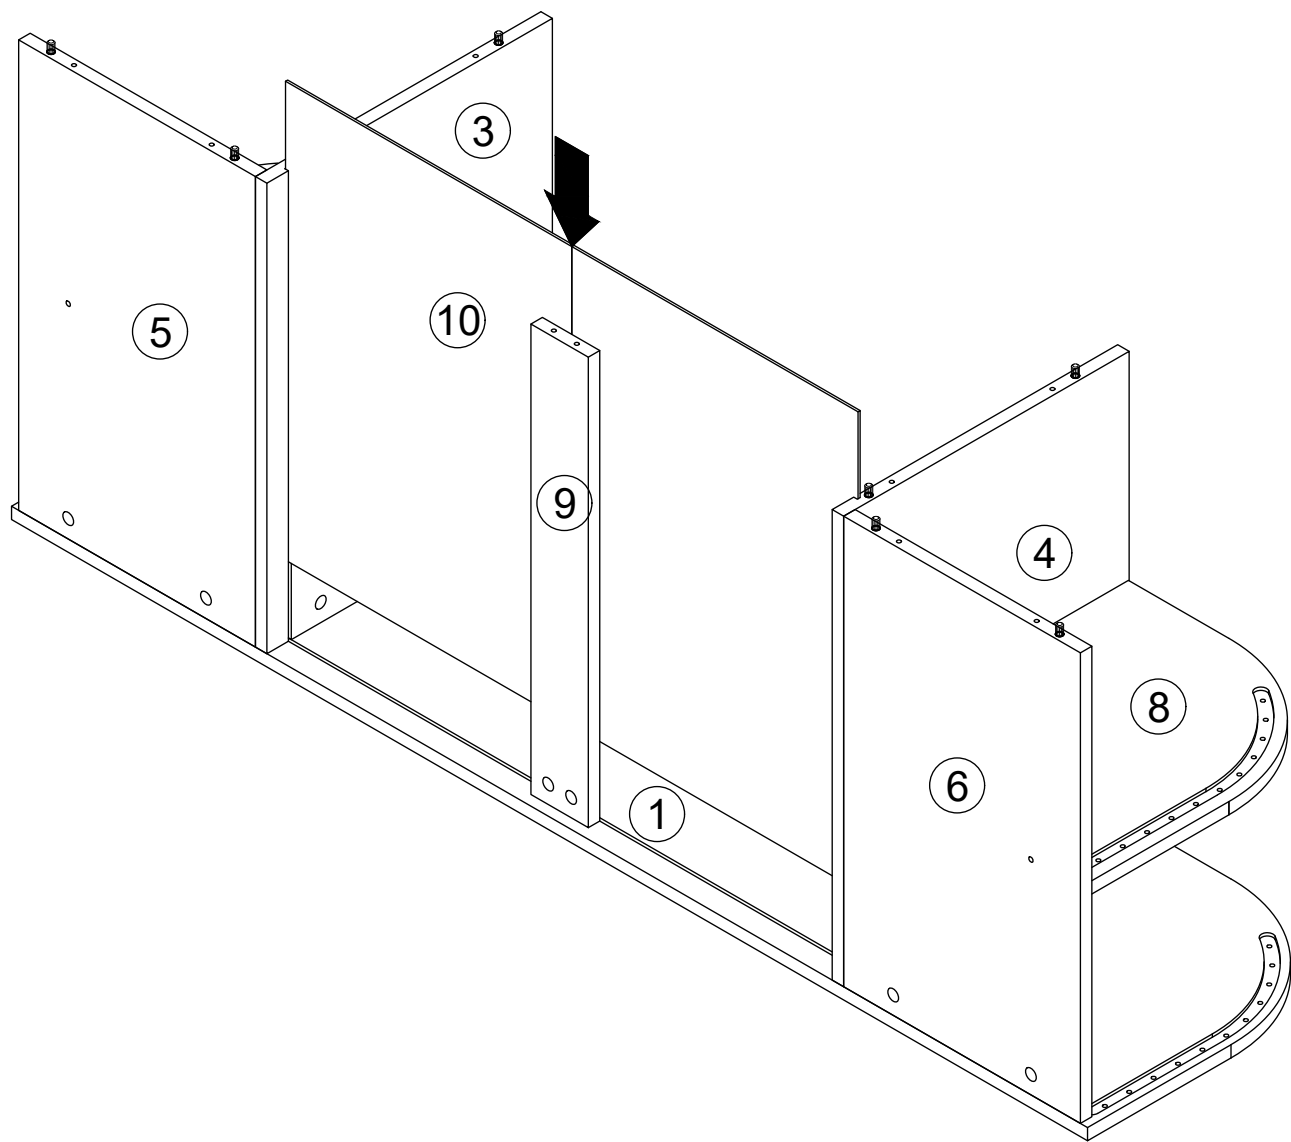


Product Name :	2-Door and Open Storage 59.1-Inch Wide Sideboard Server Cabinet with Rubberwood Legs
SKU # :	WHIF2144

Step 7: Connect panel 2 to panel 3, 4, 5, 6 and 9 by using hardware C.

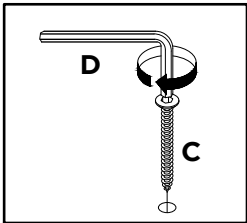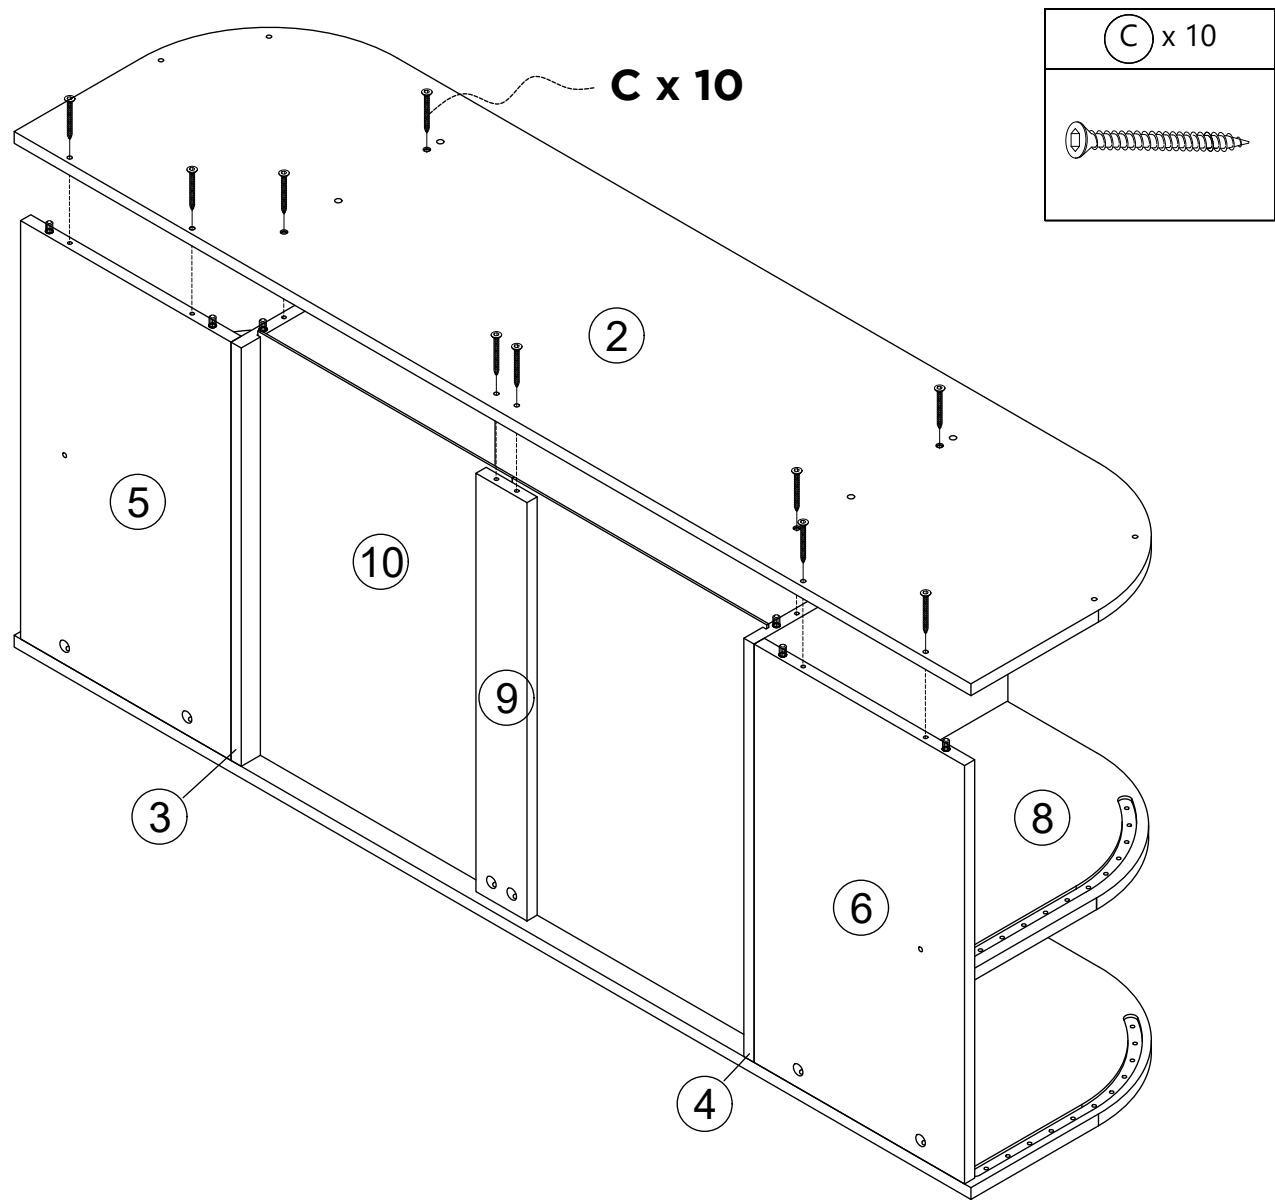


Product Name :	2-Door and Open Storage 59.1-Inch Wide Sideboard Server Cabinet with Rubberwood Legs
SKU # :	WHIF2144

Step 8: Insert hardware K1 into slot at panel 1, 2, 3 and 4.
Assemble hardware K1 by using hardware K2.


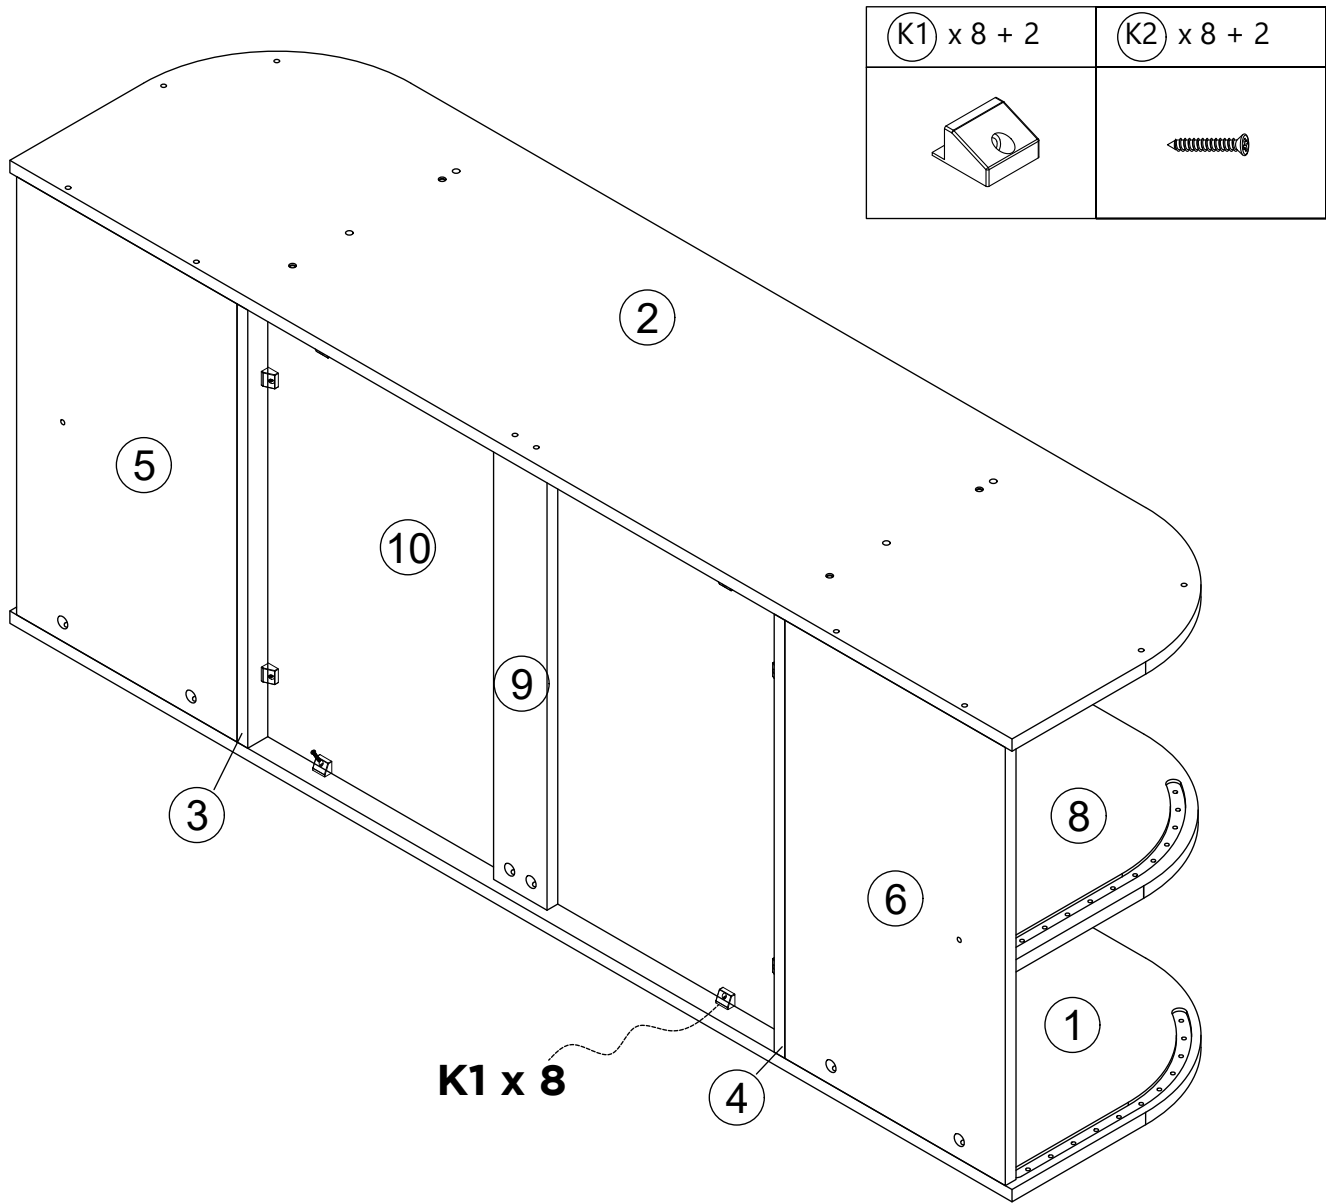


Notes:
Please make sure the backboard is at right angle
before installing hardware K , MUST install
hardware K to strengthen product stability

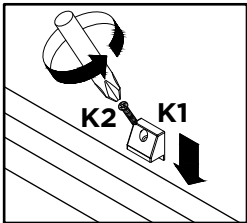

Product Name :	2-Door and Open Storage 59.1-Inch Wide Sideboard Server Cabinet with Rubberwood Legs
SKU # :	WHIF2144



Step 9: Assemble parts 12 into between panel 1 and 7, panel 1 and 8, panel 2 and 7, panel 2 and 8 by pressing the attached hardware L into the groove on panel 1, 2, 7 and 8.

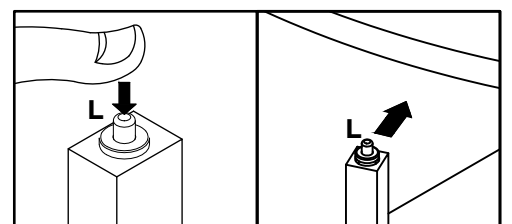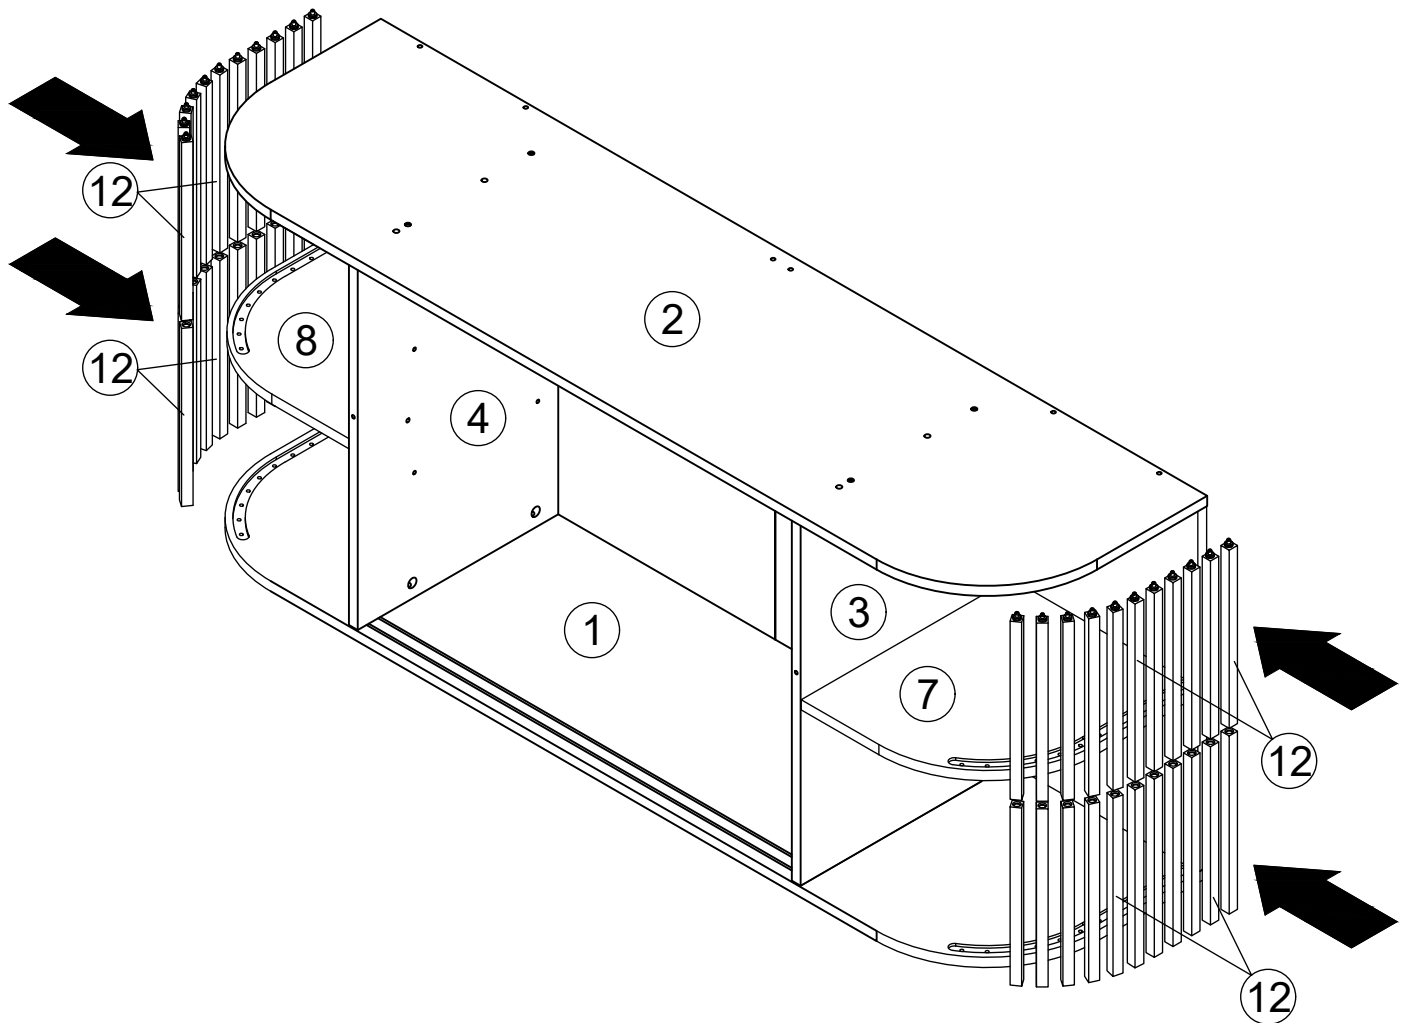

Product Name :	2-Door and Open Storage 59.1-Inch Wide Sideboard Server Cabinet with Rubberwood Legs
SKU # :	WHIF2144


Step 10: Assemble part 15 onto panel 3 and 4 by pressing the attached hardware L into the slot.

Fix the assembled parts 15 to panel 2 by using hardware G.

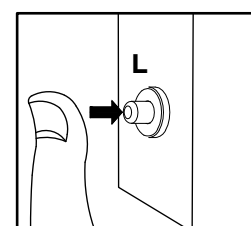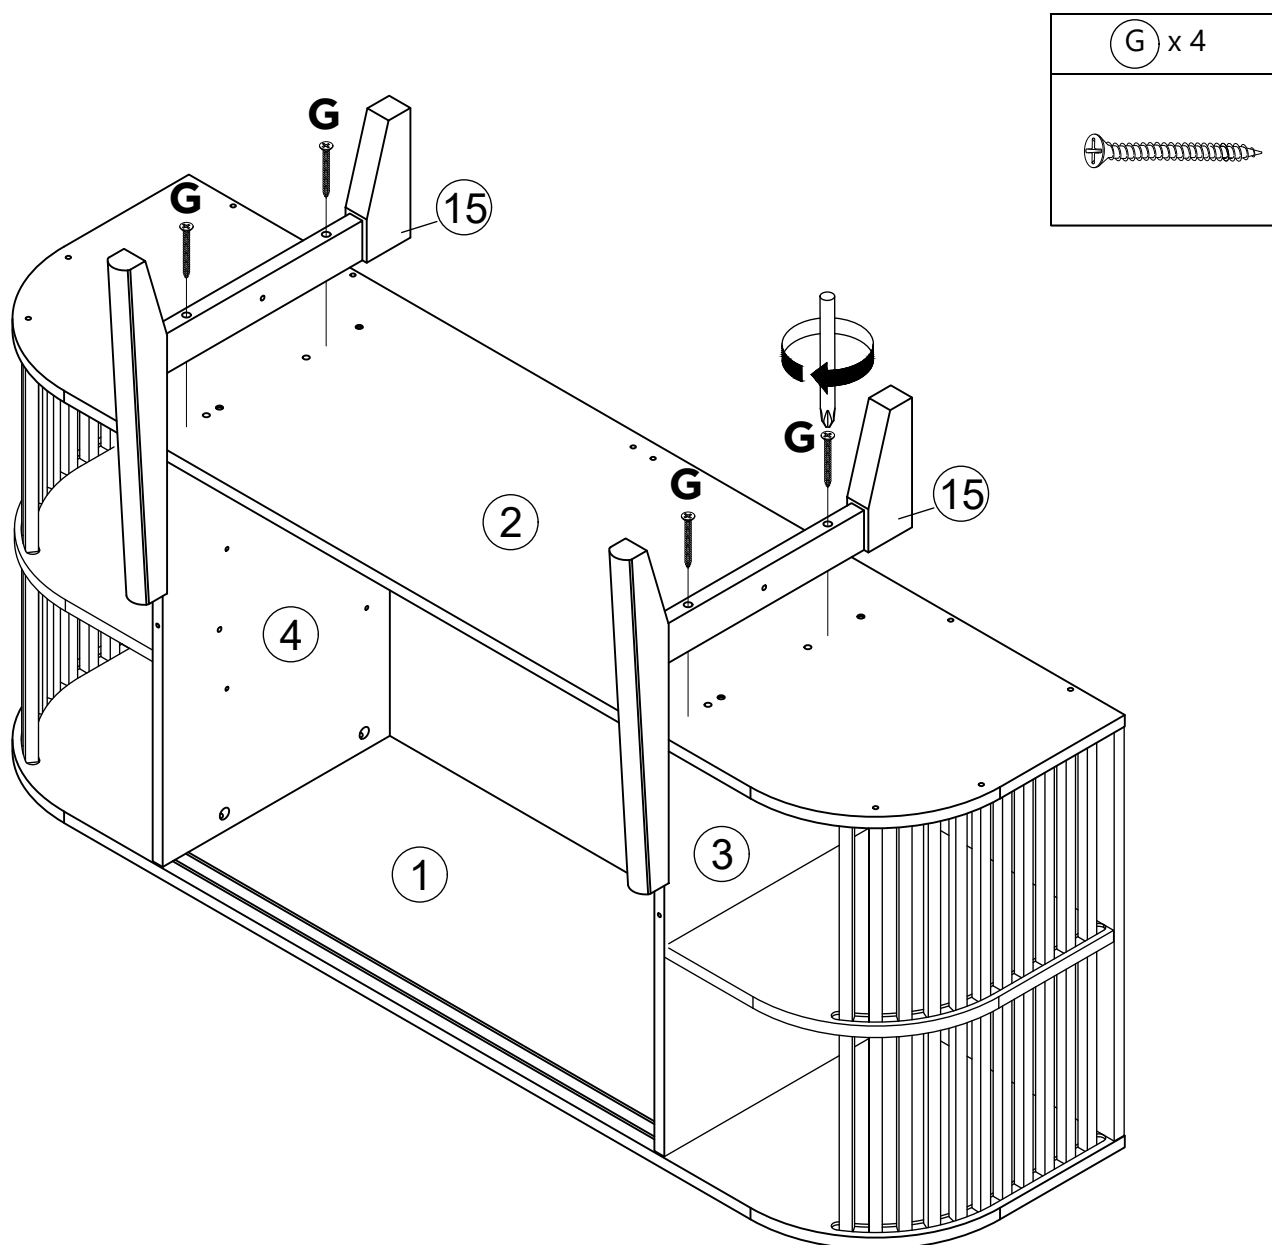


Product Name :	2-Door and Open Storage 59.1-Inch Wide Sideboard Server Cabinet with Rubberwood Legs
SKU # :	WHIF2144

Step 11: Connect panel 14 to panel 2 by using hardware G.

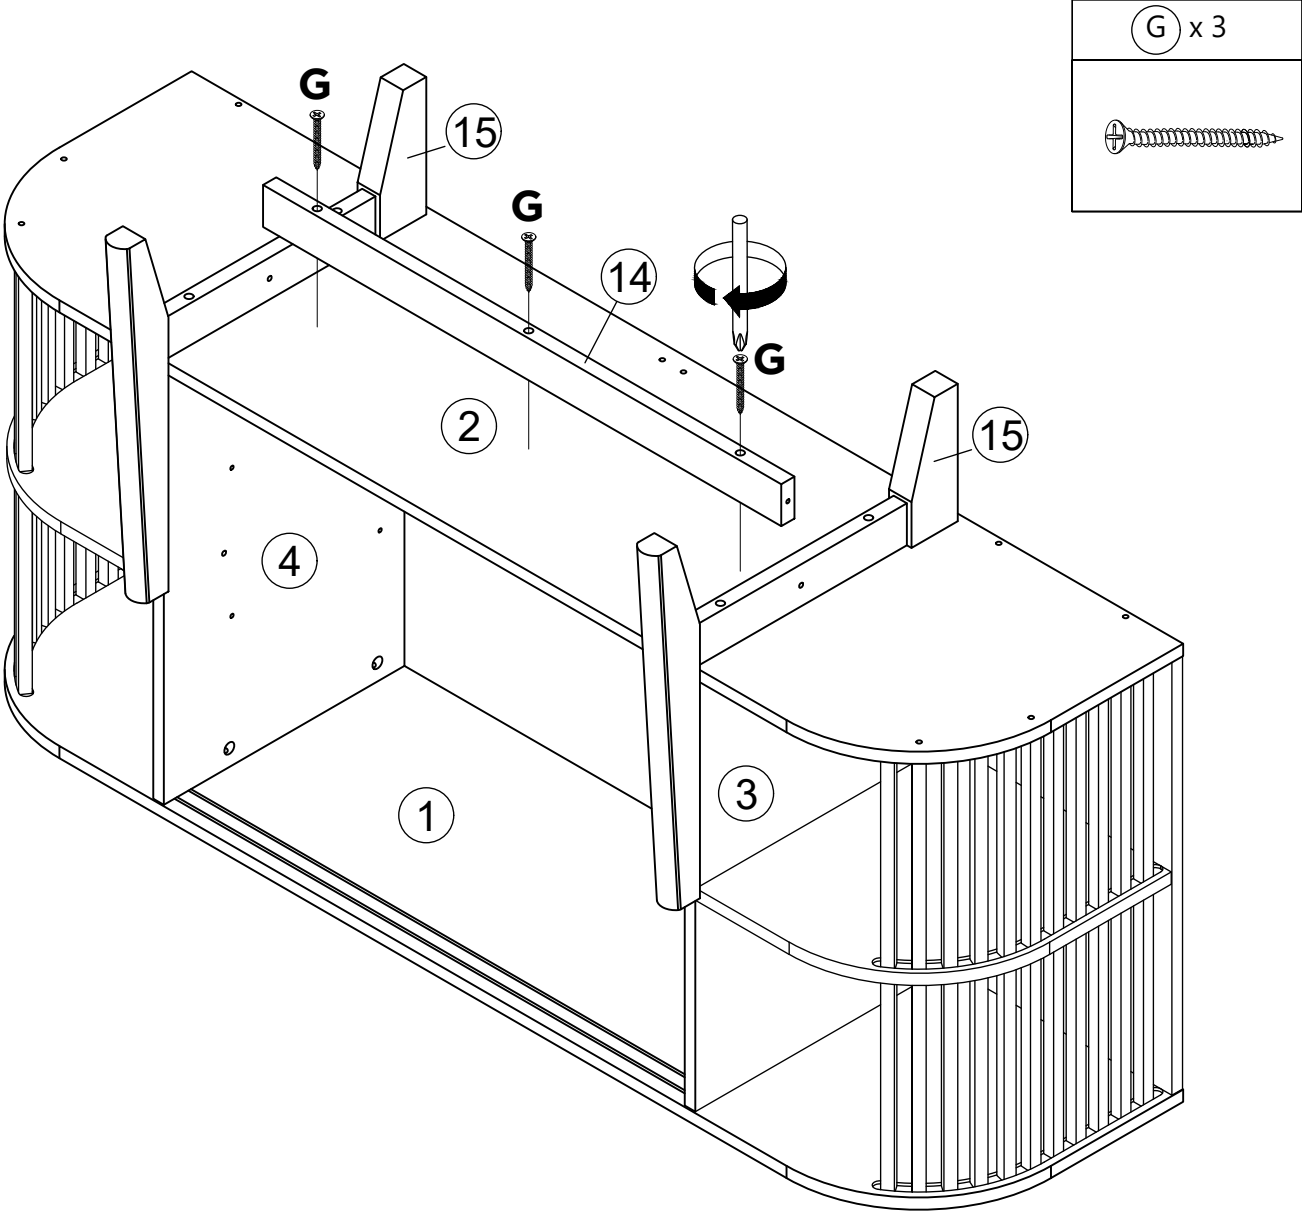




Product Name :	2-Door and Open Storage 59.1-Inch Wide Sideboard Server Cabinet with Rubberwood Legs
SKU # :	WHIF2144

Step 12: Fix panel 14 to parts 15 by using hardware I.

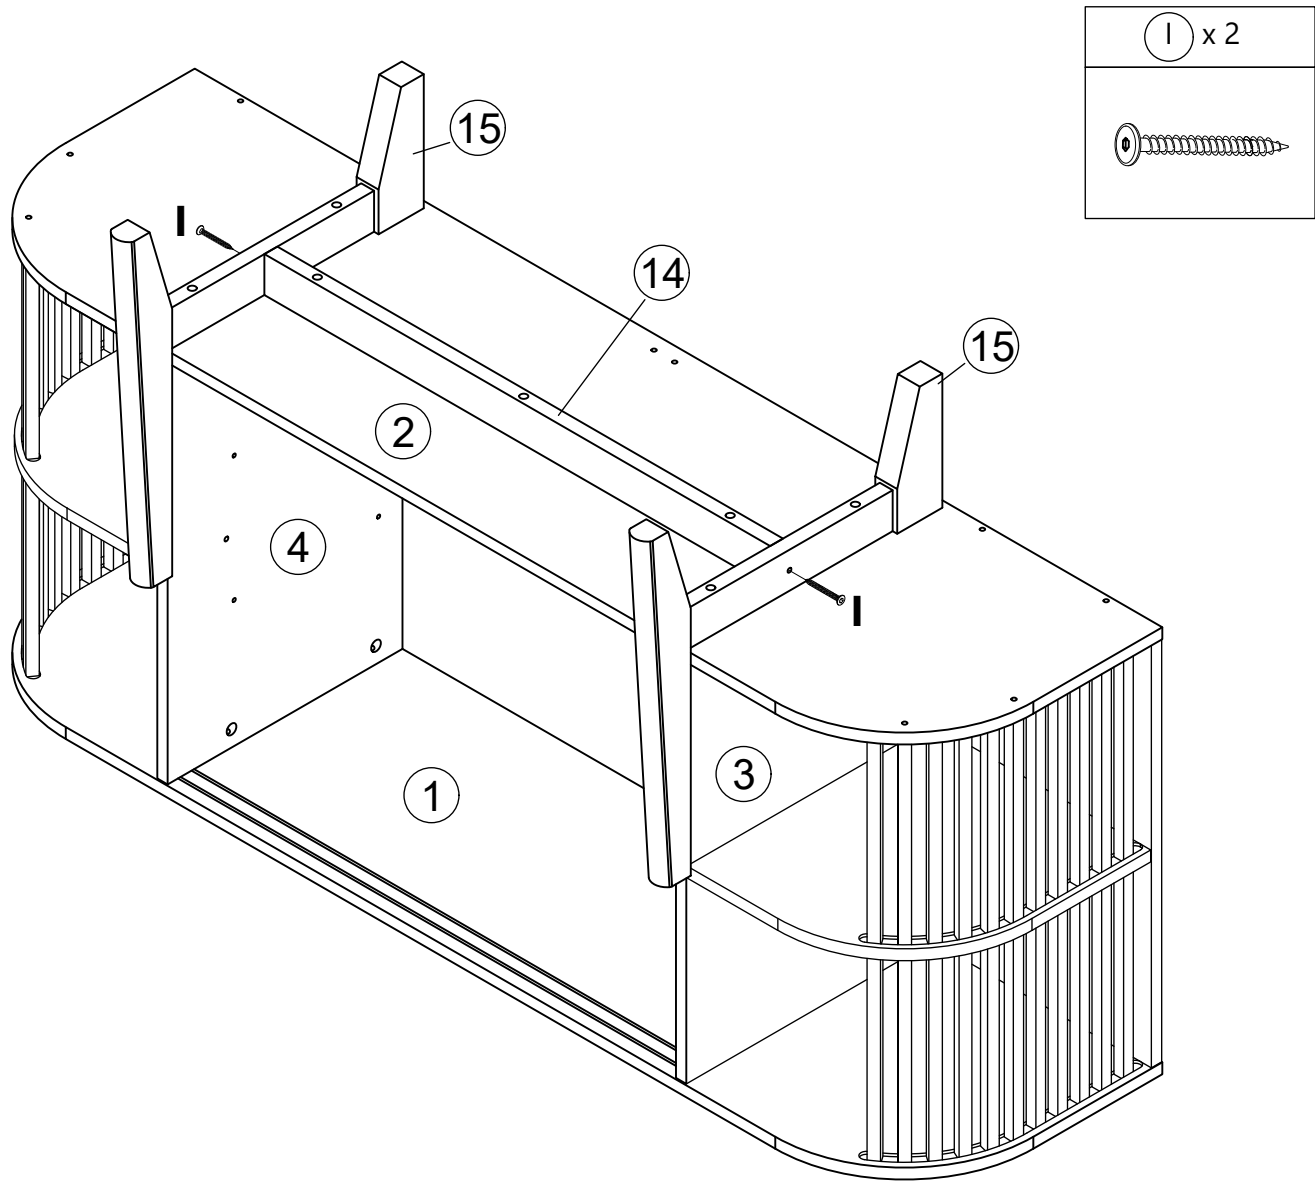




Product Name :	2-Door and Open Storage 59.1-Inch Wide Sideboard Server Cabinet with Rubberwood Legs
SKU # :	WHIF2144

Step 13: Hit hardware H into bottom of panel 15.

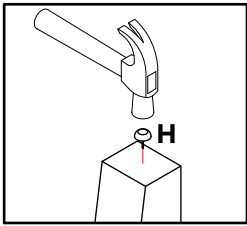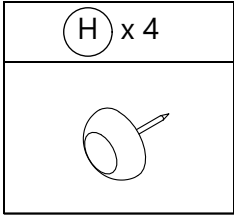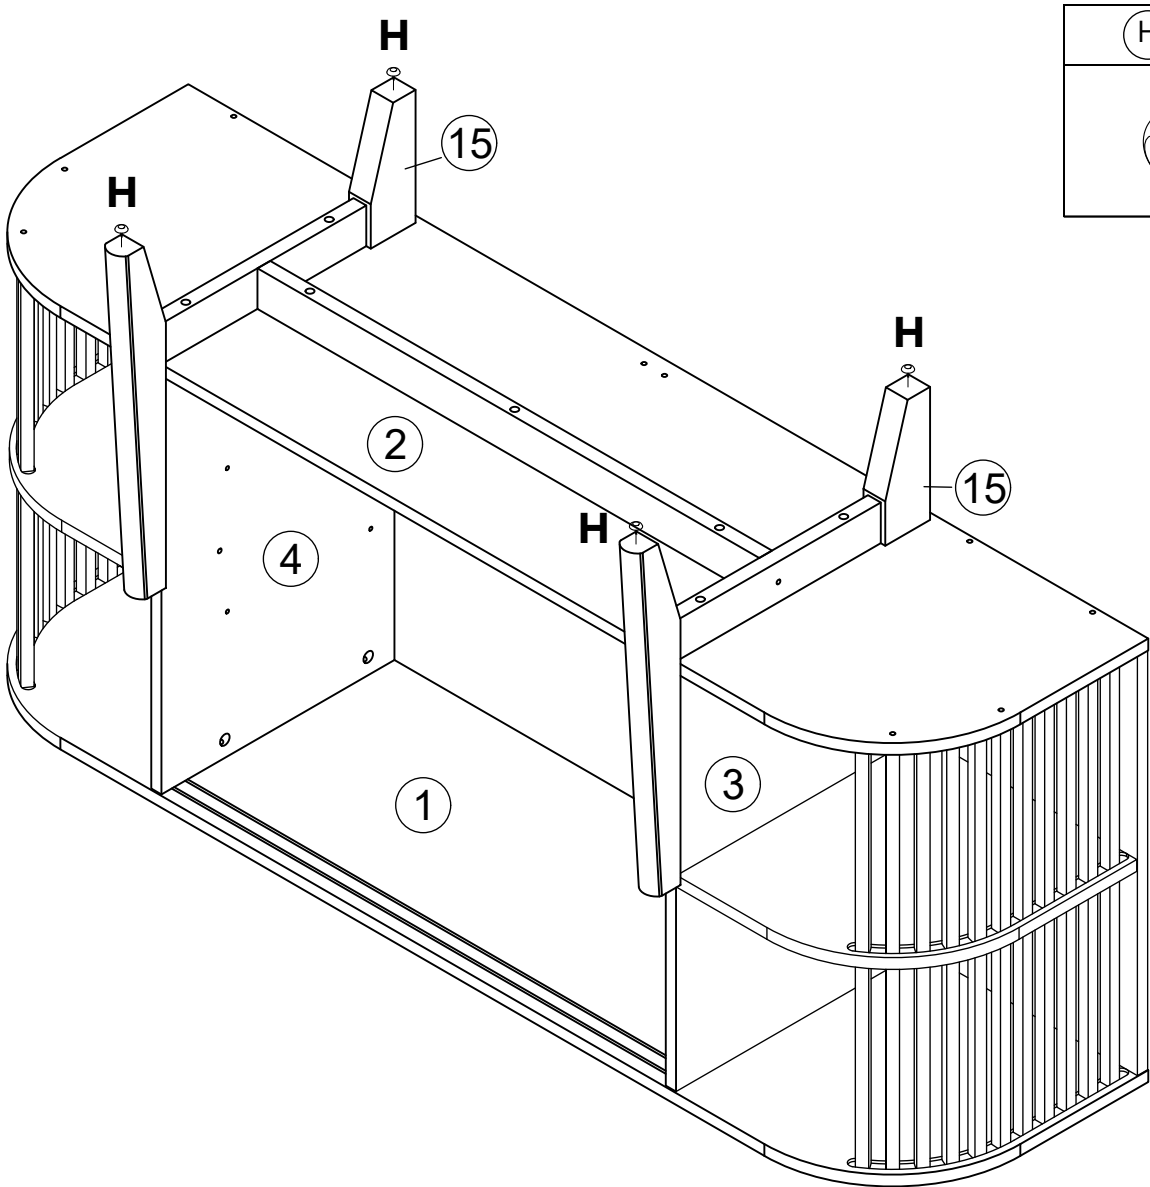


Product Name :	2-Door and Open Storage 59.1-Inch Wide Sideboard Server Cabinet with Rubberwood Legs
SKU # :	WHIF2144

Step 14: Fix hardware J onto panel 3 and 4.

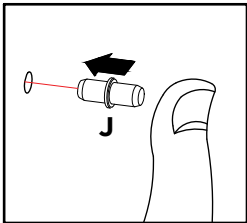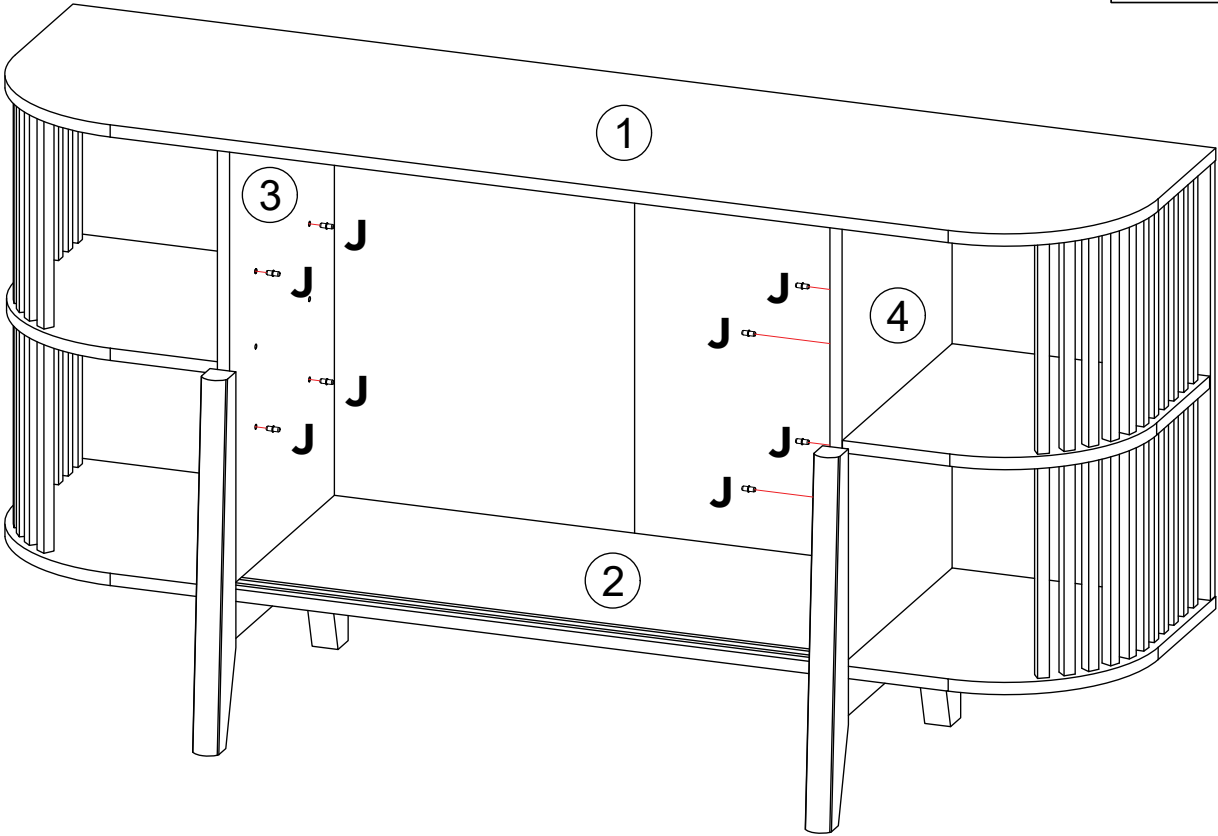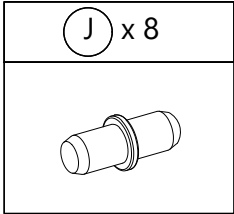



Product Name :	2-Door and Open Storage 59.1-Inch Wide Sideboard Server Cabinet with Rubberwood Legs
SKU # :	WHIF2144




Step 15: Assemble panel 11 into between panel 3 and 4.

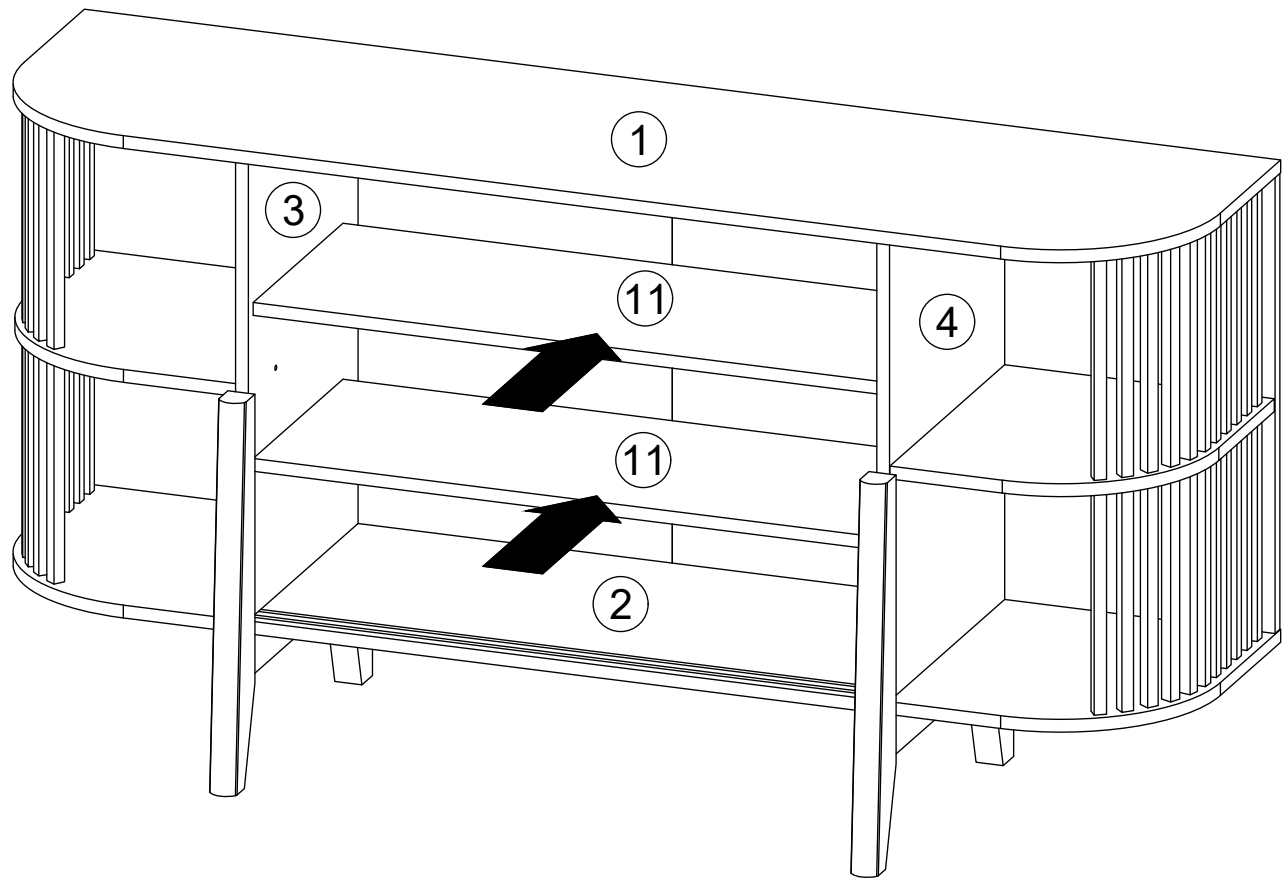

Product Name :	2-Door and Open Storage 59.1-Inch Wide Sideboard Server Cabinet with Rubberwood Legs
SKU # :	WHIF2144

Step 16: Assemble hardware E1 and E2 to panel 13 with hardware F.


(F) x 16	(E1) x 4	(E2) x 4
		

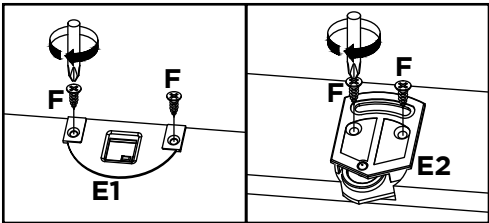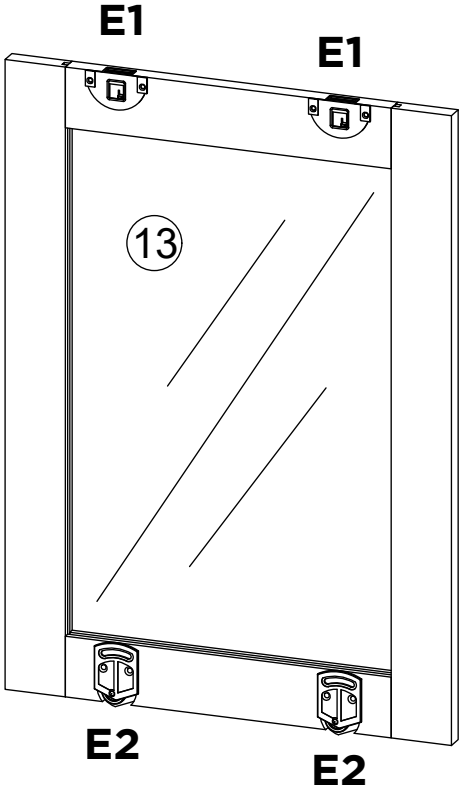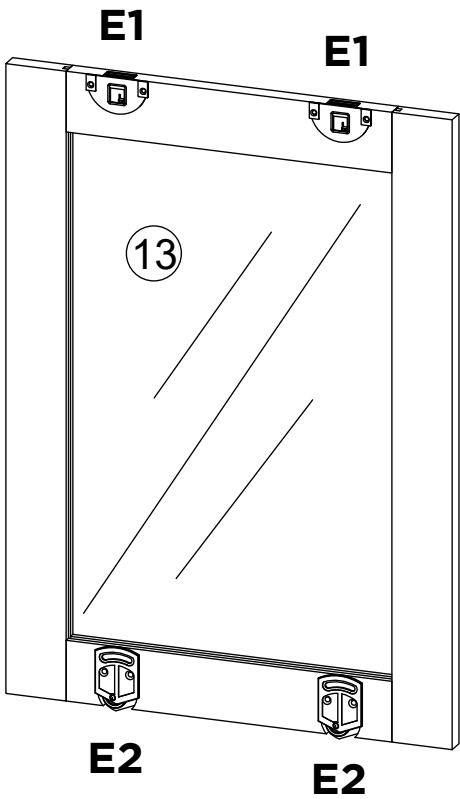

Product Name :	2-Door and Open Storage 59.1-Inch Wide Sideboard Server Cabinet with Rubberwood Legs
SKU # :	WHIF2144

Step 17: Put panel 13 in place by inserting attached hardware E2 on panel 13 into groove at panel 2.



Press the pin on hardware E1 and insert it into groove at panel 1.

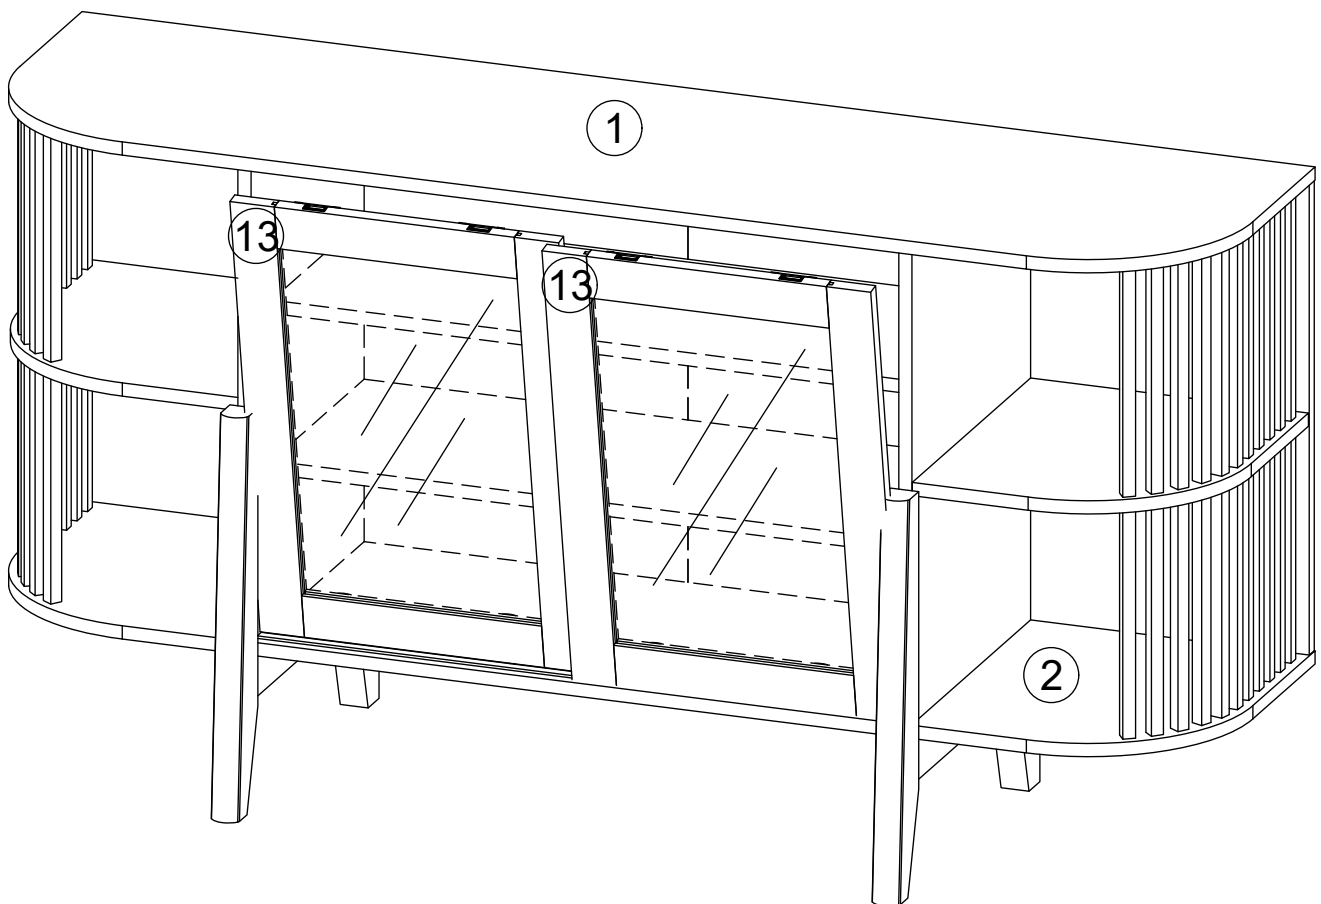

Product Name :	2-Door and Open Storage 59.1-Inch Wide Sideboard Server Cabinet with Rubberwood Legs
SKU # :	WHIF2144


Step 18: Fix hardware M1 into panel 1 by using hardware M2.

M1 x 2	M2 x 2
	

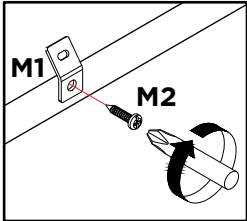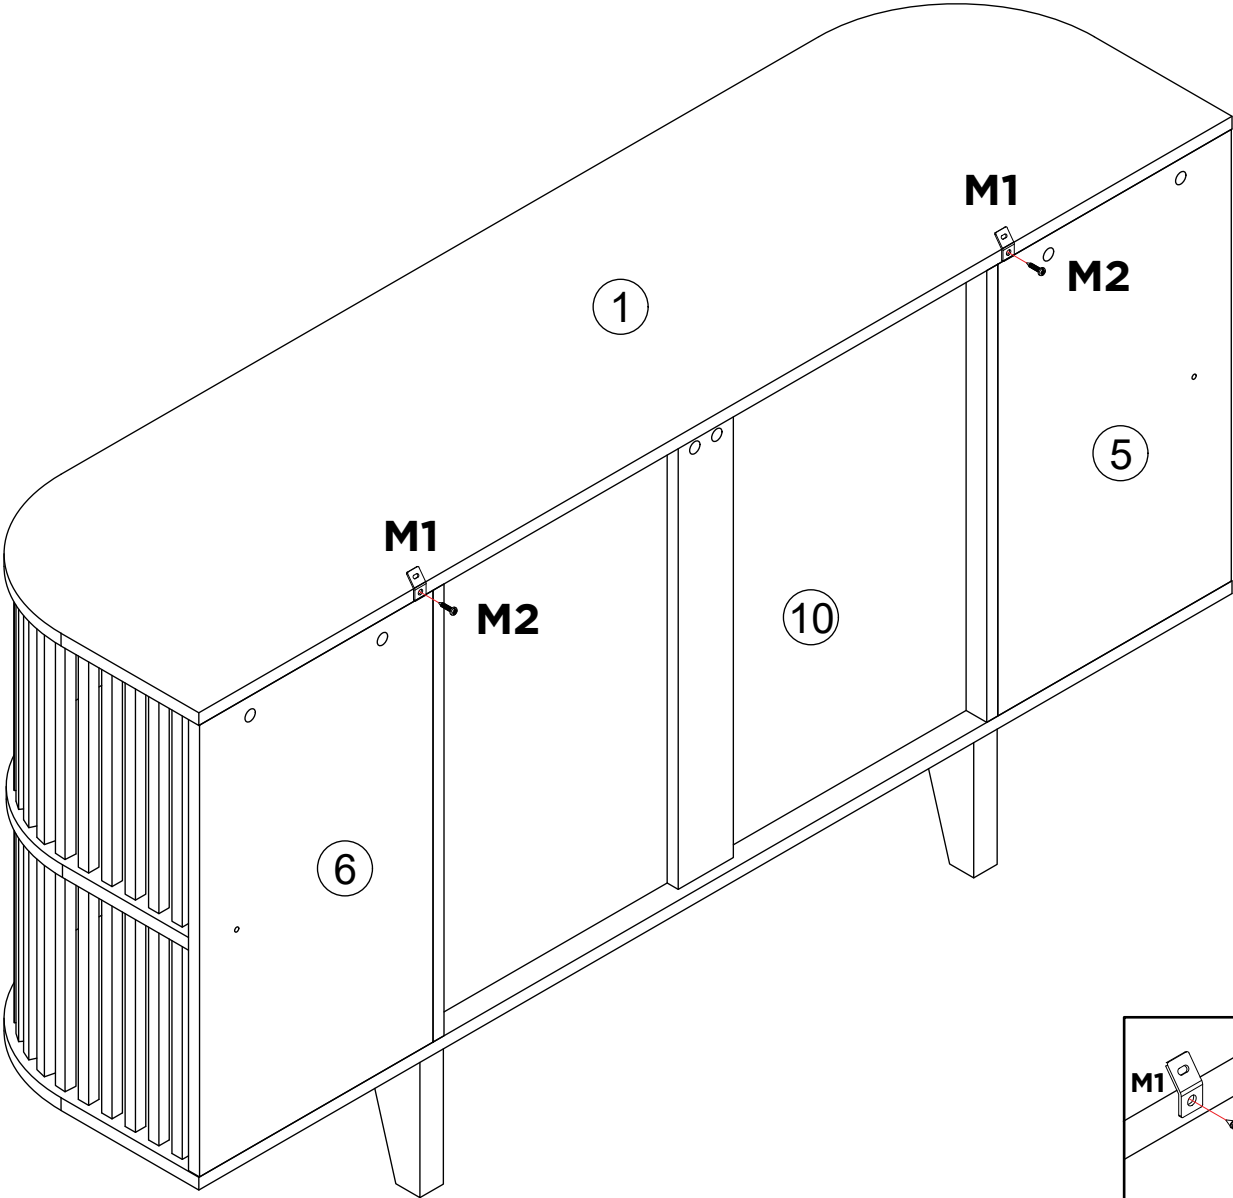


Product Name :	2-Door and Open Storage 59.1-Inch Wide Sideboard Server Cabinet with Rubberwood Legs
SKU # :	WHIF2144

Step 19: Mark and use the power drill to drill a hole on the wall. Hit hardware **M3** into the wall.

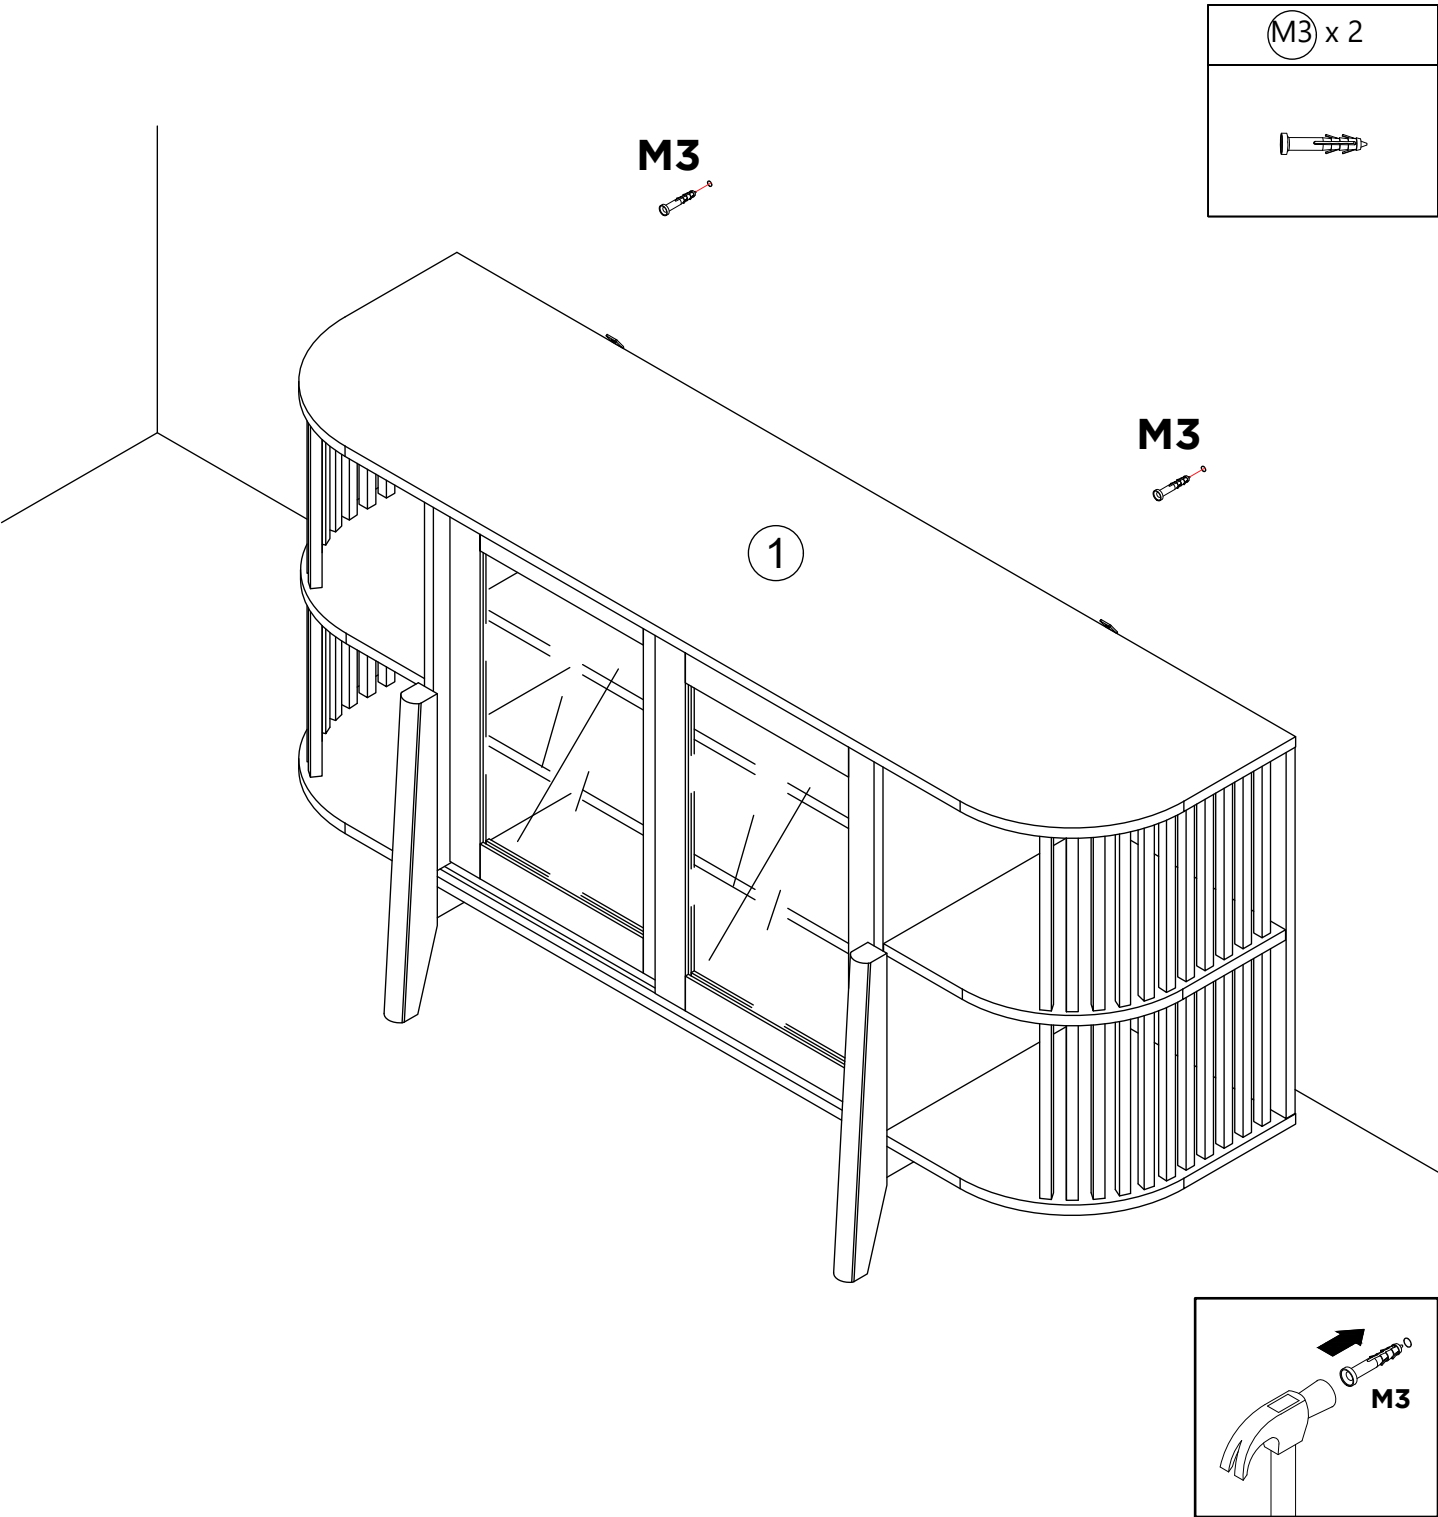




Product Name :	2-Door and Open Storage 59.1-Inch Wide Sideboard Server Cabinet with Rubberwood Legs
SKU # :	WHIF2144

Step 20: Assemble hardware **M1** to **M3** by using hardware **M4**.

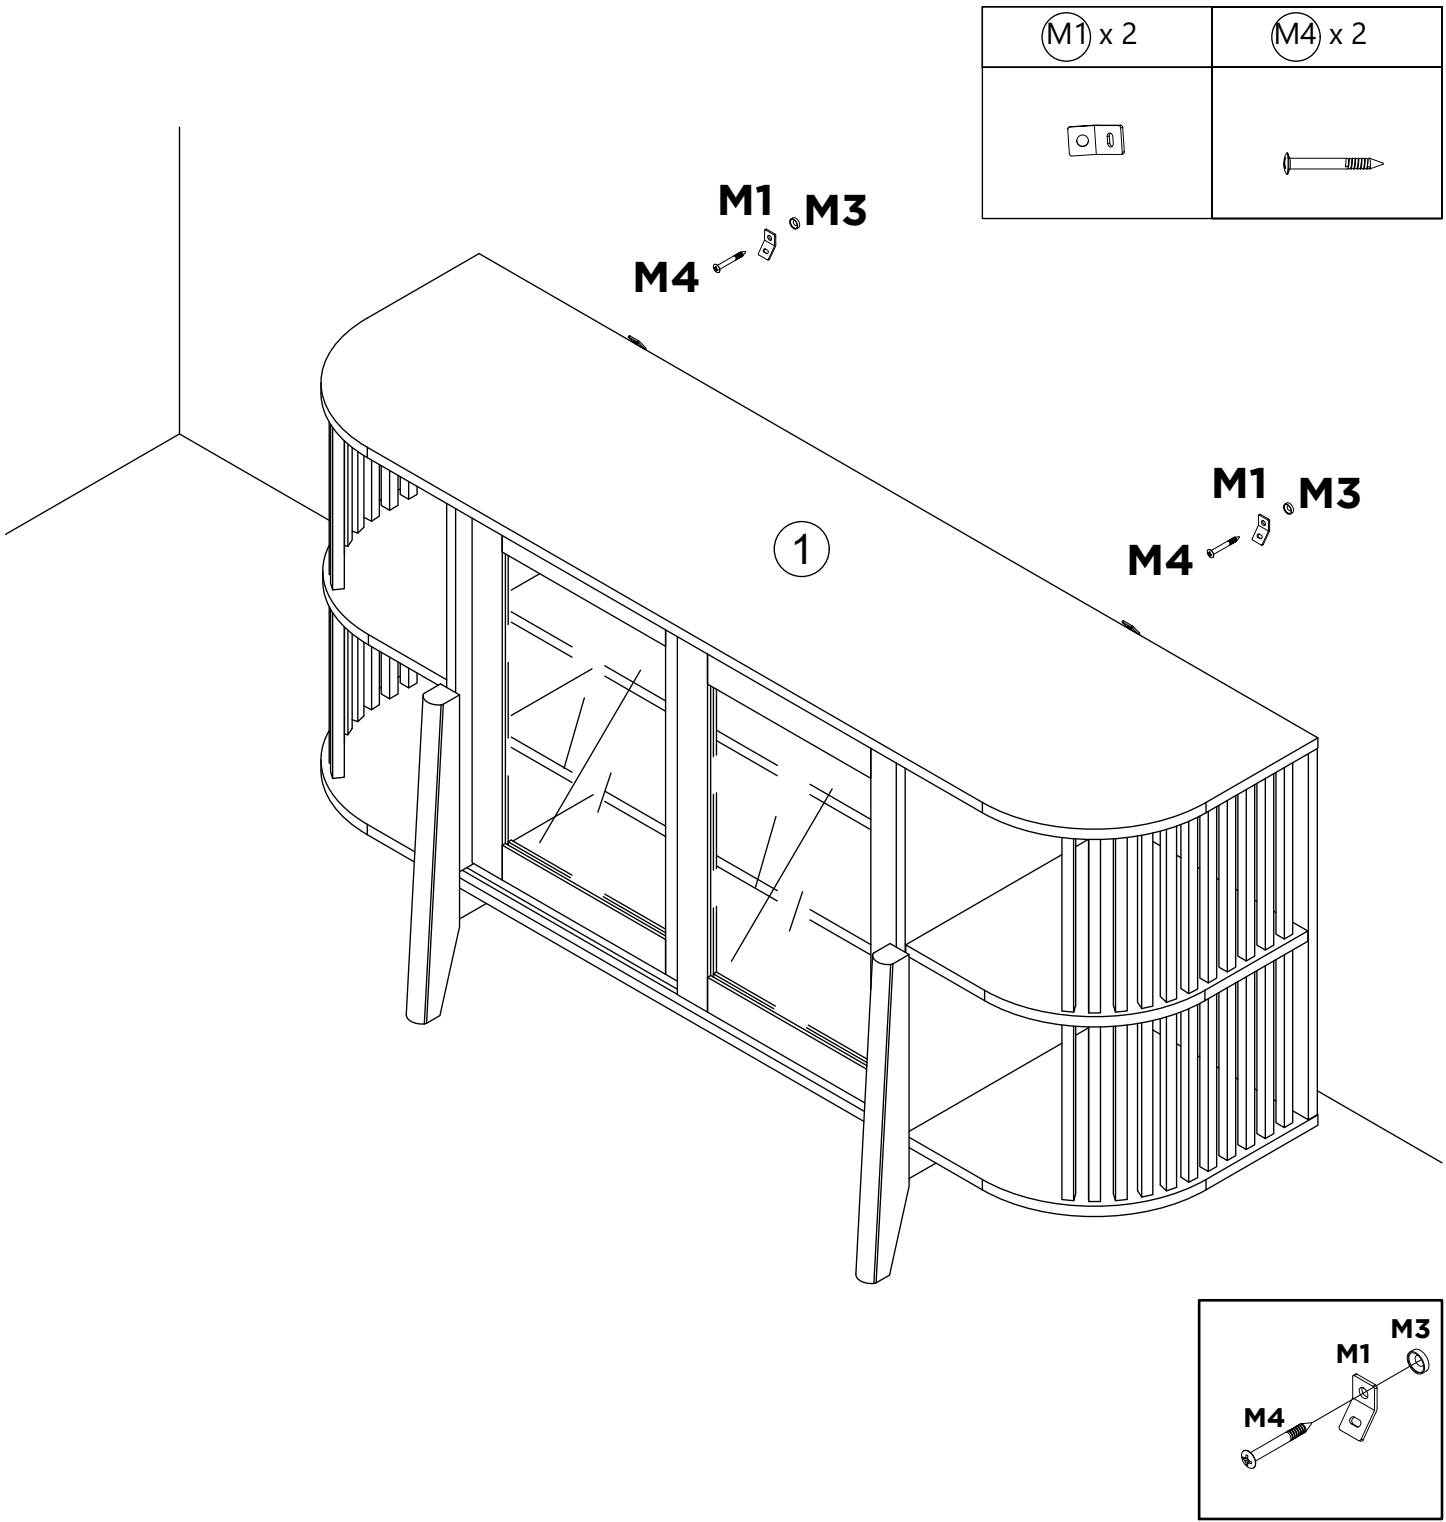


Product Name :	2-Door and Open Storage 59.1-Inch Wide Sideboard Server Cabinet with Rubberwood Legs
SKU # :	WHIF2144

Step 21: Connect both of the hardware M1 by using hardware M5. Tighten the hardware M5.

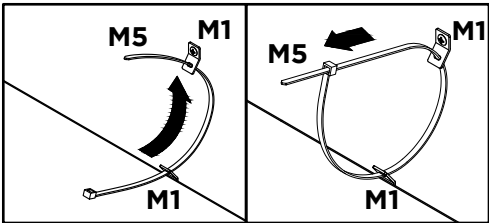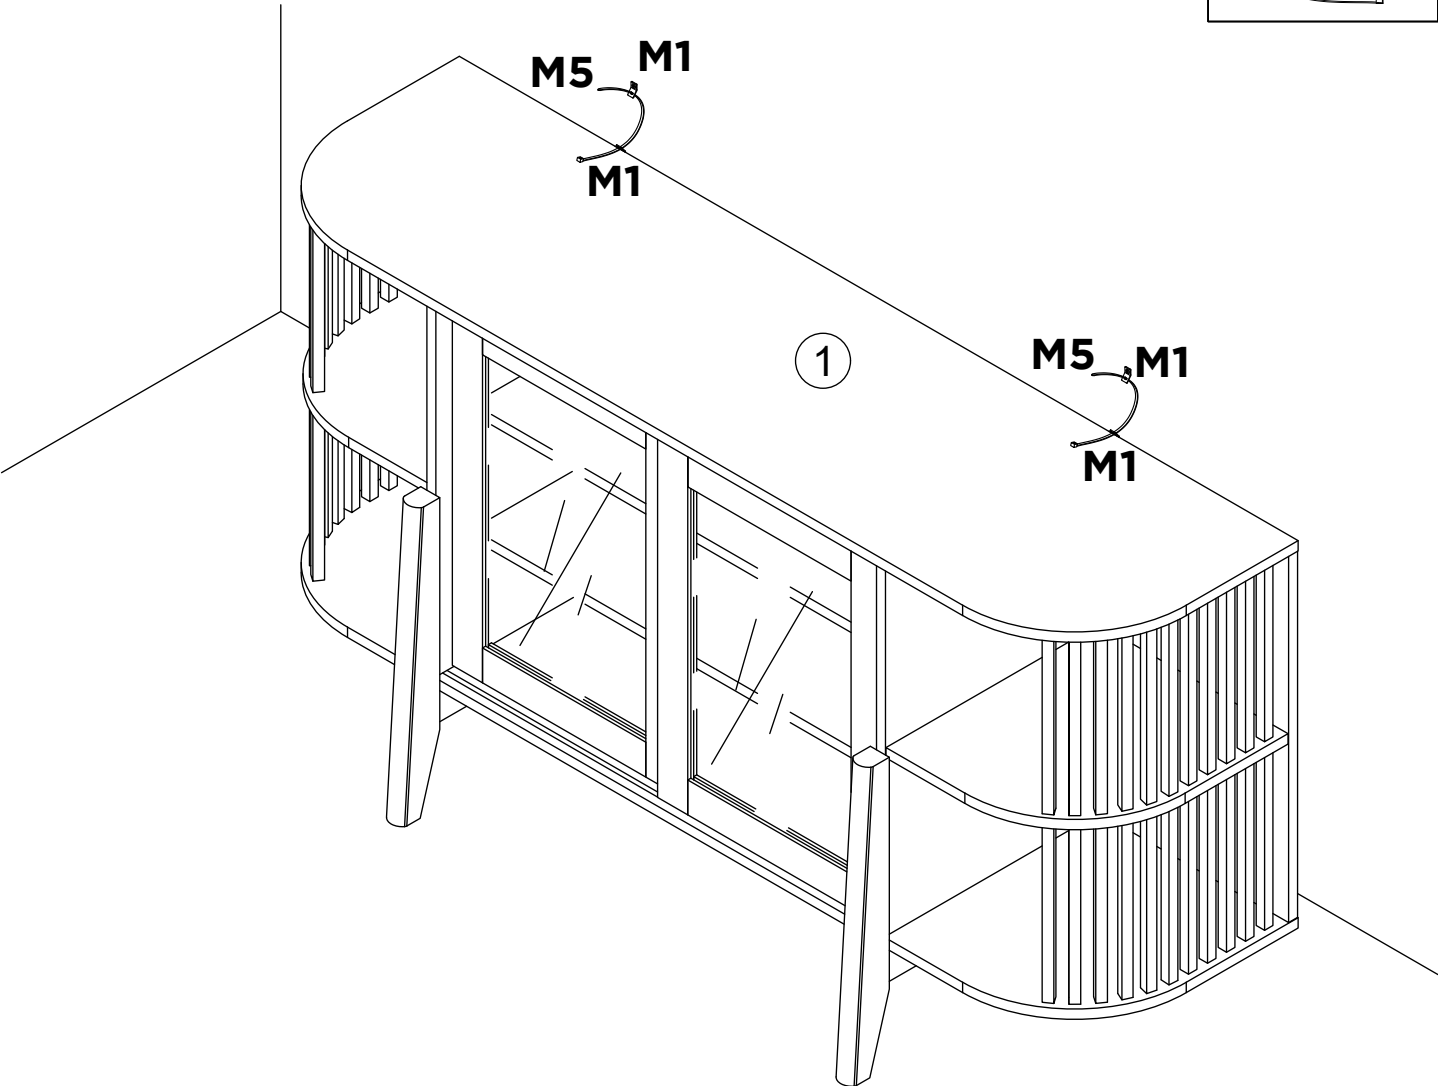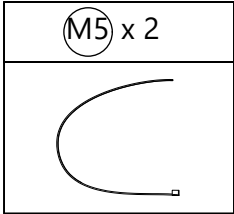

Product Name :	2-Door and Open Storage 59.1-Inch Wide Sideboard Server Cabinet with Rubberwood Legs
SKU # :	WHIF2144

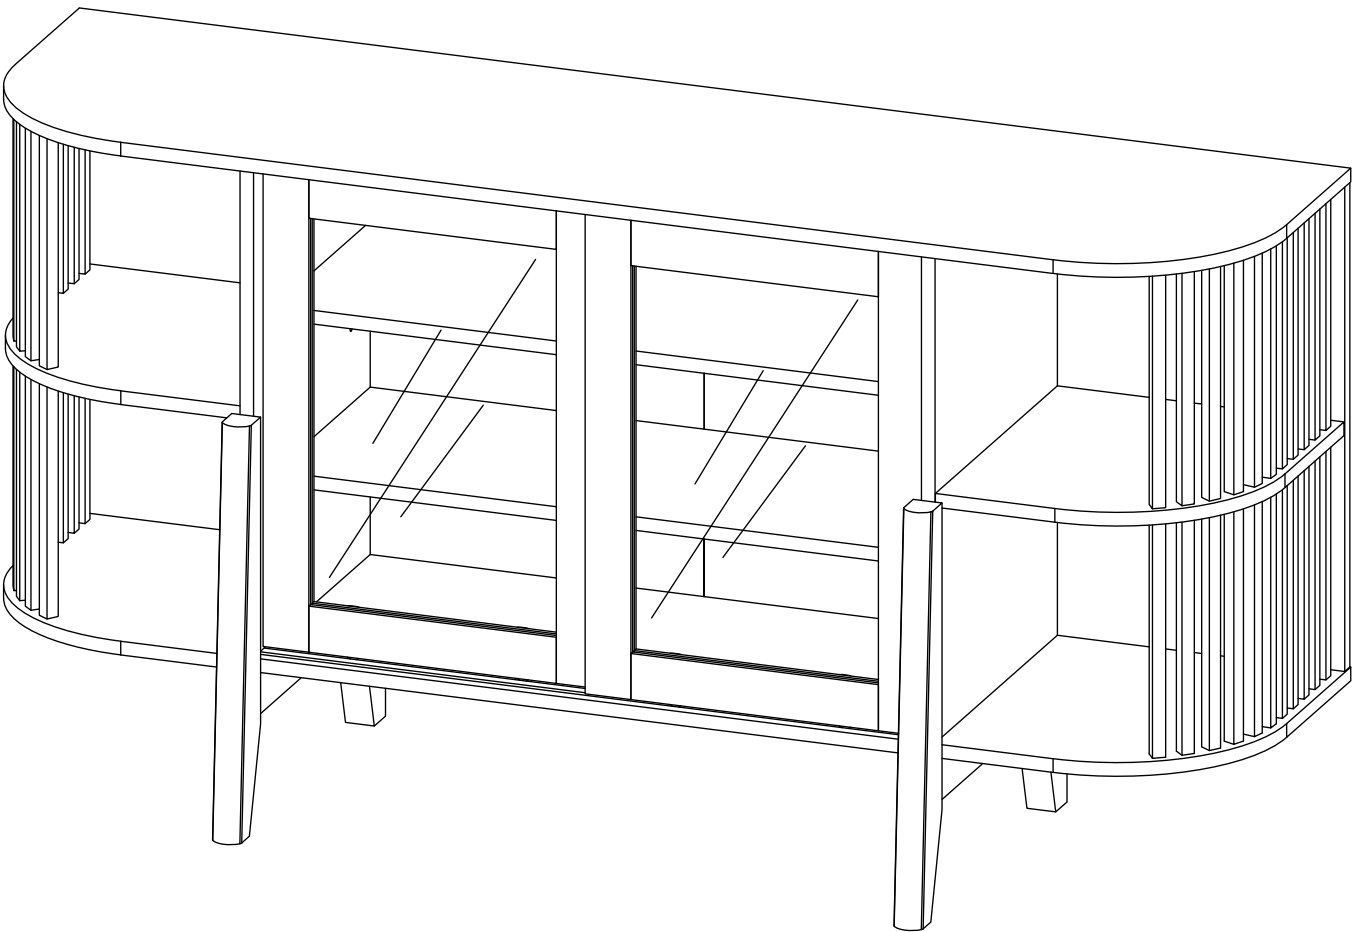

 **Warning:** DO NOT sit or stand on the Cabinet as this may damage the product and cause serious bodily injury.