

Assembly instructions



assembly 2 people



tool rubber mallet



tool hammer



tool philips head screwdriver



assembling time 3 hours 30 minutes

or...



tool electric screwdriver




assembling time 2 hours 30 minutes

Bali
Queen Size
60" x 80"




www.memomad.com

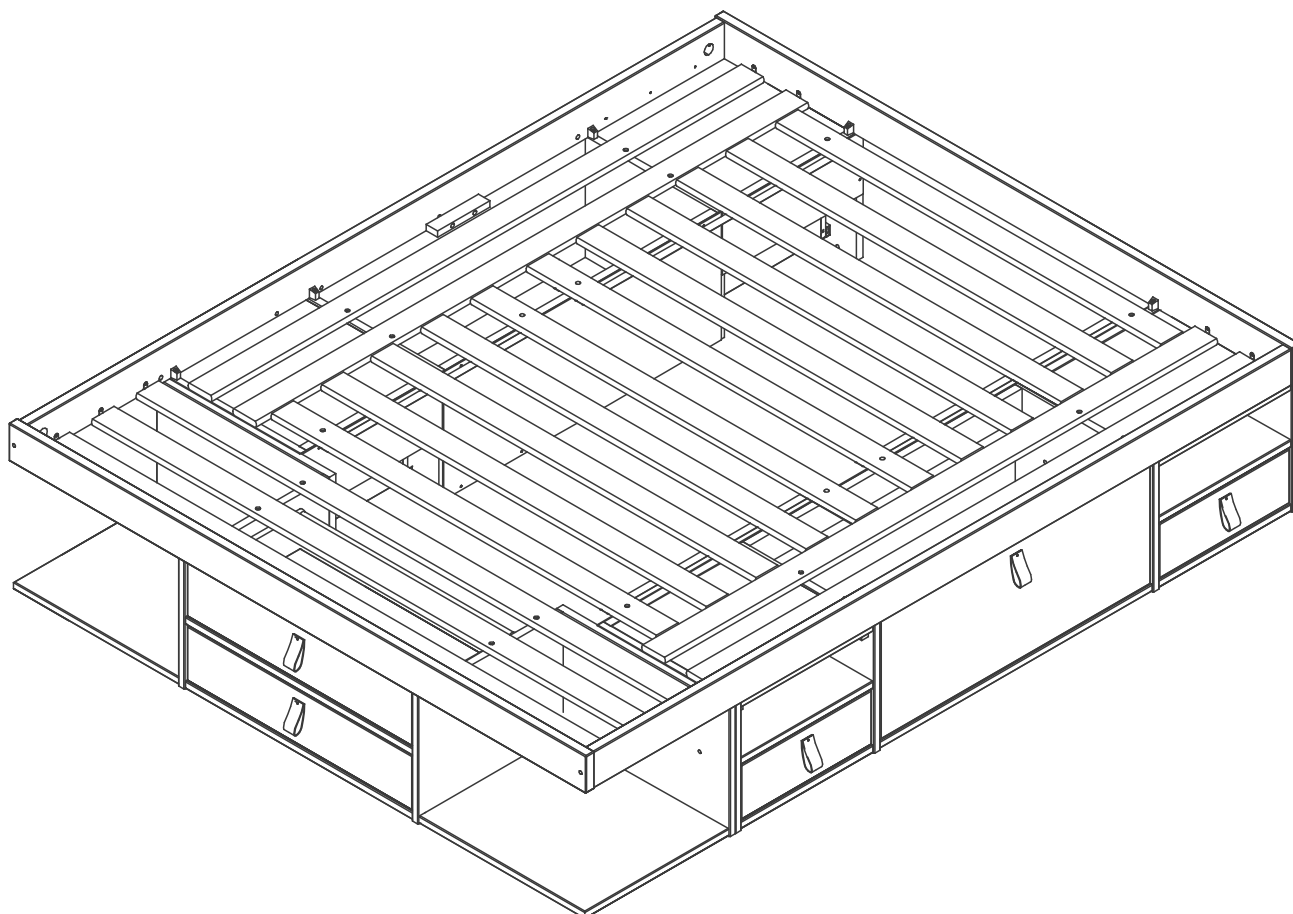

Attention!

- 1- Please read the assembly instructions very carefully before assembling your product.
- 2- The product assembly has to be carried out on a clean and flat surface. We recommend the use of packaging material (cartons/cardboards) to cover your room surface during assembly in order to protect the floor.
- 3- The screws and bolts of your furniture have to be tightened periodically.
- 4- Please avoid contact to sharp objects.
- 5- Please avoid hitting the furniture surface.







FOOTBOARD


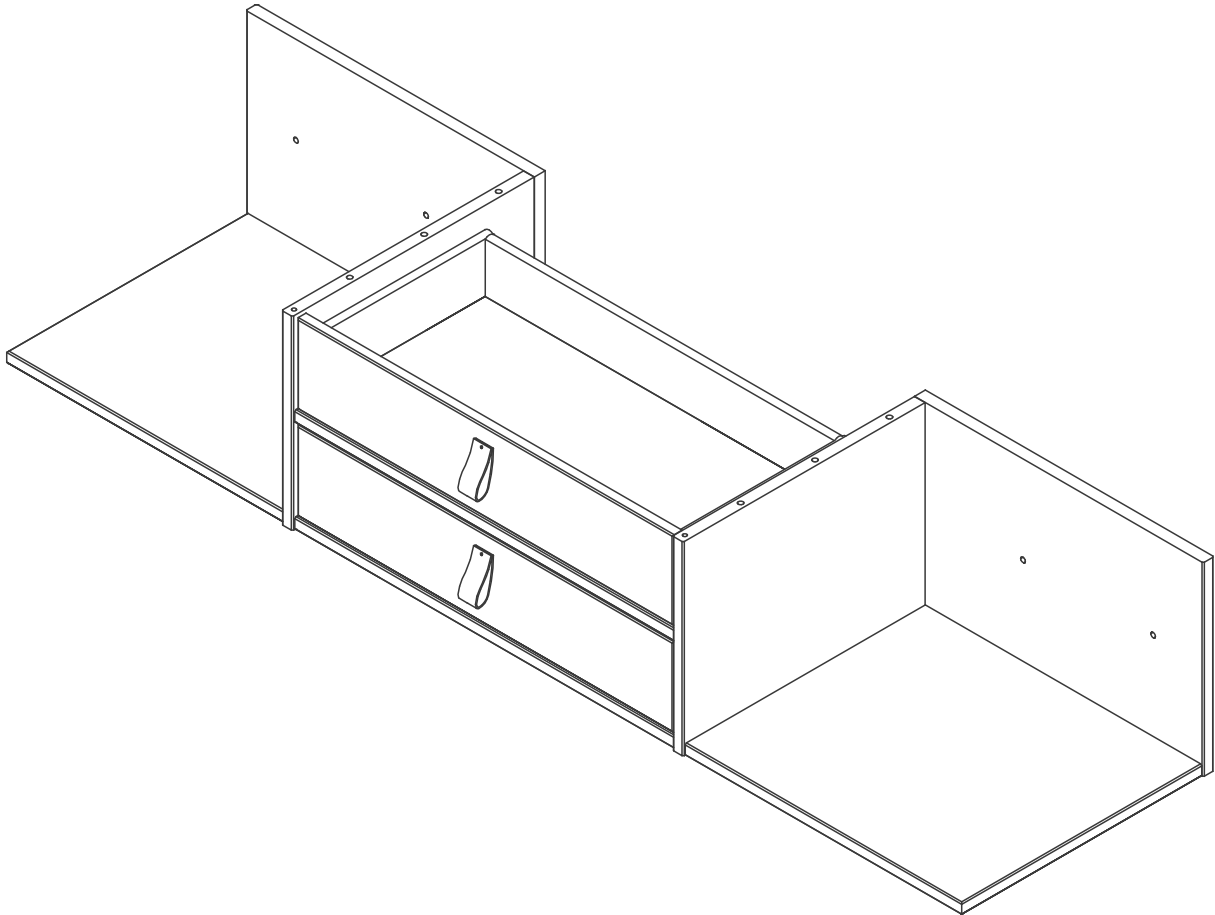



Attention!


- 1- Please read the assembly instructions very carefully before assembling your product.
- 2- The product assembly has to be carried out on a clean and flat surface. We recommend the use of packaging material (cartons/cardboards) to cover your room surface during assembly in order to protect the floor.
- 3- The screws and bolts of your furniture have to be tightened periodically.
- 4- Please avoid contact to sharp objects.
- 5- Please avoid hitting the furniture surface.

HARDWARE/ACCESSORIES


A	 Ø 5/16" x 1"	28
B	 Ø 5/32" x 1.3/16"	30
C	 12"	02
D	 12"	02
E	 Ø 1/4" x 13/32"	08
F	 Furniture glide	10

H	 Ø 1/8" x 9/16"	08
I	 Handle	02
J	 Ø 1/8" x 5/8"	02

COMPONENTS

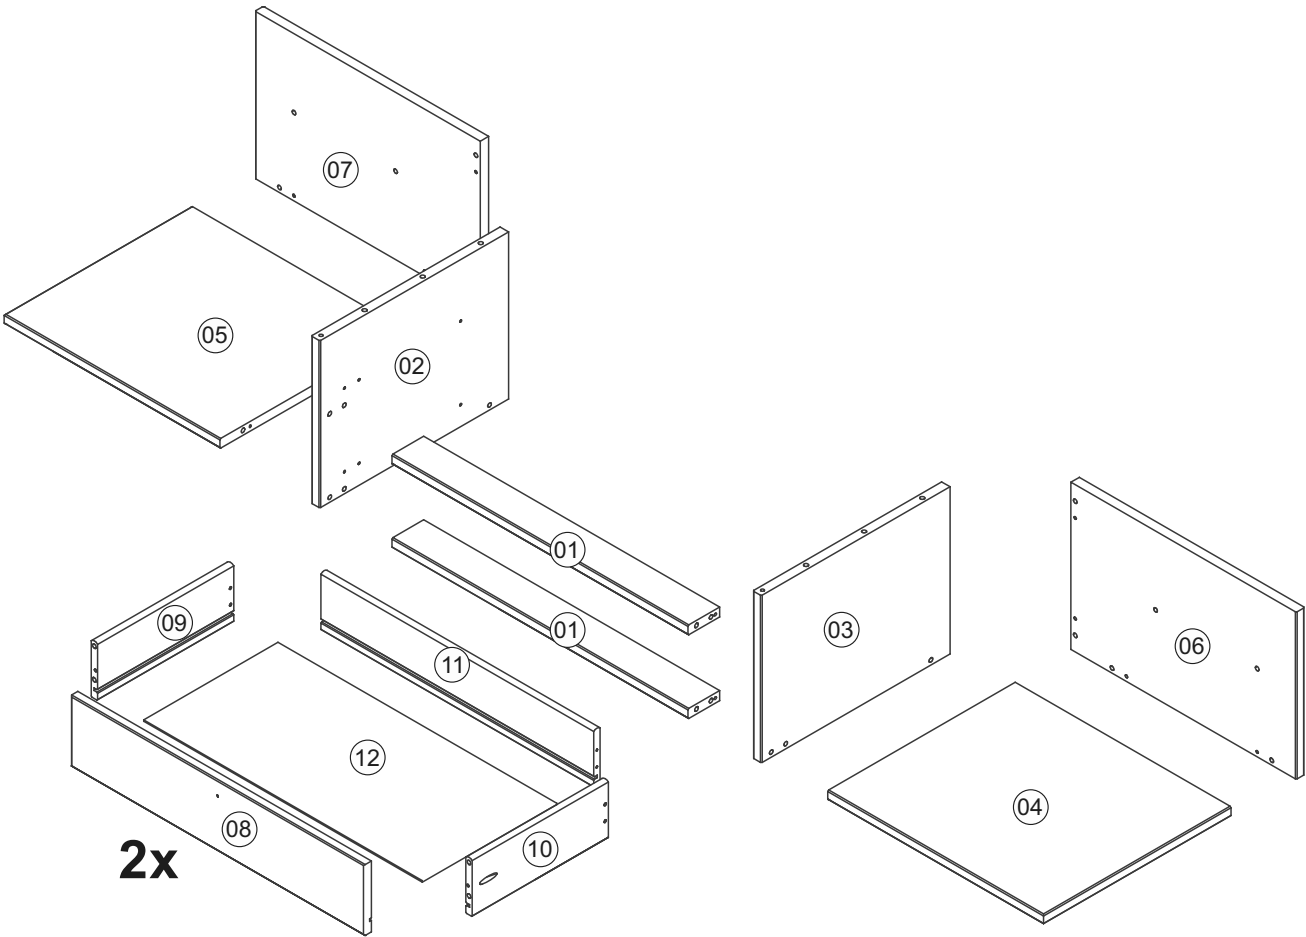


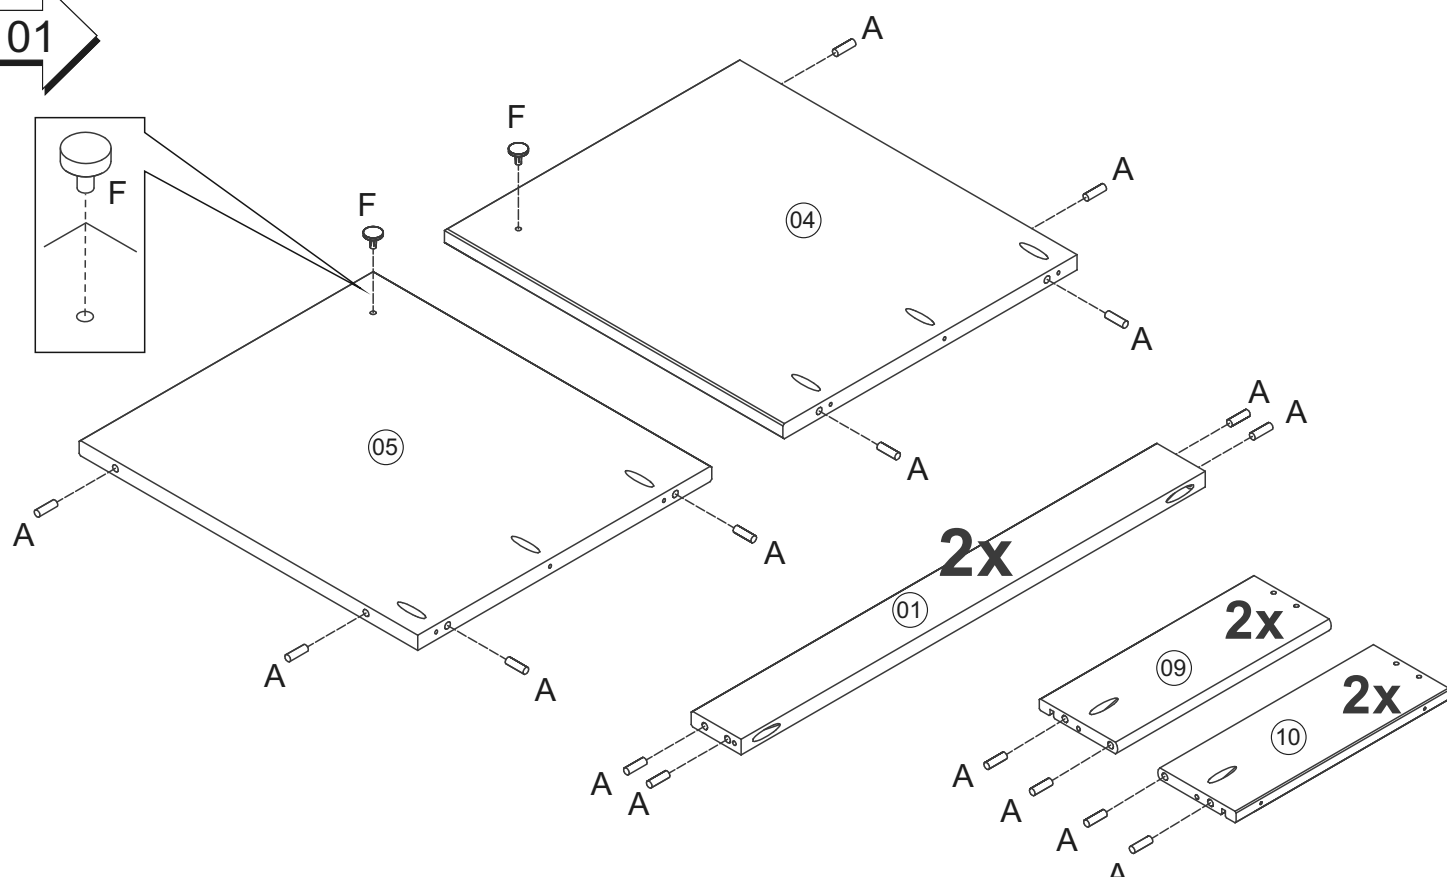




01





A	 Ø 5/16" x 1"	24	F	 Furniture glide	02
---	-----------------------------------------------------------------------------------------------------	----	---	--------------------------------------------------------------------------------------------------------	----

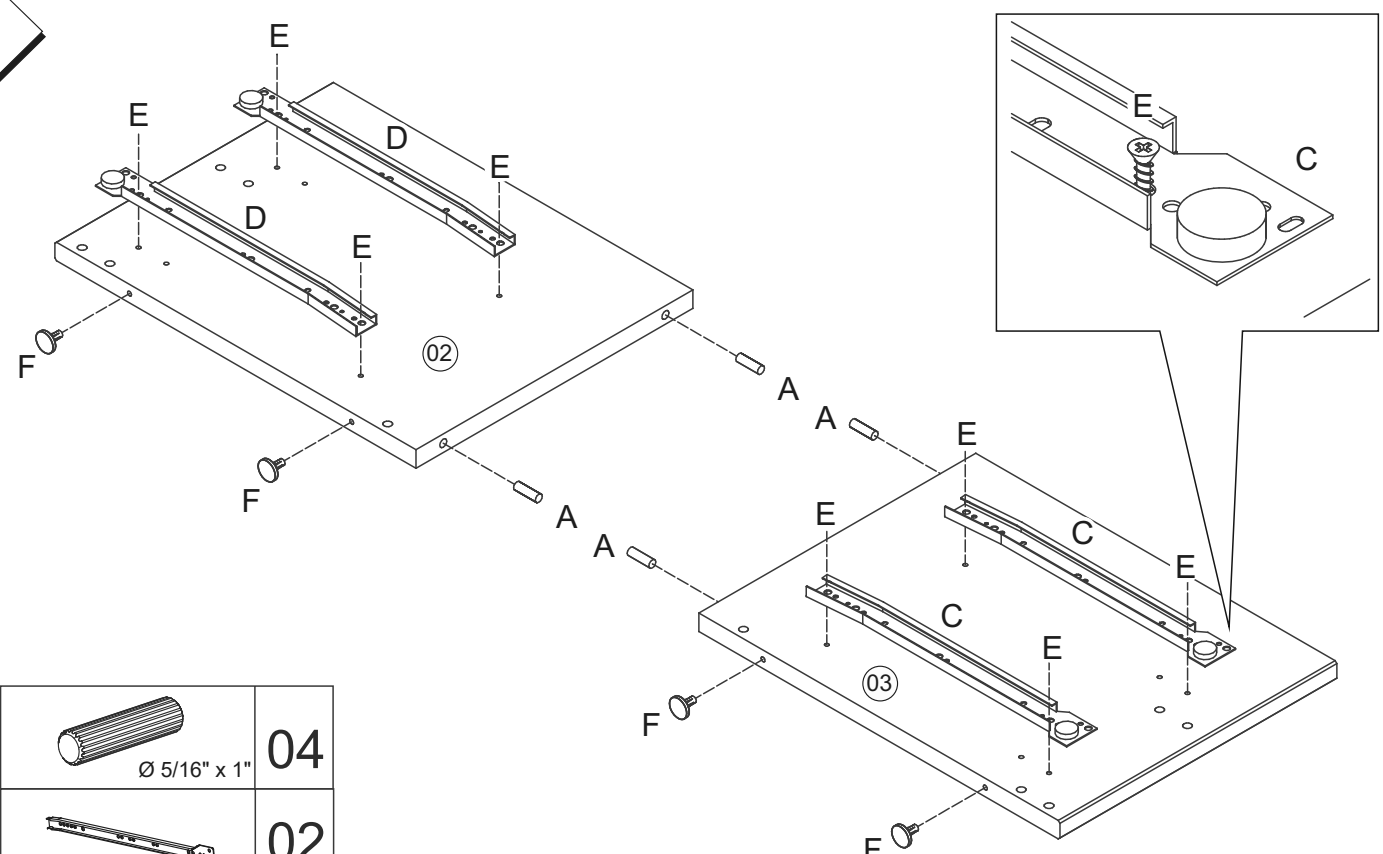02





A	 Ø 5/16" x 1"	04			
C	 12"	02			
D	 12"	02	E	 Ø 1/4" x 13/32"	08
			F	 Furniture glide	04



03

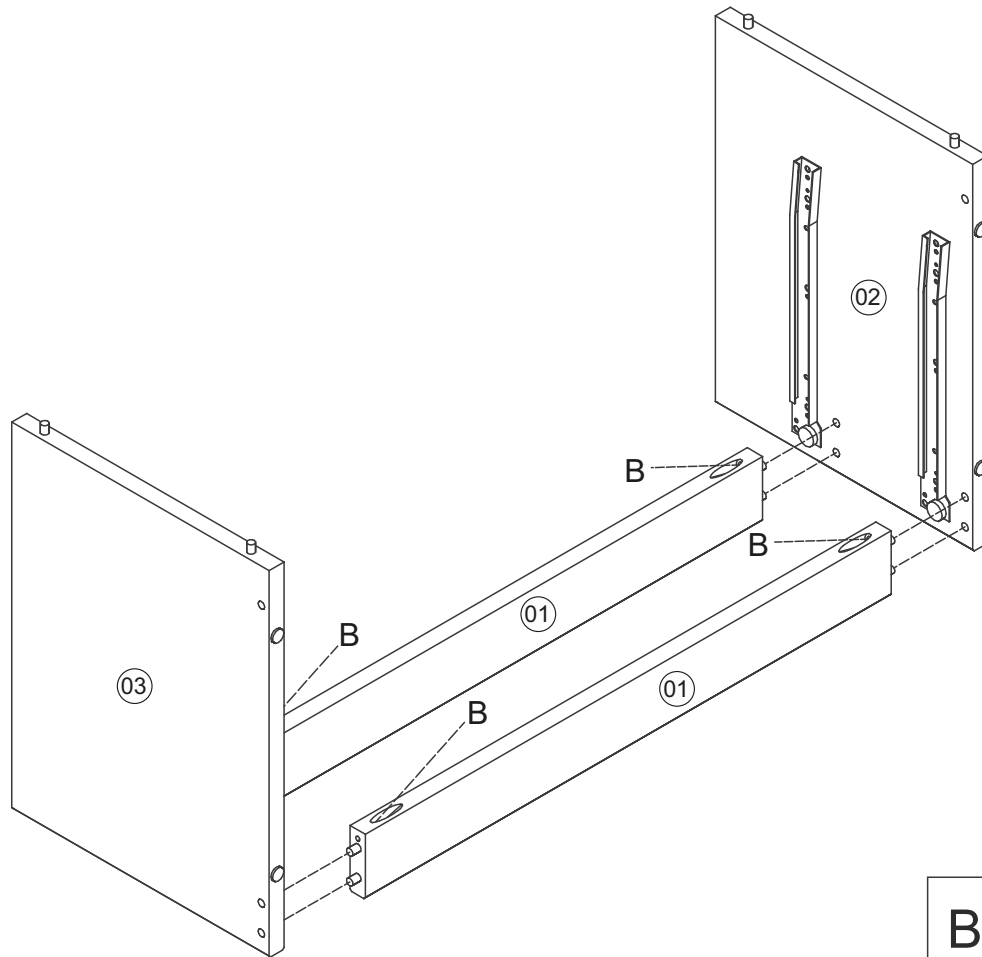



04

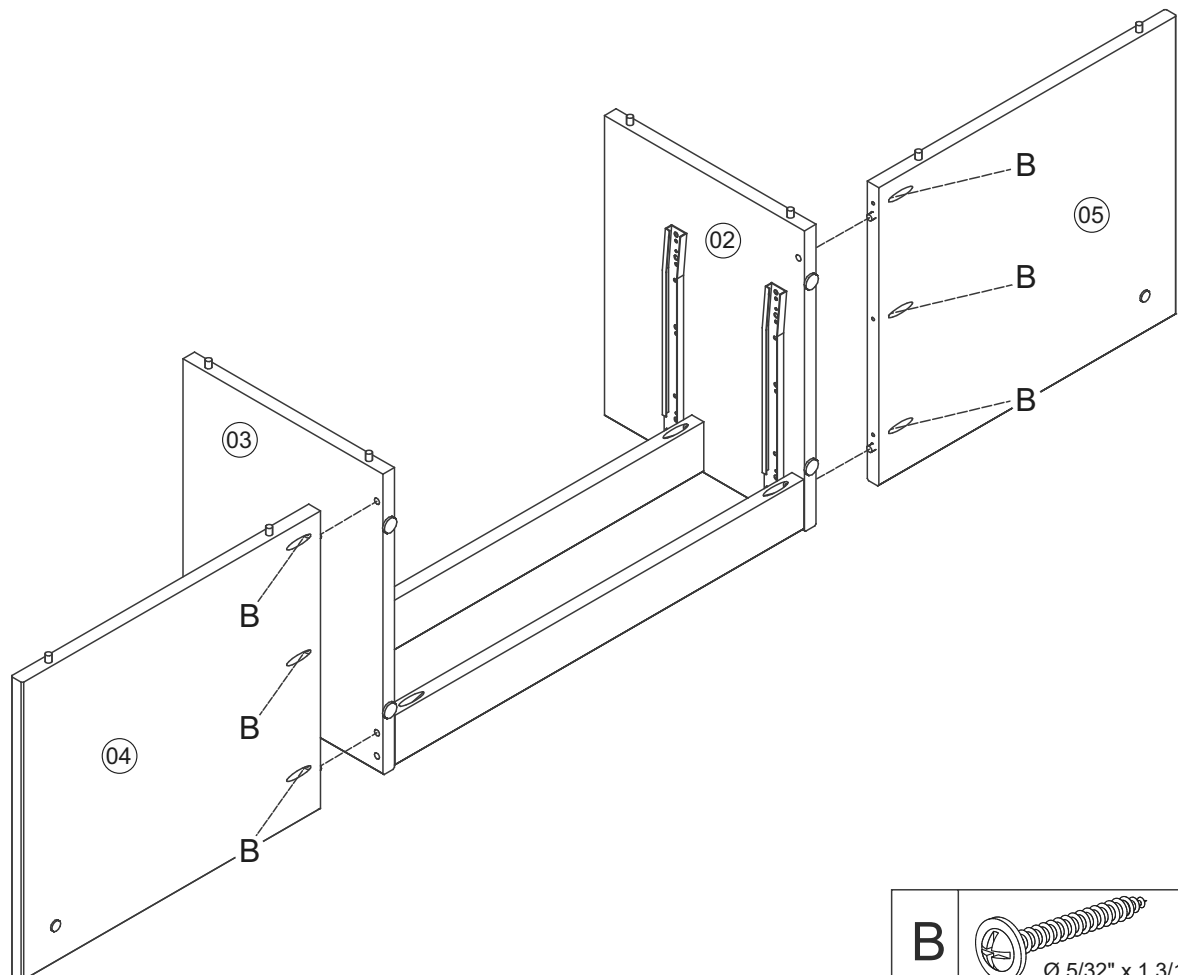




05

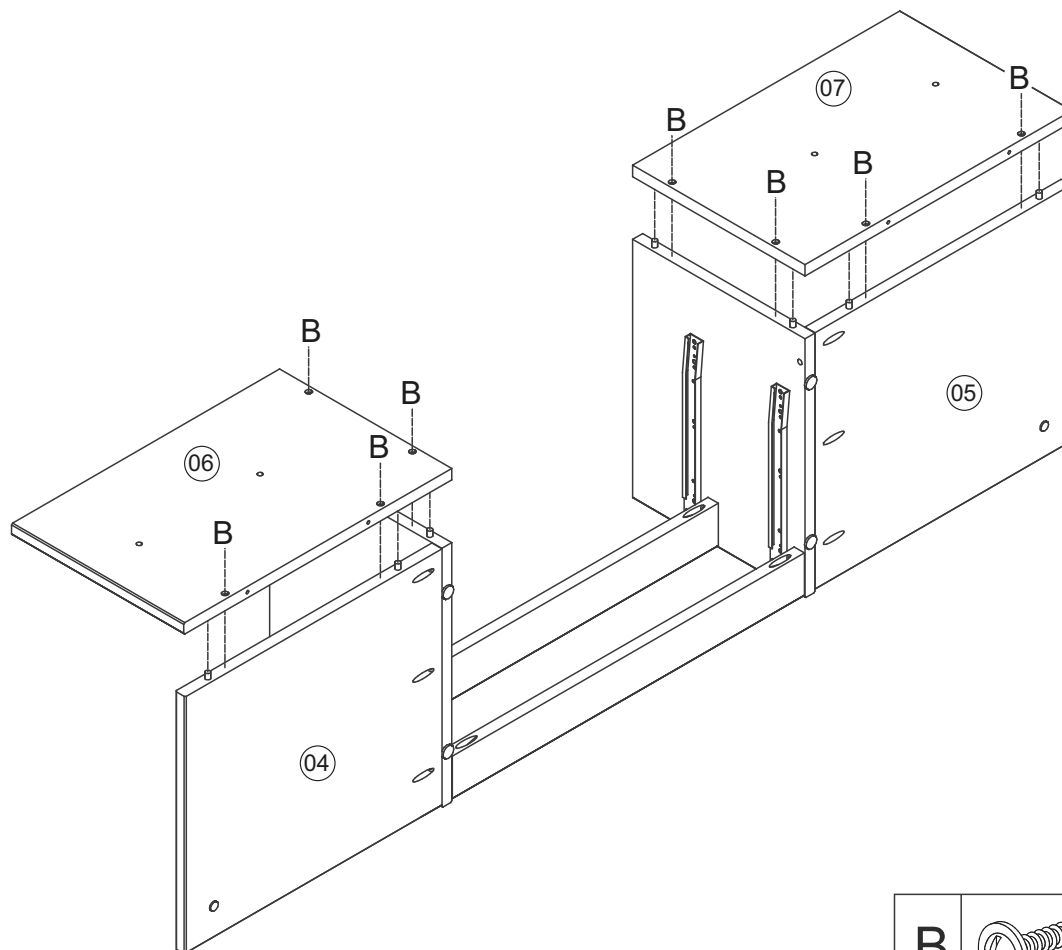


06




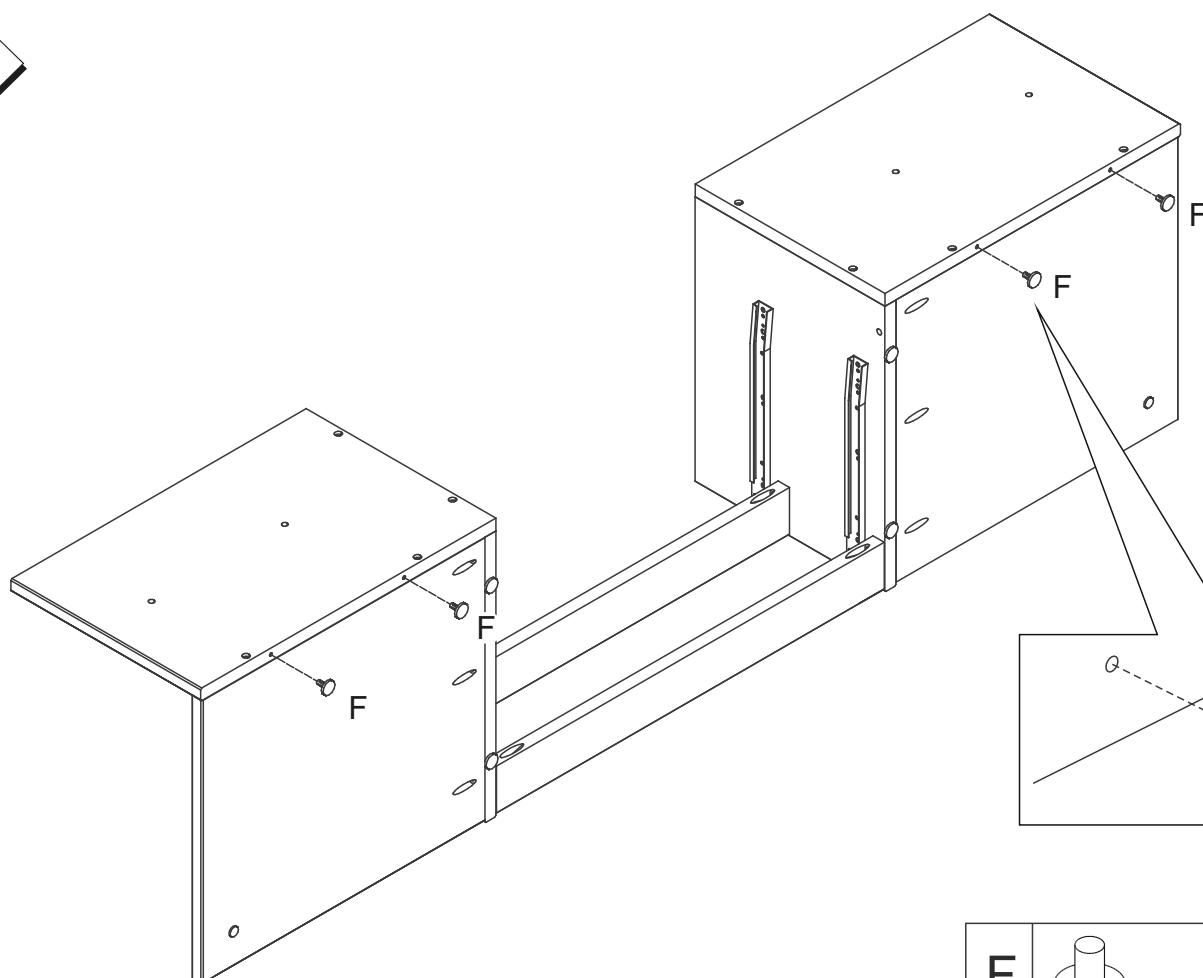




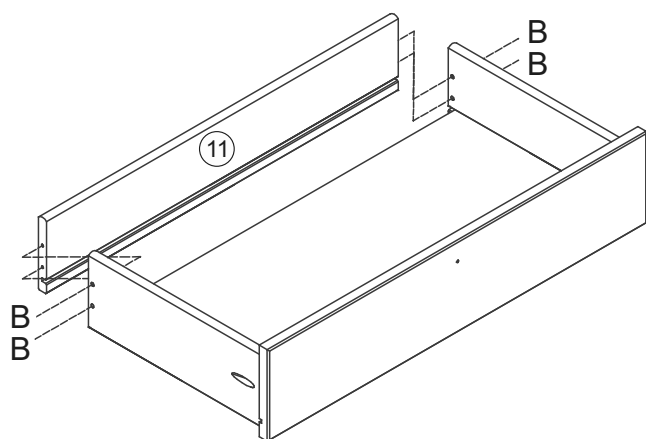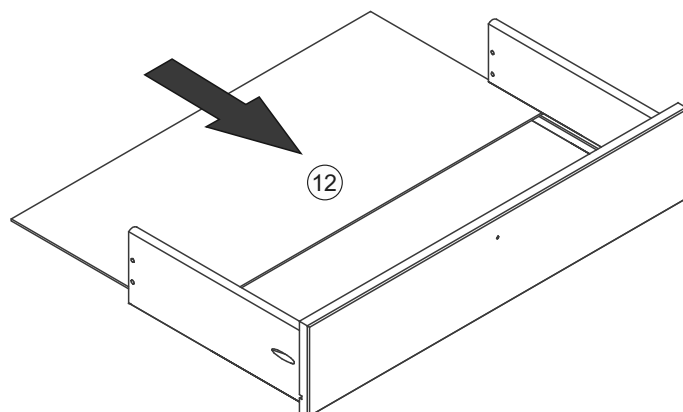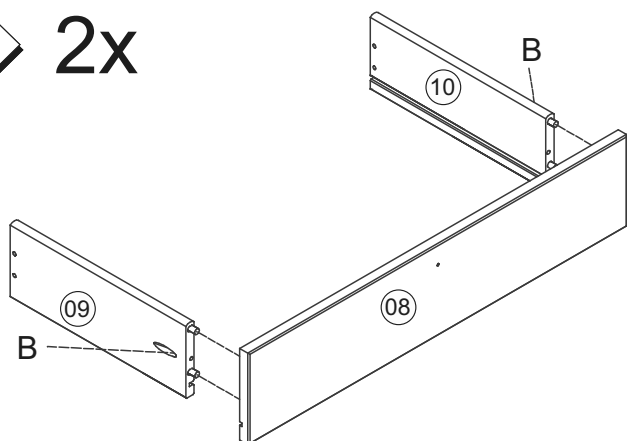


07 **2x**

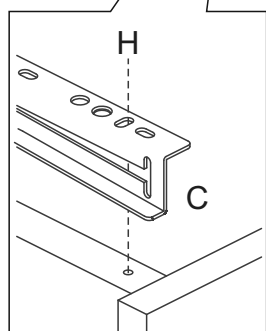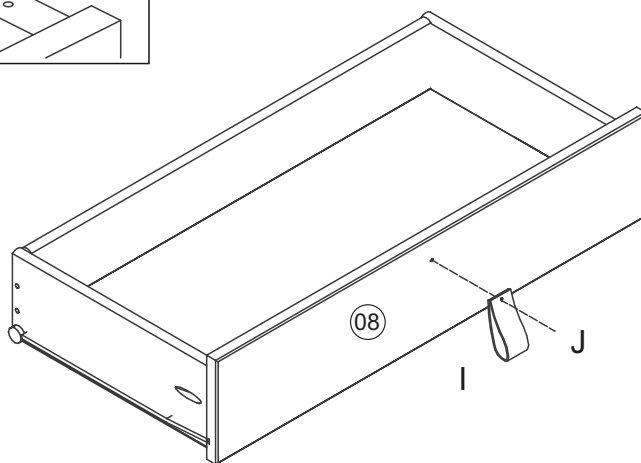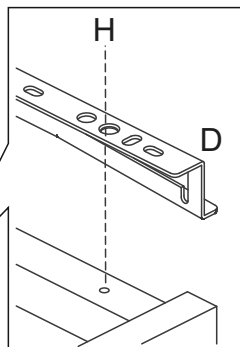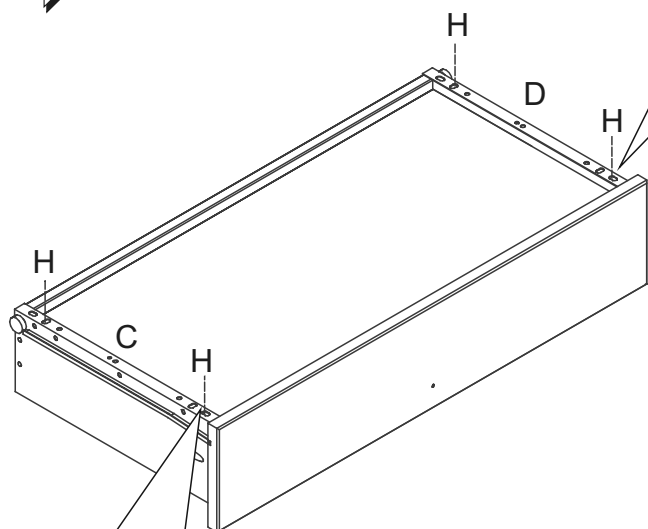


B		12
Ø 5/32" x 1.3/16"		

08 **2x**




I		02	J		02
Handle		Ø 1/8" x 5/8"			
H		08	C		02
Ø 1/8" x 9/16"		12"		D	
				12"	


09

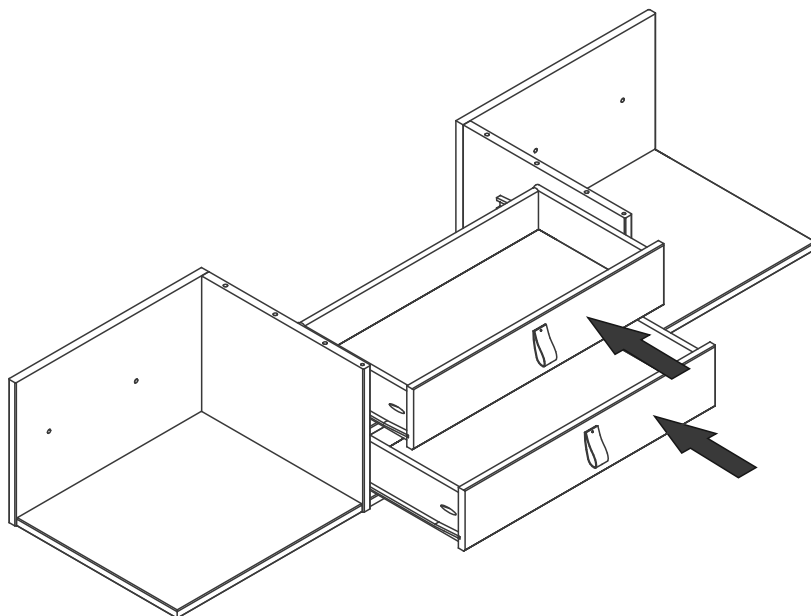




Drawer Adjustment

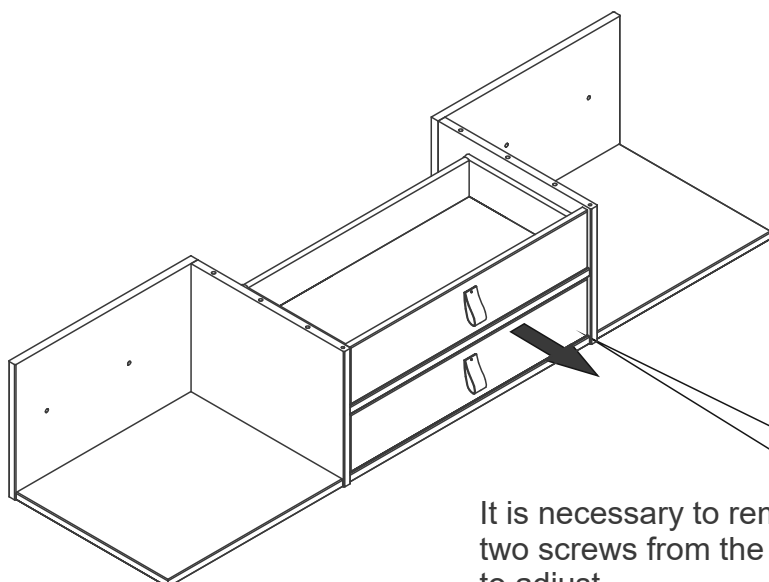

It is necessary to remove two screws from the slide to adjust


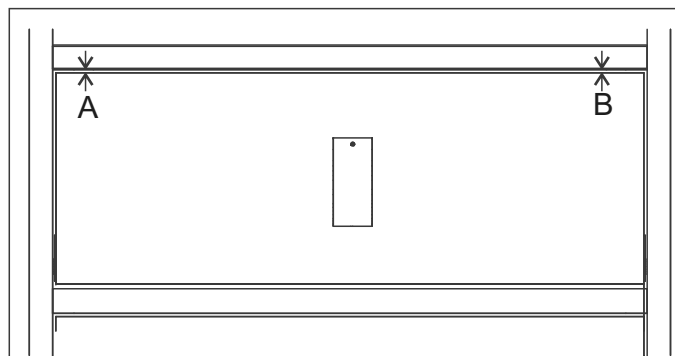


$A \neq B$


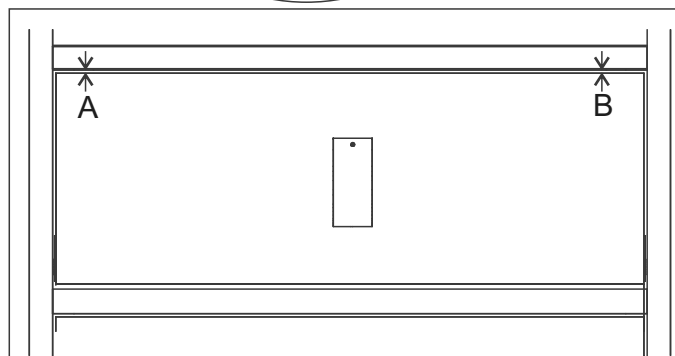
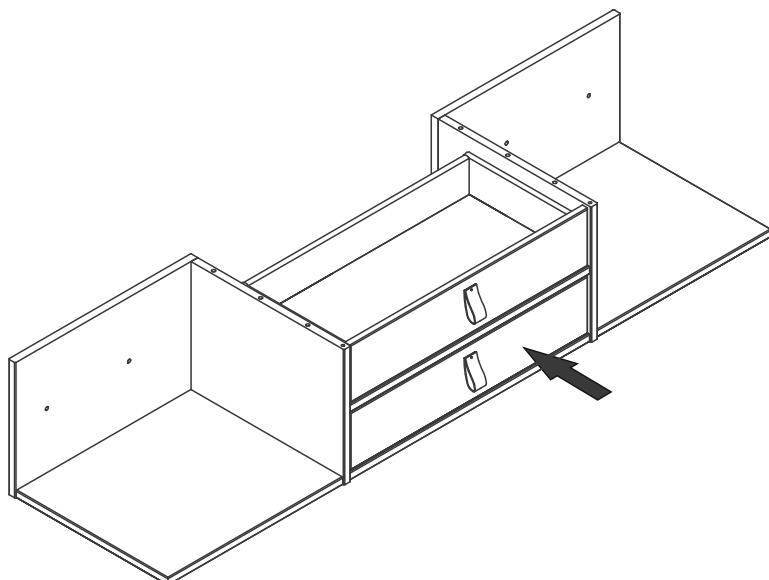
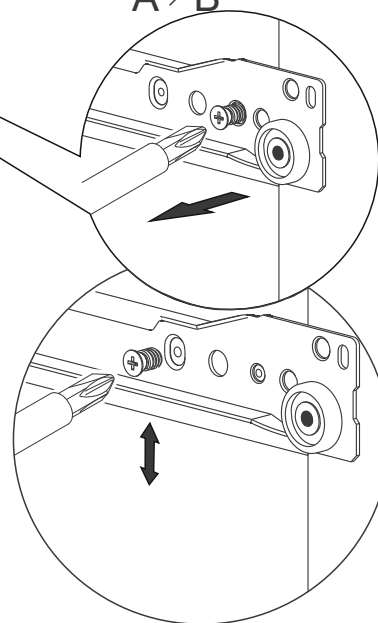


$A = B$

Drawer Adjustment

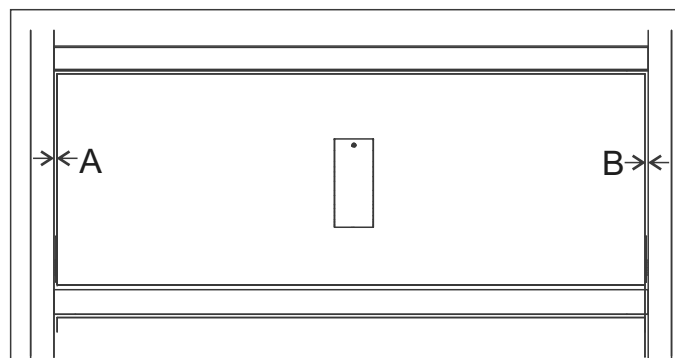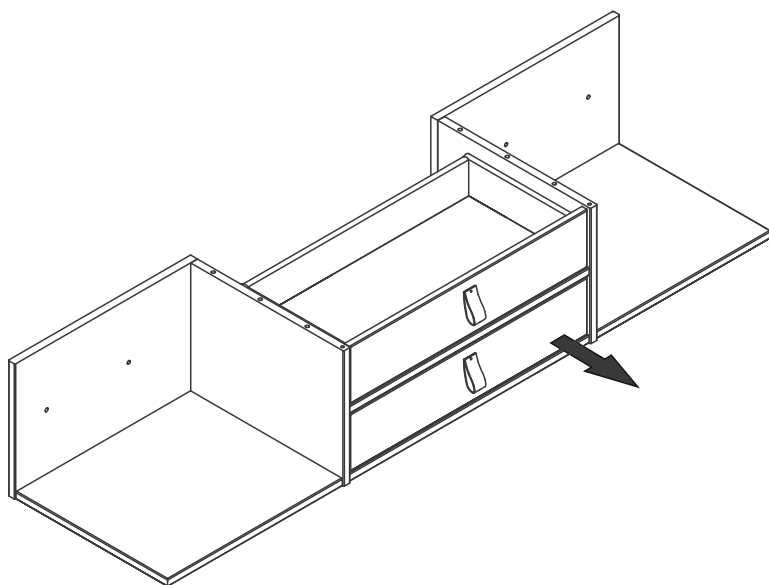


$A \neq B$

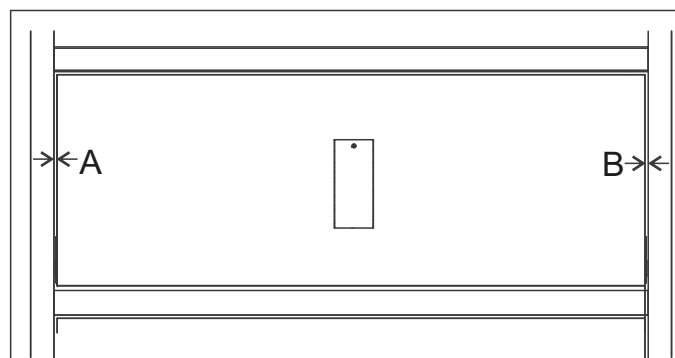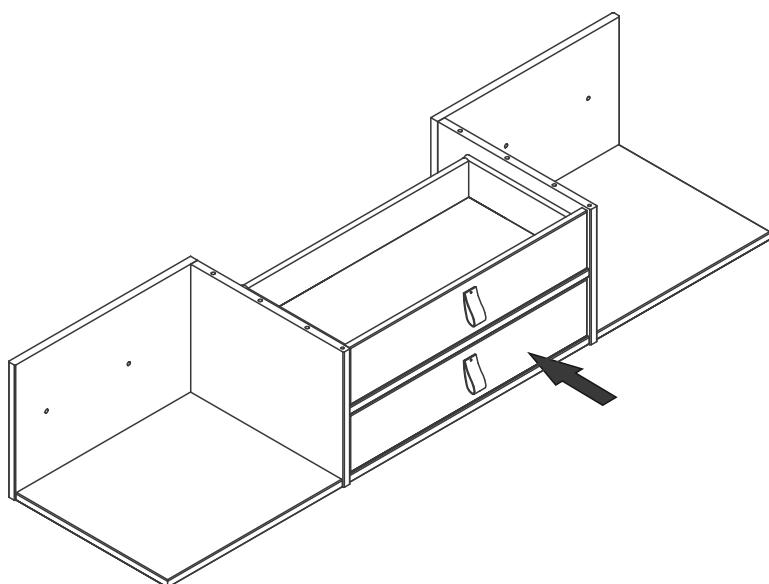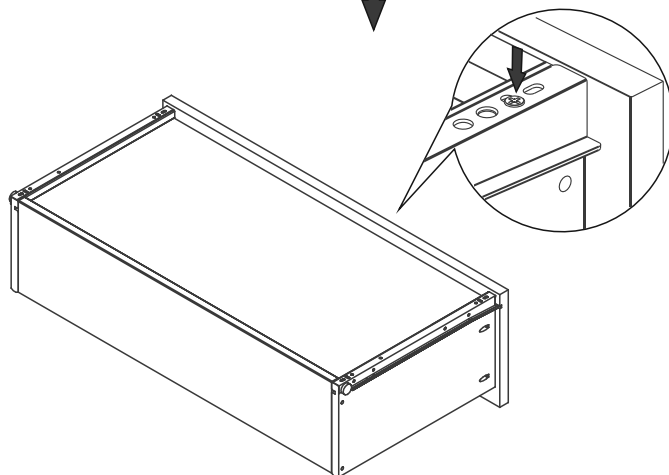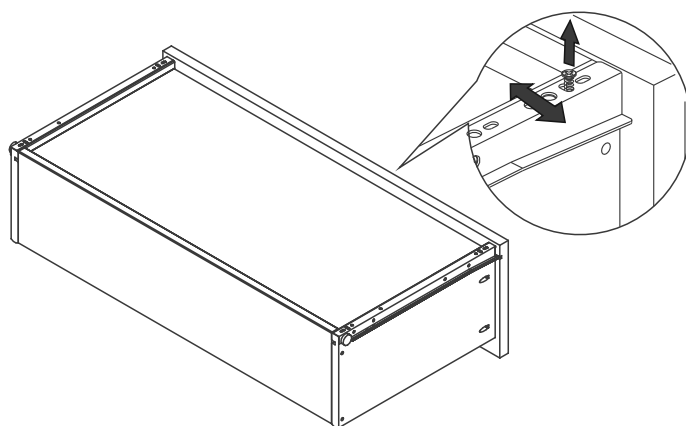

$A = B$








Side Module 1







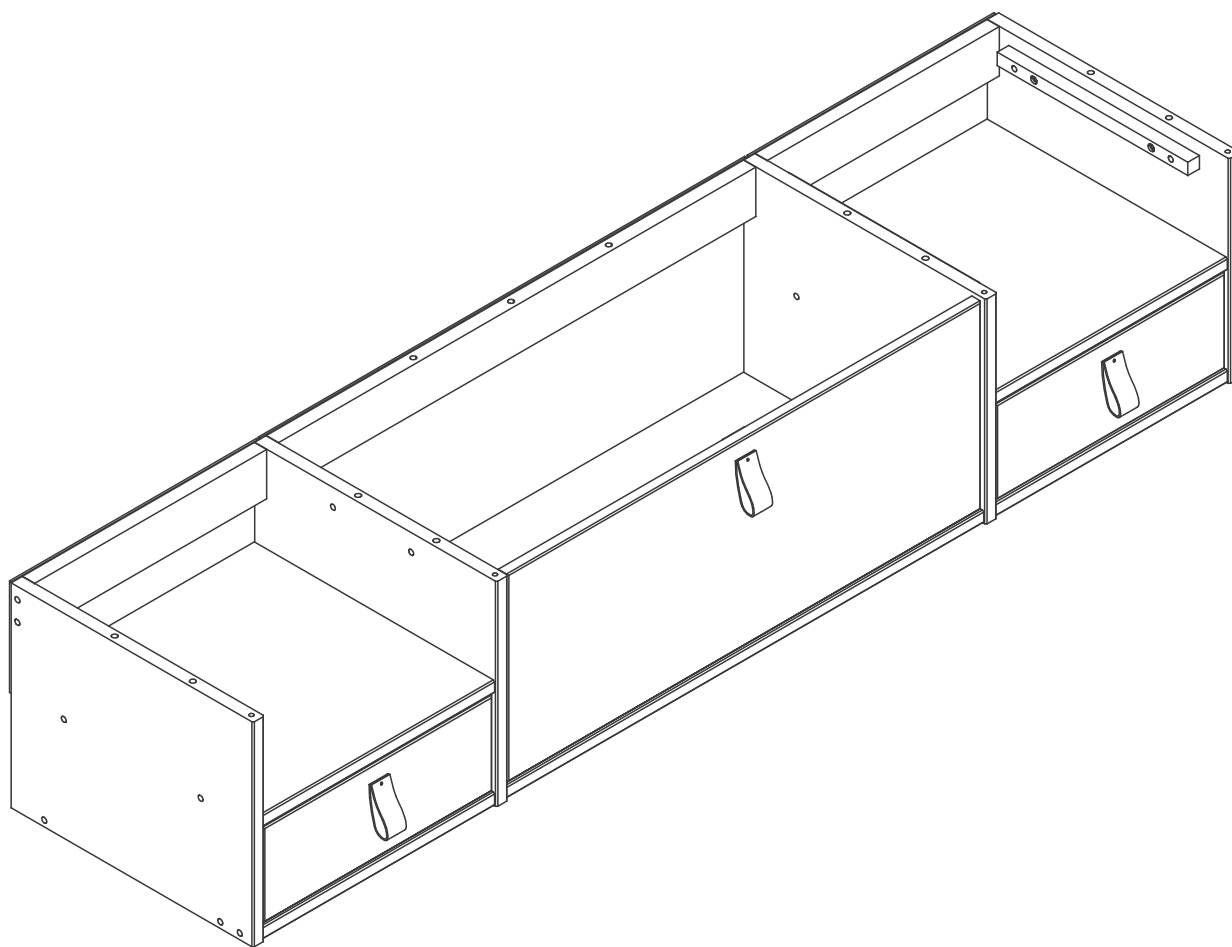


Attention!


- 1- Please read the assembly instructions very carefully before assembling your product.
- 2- The product assembly has to be carried out on a clean and flat surface. We recommend the use of packaging material (cartons/cardboards) to cover your room surface during assembly in order to protect the floor.
- 3- The screws and bolts of your furniture have to be tightened periodically.
- 4- Please avoid contact to sharp objects.
- 5- Please avoid hitting the furniture surface.



HARDWARE/ACCESSORIES

A	 Ø 5/16" x 1"	44
B	 Ø 5/32" x 1.3/16"	30
C	 12"	02
D	 12"	02
E	 Ø 1/4" x 13/32"	08
F	 Furniture glide	08
G	 Magnetic Locking Plate	01


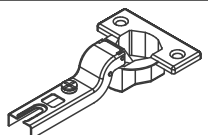
H	 Ø 1/8" x 9/16"	18
I	 Handle	03
J	 Ø 1/8" x 5/8"	33
K	 Ø 9/32" x 1.31/32"	06
L	 Allen Key	01
M	 Wedge	02
N	 Hinge-joint	02

COMPONENTS


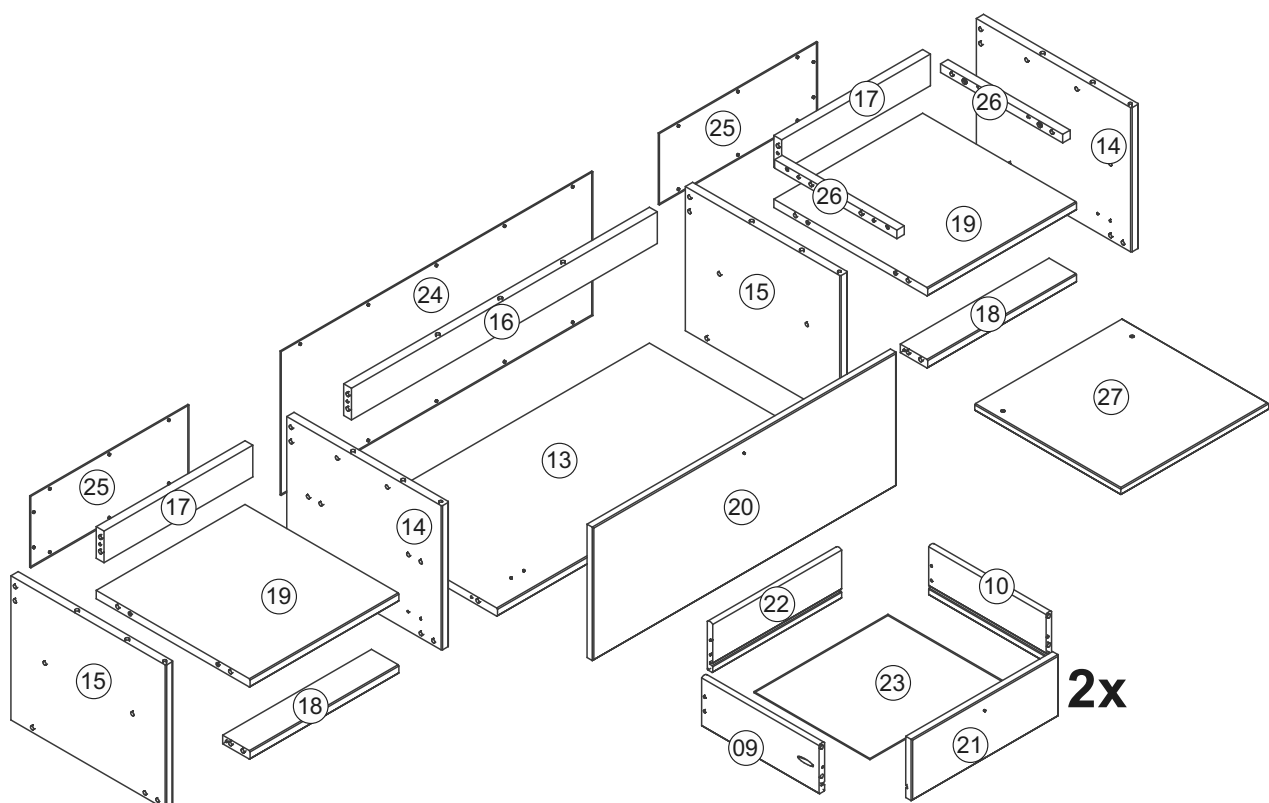


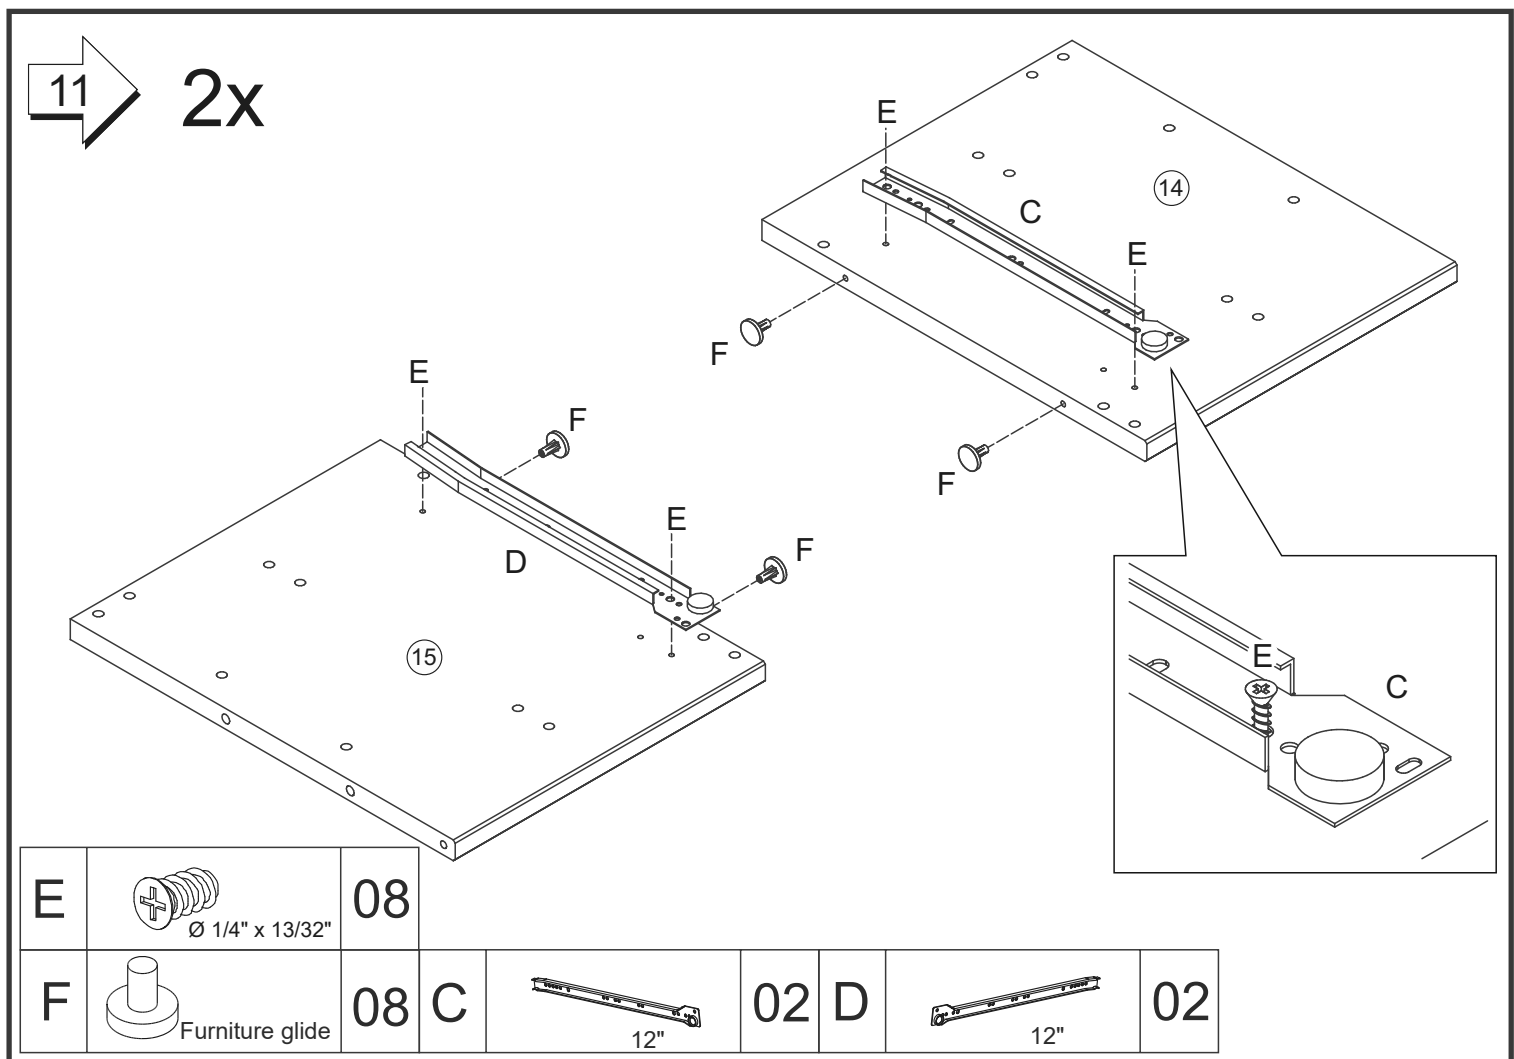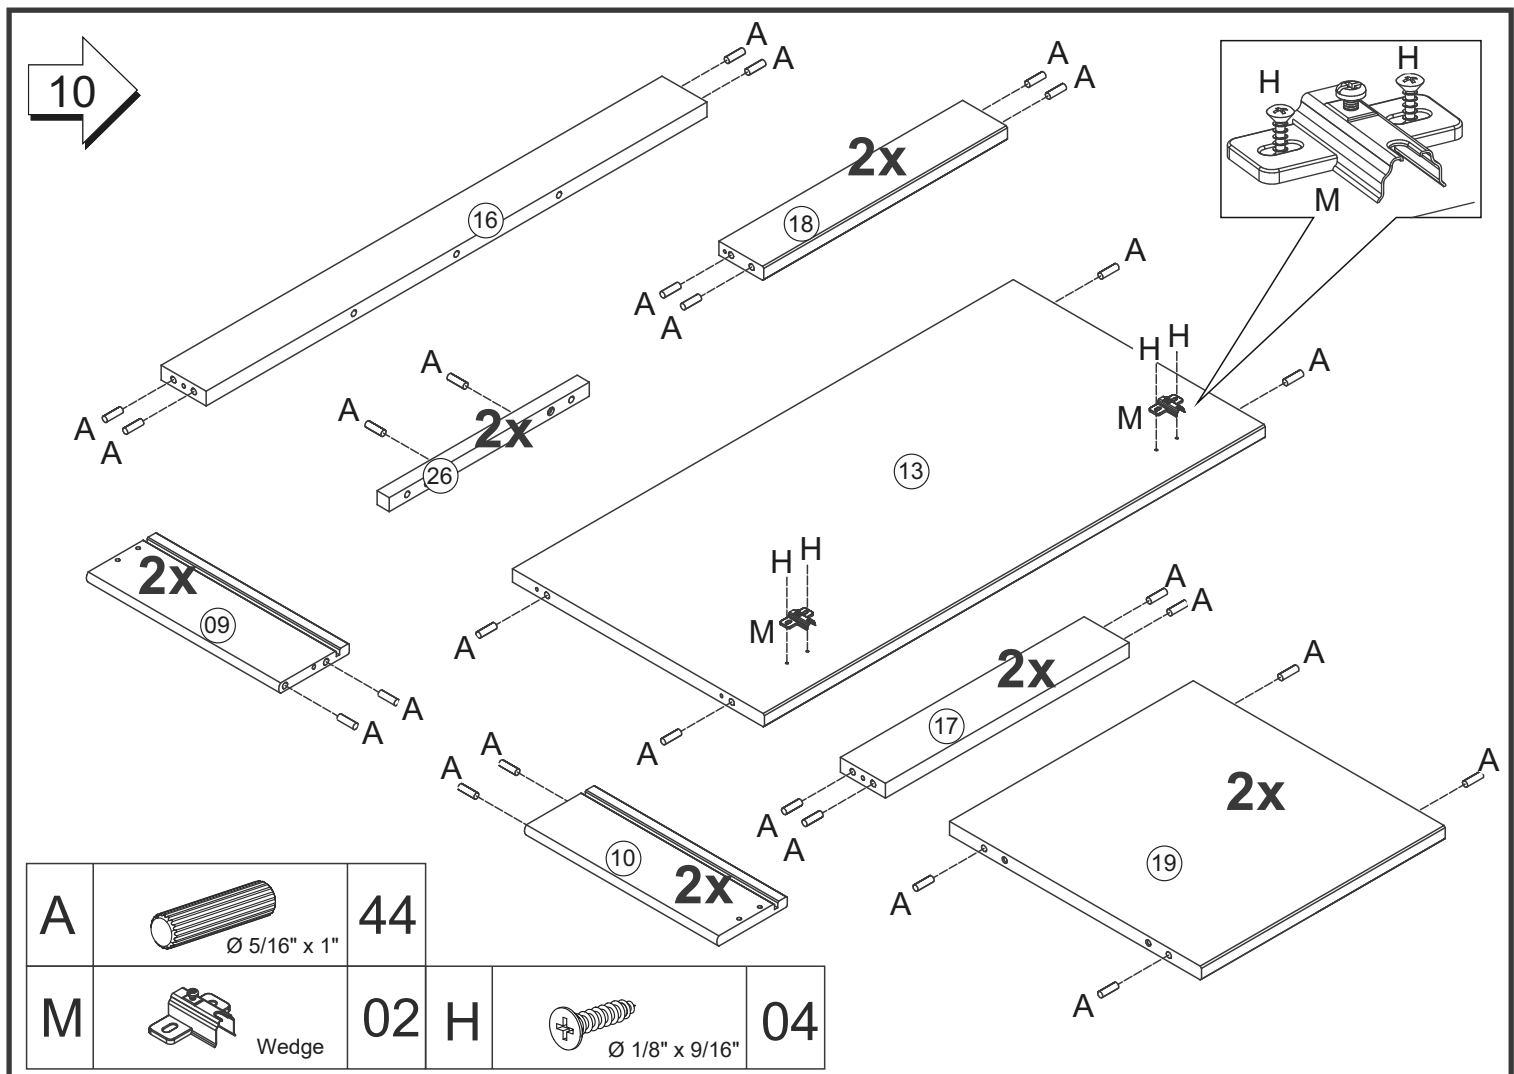


12 2x

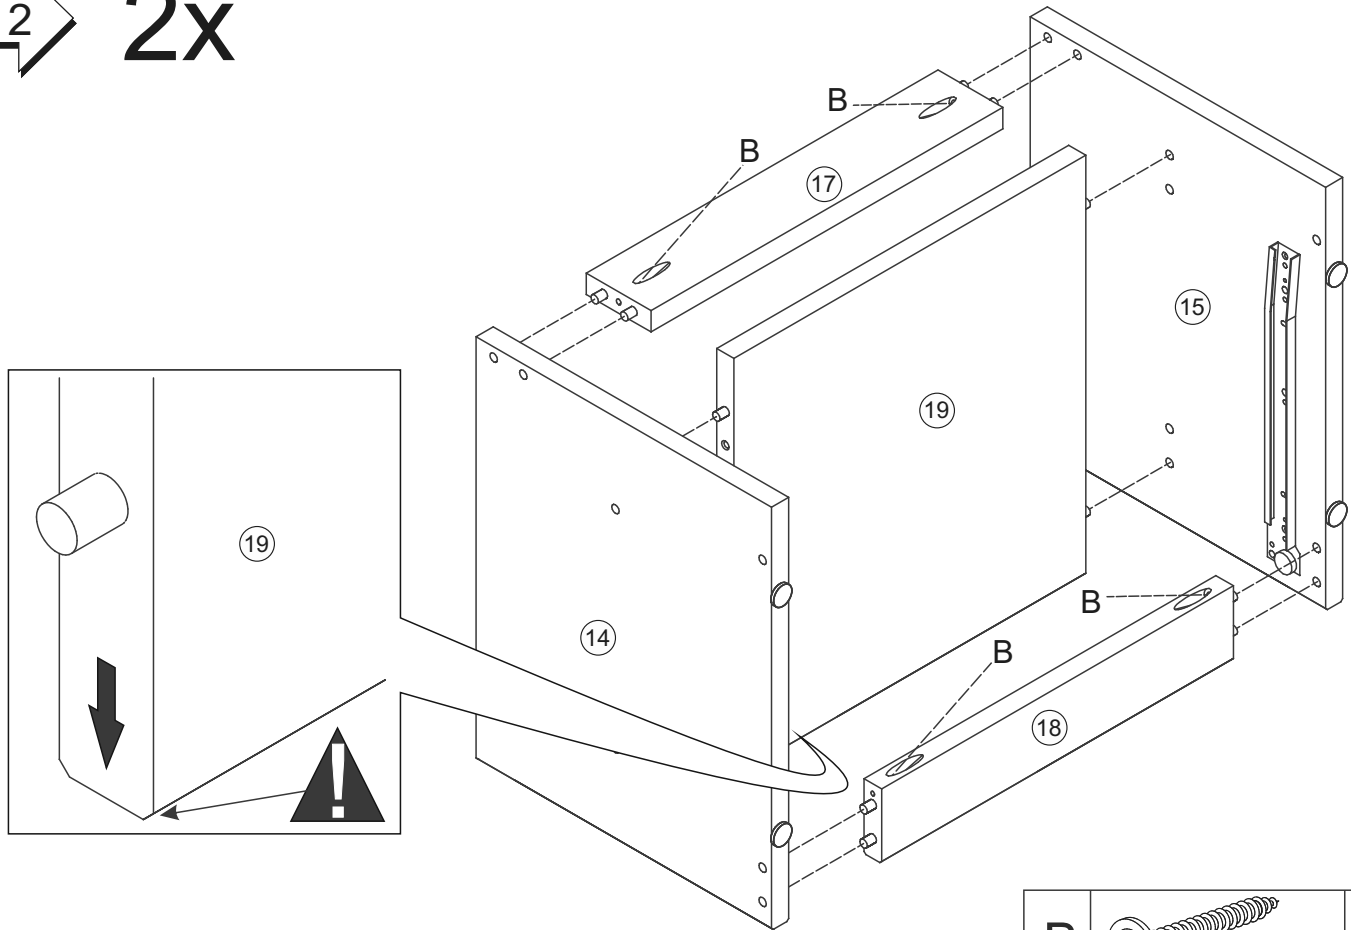

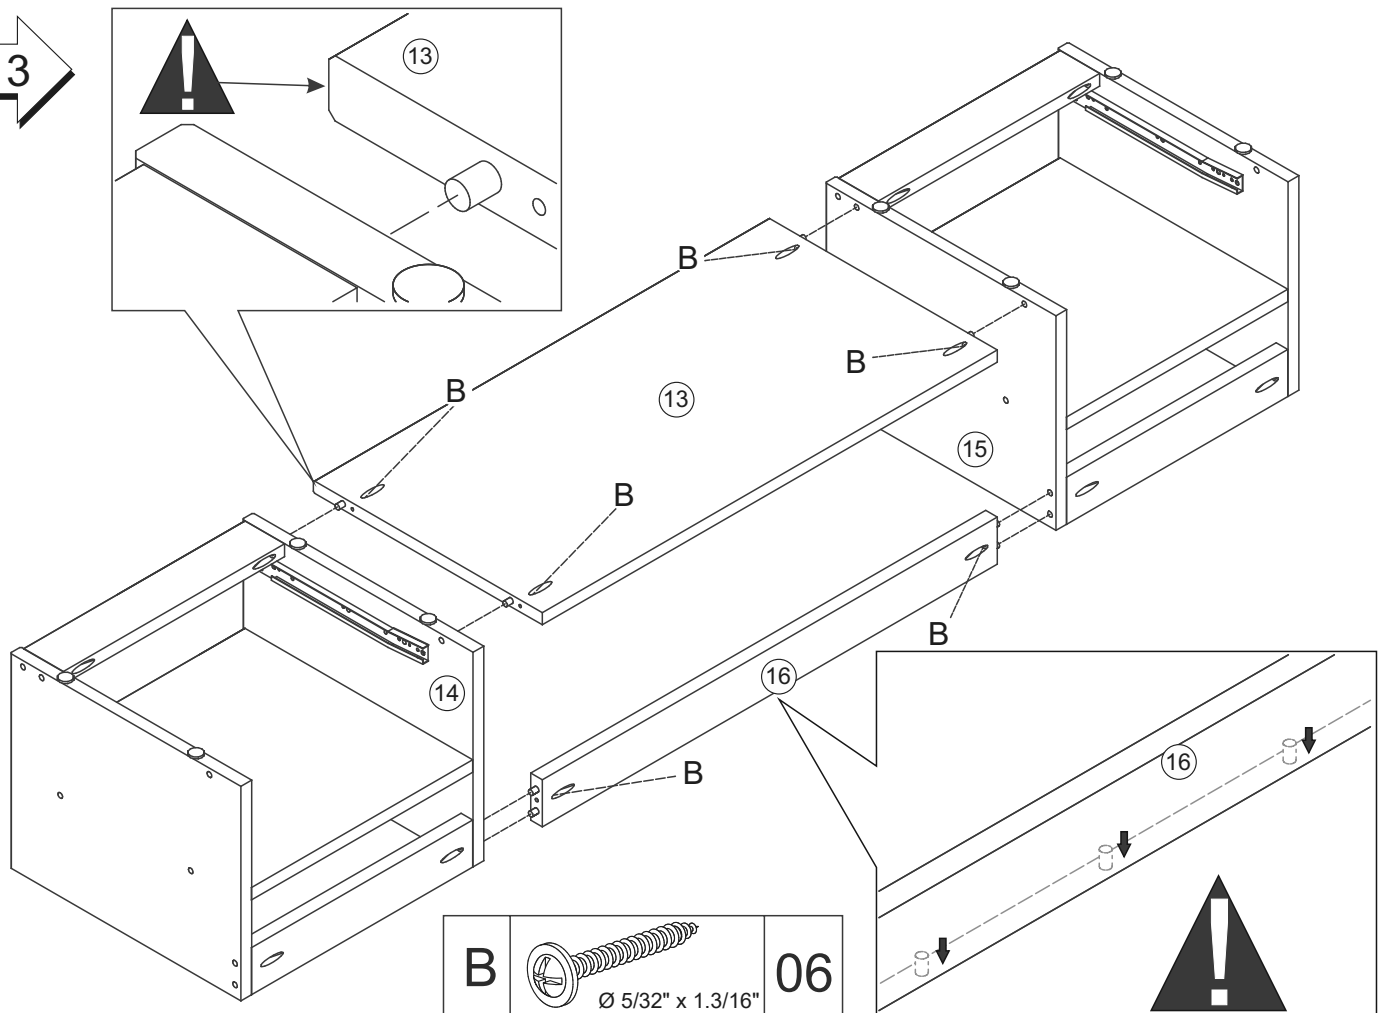


13

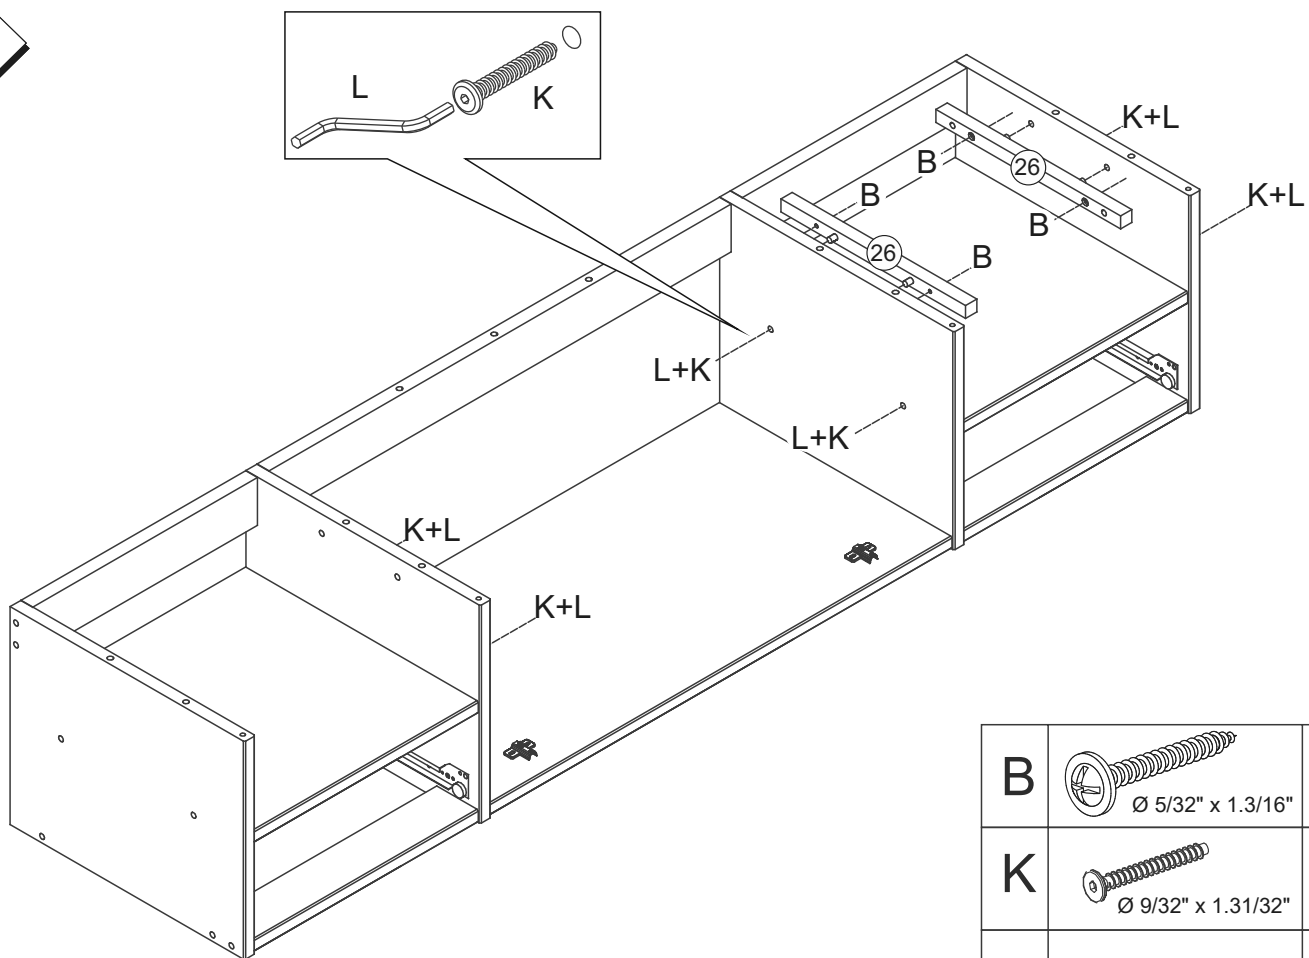



14






B	 Ø 5/32" x 1.3/16"	04
K	 Ø 9/32" x 1.31/32"	06
L	 Allen Key	01


15

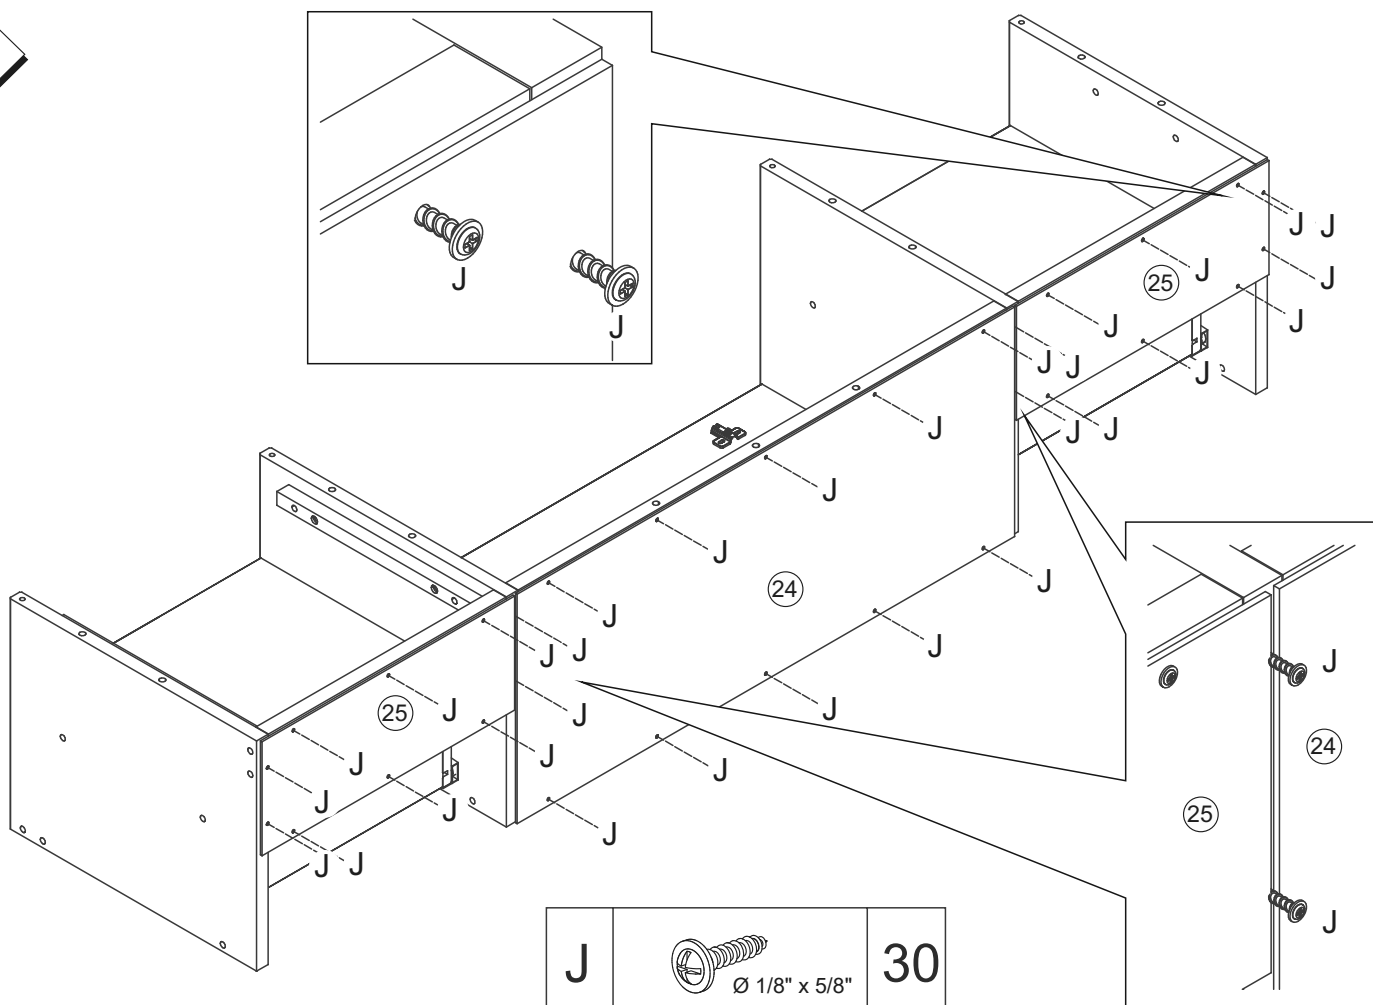





J	 Ø 1/8" x 5/8"	30
---	------------------------------------------------------------------------------------------------------	----

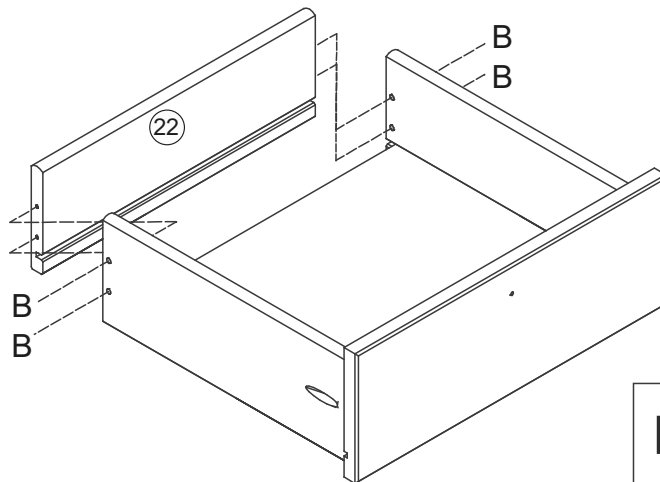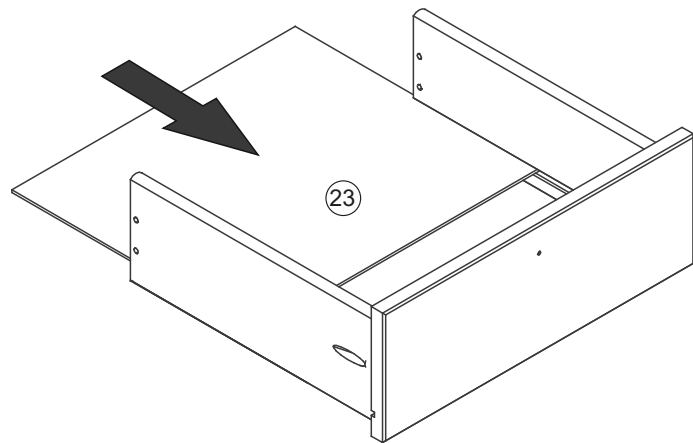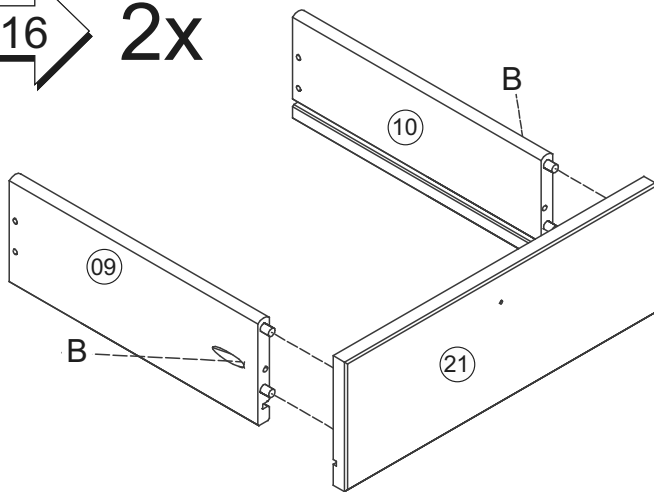




16 → 2x




B		Ø 5/32" x 1.3/16"	12
---	--------------------------------------------------------------------------------------	-------------------	----

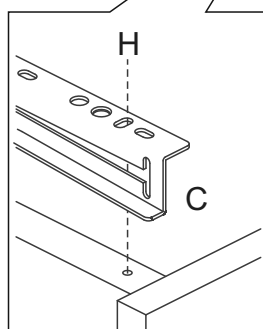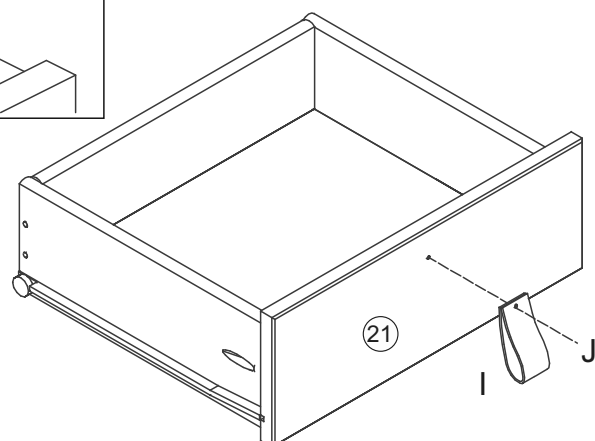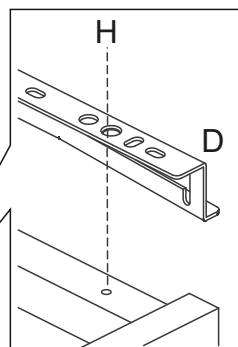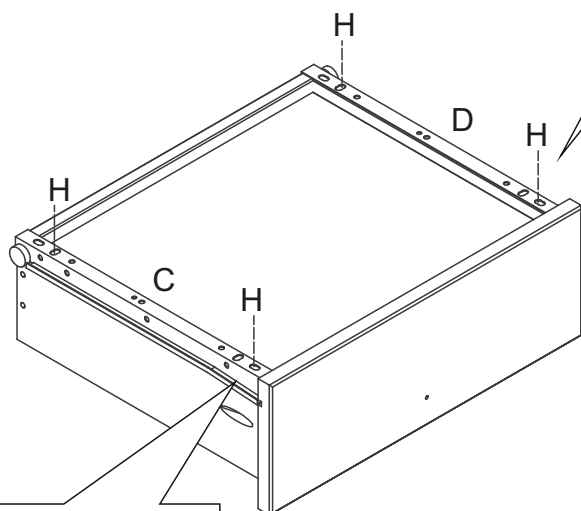17 → 2x







I	 Handle	02	J	 Ø 1/8" x 9/16"	02			
H	 Ø 1/8" x 9/16"	08	C	 12"	02	D	 12"	02



18

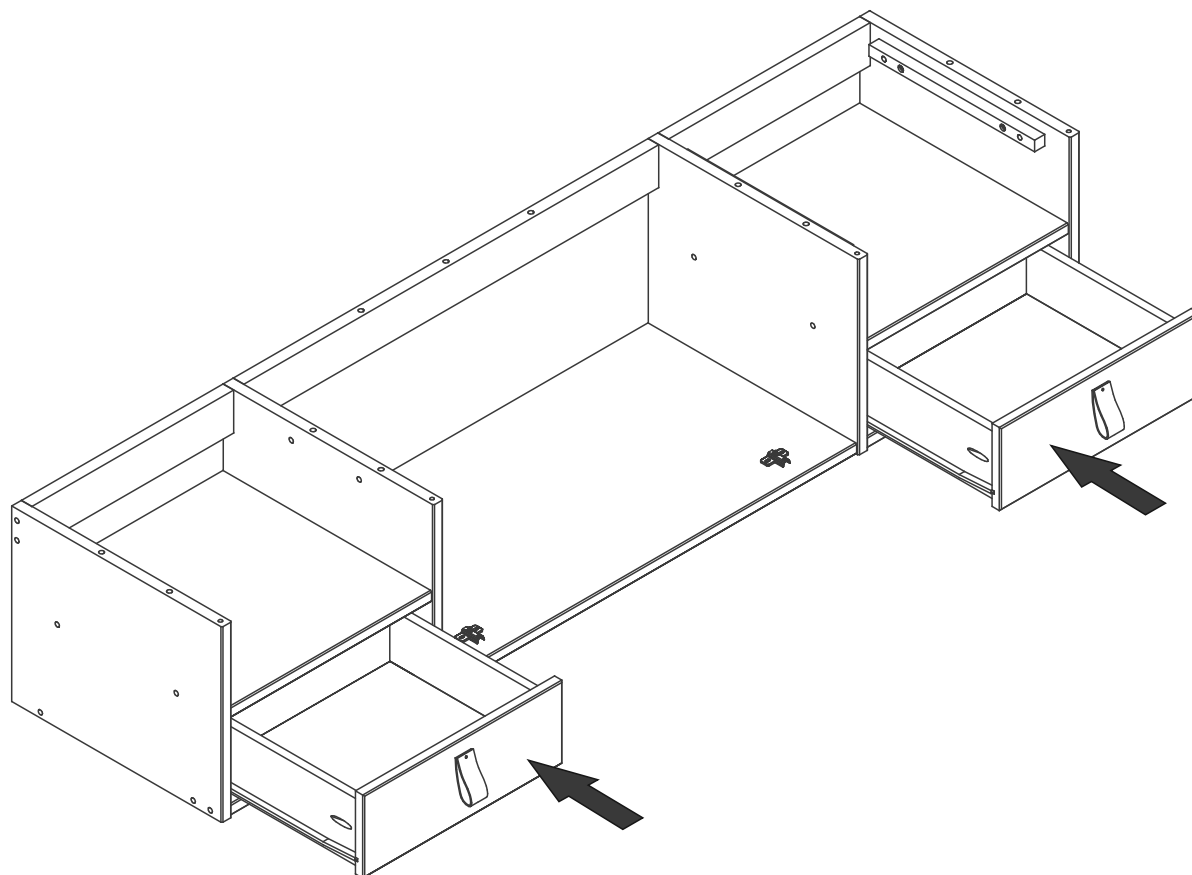


19

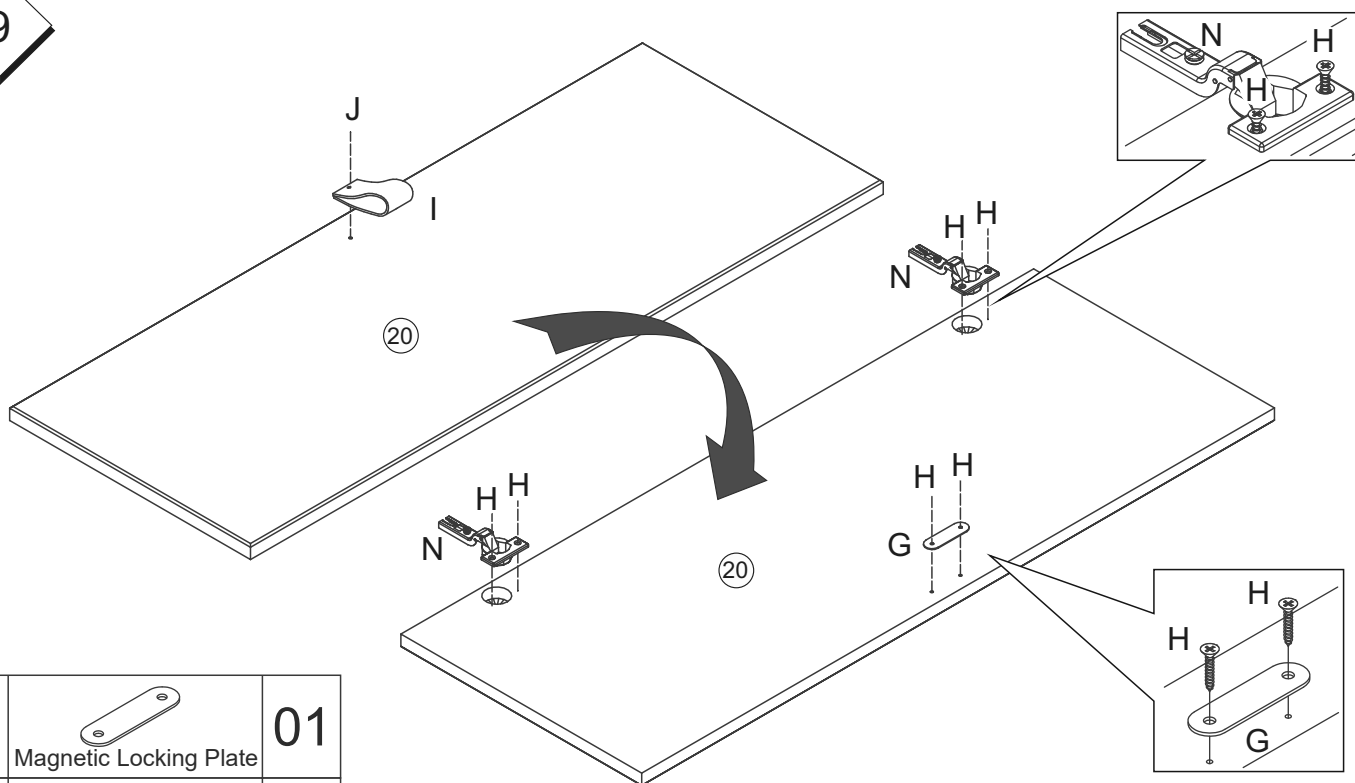


G		01
H	 Ø 1/8" x 9/16"	06
I		01

J	 Ø 1/8" x 9/16"	01	N		02
---	-------------------------------------------------------------------------------------------------------	----	---	--------------------------------------------------------------------------------------	----





Drawer Adjustment

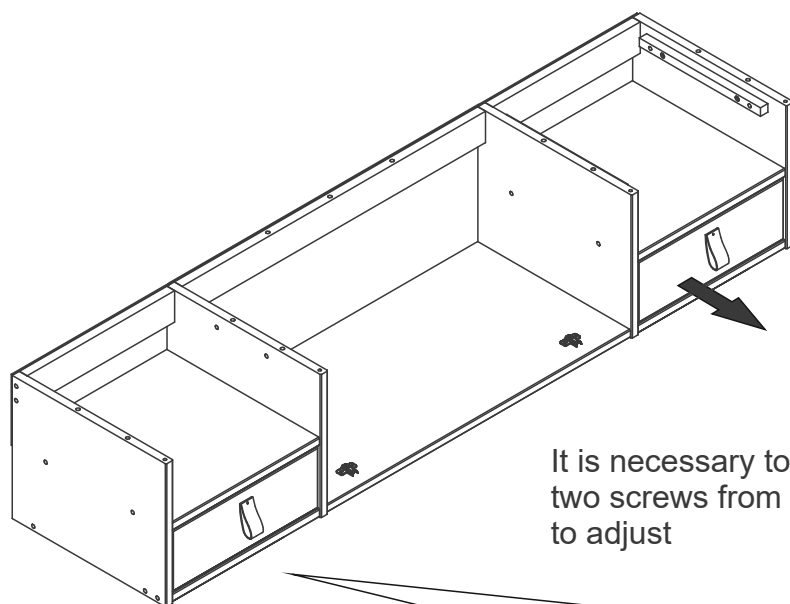

It is necessary to remove two screws from the slide to adjust


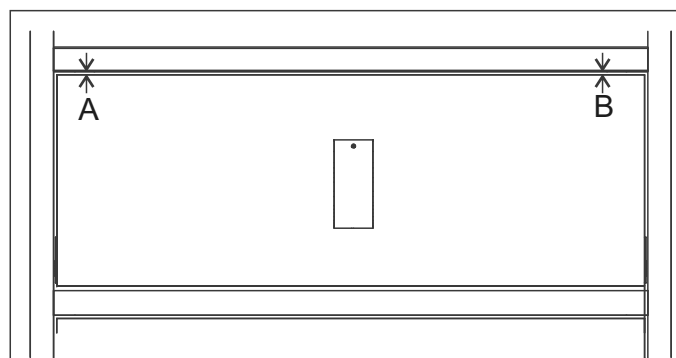


$A \neq B$

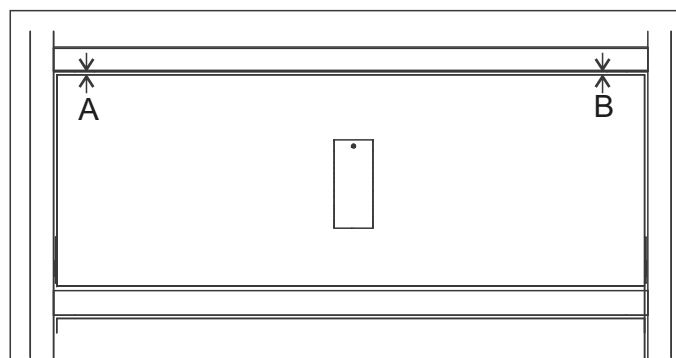
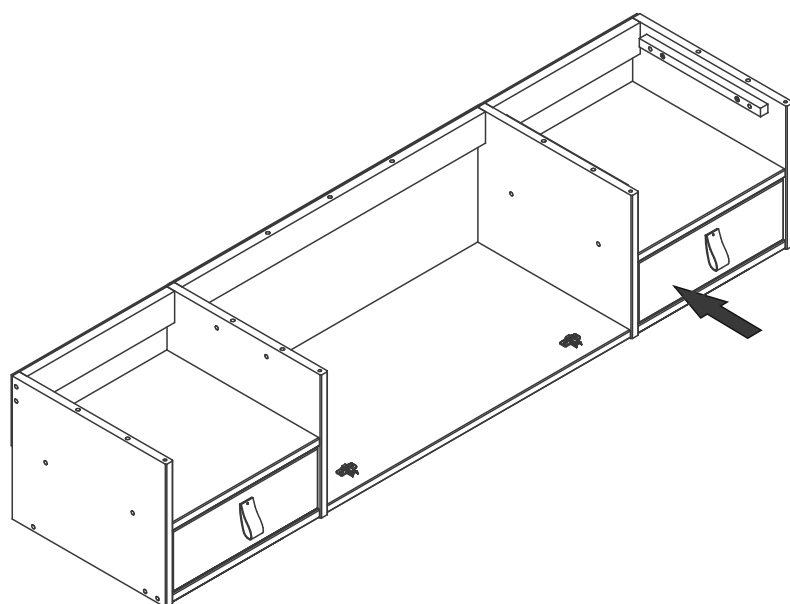
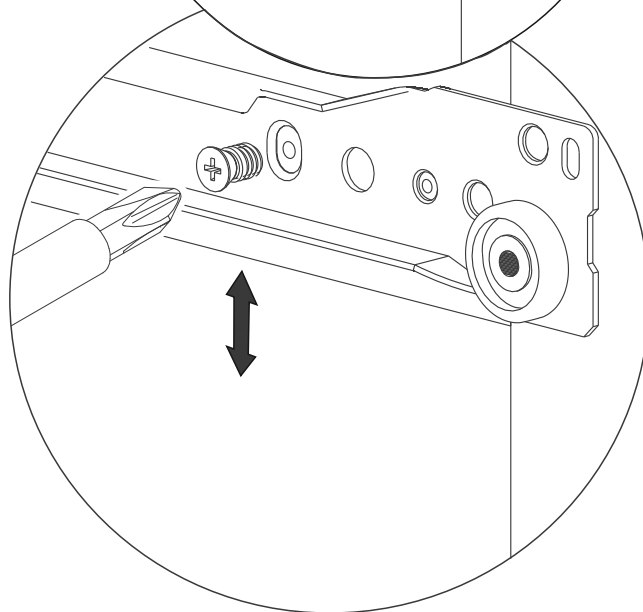
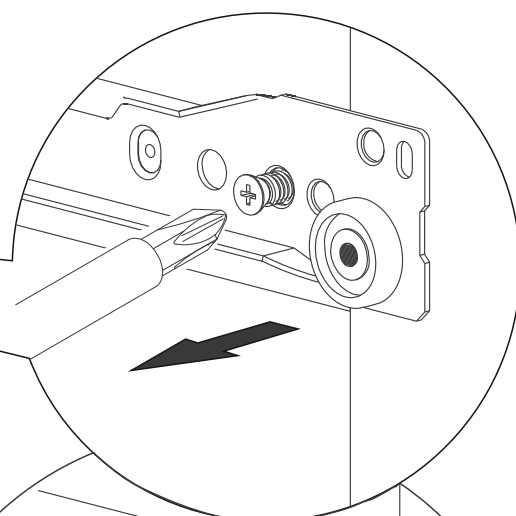


$A = B$

Drawer Adjustment

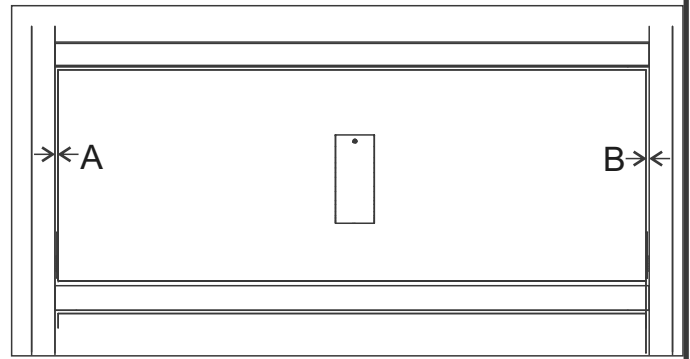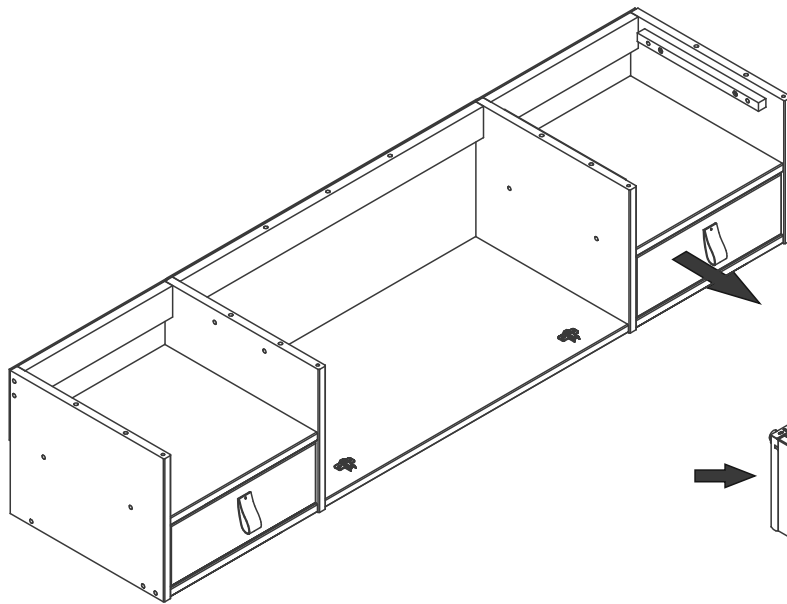


$A \neq B$

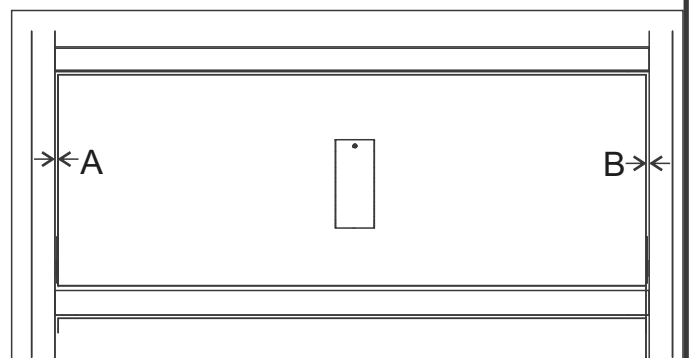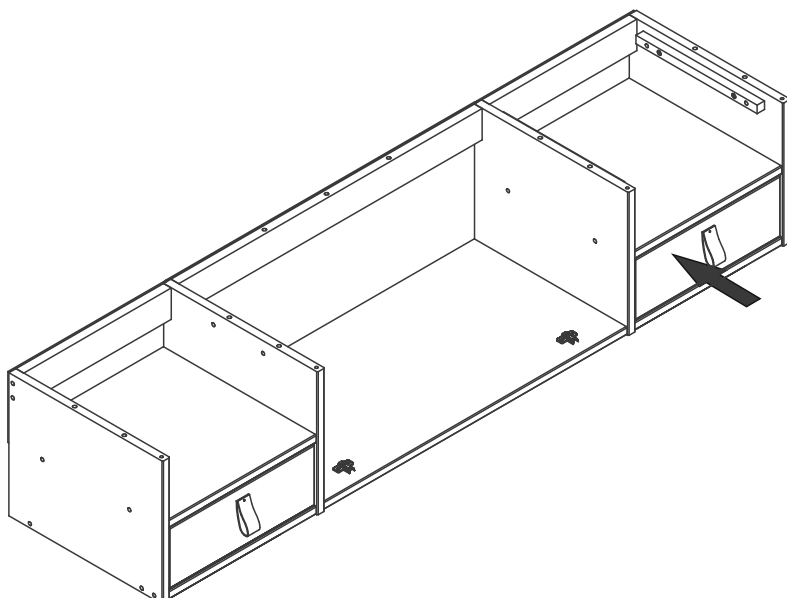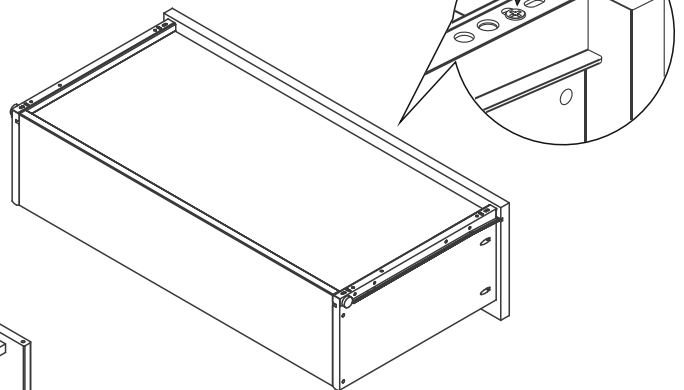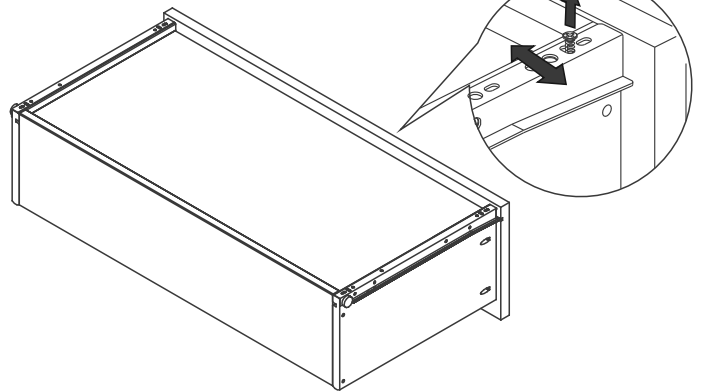

$A = B$








Side Module 2







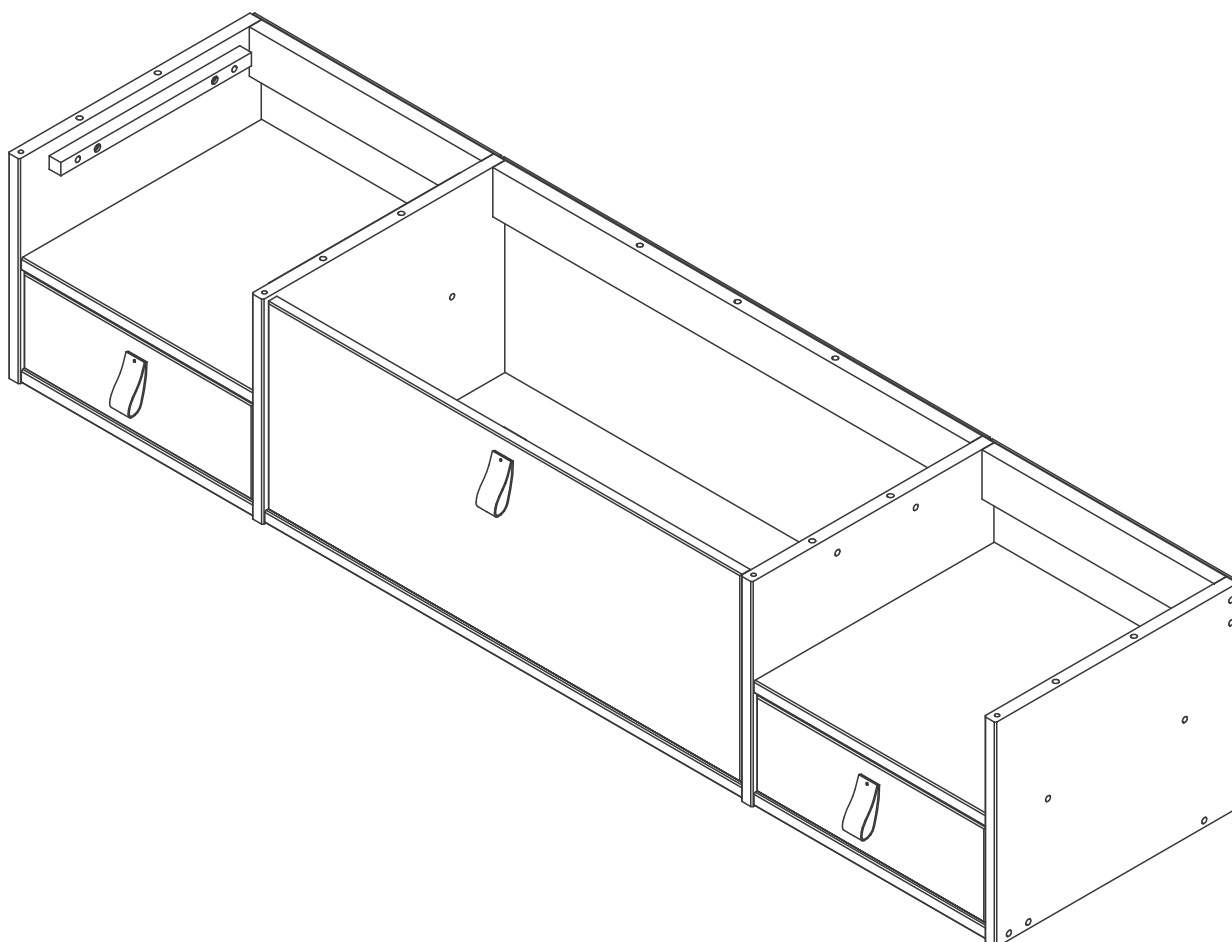


Attention!


- 1- Please read the assembly instructions very carefully before assembling your product.
- 2- The product assembly has to be carried out on a clean and flat surface. We recommend the use of packaging material (cartons/cardboards) to cover your room surface during assembly in order to protect the floor.
- 3- The screws and bolts of your furniture have to be tightened periodically.
- 4- Please avoid contact to sharp objects.
- 5- Please avoid hitting the furniture surface.



HARDWARE/ACCESSORIES

A	 Ø 5/16" x 1"	44
B	 Ø 5/32" x 1.3/16"	30
C	 12"	02
D	 12"	02
E	 Ø 1/4" x 13/32"	08
F	 Furniture glide	08
G	 Magnetic Locking Plate	01


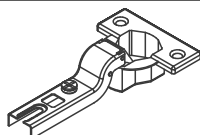
H	 Ø 1/8" x 9/16"	18
I	 Handle	03
J	 Ø 1/8" x 9/16"	33
K	 Ø 9/32" x 1.31/32"	06
L	 Allen Key	01
M	 Wedge	02
N	 Hinge-joint	02

COMPONENTS


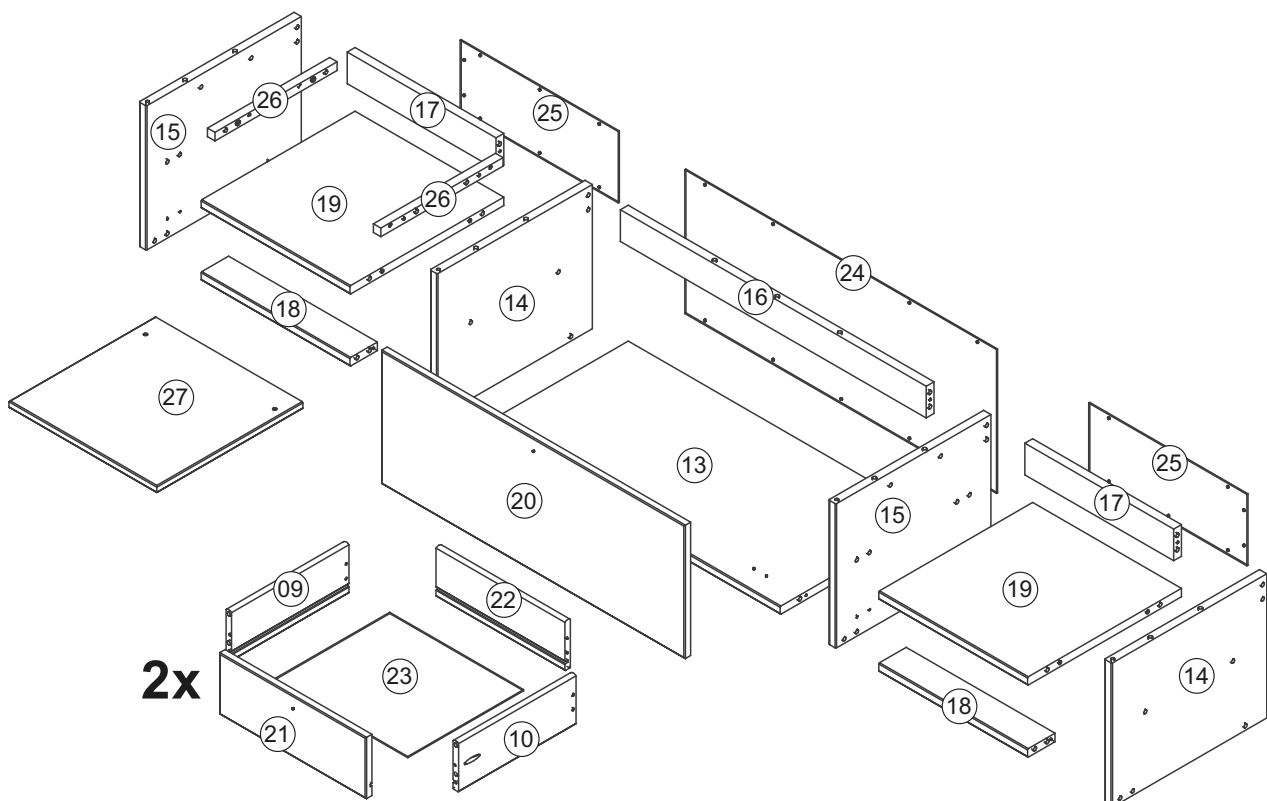


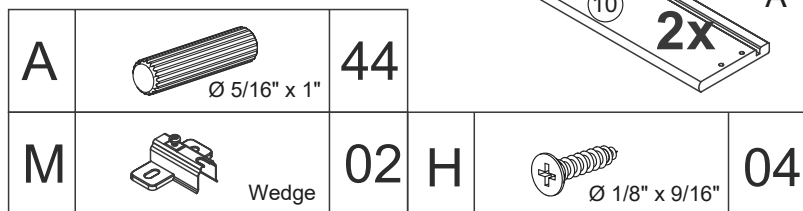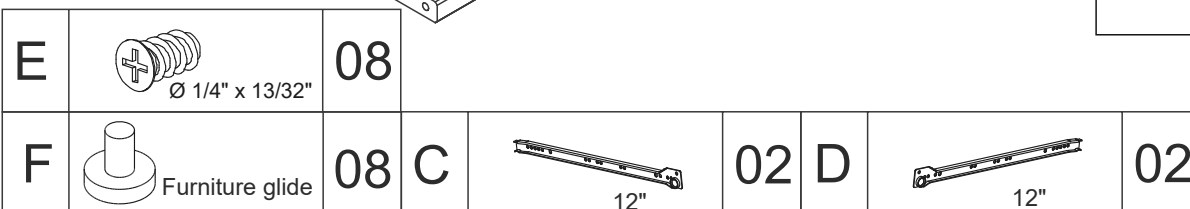 $2x$ 


22 **2x**

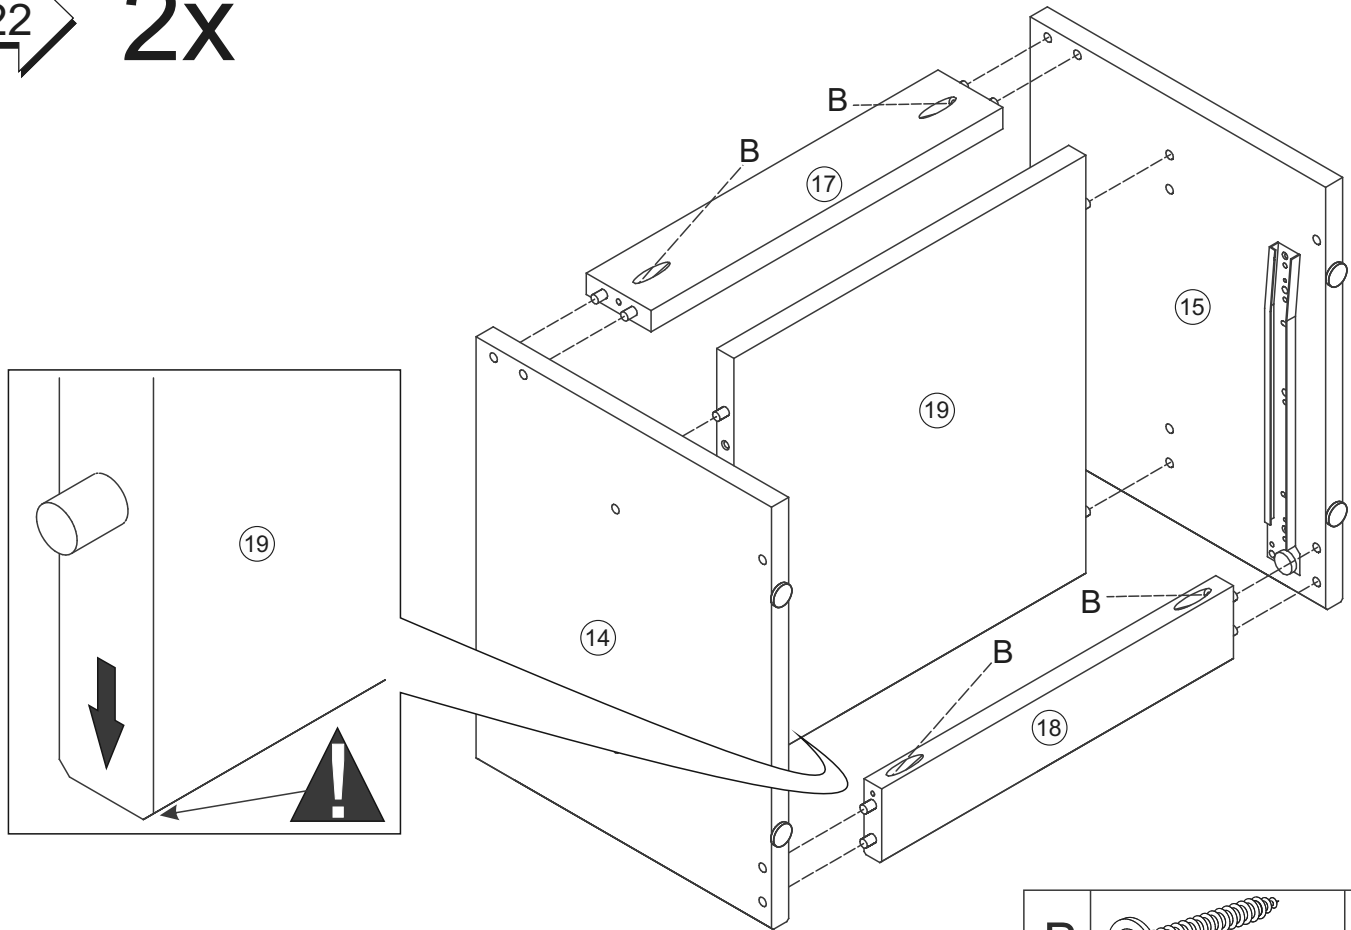


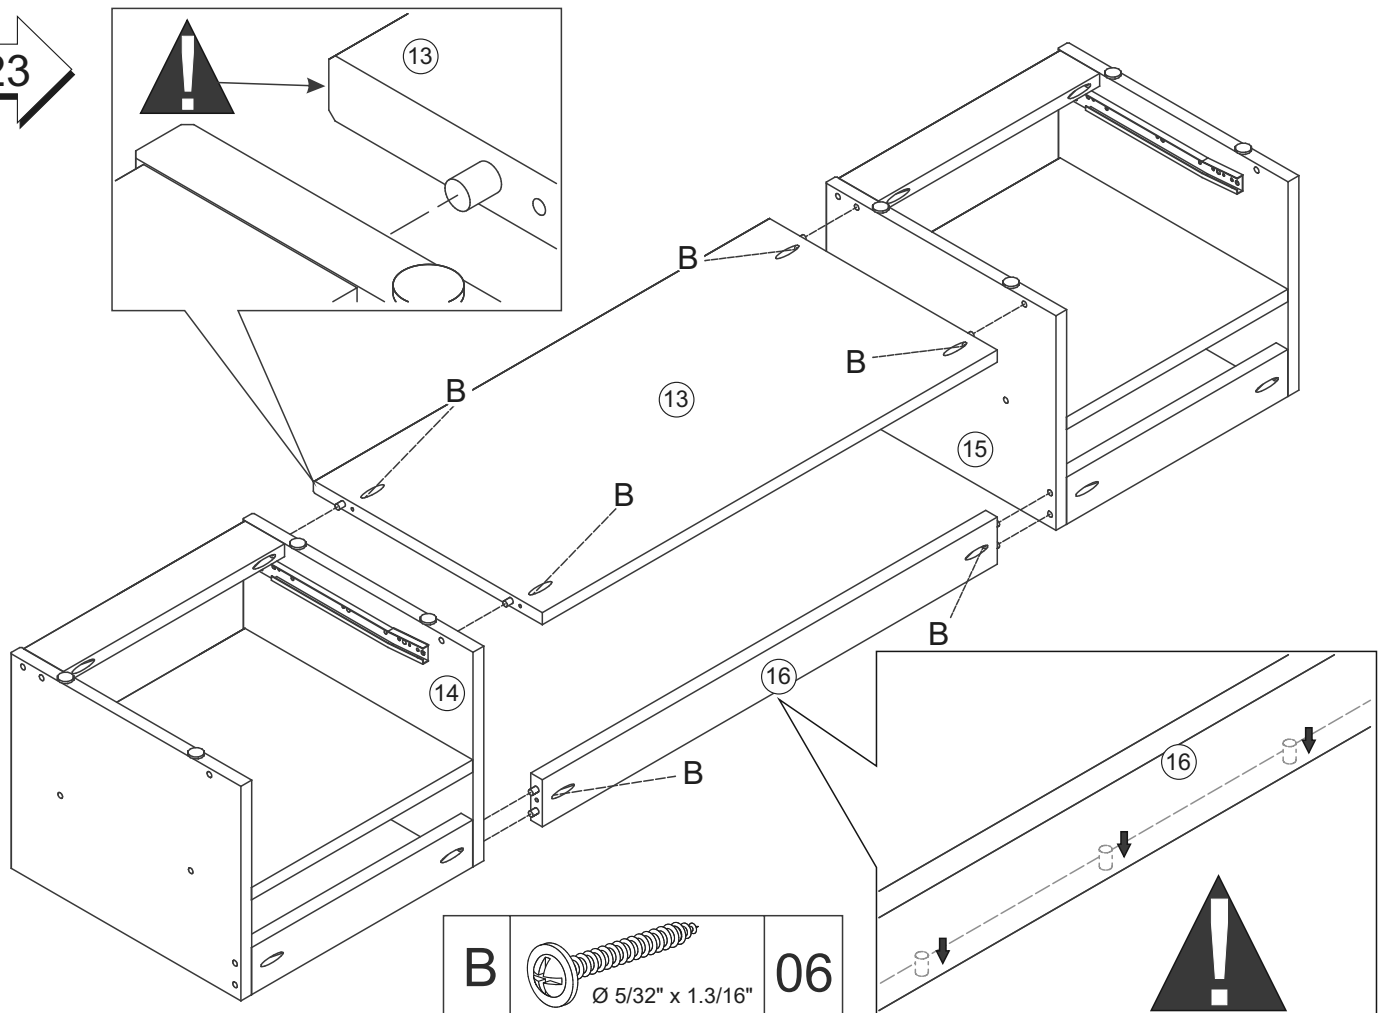

23

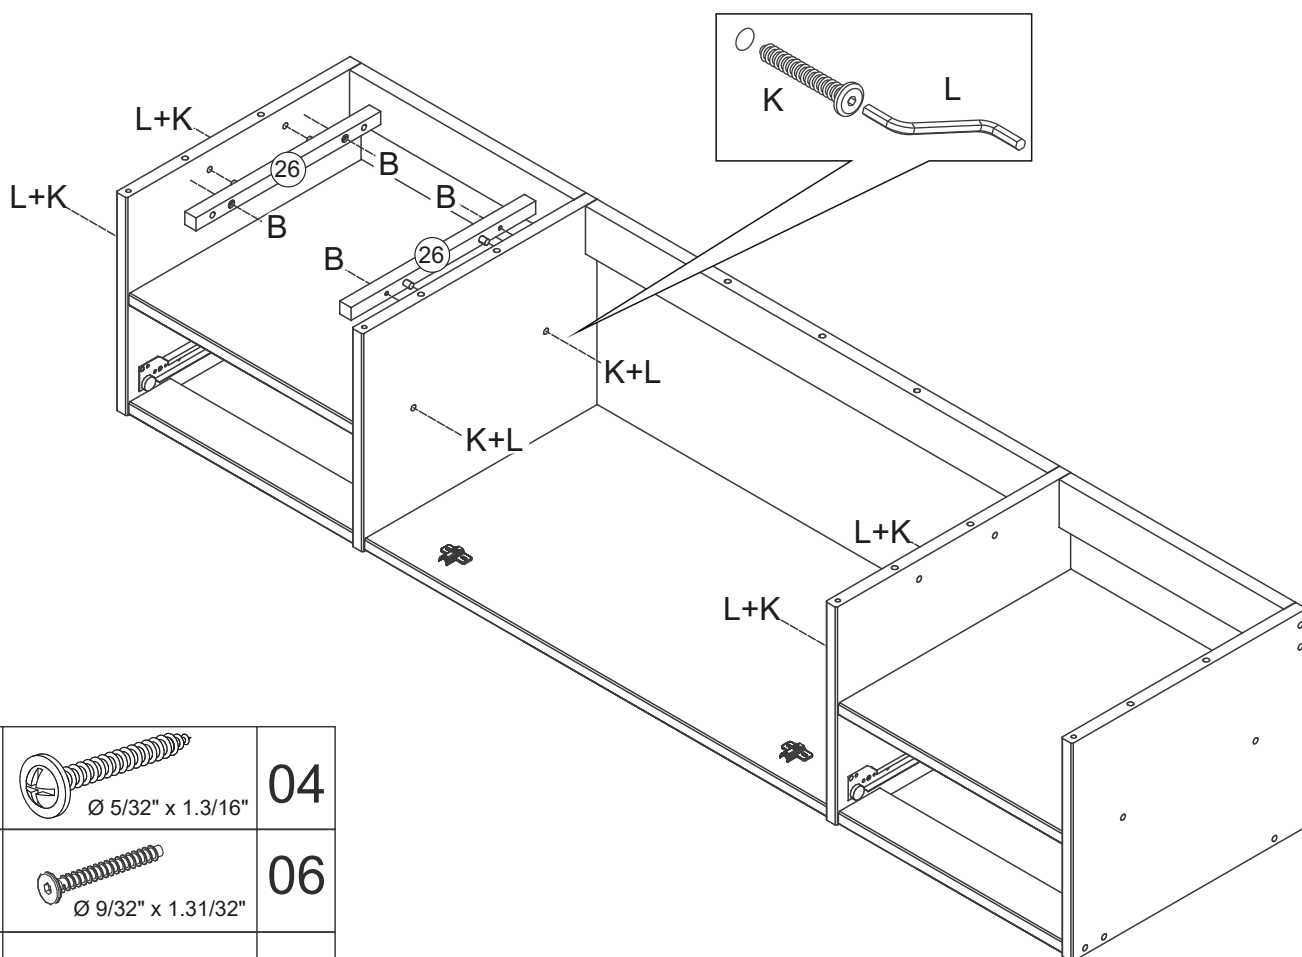



24






B	 Ø 5/32" x 1.31/16"	04
K	 Ø 9/32" x 1.31/32"	06
L	 Allen Key	01


25

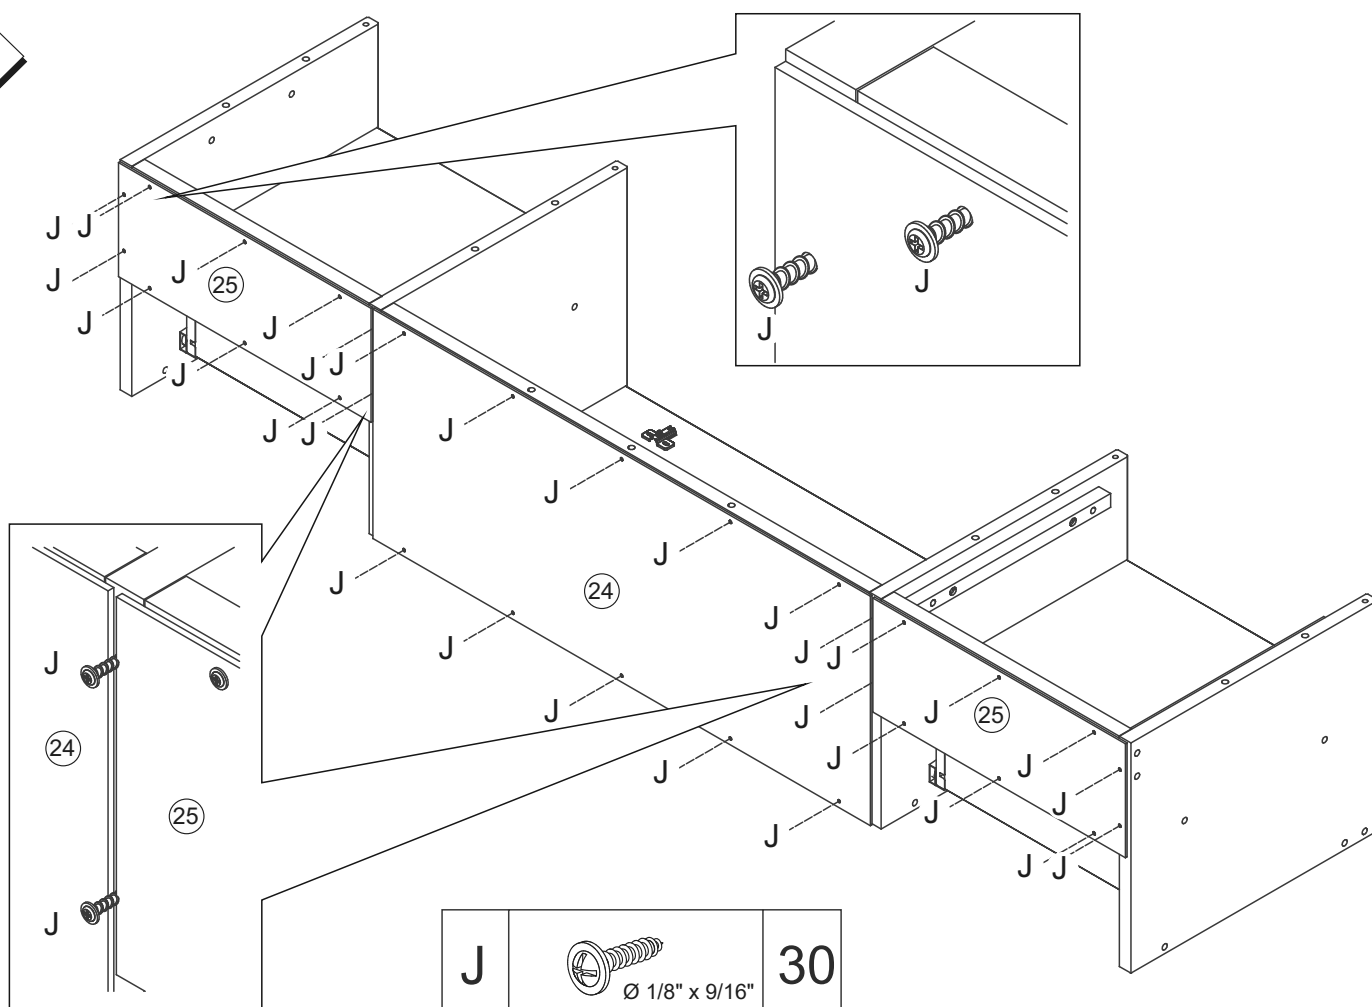





J	 Ø 1/8" x 9/16"	30
---	-------------------------------------------------------------------------------------------------------	----






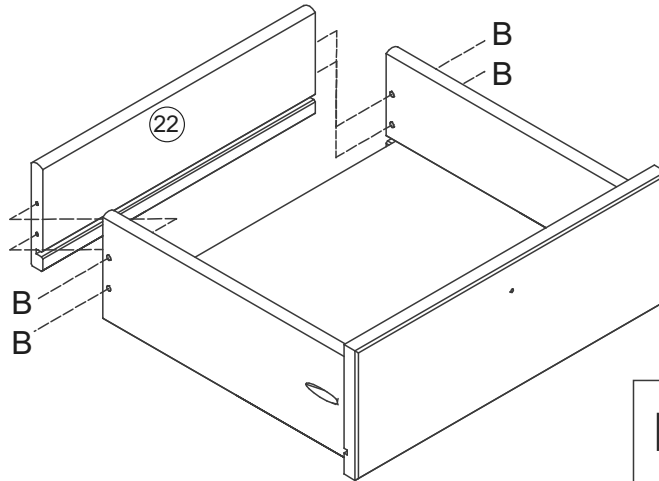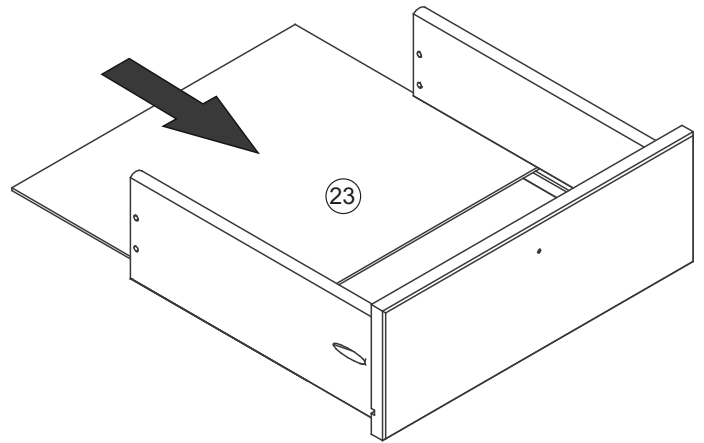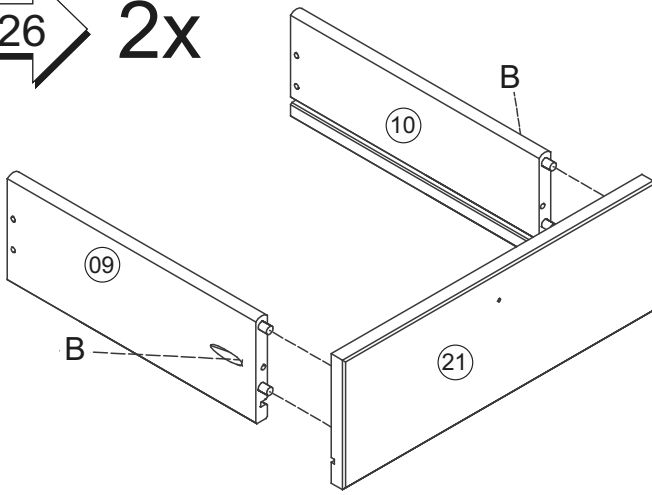26 → 2x




B		12
Ø 5/32" x 1.3/16"		

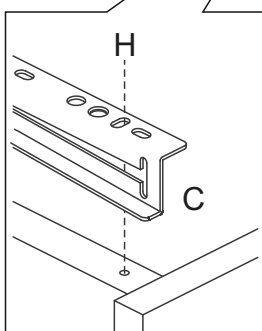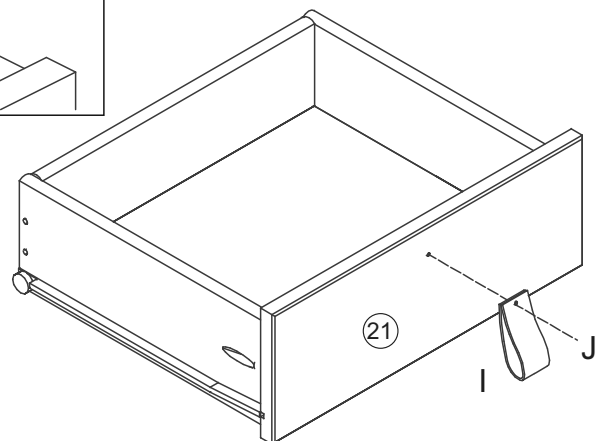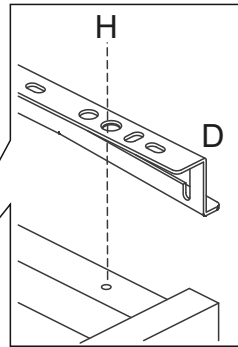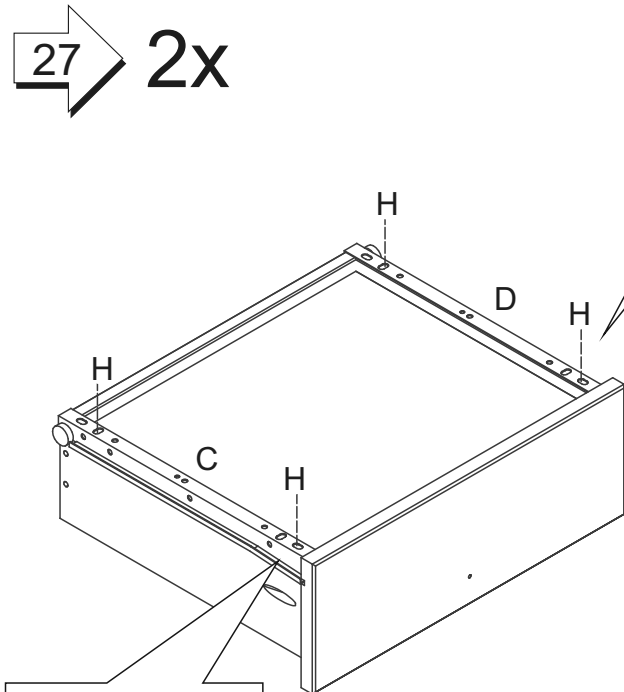27 → 2x







I		02	J		02		
Handle				Ø 1/8" x 9/16"			
H		08	C		02	D	
Ø 1/8" x 9/16"				12"			12"



28

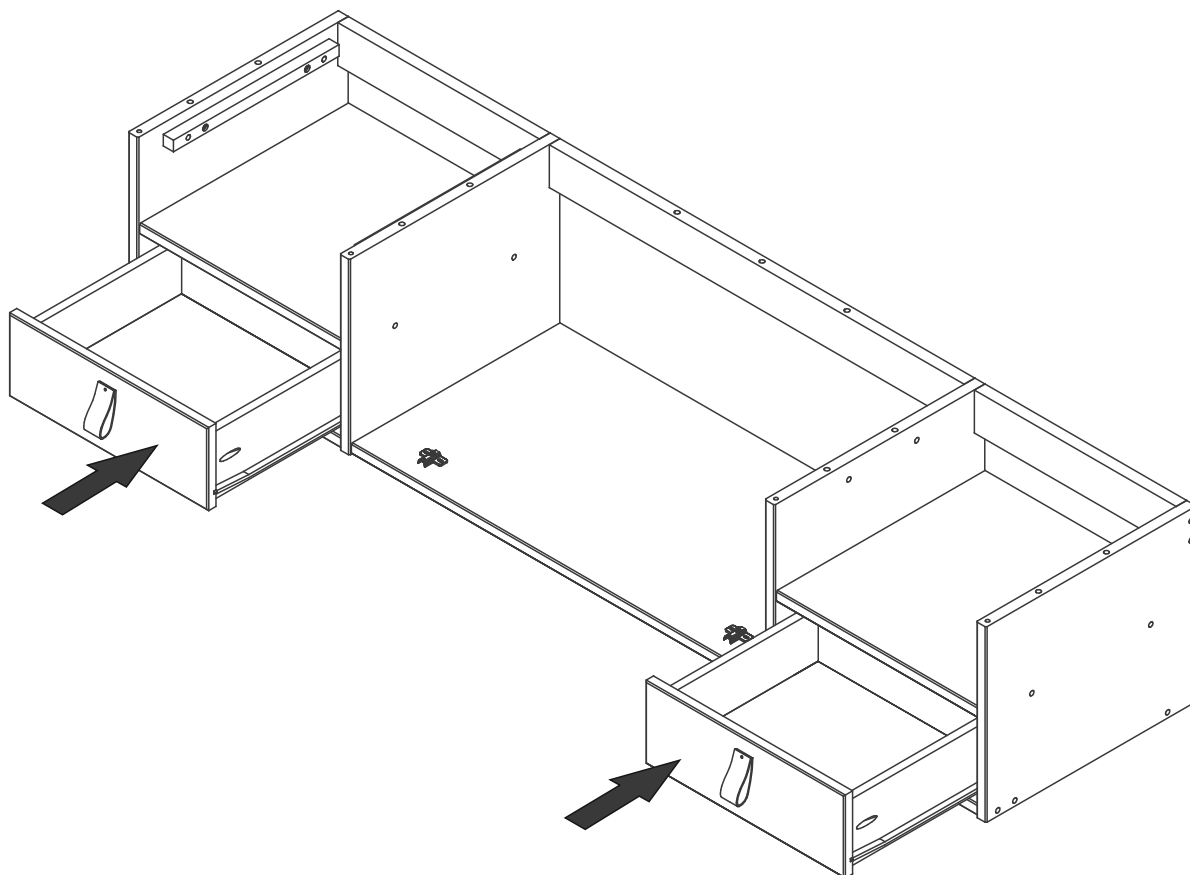


29

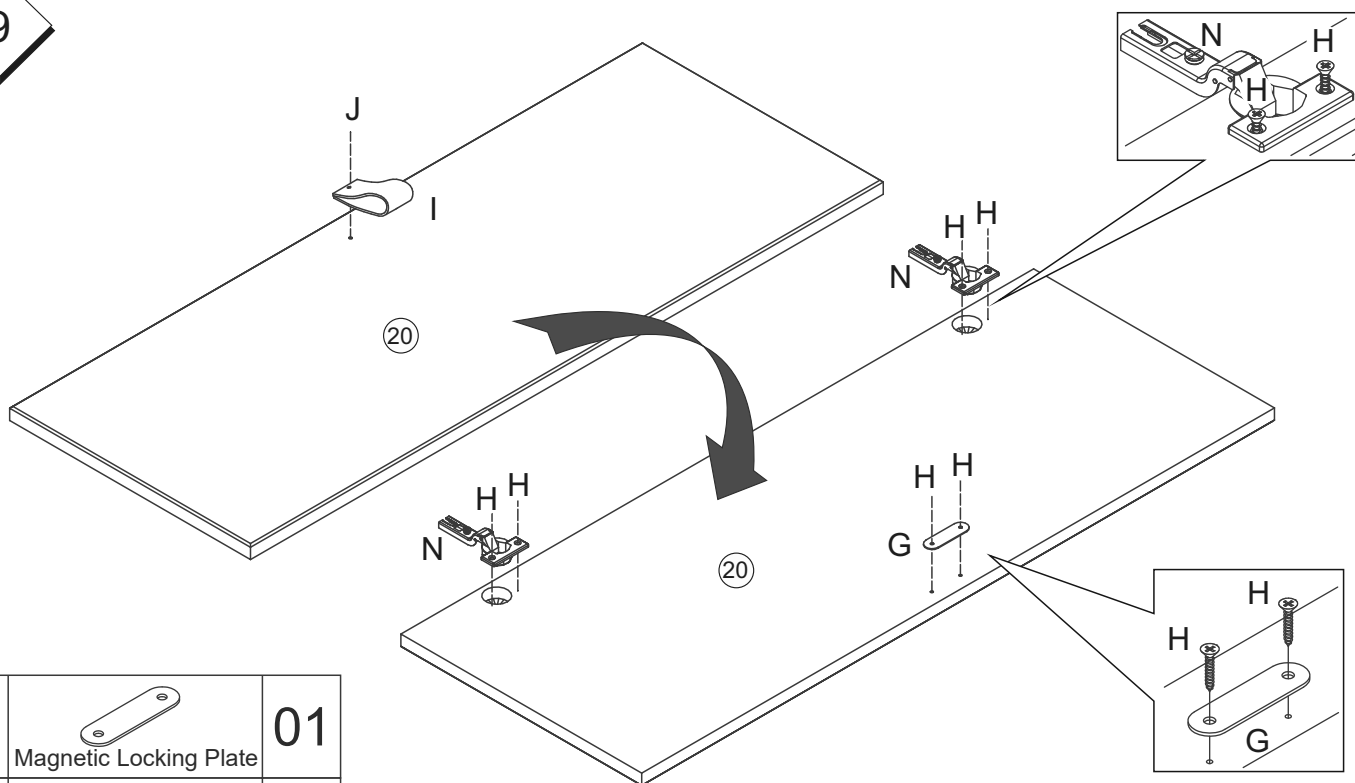


G		01
H	 Ø 1/8" x 9/16"	06
I		01

J	 Ø 1/8" x 9/16"	01	N		02
---	-------------------------------------------------------------------------------------------------------	----	---	--------------------------------------------------------------------------------------	----




Drawer Adjustment

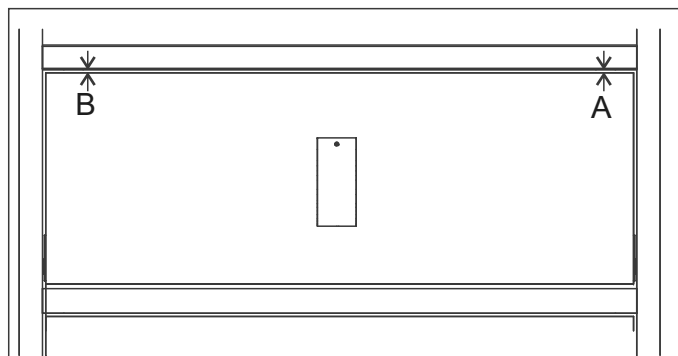


$A \neq B$

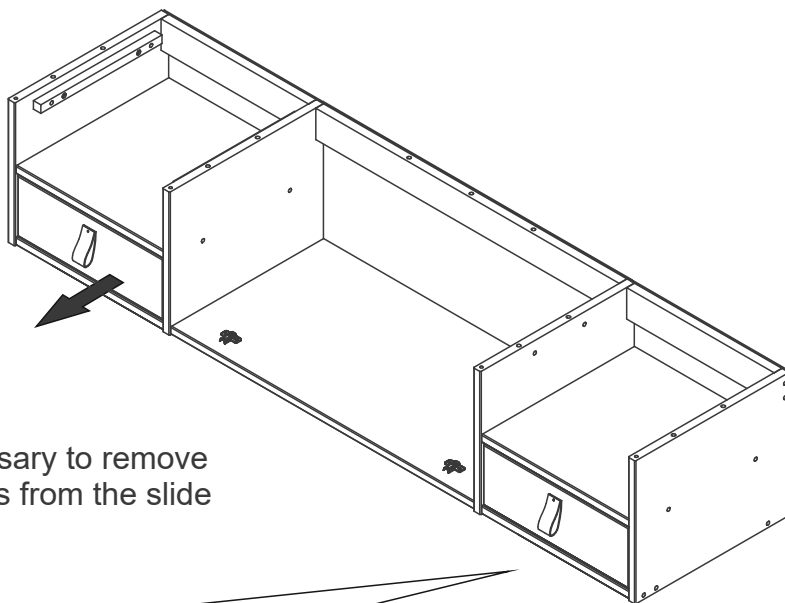


It is necessary to remove two screws from the slide to adjust

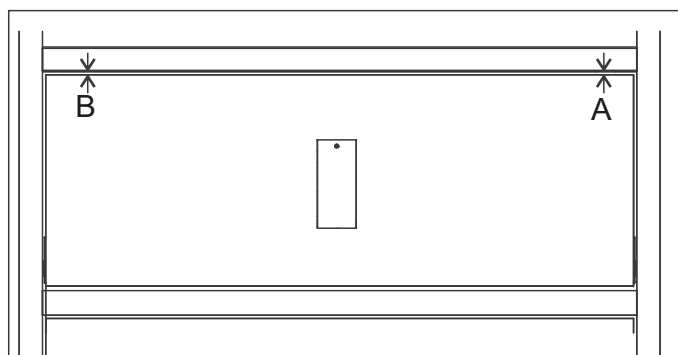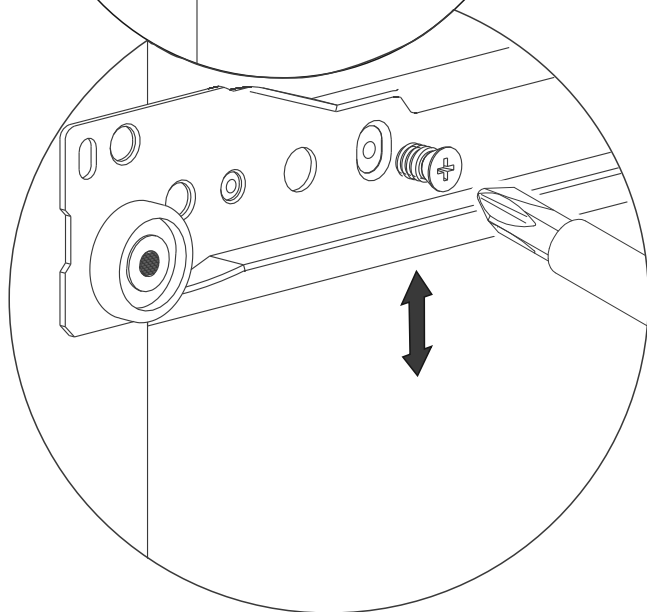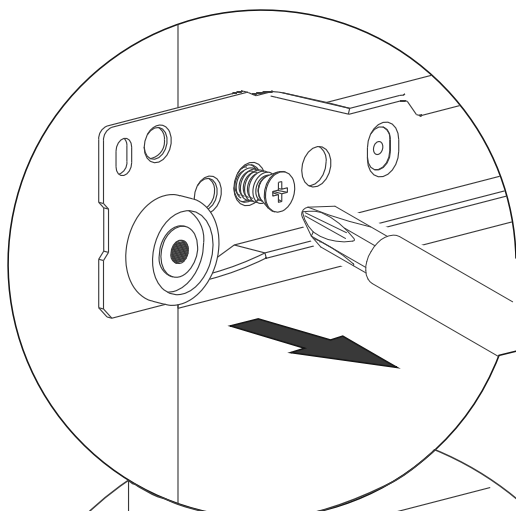








$A = B$

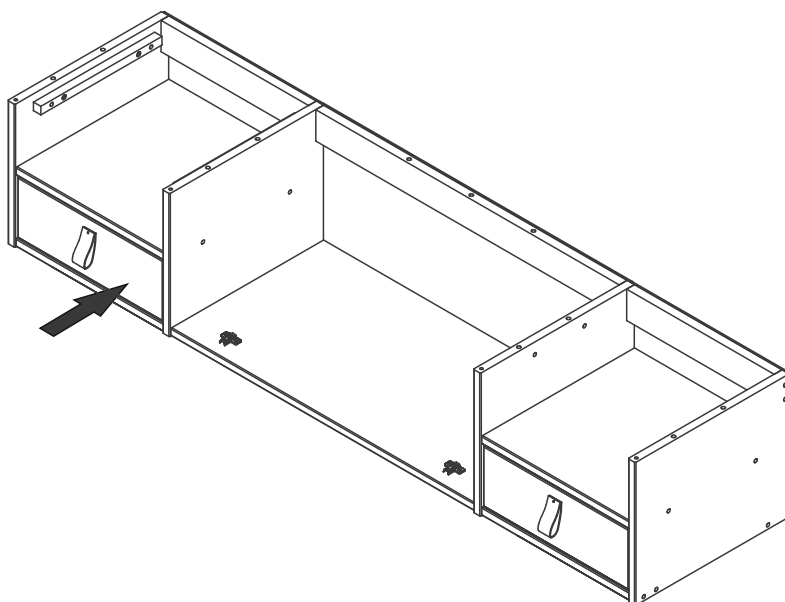

Drawer Adjustment

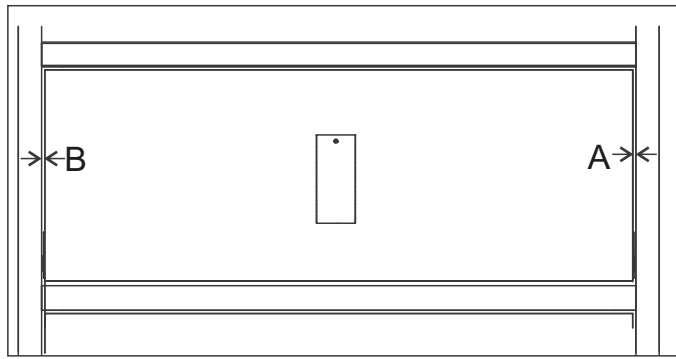


$A \neq B$

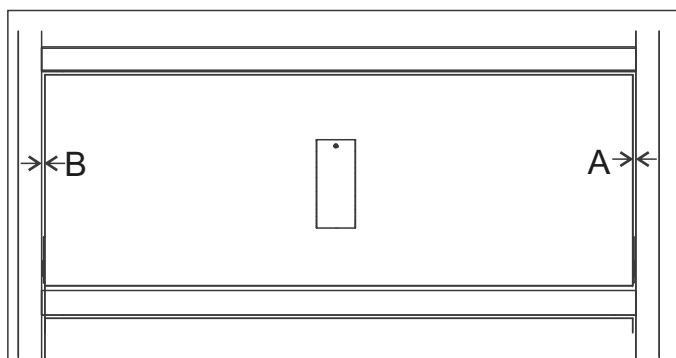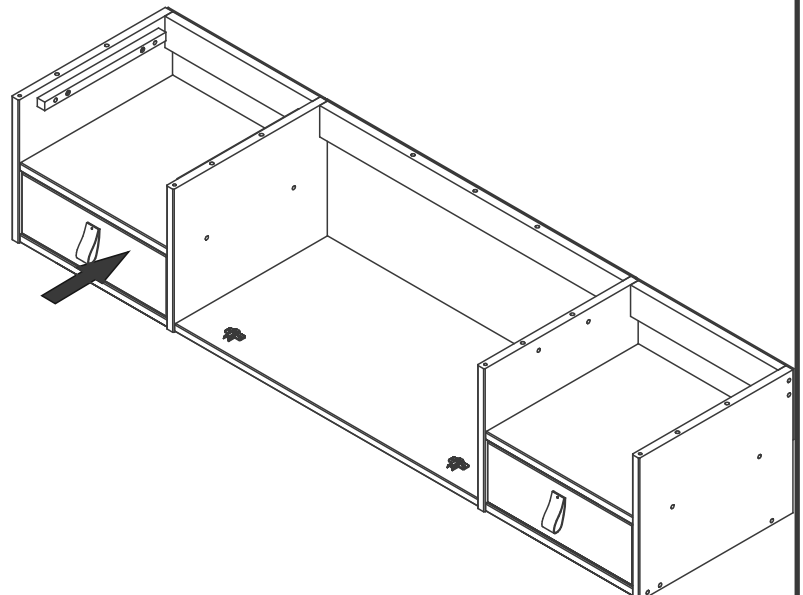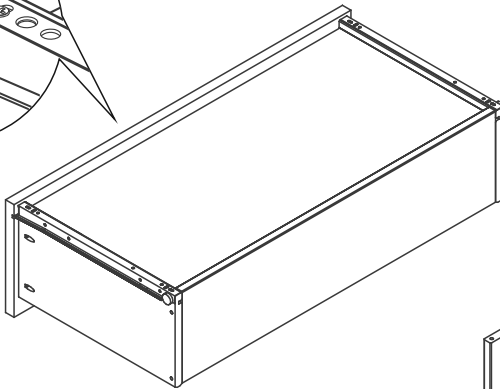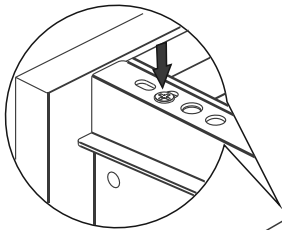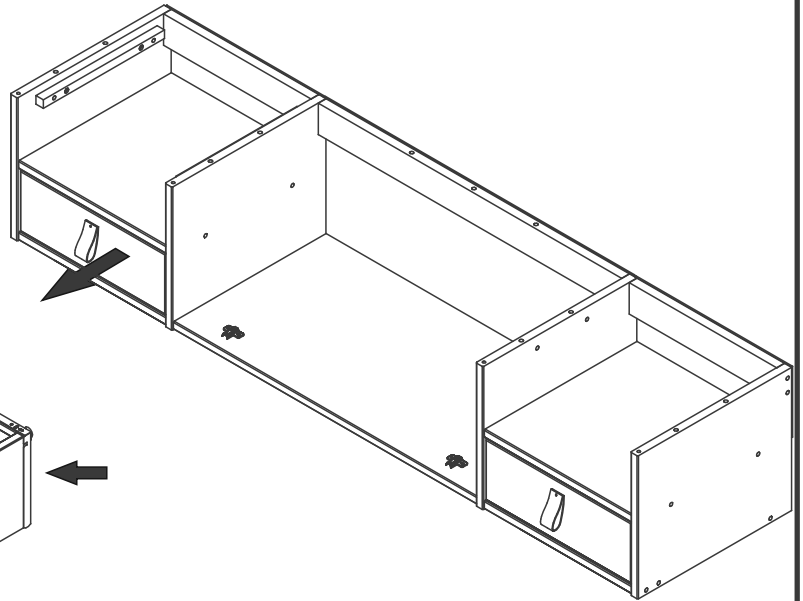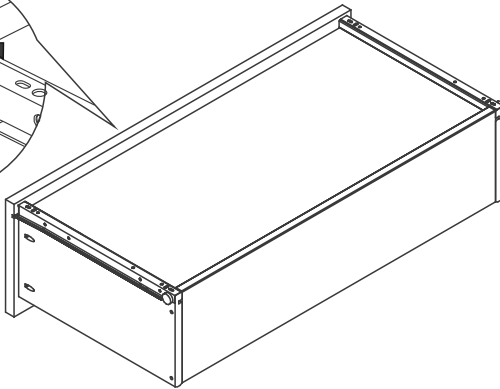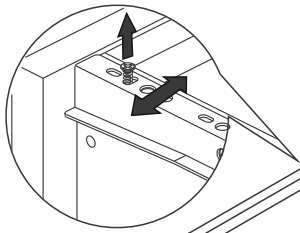

$A = B$









Upper Side




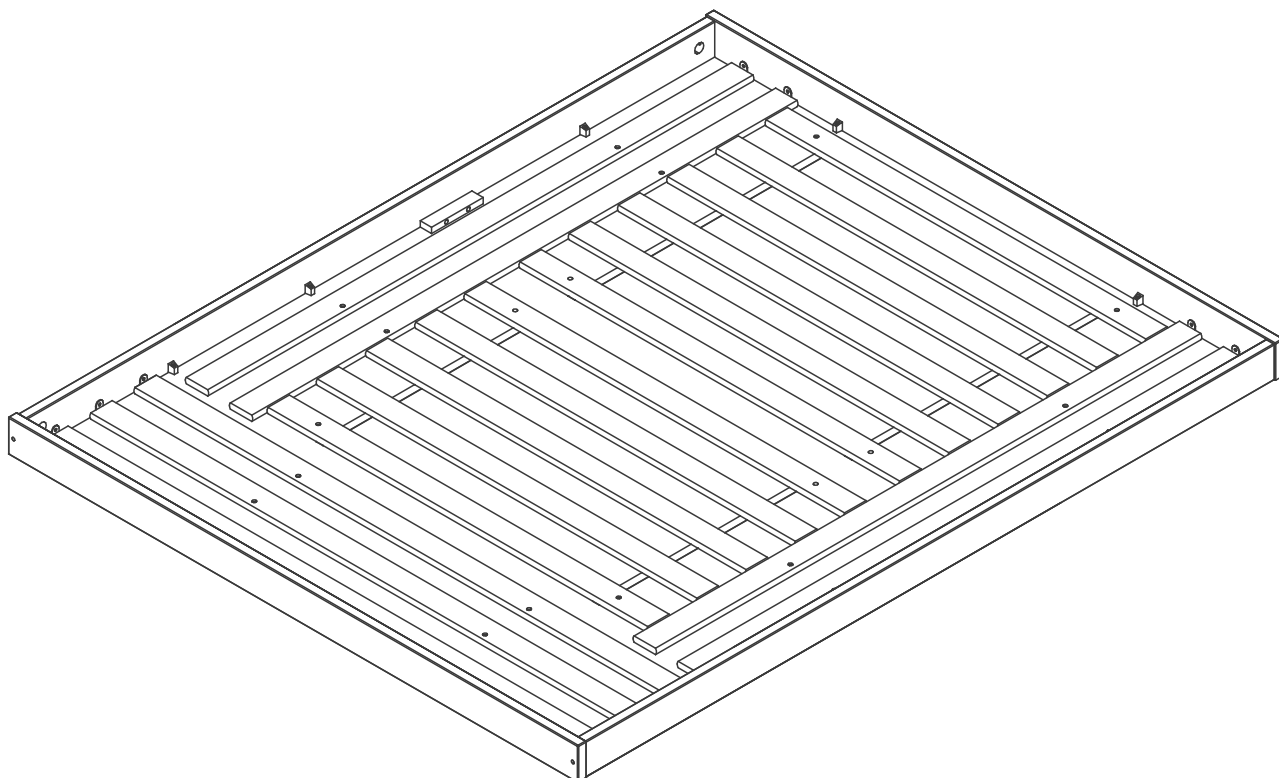



Attention!


- 1- Please read the assembly instructions very carefully before assembling your product.
- 2- The product assembly has to be carried out on a clean and flat surface. We recommend the use of packaging material (cartons/cardboards) to cover your room surface during assembly in order to protect the floor.
- 3- The screws and bolts of your furniture have to be tightened periodically.
- 4- Please avoid contact to sharp objects.
- 5- Please avoid hitting the furniture surface.

HARDWARE/ACCESSORIES


A	 Ø 5/16" x 1"	38
H	 Ø 1/8" x 9/16"	20
L	 Allen Key	01
O	 Ø 9/32" x 2.3/4"	04
P	 Ø 1/4" x 2.3/4"	04
Q	 Elliptical nut	04
R	 Felt	04
S	 Magnetic clasp	02



T	 Ø 5/32"x 1.3/8"	32
U	 Ø 1/4" x 1"	08
V	 Corner fitting	10
X	 Trapeze	10+2
Y	 mm	01

COMPONENTS


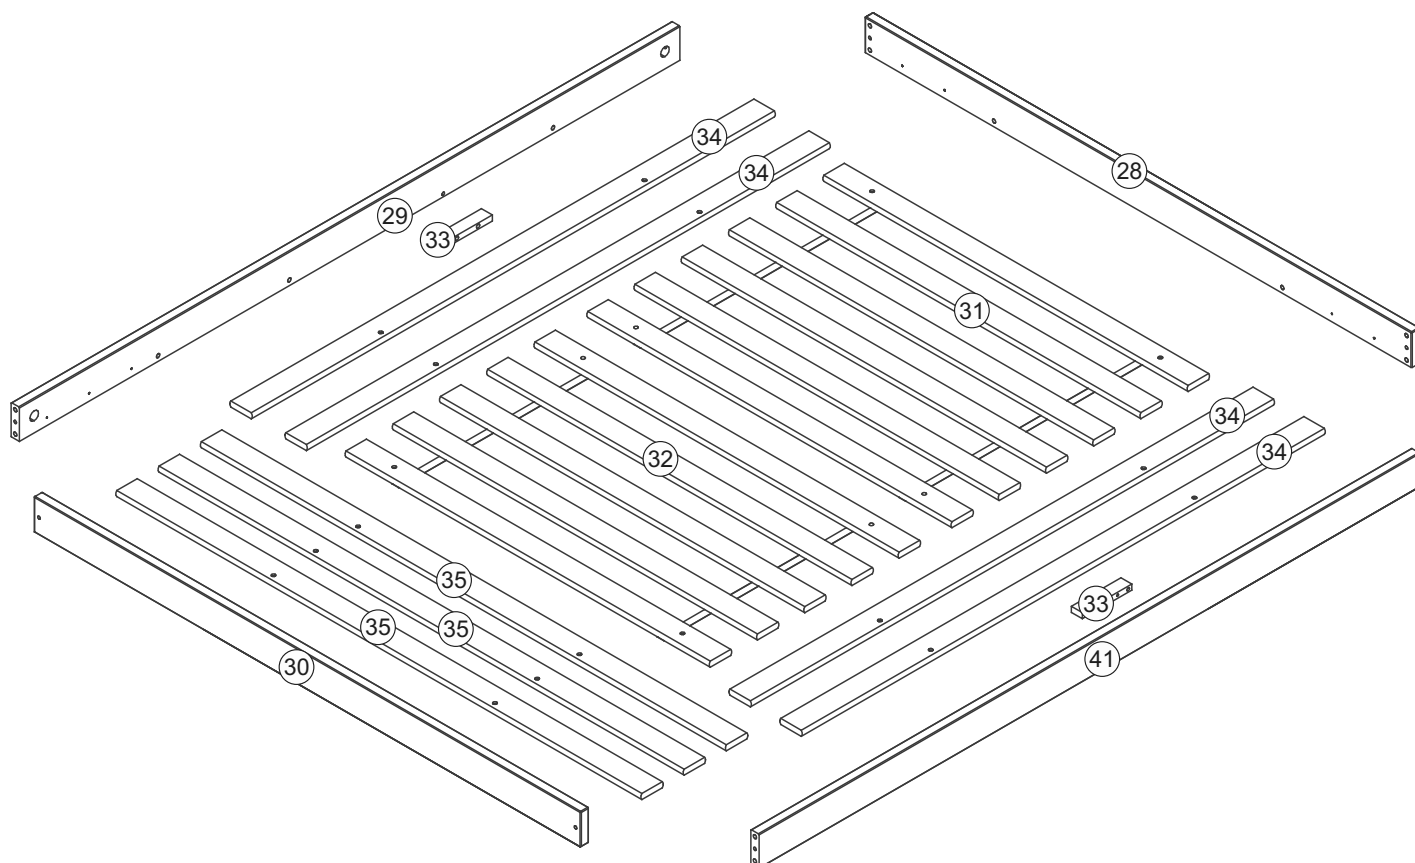



30


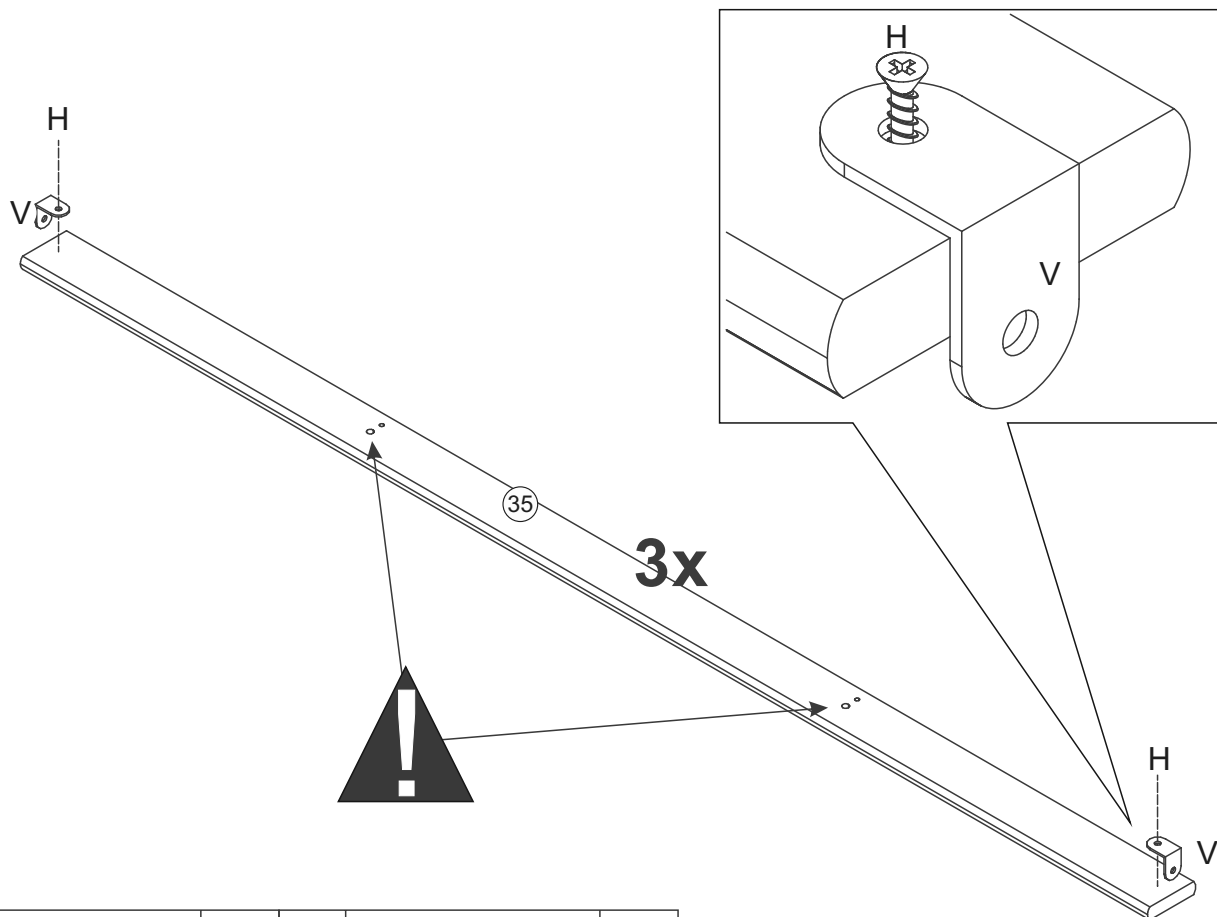


H		06	V		06
	Ø 1/8" x 9/16"			Corner fitting	


31




A		06
T		06
	Ø 5/16" x 1"	
	Ø 5/32" x 1.3/8"	

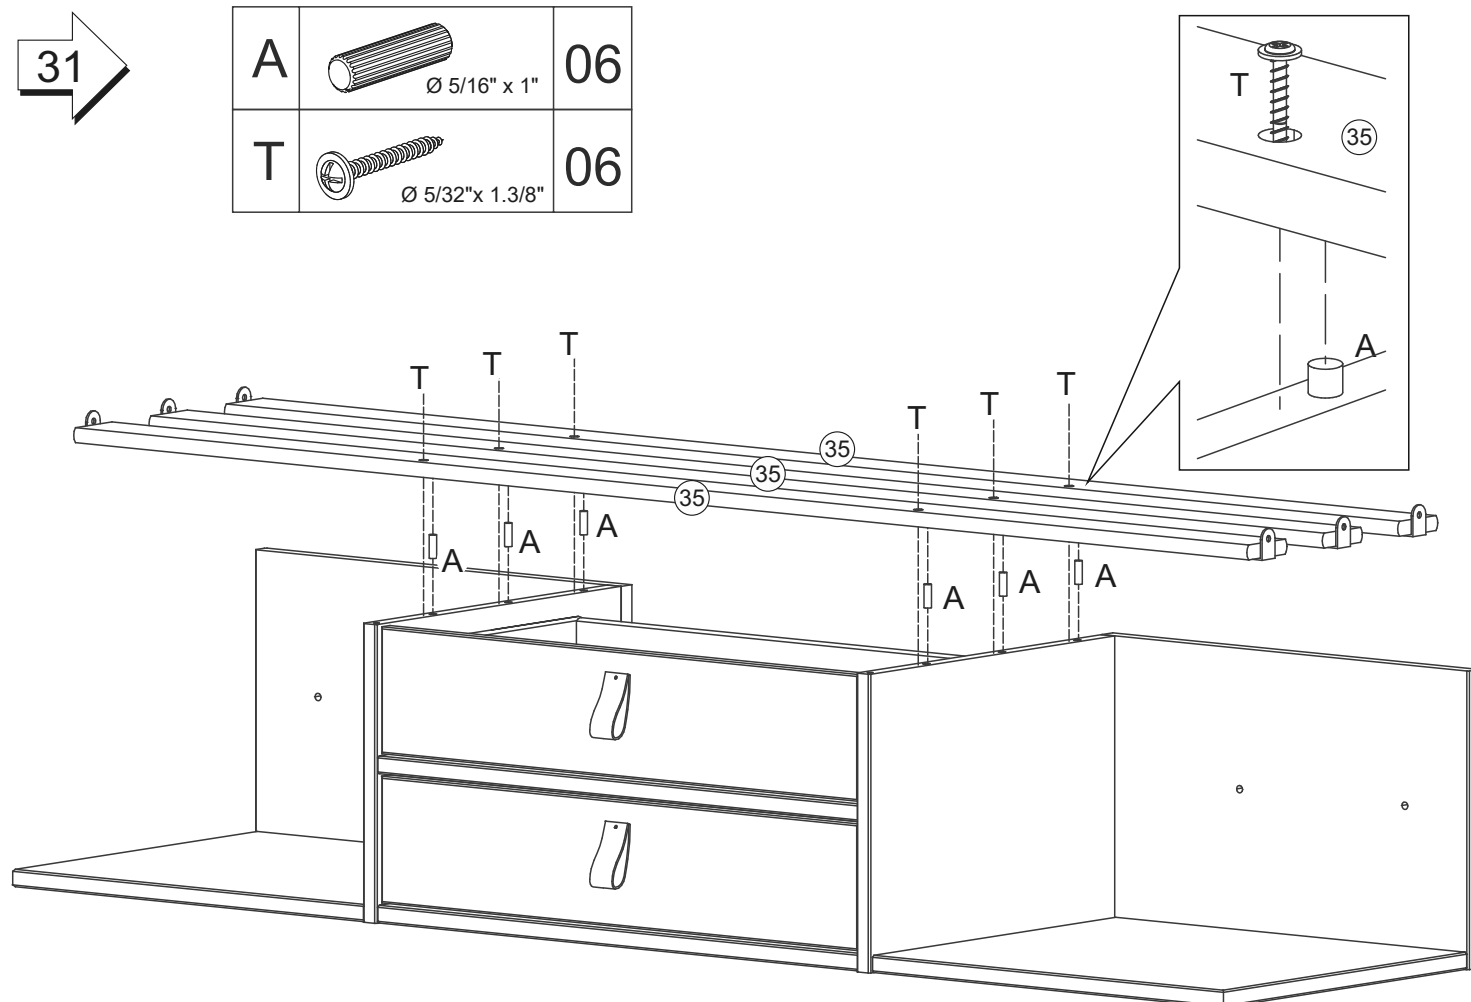

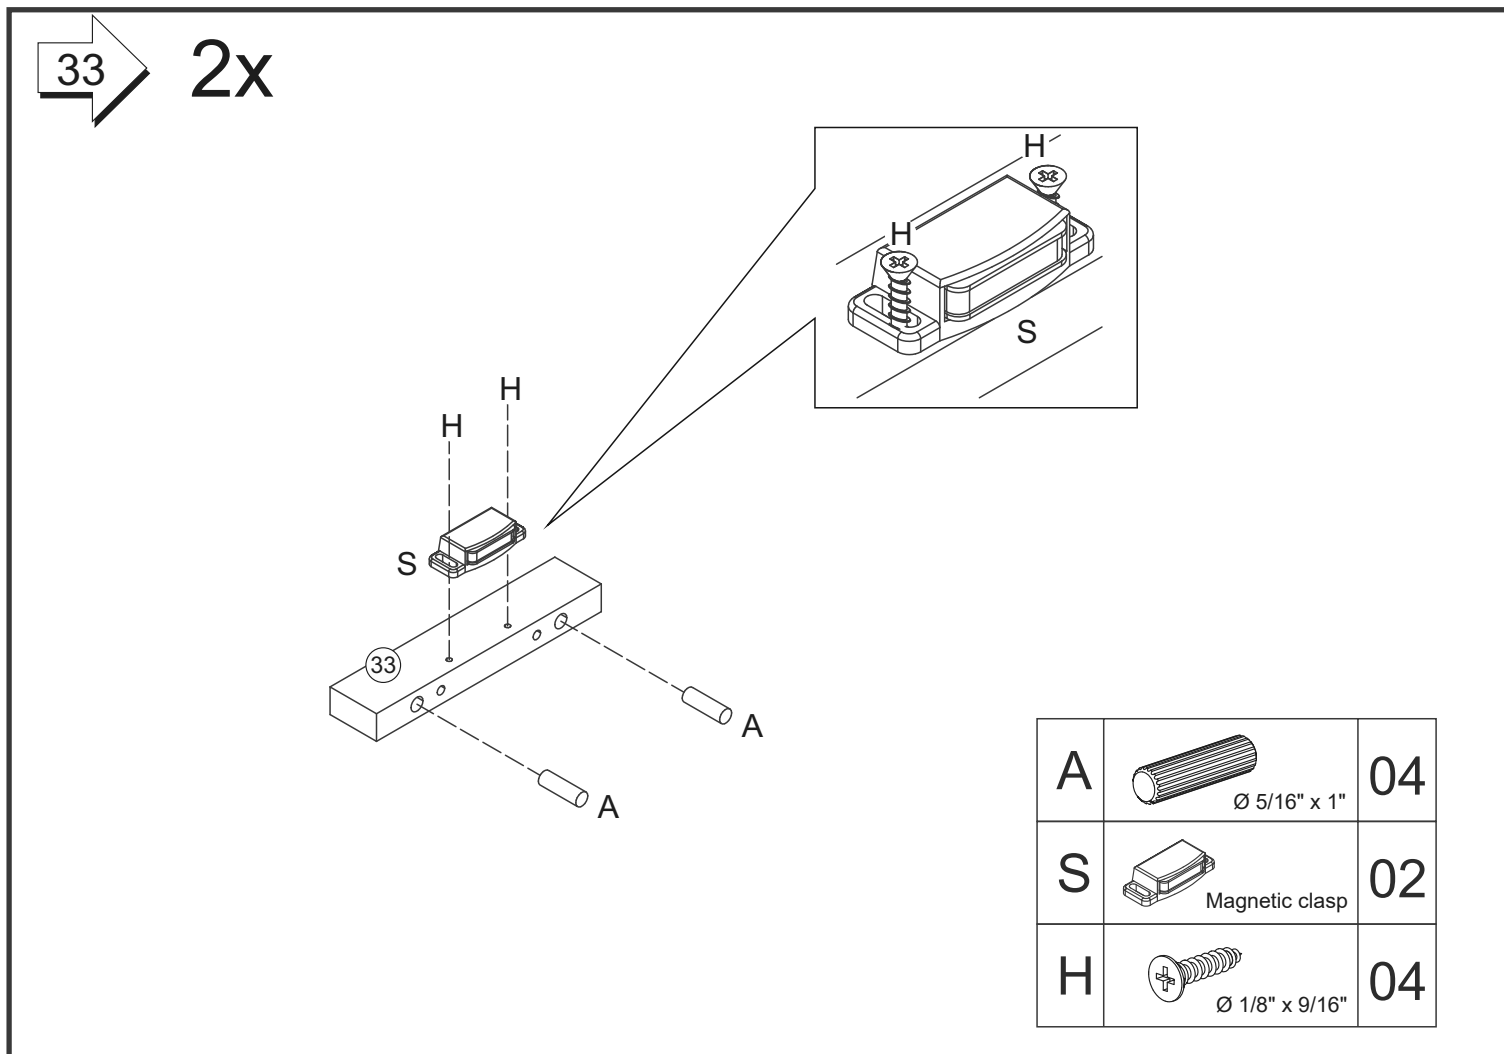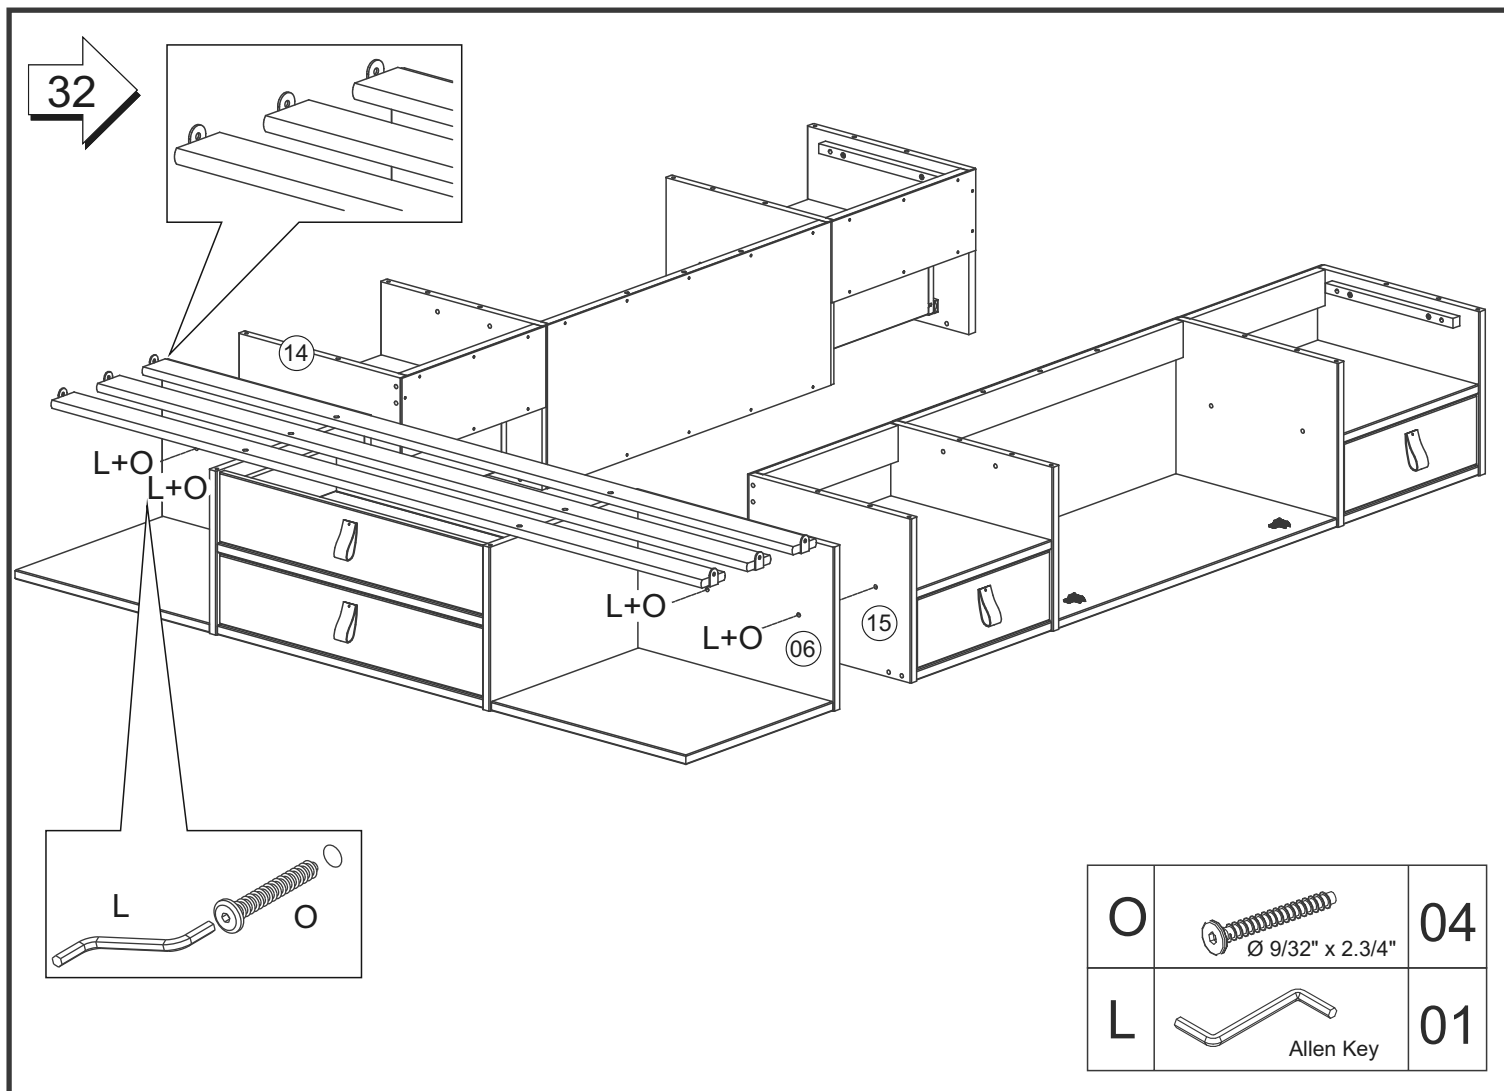


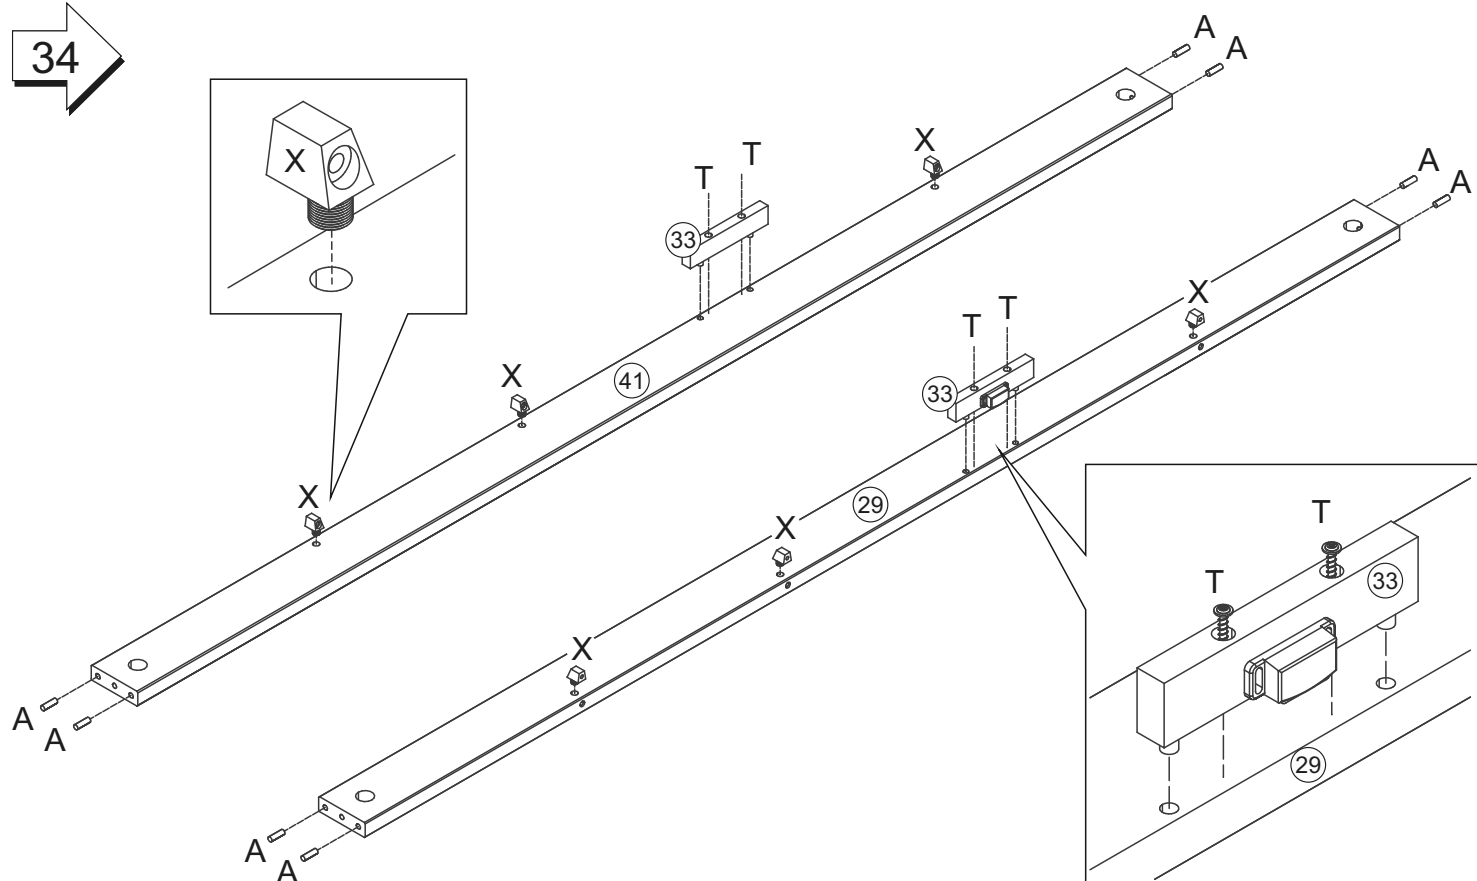


34




A	 Ø 5/16" x 1"	08	T	 Ø 5/32" x 1.3/8"	04	X	 Trapeze	06
---	--------------------------------------------------------------------------------------------------	----	---	------------------------------------------------------------------------------------------------------	----	---	----------------------------------------------------------------------------------------------	----

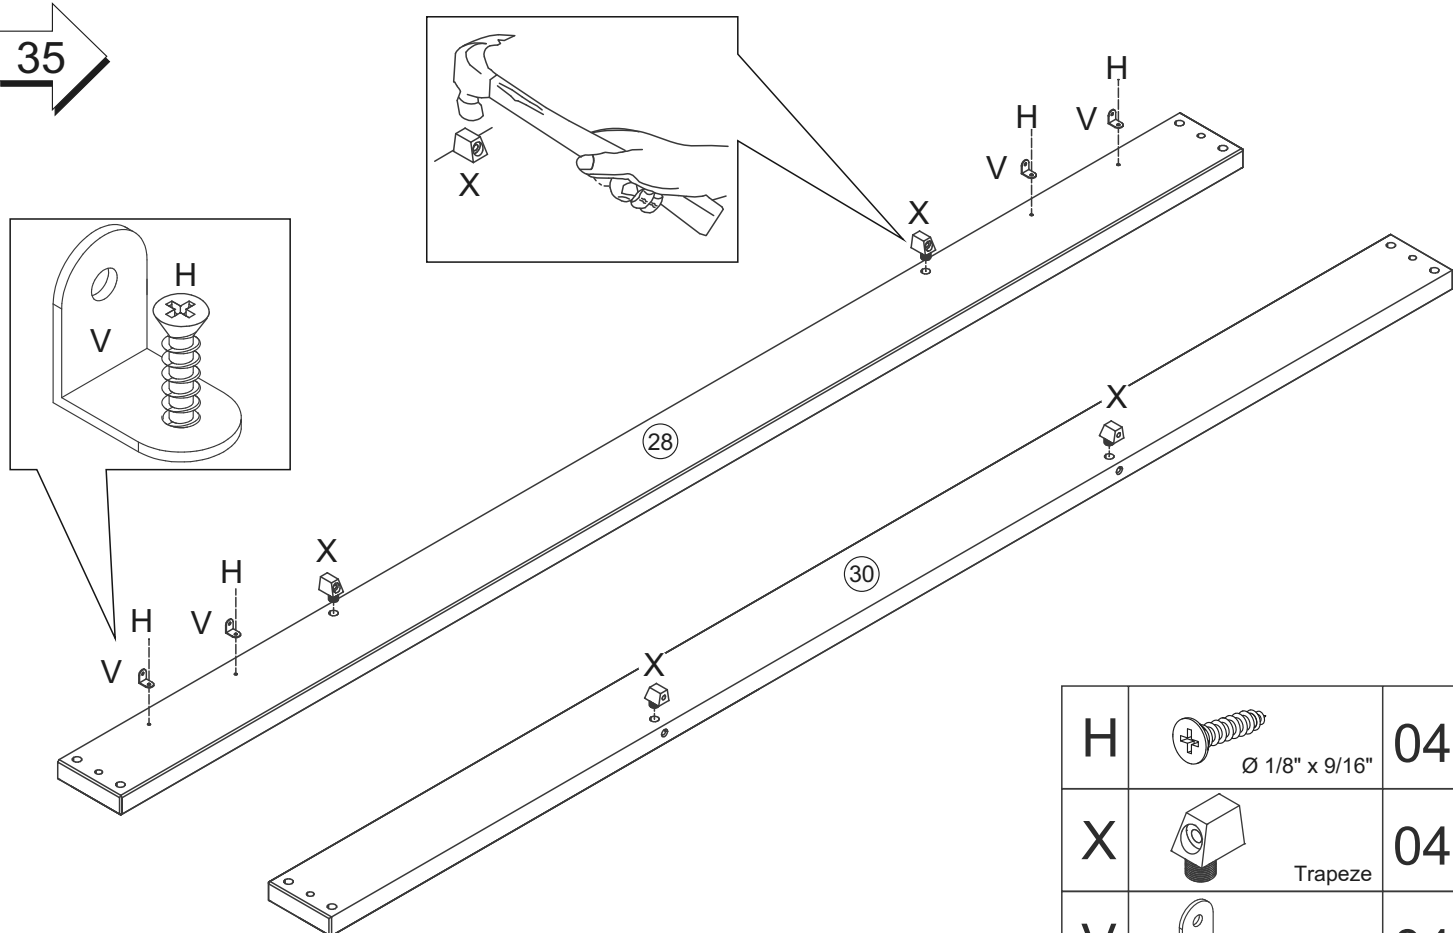


35




H	 Ø 1/8" x 9/16"	04
X	 Trapeze	04
V	 Corner fitting	04


36

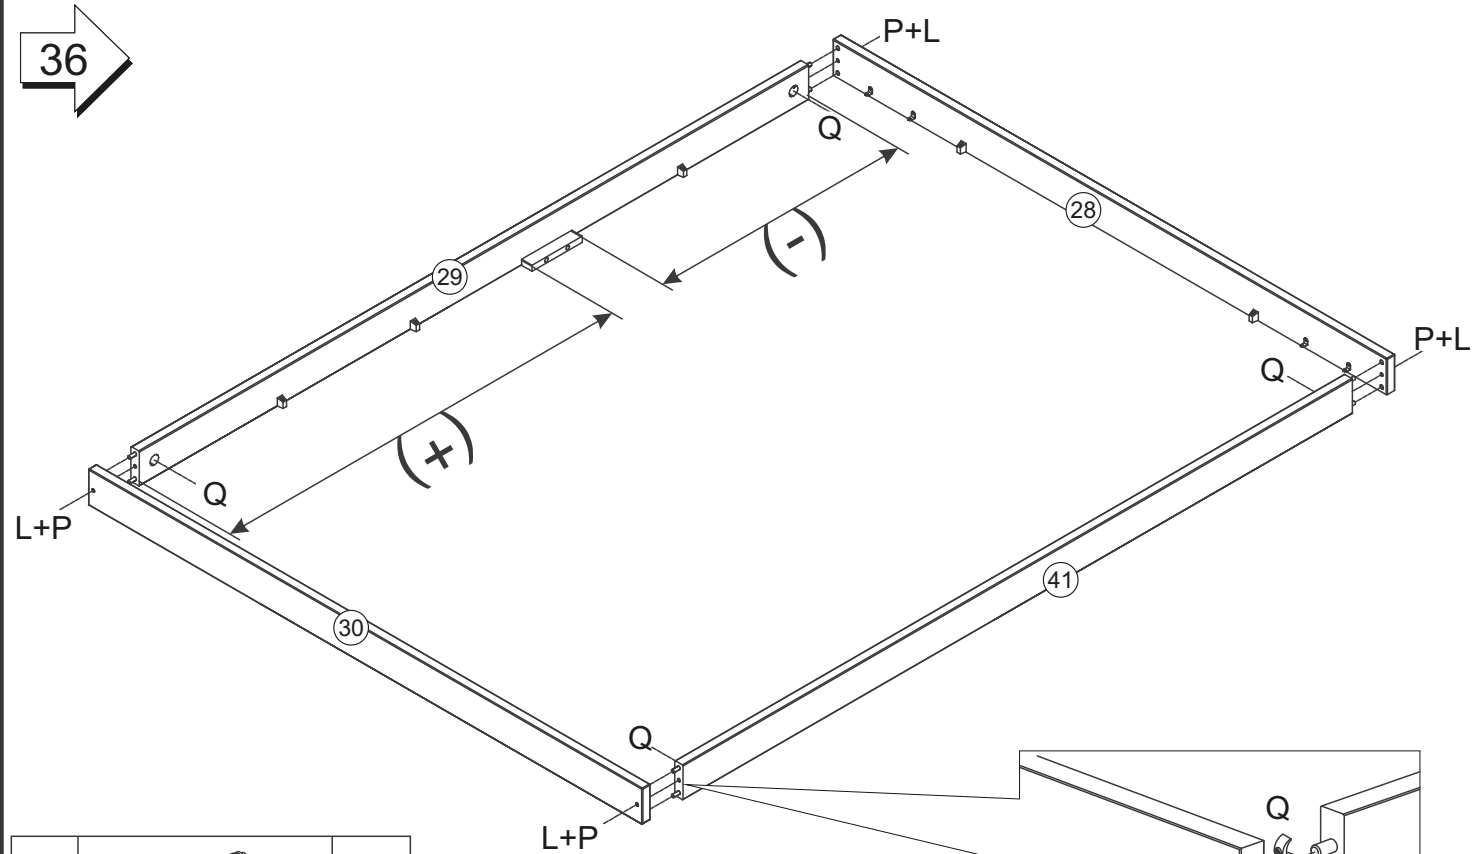


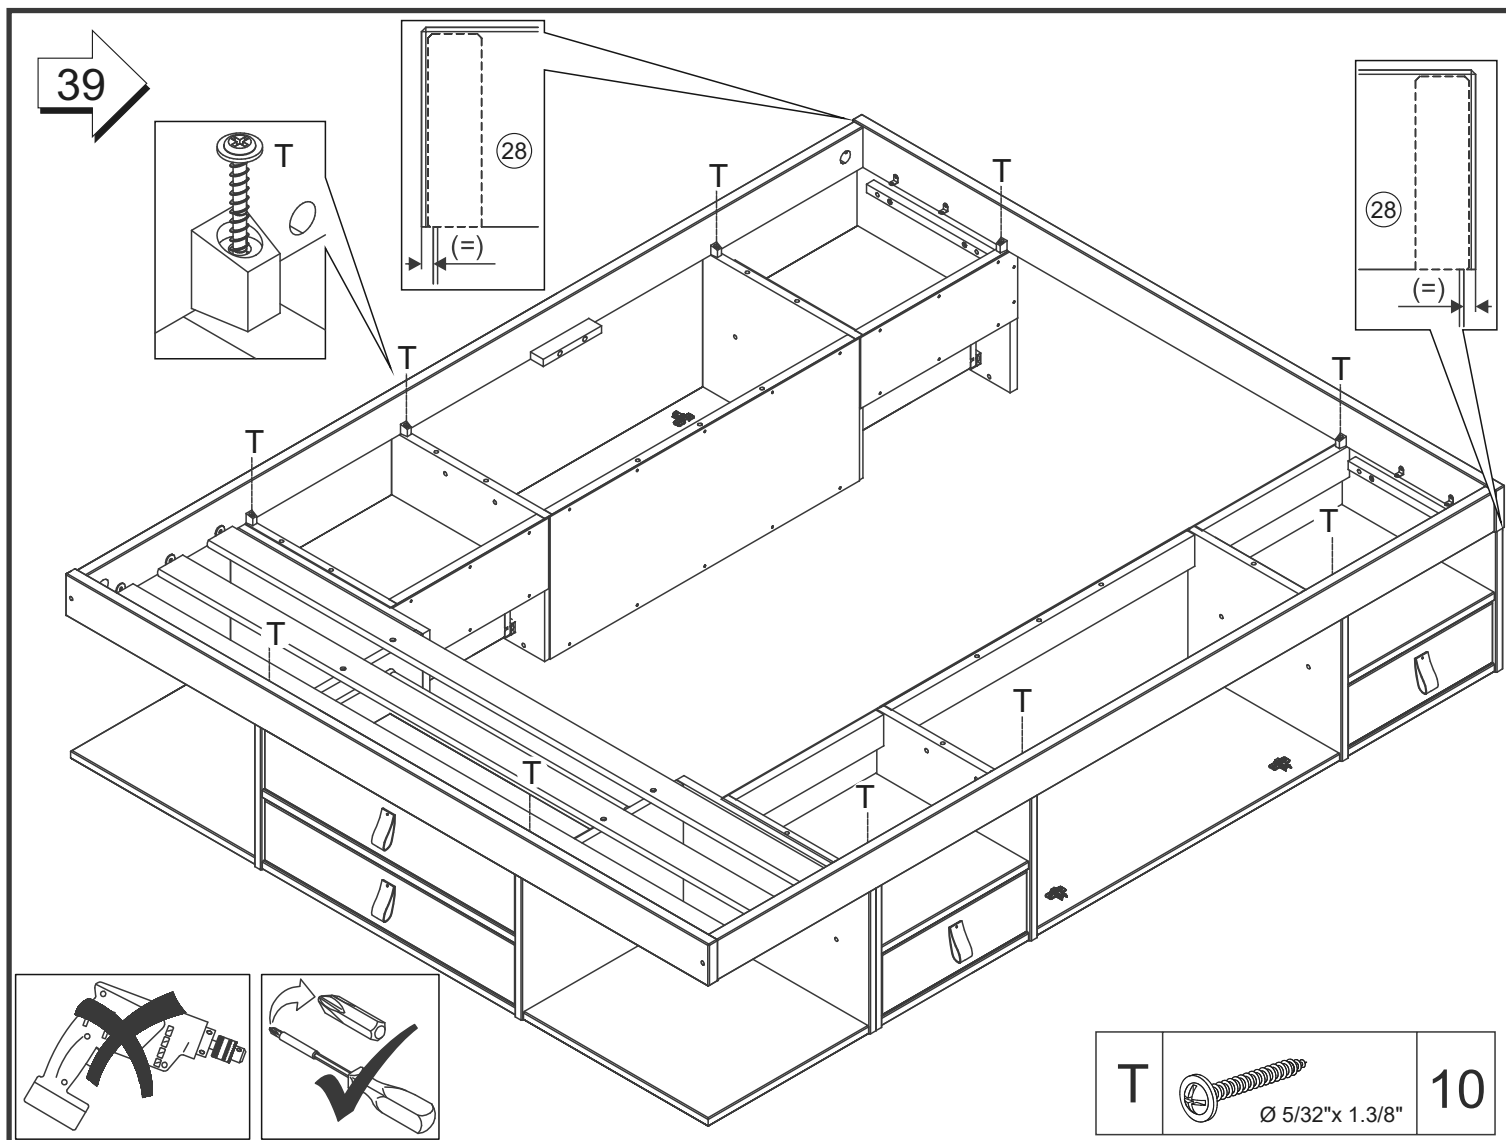
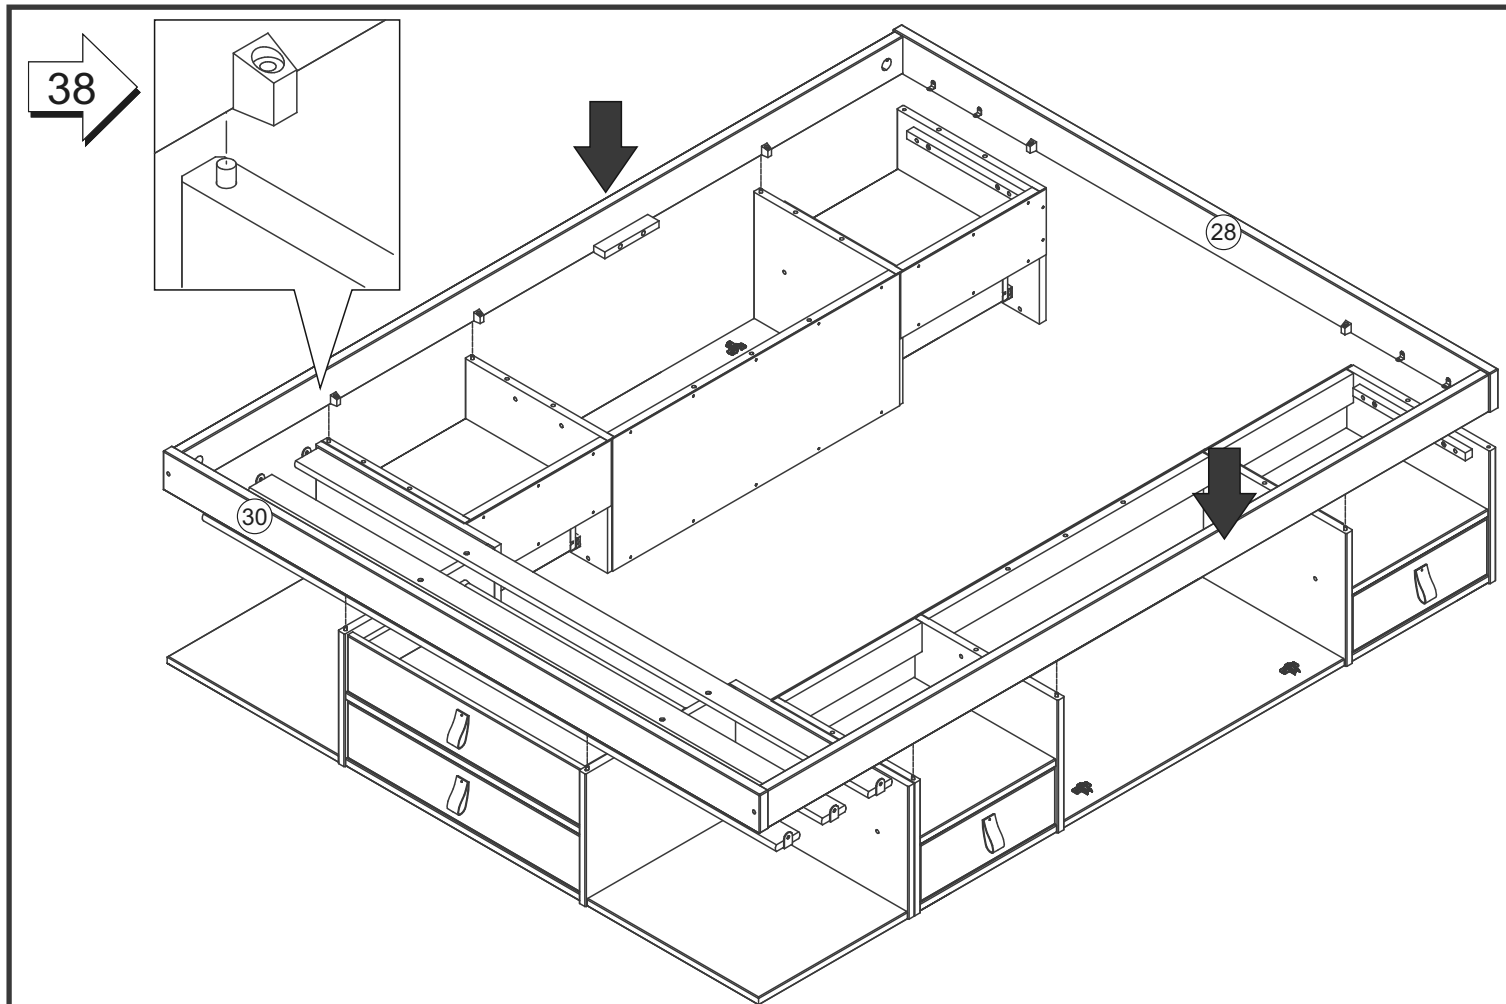
P		04			
	$\varnothing 1/4" \times 2.3/4"$				
Q		04	L		01
	Elliptical nut			Allen Key	


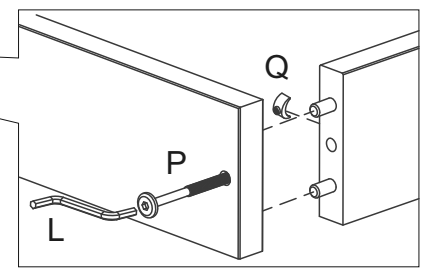


37

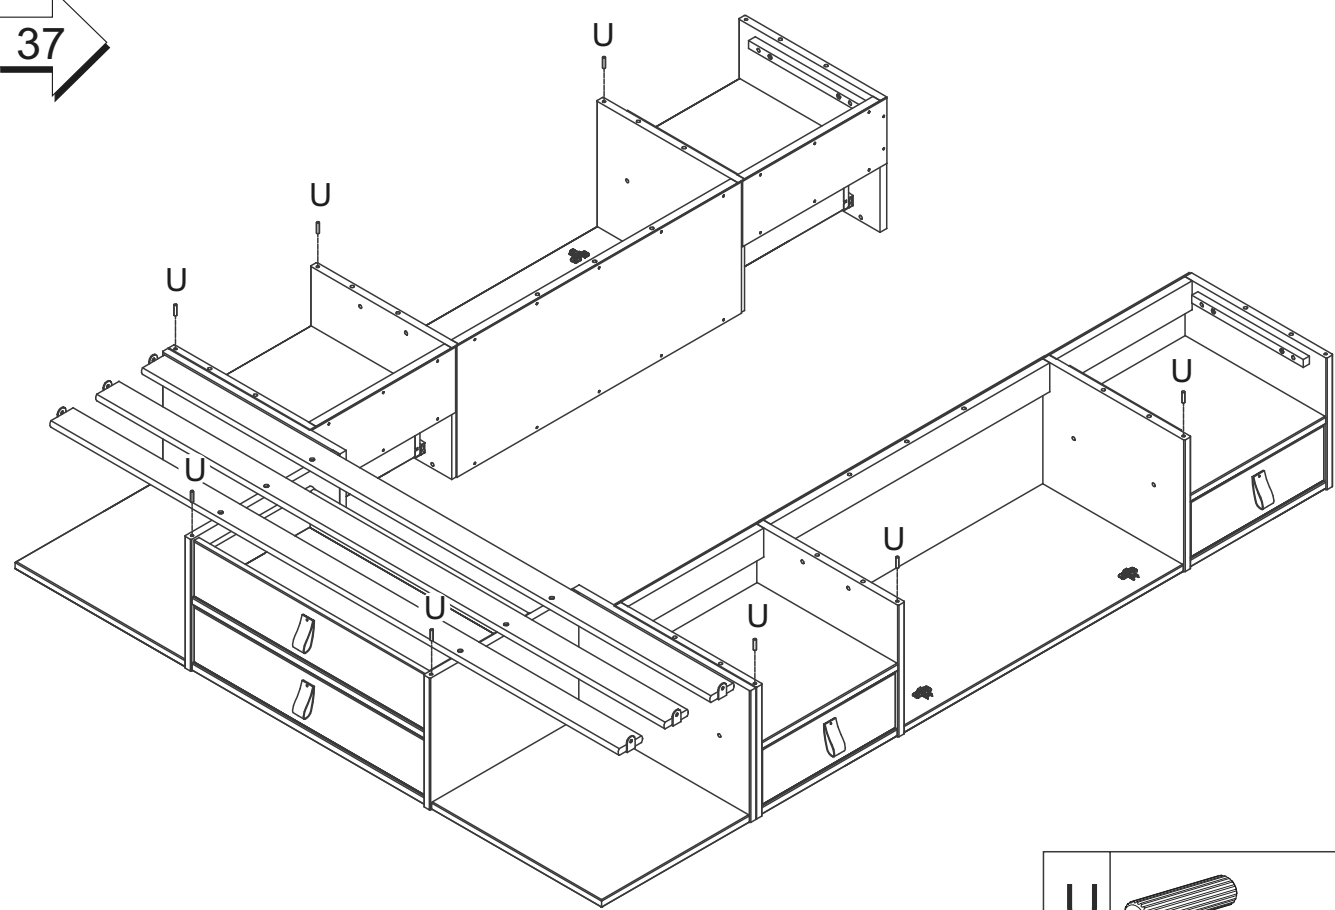


U		08
	$\varnothing 1/4" \times 1"$	




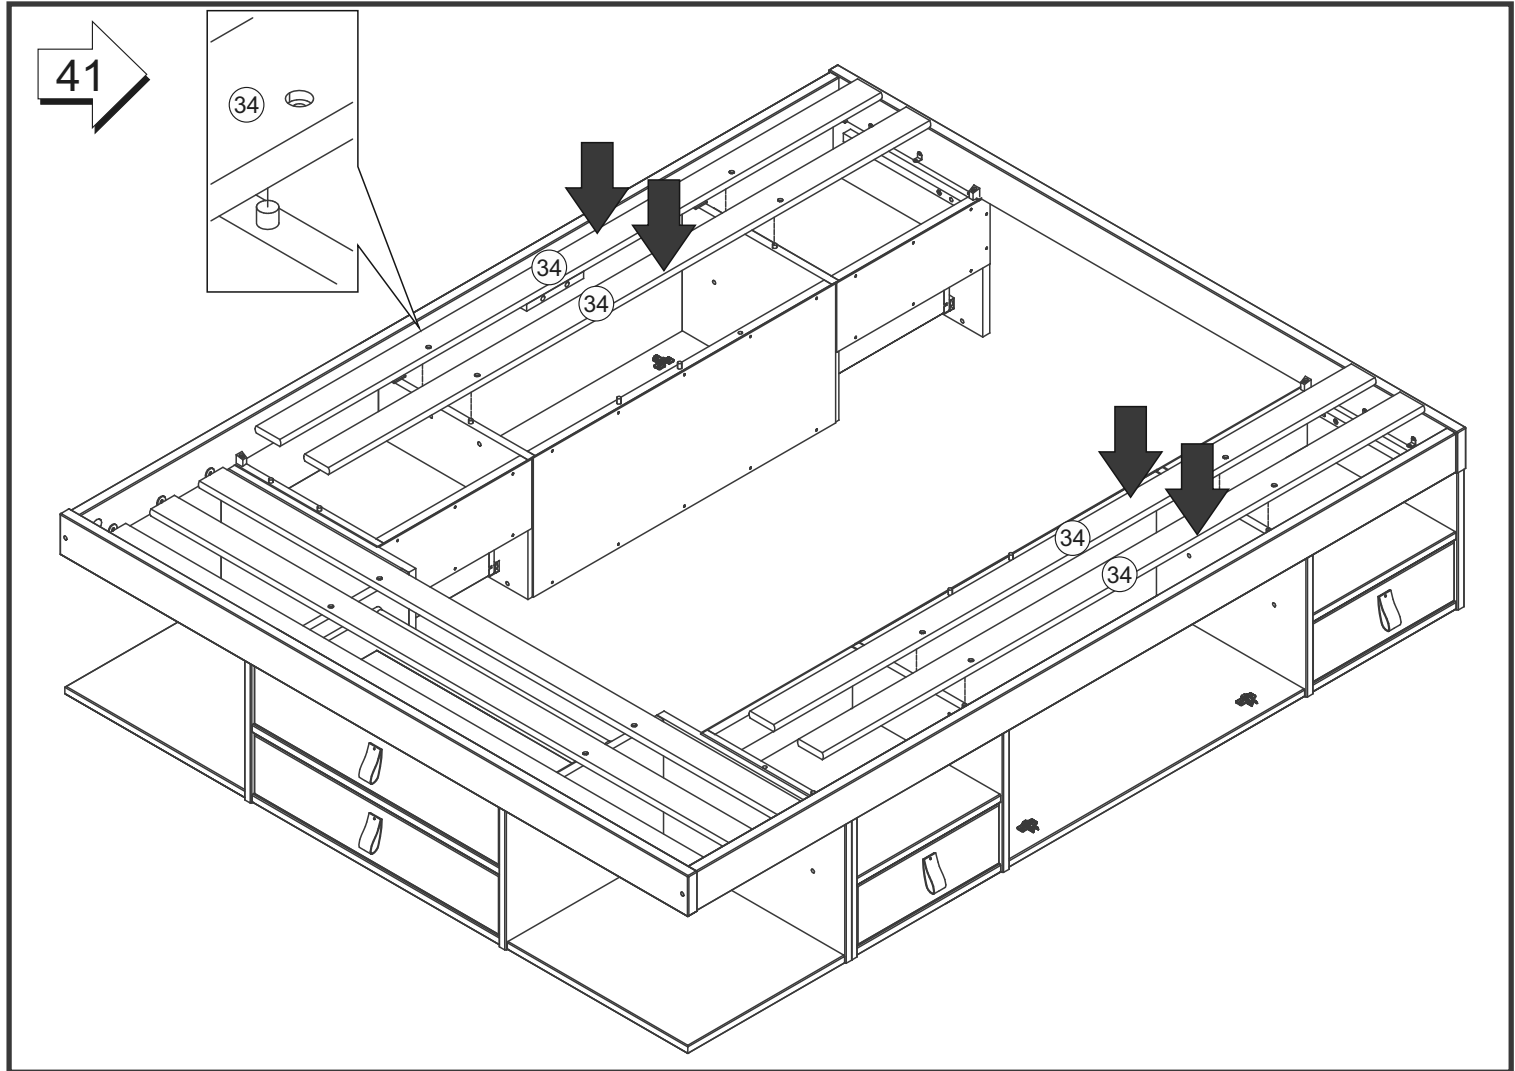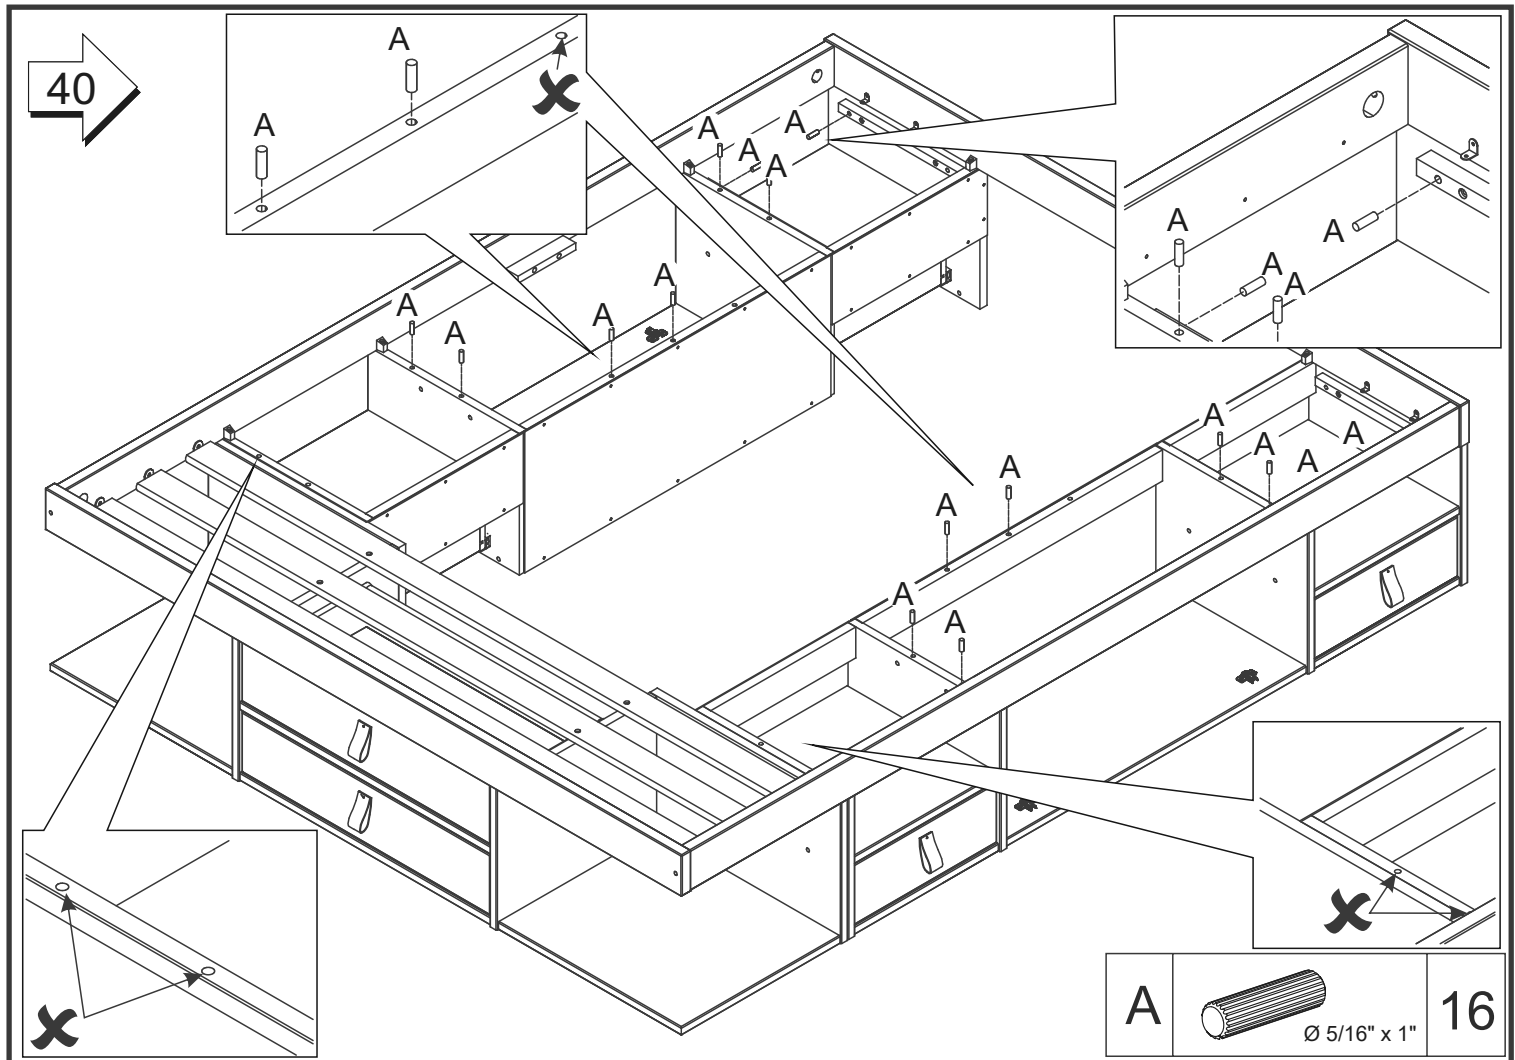

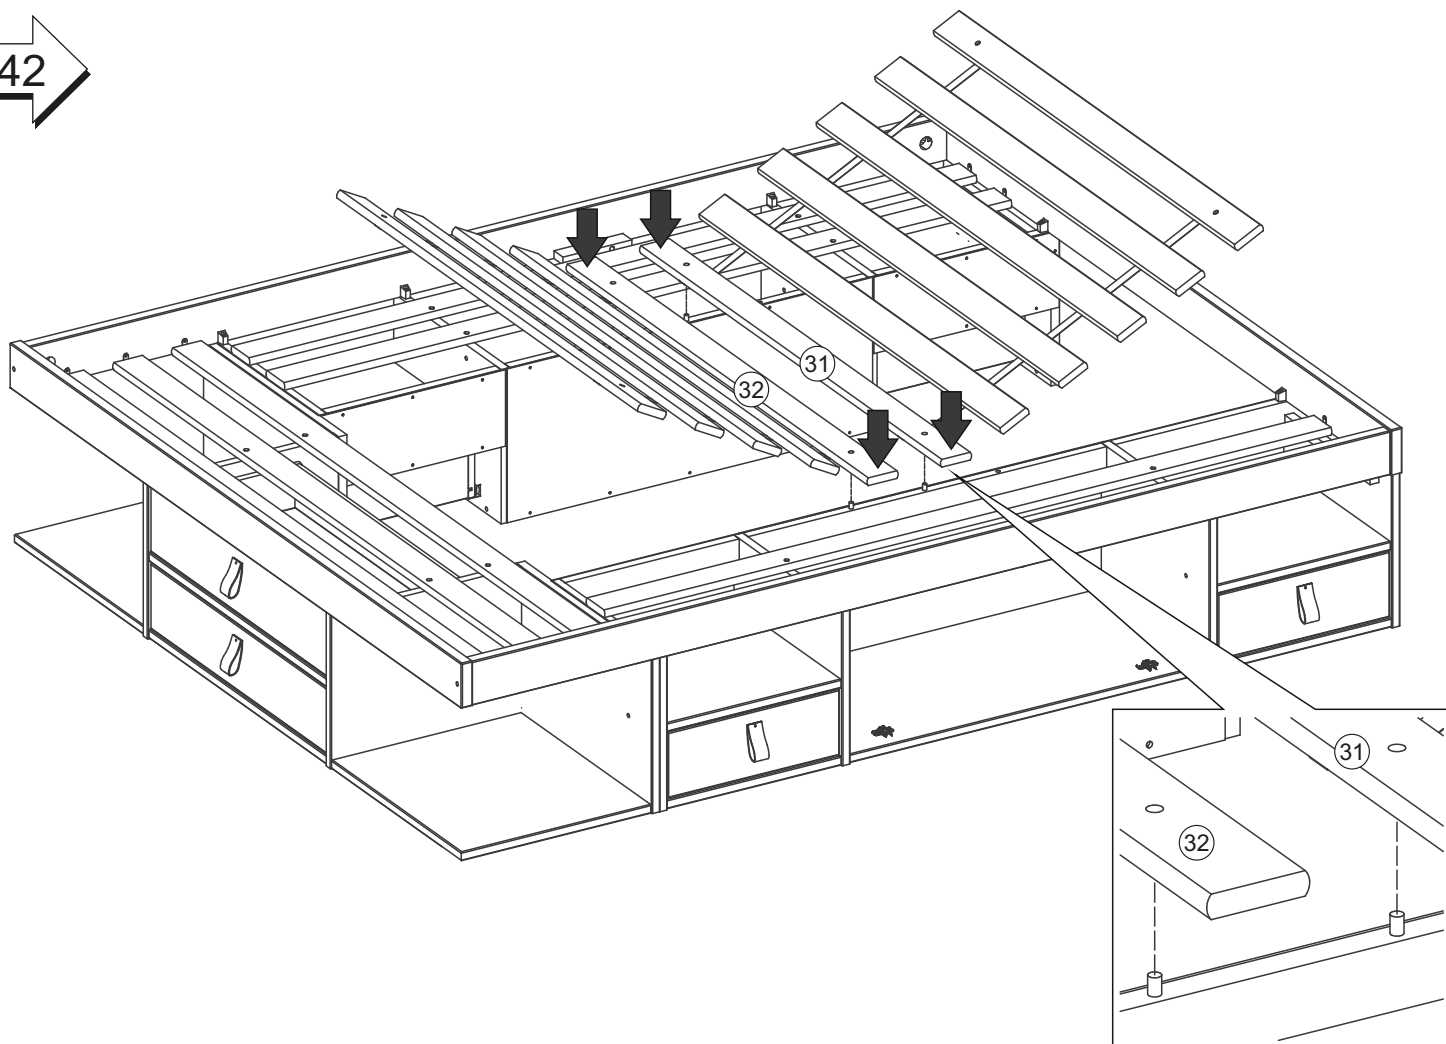

42

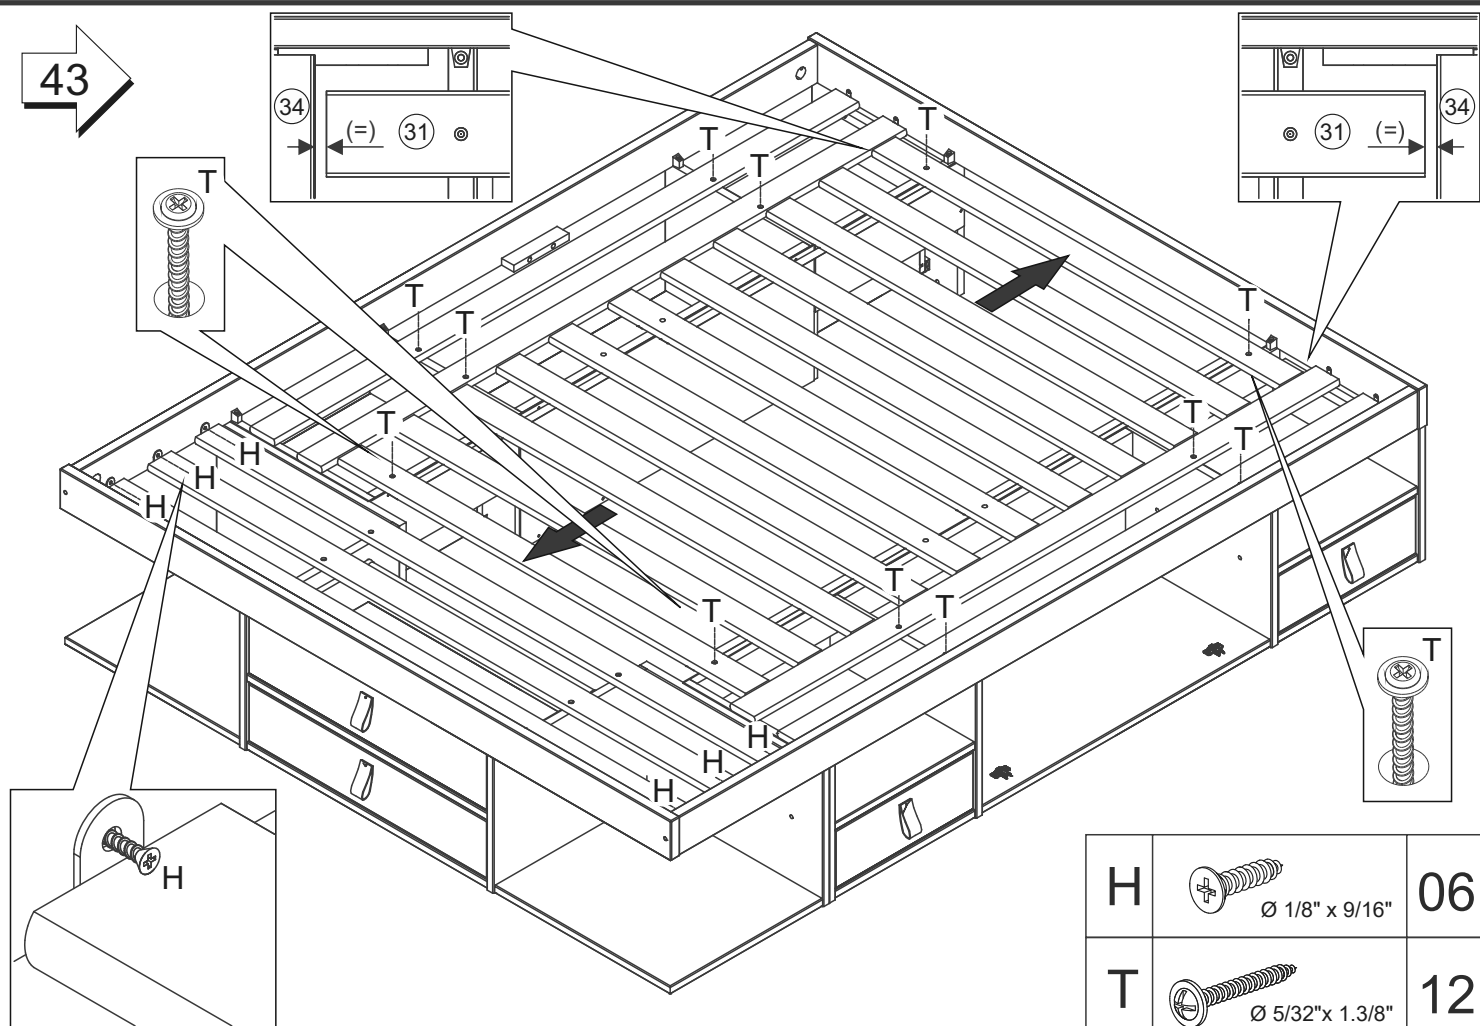


43




H	 Ø 1/8" x 9/16"	06
T	 Ø 5/32" x 1.3/8"	12

44

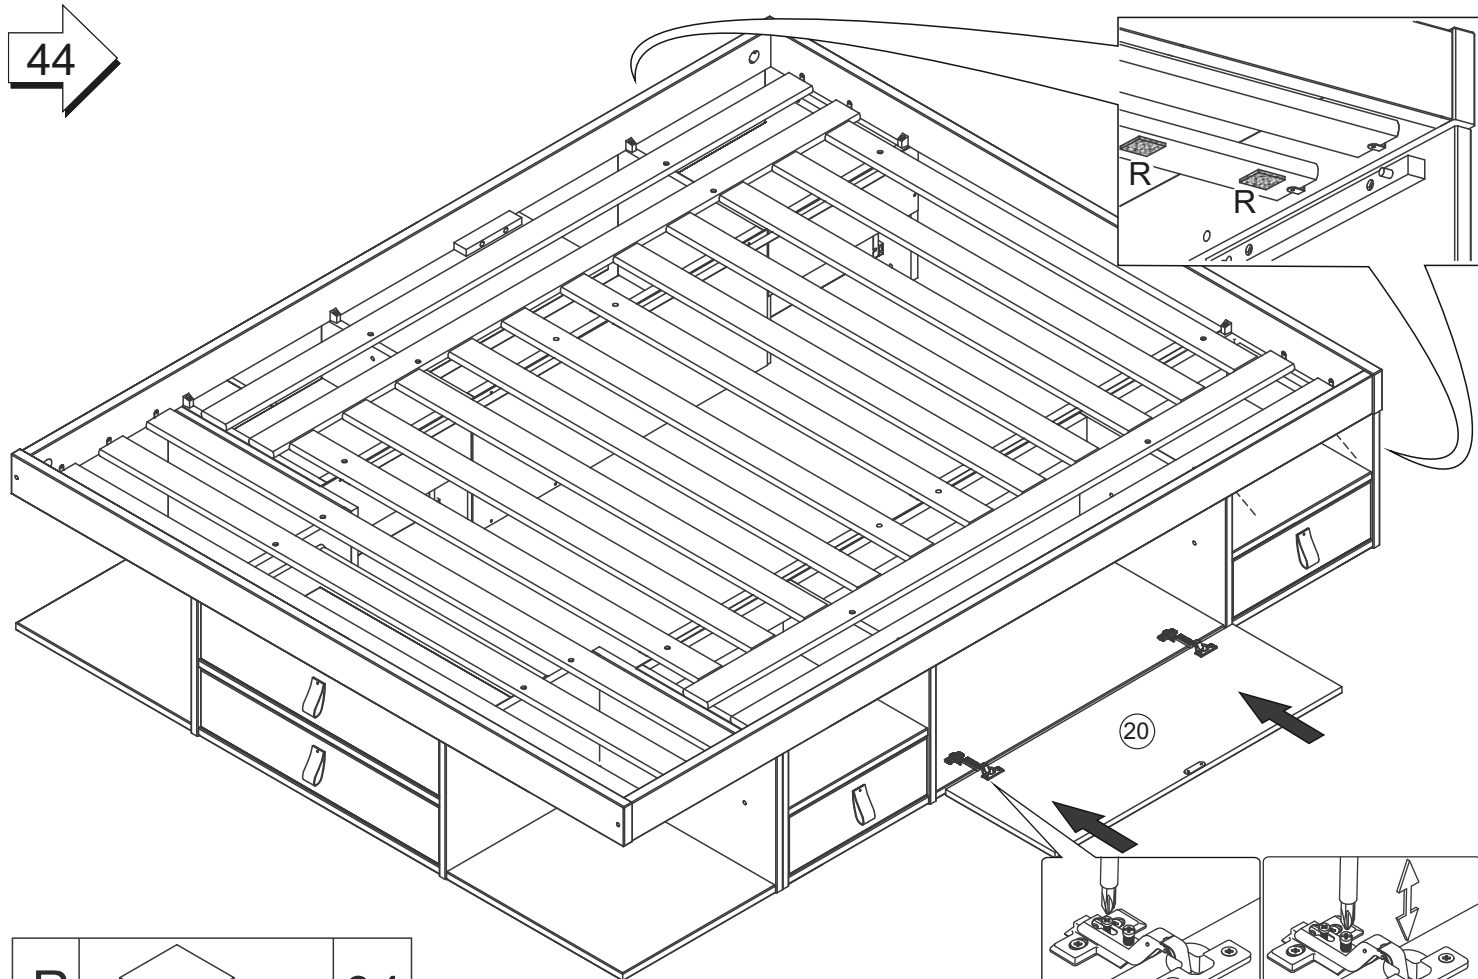


R




Felt

04

45

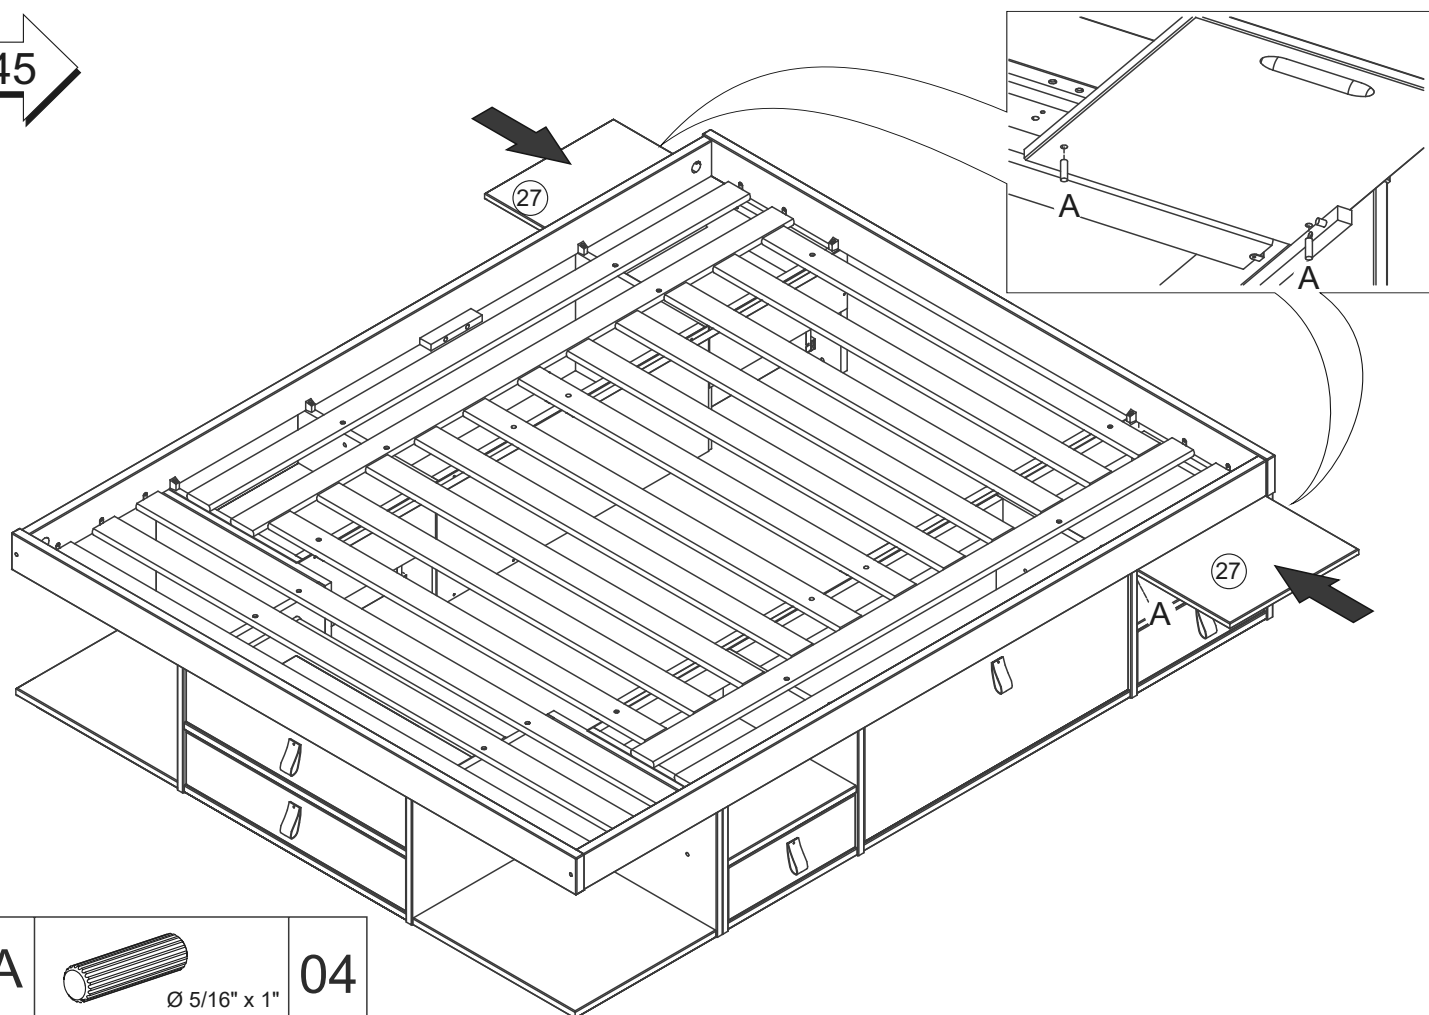



A




Ø 5/16" x 1"

04

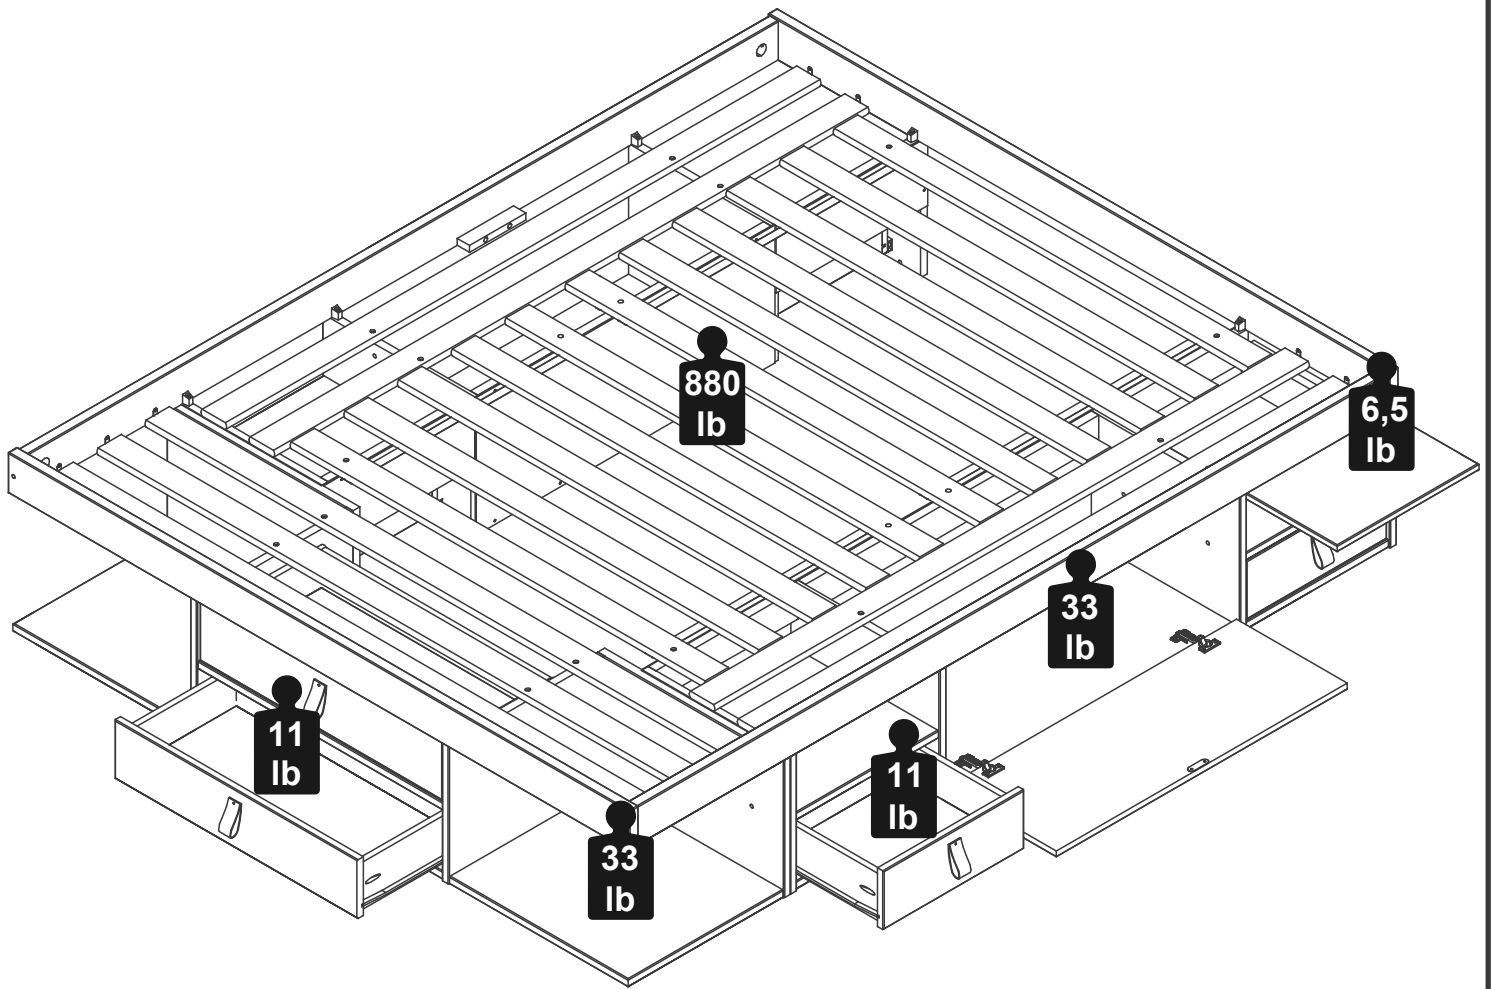


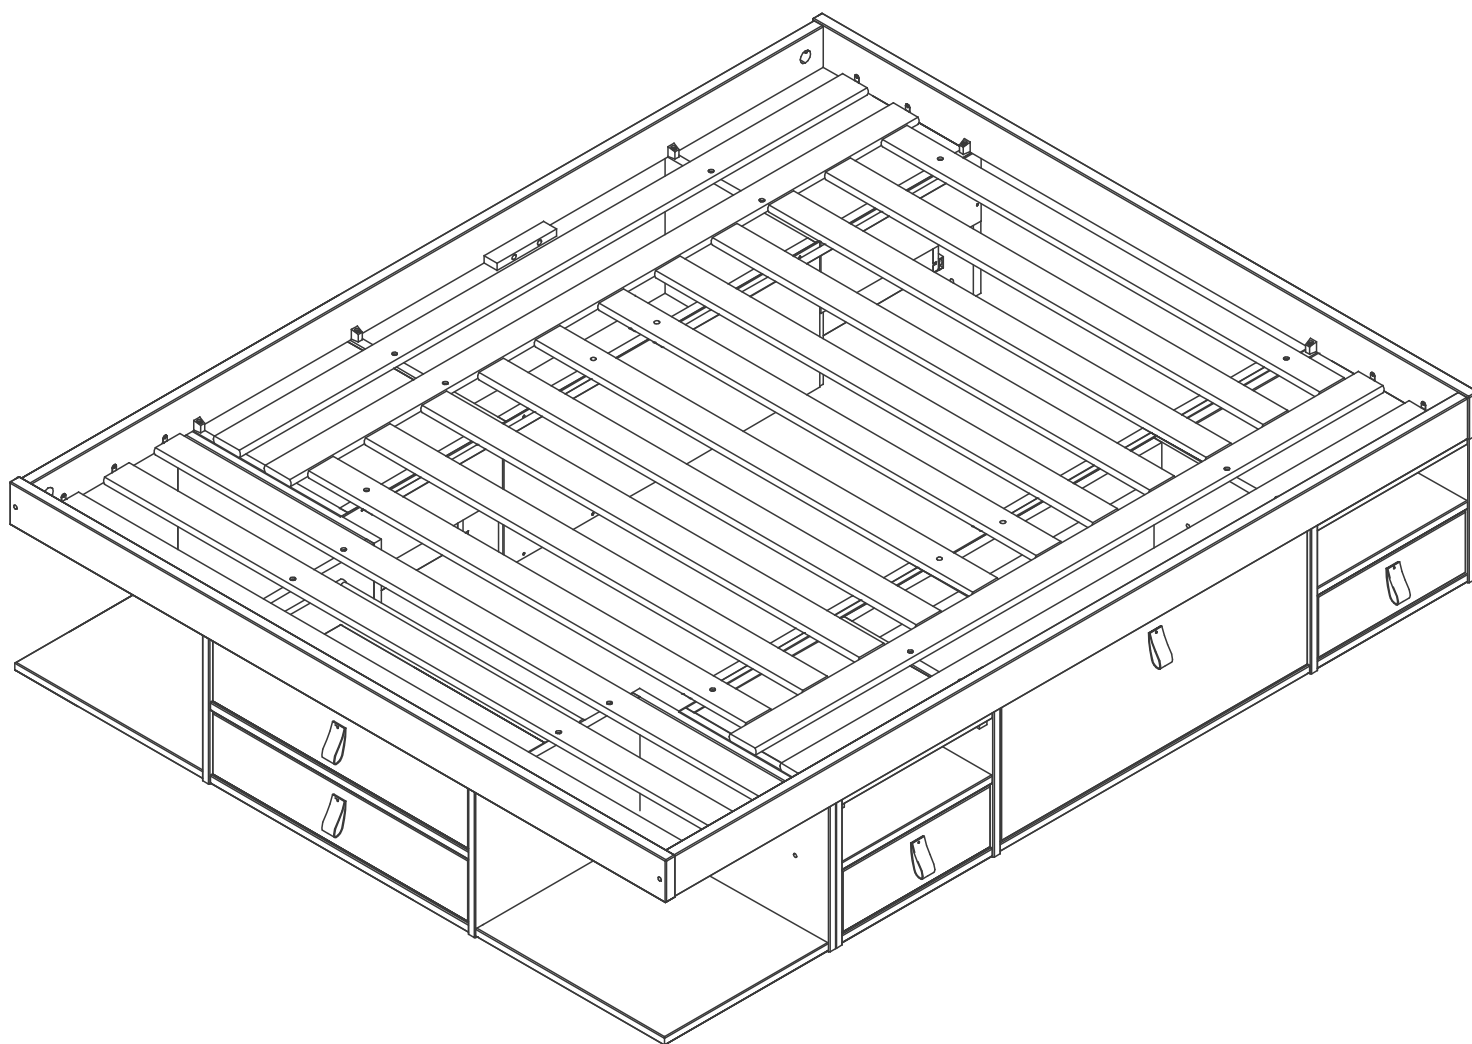

Please do not lift or pull the bed holding the bars around the slatted floor after having assembled your product

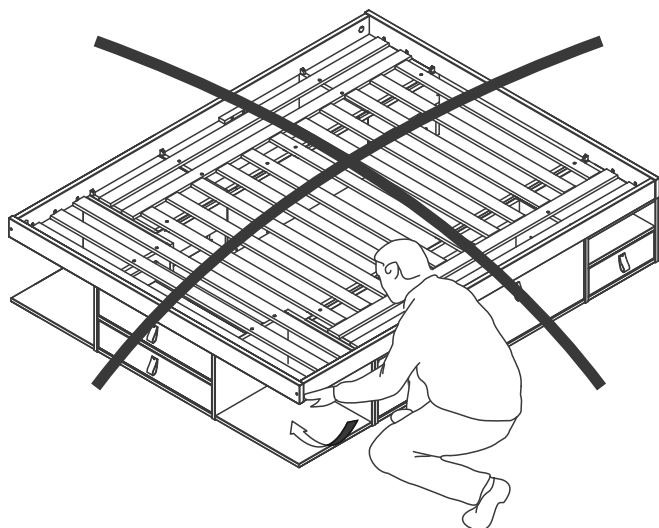

Hi there!
Have you finish the assembly of your product?
How about choosing a good place to set your MMM sticker? It's green and was send to you inside the accessories bag.

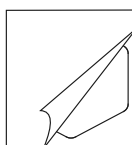

Please remove the adhesive label

