



ASSEMBLY INSTRUCTION

TWIN XL BED WITH UPH HB





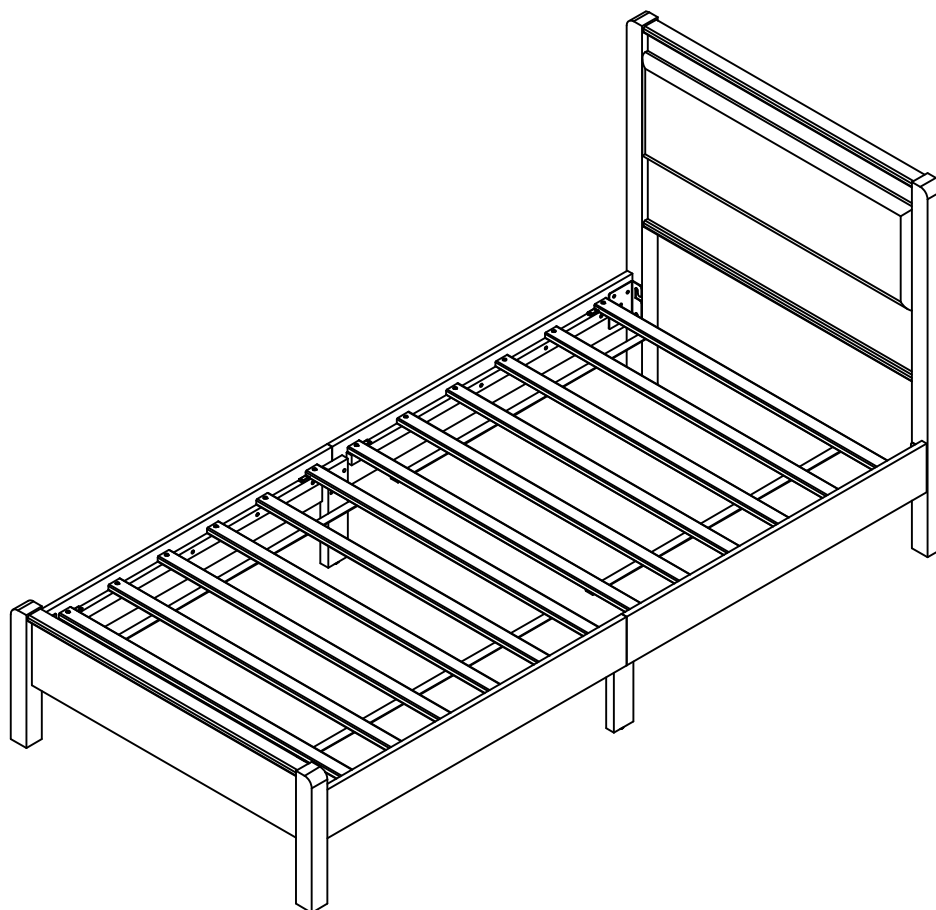


MT33001


Detail View

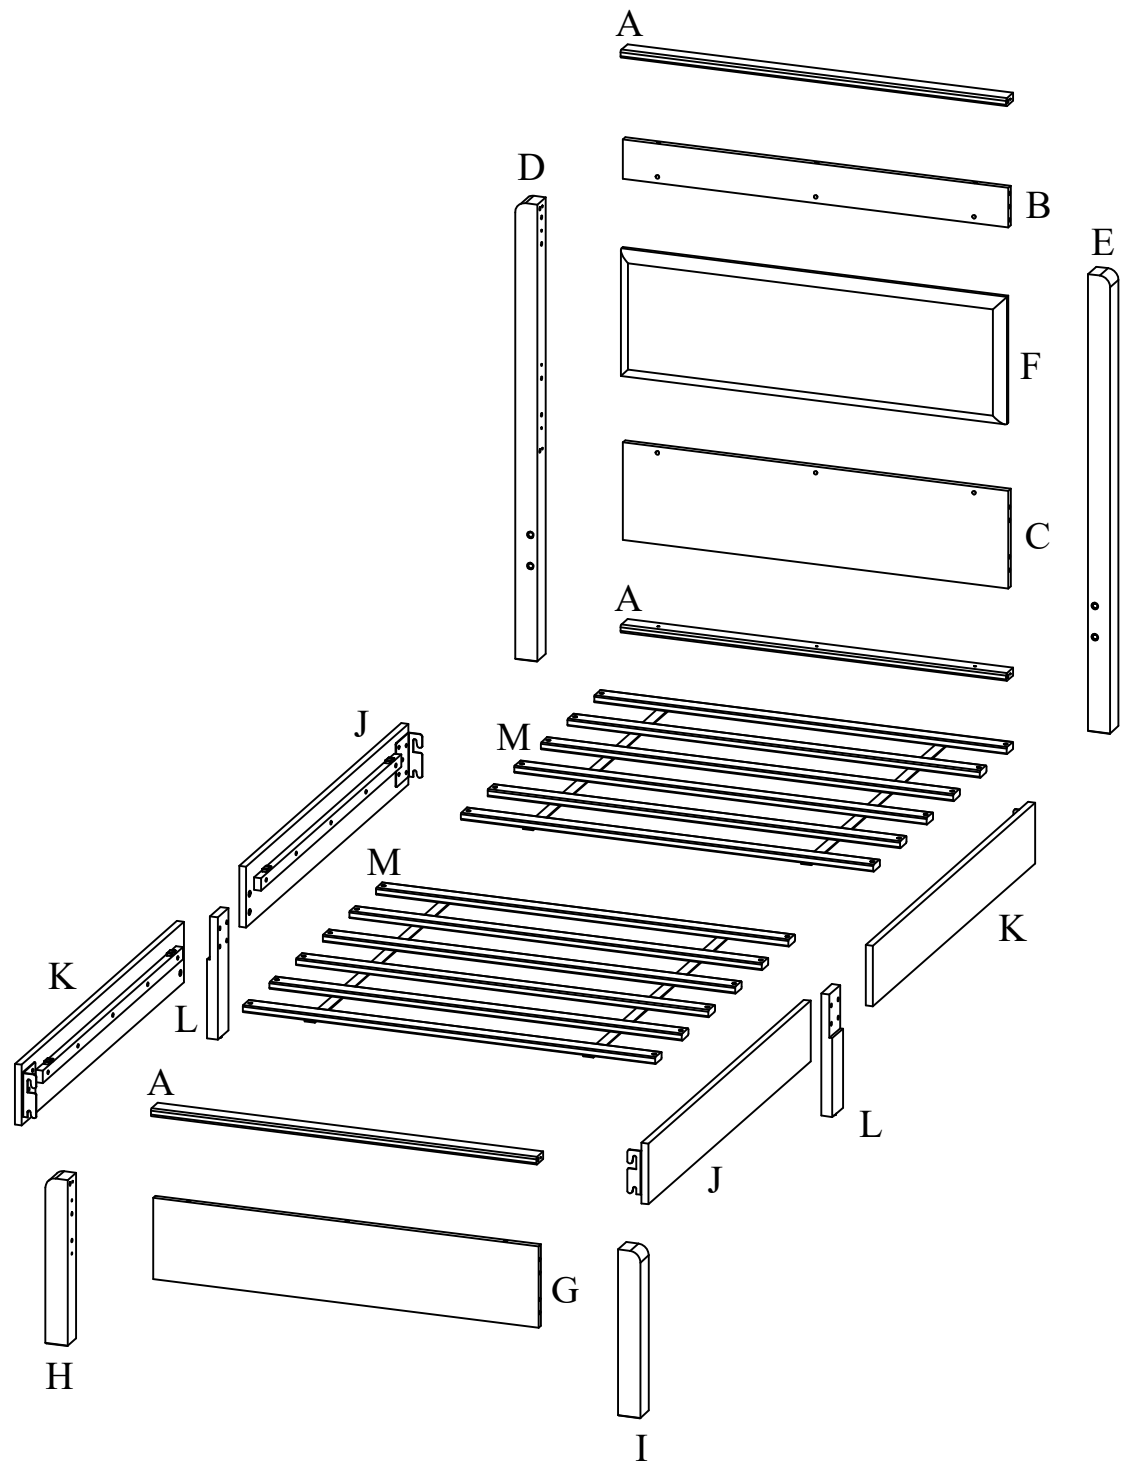

Part List

A  FB / HB Top & Btm Rail - 3 pcs	B  HB Top panel - 1 pc	C  HB Bottom Panel - 1 pc
D  HB Post L - 1 pc	E  HB Post R - 1 pc	F  HB Cushion - 1 pc
G  FB Panel - 1 pc	H  FB Post L - 1 pc	I  FB Post R - 1 pc
J  Side Rail 1 - 2 pcs	K  Side Rail 2 - 2 pcs	L  Center Leg - 2 pcs
M  Slat Rolls - 2 pcs		

Hardware List


1		2		3	
	Minifix Bolts (19 pcs)		15 x 11.5mm Minifix Cam (19 pcs)		Ø8 x 30mm Wood Dowel (18 pcs)
4		5		6	
	M6 x 30mm JCBC (6 pcs)		M6 x 35mm JCBC (8 pcs)		M6 Spring Washer (14 pcs)
7		8		9	
	M6 x 13mm Flat Washer (14 pcs)		M8 x 20mm JCBB (8 pcs)		M8 x 18mm Flat Washer (8 pcs)
10		11		12	
	M4 x 30mm PH Screw (24 pcs)		M4 x 38mm PH Screw (6 pcs)		M4 Allen Key + Screw Driver (1 pc)
		13			
			M5 Allen Key (1 pc)		


ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !


STEP 1:

1	3
	
6 PCS	8 PCS

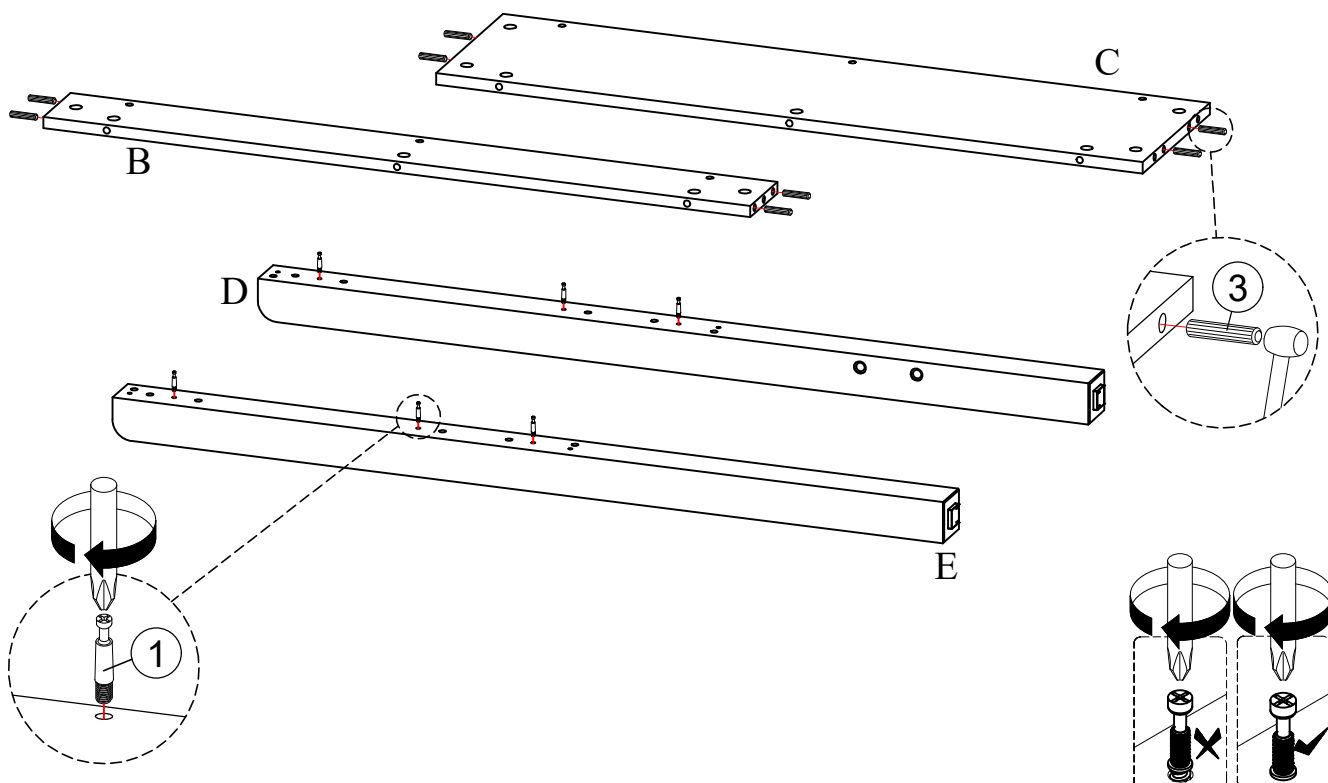

STEP 2:

1	3
	
9 PCS	6 PCS

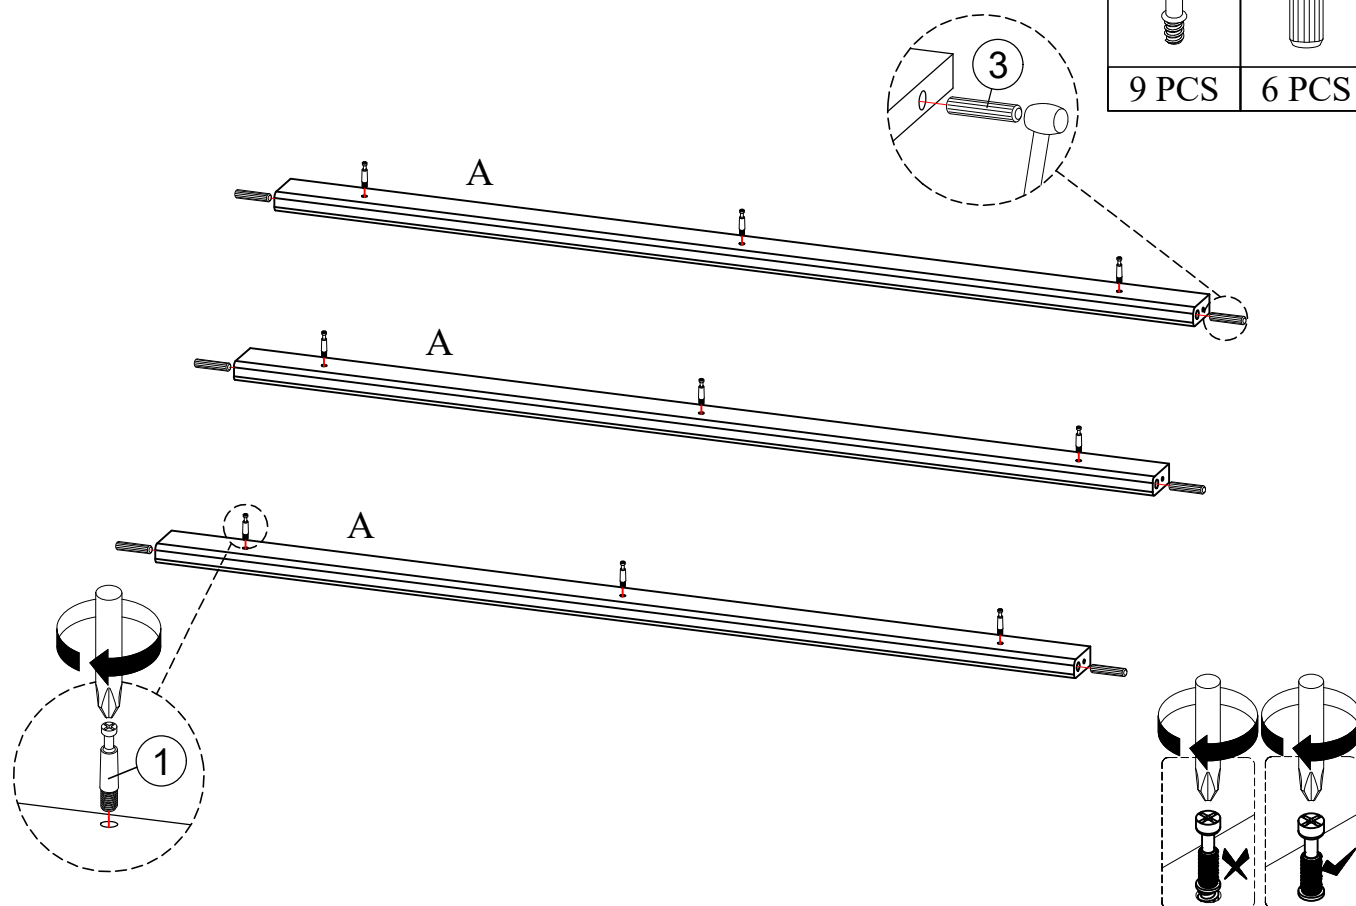


STEP 3:

2



3 PCS

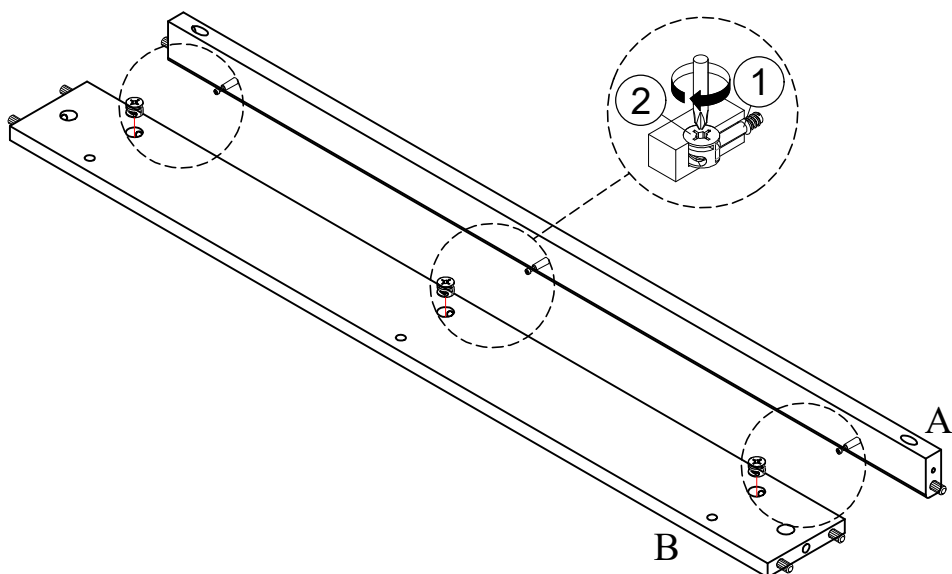


STEP 4:

2



3 PCS

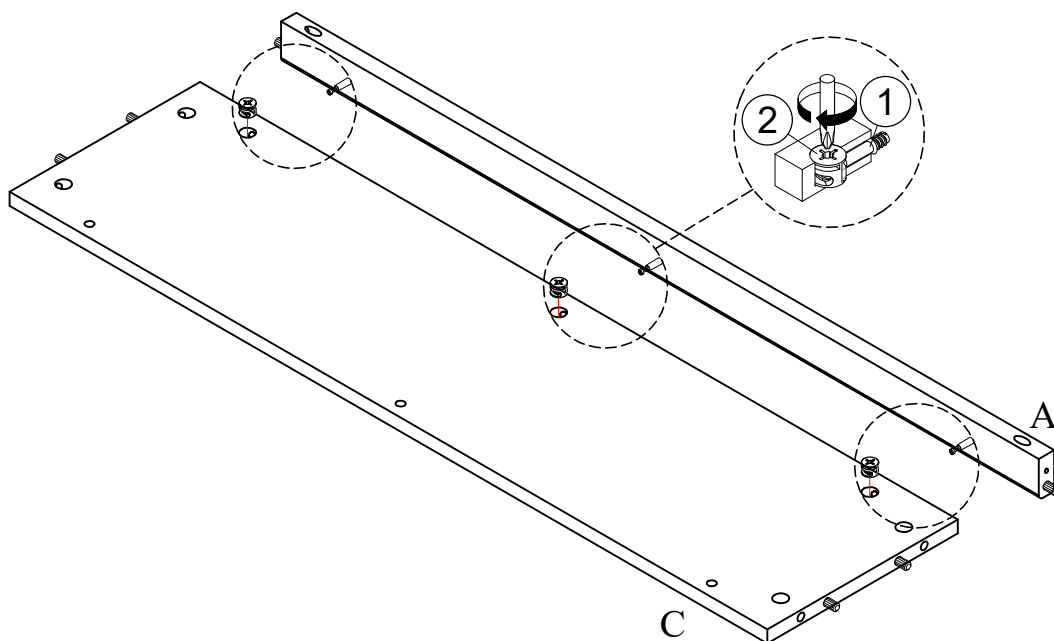


STEP 5:

2



6 PCS

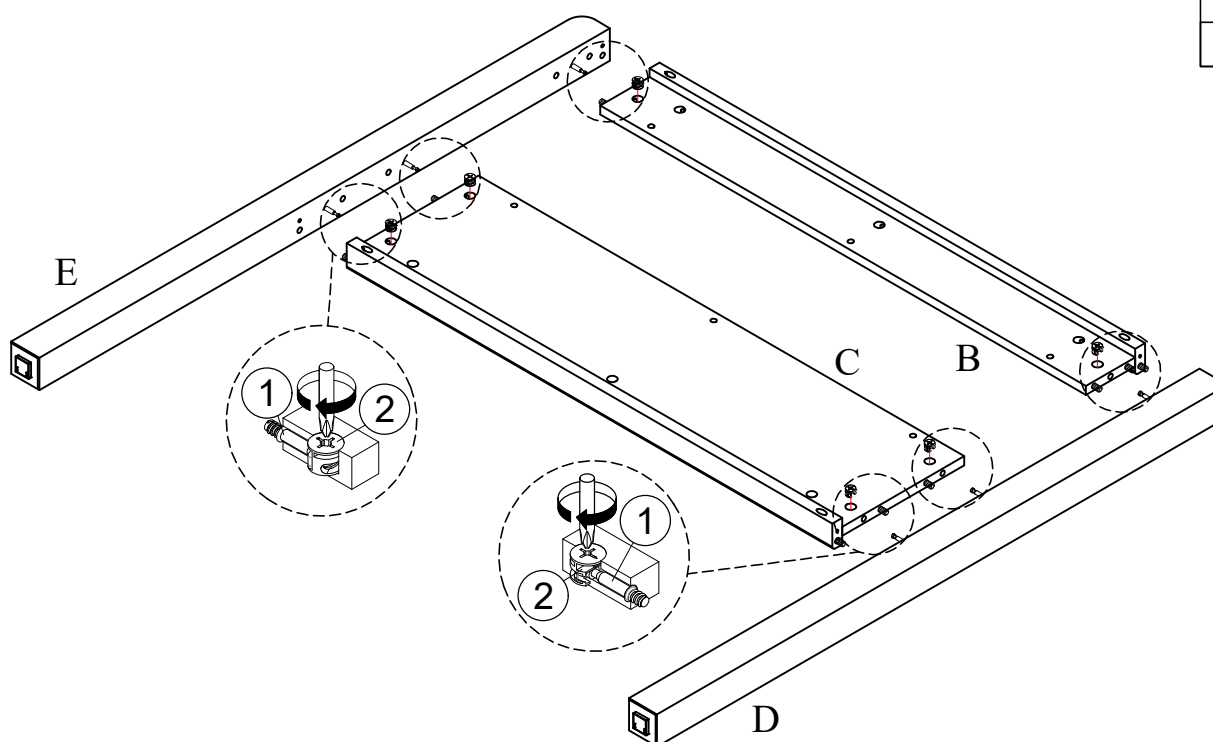


STEP 6:


11




4 PCS

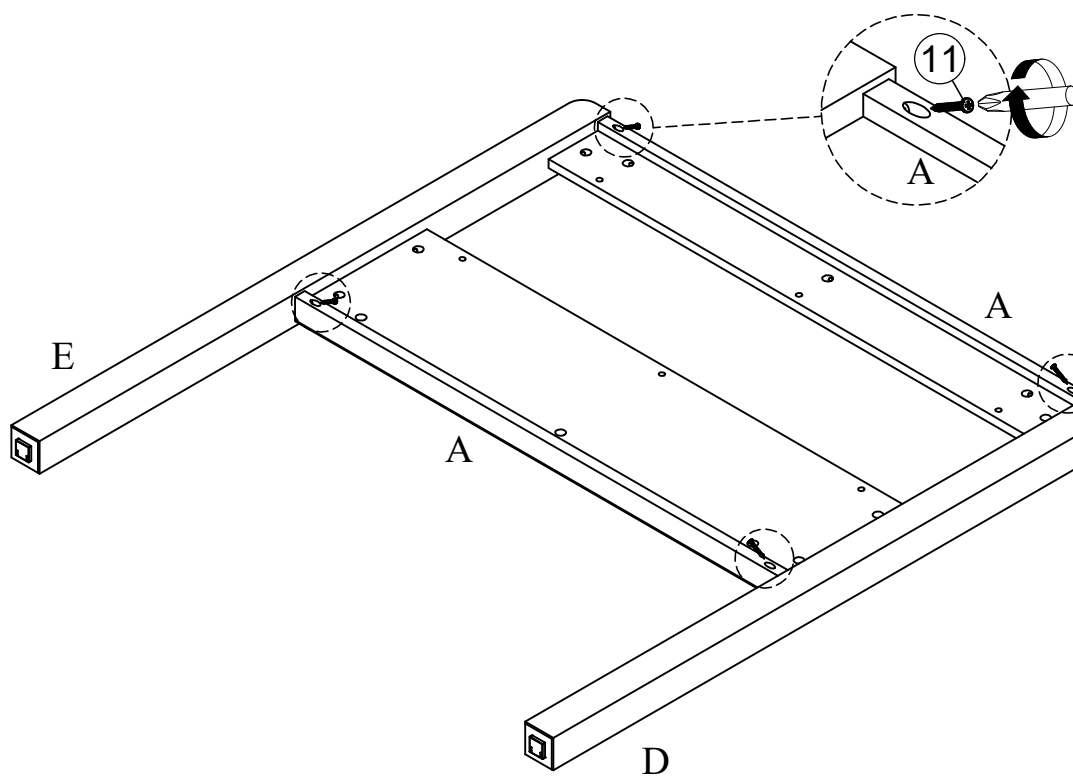

STEP 7:

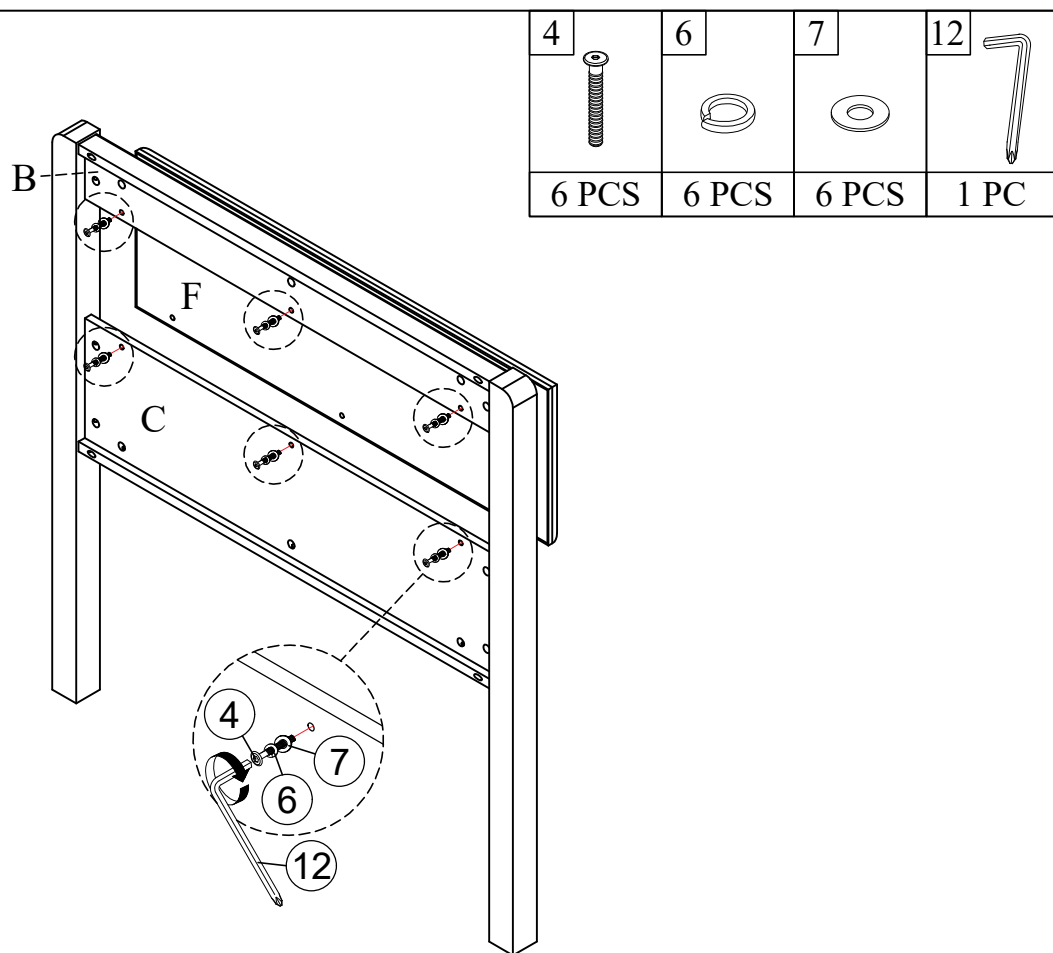

STEP 8:

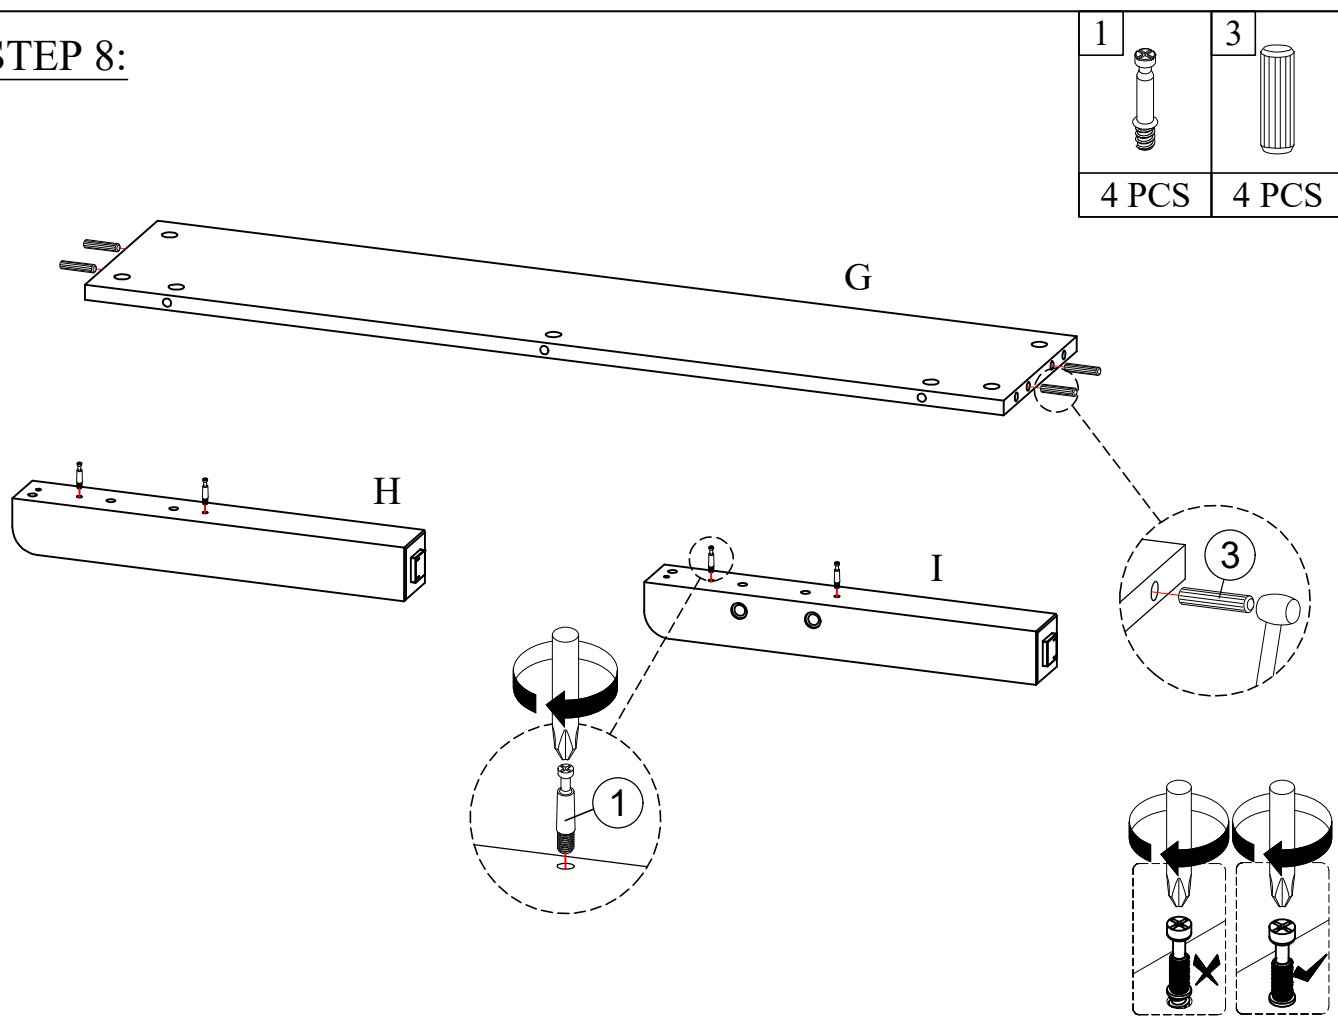


STEP 9:

2



3 PCS

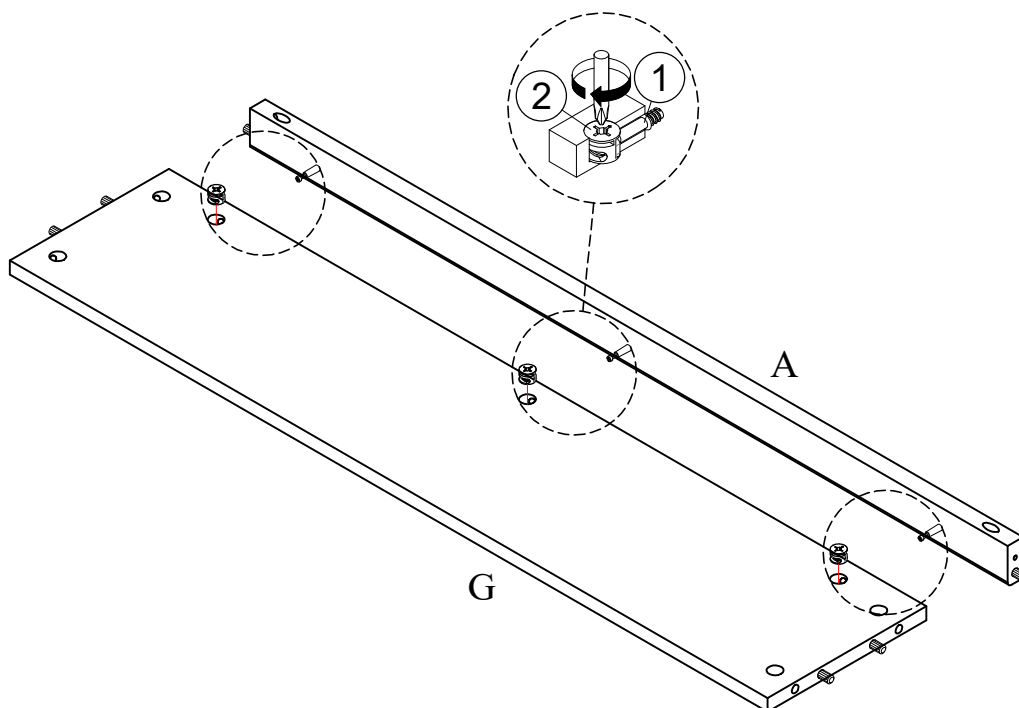


STEP 10:

2



4 PCS

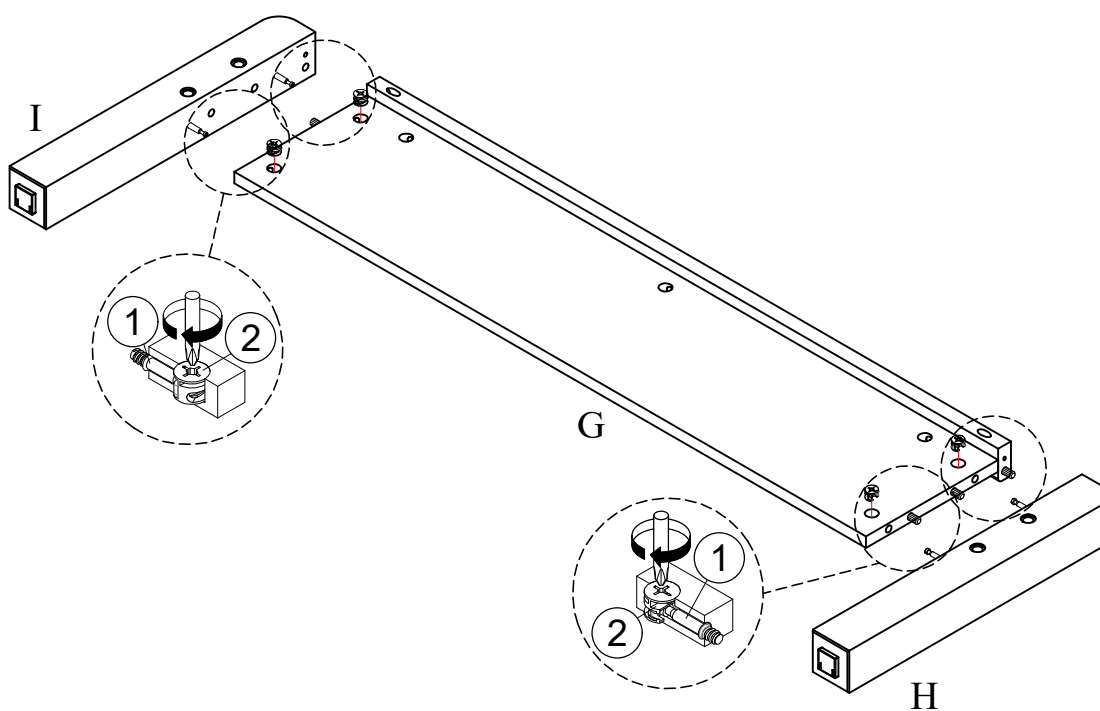


STEP 11:


11




2 PCS

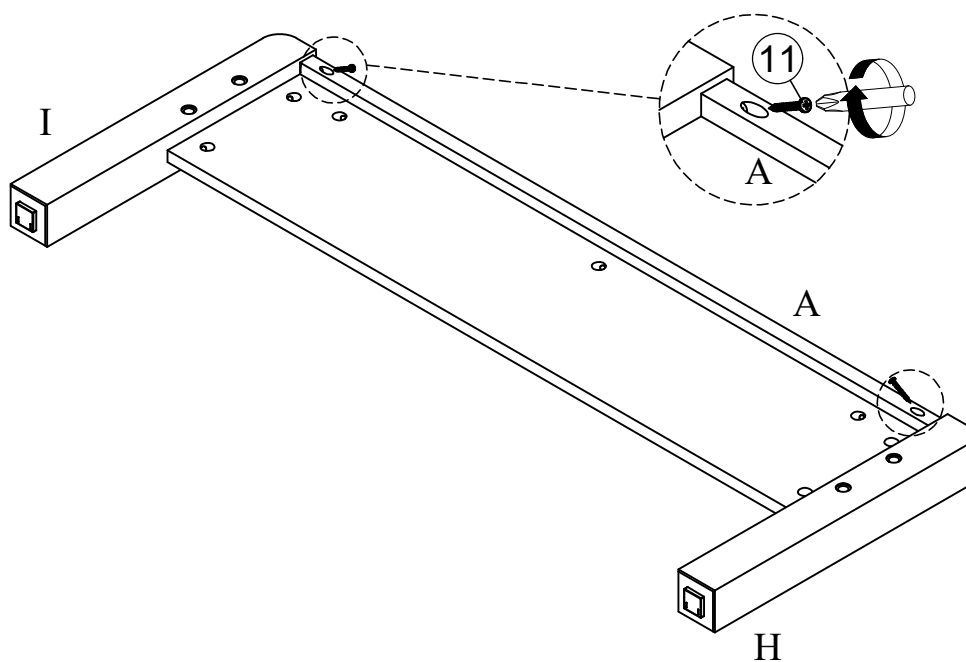


STEP 12:

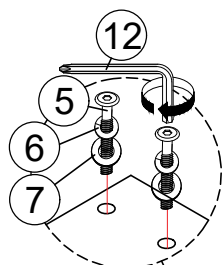

5	6	7	12
8 PCS	8 PCS	8 PCS	1 PC

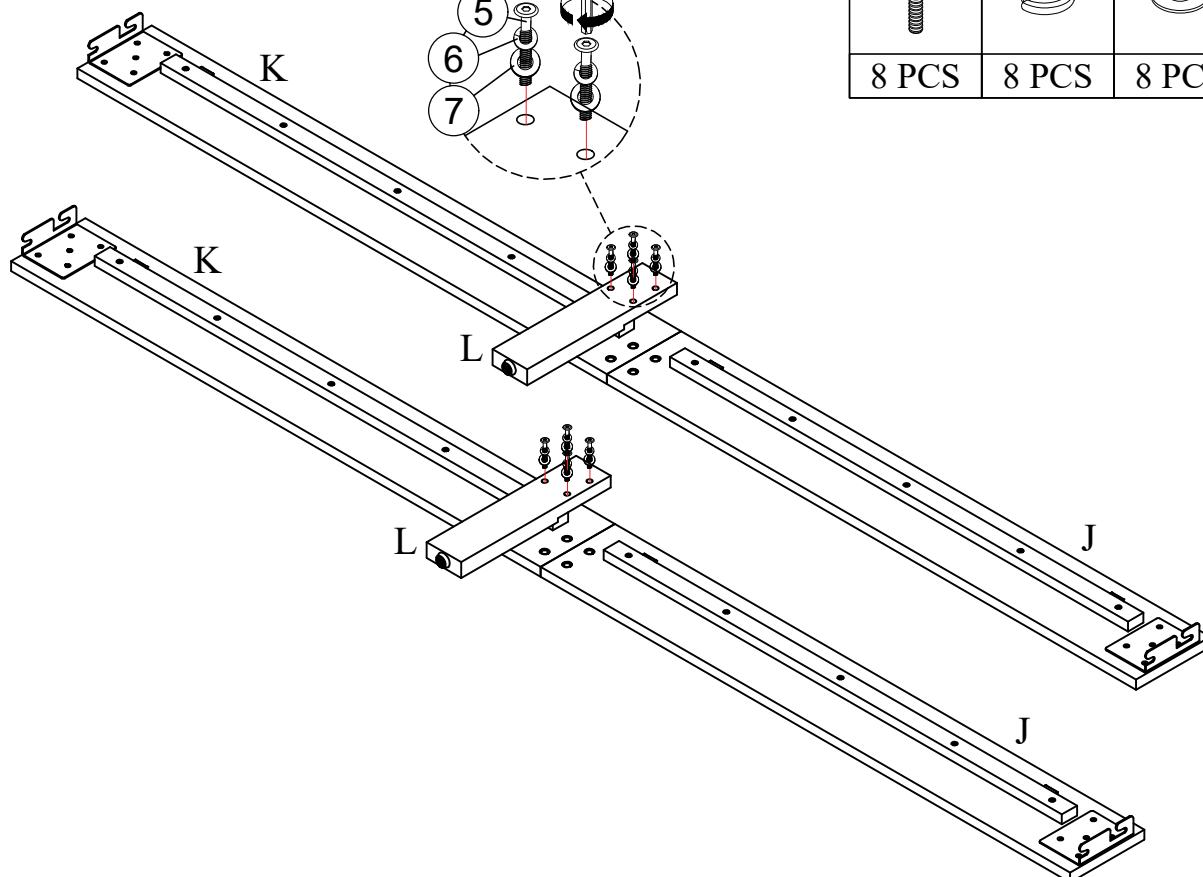


STEP 13:

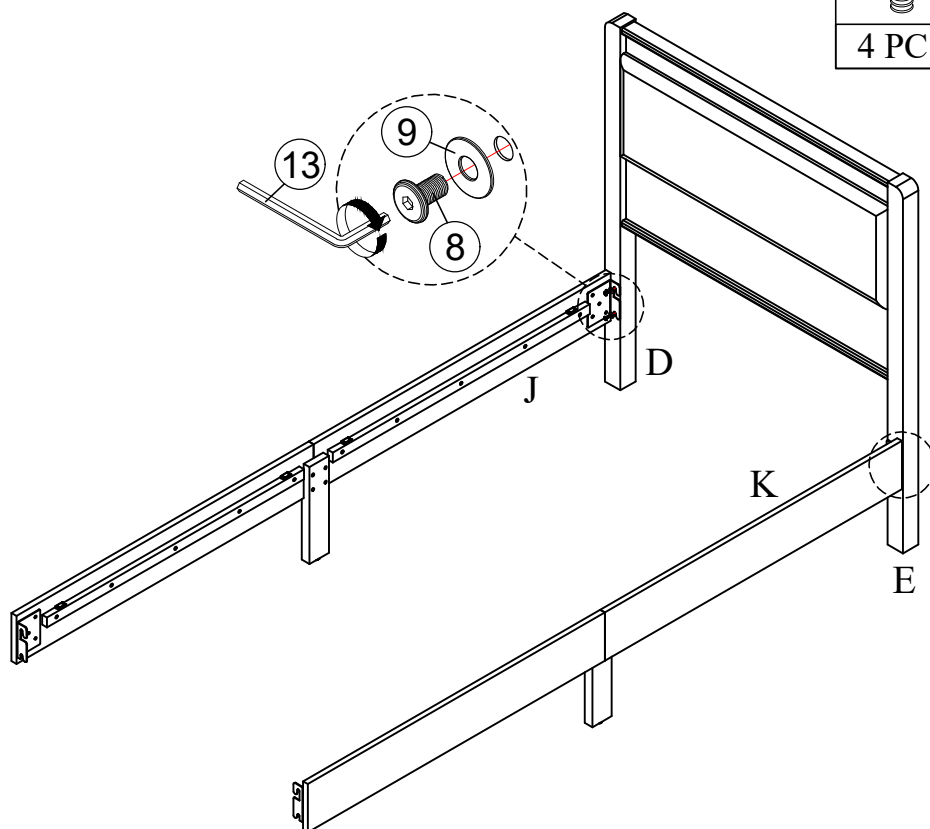

8	9	13
4 PCS	4 PCS	1 PC

STEP 14:

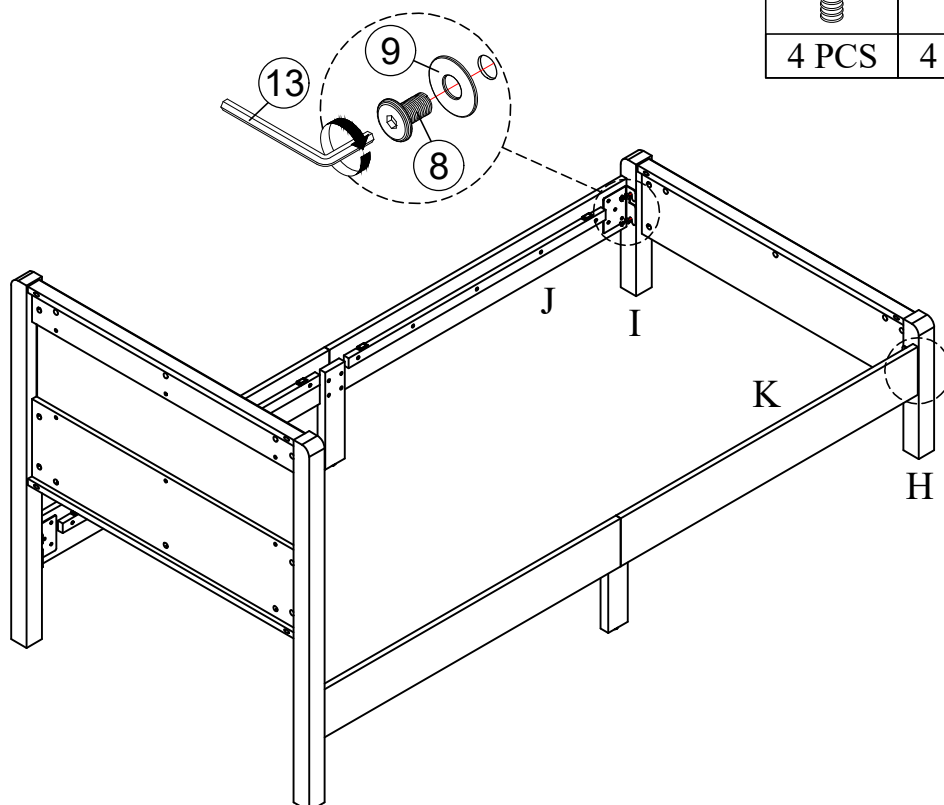

8	9	13
4 PCS	4 PCS	1 PC



STEP 15:

