

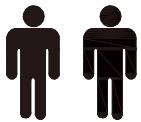


# Installation & Assembly

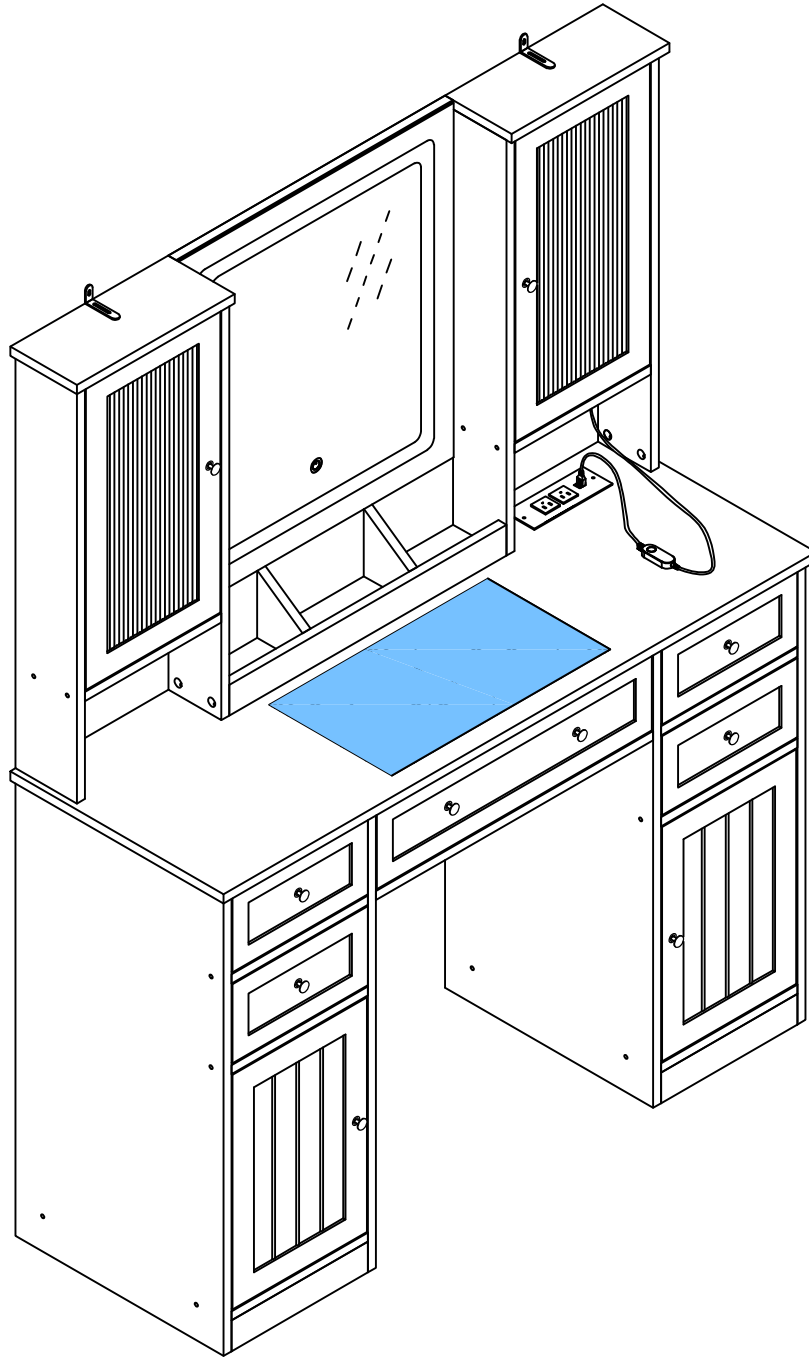

2 PERS.

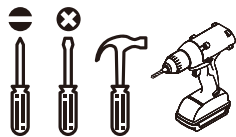


Tools required  
(not included)

Version:1.0


## 1. Matters needing attention

<b>! WARNING</b>	
	<p><b>Children have died from furniture tipover. To reduce the risk of furniture tipover:</b></p> <ul style="list-style-type: none"><li>-ALWAYS install Anti-tip device provided.</li><li>-NEVER put a TV on this product.</li><li>-NEVER allow children to stand, climb or hang on drawers, doors, or shelves.</li><li>-NEVER open more than one drawer at a time.</li><li>-Place heaviest items in the lowest drawers.</li></ul> <p><i>This is a permanent label. Do not remove!</i></p>
	

## 2. Matters needing attention

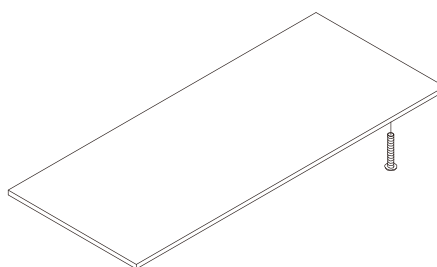


Be sure to use the proper screws to avoid damaging the parts

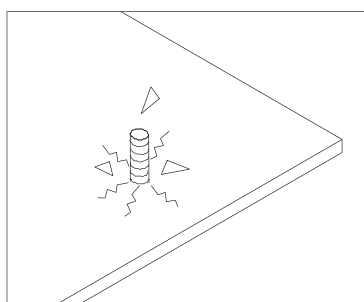

**X**

Wrong screws can cause the plank to crack




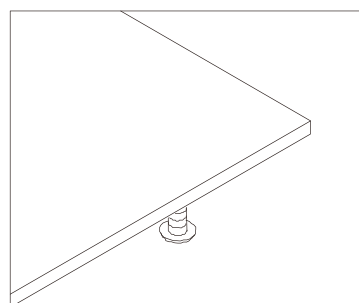



**✓**

The right screw is the right size



## Cam Lock Fastening System


Insert the cam bolt into the hole first, then insert the cam lock and lock it.
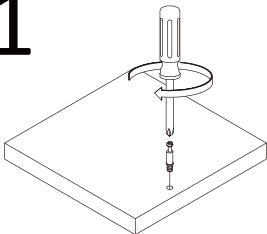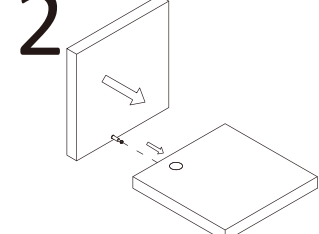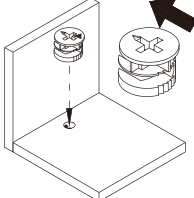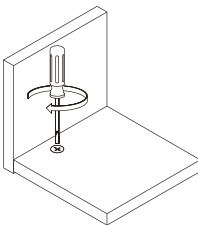
<b>1</b> 	<b>2</b> 	<b>3</b>  <p>The opening must point toward the edge of the board</p>	<b>4</b> 
---	---	---	---

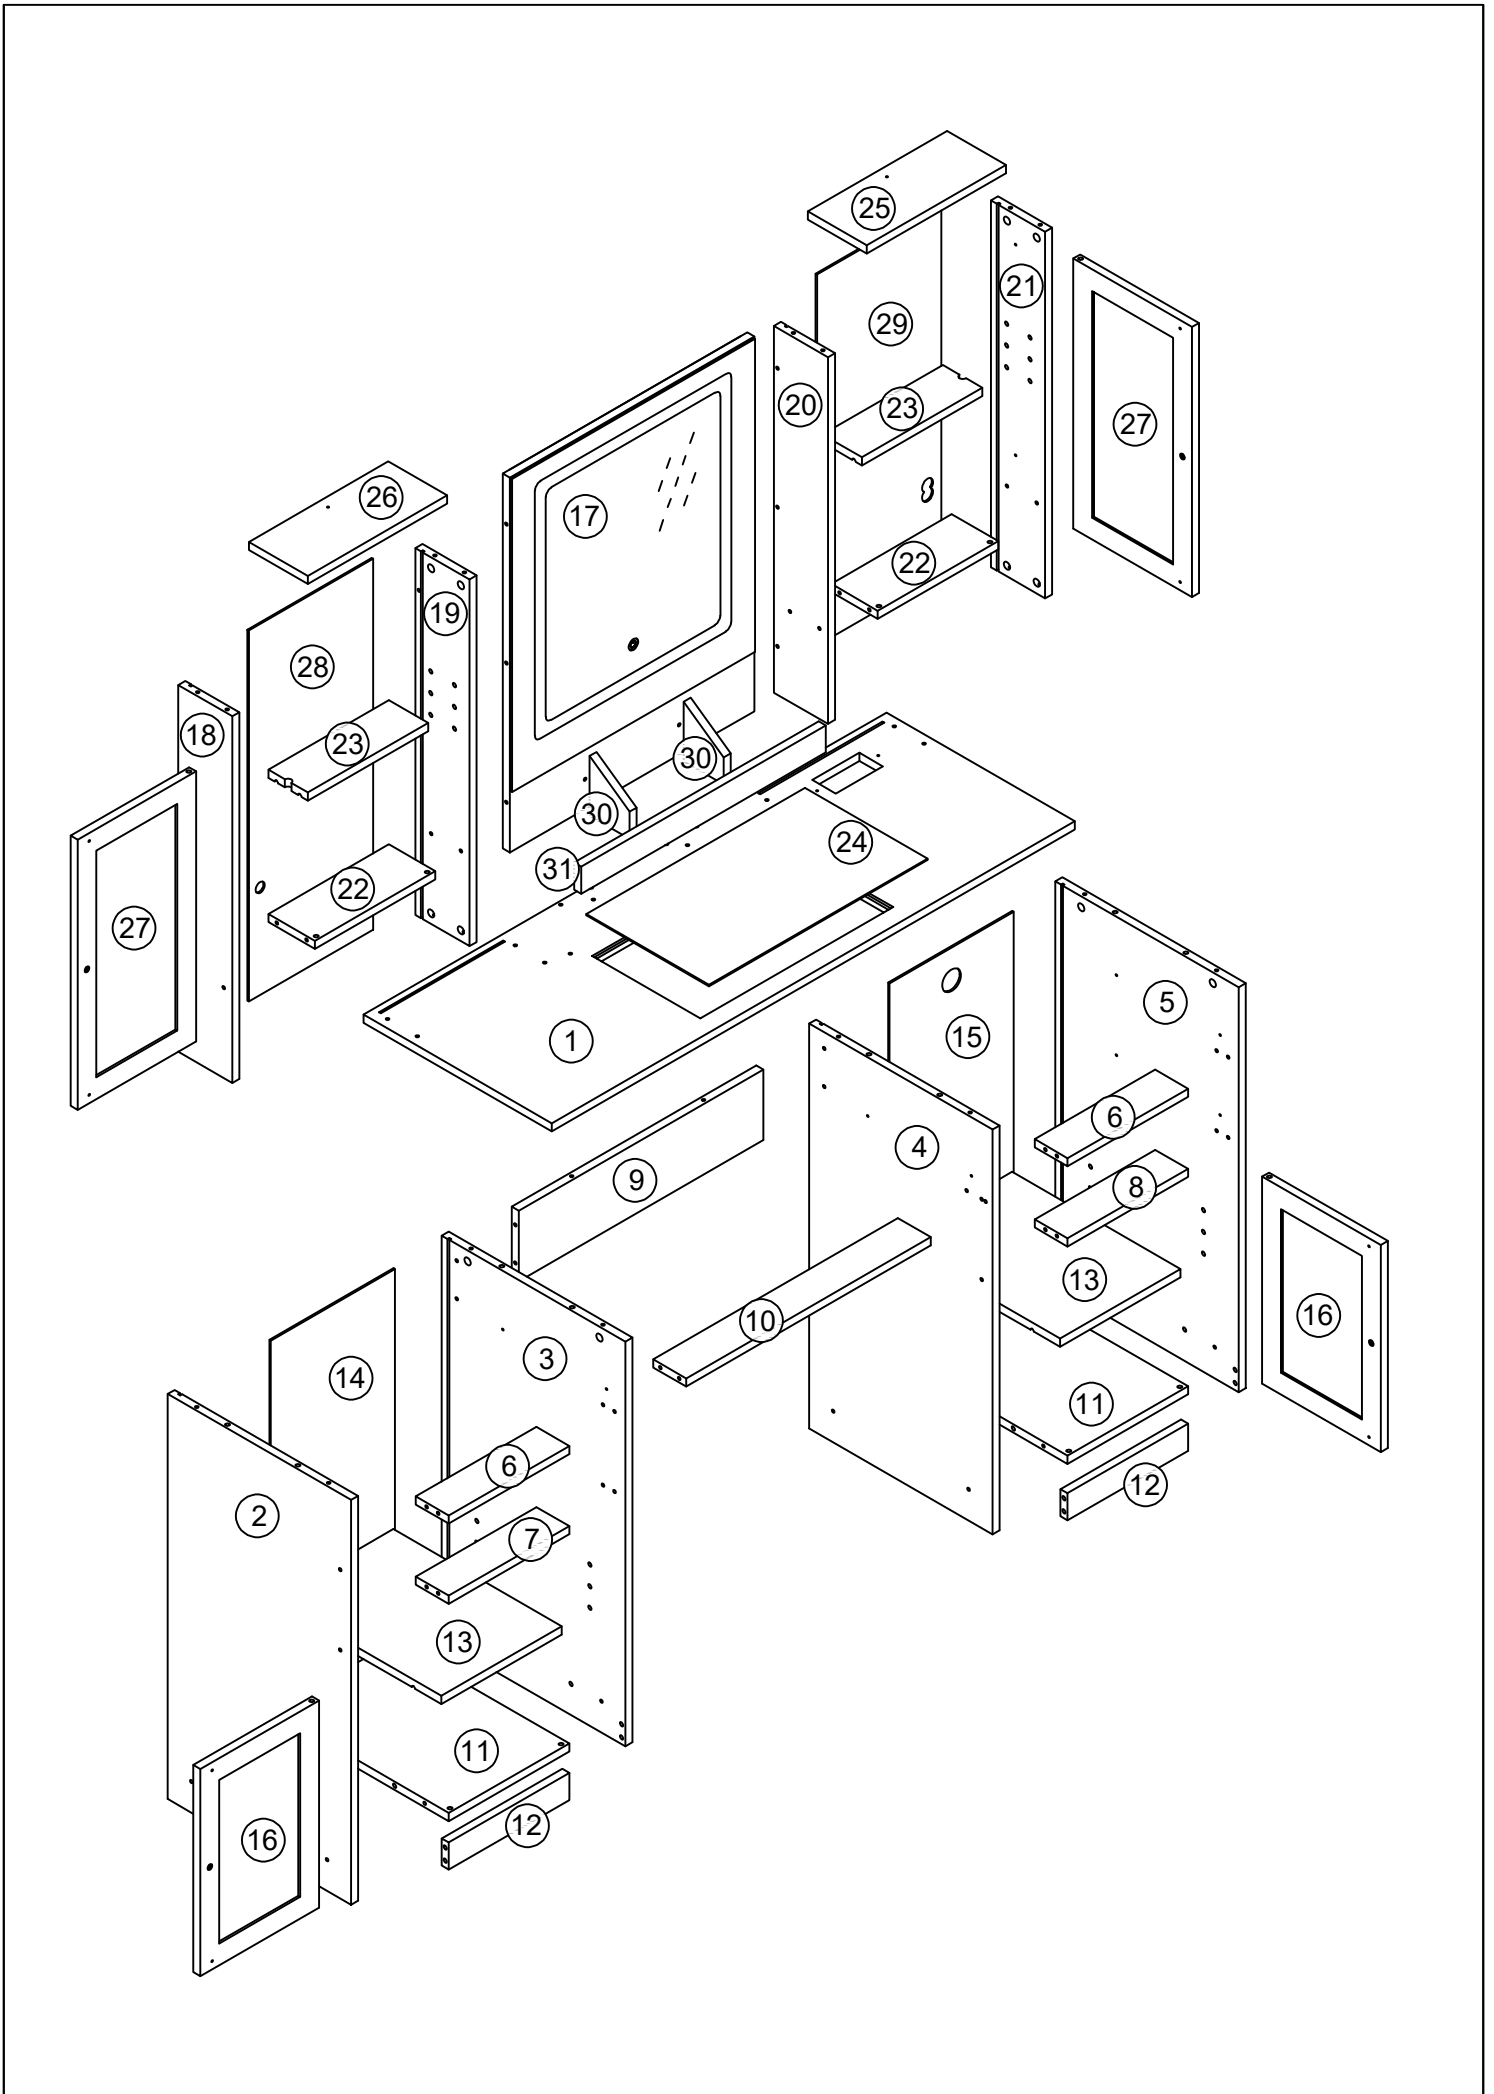

x4

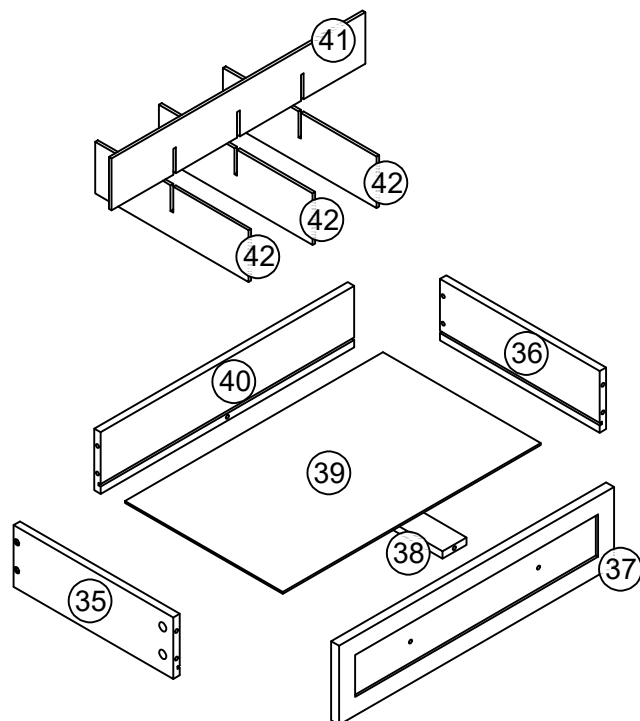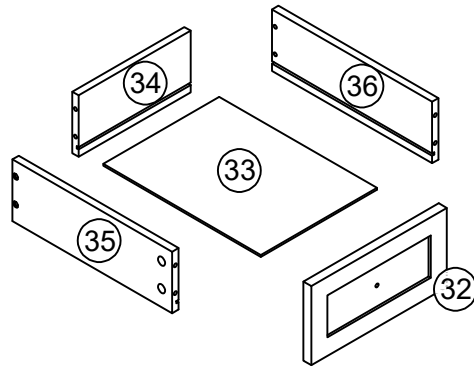


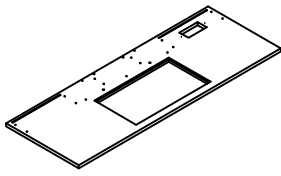


①  
x1




②  
x1




③  
x1




④  
x1




⑤  
x1




⑥  
x2




⑦  
x1




⑧  
x1

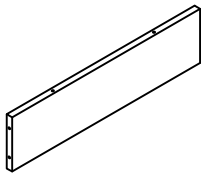


⑨  
x1




⑩  
x1

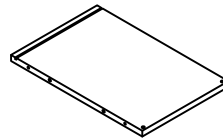


⑪  
x2




⑫  
x2

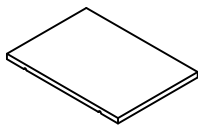


⑬  
x2




⑭  
x1



⑮  
x1



⑯  
x2

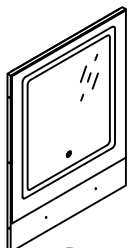

⑰  
x1



⑱  
x1




⑲  
x1




⑳  
x1




21  
x1




22  
x2




23  
x2

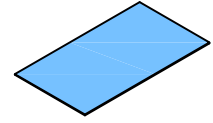


24  
x1

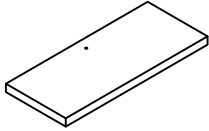


25  
x1

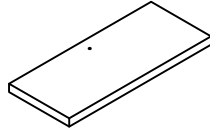


26  
x1



27  
x2




28  
x1




29  
x1




30  
x2




31  
x1

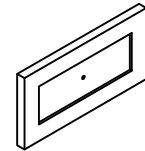


32  
x4

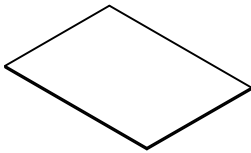


33  
x4




34  
x4

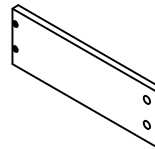


35  
x5

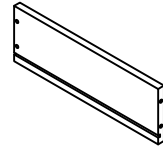


36  
x5

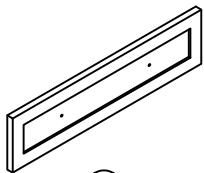


37  
x1




38  
x1

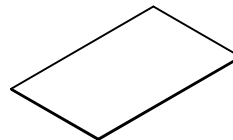


39  
x1

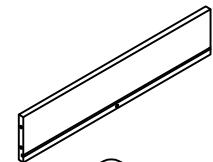

40  
x1

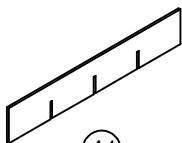

41  
x1

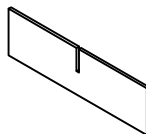

42  
x3




**A**  
x53(+2)  
6x35mm




**B**  
x53(+2)  
15x9.5mm



**C**  
x36(+2)  
6x30mm



**D**  
x37(+2)  
5x40mm




**E**  
x1



**F**  
x56(+2)  
3.5x12mm



**G**  
x36(+2)  
20mm



**H**  
x8  
30x10mm



**I**  
x2



**J**  
x4  
3x12mm




**K**  
x29(+1)  
4x35mm




**L**  
x2



**M**  
x10




**N**  
x1



**O**  
x24(+1)




**P**  
x32(+2)  
3x14mm



**Q**  
x16(+1)



**R**  
x4  
4x16mm

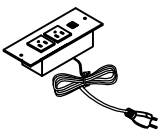

**S**  
x1



**T**  
x4



**U**  
x8




**V**  
x4




**W**  
x2




**X**  
x6  
4x10mm

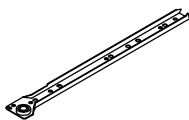


**CL**  
x5  
L300mm

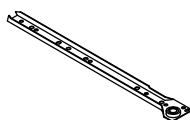

**CR**  
x5  
L300mm










**DR**  
x5  
L300mm



**DL**  
x5  
L300mm







1

x4

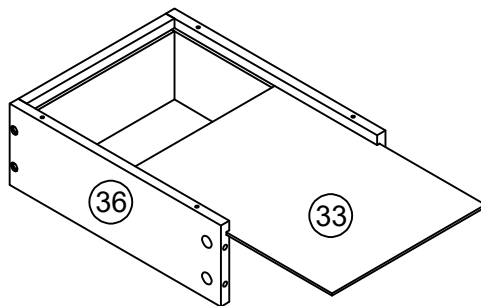
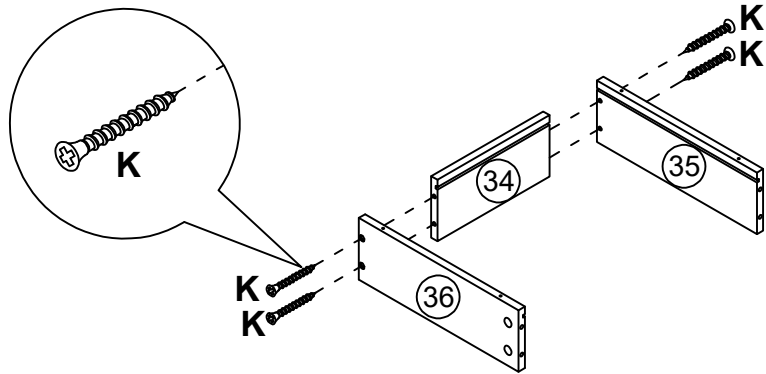
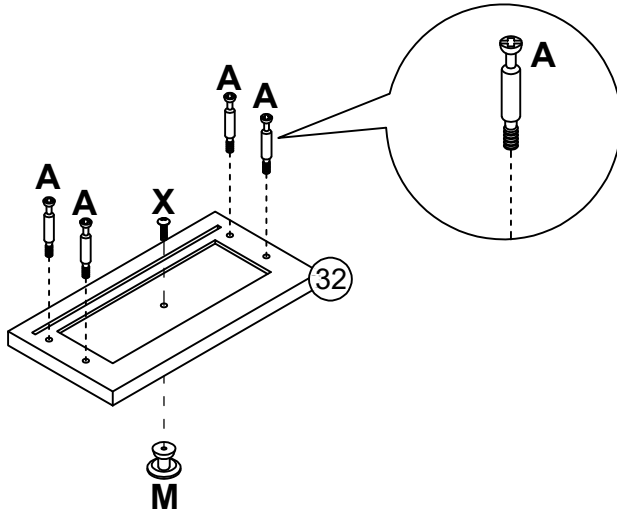
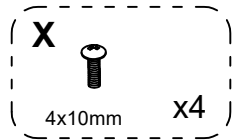
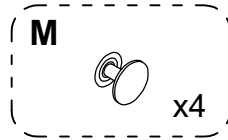
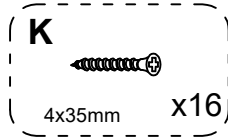
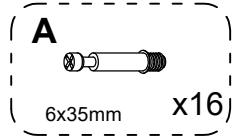


2







x4

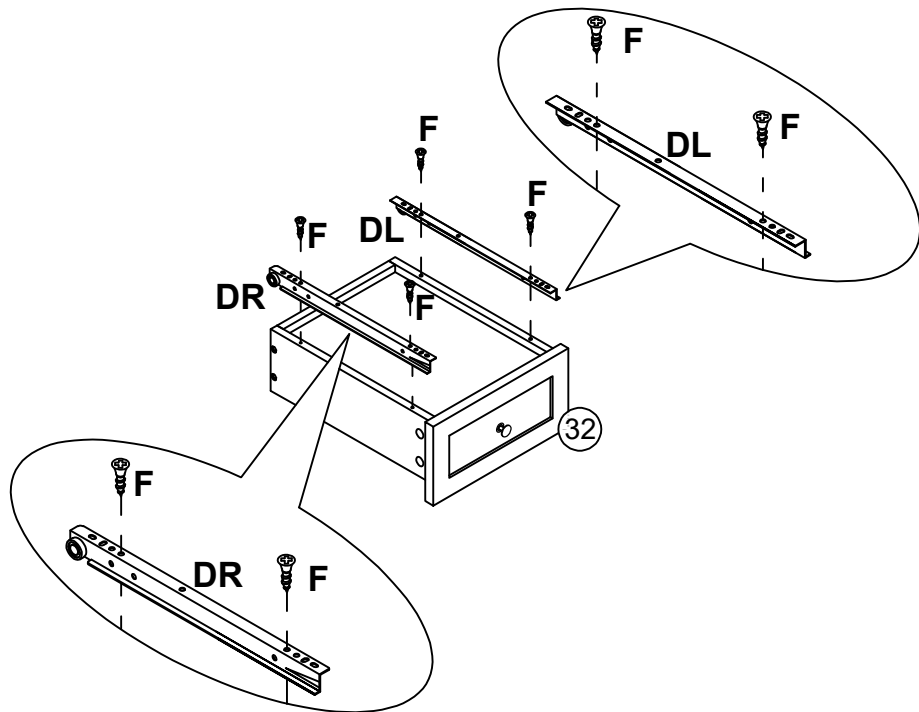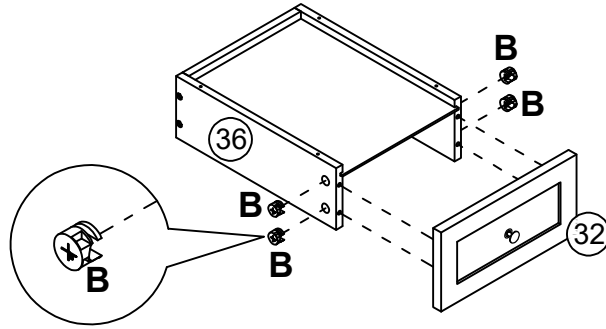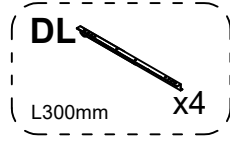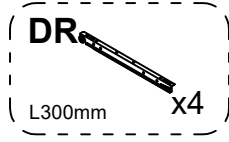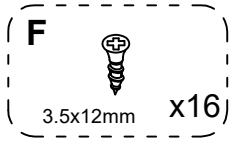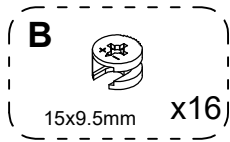






3

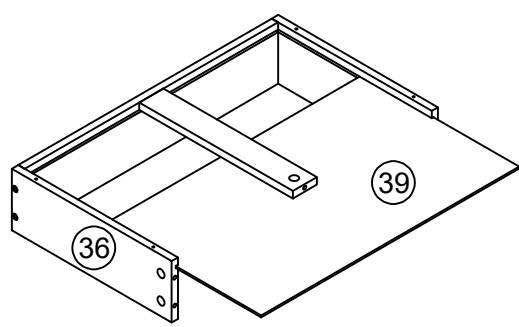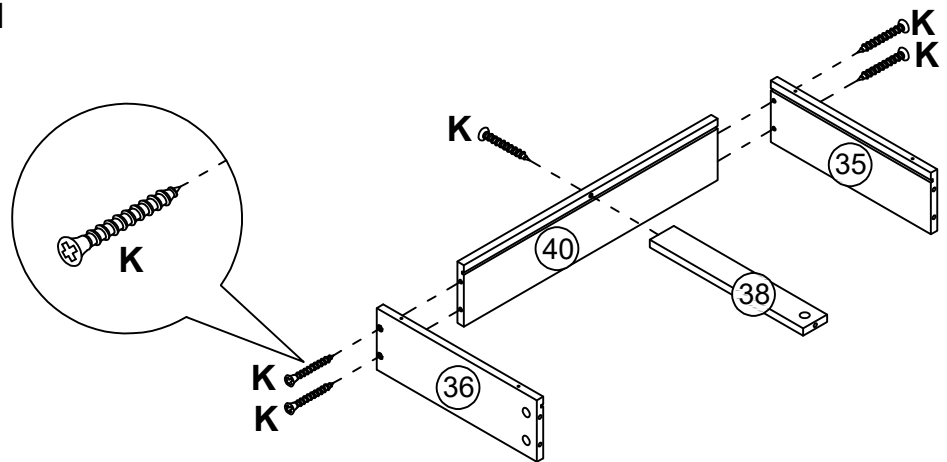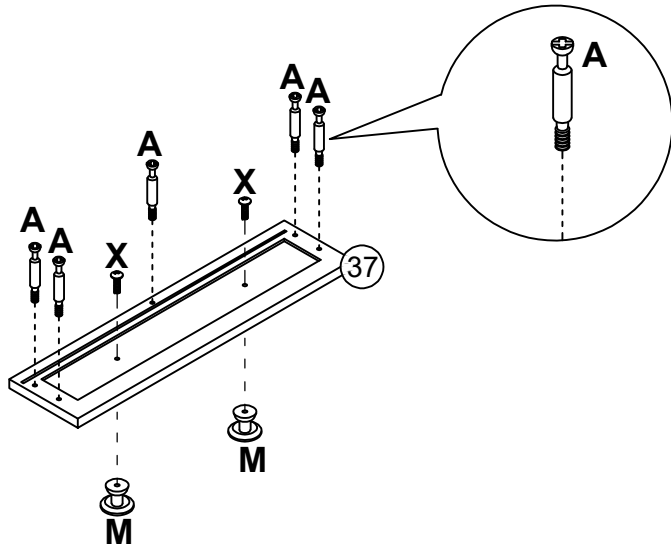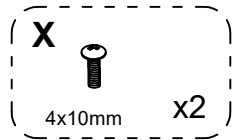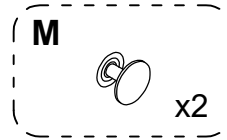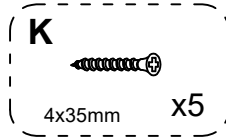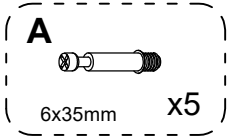







4

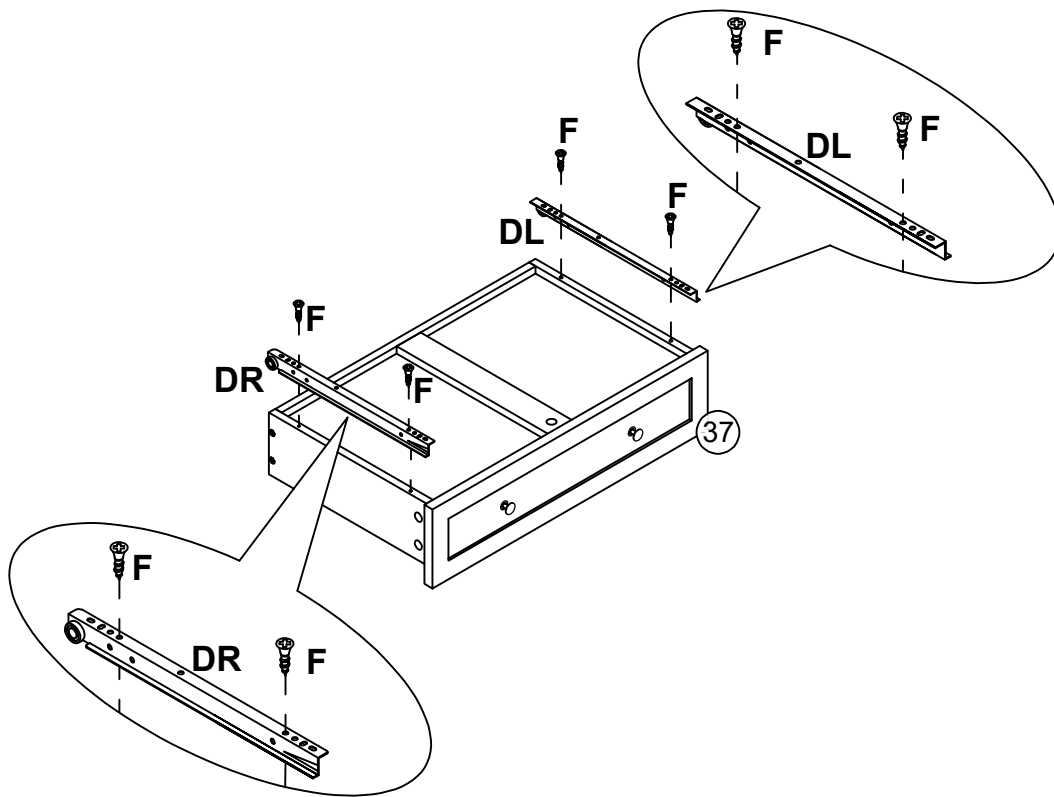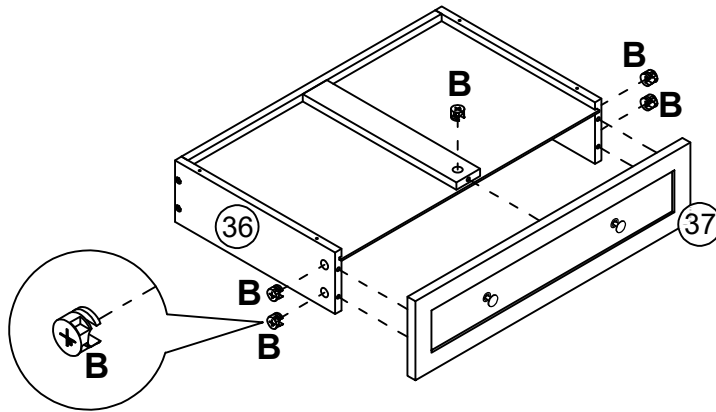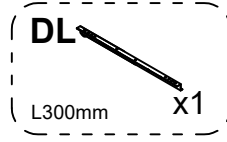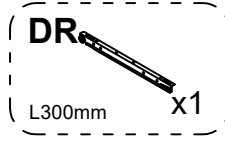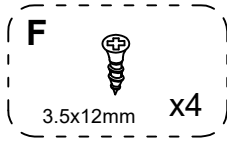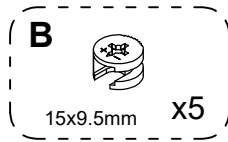







5

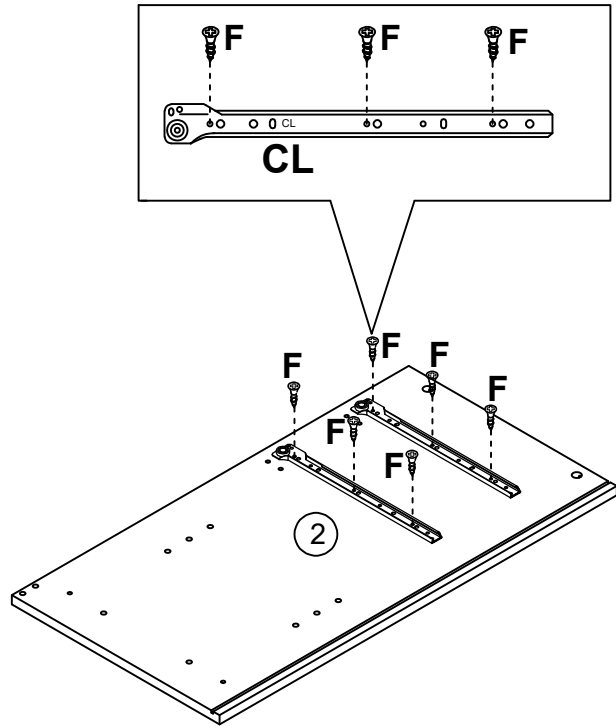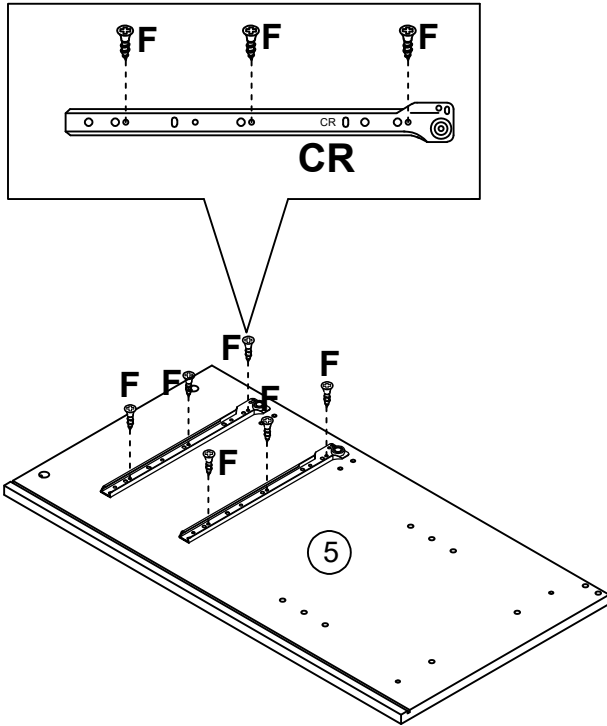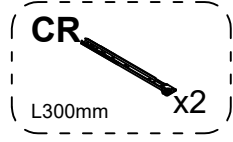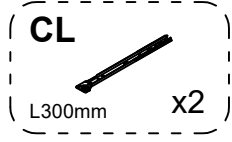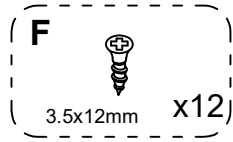




6

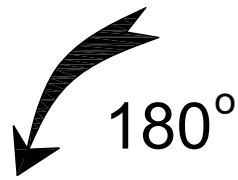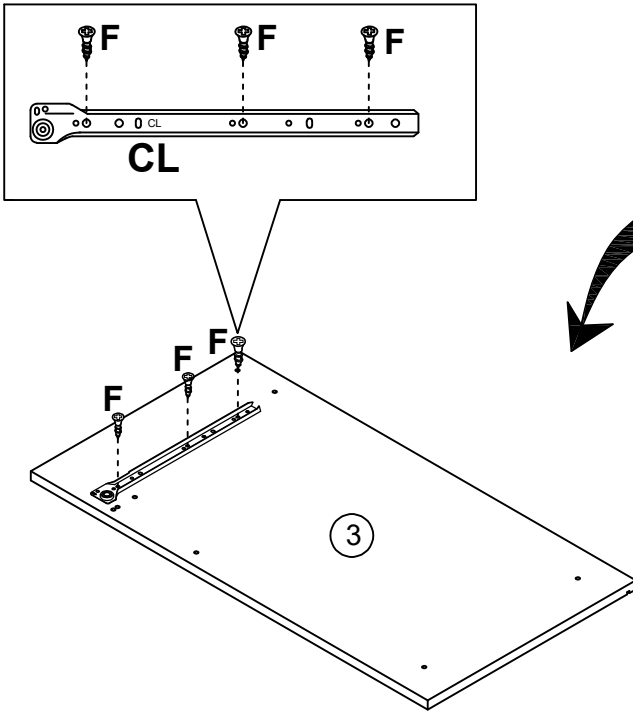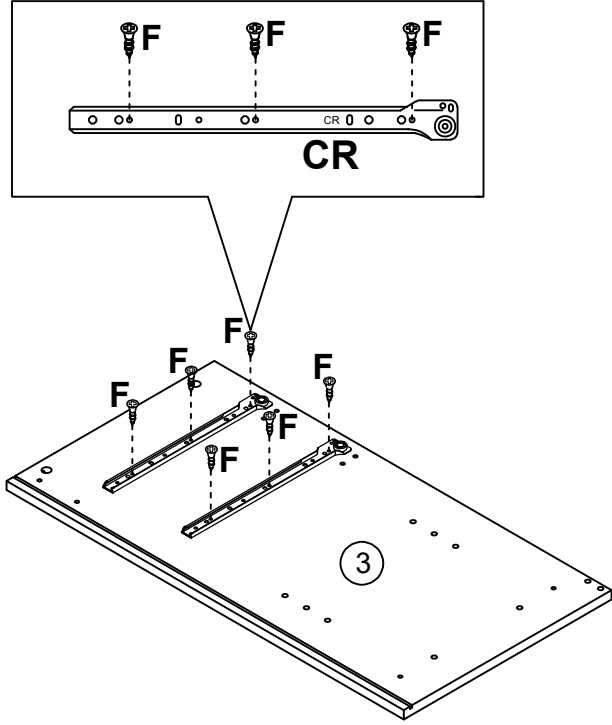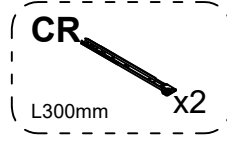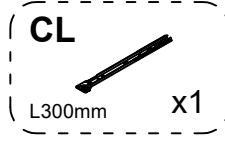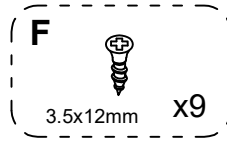




7

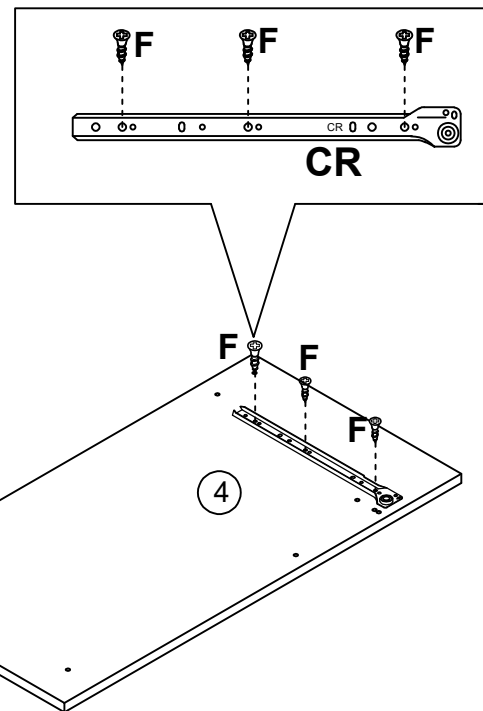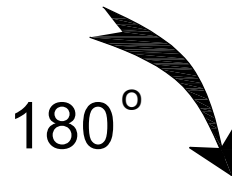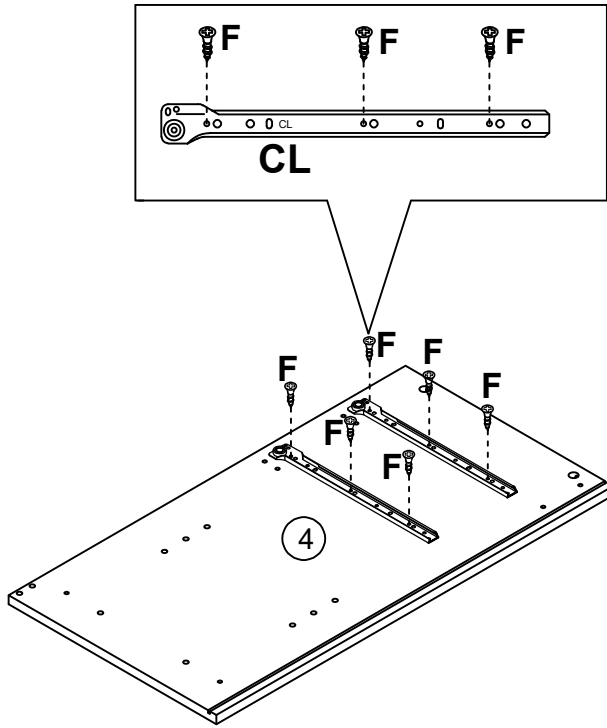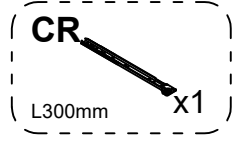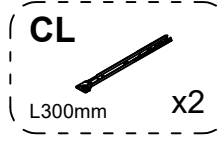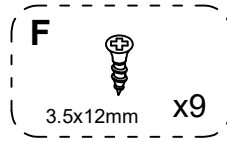








8

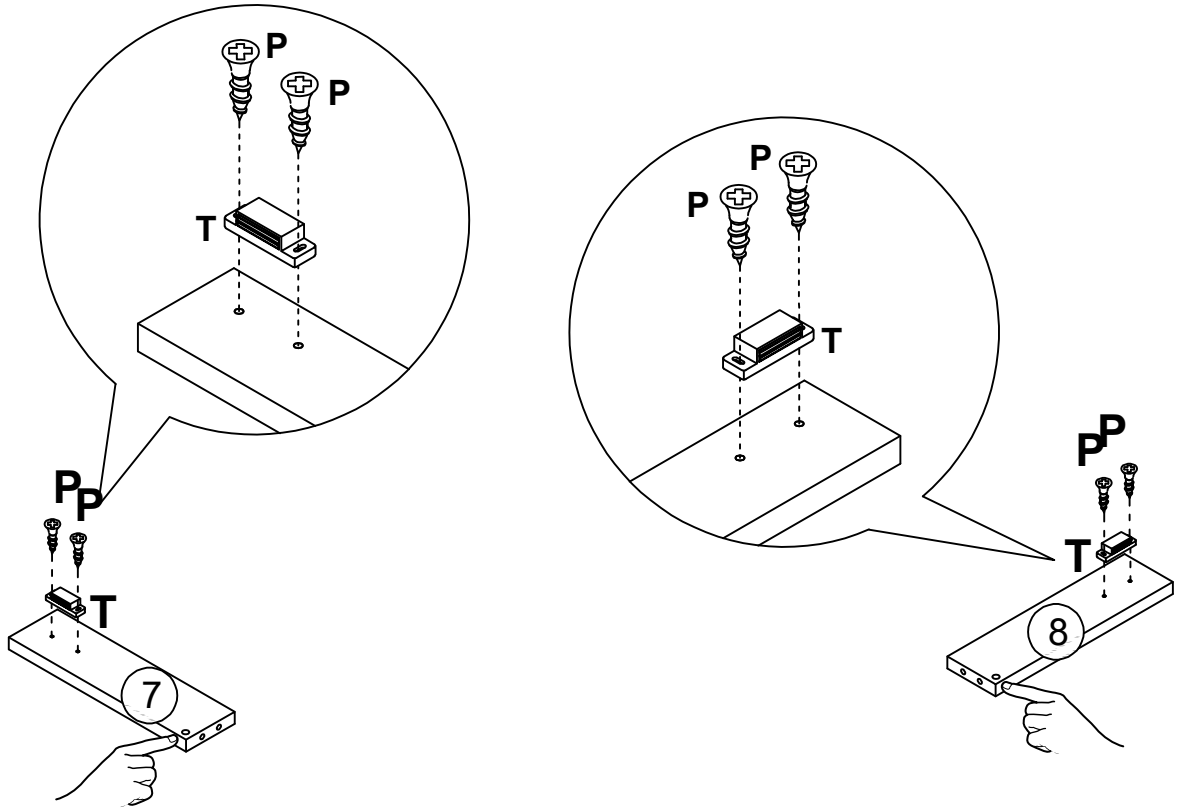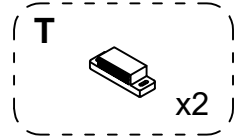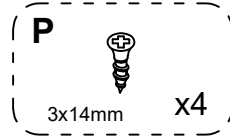





9



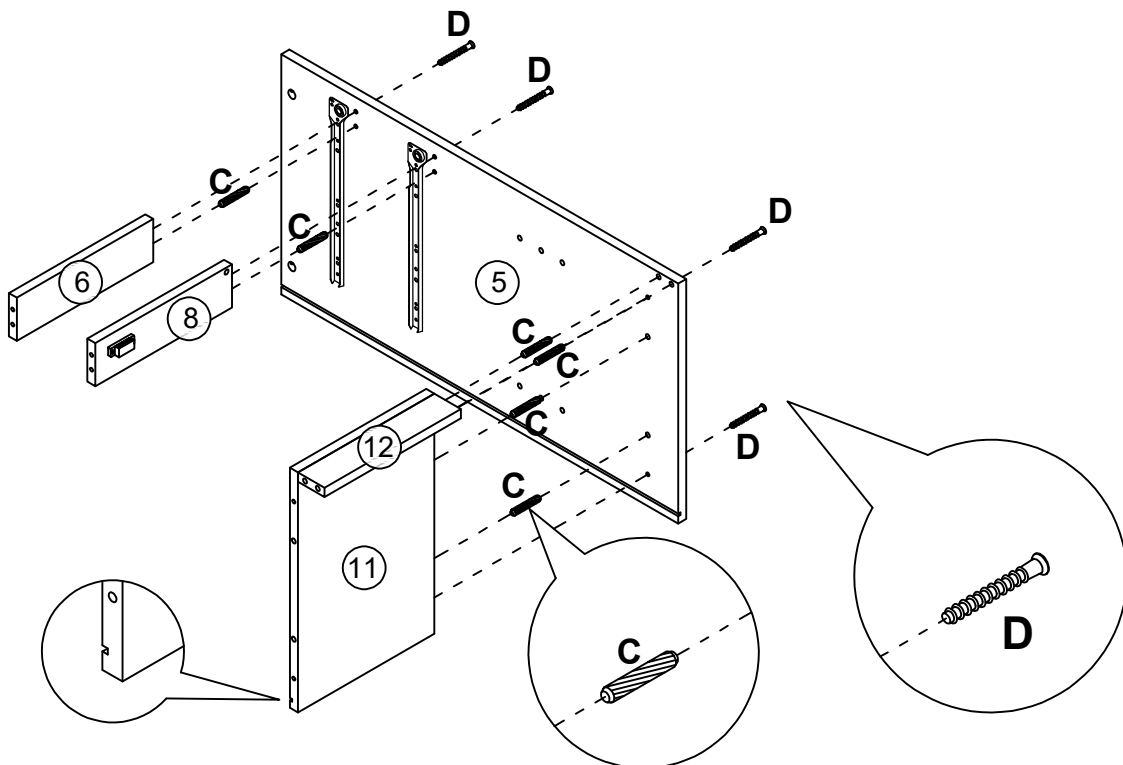
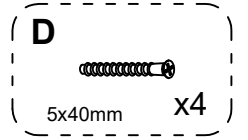
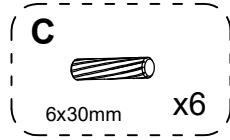


10

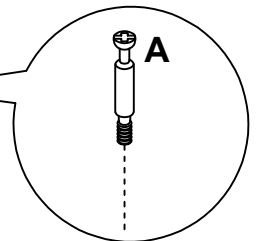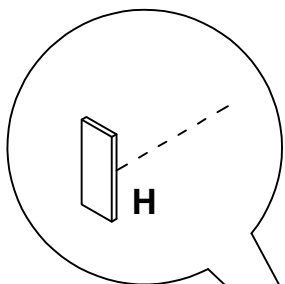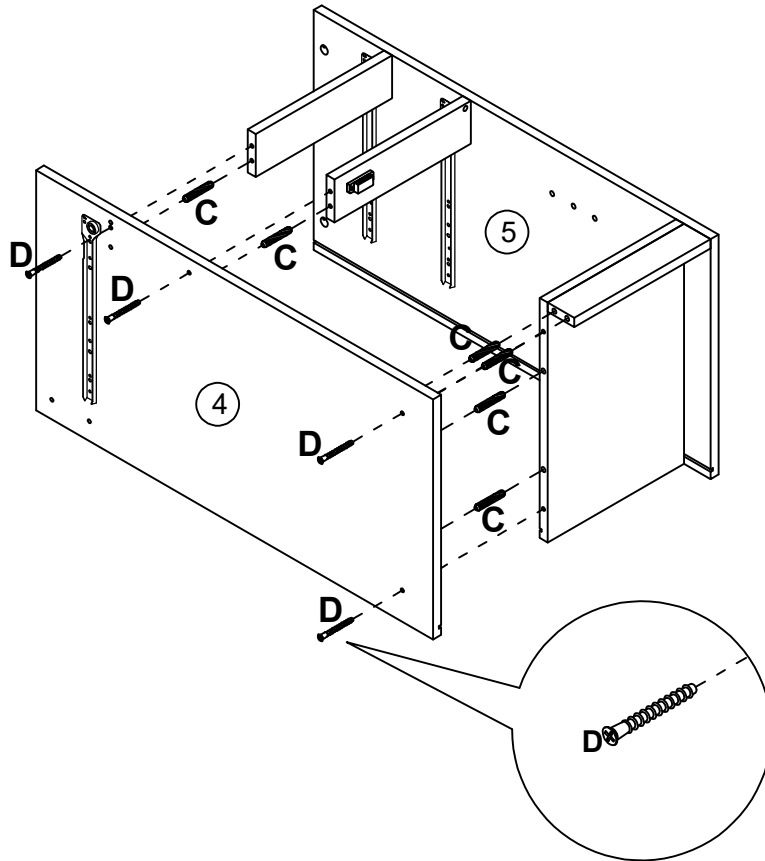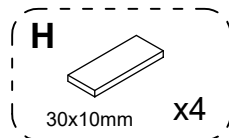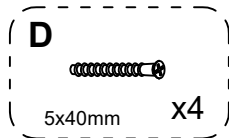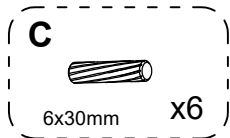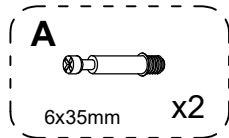




Peel off the film and stick it to the bottom of the cabinet feet.


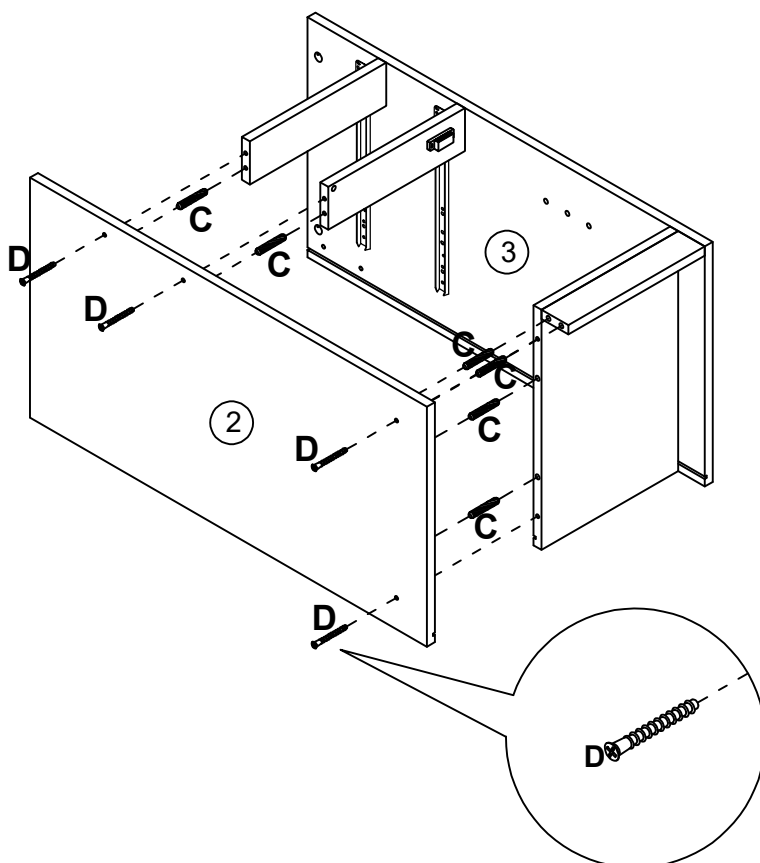
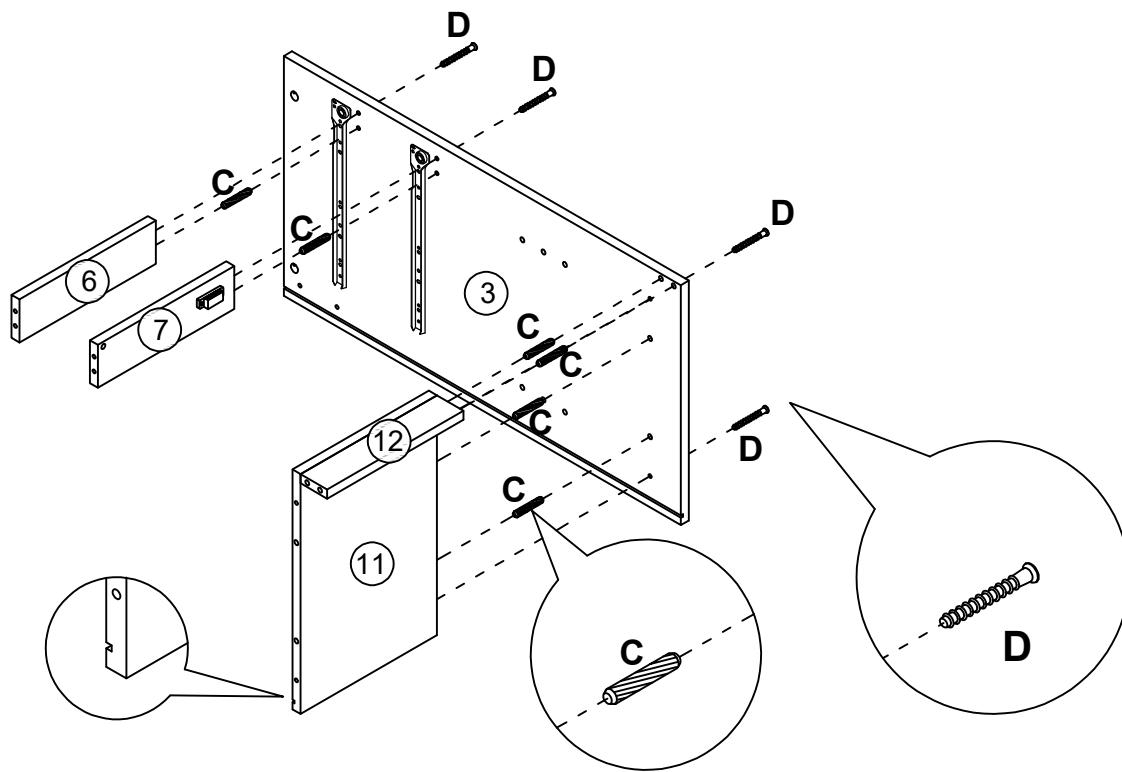
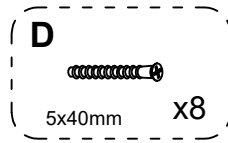
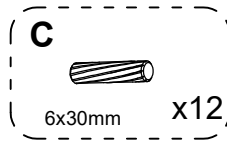


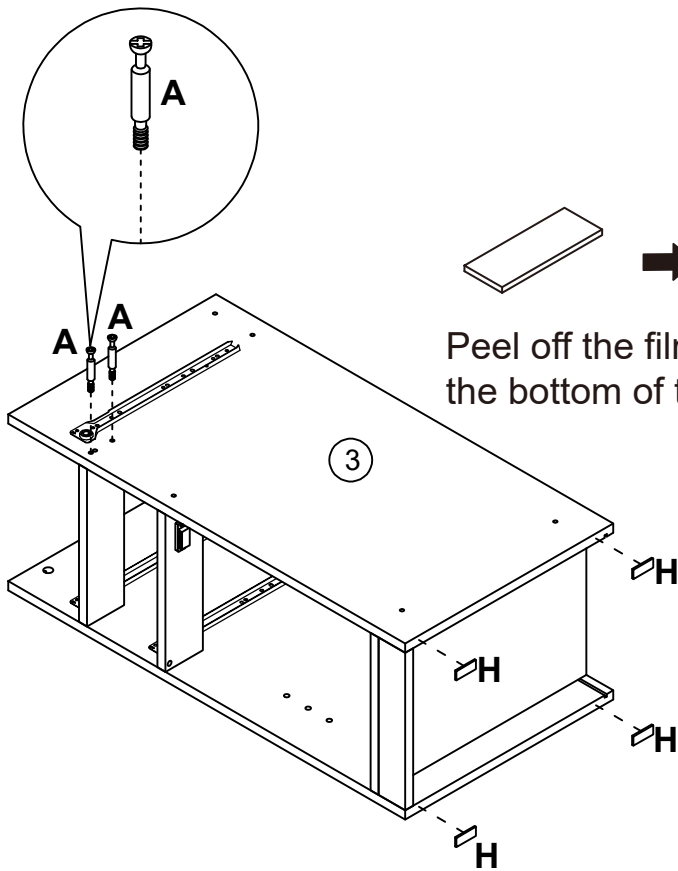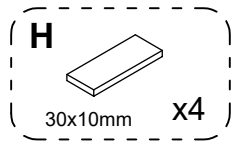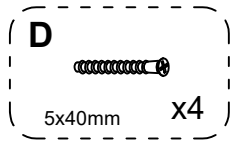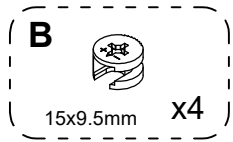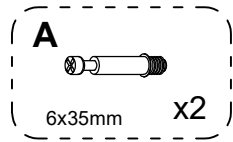


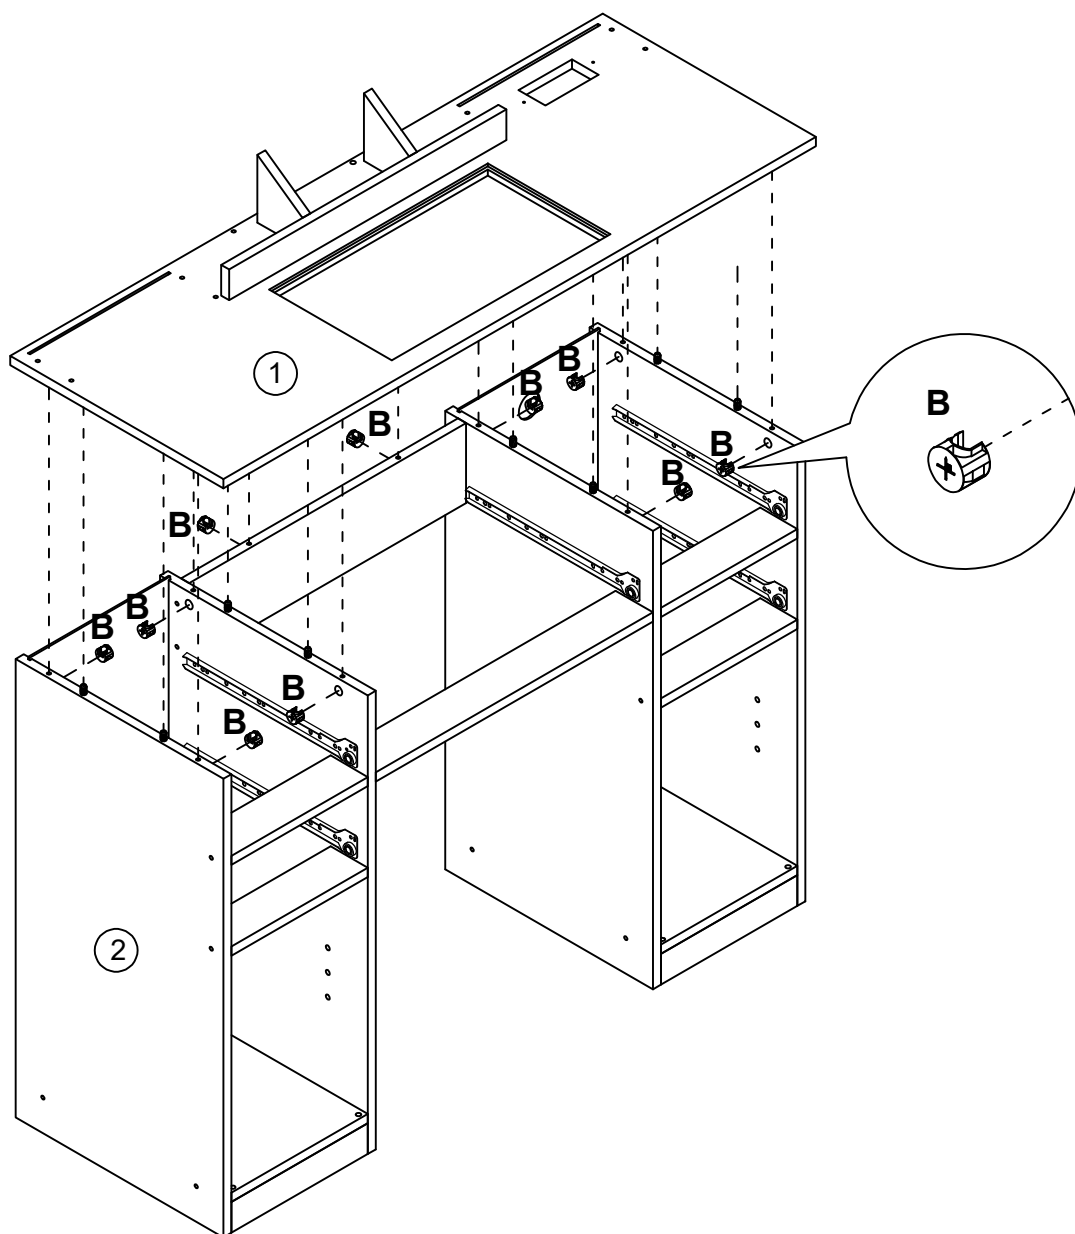
Peel off the film and stick it to the bottom of the cabinet feet.




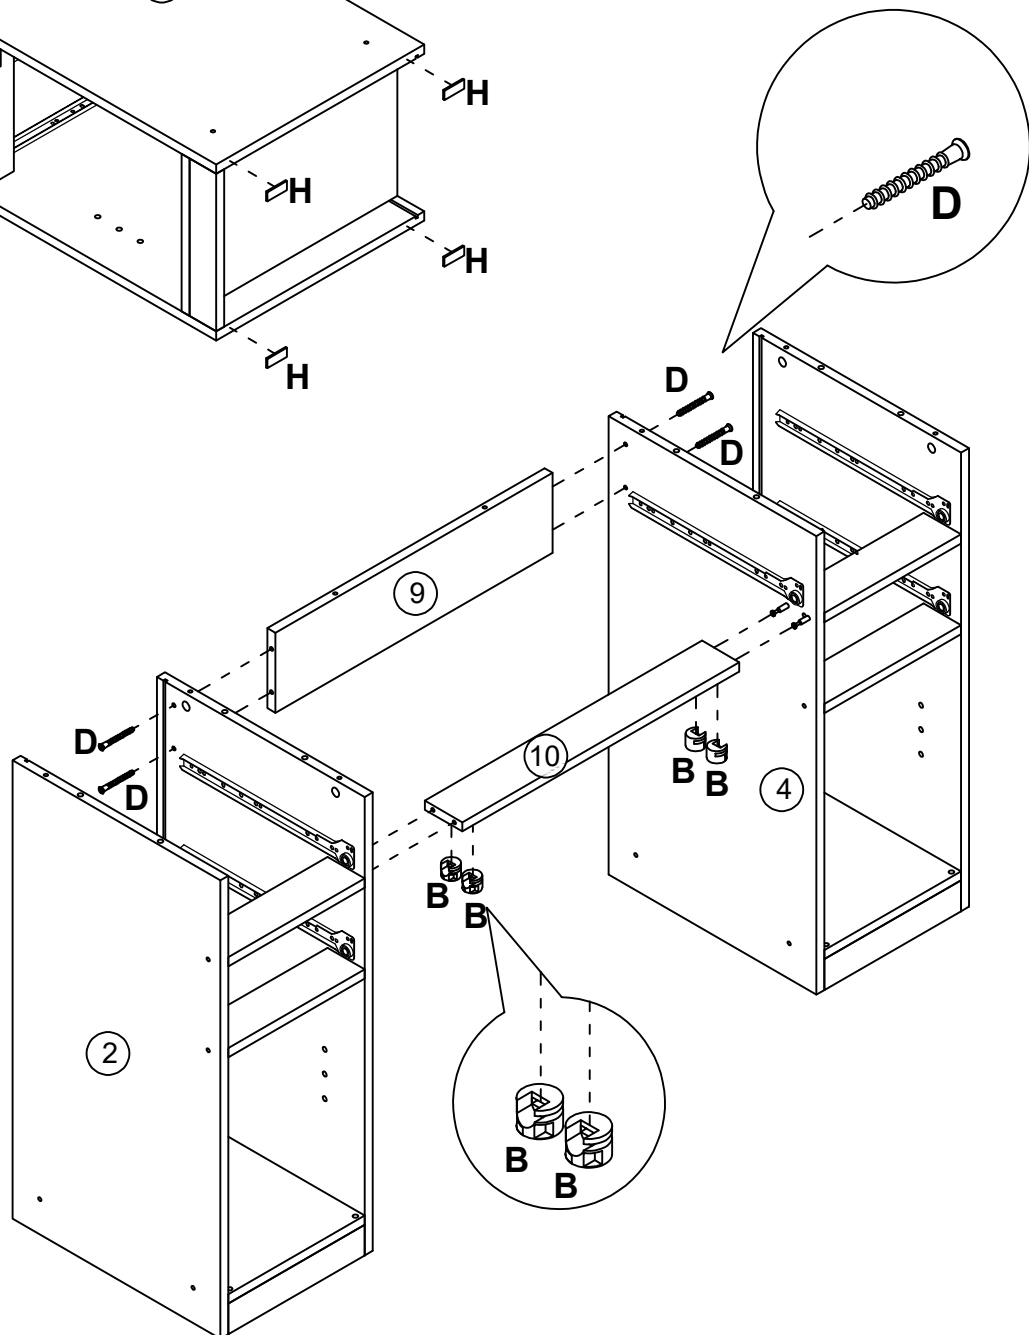



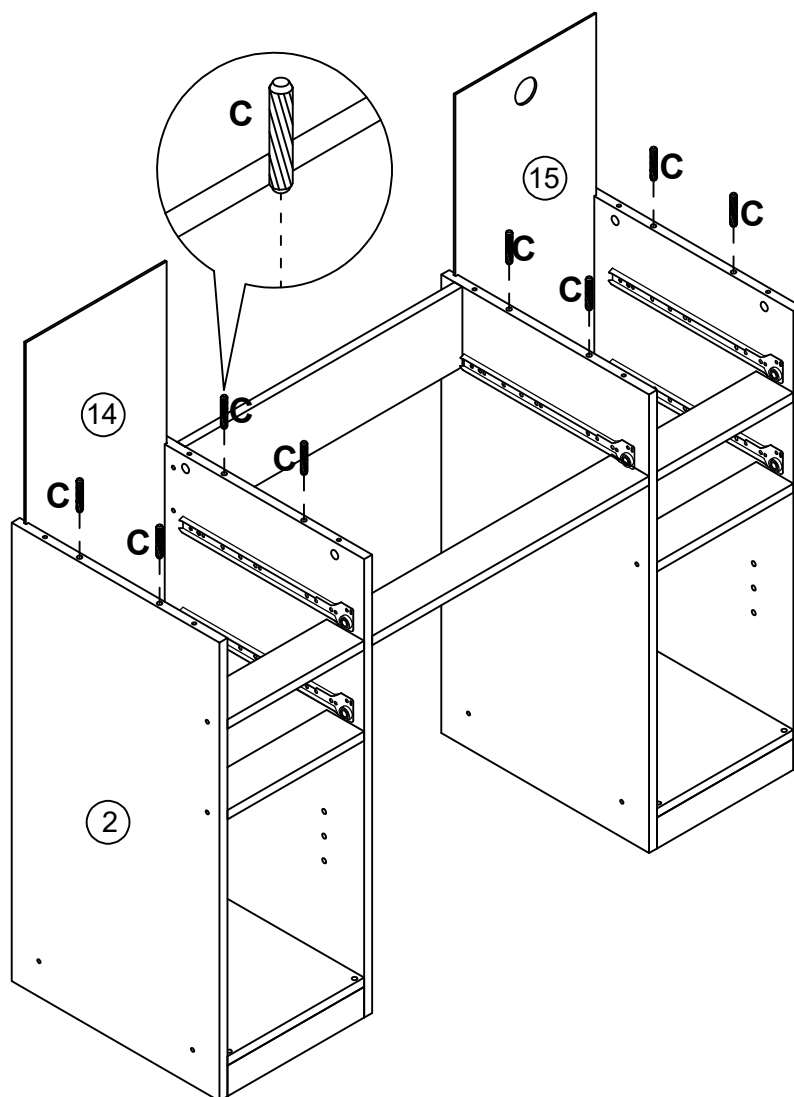
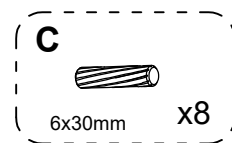


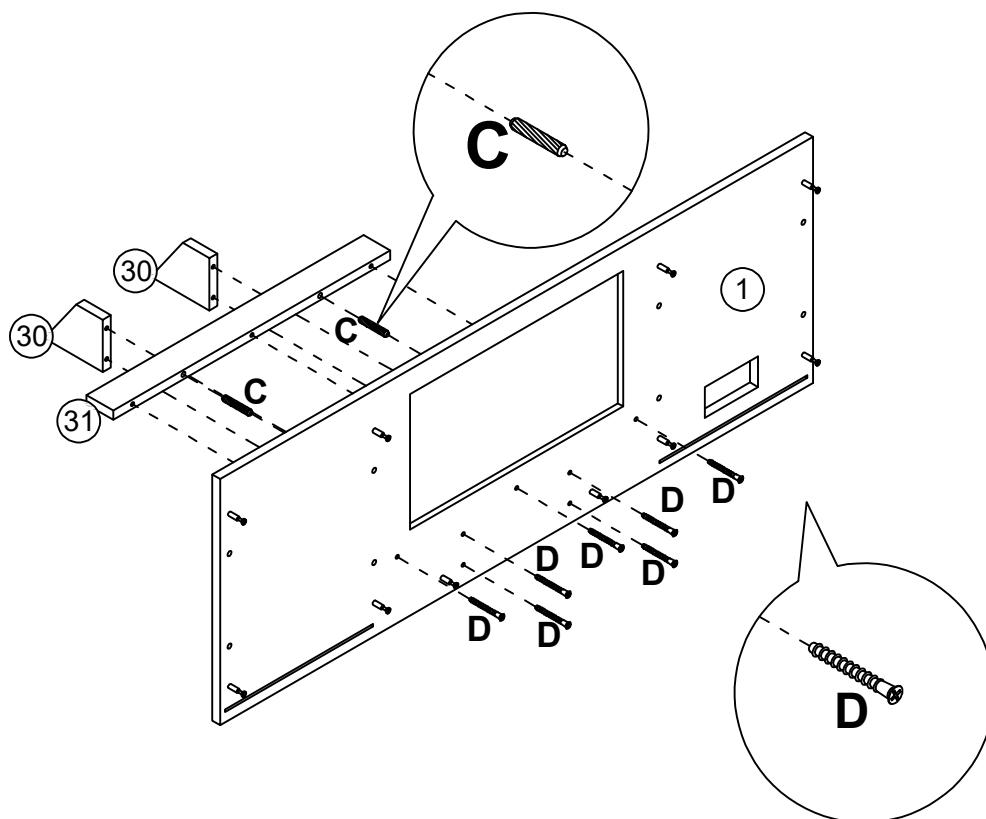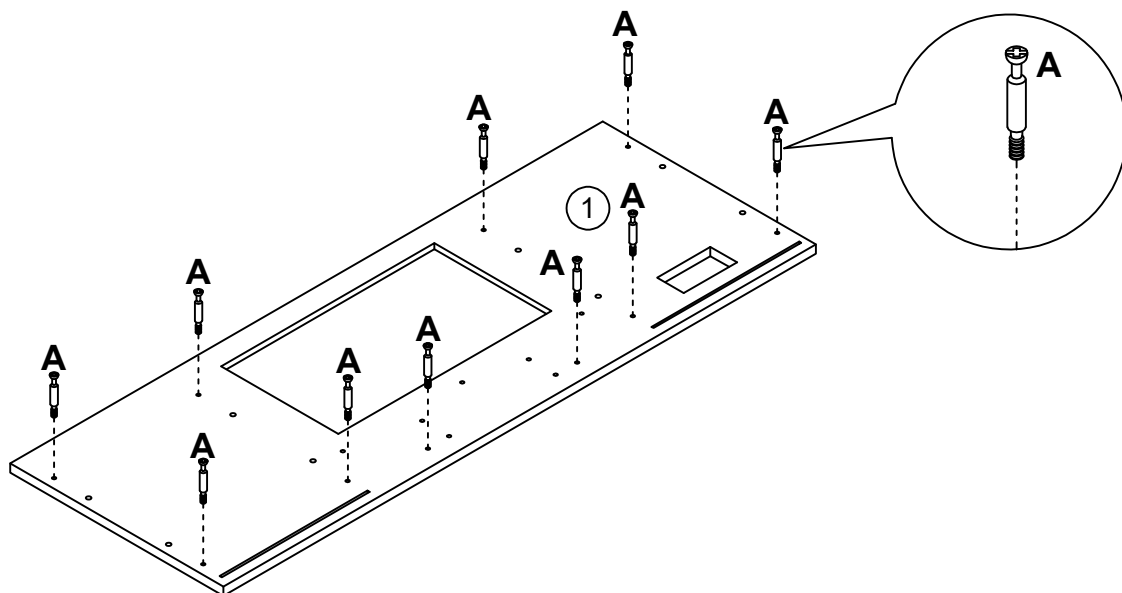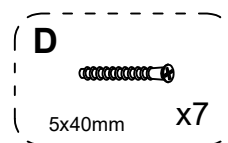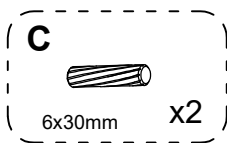
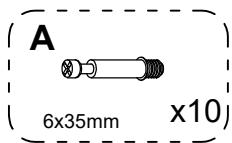





**B**   
15x9.5mm x10)

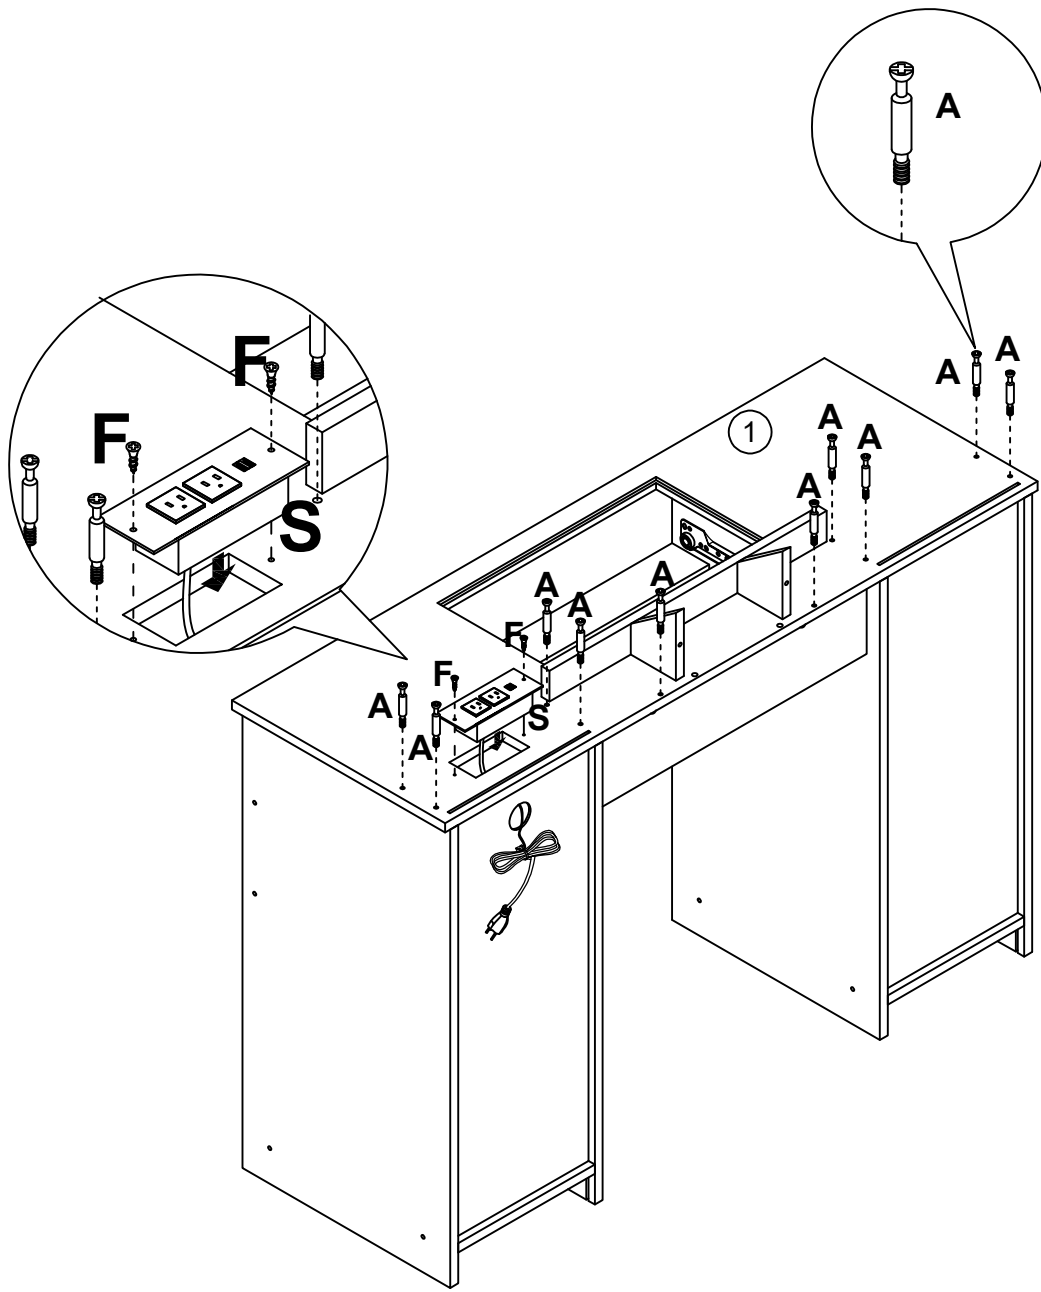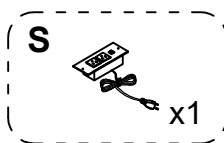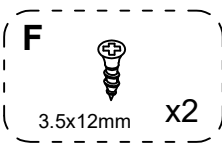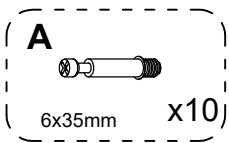


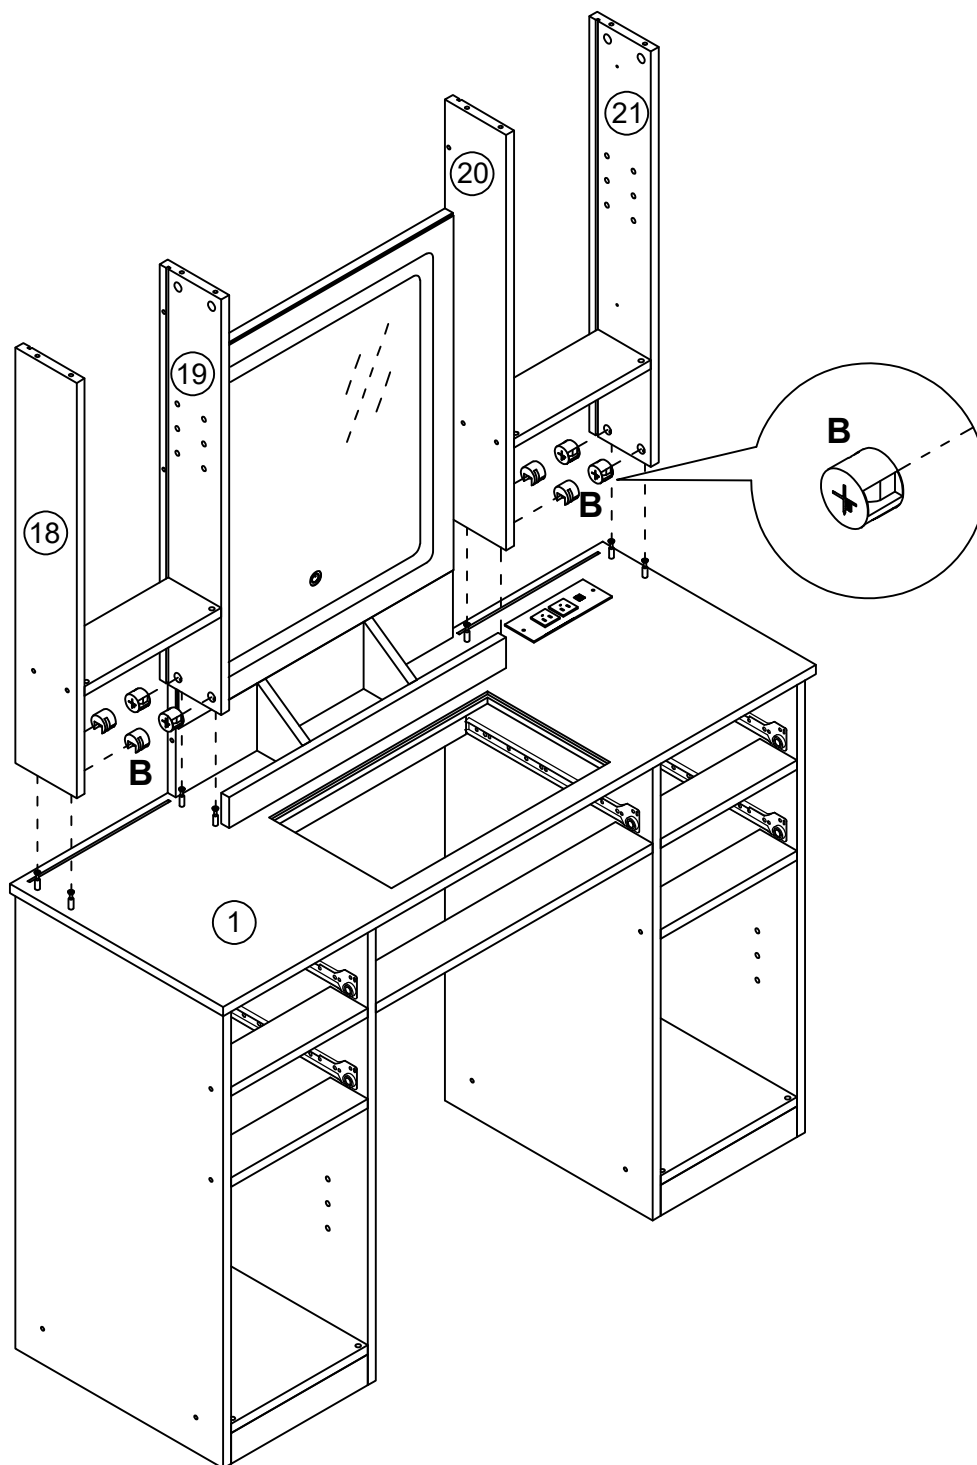


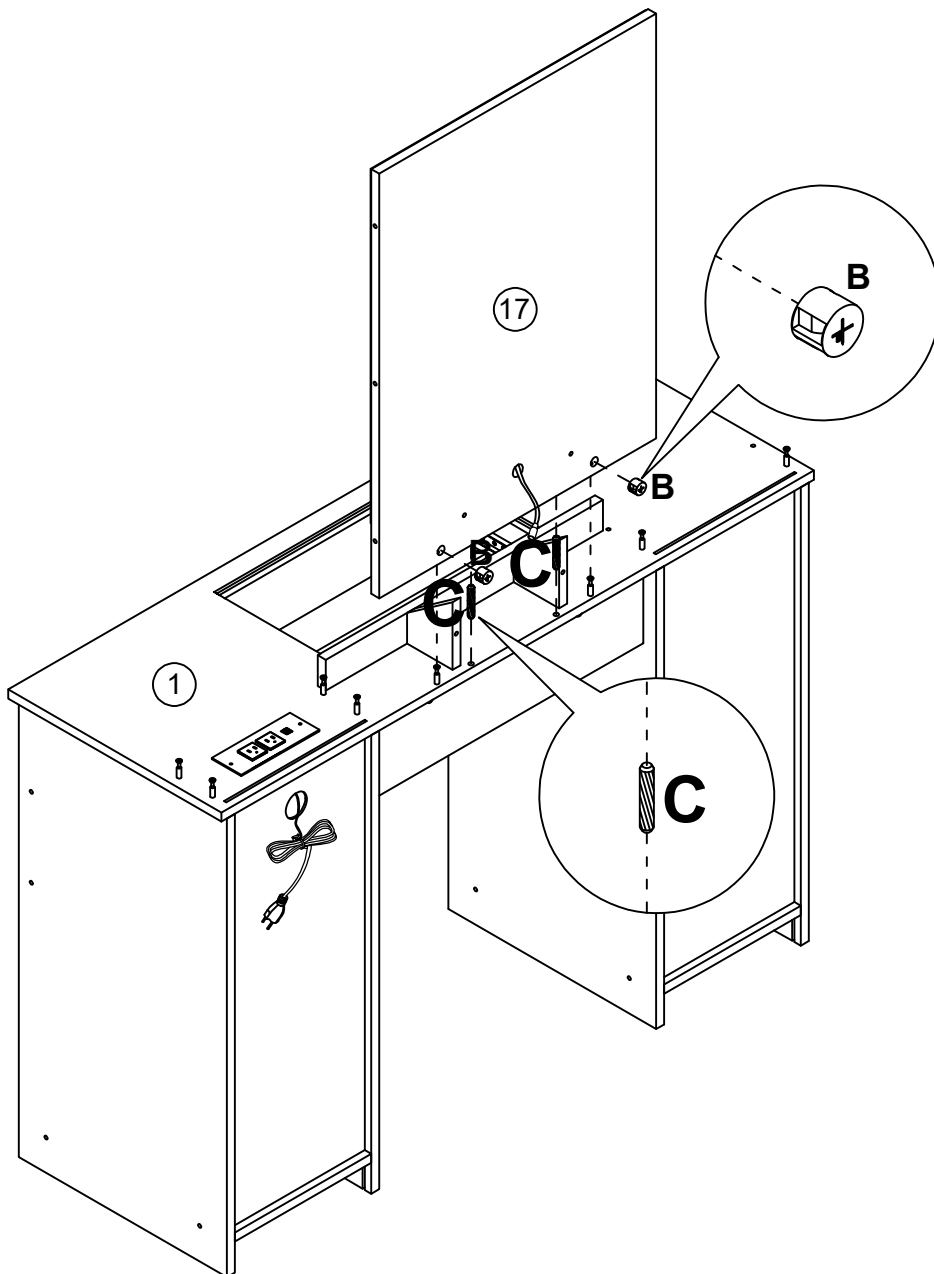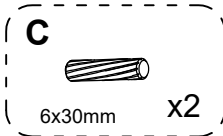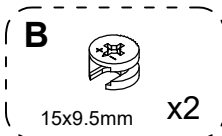


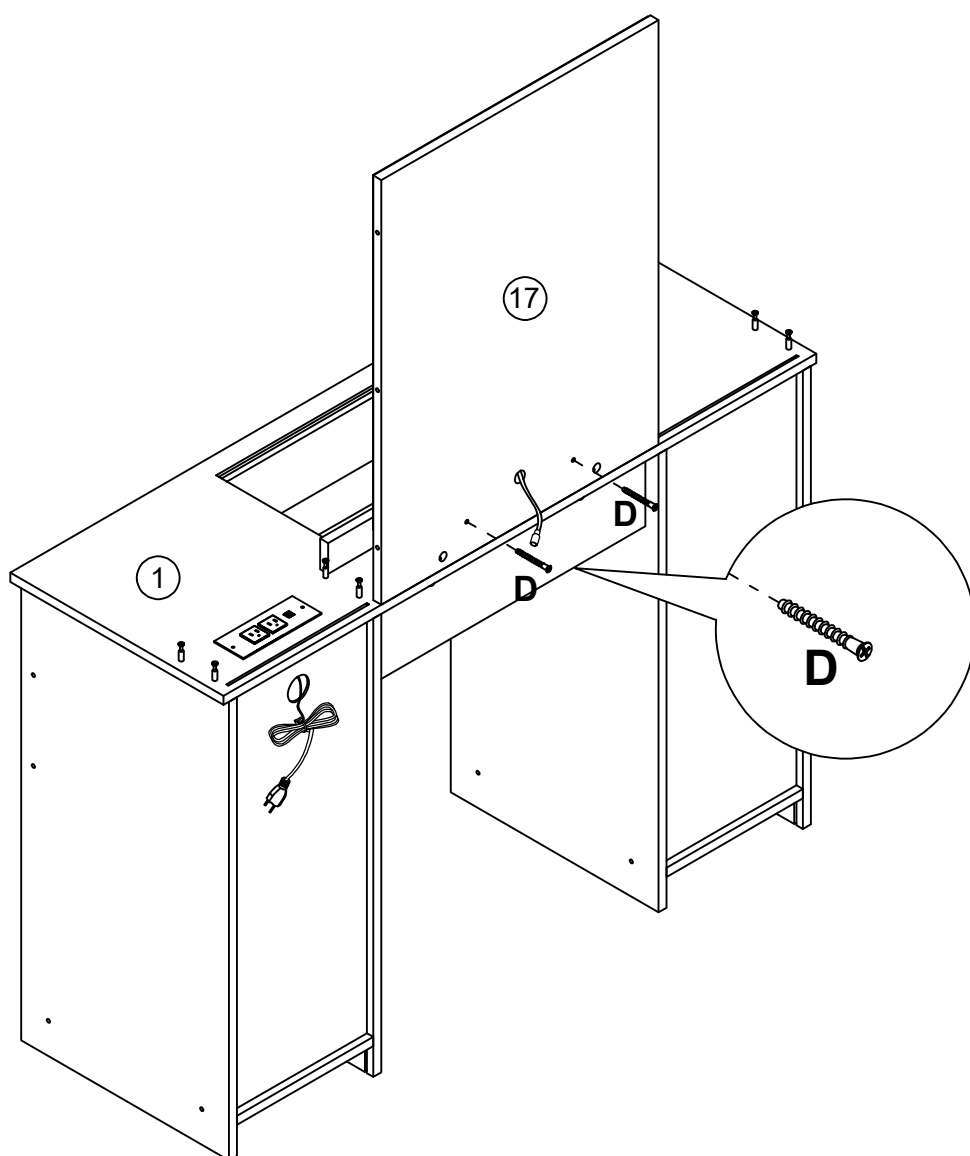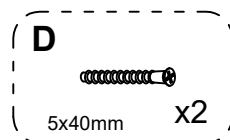

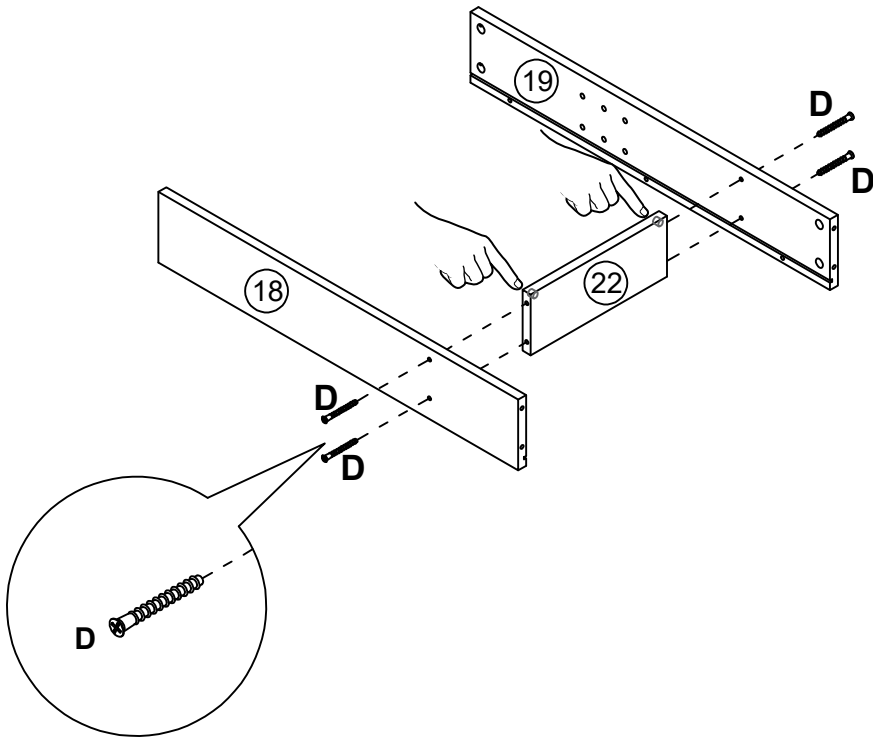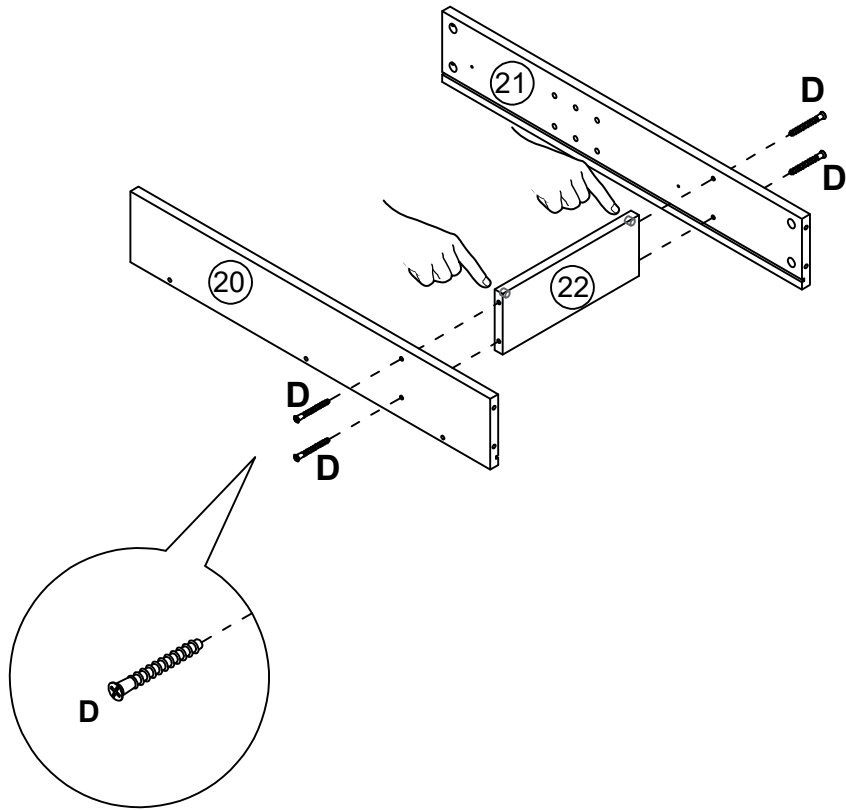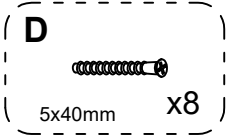



**B**   
15x9.5mm x8






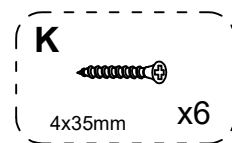


Attention! Use the accessory numbered "K"

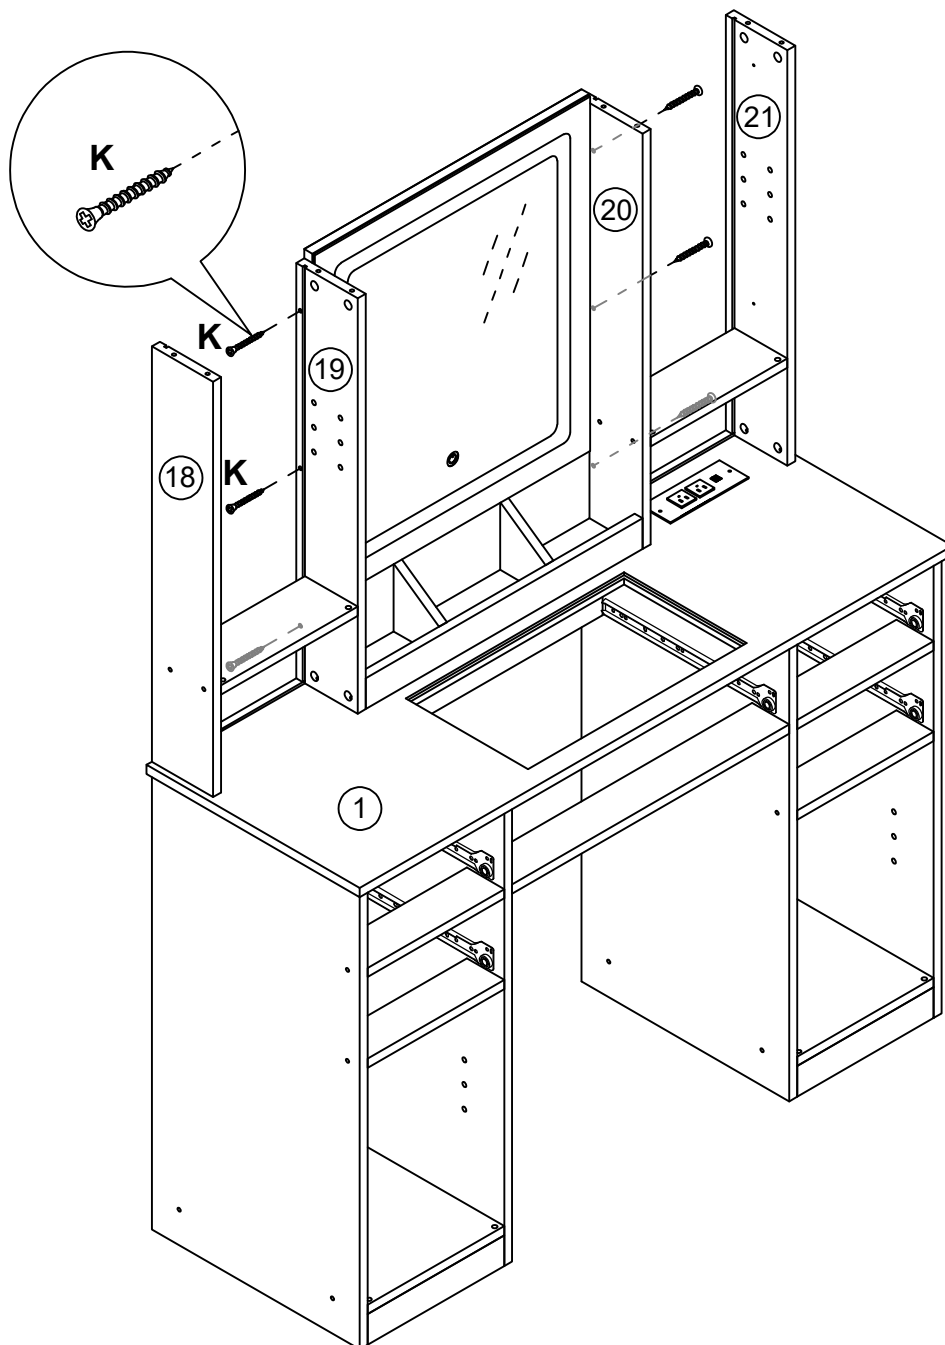





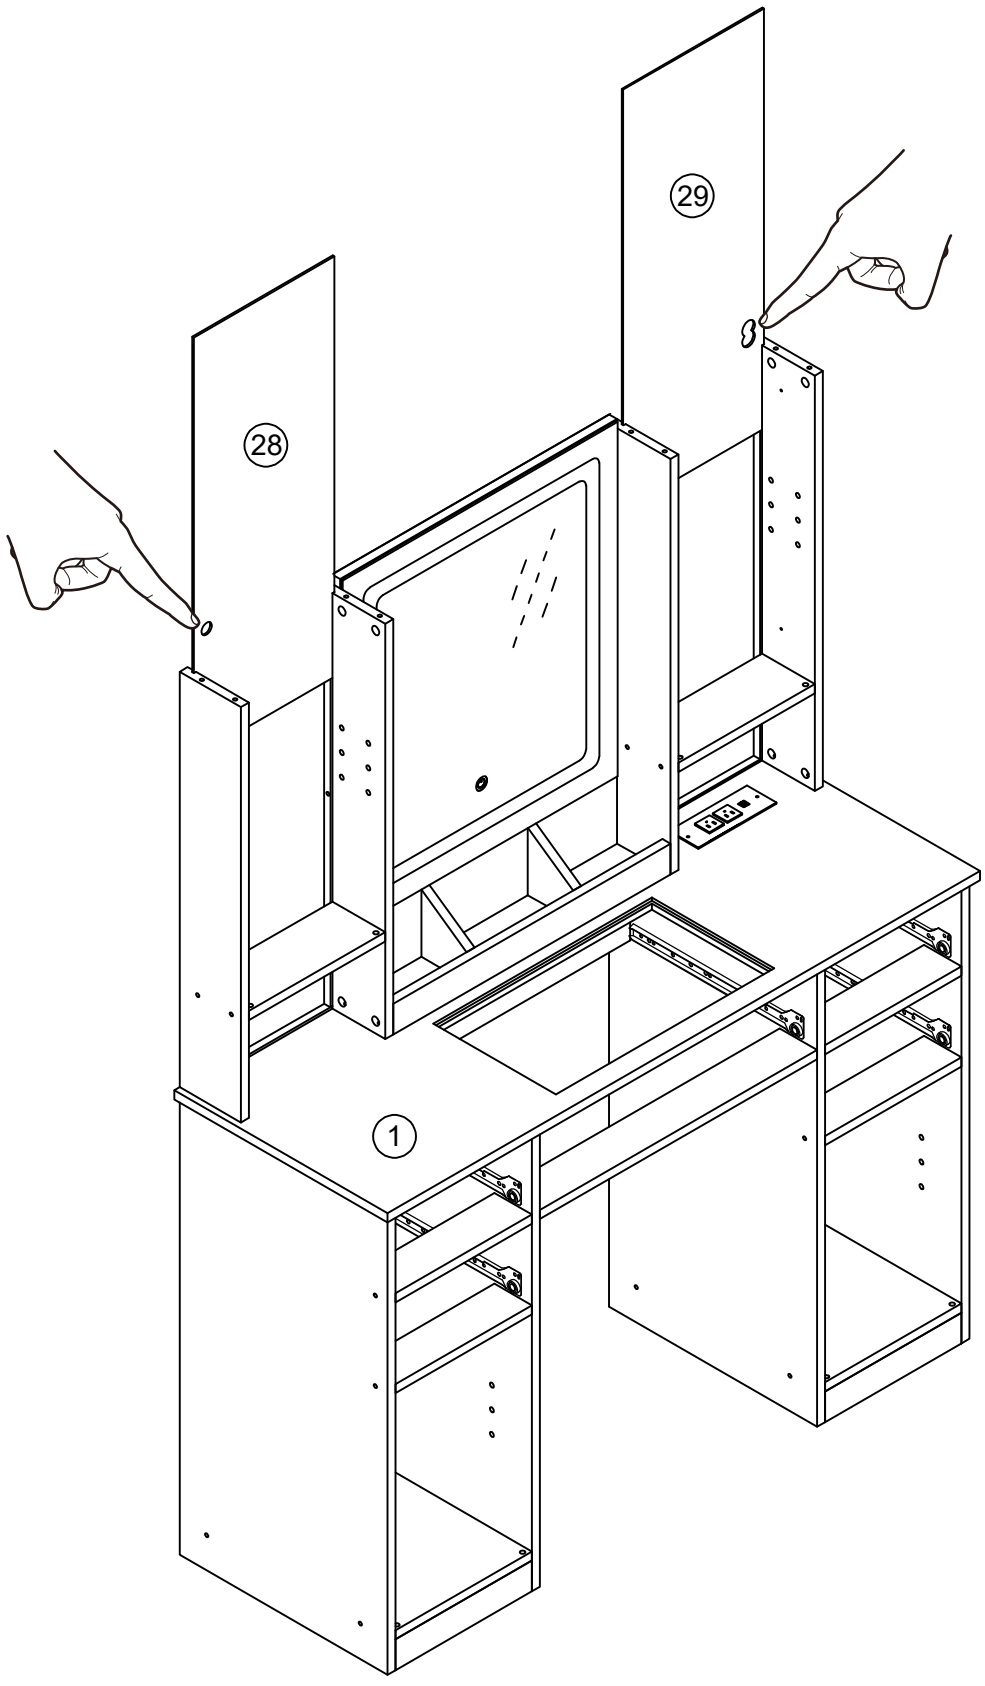


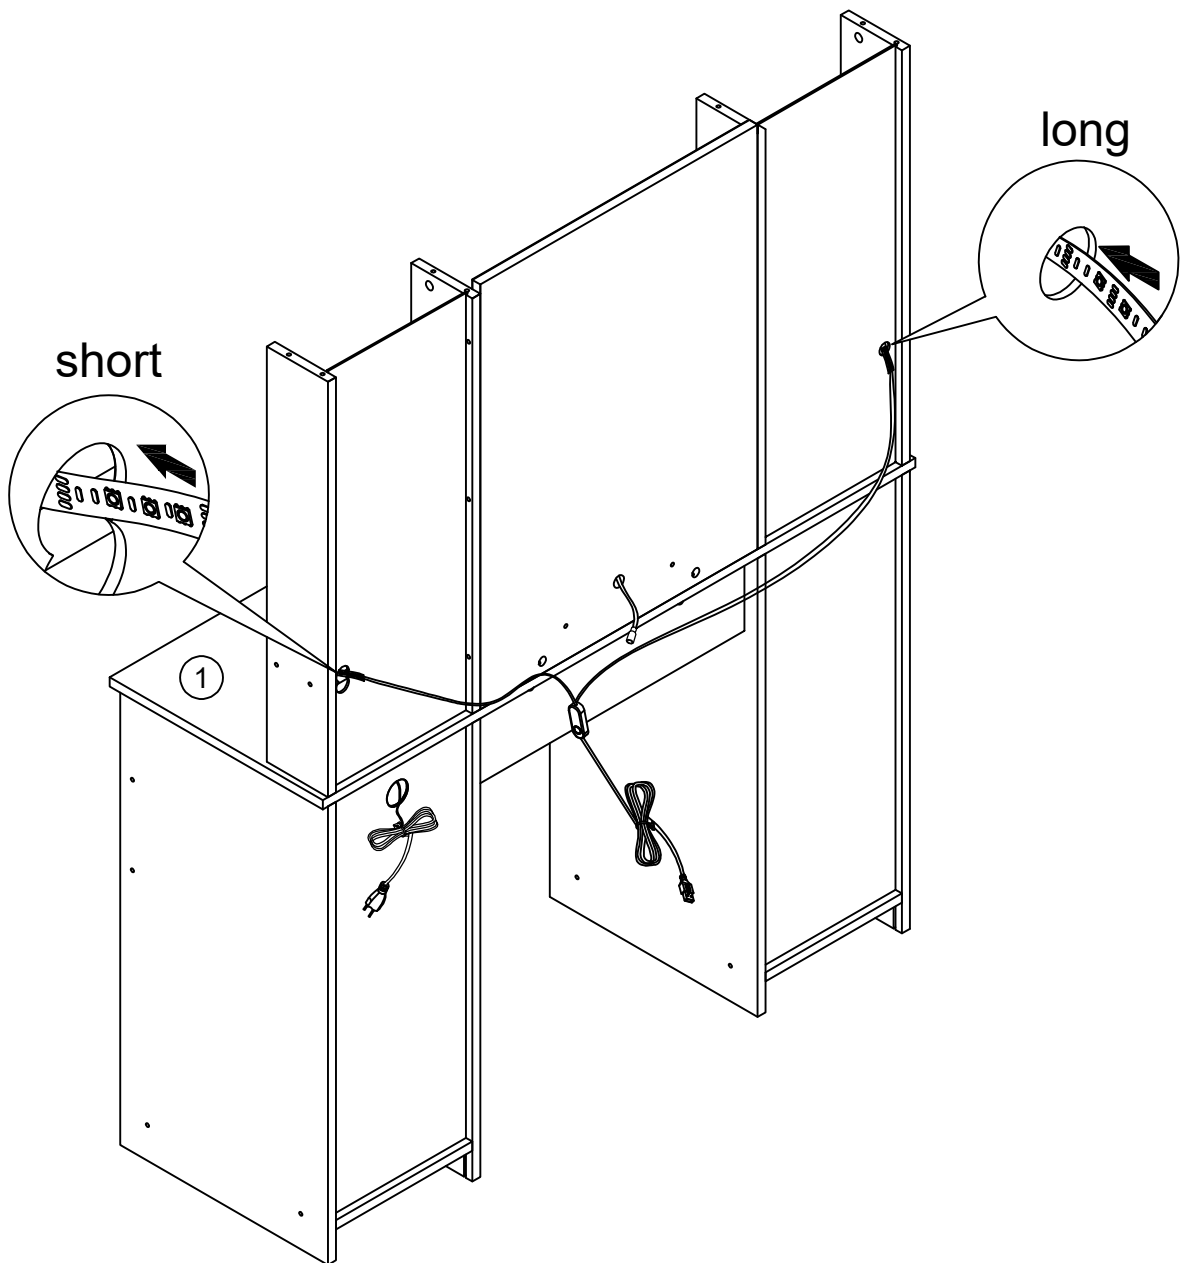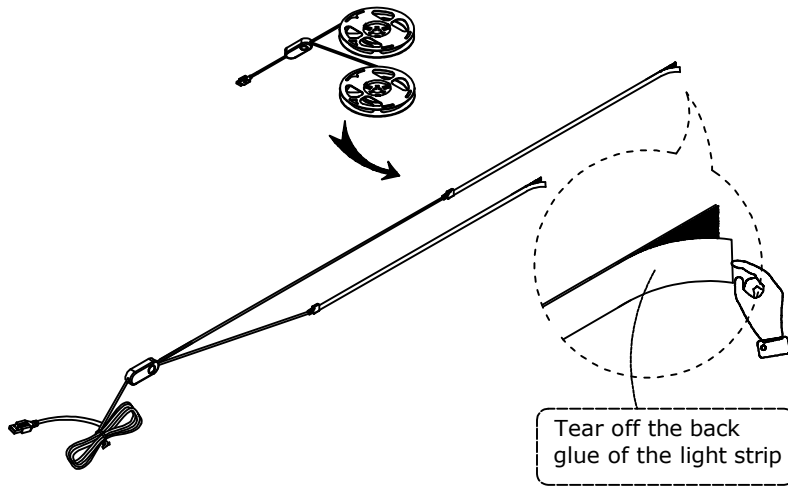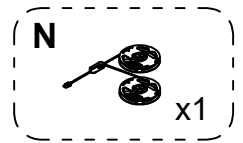

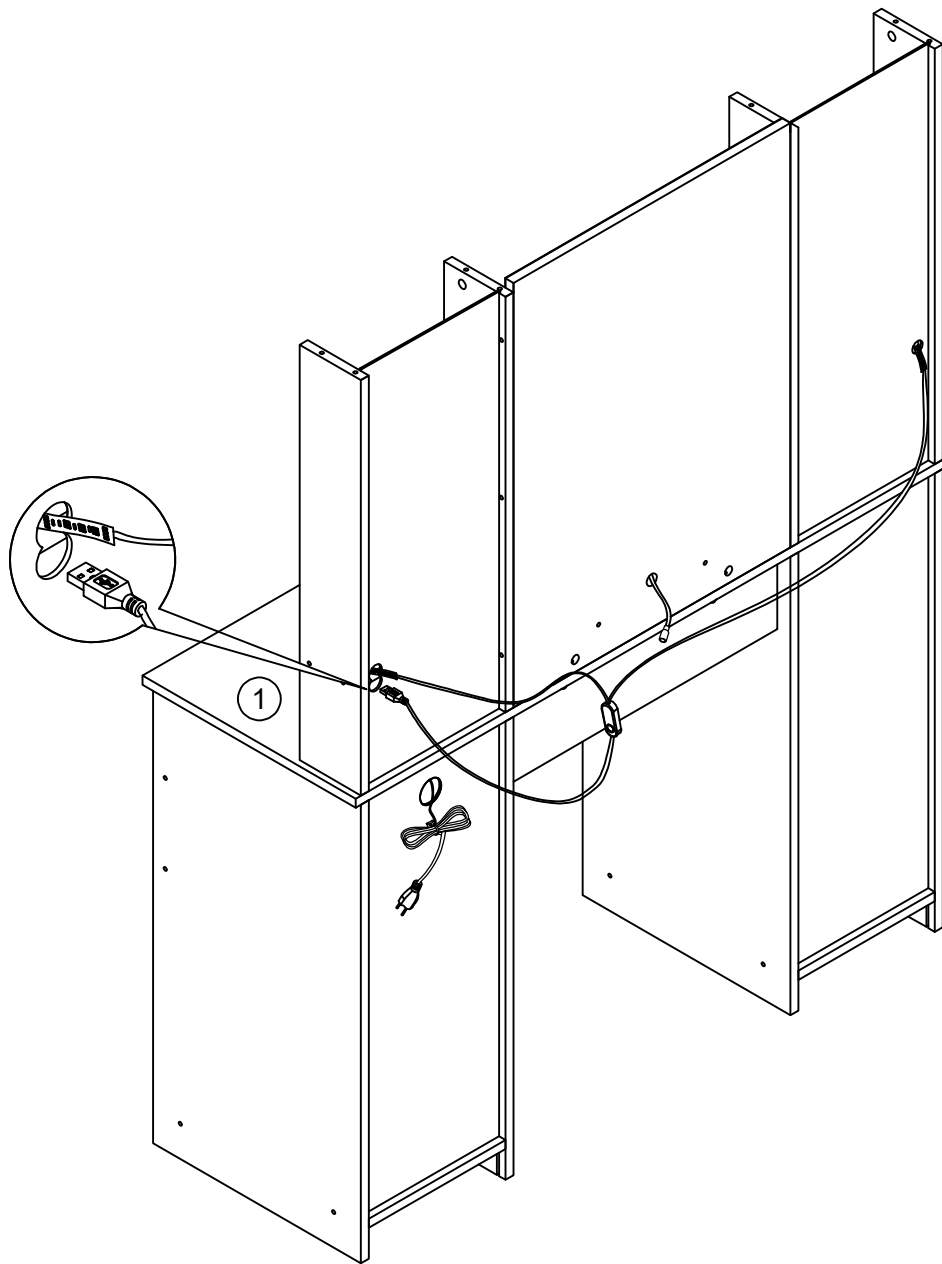








26

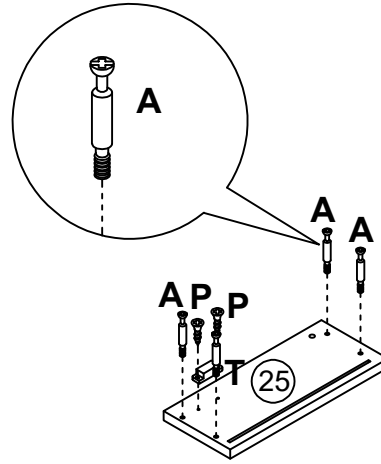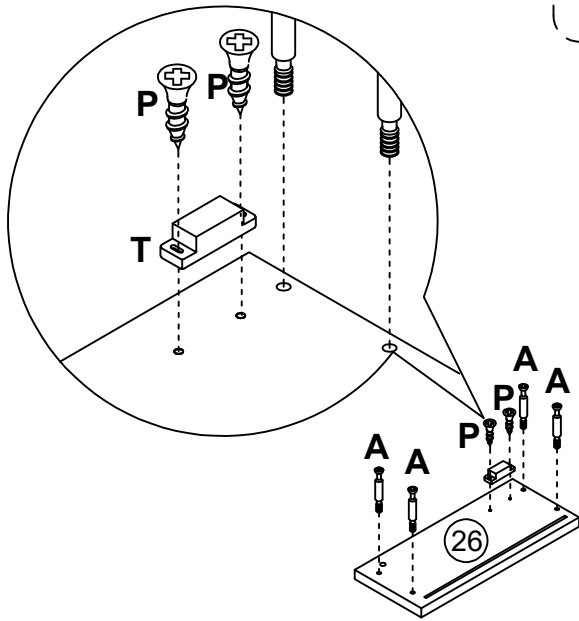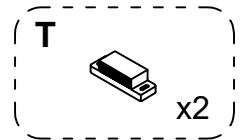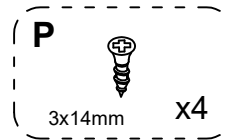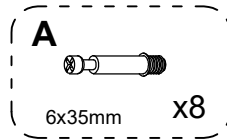





27



x2

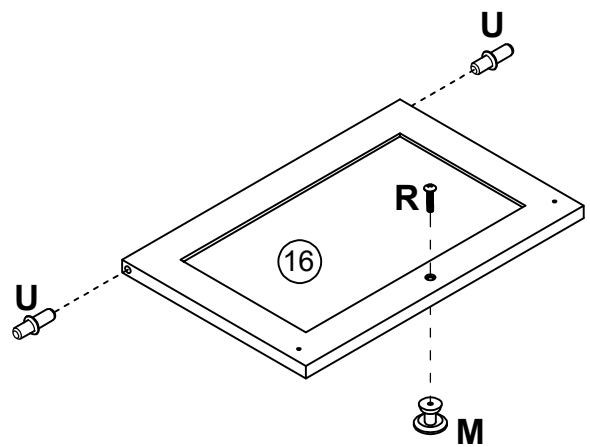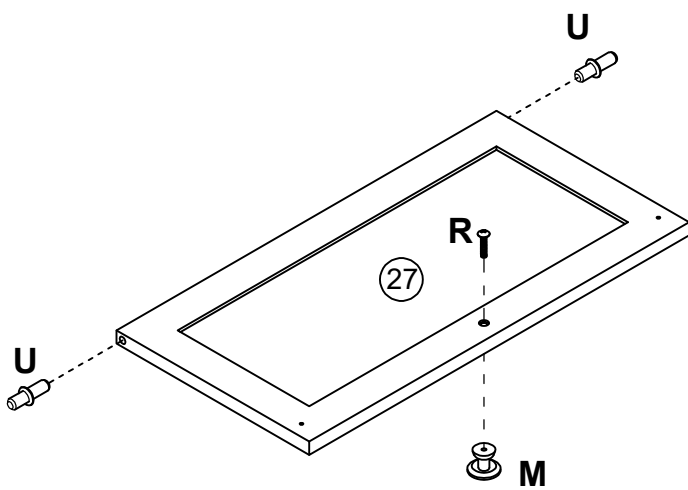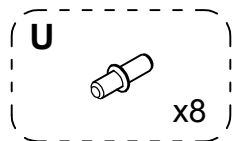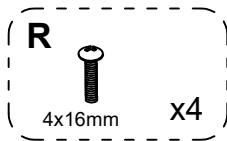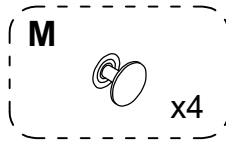


**B**   
15x9.5mm X8


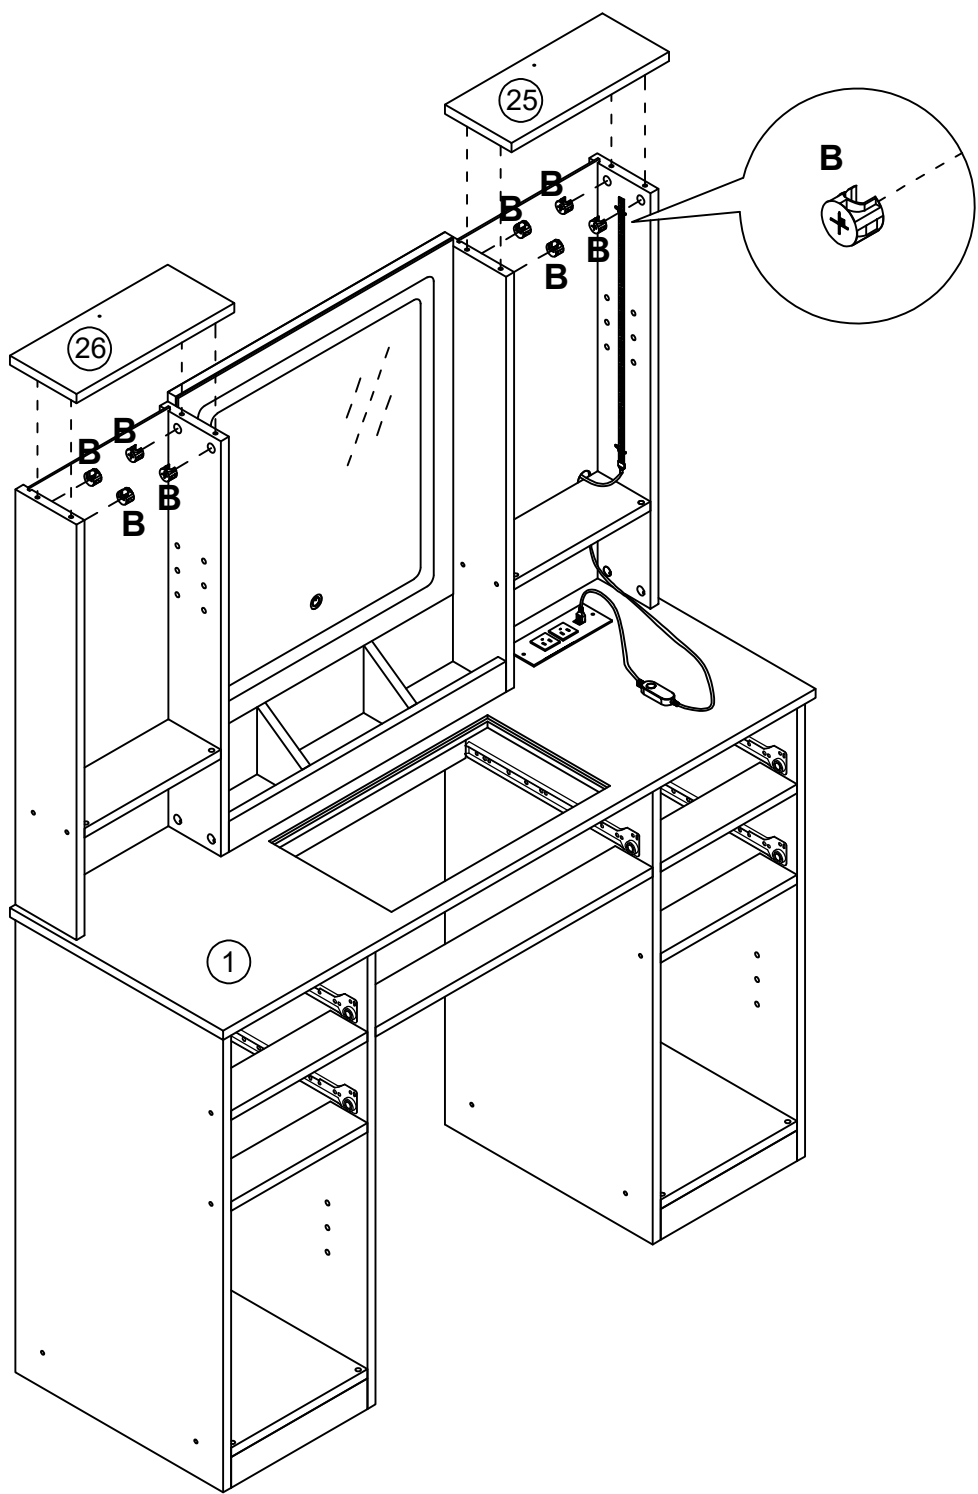


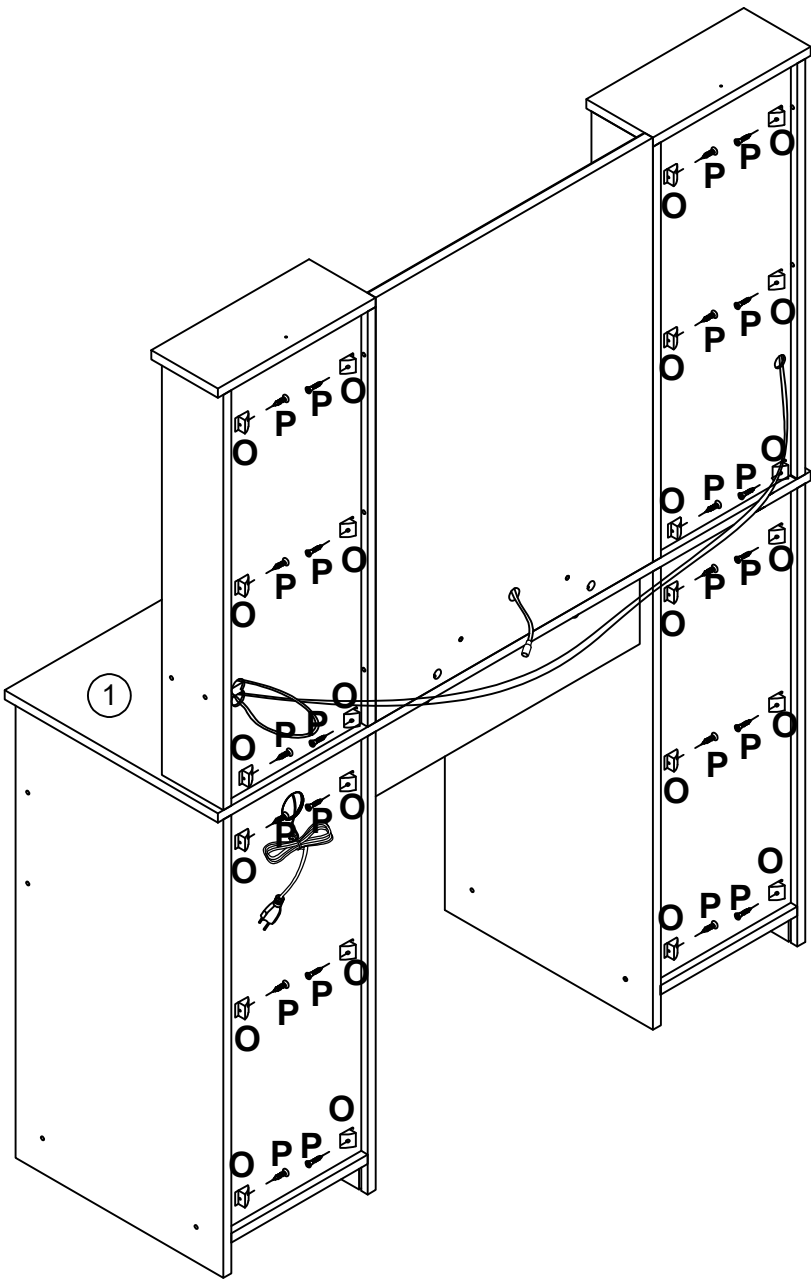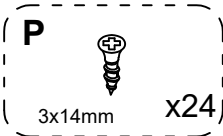
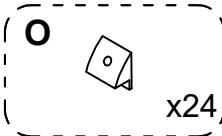


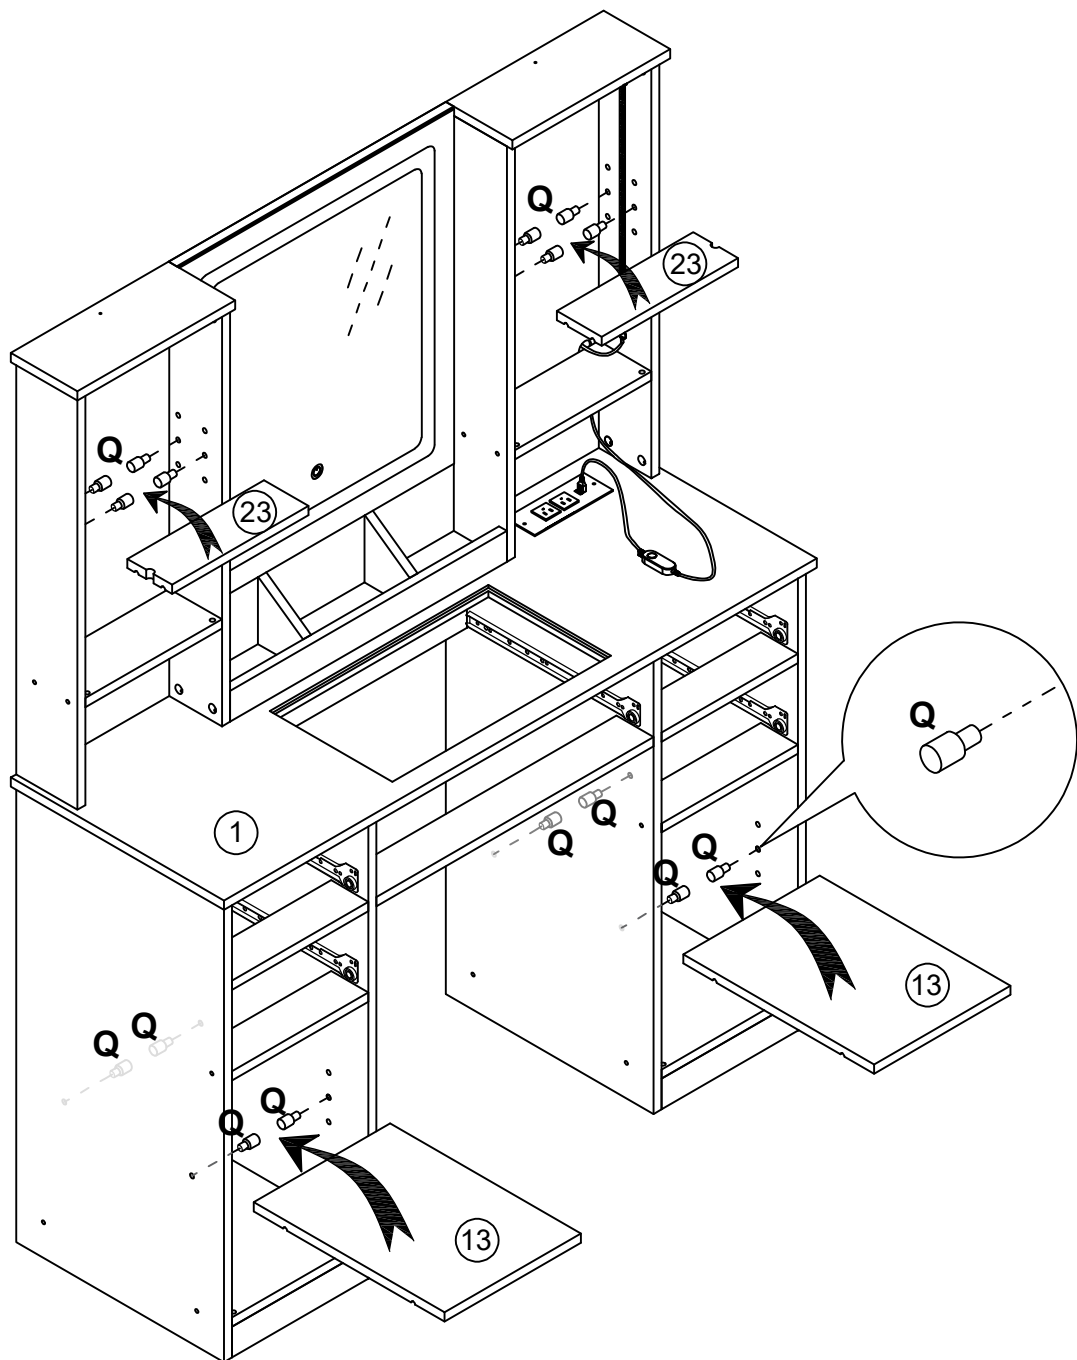
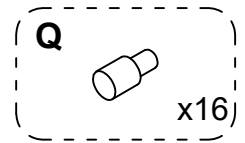


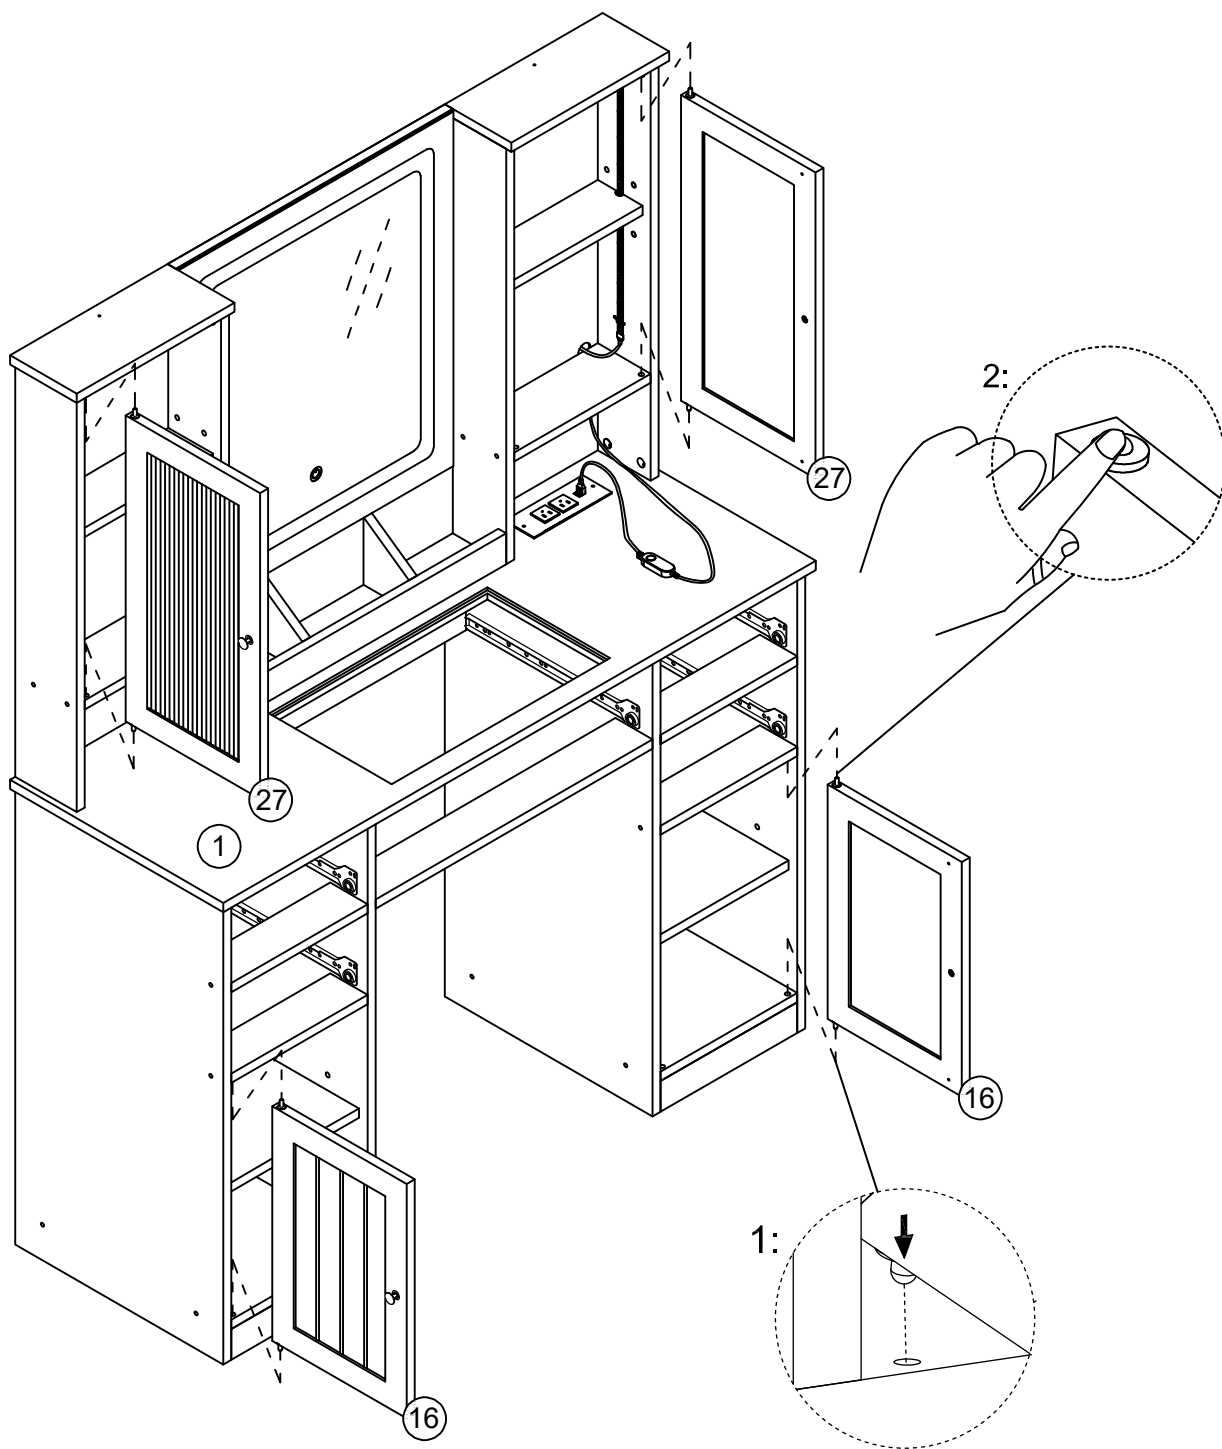




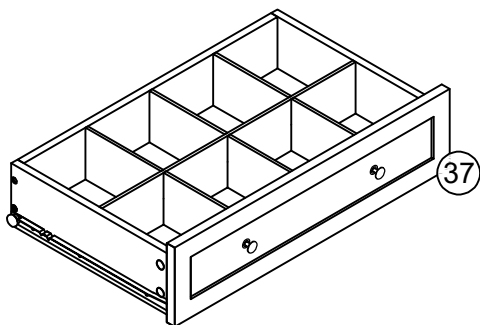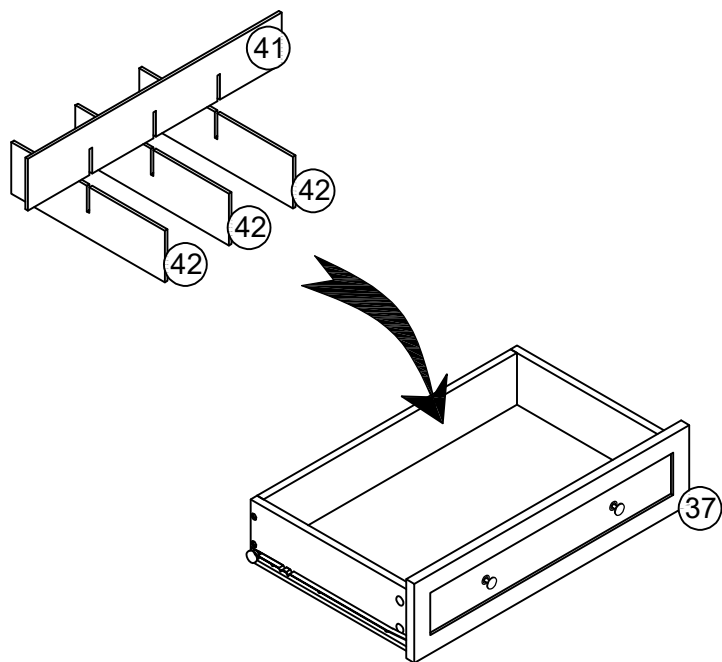


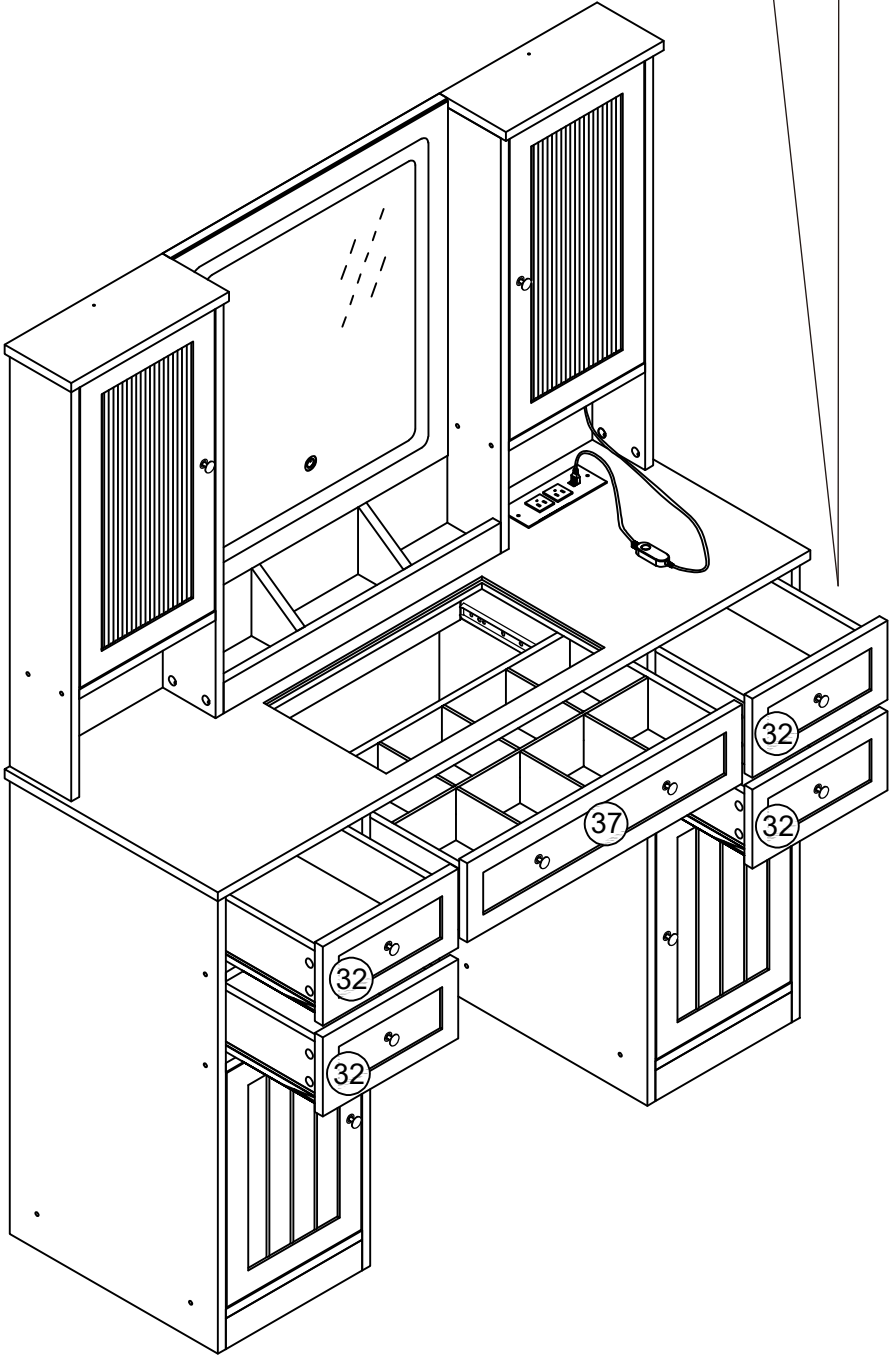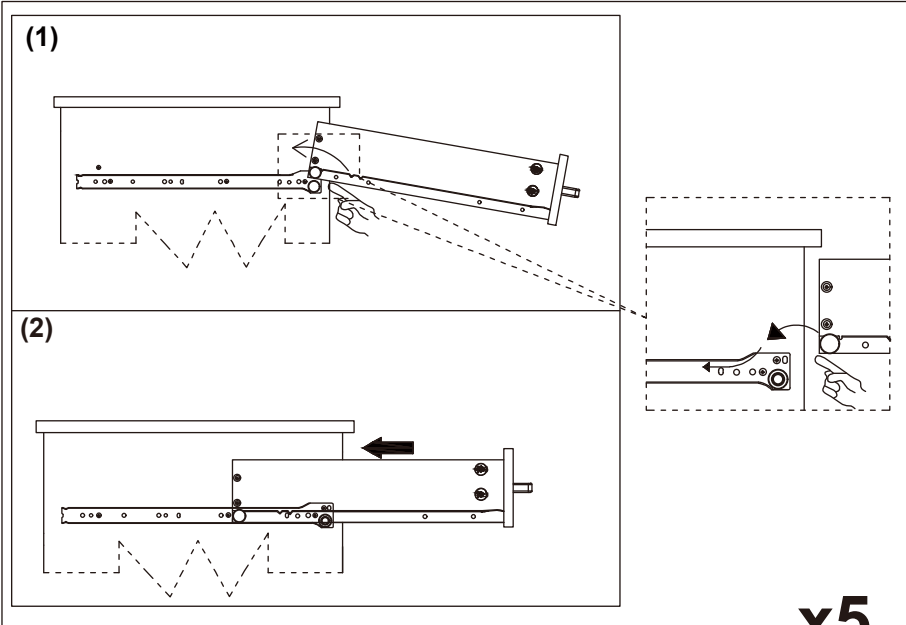


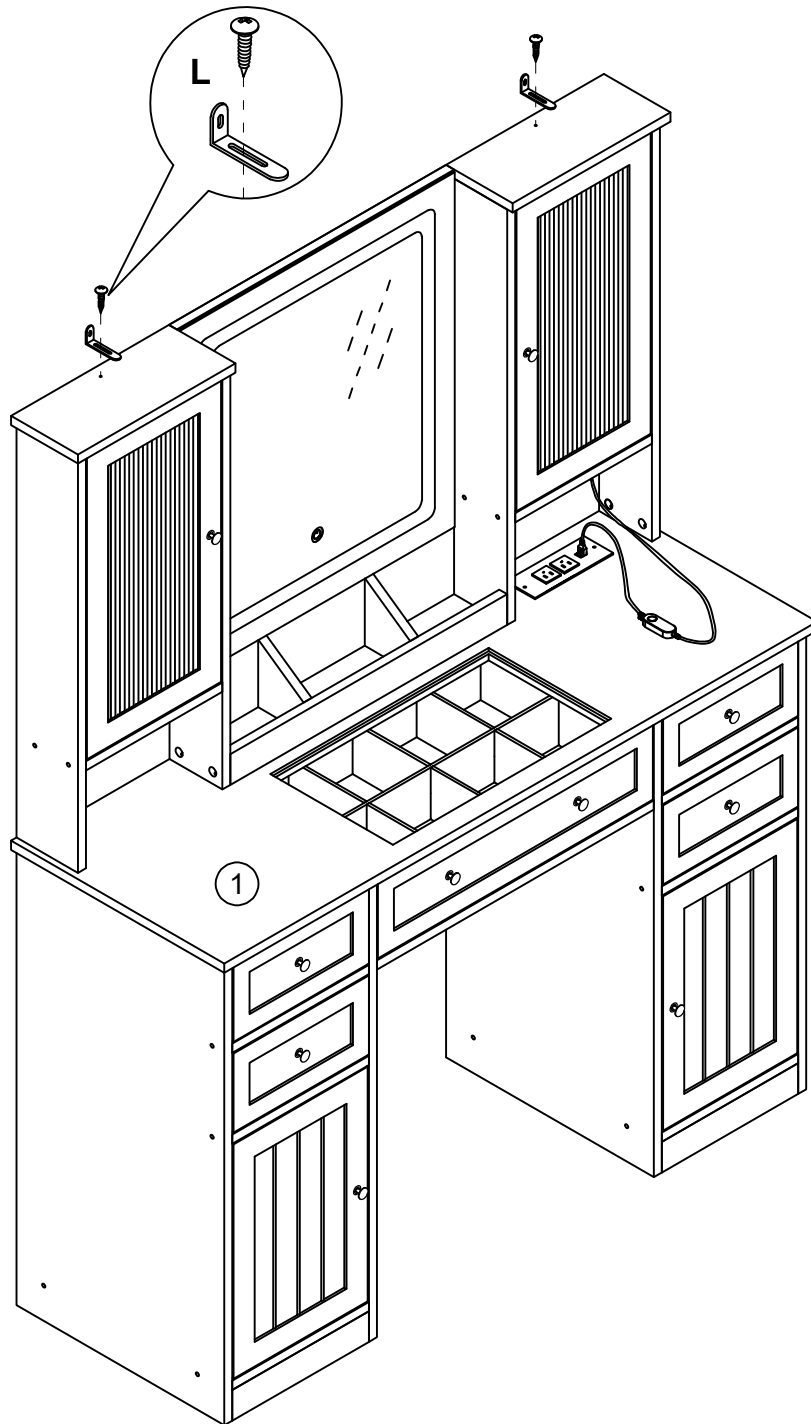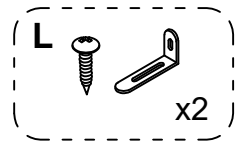

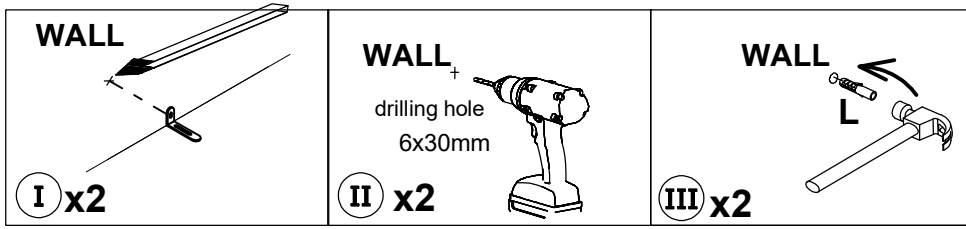

- G**  
20mm x36
- K**  
4x35mm x2
- L**  
x2

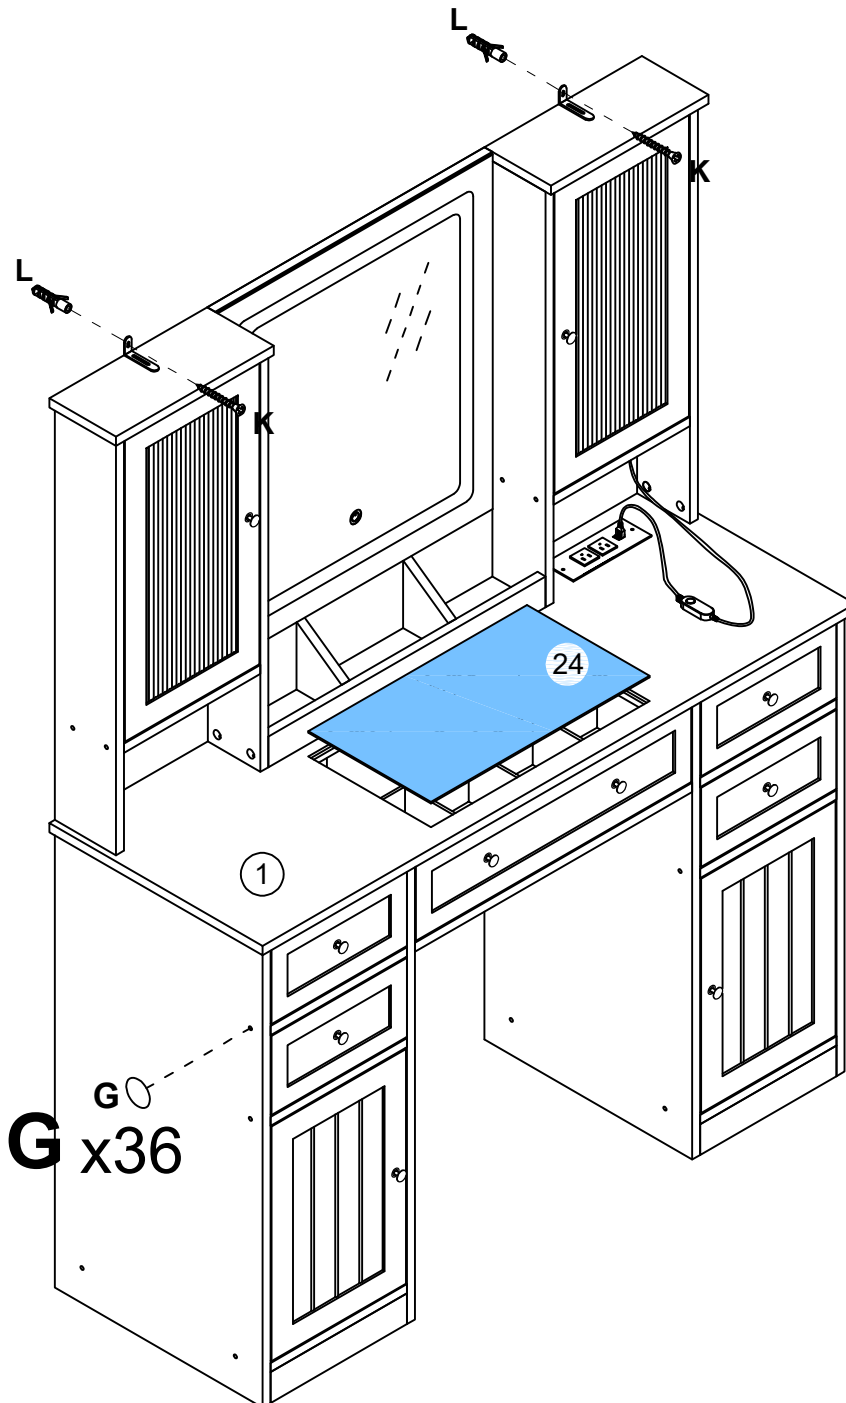

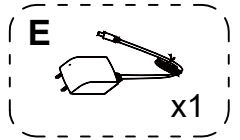

Scan QR code to download APP controller

Flip to the other side to find the control button

