

ASSEMBLY INSTRUCTION

- Please follow the instructions to assemble the items correctly.
- Please ensure the safety of the glass when assembling.
- Do not make the screws too loose or too tight.
- As shown in the figure, Insert the screw into the hole.
  The arrow in the picture, Then rotate 90° or 180° clockwise.
- The accessory bag contains some small accessories, which should be kept away from children.
- The remaining parts are spare parts.
- Warm reminder white backboard please install the white side inward
- The operating instruction of RGB light is included in the package , please read it carefully when assembling

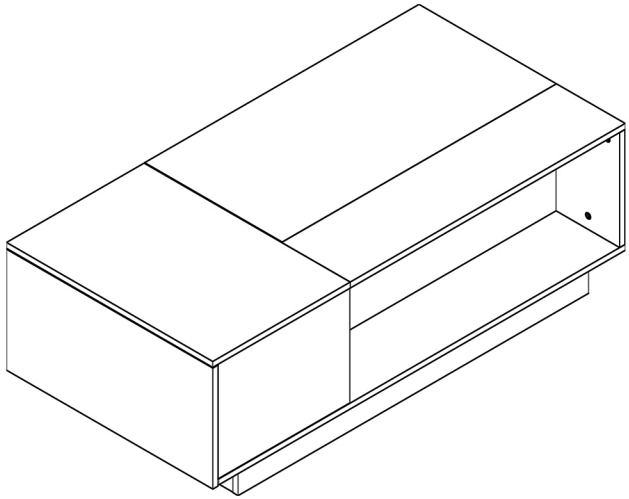


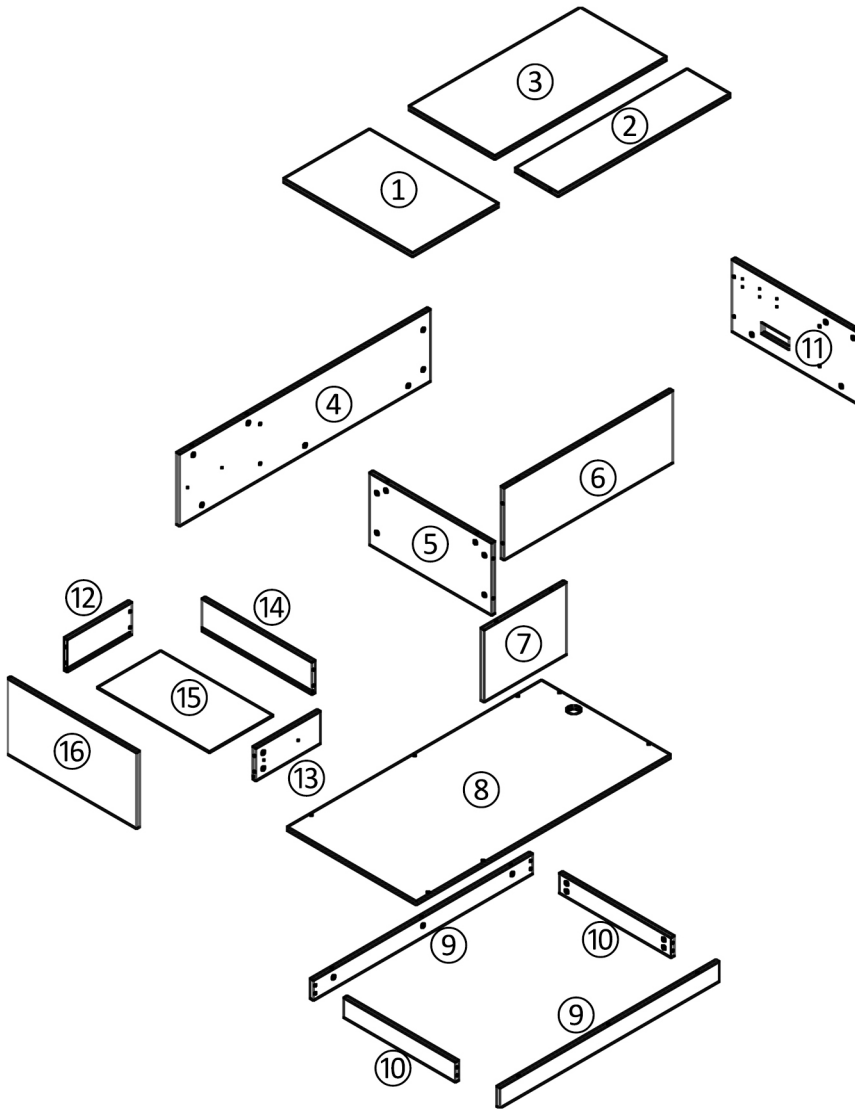


A 50pcs	B 50pcs	C 3.5*14 14pcs	C4 3.5*16 18pcs	E1 8*60 2pcs	K 2pcs	M 2pcs
R 1pcs	S2 2pcs	AM Decorative paper 20pcs	BA 1pcs	LED		

Hardware installation demonstration


- Please make sure “A” hardware tightened and can't be pulled out

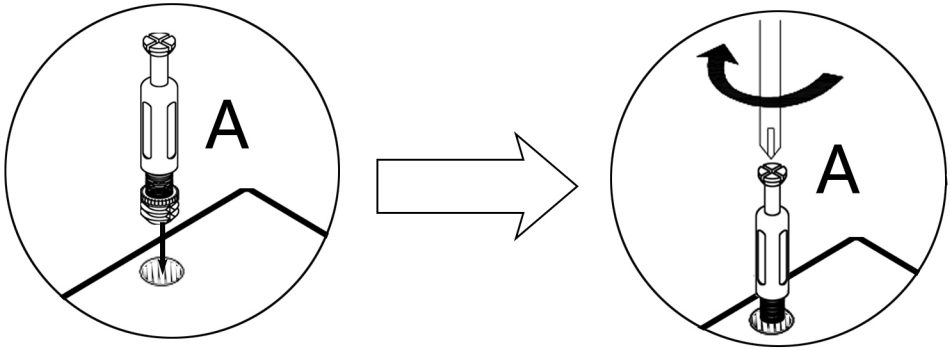

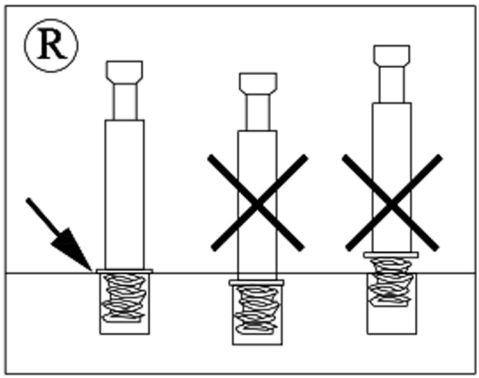


Hardware installation demonstration

- When inserting cam ensure arrowhead on cam points toward to the hole on the panel edge

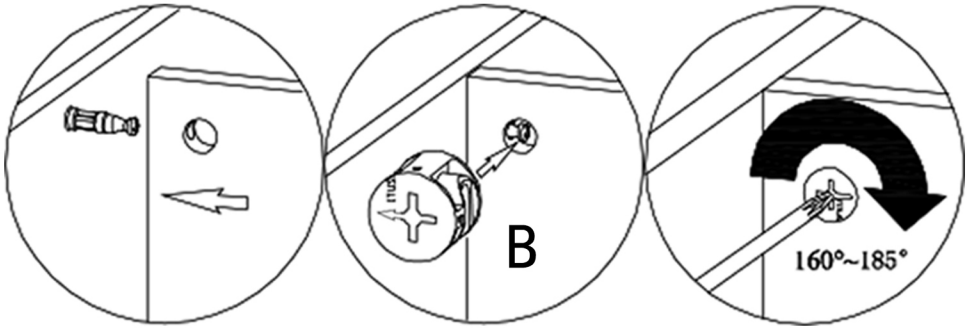

Hardware installation demonstration

- Before installing the drawer rail,
  you need to seperate the K1 and K2 first.

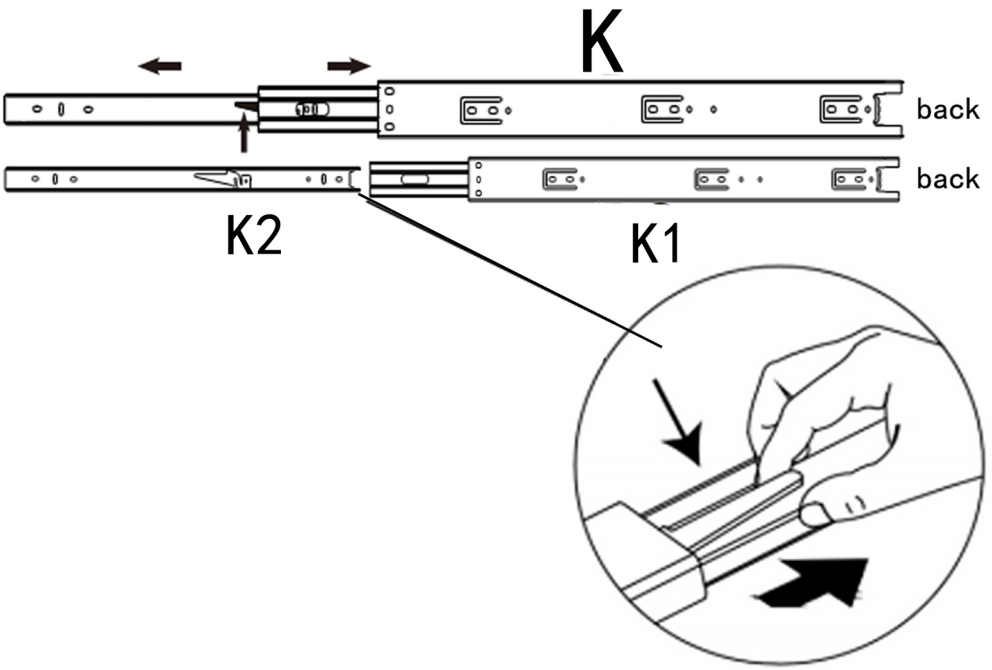


Warm Reminder: Press it and split

Hardware installation demonstration




The first screw hole should corresponded with the board location hole

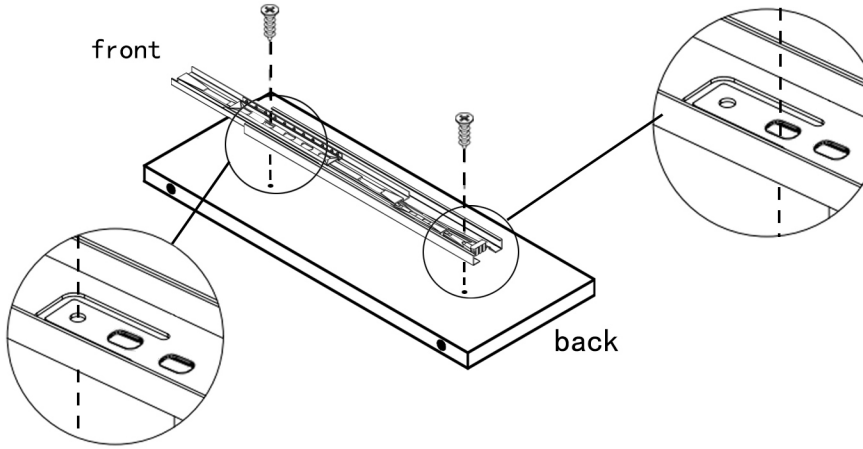




The first screw hole should corresponded with the board location hole

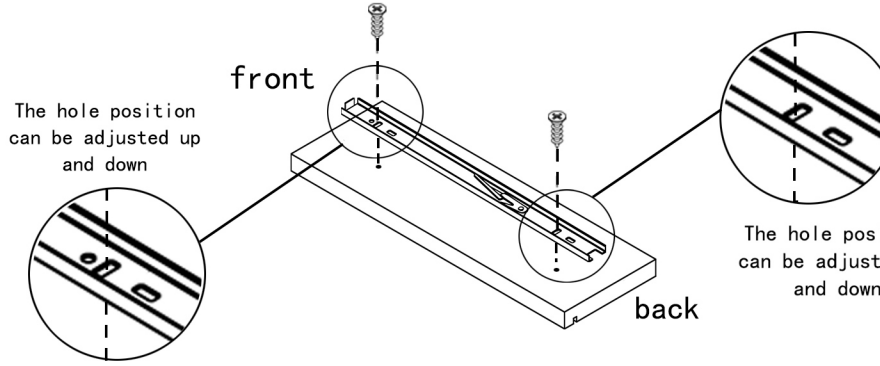


STEP 1

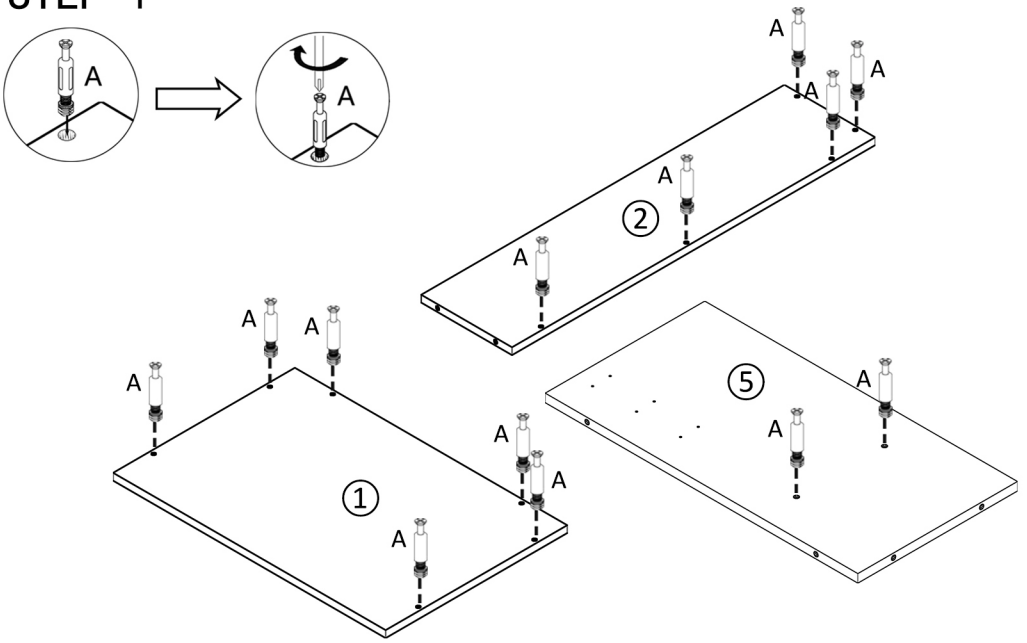

A*13

STEP 2

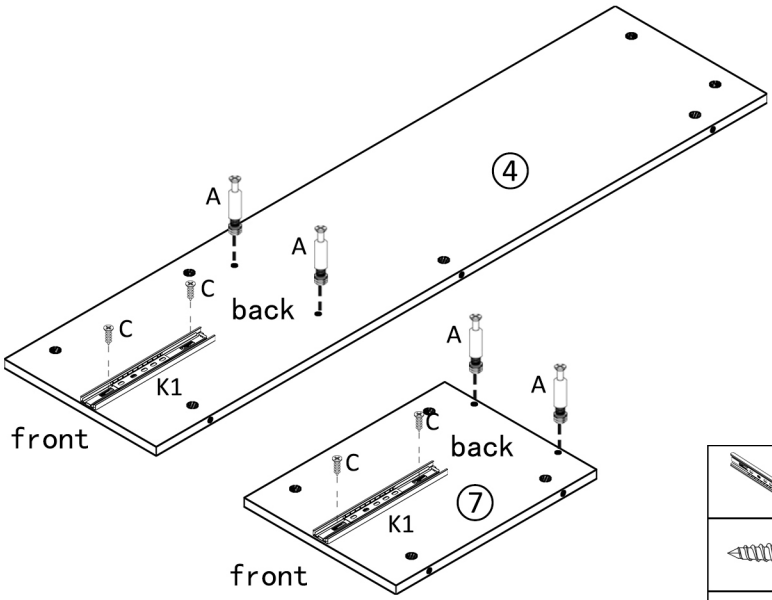


K1*2

C*4


A*4

STEP 3

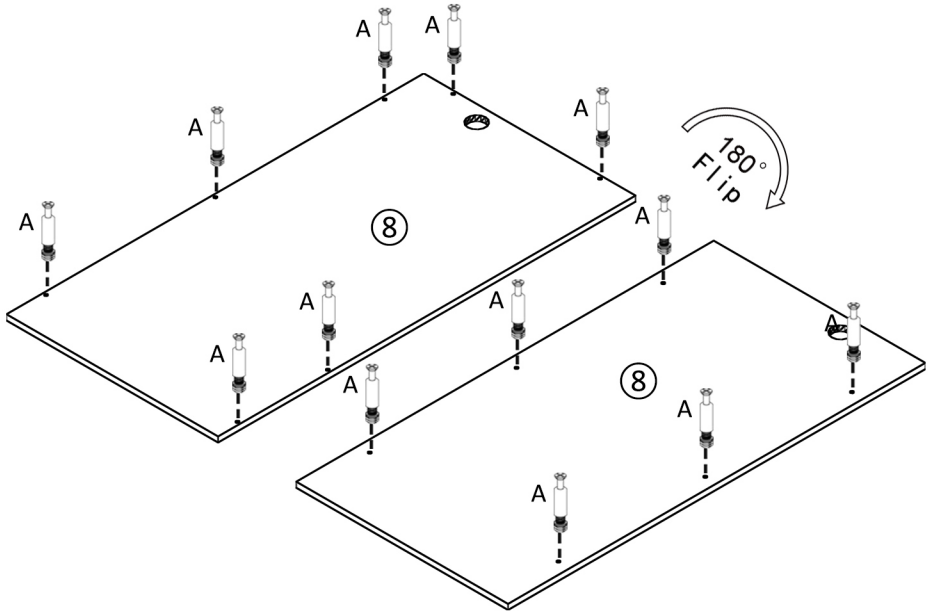


A*13

STEP 4

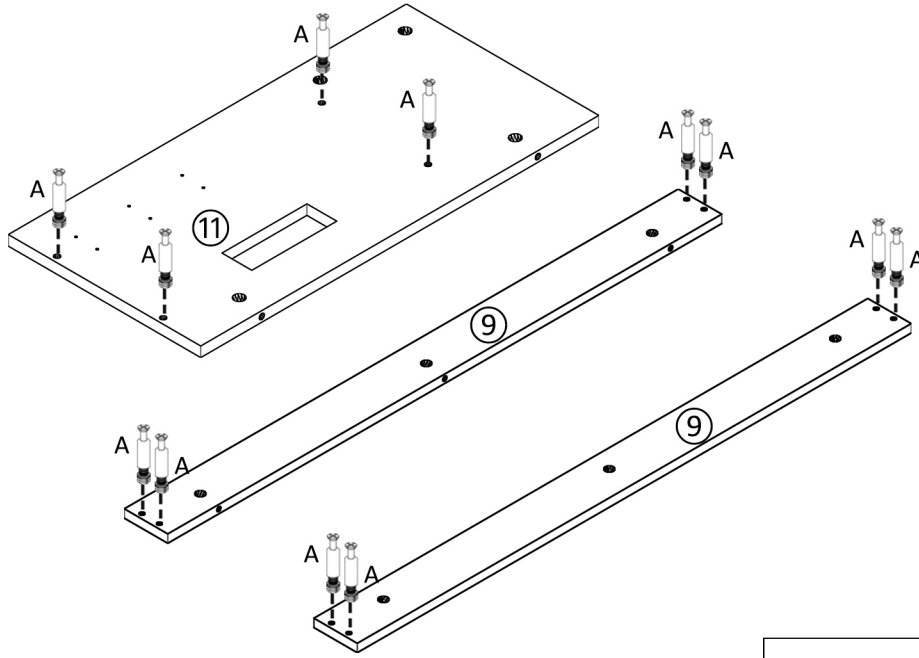



A*12


STEP 5

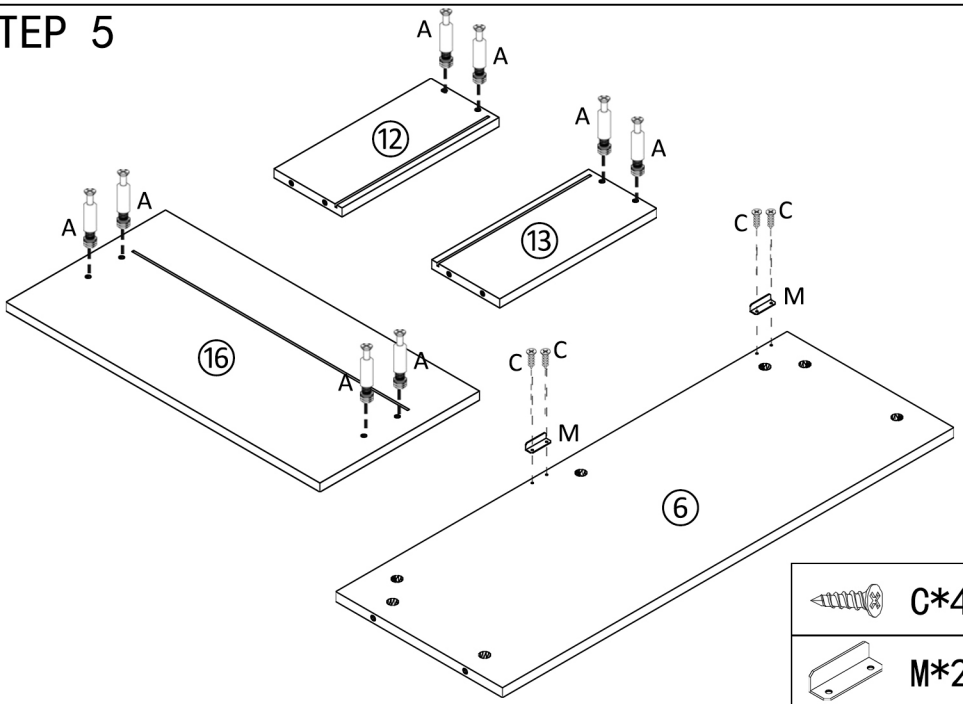


STEP 6

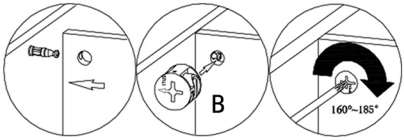

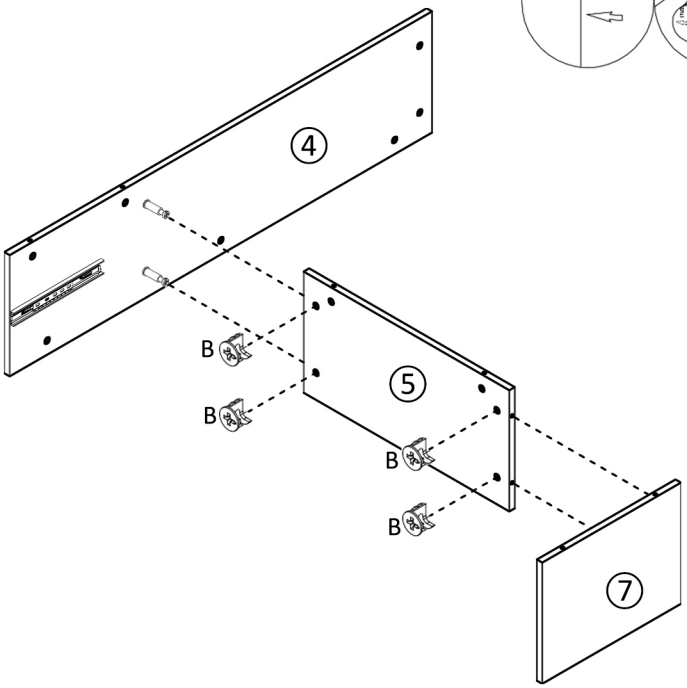




STEP 7

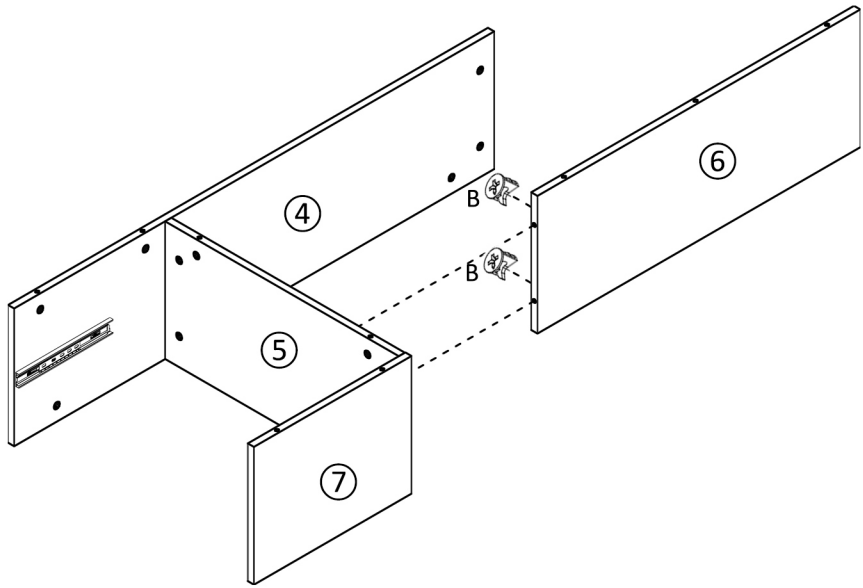


B*2

STEP 8

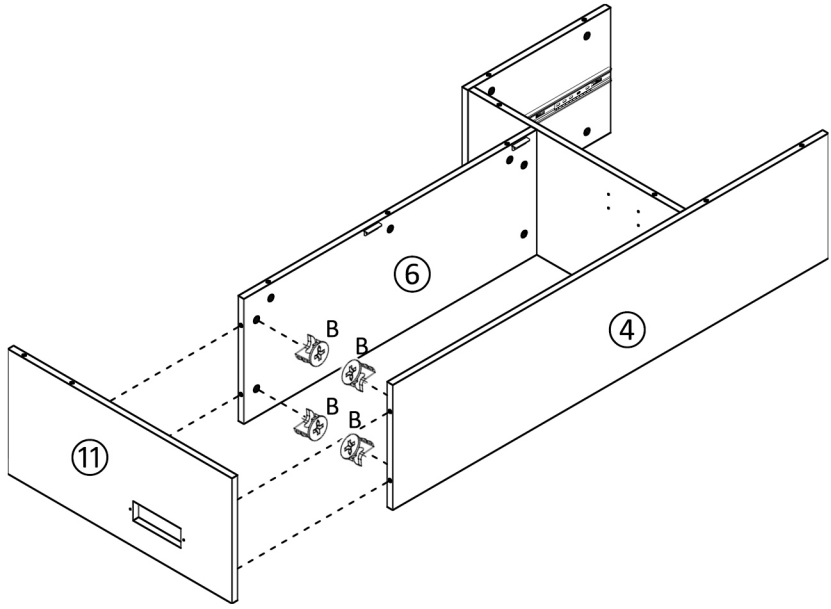


B*4

STEP 9

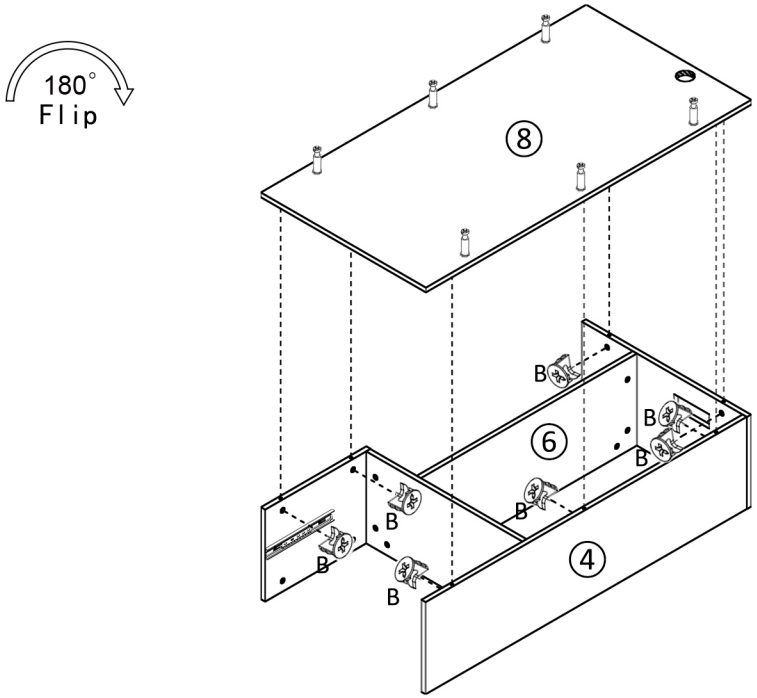


B*7

STEP 10

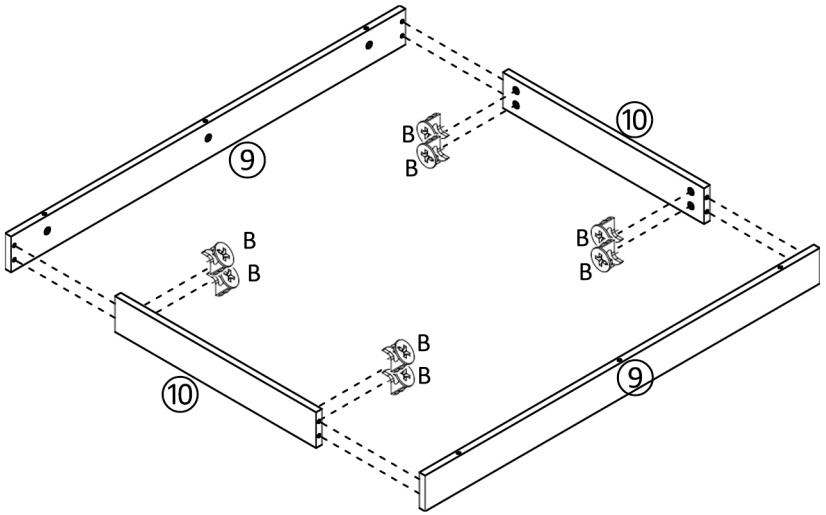


B*8

STEP 11

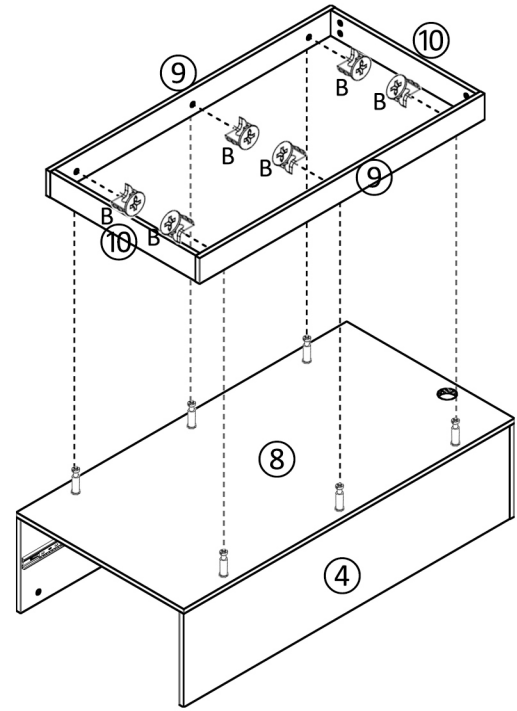


B*6

STEP 12

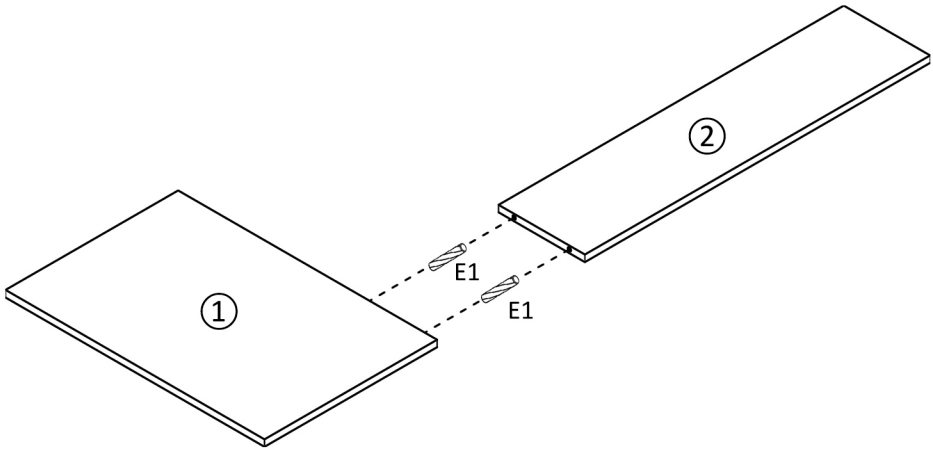


E1*2

STEP 13

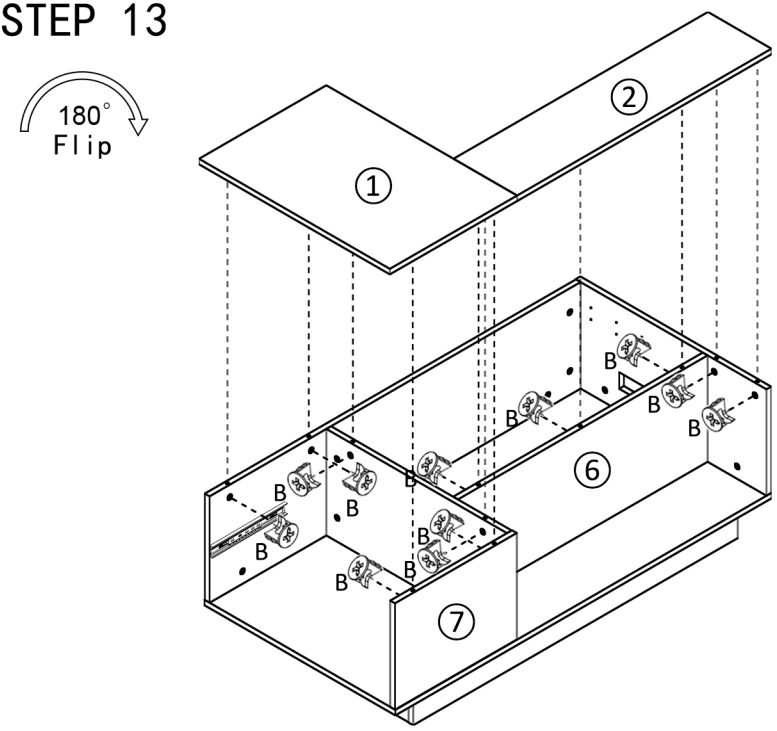


B*11

STEP 14

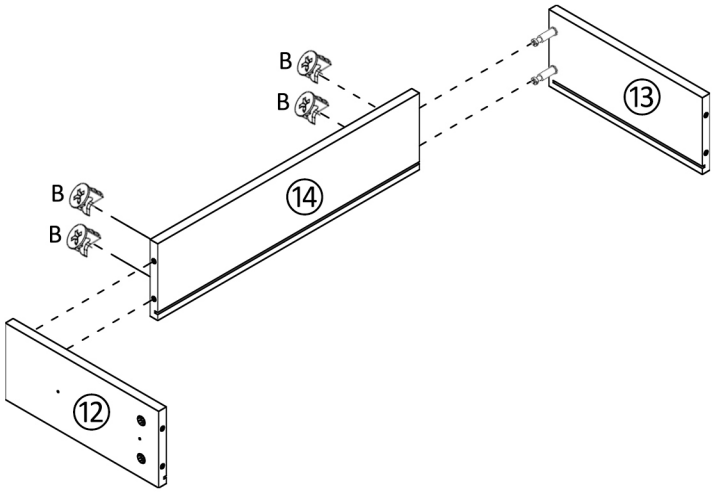


B*4

STEP 15

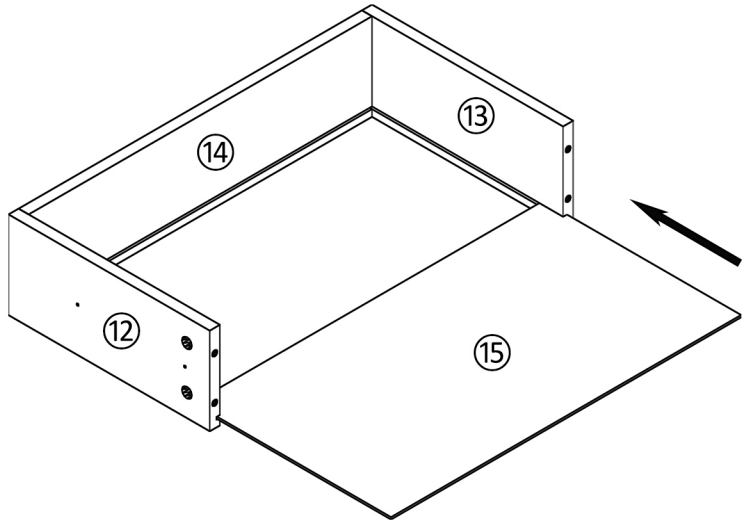


STEP 16

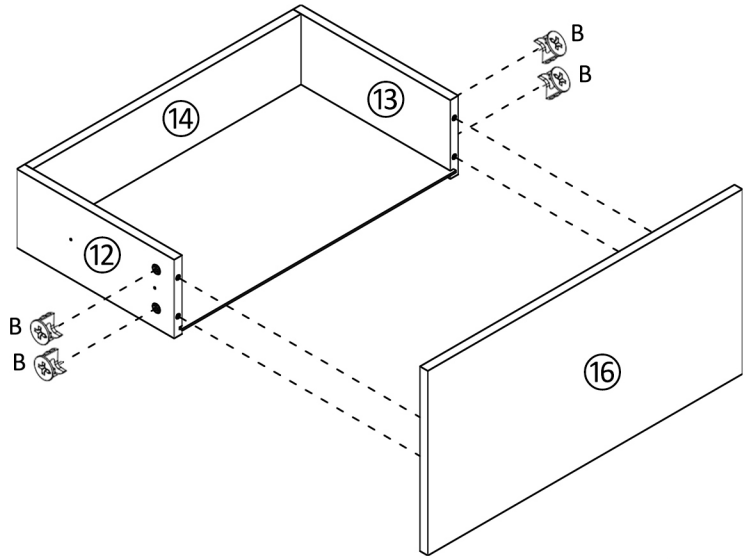

B*4


STEP 17

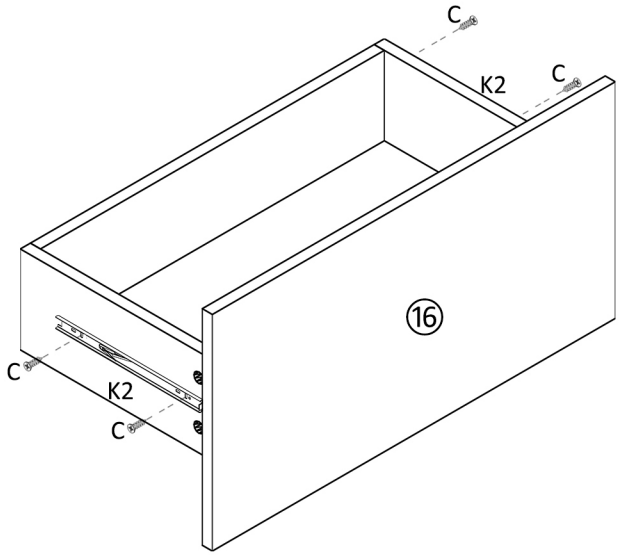

C*4

K2*2


STEP 18

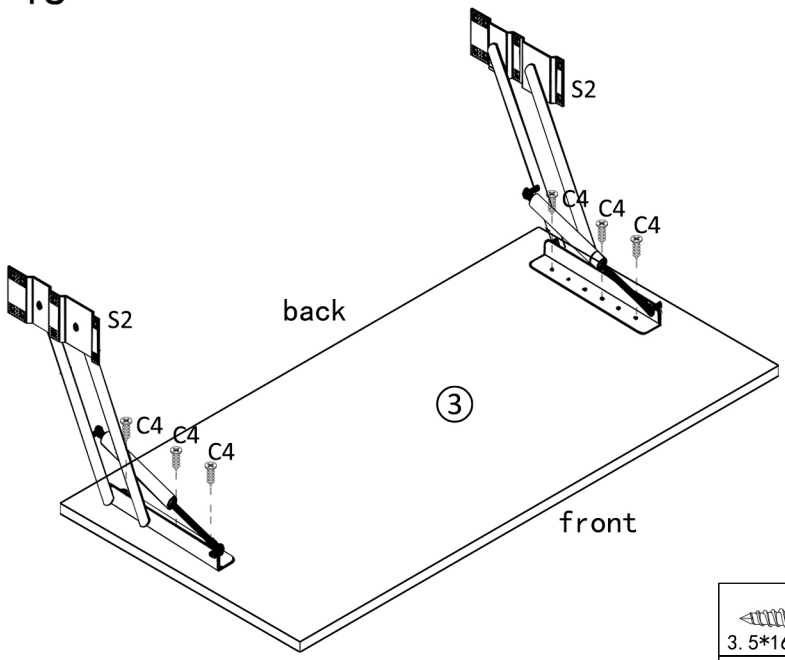

C4*6
3.5*16


S2*2

STEP 19

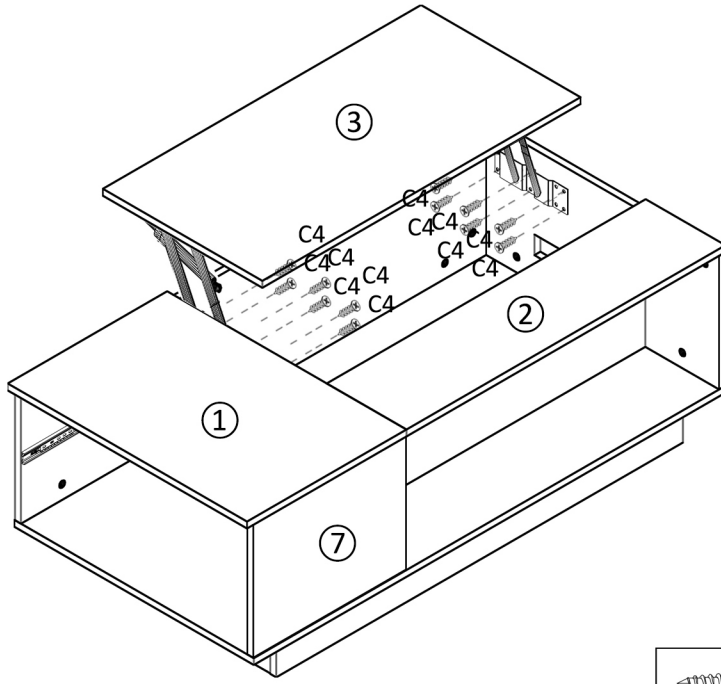



C4*12
3.5*16

STEP 20

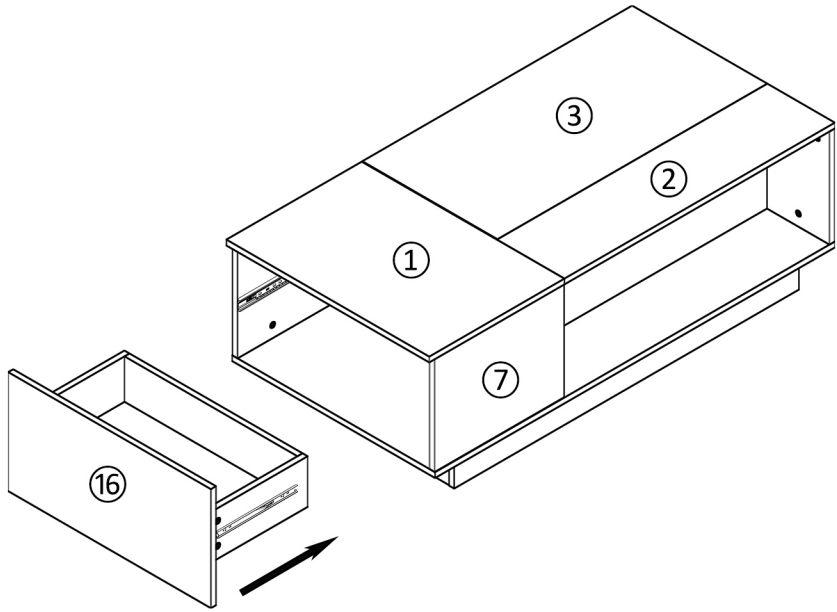


STEP 21

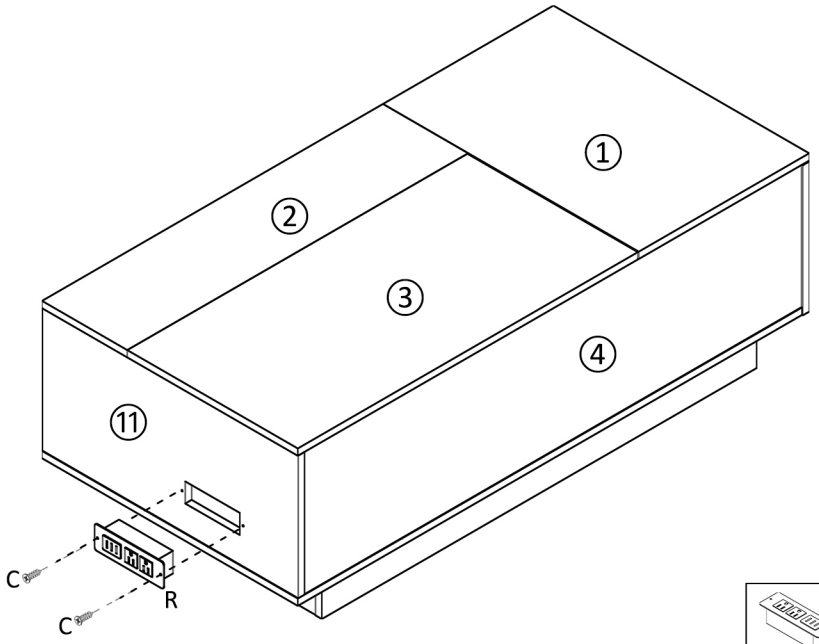


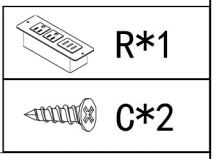

STEP 22

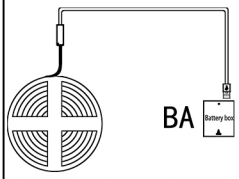


Requires batteries to be installed for use

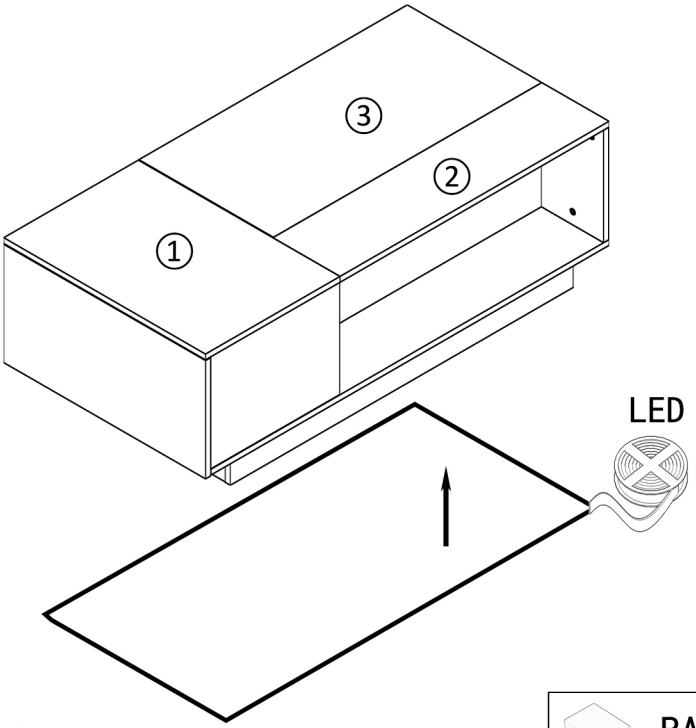


Please paste the LED strip on board 9 and board 10



STEP 23

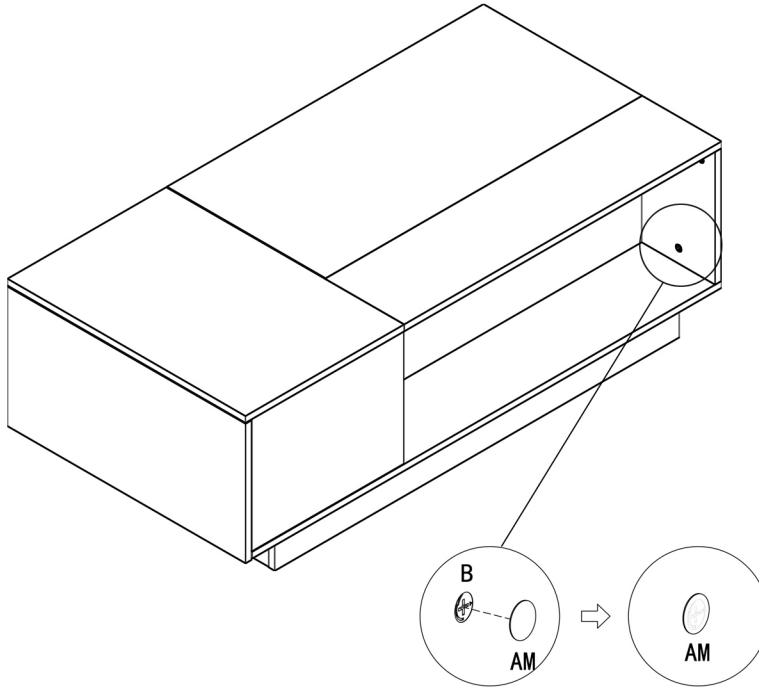

Please stick the decorative paper on the hole



For the high gloss panel,
please peel off the plastic
film after assembling



AM*20
Decorative paper