

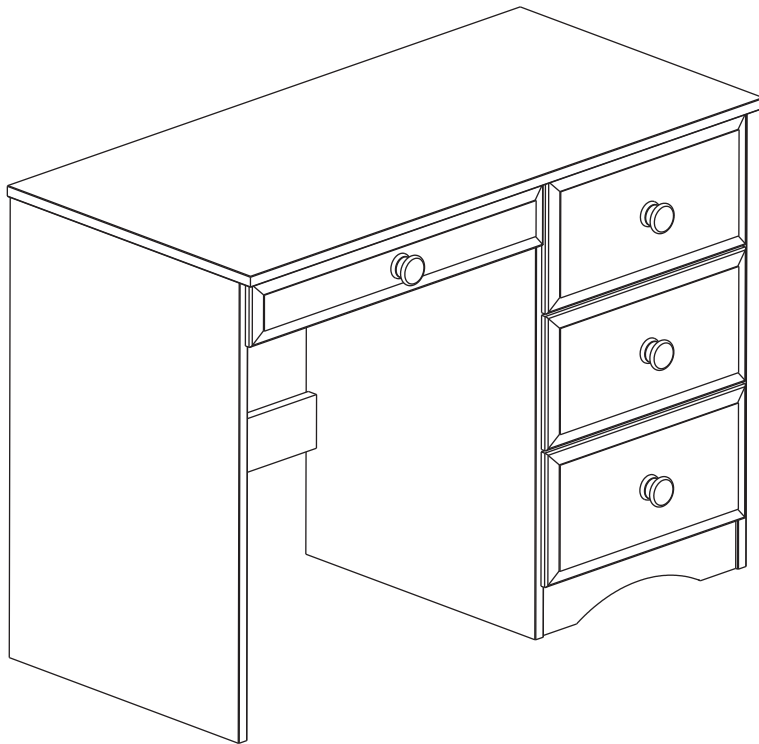
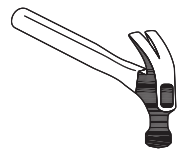



# ASSEMBLY INSTRUCTIONS

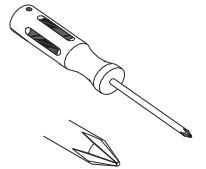

00:45 Hs

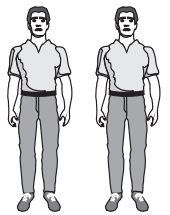


## HARDWARE INCLUDED




**A - 8,0x25 Wood Dowel**  
Qty. 37



**B - 4,0x30 Screw**  
Qty. 37




**C - 3,5x30 Screw**  
Qty. 16




**D - 3,5x14 Screw**  
Qty. 32




**E - 10x10 Nail**  
Qty. 18

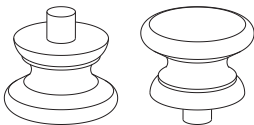

**F - Door Knob**  
Qty. 04

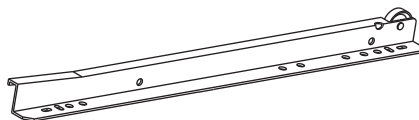


**G - Slide Left 350mm**  
Qty. 04


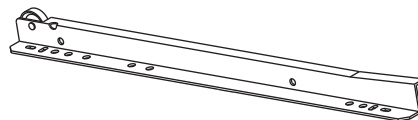


**H - Slide Right 350mm**  
Qty. 04

# PARTS INCLUDED

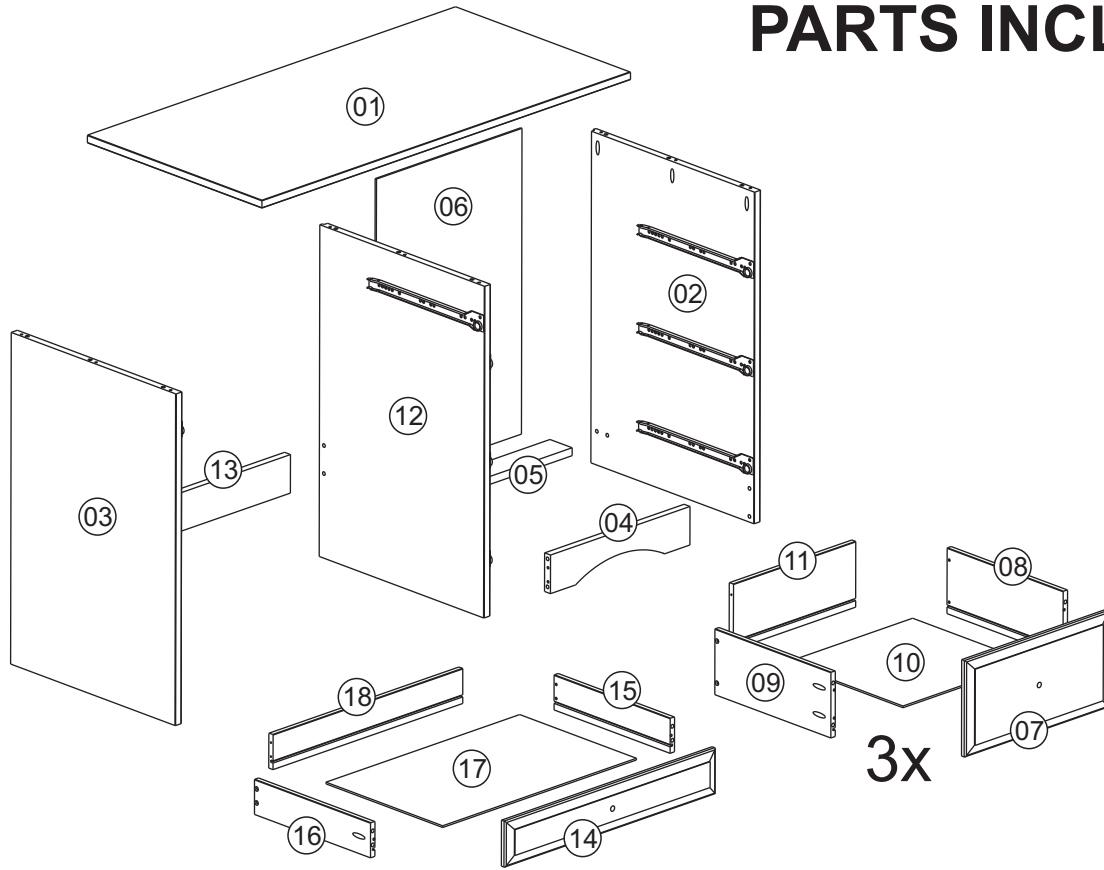


## STEP 1

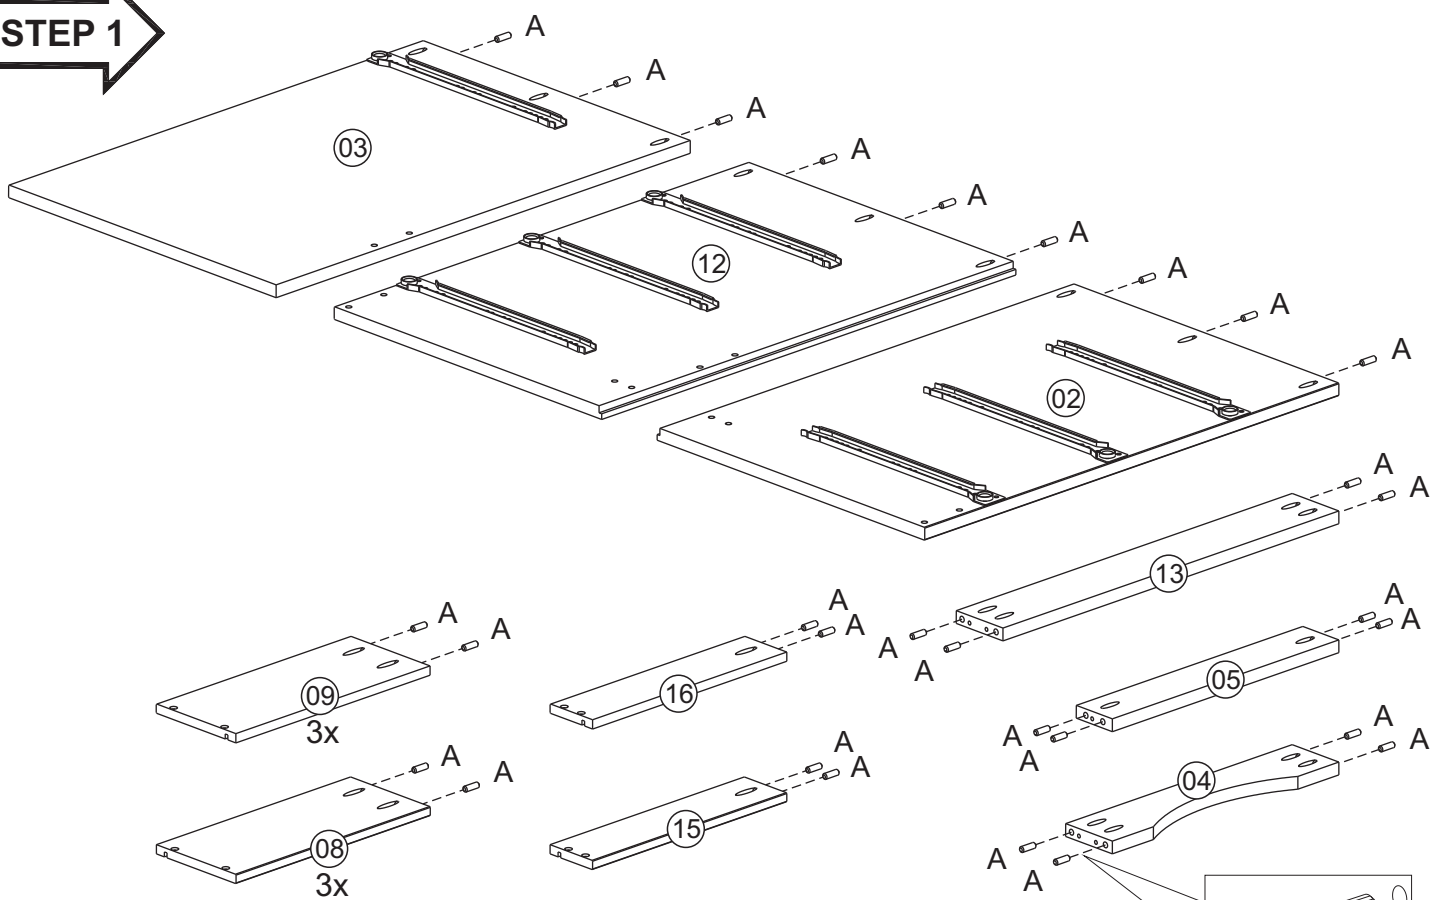



A - 8,0x25 Wood Dowel  
Qty. 37

**STEP 2**

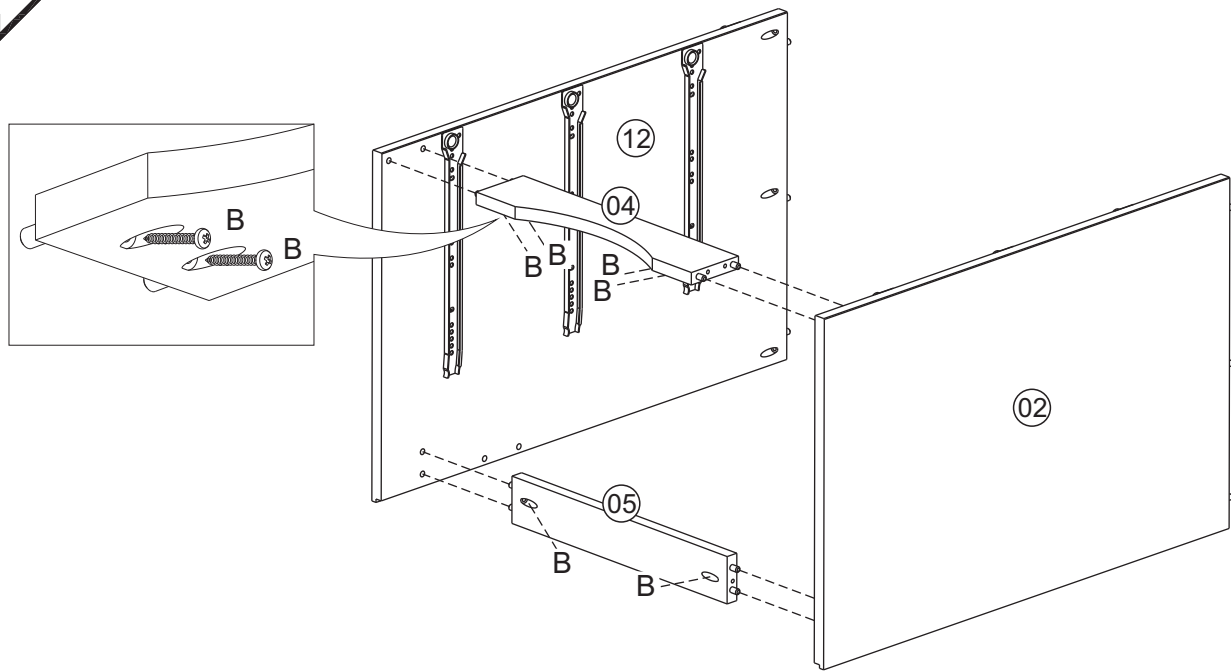



**B - 4,0x30 Screw**  
Qty. 06

**STEP 3**

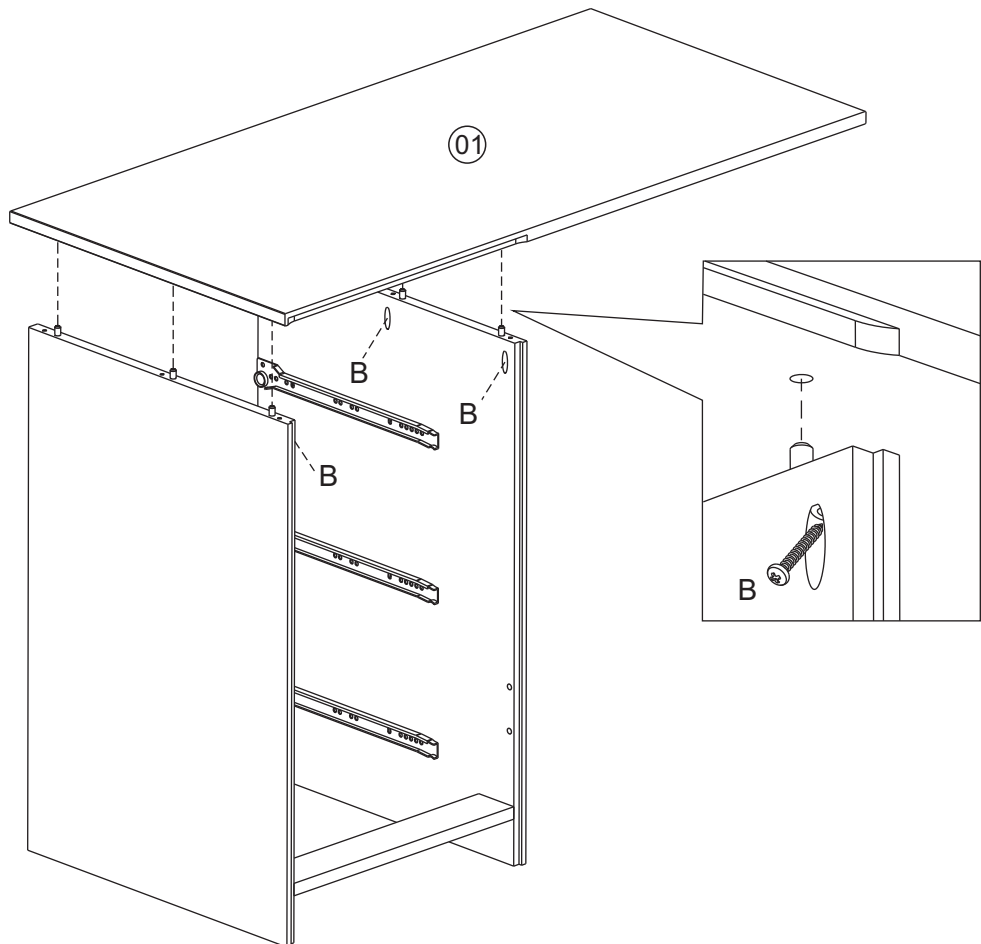


**B - 4,0x30 Screw**  
Qty. 06

**STEP 4**

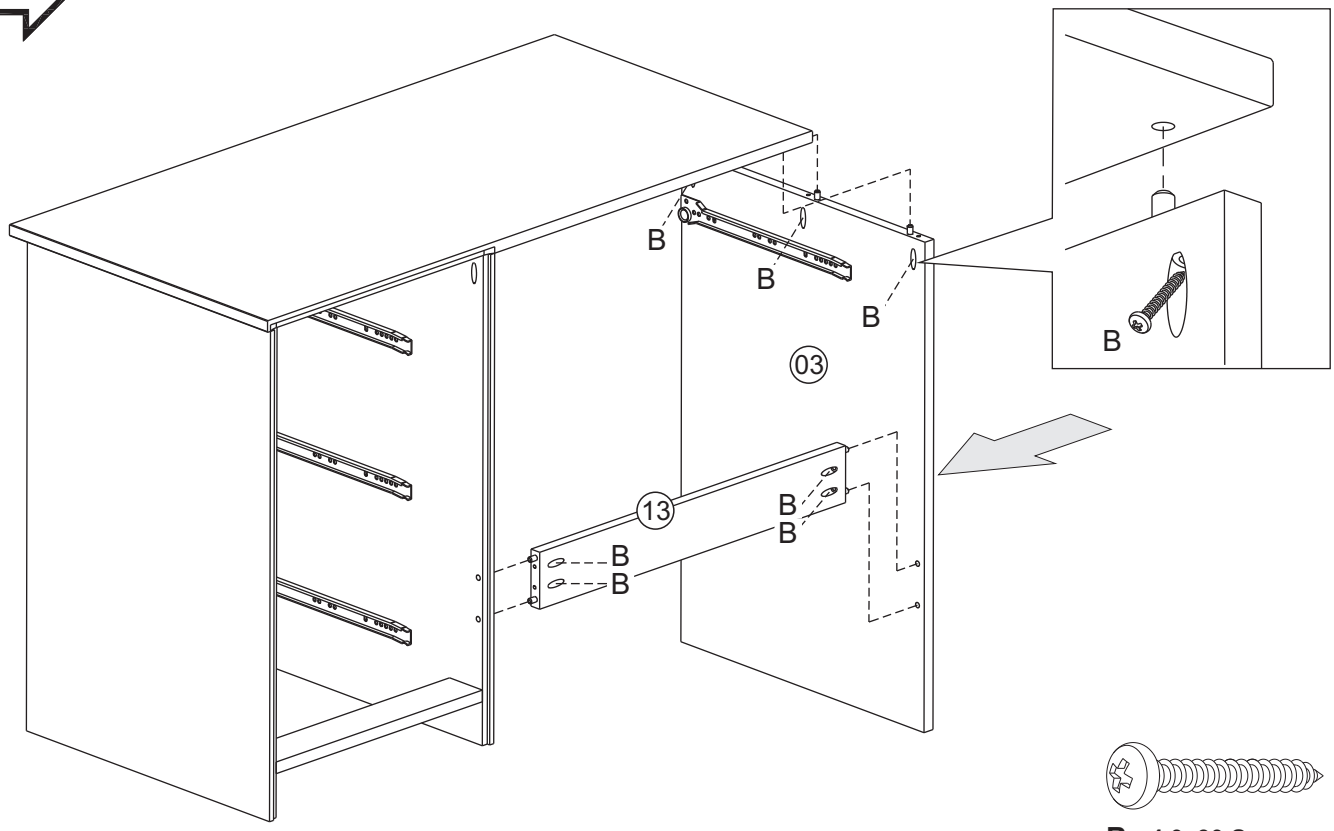




**B - 4,0x30 Screw  
Qty. 07**

**STEP 5**

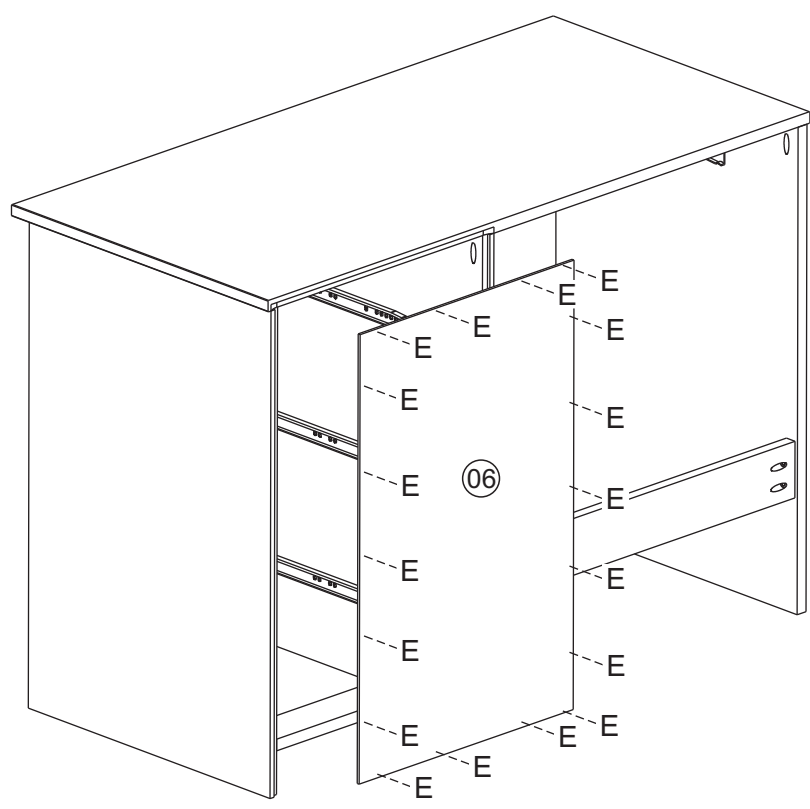


**E - 10x10 Nail  
Qty. 18**


**STEP 6**

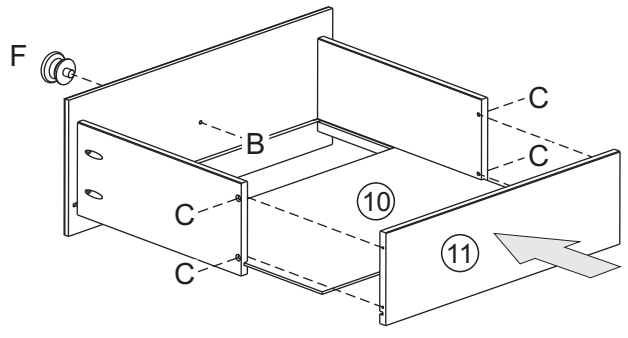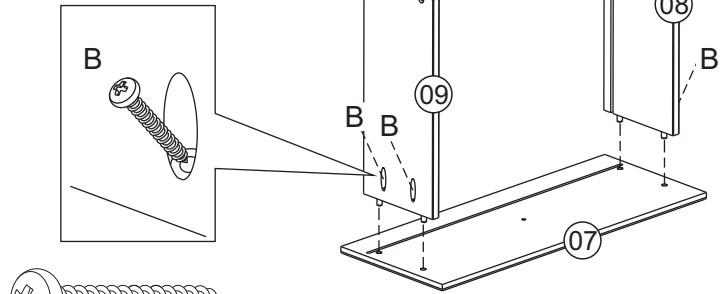


**B - 4,0x30 Screw**  
Qty. 15




**C - 3,5x30 Screw**  
Qty. 12



**D - 3,5x14 Screw**  
Qty. 12

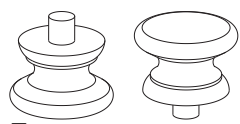


**F - Door Knob**  
Qty. 03

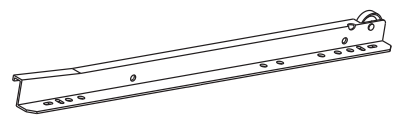


**G - Slide Left 350mm**  
Qty. 03






**H - Slide Right 350mm**  
Qty. 03

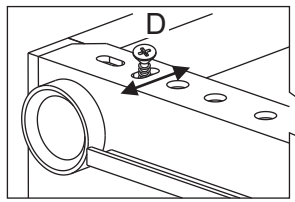


**3x**

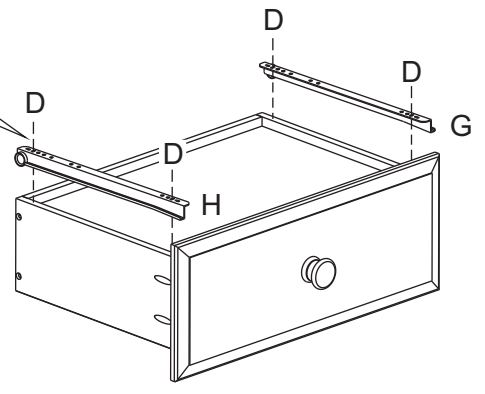


**STEP 7**

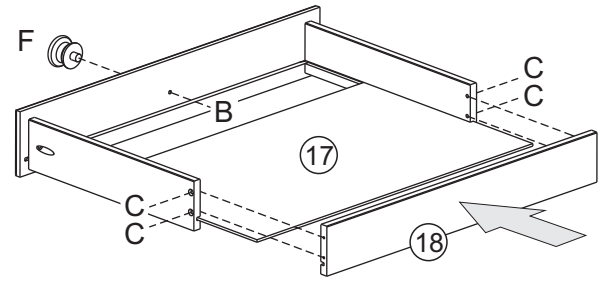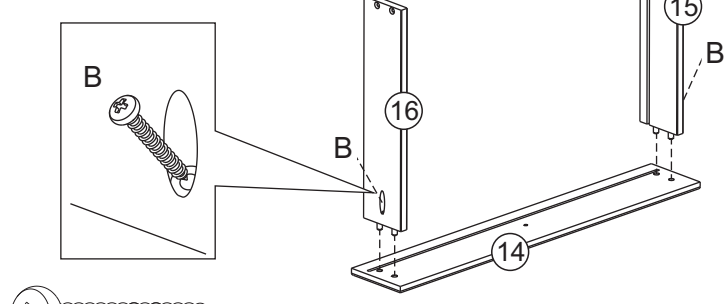

**B - 4,0x30 Screw**  
Qty. 03




**C - 3,5x30 Screw**  
Qty. 04




**D - 3,5x14 Screw**  
Qty. 04





**F - Door Knob**  
Qty. 01

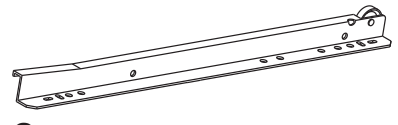


**G - Slide Left 350mm**  
Qty. 01

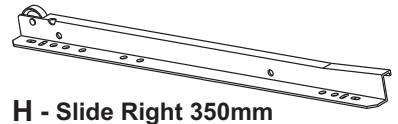

**H - Slide Right 350mm**  
Qty. 01

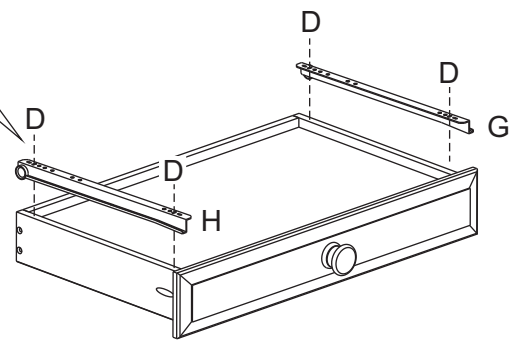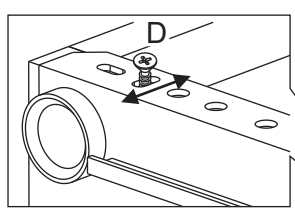

**STEP 8**

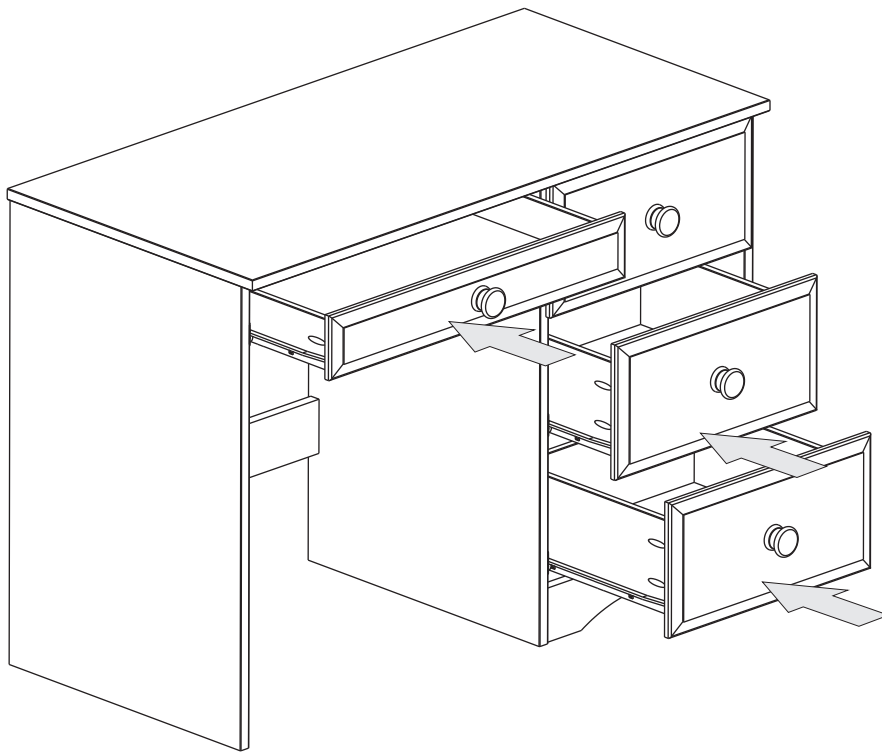


**Drawer Glide Adjustments:**

The metal drawer glides are designed to allow for slight adjustments vertically and horizontally, if necessary.


**Horizontal Glide Adjustment:**

Remove drawer from chest. Loosen screws indicated on side of metal track. Make needed space adjustment and re-tighten screws and add 2 additional screws in holes as indicated in diagram below:



**Vertical Glide Adjustment:**

Remove drawer from chest. Loosen Screws on underside of metal track. Make needed space adjustment and re-tighten screws as indicated in diagram below:

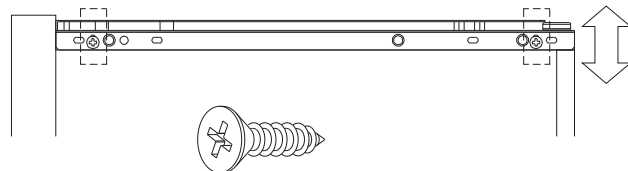

**D - 3,5x14 Screw**  
**Qty. 16**